



ENGINE CLUTCH CONTROL (Dry clutch. Models HD11B, E, ES, S, F)

ENGINE CLUTCH CONTROL  
(Dry Clutch)

USAGE: Model FD11B, E, ES, S, F tractors prior to serial No. 10001. Standard on units prior to serial No. 6911; optional thereafter.

ITEM	PART NO.	QTY.	DESCRIPTION
1	620862	1	LEVER ASSEMBLY, clutch operating (Includes 2 BUSHING 049988)
2	049988	1	BUSHING, clutch operating lever
3	078620	1	GRIP, operating lever
4	056945	1	SHAFT, pivot, operating lever
5	050221	1	BLOCK, shaft locking
6	047478	1	CAPSCREW, 1/4"NC x 5/8"
	904204	1	LOCKWASHER, 1/4"
7	051513	2	BEARING, needle, operating lever shaft
8	053926	2	SEAL, dust, needle bearing
9	084476	1	ROD, operating lever
	911043	1	NUT, 1/2"NF
10	049993	2	PIN, yoke
	900805	2	PIN, cotter, 1/8" x 3/4"
11	068389	1	YOKE, operating rod
12	068511	1	LEVER, shifting yoke shaft
13	080704	1	BOLT, eye
	904206	1	LOCKWASHER, 3/8"
	911041	2	NUT, 3/8"NF
14	056872	1	SHAFT, clutch shifting yoke, left
15	036997	2	KEY, #13 woodruff, 3/16" x 1", hardened
16	056871	1	SHAFT, clutch shifting yoke, right
17	036997	1	KEY, #13 woodruff, 3/16" x 1", hardened
18	051513	3	BEARING, needle, shifting yoke shaft
19	053926	4	SEAL, dust, needle bearing
20	056873	1	YOKE, clutch shifting
21	035068	2	CAPSCREW, 1/2"NF x 2-1/4"
	904208	2	LOCKWASHER, 1/2"
	911043	2	NUT, 1/2"NF
22	056865	2	BLOCK, sliding, shifting yoke (Used on all tractors except Nos. 4071 thru 4568)
	-----	2	BLOCK, sliding, shifting yoke (Used on tractors No. 4071 thru 4568. Order BLOCK 056865 and items 23 and 24)
23	050442	2	BEARING, needle, shifting yoke
24	053927	4	SEAL, dust, needle bearing
25	-----	2	RACE, inner, needle bearing (See CLUTCH ASSEMBLY 083870)

Used on all tractors  
except  
Nos. 4071 thru 4568