

*ANNEX*

# Parts Catalog

for

## Caterpillar

Reg.U.S.

Pat.Off.

## Twenty Tractor

Effective  
with Tractor  
No. 8C1  
To 8C652 Incl.



CATERPILLAR TRACTOR CO.  
PEORIA, ILLINOIS, U. S. A.

*Track-type Tractors—Combines—Road Machinery*

THERE IS A "CATERPILLAR" DEALER NEAR YOU

# Parts Catalog

for

## Caterpillar

Reg.U.S. Pat.Off.

## Twenty Tractor

Effective  
with Tractor  
No. 8C1  
To 8C652 Incl.

CATERPILLAR TRACTOR CO.  
PEORIA, ILLINOIS, U. S. A.

Track-type Tractors—Combines—Road Machinery

THERE IS A "CATERPILLAR" DEALER NEAR YOU

**COPYRIGHT 1932  
CATERPILLAR TRACTOR CO.**

**T**HIS PARTS CATALOG contains illustrations of all parts which compose the Standard "Caterpillar" Twenty Tractor. The number required is shown following the part name. ¶ Common standard parts, such as bolts, nuts, and cotter pins, are listed in the rear of the Catalog.

*When Ordering Parts  
Please Read Carefully:*

¶ Order all parts from your dealer. ¶ Tractor number should always be furnished; it will be found on plate fastened to rear end of transmission case. ¶ To obtain parts promptly, give the name, number and letter of parts wanted. ¶ Be particular to state post office address, town, county and state where parts are to be shipped. Also state whether by freight, express or parcel post.

¶ Confirm all telephone or telegraph orders in writing. ¶ Claims for shortage or error should be made upon receipt of material.

¶ No responsibility is assumed for delay, damage or loss to merchandise while in transit. Responsibility ceases upon delivery of shipment to the transportation companies, from whom a receipt is received showing that the shipment is in good condition when delivered to them.

¶ Broken, damaged or lost material should be refused or a full description made of damage or loss by the carrier agent on the freight bill. If this is done it is likely that damage can be collected from the transportation company.

**ESPAÑOL****AL PEDIR PIEZAS SIRVASE LEER DETENIDAMENTE LO SIGUIENTE:**

El objeto de este Catálogo de Repuestos es proporcionar un medio adecuado de pedir piezas en la seguridad de que se recibirán las piezas que se desean. Recomendamos que la persona encargada de reparar las máquinas conserve este catálogo con todo cuidado.

Este Catálogo de Piezas contiene ilustraciones de las piezas de que consta nuestra máquina corriente, y conviene que sea consultado cuidadosamente al hacer el pedido de las piezas que se necesitan. Todos los pedidos para repuestos deben hacerse al comerciante proveedor, indicando en cada pedido el número de serie de la máquina. Los números de serie van en las placas de instrucciones que están sujetas al asiento.

Para obtener las piezas con prontitud, indíquese el nombre, número y letra de las piezas que se desean. Indíquese con toda claridad la dirección postal, la ciudad y el país a donde deben despacharse las piezas. Indíquese si el envío se desea por carga, por expreso o por paquete postal. Confírmense por escrito todos los pedidos que se hagan por telegrafo o por teléfono. Los reclamos por piezas que no llegan por errores deben hacerse tan pronto como se reciba el material.

No asumimos responsabilidad por demora, daño o pérdida de la mercadería en tránsito. Nuestra responsabilidad cesa con la entrega del material a la compañía que lo transporta, de quien obtenemos un recibo que demuestra que el embarque se ha hecho en buena condición al efectuar la entrega.

No deben aceptarse materiales rotos o dañados, o embarque incompleto a menos que el agente de la compañía de transportes consigne por escrito en el conocimiento o guía la descripción completa del daño o pérdida de que se trate. Siguiendo este procedimiento se obtendrá con más probabilidad el pago de los reclamos por pérdida o daños de la compañía de transportes.

**PORUGUÊS****AO SE ENCOMENDAREM PEÇAS, SIRVAM-SE LÊR CUIDADOSAMENTE O SEGUINTE:**

O objecto deste Catalogo de Peças, é proporcionar o meio mais facil de se encomendarem peças com a certeza de receberem exatamente as peças desejadas. Convém que a pessoa que tenha a seu cargo a reparação das maquinas, conserve cuidadosamente este catalogo.

Este catalogo apresenta ilustrações das peças que compõem a nossa maquina regular e é de suma importancia que seja consultado cuidadosamente ao se encomendarem as peças necessarias.

Todas as encomendas deverão ser pedidas ao seu fornecedor, indicando-se em todas as encomendas, o numero de série da maquina, o qual acha-se gravado na placa de instruções facilmente visivel.

A fim de obterem promptamente qualquer encomenda, sirvam-se fornecer o nome, numero e letra das peças requeridas bem como o endereço claro e preciso, para onde devem as mesmas ser expedidas, indicando o endereço postal, a cidade e o país e tambem se as querem enviadas como carga, expresso ou encomenda. Sirvam se confirmarem por escrito, todas as encomendas dadas por telegrama ou telefone. Reclamações relativas a erros ou perdas deverão ser feitas, imediatamente apos o recebimento do material.

Não assumimos responsabilidade, por demora, avaria ou perda da mercadoria ocasionadas pelo seu transporte. A nossa responsabilidade cessa na occasião da entrega da mercadoria ás companhias de transporte, as quais nos dão recibos com declaração de que a mercadoria estava em perfeito estado quando lhes foi entregue.

Encomendas incompletas, peças quebradas e avariadas, não deverão ser aceitas, a não ser que no conhecimento, o agente da Companhia de transporte faça uma descrição completa, por escrito, da avaria ou perda. Se assim se proceder, facilitar-seá o ajuste das perdas e avarias pela companhia de transporte.

**FRANCAIS****A LIRE ATTENTIVEMENT LORS DES COMMANDES DE PIECES:**

Le but de ce Catalogue de pièces est de fournir un moyen de commander les pièces de rechange avec la certitude de recevoir celles voulues. On recommande à la personne chargée de la réparation de la machine de conserver soigneusement ce catalogue.

Ce manuel contient des illustrations des pièces composant notre machine courante et il est donc important de le lire attentivement au moment de faire des commandes.

On doit passer toutes les commandes de pièces au marchand local et indiquer le numéro de série de la machine. Ce dernier se trouve sur la plaque de cuivre posée de façon à être facilement trouvée.

Pour obtenir promptement les pièces désirées il faut en indiquer le numéro, le nom et la lettre. On doit aussi donner des détails complets ayant trait à l'adresse postale, la ville et le pays où les articles doivent être expédiés. Il faut aussi indiquer si l'expédition doit se faire par petite vitesse, express ou colis-postal, et confirmer toute commande télégraphique ou téléphonique par lettre. Les réclamations en cas d'erreur ou de manquants, doivent être faites immédiatement à la réception des articles.

Aucune responsabilité n'est acceptée pour retards, dommages ou pertes en cours de route. La responsabilité cesse à la livraison de l'expédition aux compagnies de transport qui donnent un reçu montrant que l'envoi était en parfait état lorsqu'il a été livré.

Les articles brisés, endommagés ou perdus ne doivent être acceptés qu'après que l'agent de la compagnie de transport a donné, par écrit, une description détaillée du dommage ou de la perte sur la lettre de voiture. Lorsque cette manière de procéder est rigoureusement suivie, le paiement des réclamations pour pertes ou dommages par la compagnie des messageries, se trouve assuré d'une façon plus définie.

## ITALIANO

### LEGGASI ATTENTAMENTE PRIMA DI PASSARE ORDINAZIONI DI PEZZI DI RICAMBIO:

Lo scopo del presente catalogo dei pezzi di ricambio è di offrire un mezzo sicuro per passare ordinazioni di pezzi di ricambio che siano assolutamente corretti alla loro ricezione. Si raccomanda all'incaricato responsabile per la riparazione della macchina di conservare il presente catalogo.

Questo catalogo dei pezzi di ricambio contiene illustrazioni dei pezzi componenti la nostra macchina regolare ed è importante che il contenuto sia letto attentamente nel passare le ordinazioni dei pezzi necessari.

Tutte le ordinazioni di pezzi devono essere fatte presso il vostro rivenditore ed il numero di serie della macchina deve essere in ciascuna ordinazione. I numeri di serie appaiono su lastre di ottone facilmente visibili.

Per ottenere pezzi di ricambio prontamente, si indichi il nome, numero e lettera del pezzo desiderato. Si indichi chiaramente l'indirizzo postale, città o paese dove i pezzi debbono venire spediti. Si indichi inoltre se la spedizione deve essere fatta a mezzo ferrovia espresso o pacco postale. Ordinazioni telefoniche o telegrafiche devono essere confermate per iscritto. Reclami per mancanze od errori devono essere presentati alla ricezione del materiale.

Nessuna responsabilità viene assunta per ritardi, avarie o perdita di merce in transito. La responsabilità cessa alla consegna della spedizione alla compagnia di trasporto, dalla quale è ottenuta ricevuta mostrante che la spedizione trovavasi in buone condizioni al momento della consegna alla stessa.

Materiale rotto, avariato o con apparenti mancanze non dovrebbe essere ricevuto senza ottenere descrizione completa dell'avaria o mancanza scritta sulla fattura di trasporto dall'agente della compagnia di trasporto. Seguendo tale procedura, la liquidazione dei reclami per mancanze od avarie viene accertata in modo assai più definito.

## ПО РУССКИ

### ПРИ ЗАКАЗЫВАНИИ ЧАСТЕЙ ПРОЧТИТЕ ВНИМАТЕЛЬНО СЛЕДУЮЩЕЕ.

Выпускаемый настоящий каталог мы имеем в виду облегчить составление заказов на различные части и устраниТЬ могущие произойти ошибки в наименовании частей, что в свою очередь даст вам уверенность в точности исполнения Вашего заказа.

Каталог этот рекомендуется хранить тому лицу, на ком лежит ответственность за ремонт машин. Каталог содержит иллюстрации частей наших стандартных машин, и мы рекомендуем прочесть его внимательно при заказе требующихся Вам частей. Заказы должны быть адресованы Вашему поставщику, при чем на каждом из них должен быть указан номер серии машины, обозначенный на специальной пластинке, прикрепленной к машине. Для скорого и точного получения нужных Вам частей в заказе следует указать номер и букву, а также название каждой части.

Пункт назначения частей должен быть указан подробно (почтовая станция, город, край и т. д.) Также должен быть указан способ доставки, то есть, товарным поездом, баражем или почтовой посыпкой.

Все телефонные и телеграфные заказы должны быть подтверждены письмами. Заявления о недостаче или ошибке должны быть сделаны немедленно по получении заказа. Мы не ответственны за задержку, порчу или потерю товара в пути. Наша ответственность прекращается по доставлении товара в транспортную контору, которая выдает расписку в том, что товар был получен ею в полной исправности.

Части, прибывшие в поломанном виде, с недостачей в количестве по счету, порченые и т. д. не должны приниматься заказчиком. Если же они приняты, то о недостаче, порче или поломке товара должно быть подробно указано на накладной агентом транспортного предприятия. Только в таком случае имеется возможность возмещения убытка транспортным предприятием.

## DEUTSCH

### BEI BESTELLUNG VON ERSATZ-TEILEN BEACHTE BITTE SORGFÄLTIG:

Der Zweck dieses Ersatz-Teil Verzeichnisses ist, Sicherheit zu gewähren, dass bei der Bestellung von Ersatz-Teilen die richtigen Teile erhalten werden. Es wird empfohlen, dass diejenige Person, welche für Ausbesserungen an der Maschine verantwortlich ist, dieses Verzeichnis sorgfältig aufbewahrt.

Dieses Ersatz-Teil Verzeichnis enthält Abbildungen über alle Teile, aus denen sich der gewöhnliche Maschine zusammensetzt und ist es daher wichtig, bei Bestellung von Ersatz-Teilen den Inhalt dieses Verzeichnisses sehr sorgfältig durchzulesen.

Alle Bestellungen für Ersatz-Teile sollen Ihrem Vertreter übergeben werden, auch muss die Reihen-Nummer der betreffenden Maschine bei jeder Bestellung angegeben werden. Diese Reihen-Nummer ist auf dem Messing Schilde am Rücken des Sitzes angezeigt.

Um Teile rasch zu erhalten, gebe man bitte Namen, Nummer und Buchstaben der gewünschten Teile an. Auch genaue Einzelheiten bezüglich Postamt, Strasse, Stadt und Staat, wohin die Teile zu senden sind. Ferner bezeichne bitte, ob die Sendung durch Fracht, Expressgut oder Paketpost gewünscht wird. Alle telefonischen und telegrafischen Bestellungen sind schriftlich zu bestätigen. Beschwerden in Bezug auf fehlende Gegenstände oder Irrtümer müssen unverzüglich bei Erhalt der Ware gemach werden.

Keine Gewähr wird übernommen für Verzögerung, Beschädigung oder Verlust der Ware während der Beförderung. Unsere Verantwortlichkeit endet bei Ablieferung der Sendung an die Beförderungs Gesellschaft, welche einen guten Zustand der Ware bezeugende Empfangsberecheinigung gewöhnlich überträgt.

Zerbrochene, beschädigte oder verlorene Gegenstände sollten nicht angenommen werden, es sei denn, der Beförderer macht eine ausführliche Beschreibung der Beschädigung oder des Verlustes auf dem betreffenden Frachtbriefe. Wird ein solches Vorgehen stets eingehalten, so kann die Auszahlung der Entschädigung für Verlust oder Beschädigung seitens der Beförderungs Gesellschaft sicherer erzielt werden.

**INDEX**

NAME	PAGE
Accessory Shaft .....	8
Air Cleaner.....	15
Brakes and Brake Controls.....	29
Bevel Gear and Shaft.....	32-33
Breather .....	9
Camshaft .....	9
Carburetor .....	15
Carburetor Control.....	22
Choke Control .....	23
Clutch—Flywheel .....	21
Clutch—Steering .....	32-33
Common Standard Parts.....	45
Connecting Rod .....	10
Control—Brake .....	29
Control—Flywheel Clutch .....	42
Control—Steering Clutch .....	36-37
Control—Carburetor, Heat and Throttle.....	22
Control—Choke .....	23
Crank—Starting .....	10
Crankcase and Covers.....	12-13
Crankshaft .....	11
Cylinder .....	12-13
Cylinder Head .....	12-13
Draw Bar .....	24
Equalizer Spring.....	42
Fan .....	23
Fan Shield .....	18-19
Fender .....	25
Final Drive.....	34-35
Flywheel .....	11
Flywheel Clutch .....	21
Flywheel Clutch Control .....	42
Frame—Track Roller .....	28
Front Idler.....	30
Fuel System.....	26
Gear Shifter Mechanism.....	36-37
Governor .....	8
Guage—Oil Pressure.....	16
Guard—Track Roller Frame.....	31
Heat Control .....	22

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

## INDEX—Continued

NAME	PAGE
Hood .....	44
Idler—Front .....	30
Idler—Reverse .....	38-39
Ignition System .....	14
Magneto .....	14
Manifolds .....	15
Oil Pump .....	17
Oil Pressure Guage.....	16
Piston .....	10
Pivot Shaft.....	43
Pump—Oil .....	17
Pump—Water .....	23
Radiator .....	18-19
Recoil Spring.....	30
Roller—Track .....	28
Seat .....	24
Spring—Equalizer .....	42
Sprocket—Drive .....	34-35
Starting Crank.....	10
Steering Clutch and Bevel Gear.....	32-33
Steering Clutch Control.....	36-37
Steering Clutch Release Bearing Oil Tube.....	36-37
Tank—Fuel .....	26
Throttle Control.....	22
Tools .....	44
Track .....	26-27
Track Roller .....	28
Track Roller Frame.....	28
Track Roller Frame Guards.....	31
Transmission .....	38-39
Transmission Case and Covers.....	40-41
Valve Operating Mechanism .....	12-13
Water Pump .....	23
Water Lines.....	20


2-BALL I-C-1463  
 I-NUT 2986-A  
 I-LOCK T-553  
 I-GEAR V-46  
 I-PLATE T-88  
 I-WASHER T-105

2-PIN L-1020  
 I-BEARING T-491  
 I-SLEEVE T-110


I-NUT T-90  
 I-PACKING T-108  
 I-SHAFT T-159

2-CAP SCREW S-509  
 2-LOCK L-364

**ACCESSORY SHAFT AND GOVERNOR**

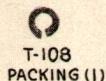

T-105  
PACKING (I)

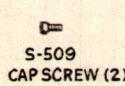

S-509  
CAP SCREW (2)  
3/8" x 3/4" U.S.S.




L-364  
LOCK (2)



T-105  
WASHER (I)




T-88  
PLATE (I)

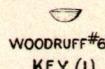

WOODRUFF #6  
KEY (I)



T-90  
NUT (I)

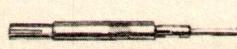

T-159  
SHAFT (I)



T-110  
SLEEVE (I)



T-491  
BEARING (I)



2986-A  
NUT (I)



T-553  
LOCK (I)



V-46  
GEAR (I)



I-C-1463  
BALL (2)




L-1020  
PIN (2)

**ACCESSORY SHAFT AND GOVERNOR PARTS**


**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

PARTS CATALOG

9

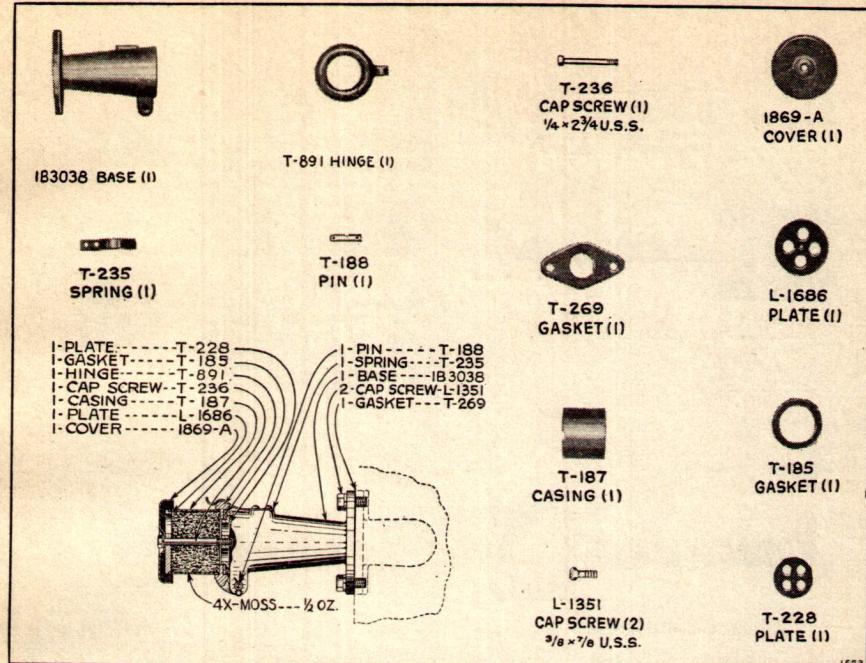


BREATHER

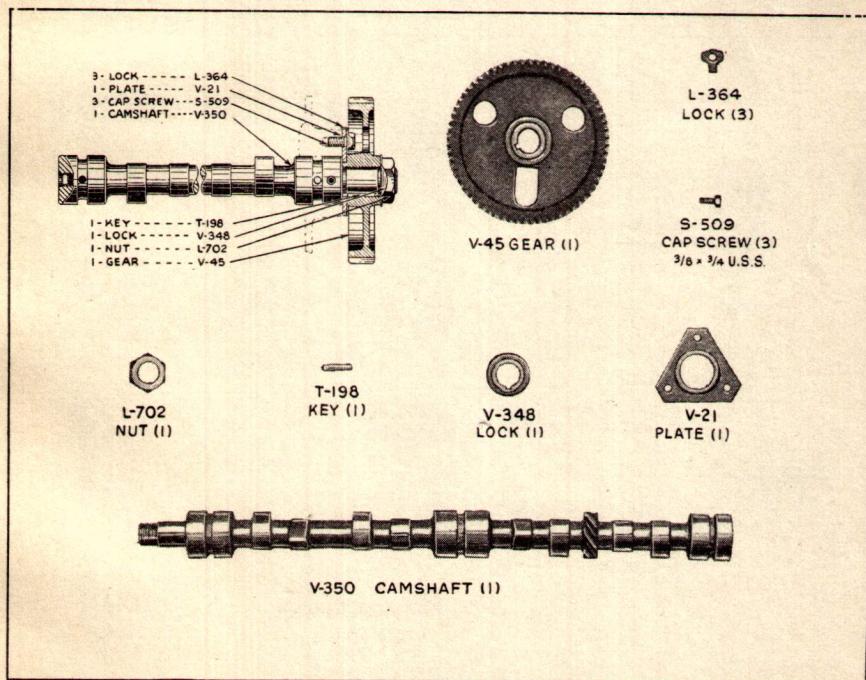


CAMSHAFT

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

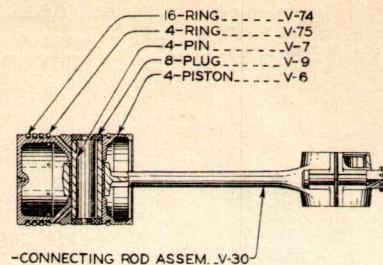**"CATERPILLAR" TWENTY TRACTOR**


V-74 RING PLAIN \_\_\_\_ 16  
IB2605 RING .010" O'SIZE \_\_\_\_ 16  
IA444 RING .020" O'SIZE \_\_\_\_ 16  
IB2606 RING .030" O'SIZE \_\_\_\_ 16  
IA445 RING .040" O'SIZE \_\_\_\_ 16  
IB2607 RING .050" O'SIZE \_\_\_\_ 16  
IA446 RING .060" O'SIZE \_\_\_\_ 16

V-7 PIN(4)  
IA437 PIN(4)  
.007" OVERS'Z.

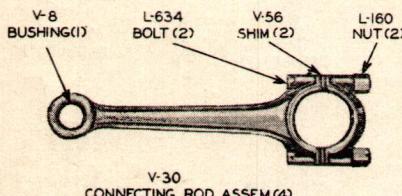


V-75 OIL RING \_\_\_\_ 4  
IB2826 OIL RING .010" O'SIZE 4  
IA447 OIL RING .020" O'SIZE 4  
IB2827 OIL RING .030" O'SIZE 4  
IA448 OIL RING .040" O'SIZE 4  
IB2828 OIL RING .050" O'SIZE 4  
IA449 OIL RING .060" O'SIZE 4

V-9 PLUG(8)

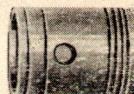

V-6 PISTON (4)  
IA352 PISTON .020" OVERS'Z (4)  
IA353 PISTON .040" OVERS'Z (4)  
IA354 PISTON .060" OVERS'Z (4)  
IB1655 SEMI FIN. PISTON .060" OVERS'Z (4)

**CONNECTING ROD AND PISTON**

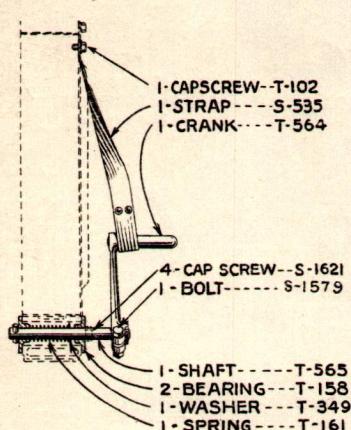

T-102  
CAPSCREW (1)  
 $\frac{3}{8} \times \frac{5}{8}$  U.S.S.

S-535  
STRAP (1)

S-1579  
BOLT (1)  
 $\frac{1}{2} \times 2\frac{1}{4}$  S.A.E.

S-1621  
CAPSCREW (4)  
 $\frac{1}{2} \times 1$  U.S.S.

T-349  
WASHER (1)

T-158  
BEARING (2)

T-161  
SPRING (1)


T-176  
PIN (1)

T-565  
SHAFT ASSEM. (1)


T-564  
CRANK (1)

**STARTING CRANK**

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

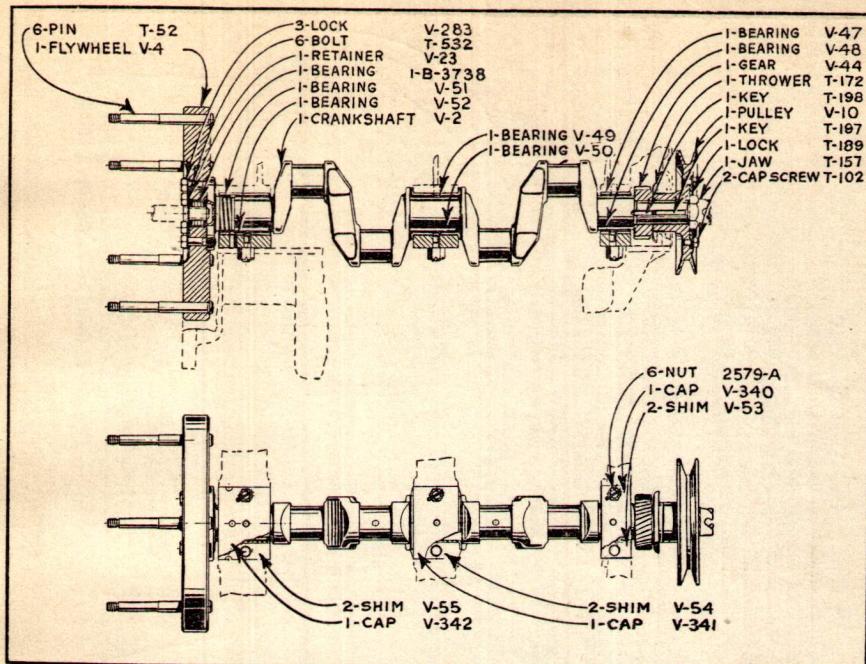


CRANKSHAFT

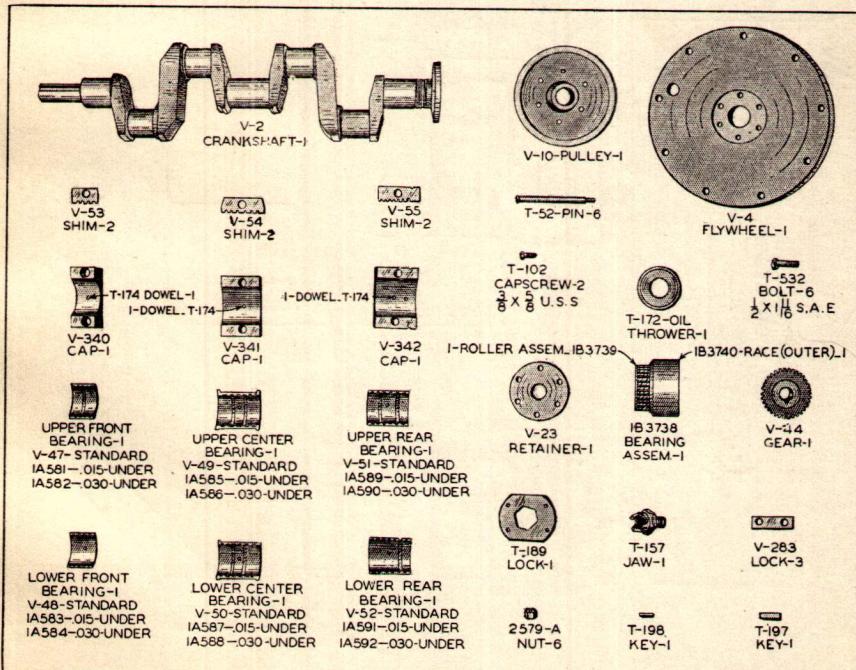


CRANKSHAFT PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS


ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

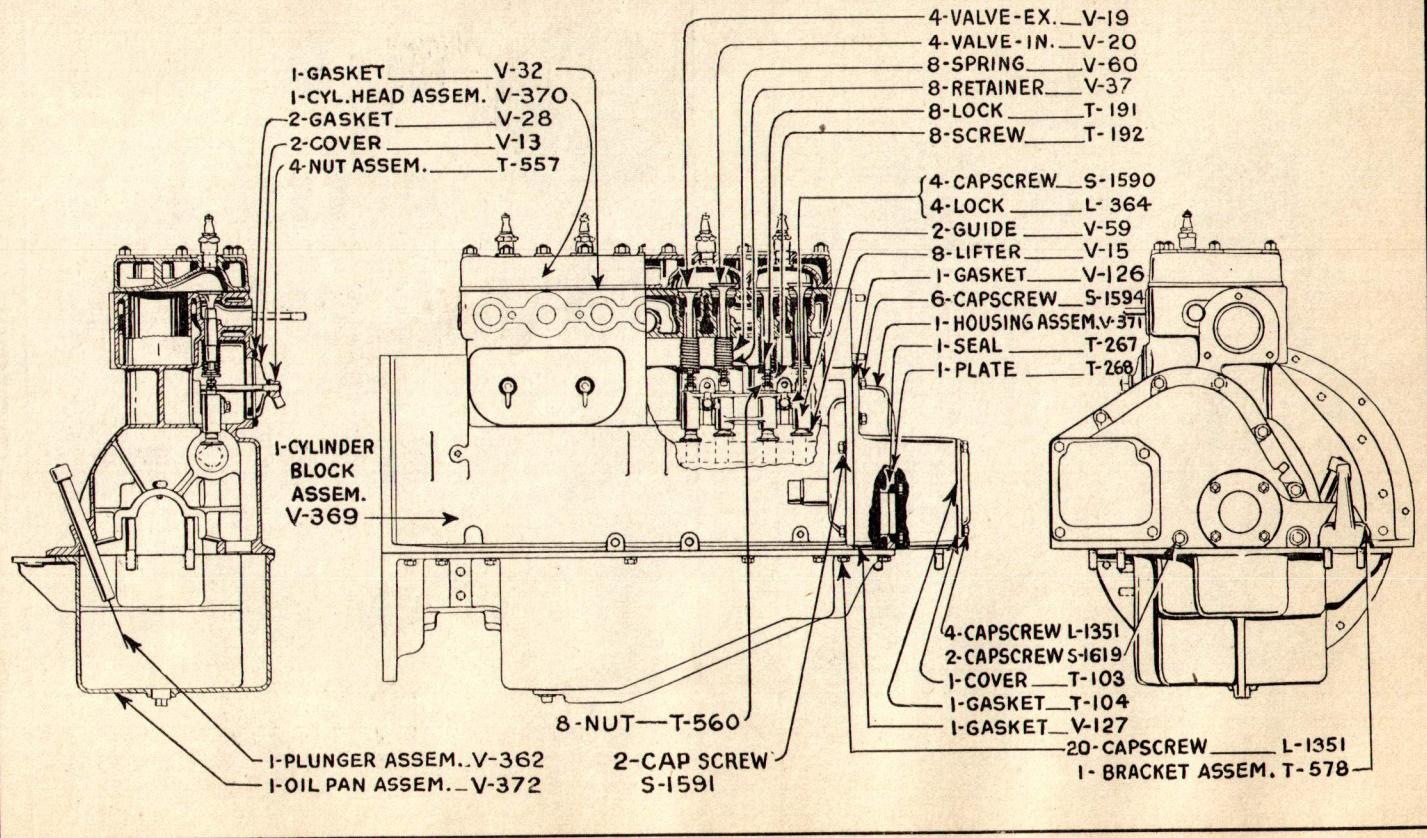


CYLINDER, CYLINDER HEAD AND VALVE OPERATING MECHANISM

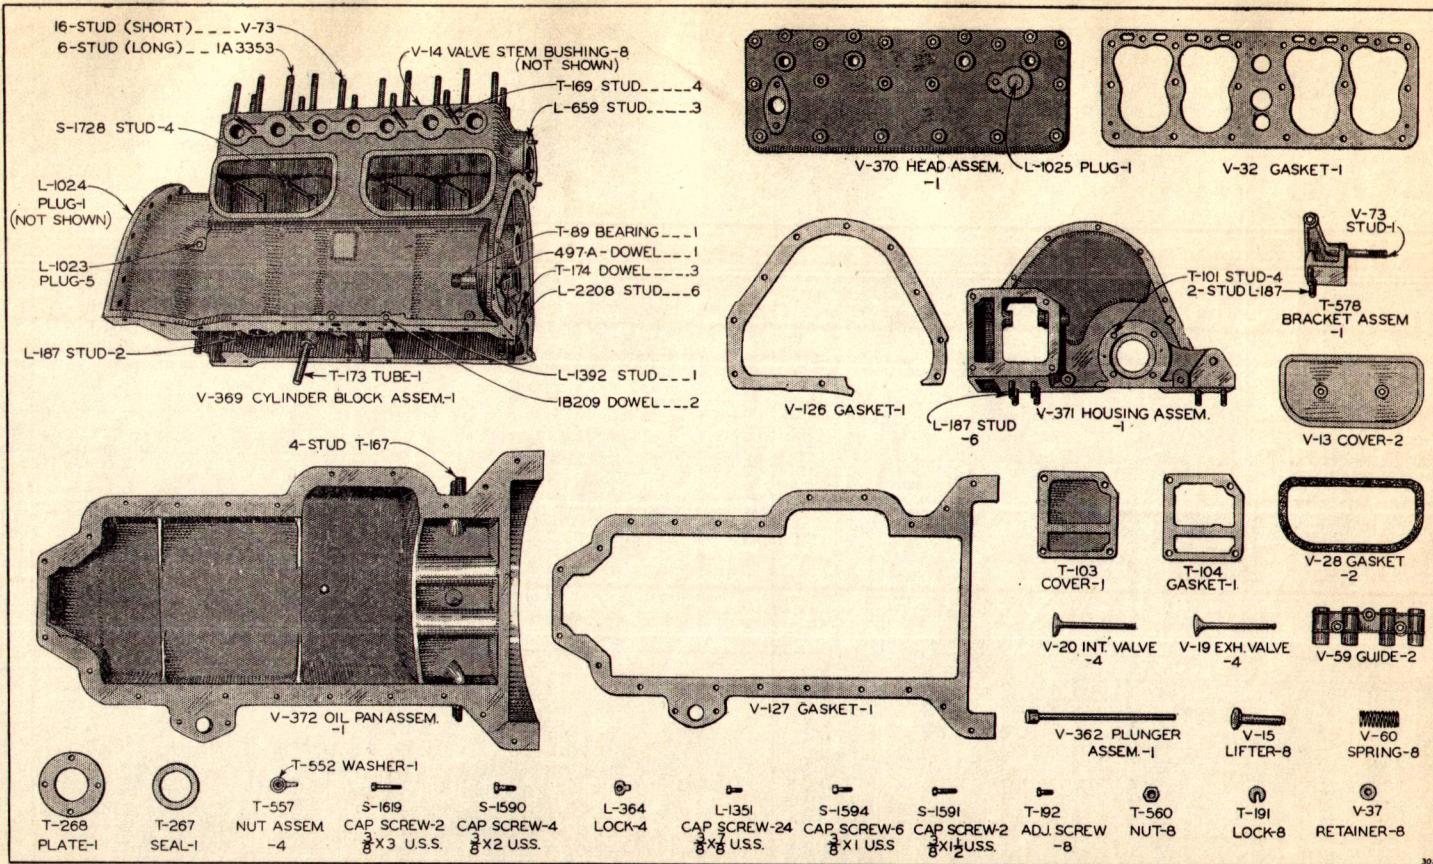

CYLINDER, CYLINDER HEAD AND VALVE OPERATING MECHANISM PARTS

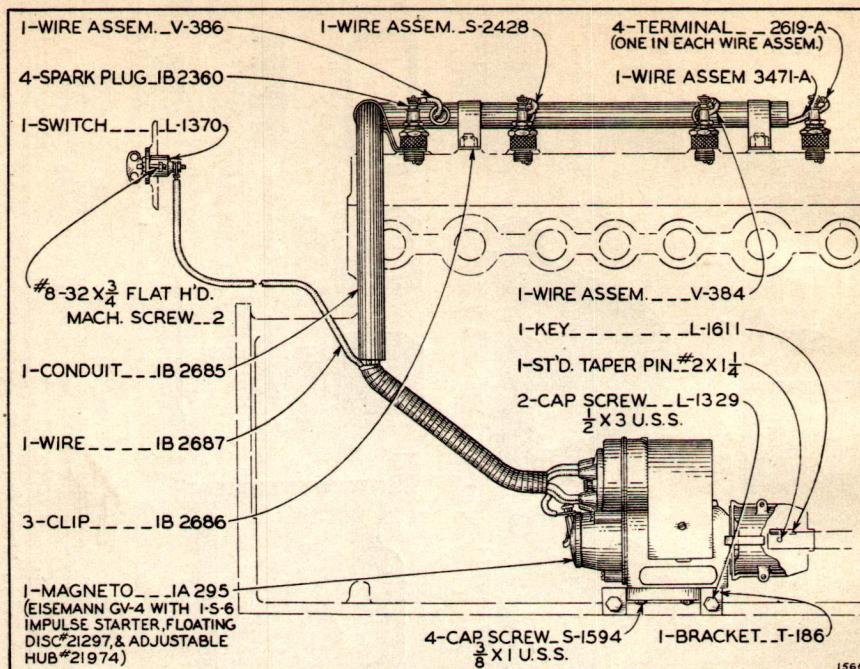**"CATERPILLAR" TWENTY TRACTOR**

IGNITION SYSTEM

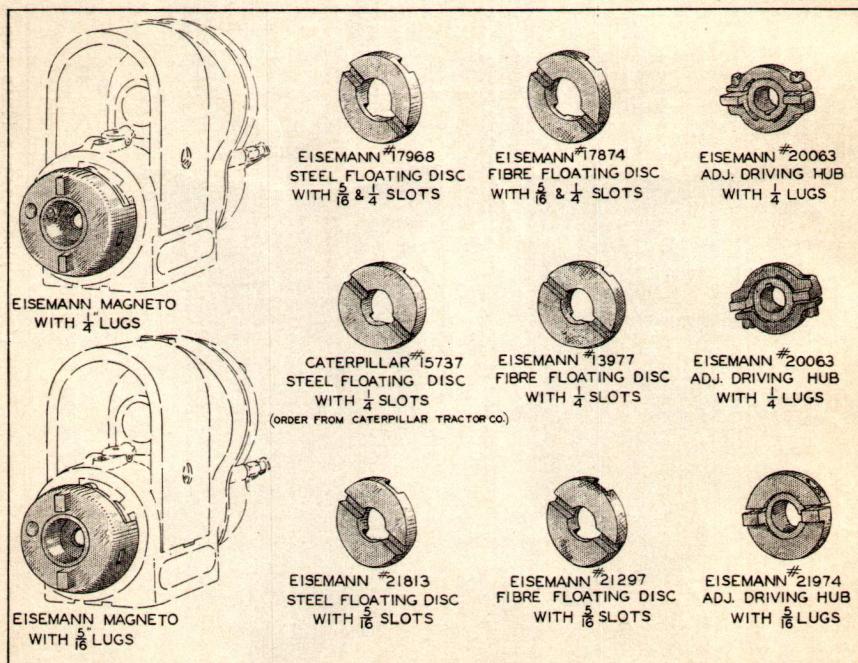


MAGNETO PARTS

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

**PARTS CATALOG INSERT**

INSERT BETWEEN PAGES 14 & 15 IN FORM P-1338—PARTS CATALOG FOR TWENTY TRACTOR


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

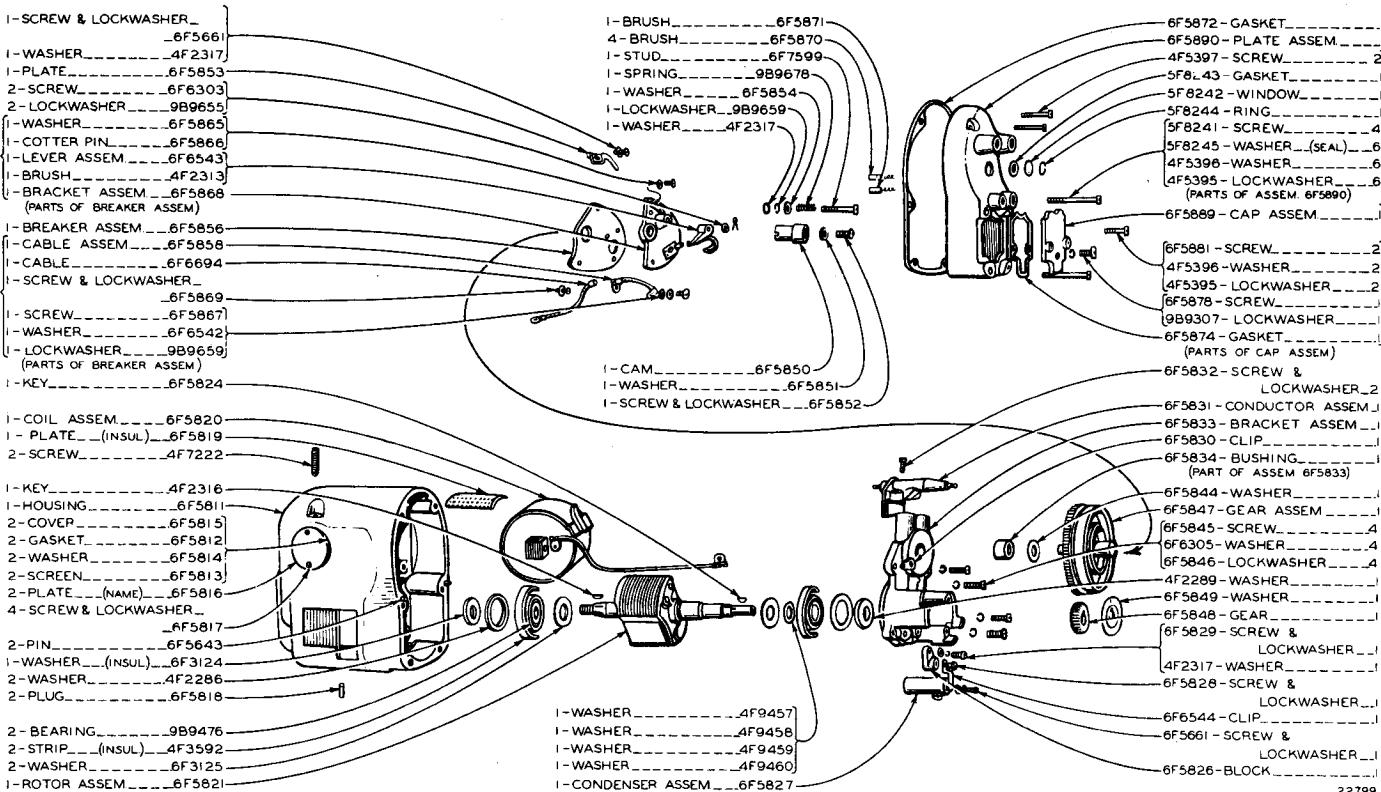

**5F3908 MAGNETO**


Serial No. 8C1 to 8C652 Inclusive. When replacement of complete 1A295 Magneto is required,  
order 1-5F3908 Magneto, 1-4F7492 Coupling and 1-4F9454 Disc. 6F5308 Impulse Coupling Assembly parts are shown on reverse side of insert.

22799

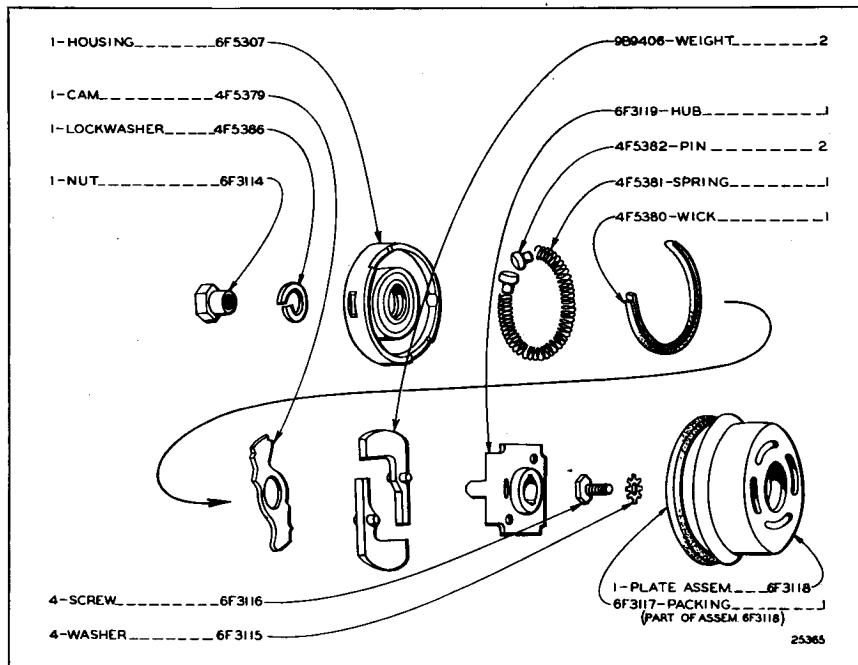


**6F5308 IMPULSE COUPLING ASSEMBLY**  
 Part of 5F3908 Magneto shown on front side of insert

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

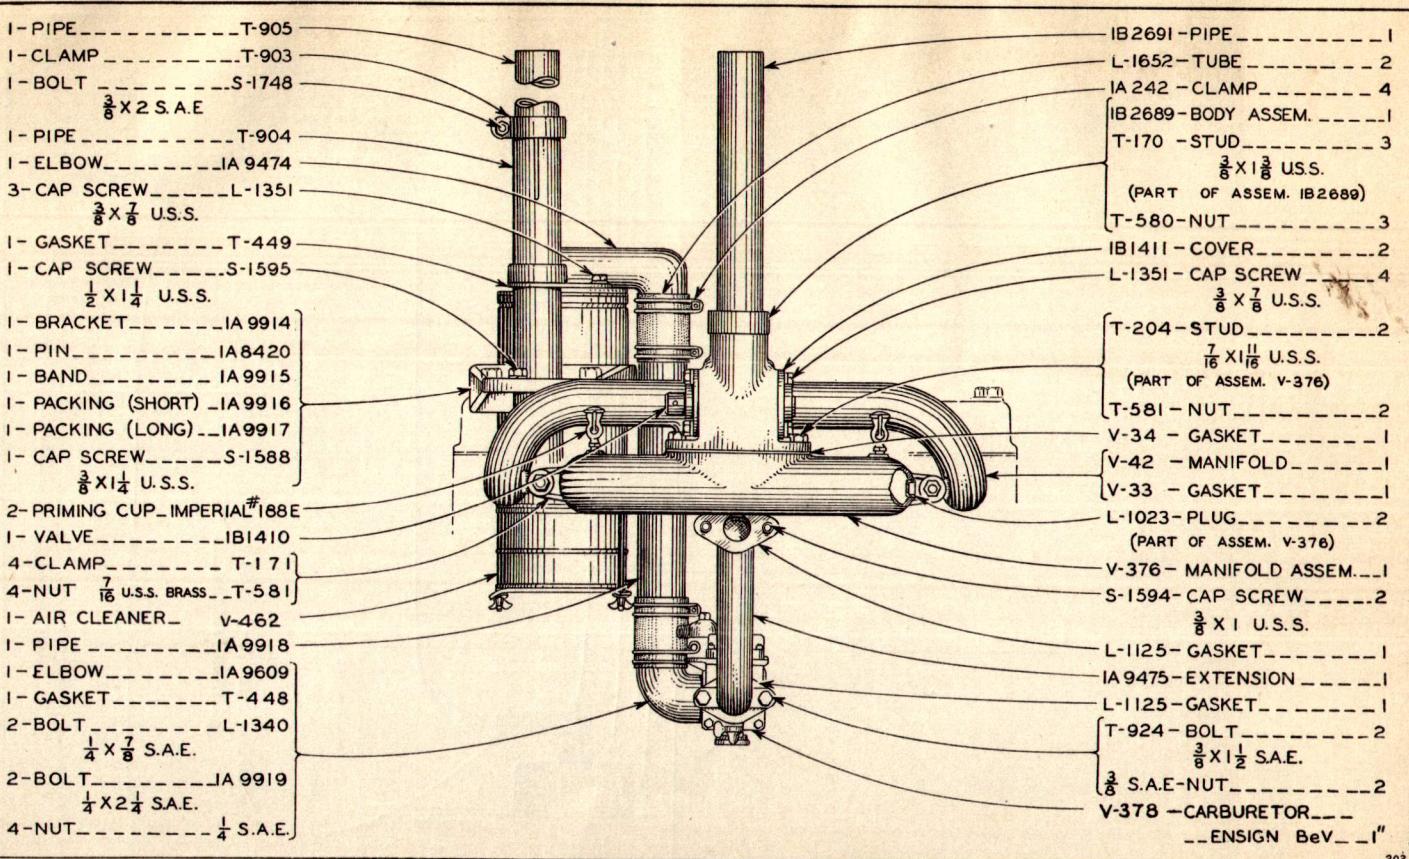


MANIFOLDS AND CARBURETOR

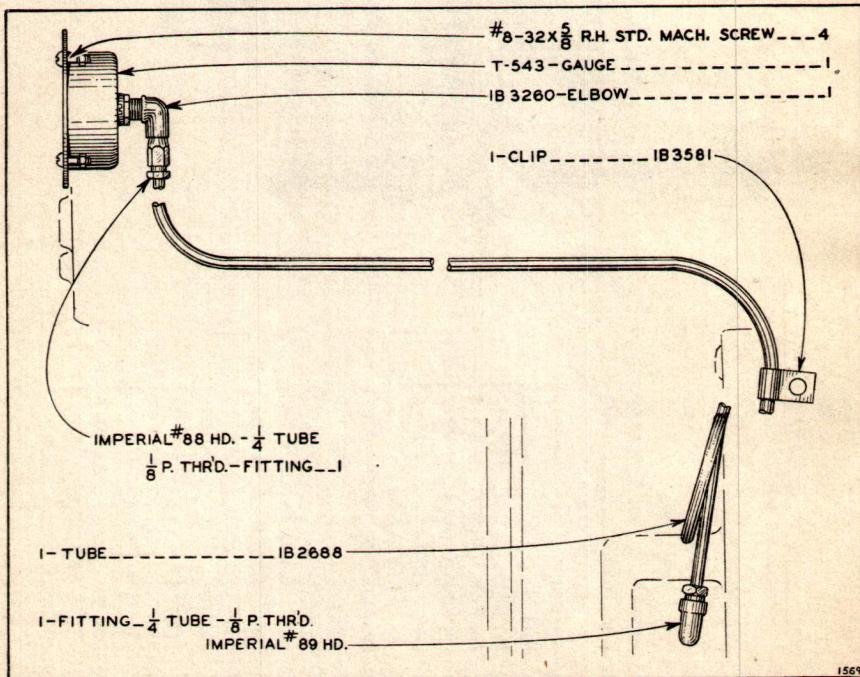


1569

OIL PRESSURE GAUGE

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

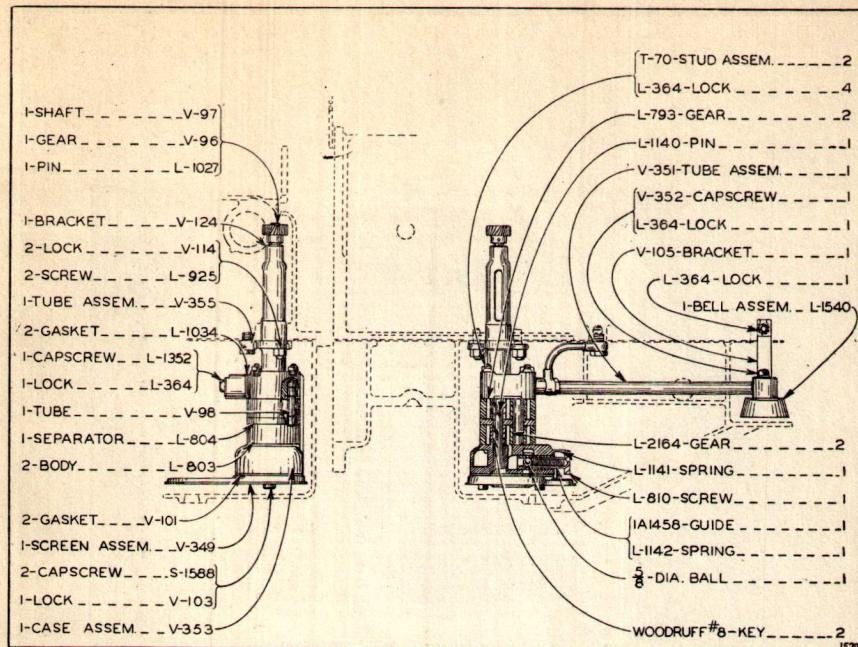


1B2851 OIL PUMP ASSEMBLY

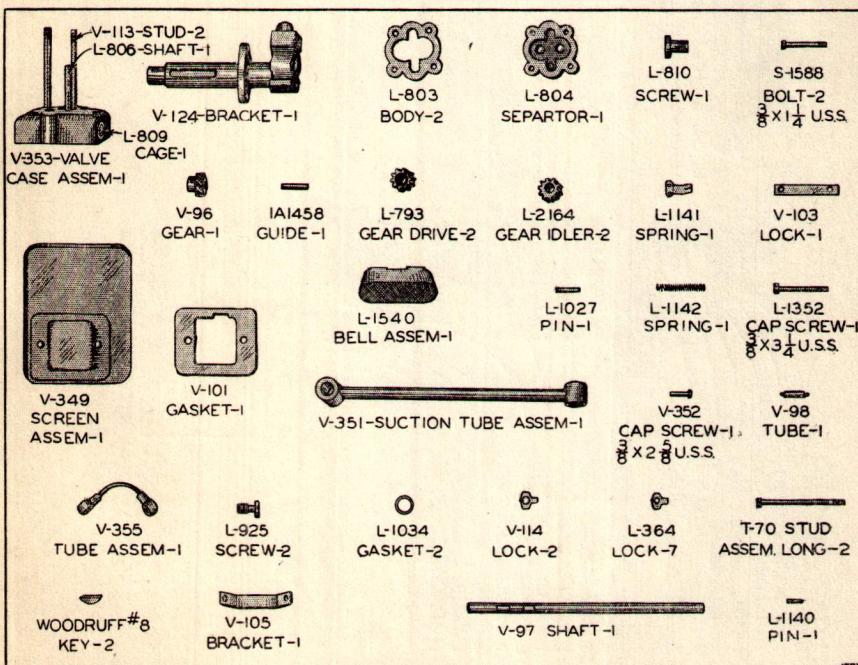


OIL PUMP ASSEMBLY PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS


ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

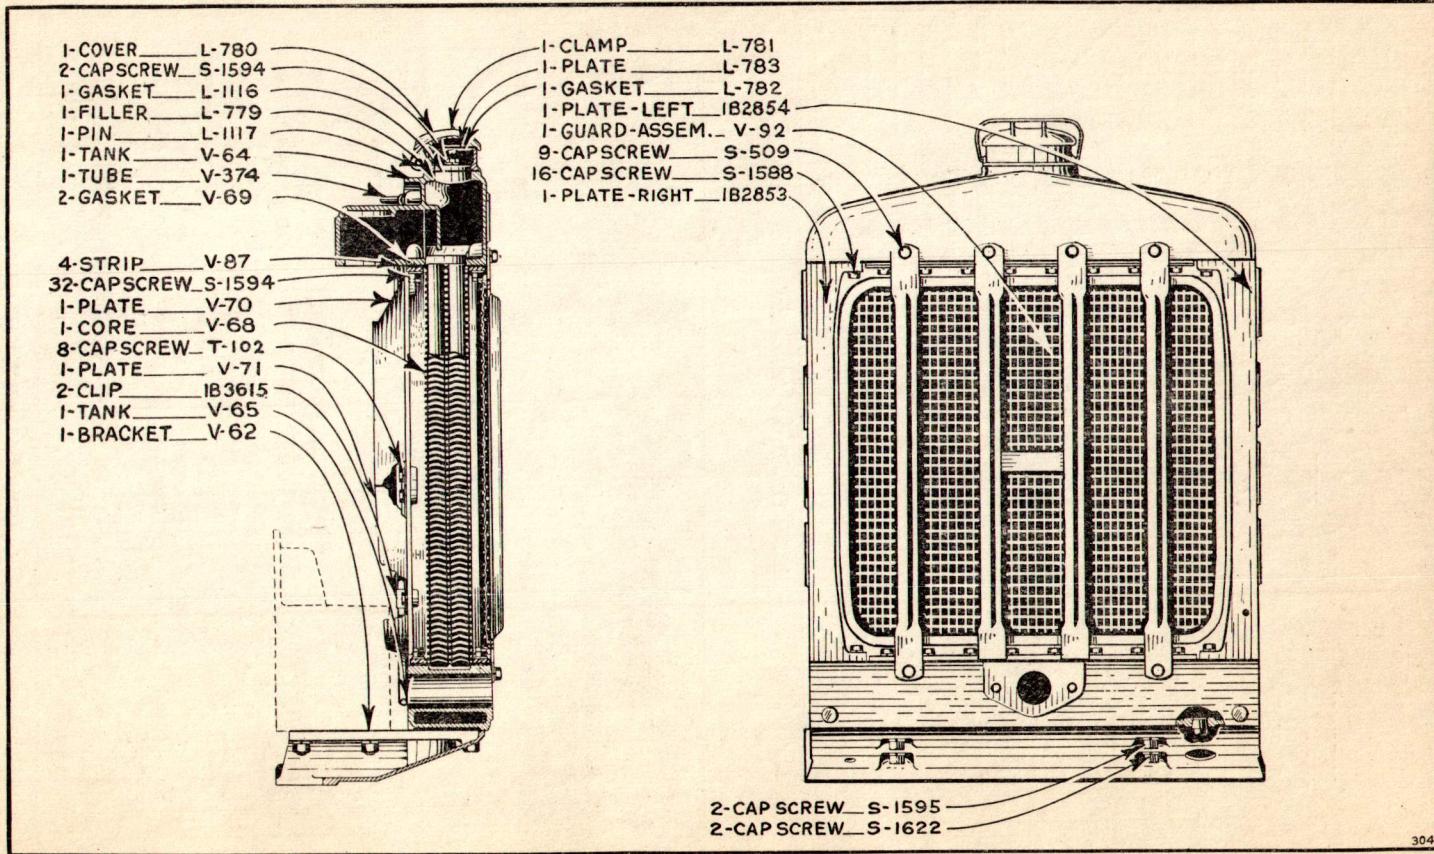

RADIATOR

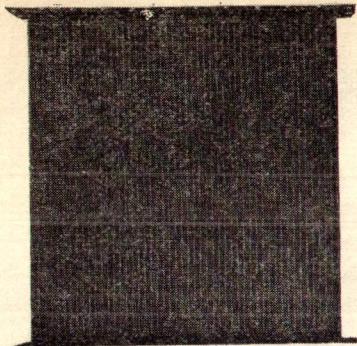

V-68 CORE (1)

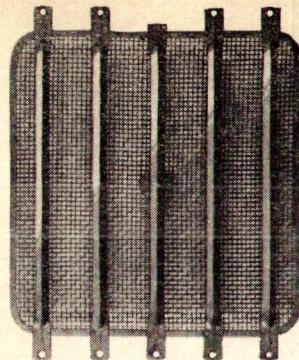

V-92 RADIATOR GUARD ASSEM. (1)




V-64 TOP TANK (1)



V-62  
BRACKET (1)




V-65 BOTTOM TANK (1)

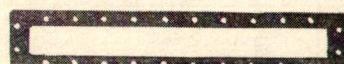

V-69 GASKET (2)




V-87 STRIP (4)

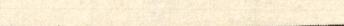

V-374 OVERFLOW TUBE (1)

RADIATOR PARTS

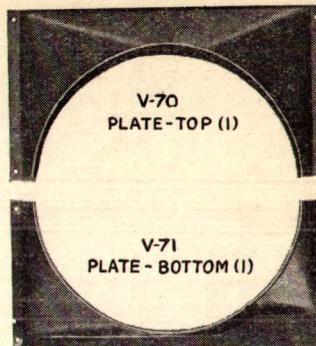

V-70  
PLATE - TOP (1)

V-71  
PLATE - BOTTOM (1)



IB2853 PLATE - RIGHT (1)  
IB2854 PLATE - LEFT (1)



L-779  
FILLER (1)



L-1116  
GASKET (1)



S-1588  
CAP SCREW (16)  
 $\frac{3}{8} \times \frac{1}{4}$  U.S.S.



S-1622  
CAP SCREW (2)  
 $\frac{1}{2} \times 2$  U.S.S.



L-780  
COVER (1)



L-782  
GASKET (1)



S-1594  
CAP SCREW (34)  
 $\frac{3}{8} \times 1$  U.S.S.



S-1595  
CAP SCREW (2)  
 $\frac{1}{2} \times \frac{1}{4}$  U.S.S.



L-783  
PLATE (1)



L-781  
CLAMP (1)



T-102  
CAP SCREW (8)  
 $\frac{3}{8} \times \frac{5}{8}$  U.S.S.




S-509  
CAP SCREW (9)  
 $\frac{3}{8} \times \frac{3}{4}$  U.S.S.




L-1117 PIN (1)



IB3615 CLIP (2)

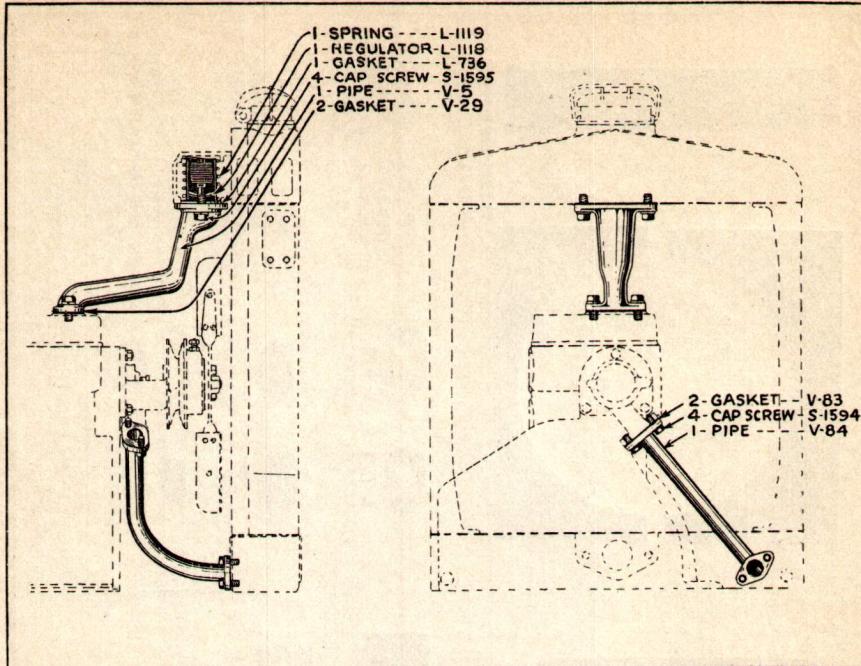


WATER LINES

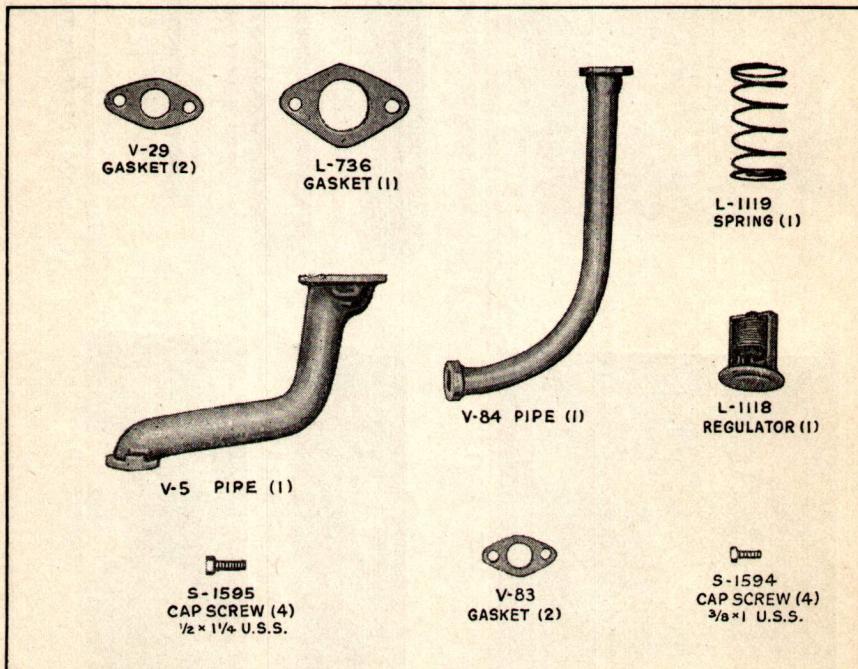


WATER LINE PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

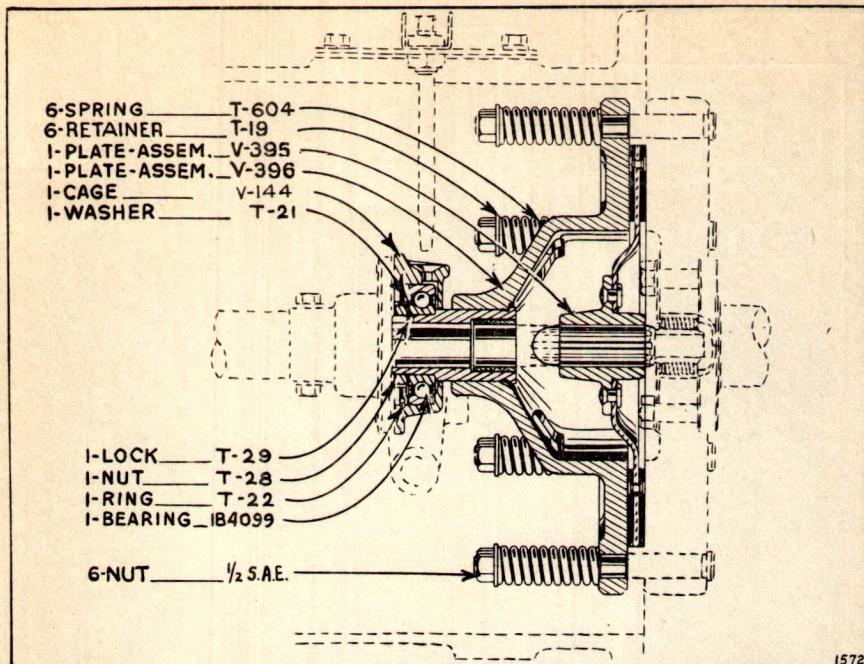


FLYWHEEL CLUTCH

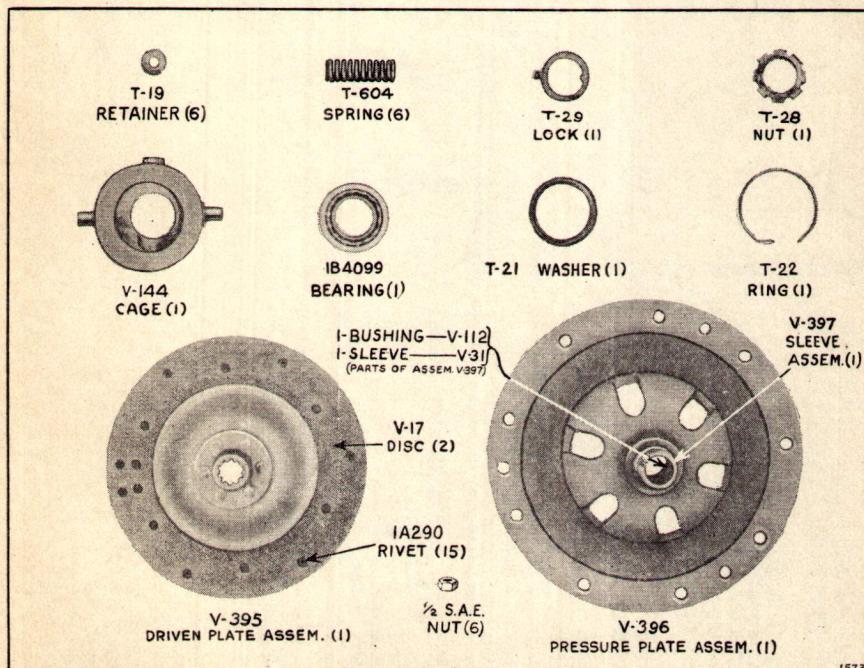


FLYWHEEL CLUTCH PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS


ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

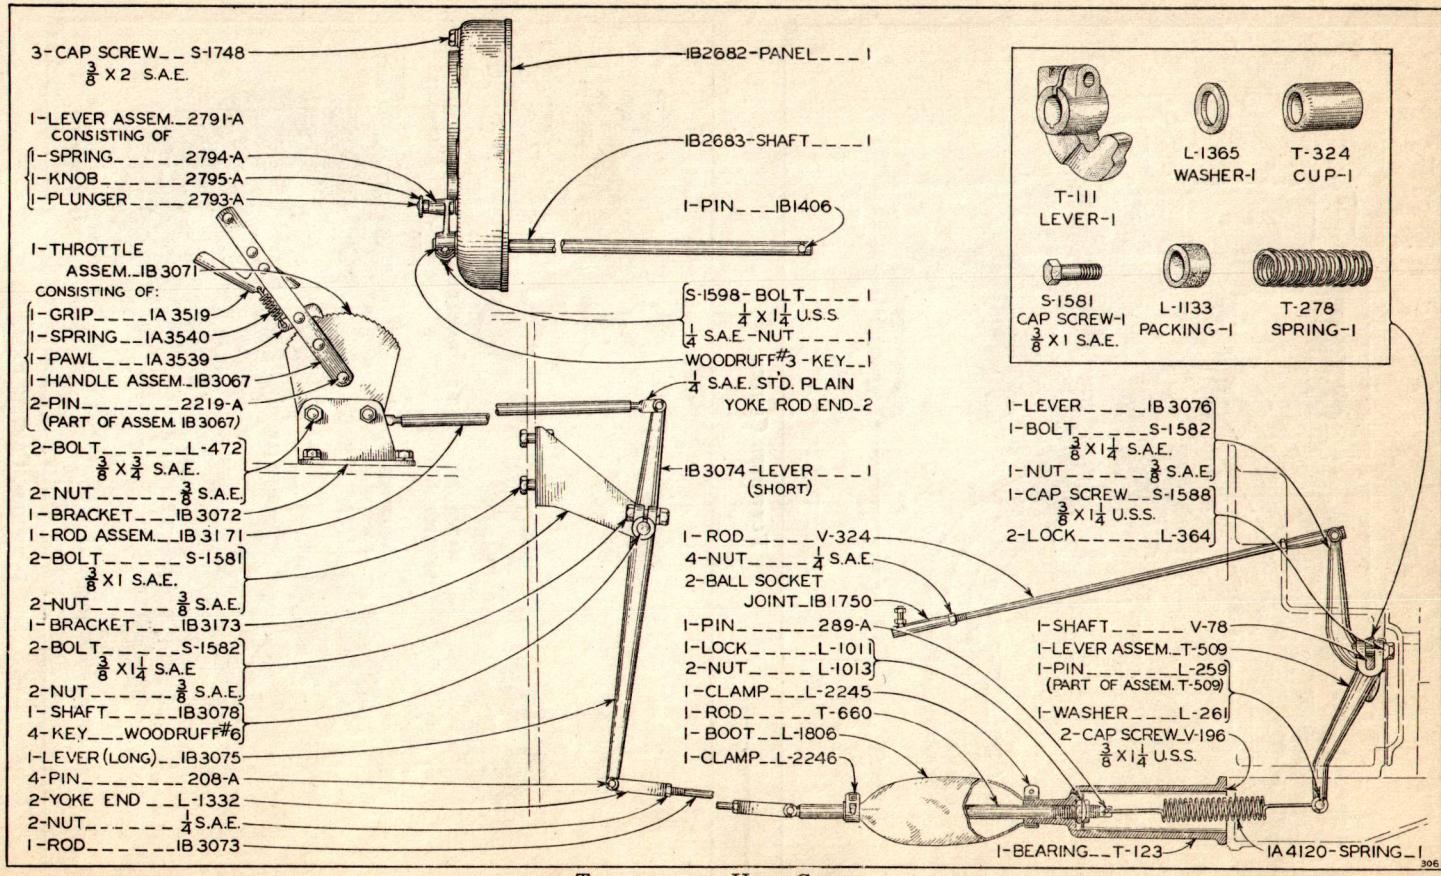

THROTTLE AND HEAT CONTROL

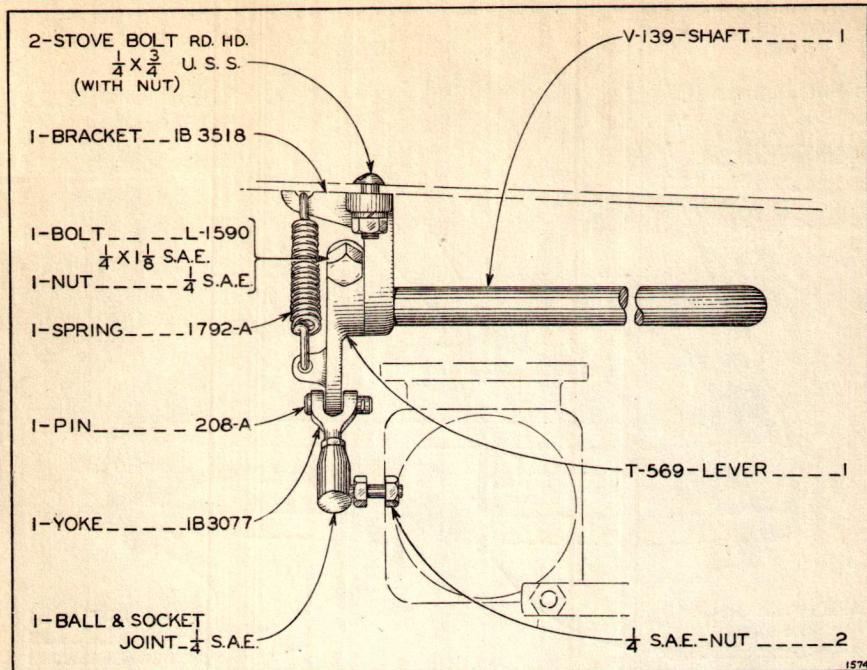


CARBURETOR CHOKE CONTROL

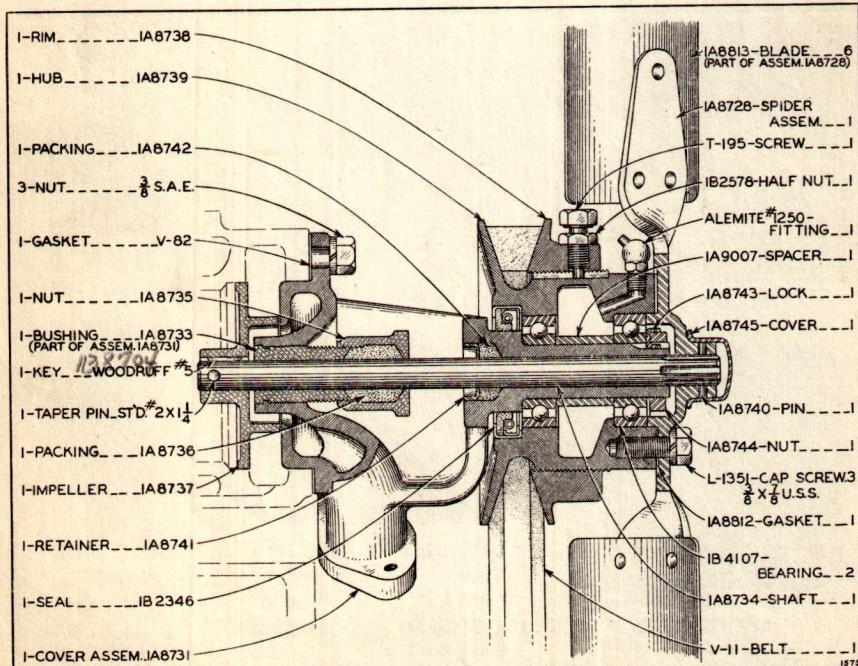


FAN AND WATER PUMP

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

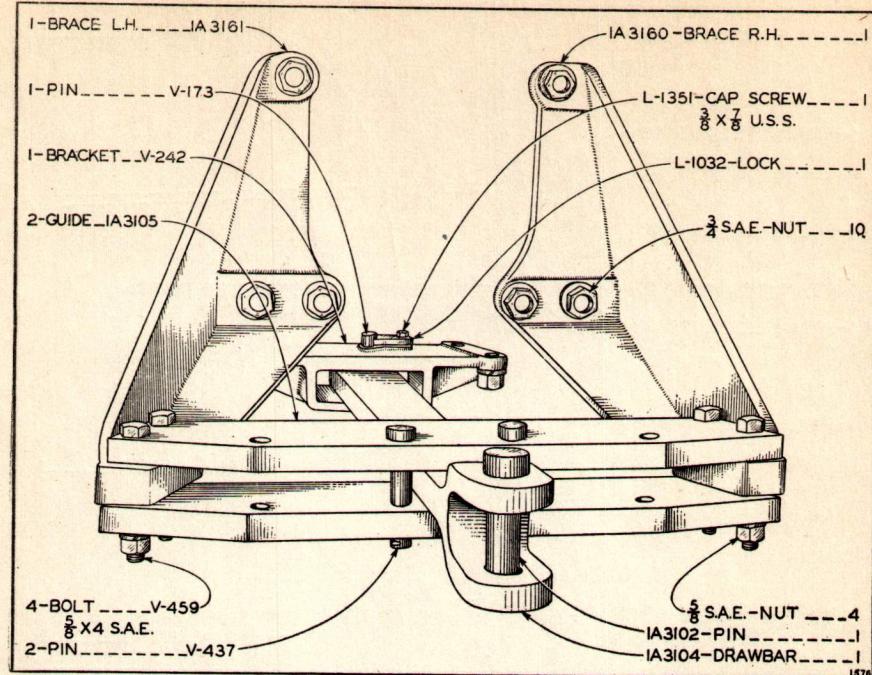


DRAWBAR

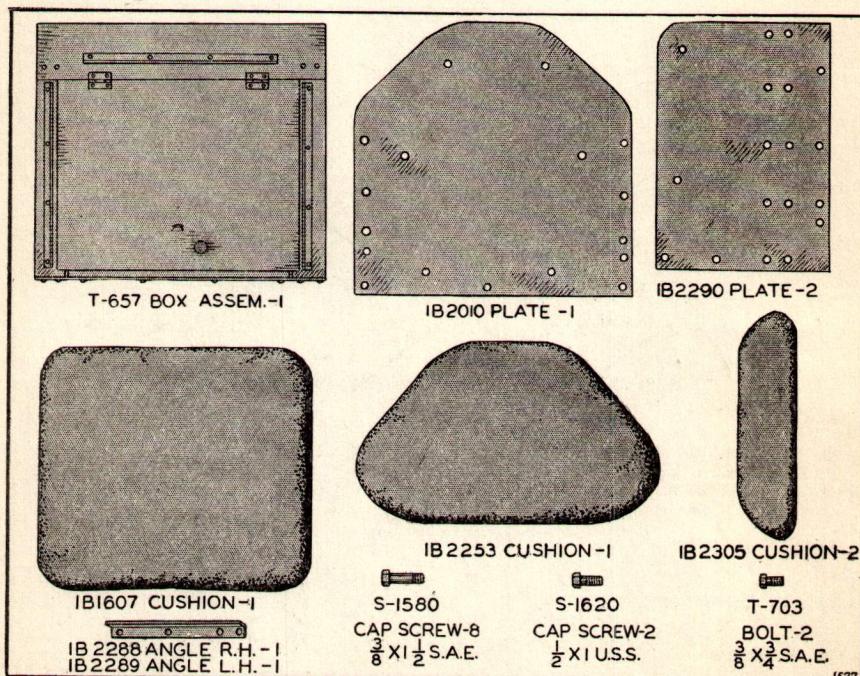


SEAT

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

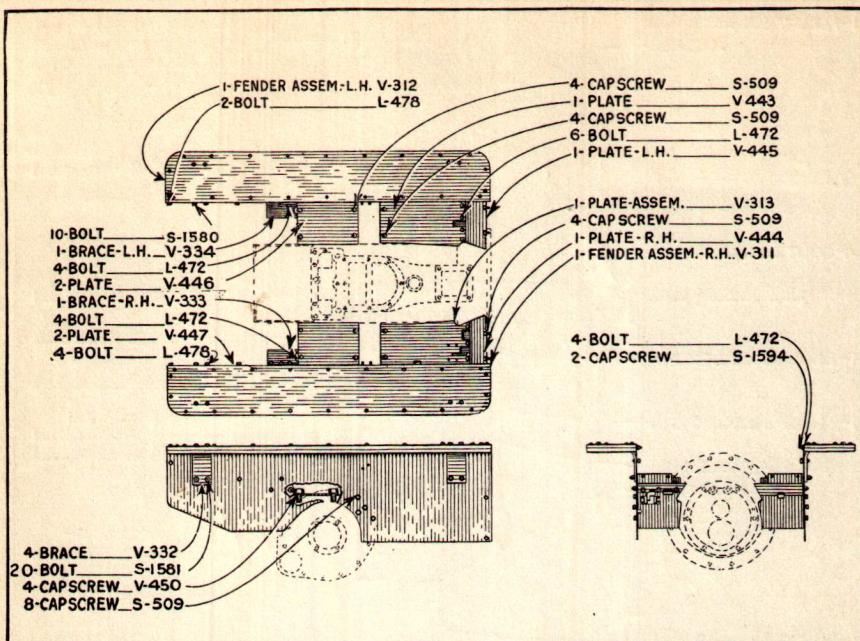


FENDERS

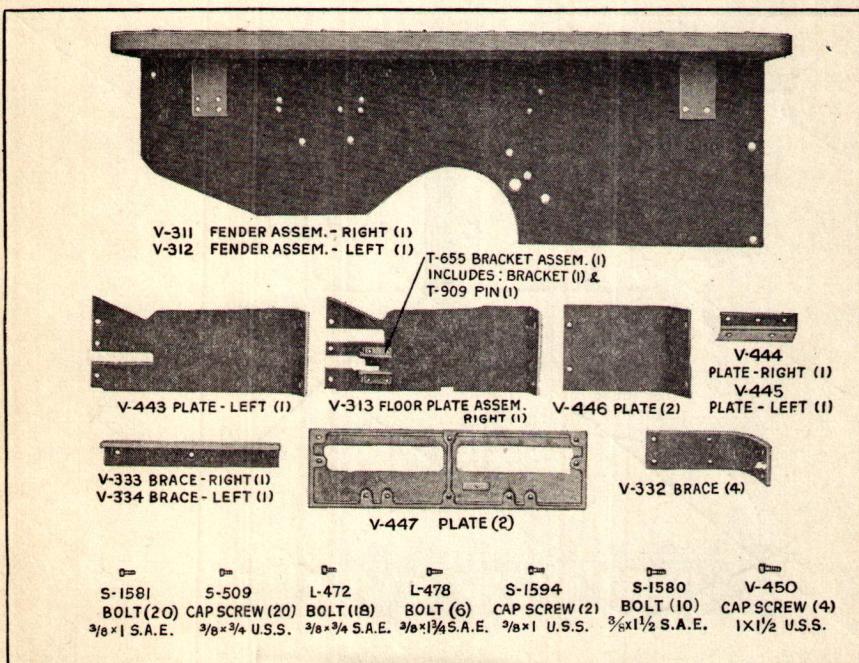


FENDER PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

## "CATERPILLAR" TWENTY TRACTOR

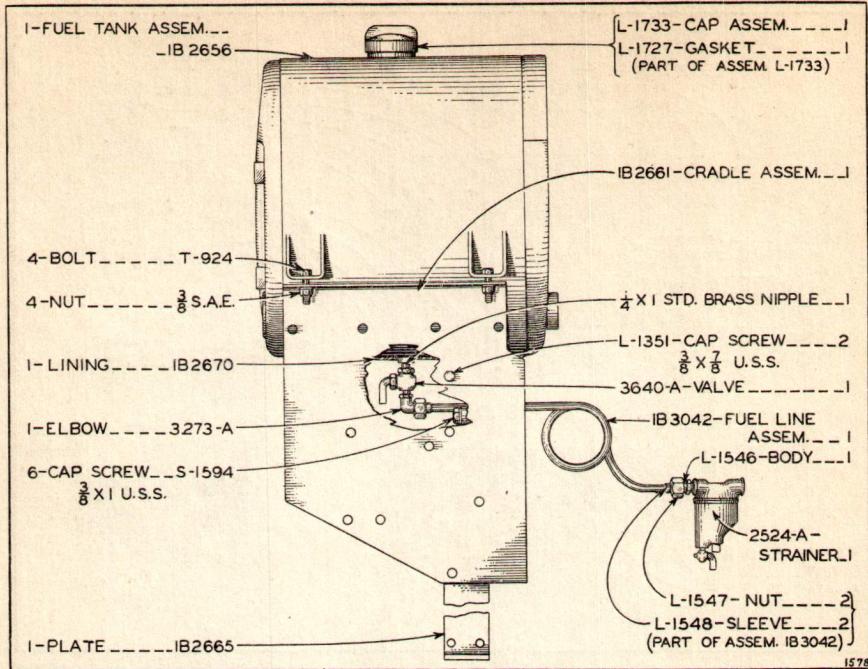


FUEL SYSTEM

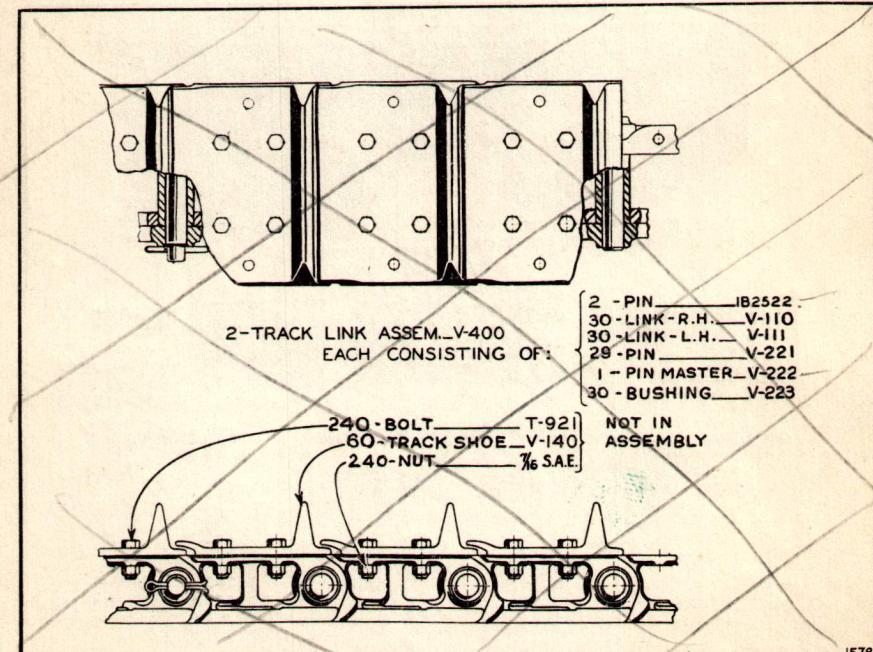

614411 Pin + Bushing Group. (Consists  
of complete set of pins & bushings  
for one track.)


**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

CROSS OUT ILLUSTRATION 1579 JUN 1946  
 REMOVE AND DESTROY INSERT DATED 4-15-46  
 PLACE THIS INSERT BETWEEN PAGES 26 & 27 IN FORM P-1338—  
 PARTS CATALOG FOR TWENTY TRACTOR

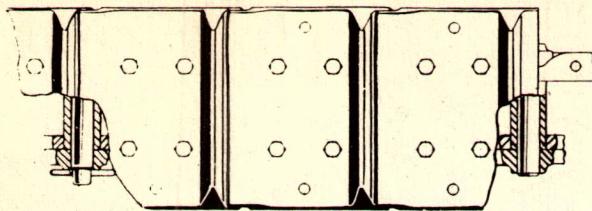

2-TRACK LINK ASSEM.\_V-400  
 EACH CONSISTING OF:

2 - PIN	IB2522
30 - LINK - R.H.	V-110
30 - LINK - L.H.	V-111
29 - PIN	V-221
1 - PIN MASTER	V-222
30 - BUSHING	V-223

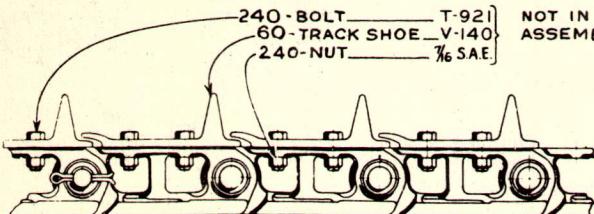


NOT IN  
 ASSEMBLY

1579

#### TRACK—Non-Counterbored

6B1471 Track Pin and Bushing Group consists of a complete set  
 of Pins and Bushings for one Track

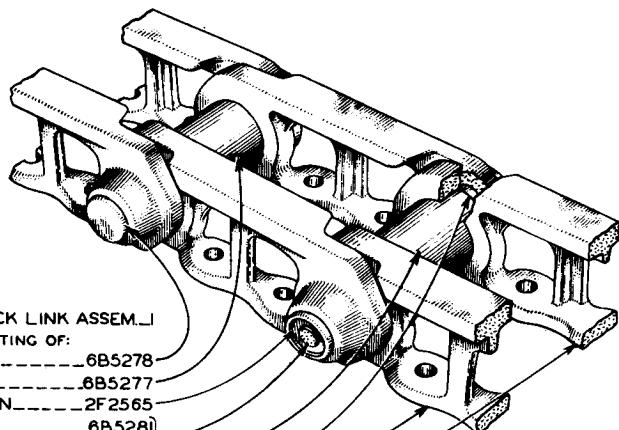

**6B5276 - TRACK LINK ASSEM.**

CONSISTING OF:

- 29-PIN-----6B5278
- 29-BUSHING-----6B5277
- 1-MASTER PIN-----2F2565
- 2-PLUG-----6B5281
- 2-CORK-----2B7556
- 1-MASTER BUSHING-----V-223
- 2-COLLAR-----6B5280
- 30-LINK---(L.H.)---5B3130
- 30-LINK---(R.H.)---5B3129

14229

**Complete Track Group  
(2 Req'd. Per Tractor)**

**Shoe  
(30 Req'd. for  
One Track)**

7"	Grouser Shoe	6B5397	1891
7"	" H.T.	6B5390	181969
10"	" "	6B5403	V-110
10"	" H.T.	6B5402	18886
10"	" 1" Offset R.H.	6B5393 {1 Req'd.}	3B3167
10"	" 1" " L.H.	6B5394 {1 Req'd.}	3B3168
10"	Semi-Skeleton Snow Shoe H.T. (2" Grouser)	6B5406	(S.S.) 2B9925 (15 Req'd.) (D.S.) 2B9926 (15 Req'd.)
10"	Semi-Skeleton Snow Shoe H.T. (3" Grouser)	6B7195	(S.S.) 6B7171 (15 Req'd.) (D.S.) 6B7172 (15 Req'd.)
10"	Flat Shoe	6B5501	V-803
10"	Skeleton Shoe	6B5500	V-802
10"	Rubber Shoe	6B5499	Plate V-519 Shoe V-520
12"	Grouser Shoe 1" Offset R.H. H.T.	6B5391 {1 Req'd.}	4B9331
12"	" 1" " L.H. H.T.	6B5392 {1 Req'd.}	4B9332
12"	" H.T.	6B5407	2B4765
12"	Semi-Skeleton Snow Shoe H.T. (2" Grouser)	6B5395	2B8337
12"	Semi-Skeleton Snow Shoe H.T. (3" Grouser)	6B5401	(S.S.) 5B7795 (15 Req'd.) (D.S.) 5B7796 (15 Req'd.)
		6B7163	(S.S.) 6B7161 (15 Req'd.) (D.S.) 6B7162 (15 Req'd.)

2B5484 Track Shoe Bolt - 120 Req'd. for One Track

2B5483 Nut (Used with 2B5484)

3B4507 Lockwasher (Used with 2B5484)


H.T. - Heat Treated S.S. - Single Spike D.S. - Double Spike

19638


**TRACK LINK ASSEMBLY—Counterbored (2 Assemblies Req'd.)**

6B6980 Track Pin and Bushing Group consists of a complete set  
of Pins and Bushings for one Track


**ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS**

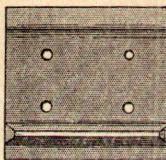


**IB91 7" GROUSER SHOE**  
IB1969 7" GROUSER SHOE  
(HEAT TREATED)

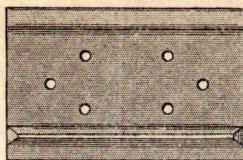


**V-140 10" GROUSER SHOE**  
IB 886 10" GROUSER SHOE  
(HEAT TREATED)

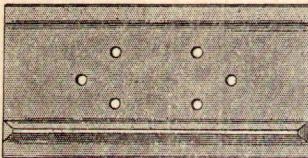


**IA360 13" GROUSER SHOE**  
IB1970 13" GROUSER SHOE  
(HEAT TREATED)

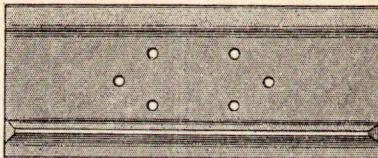


**IA359 16" GROUSER SHOE**  
IB1971 16" GROUSER SHOE  
(HEAT TREATED)

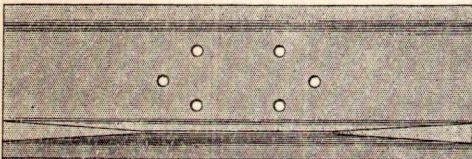


**IB57 20" GROUSER SHOE**  
IB2469 20" GROUSER SHOE  
(HEAT TREATED)

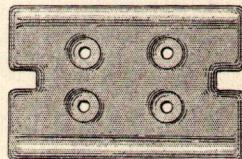

**V-803 10" FLAT UNIVERSAL SHOE**

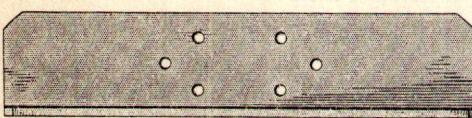


**V-559 20" ANGLE SHOE**

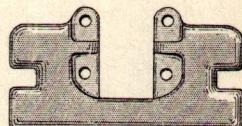


**V-802 10" SKELETON SHOE**




**V-805 DIRT GROUSER R.H.**  
V-806 DIRT GROUSER L.H.  
(USED WITH FLAT SHOE)

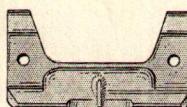


**V-801 ICE & DIRT GROUSER**  
(USED WITH GROUSER SHOE)

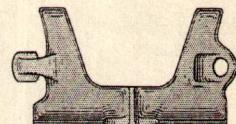

**V-807 ICE GROUSER R.H.**  
V-808 ICE GROUSER L.H.  
(USED WITH FLAT OR  
SKELETON SHOE)

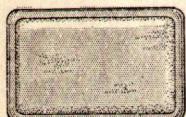

**V-520 RUBBER FACED SHOE**

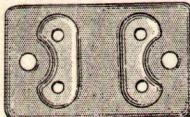

**V-519 BASE PLATE FOR V-520**



**V-819 BOLT  $\frac{5}{8} \times 2\frac{1}{2}$  U.S.S.**  
(USED WITH: V-805, V-806, V-807, V-808)




**T-490 BOLT  $\frac{7}{16} \times 1\frac{1}{2}$  S.A.E.**  
(USED WITH: V-801)

**T-244 BOLT  $\frac{7}{16} \times 1\frac{1}{4}$  S.A.E.**  
(USED WITH: T-332)

**T-921 BOLT  $\frac{7}{16} \times 1\frac{5}{16}$  S.A.E.**


(USED WITH: IB1969, IB886, V-803, V-802,  
IB1970, IB1971, IB2469, V-559, V-519, V-520)

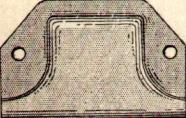


**T-332 STREET PLATE**



**T-1215 WASHER**  
(USED WITH: V-805,  
V-806, V-807, V-808)

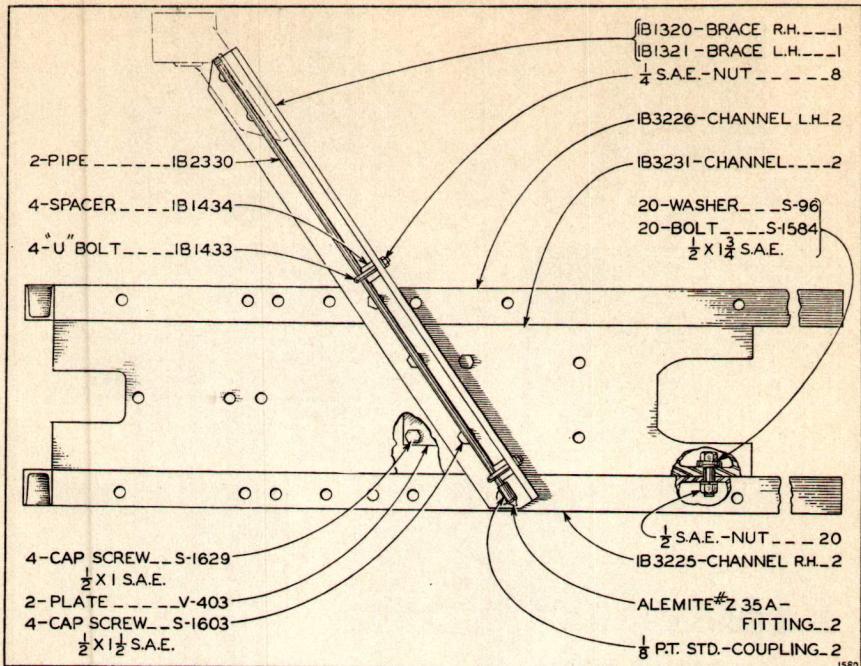


TRACK ROLLER FRAME

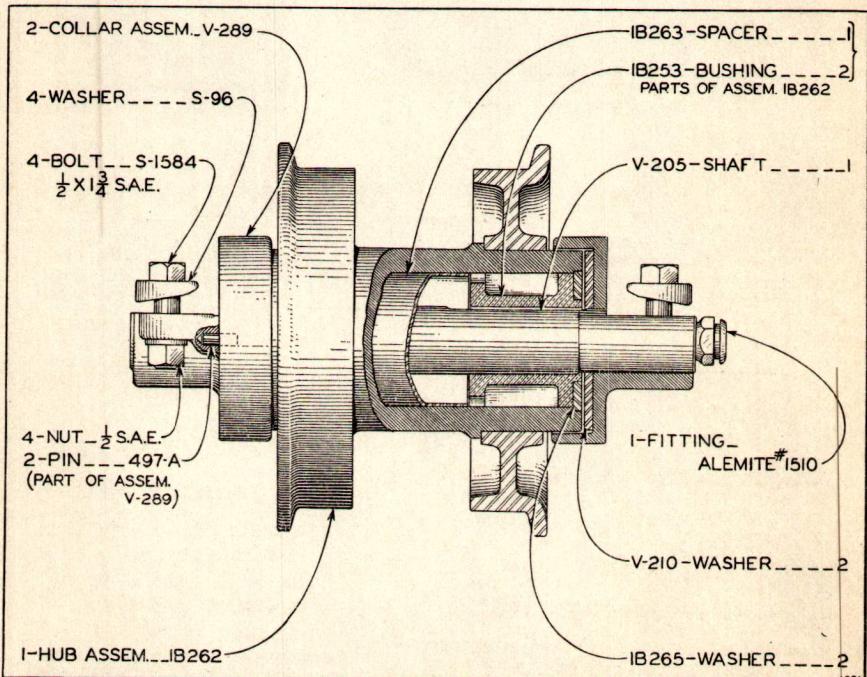


TRACK ROLLER

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

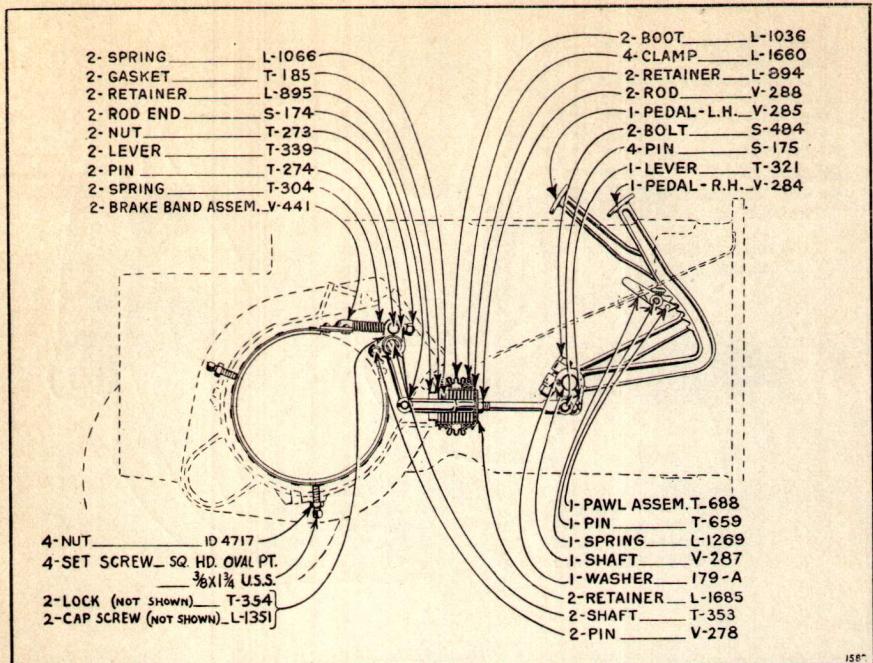


BRAKE

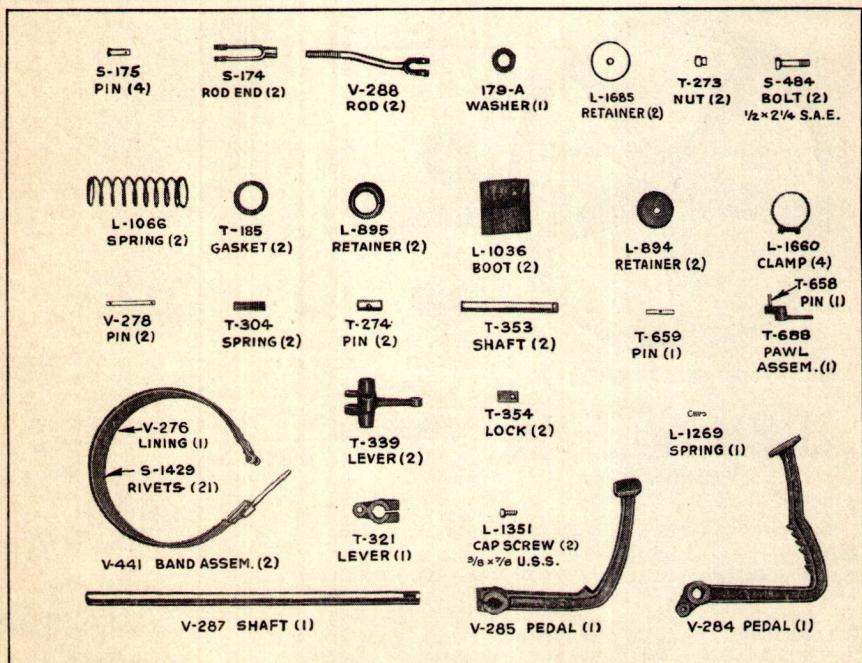


BRAKE PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

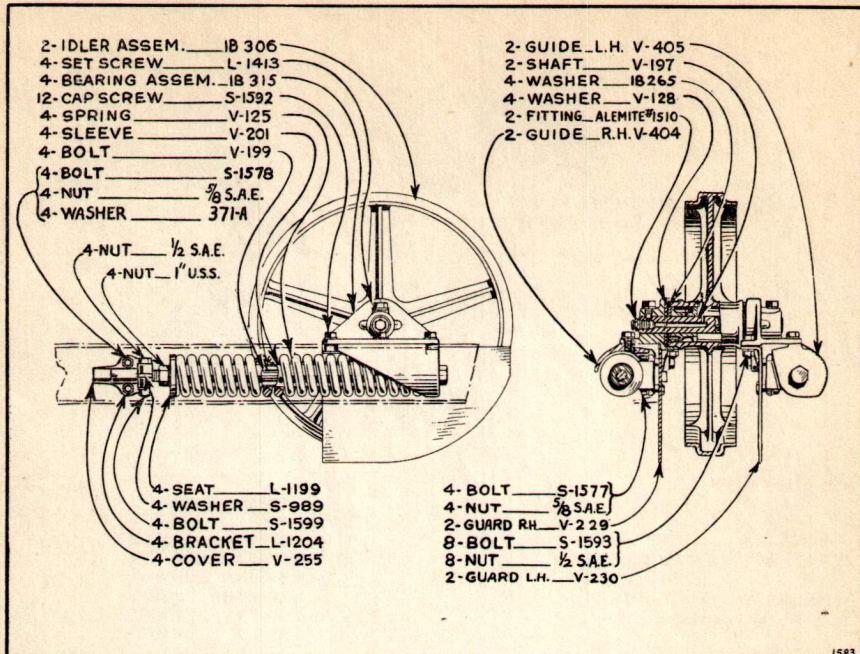

1583


FRONT IDLER

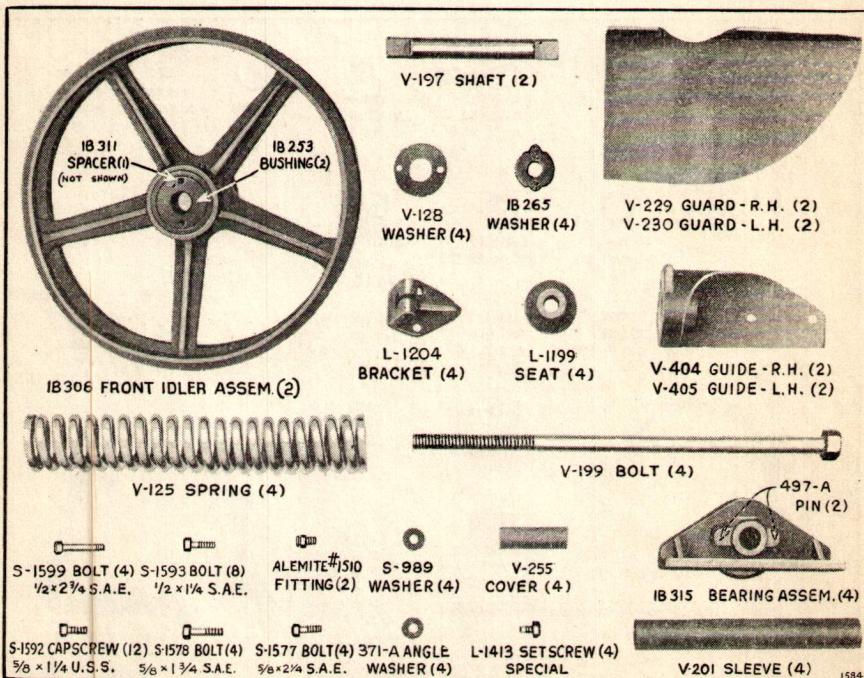

1584


FRONT IDLER PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

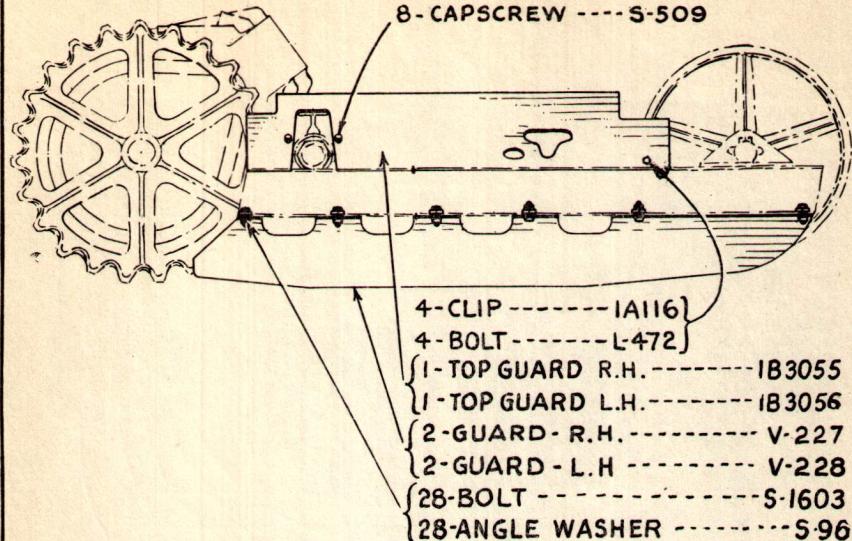

1585

TRACK ROLLER FRAME GUARDS

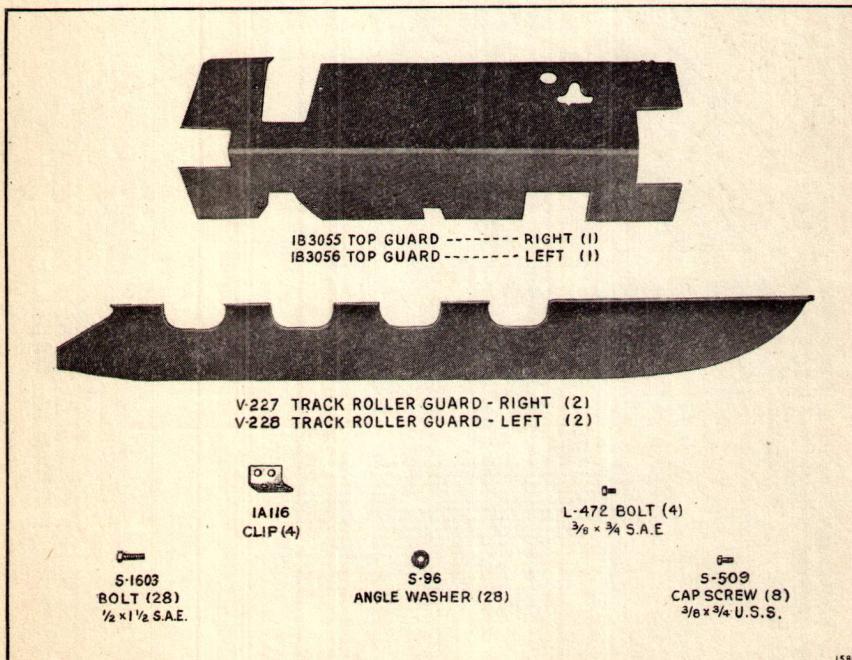


1586

TRACK ROLLER FRAME GUARD PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

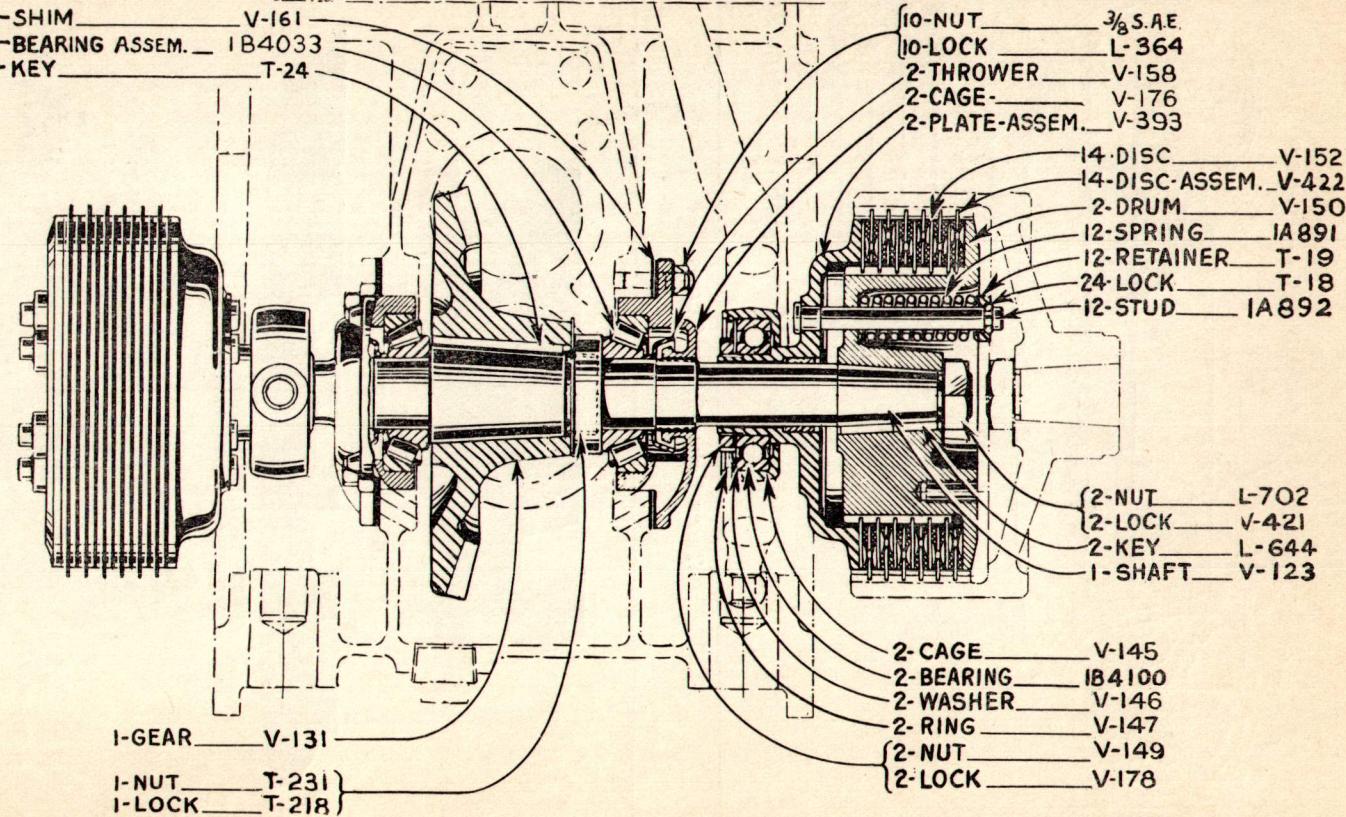

STEERING CLUTCHES AND BEVEL GEAR

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

PARTS CATALOG

33



V-178  
LOCK (2)




V-421  
LOCK (2)



T-231  
NUT (1)



T-218  
LOCK (1)

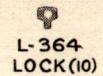

L-364  
LOCK (10)



V-149  
NUT (2)



V-147  
RING (2)



V-146  
WASHER (2)



L-702  
NUT (2)




IB 4031  
CONE



IB 4032  
CUP



V-158  
OIL  
THROWER (2)

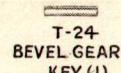

T-24  
BEVEL GEAR  
KEY (1)



T-18  
LOCK (24)



T-19  
RETAINER (12)



IA 891  
SPRING (12)



IA 892  
STUD (12)



V-145  
CAGE (2)




IB 4100  
BEARING (2)



V-123 - SHAFT (1)



L-644  
DRUM  
KEY (2)

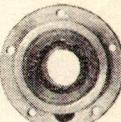


V-176  
CAGE (2)




V-161  
SHIM (2)



V-150  
DRUM (2)

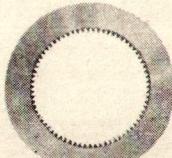


V-152  
DISC (14)

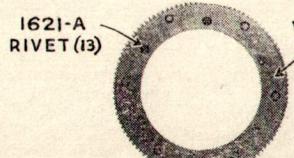


I621-A  
RIVET (13)  
V-547-FACING  
(2)

V-422 - DRIVEN  
DISC ASSEM. (14)

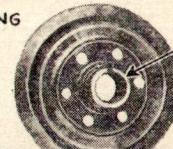


V-259  
BUSHING (1)  
V-393  
PRESSURE PLATE ASSEM. (2)

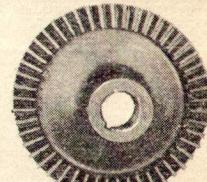


V-131  
GEAR (1)

STEERING CLUTCH AND BEVEL GEAR PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

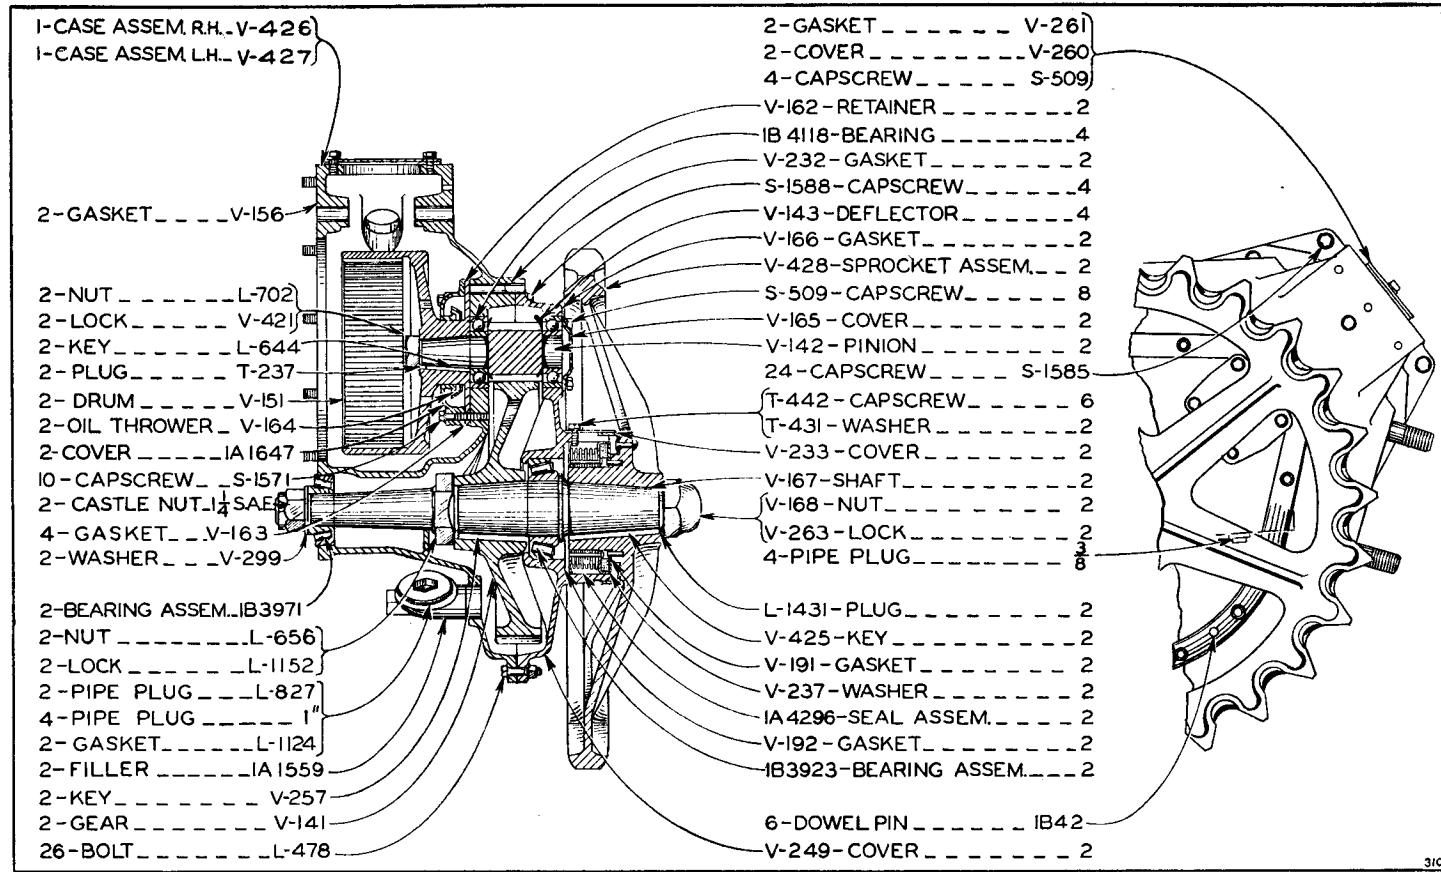


FINAL DRIVE

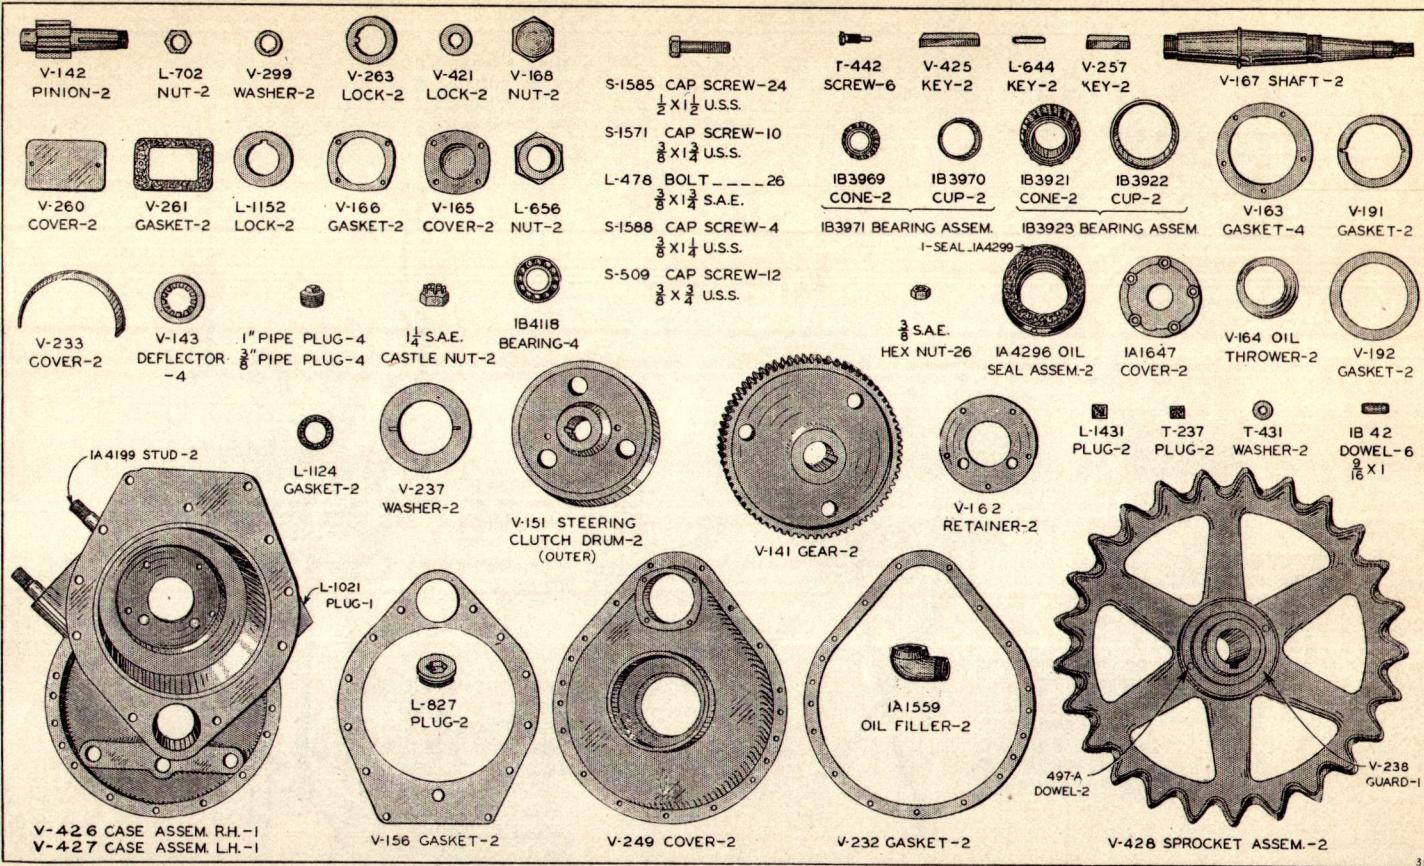


FINAL DRIVE PARTS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

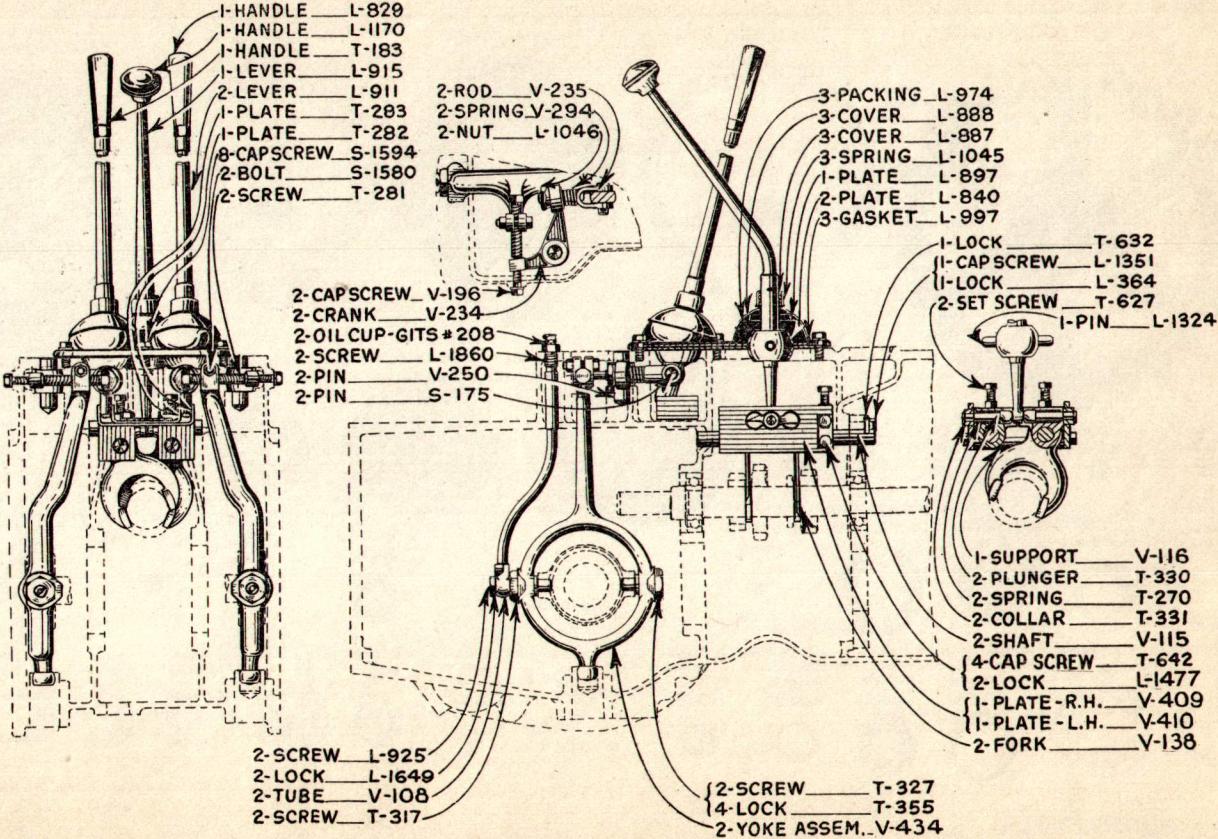



GEAR SHIFT AND STEERING CLUTCH CONTROLS

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

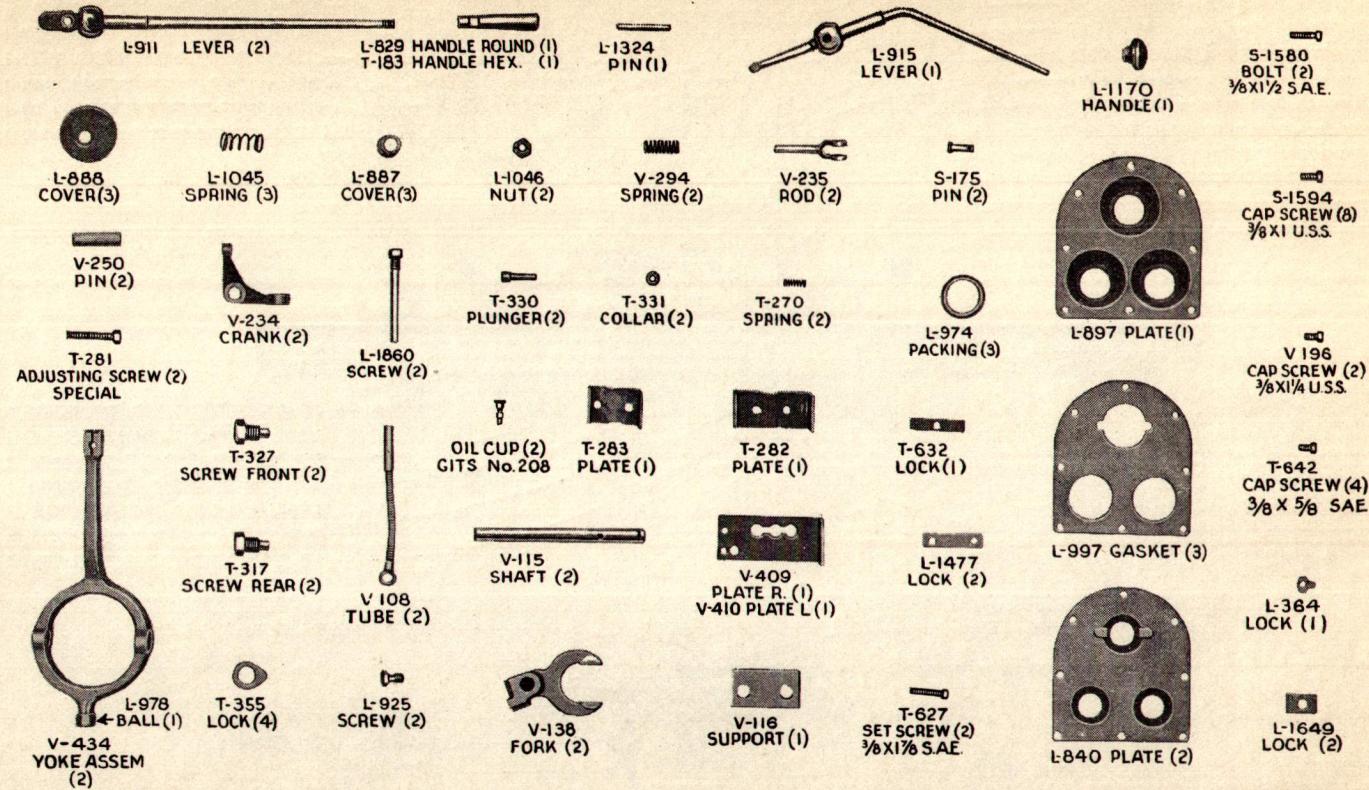


GEAR SHIFT AND STEERING CLUTCH CONTROL PARTS

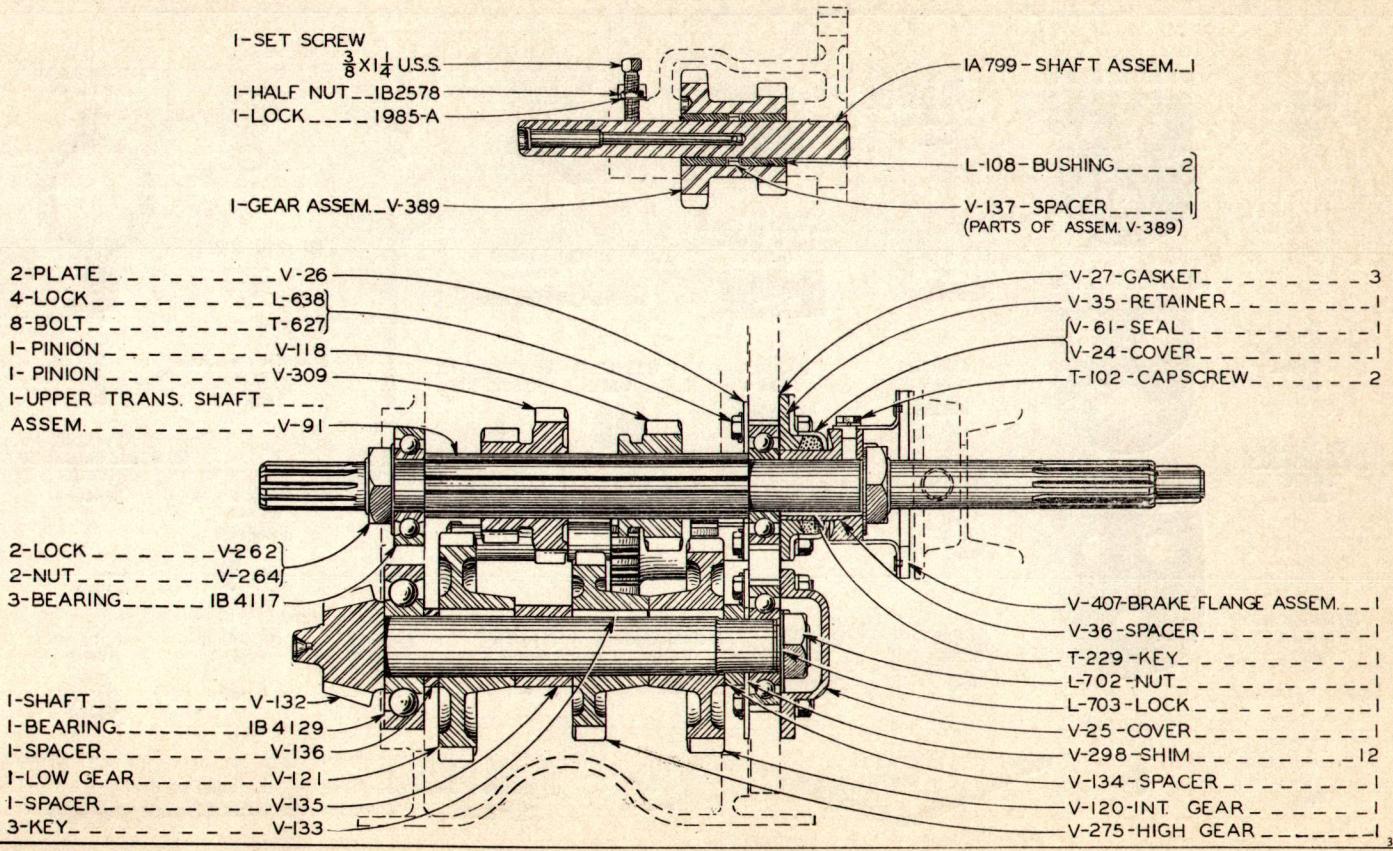


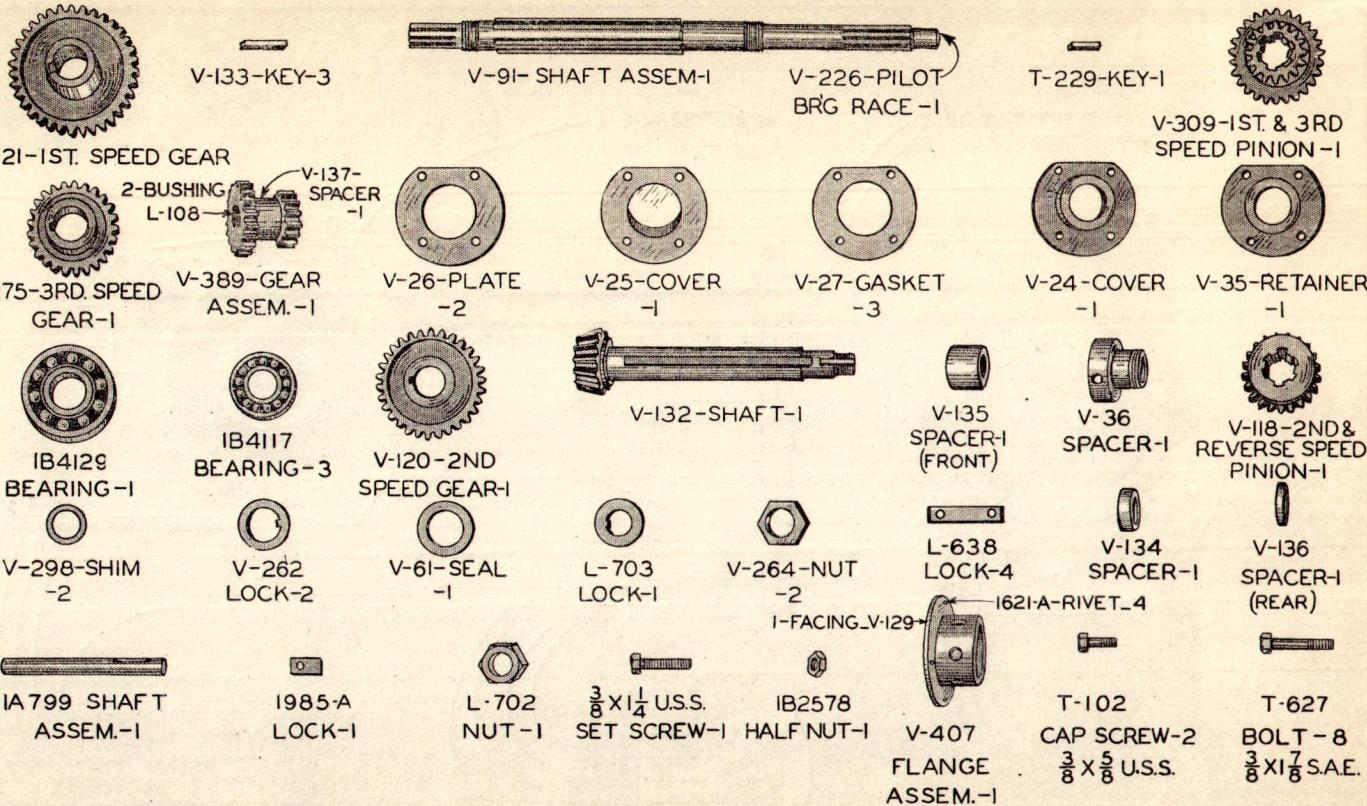



ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

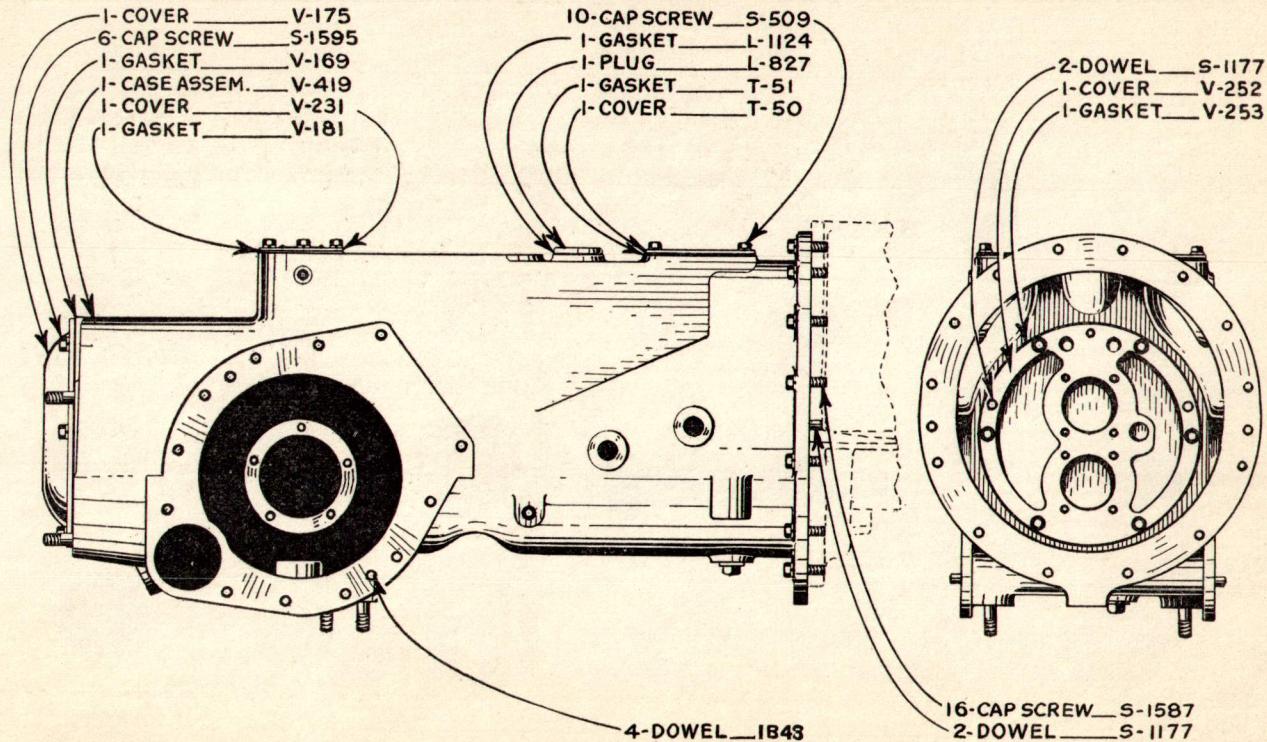


TRANSMISSION CASE AND COVERS

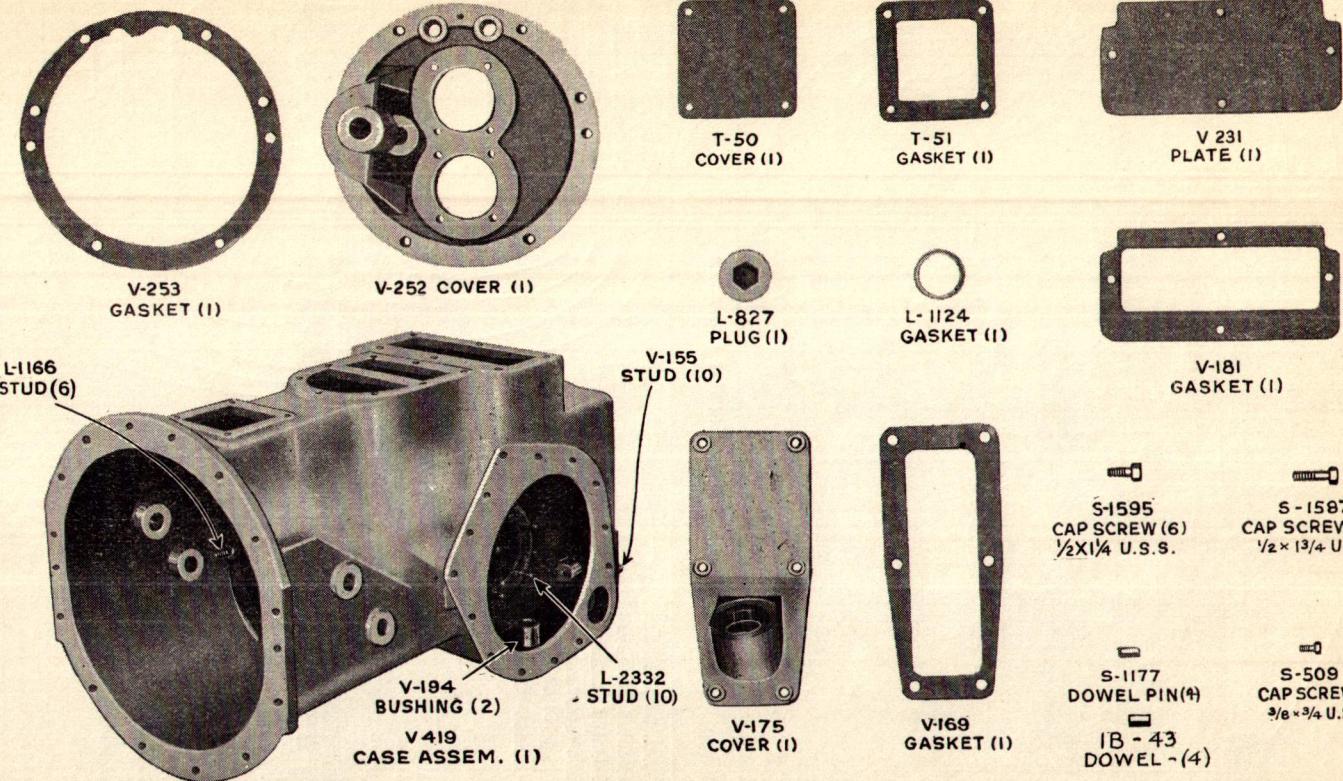


TRANSMISSION CASE AND COVER PARTS

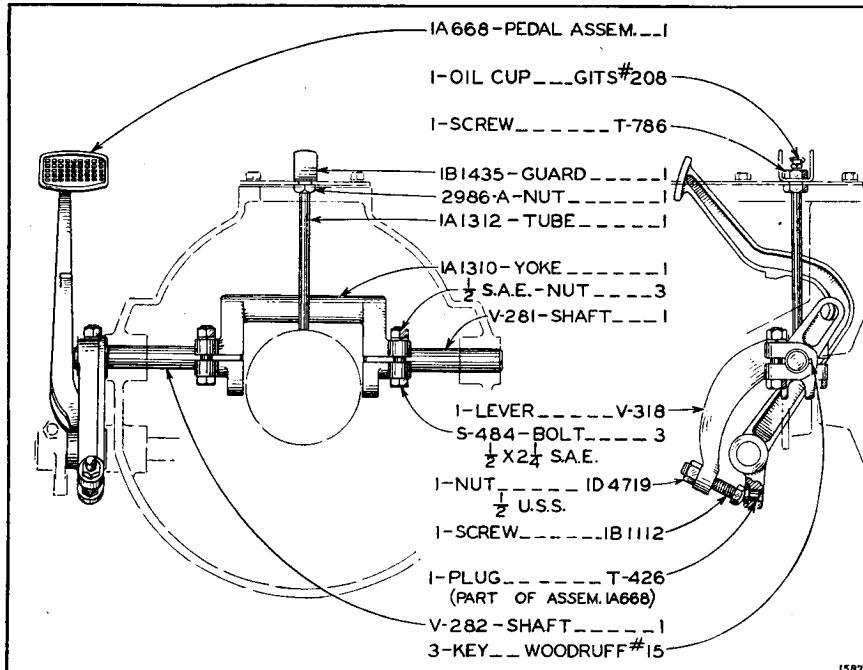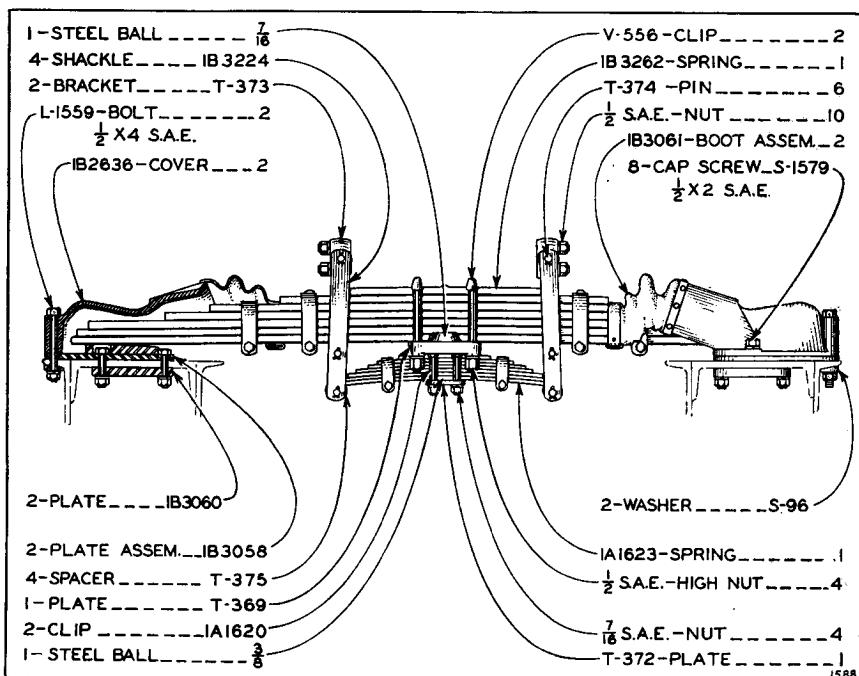**"CATERPILLAR" TWENTY TRACTOR****FLYWHEEL CLUTCH CONTROLS****EQUALIZER SPRING****ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

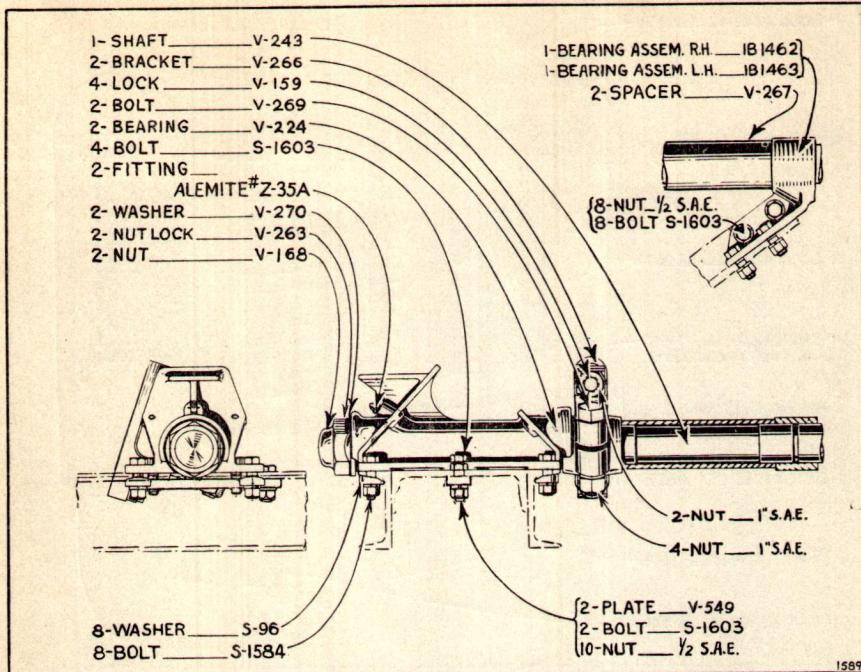

PIVOT SHAFT


1589

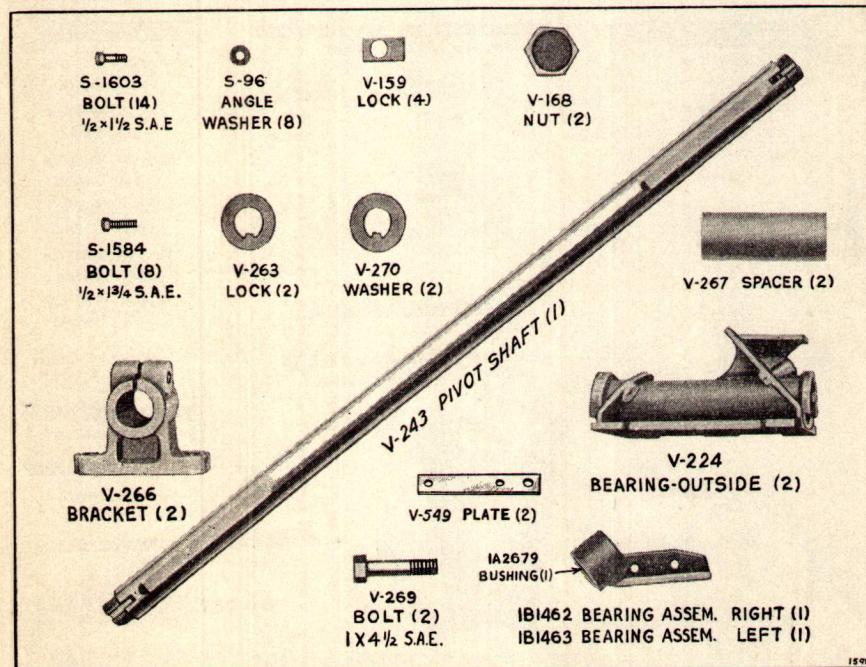


PIVOT SHAFT PARTS

1590

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

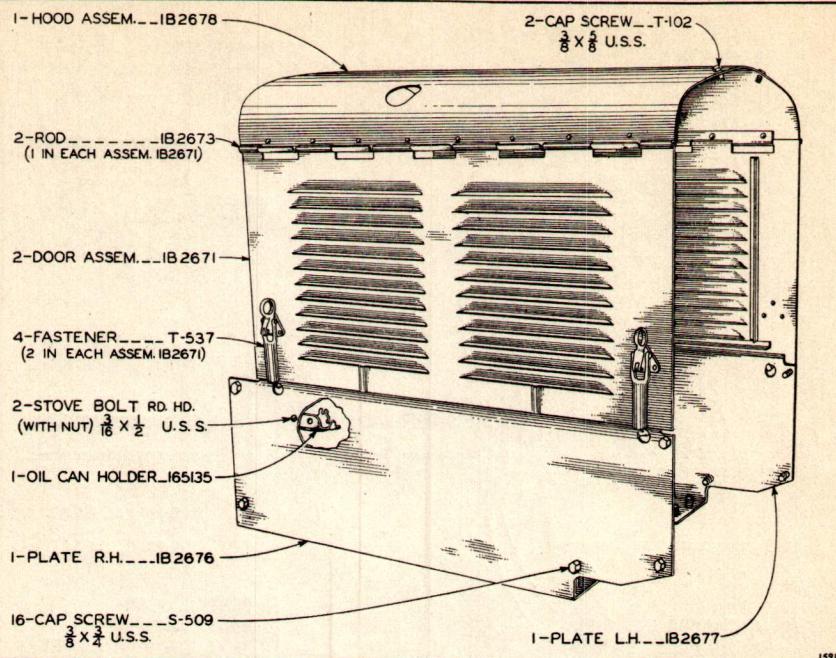**"CATERPILLAR" TWENTY TRACTOR**

HOOD

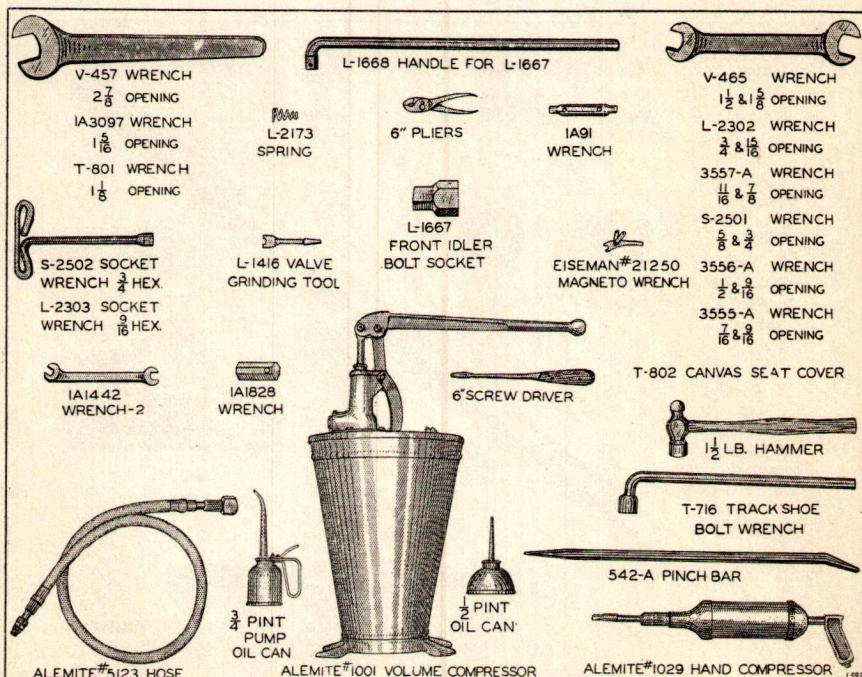

TOOLS

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

## COMMON STANDARD PARTS

This list includes all parts which are standard and not specially made for "Caterpillar" Tractors. They may be purchased at hardware stores, garages or automobile supply houses, if convenient; or they may be ordered from "Caterpillar" dealers.

The following table gives the threads per inch of U.S.S. (United States Standard) and S.A.E. (Society of Automotive Engineers Standard). The form of thread is exactly the same.

Size.....	$\frac{1}{4}$ "	$\frac{5}{16}$ "	$\frac{3}{8}$ "	$\frac{7}{16}$ "	$\frac{1}{2}$ "	$\frac{9}{16}$ "	$\frac{5}{8}$ "	$\frac{3}{4}$ "	$\frac{7}{8}$ "	1"
U.S.S.....	20	18	16	14	13	12	11	10	9	8
S.A.E.....	28	24	24	20	20	18	18	16	14	14

Name	Kind	Size	No. Reqd.	Where Used
Ball	Steel	$\frac{3}{8}$ " $\frac{7}{16}$ " $\frac{5}{8}$ "	1 1 1	Equalizer Spring Equalizer Spring Oil Pump
Ball Socket Joint	S.A.E. Type "A"	$\frac{1}{4}$ "—28	1	Carburetor Choke Control
Bolt	Stove Rd. Hd. With Nut	$\frac{3}{16}$ " x $\frac{1}{2}$ " U.S.S. $\frac{1}{4}$ " x $\frac{3}{4}$ " U.S.S.	2 2	Hood Carburetor Choke Control
Cup—Oil	Gits No. 208		2	Gear Shift & St. Cl. Controls
Cup—Priming	Imperial No. 188E		1	Flywheel Clutch Control
Fittings	Alemite No. 1250 Imperial No. 88 Hd. Alemite No. 1510 Imperial No. 88 Hd. Alemite No. Z35A Imperial No. 89 Hd. Pipe Plug	$\frac{1}{8}$ "—45° Elbow $\frac{3}{8}$ " Tube— $\frac{1}{4}$ " Pipe Thread $\frac{1}{4}$ " Tube— $\frac{1}{8}$ " Pipe Thread $\frac{1}{8}$ " Straight $\frac{1}{4}$ " Tube— $\frac{1}{8}$ " Pipe Thread $\frac{3}{8}$ " Std.	1 1 8 1 2 2 1	Fan & Water Pump Radiator Track Roller Oil Gauge Track Roller Frame Pivot Shaft Oil Gauge Trans. Case & Covers Final Drive Cyl. Block, Cyl. Head and Valves Radiator Cyl. Block, Cyl. Head and Valves Final Drive Trans. Case & Covers Fuel System Track Roller Frame
Nipple Coupling		$\frac{1}{2}$ " Std. $\frac{3}{4}$ " Stud 1" Std.	1 1 4	
Keys	Woodruff	No. 3 No. 5 No. 6 No. 8 No. 13 No. 15	1 1 3 1 2 3 2	Heat Control Fan and Water Pump Carburetor Control Accessory Shaft Oil Pump Starting Crank Flywheel Clutch Control Brakes

ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS

**"CATERPILLAR" TWENTY TRACTOR**

Name	Kind	Size	No. Reqd.	Where Used
Nuts	Std. Hex	No. 8-32	4	Oil Gauge
	Semi-Fin. Hex	5/16" S.A.E.	2	Ignition
		3/8" S.A.E.	8	Track Roller Frame
		7/16" S.A.E.	10	Carburetor Heat and Choke Control
		1/2" S.A.E. High	4	Manifold
		5/8" S.A.E.	4	Cyl. Block, Cyl. Head and Valves
		1/2" S.A.E.	3	Manifold
		7/16" S.A.E.	8	Transmission
		1" S.A.E.	10	Steering Clutch
		1 1/4" S.A.E. Castle	26	Final Drive
Pins	Std. Cotter	1/16" x 1/2"	6	Gear Shift and St. Cl. Controls
		1/16" x 3/4"	4	Fuel System
		3/32" x 1/2"	2	Seat
		3/32" x 3/4"	54	Fender
		3/32" x 1"	5	Carburetor Heat and Choke Controls
		5/16" x 3/4"	3	Fan and Water Pump
		3/4" S.A.E.	7	Oil Pump
		1" U.S.S.	4	Track Roller Frame Dirt Guard
		1" S.A.E.	240	Tracks
		1 1/4" S.A.E. Castle	4	Equalizer Spring
		5/8" S.A.E.	4	Equalizer Spring
		3/4" S.A.E.	23	Cyl. Block, Cyl. Head and Valves
		1" S.A.E.	1	Starting Crank
		1 1/4" S.A.E. Castle	8	Radiator
		5/8" S.A.E.	6	Flywheel Clutch
		3/4" S.A.E.	32	Track Roller
		1" S.A.E.	8	Equalizer Spring
		1 1/4" S.A.E. Castle	28	Track Roller Frame Dirt Guard
		5/8" S.A.E.	12	Front Idler
		3/4" S.A.E.	10	R.H. Track Roller Frame
		1" S.A.E.	10	L.H. Track Roller Frame
		1 1/4" S.A.E. Castle	18	Track Roller Frame Pivot Shaft
		5/8" S.A.E.	6	Transmission Case and Covers
		3/4" S.A.E.	3	Flywheel Clutch Control
		1" S.A.E.	4	Brakes
		1 1/4" S.A.E. Castle	2	Oil Pump
		5/8" S.A.E.	8	Front Idler
		3/4" S.A.E.	4	Drawbar
		1" S.A.E.	10	Drawbar
		1 1/4" S.A.E. Castle	4	Front Idler
		5/8" S.A.E.	6	Track Roller Frame Pivot Shaft
		3/4" S.A.E.	2	Final Drive
		1" S.A.E.	8	Carburetor Heat, Choke Control
		1 1/4" S.A.E. Castle	1	Manifold
		5/8" S.A.E.	1	Carburetor Control
		3/4" S.A.E.	2	Breather
		1" S.A.E.	2	Radiator
		1 1/4" S.A.E. Castle	8	Connecting Rod and Piston
		5/8" S.A.E.	4	Accessory Shaft
		3/4" S.A.E.	4	Brakes

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

Name	Kind	Size	No. Reqd.	Where Used
		$\frac{1}{8}'' \times 1''$	12	Equalizer Spring
			5	Brakes
			2	Gear Shift and St. Cl. Control
		$\frac{1}{8}'' \times 1\frac{1}{4}''$	3	Gear Shift and St. Cl. Control
			6	Crankshaft
		$\frac{1}{8}'' \times 1\frac{1}{2}''$	1	Starting Crank
			2	Gear Shift and St. Cl. Control
		$\frac{1}{16}'' \times 1\frac{1}{4}''$	2	Drawbar
		$\frac{1}{16}'' \times 1\frac{1}{2}''$	1	Brakes
		$\frac{1}{16}'' \times 2''$	2	Final Drive
		$\frac{3}{8}'' \times 1\frac{3}{4}''$	1	Drawbar
Taper		No. 2 x 1 $\frac{1}{4}$ "	1	Ignition System
			1	Fan and Water Pump
<b>Rivets</b>	Countersunk Hd.	$\frac{3}{8}'' \times 1\frac{3}{8}''$	4	Equalizer Spring
	Flat Hd. Galv.	$\frac{1}{16}'' \times \frac{1}{2}''$	18	Fan and Water Pump
		$\frac{1}{16}'' \times \frac{3}{8}''$	16	Hood
	Flat Head	$\frac{1}{4}'' \times \frac{9}{8}''$	14	Brakes
		$\frac{1}{4}'' \times 1\frac{1}{2}''$	6	Final Drive
		$\frac{1}{16}'' \times \frac{3}{4}''$	6	Flywheel Clutch
	Flat. Hd. Galv.	No. 3	18	Equalizer Spring
	Tinners			
	Round Head	$\frac{1}{16}'' \times \frac{1}{2}''$	18	Fan and Water Pump
			20	Seat
<b>Screws— Mach.</b>	Countersunk Head	$\frac{3}{8}'' \times \frac{5}{8}''$	12	Hood
		$\frac{1}{4}'' \times \frac{5}{8}''$	4	Fender
	Round Head	$\frac{1}{4}'' \times \frac{1}{2}''$	18	Seat
		$\frac{1}{4}'' \times \frac{3}{4}''$	8	Fuel System
		$\frac{1}{4}'' \times \frac{7}{8}''$	4	Carburetor Control
			50	Fender
			1	Carburetor Control
<b>Screws— Set</b>	Std. Cup Pt. Square Hd.	$\frac{3}{8}''—16 \times 1\frac{1}{4}''$	1	Transmission
	Std. Oval Point Square Hd.	$\frac{3}{8}''—16 \times 1\frac{1}{4}''$	4	Brakes
	Flat Head	No. 8 x $\frac{3}{4}$ "	28	Seat
		$\frac{3}{8}''$		
<b>Washers</b>	Cut	$\frac{1}{2}''$	1	Starting Crank
			6	Hood
			2	Final Drive
			1	Gear Shift and St. Cl. Control

**ALWAYS GIVE TRACTOR NUMBER WHEN ORDERING PARTS**

**CATERPILLAR**  
Reg U.S.Pat.Off.