

ANNEX

Parts Catalog

for

CATERPILLAR

Reg. U. S. Pat. Off.

TWENTY-EIGHT

TRACTOR

For Machines

4F1

to

4F1171

Inclusive



CATERPILLAR TRACTOR CO.

PEORIA, ILLINOIS, U. S. A.

Track-Type Tractors Road Machinery

· · · · · Diesel Engines · · · · ·

THERE IS A «CATERPILLAR» DEALER NEAR YOU

Parts Catalog

for

CATERPILLAR

Reg. U. S. Pat. Off.

TWENTY-EIGHT TRACTOR

For Machines

4F1

to

4F1171

Inclusive

CATERPILLAR TRACTOR CO.

PEORIA, ILLINOIS, U. S. A.

Track-Type Tractors Road Machinery

· · · · · Diesel Engines · · · · ·

THERE IS A •CATERPILLAR• DEALER NEAR YOU

THIS Parts Catalog contains illustrations, part numbers, names and the quantity required of all serviced parts which compose the "Caterpillar" Twenty-Eight Tractor and attachments.

*When Ordering Parts
Please Read Carefully*

¶ The "Caterpillar" line is sold and serviced by a world-wide organization of responsible Dealers with well stocked Parts Departments and factory trained servicemen.

¶ There is a "Caterpillar" Dealer near you.

¶ To obtain parts promptly, place orders with your "Caterpillar" Dealer, being sure to give the complete part number, name and quantity of the parts wanted. It is important always to give the serial number of the machine for which the parts are required.

¶ Be particular to state the Street Address, Town, County and State to which parts are to be shipped, also state whether shipment is to be made by freight, express, parcel post or other means.

¶ Confirm all telephone and telegraphic orders in writing.

¶ Claims for errors in shipping incorrect parts or failure to ship all parts ordered, should be made immediately upon receipt of the shipment.

Important

¶ Responsibility for breakage, loss or damaged goods ceases upon delivery of the merchandise to the transportation companies from whom a receipt is received showing that the shipment was accepted by them in good condition.

¶ If any of the material listed on the bill of lading or express receipt is short, broken or damaged, do not accept the shipment until the carrier's agent makes a notation of the shortage or damage on the expense bill.

¶ Notify the transportation company's agent at once and request an inspection. This is absolutely necessary. Unless this is done, the transportation companies will not entertain a claim for loss or damage. If the agent does not make an inspection, then an affidavit should be made that he was notified (on a certain date) and failed to do so. This affidavit with other papers will properly support your claim.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

FRANCAIS

Ce catalogue de Pièces Détachées renferme les illustrations, les numéros, les noms et la quantité nécessaire de toutes les pièces de service concernant la machine à laquelle il se rapporte.

A LIRE AVEC SOIN AVANT DE COMMANDER VOS PIECES

Les machines "Caterpillar" sont vendues et entretenues de par le monde par une organisation d'agents les plus responsables.

Pour obtenir vos pièces sans retard, passez-en les ordres à votre agent "Caterpillar", en ayant soin de lui fournir le numéro, le nom et la quantité des pièces désirées. Il est aussi important de mentionner le numéro de série de la machine à laquelle les pièces sont destinées. Dans le cas de machines telles que: "Auto Patrols", "Elevating Graders—Engine Driven" et "Blade Graders—Power Controlled", ne manquez pas de fournir le numéro de série du nivelleur et de l'unité motrice.

Il est essentiel de mentionner dans vos ordres l'adresse complète et détaillée à laquelle les pièces doivent être expédiées. Cette adresse devra comprendre le nom du destinataire accompagné du numéro, de la rue, de la ville et du pays de résidence. Il faudra aussi spécifier clairement si l'expédition doit être effectuée par express, colis postal, ou toute autre voie désirée.

Tous les ordres télégraphiques ou téléphoniques devront être confirmés par lettre.

Toutes les réclamations concernant l'expédition non conforme de marchandise ou l'absence de certains articles devront être faites immédiatement à la réception de l'ordre.

AVIS IMPORTANT

En cas de casse, de manquant ou d'avarie, notre responsabilité cesse d'entrer en jeu aussitôt notre remise des marchandises aux transporteurs, lesquels nous font parvenir un reçu montrant que les marchandises leur furent livrées en bon état.

Si les marchandises dont la liste apparaît sur le connaissance ou le reçu des compagnies de transport n'arrivent pas au complet, ou cassées, ou autrement endommagées, n'en acceptez pas l'envoi avant que l'agent des camionneurs n'en ait dressé une constatation sur la note de frais.

Avez-vous l'agent de la compagnie de transport, en exigeant un examen immédiat. Ceci est absolument nécessaire, et à moins que ces démarches n'aient été effectuées, les compagnies de transport ne pourront accepter aucune réclamation concernant les manquants ou les avaries.

Si l'agent ne fait pas la constatation, il deviendra nécessaire d'établir un affidavit, spécifiant que l'agent fut notifié à une certaine date, mais qu'il manqua de s'y conformer. Cet affidavit accompagné d'autre pièces suffira à supporter votre réclamation d'une manière appropriée.

ITALIANO

Questo Catalogo dei Pezzi contiene illustrazioni, numeri dei Pezzi, nomi e quantità richieste di tutti i pezzi di ricambio della macchina alla quale si riferisce.

LEGGETE ATTENTAMENTE QUANDO ORDINATE I PEZZI

Le macchine "Caterpillar" sono vendute e mantenute in servizio da una organizzazione mondiale di rivenditori reputabili.

Per ottenere i pezzi prontamente, piazzate l'ordinazione con il vostro rivenditore di "Caterpillar", accertandovi di indicare il numero completo, il nome e quantitativo delle parti desiderate. Nell'ordinare, è importante fornire il numero di serie della macchina per la quale i pezzi sono richiesti. Nel caso delle macchine "Auto Patrols", "Elevating Graders—Engine Driven" e "Blade Graders—Power Controlled", indicate il Numero di Serie di entrambe la macchine ed unità motrice.

E necessario indicare nella vostra ordinazione l'indirizzo completo e corretto al quale i pezzi devono essere spediti. Questo deve includere il nome, l'indirizzo della strada, la città o villaggio ed il paese. Altresì se la spedizione deve essere fatta a mezzo ferrovia, espresso, pacco postale od altro mezzo, specificando chiaramente.

Confermate per iscritto ogni ordinazione data telefonicamente o telegraficamente.

I reclami per errori nella spedizione di pezzi incorretti o nella mancanza di pezzi ordinati, devono essere fatti immediatamente a ricezione della spedizione.

IMPORTANTE

La responsabilità per rotture, merce danneggiata o perduta, cessa con la consegna della merce alla compagnia di trasporto dalla quale si riceve una ricevuta mostrante che la spedizione è stata da questa accettata in buone condizioni.

Se qualsiasi materiale indicato sulla polizza di carico o ricevuta di espresso risulta mancante, rotto oppure danneggiato, non accettate la spedizione fintantoché l'agente della compagnia di trasporto abbia fatto una annotazione della mancanza o danno sulla fattura delle spese.

Notificate immediatamente l'agente della compagnia di trasporto domandando una verifica. Questo è assolutamente necessario. Se questo non viene fatto, le compagnie di trasporto non accetteranno alcun reclamo per mancanze o danni. Se l'agente non fa una verifica, allora si deve fare una dichiarazione scritta ai fini che egli è stato notificato (in data specifica) ed ha mancato di farla. Questa dichiarazione, unitamente agli altri documenti, servirà a comprovare il vostro reclamo.

DEUTSCH

Dieser Ersatzteil Katalog enthält Illustrierungen, Ersatzteil Nummern, Bezeichnungen und die erforderlichen Quantitäten aller Teile für die betreffende Maschine, für die sie bestimmt sind.

BEI BESTELLUNG VON ERSATZTEILEN BEACHTE MAN BITTE SORGFALTIG

"Caterpillar" Maschinen werden von einer in der ganzen Welt verbreiteten Organisation verantwortlicher Händler verkauft und in Betrieb gehalten.

Um Ersatzteile prompt zu erhalten, bestellen Sie Ihre Aufträge mit Ihrem "Caterpillar" Händler, nachdem sicher gemacht wurde, dass die volle Teilnummer, Bezeichnung und Quantität der gewünschten Teile richtig angegeben sind. Bei Bestellung ist es sehr wichtig, dass die Serien Nummer der Maschine angegeben ist, für die die Teile bestimmt sind. Im Falle von Maschinen wie "Auto Patrols", "Elevating Graders—Engine Driven" und "Blade Graders—Power Controlled" gebe man beide Serien Nummern an, der Nivellier Maschine wie auch des Motors.

Es ist notwendig, in Ihrem Auftrag die genaue und volle Adresse anzugeben, wo hin die Teile zu senden sind. Dieses sollte den Namen, Strassenadresse, Stadt und Land enthalten. Ob die Sendung bei Fracht, Express, Post oder auf anderem Wege vorzugehen ist, muss klar angegeben werden.

Alle telefonischen und telegrafischen Bestellungen müssen schriftlich bestätigt werden.
Reklamierung über Irrtümer in der Versendung von falschen Teilen oder Unvollständigkeit der Sendung sollten sofort nach Erhalt der Sendung gemacht werden.

WICHTIG

Verantwortlichkeit für Bruch, Verlust oder Beschädigung der Waren endet bei Ablieferung der Sendung an die Transport-Gesellschaft, welche eine Empfangsbestätigung überreicht als Beweis, dass die Sendung in gutem Zustand übernommen wurde.

Wenn irgend etwas von den auf dem Frachtnachricht oder Expressquittung aufgeföhrten Materialien fehlt, zerbrochen oder beschädigt ist, nehme man die Sendung nicht an bis der Transportagent den Verlust oder die Beschädigung auf der Spesenrechnung bezeugt hat.

Man benachrichtige den Agenten der Transport-Gesellschaft sofort und verlange eine Besichtigung. Dies ist unbedingt notwendig. Wenn solches nicht getan wird, werden die Transport-Gesellschaften keine Reklamierung für Verlust oder Schaden anerkennen. Wenn der Agent keine Besichtigung vornimmt, dann sollte eine Bezeugung ausgestellt werden dass der Agent benachrichtigt wurde (an einem bestimmten Tage) aber nicht vorgenommen wurde. Diese Bezeugung, zusammen mit anderen Papieren wird Ihre Reklamierung entsprechend unterstützen.

ESPAÑOL

Este catálogo de piezas contiene grabados, número de piezas, nombres y la cantidad requerida de todas las piezas de repuesto de la máquina a la cual se refieren.

AL PEDIR PIEZAS SIRVASE LEER CUIDADOSAMENTE

Las máquinas "Caterpillar" se venden y son mantenidas en servicio por una organización mundial de revendedores de confianza.

Para obtener las piezas con prontitud, pase los pedidos al revendedor "Caterpillar", teniendo la certeza de dar detalladamente el número de la pieza, el nombre y la cantidad de ellas que se necesitan. Al pedir, siempre es importante suministrar el número de serie de la máquina para la cual se requieren las piezas. En el caso de las máquinas tales como las "Auto Patrols", "Elevating Graders—Engine Driven" y "Blade Graders—Power Controlled", sirvase dar el número de serie tanto de la separadora como de la unidad de potencia.

Es preciso mencionar en su pedido la dirección completa correcta a la cual se han de embarcar las piezas. Debe incluir el nombre, la dirección de la calle, ciudad o población, y el país. Ya sea que el embarque fué de hacerse por carga, expreso, paquete postal ya sea por otros medios, esto se debe especificar claramente.

Confirme todos los pedidos por teléfono o telégrafo por medio de carta.

Las reclamaciones a causa de errores en el envío de piezas incorrectas o de la falta de embarcar todas las piezas pedidas, se deben hacer inmediatamente al recibo del embalaje.

IMPORTANTE

La responsabilidad por roturas, pérdida de mercancías o artículos averiados cesa al hacerse la entrega de las mercaderías a las empresas de transporte, de las cuales se recibe un recibo, mostrando que el embarque fué aceptado por las mismas en buen estado.

Si cualesquier de los materiales relacionados en el conocimiento de embarque o en el recibo del expreso resultasen con faltas, roturas o averías, no se debe aceptar el embarque hasta que el agente de la compañía de transportes haya efectuado una nota de la falta o de la avería en la cuenta de gastos.

Notifique al agente de la compañía de transportes en seguida y solicite una inspección. Este es un punto absolutamente necesario. A menos que se haga eso, las empresas de transporte no tomarán en consideración la reclamación por pérdidas o averías. Si el agente no efectuase una inspección, entonces se debe hacer una declaración certificada en el sentido de que tal agente fue notificado (en cierta fecha) y que dejó de hacerla. Dicha declaración certificada, en unión de otros documentos, comprobará debidamente su reclamación.

PORTUGUÊS

Este catalogo de peças inclue gravuras, numero das peças, nomes e a quantidade requerida de todas as peças sobressalentes da maquina a qual se referem.

ANTES DE ORDENAR QUALQUER PEÇA LEIA DETIDAMENTE

As maquinas "Caterpillar" vendem-se e são conservadas afinadas por uma organização mundial de revendedores de confiança.

Para obter as peças sobressalentes com rapidez, envie o pedido ao revendedor da "Caterpillar", depois de comprovar ter fornecido, detalhadamente, o numero, o nome e a quantidade das peças que necessita. Os pedidos devem incluir o numero de serie da maquina para a qual se necessitam as peças. No caso das maquinas "Auto Patrols", "Elevating Graders—Engine Driven" e "Blade Graders—Power Controlled", é conveniente dar o numero de serie tanto da niveladora como da unidade força.

É preciso mencionar no seu pedido a direção completa e correcta para a qual deverão ser dirigidas as peças. Deve incluir-se o numero, os nomes da rua, si da cidade ou da povoação e do Paiz. Estas informações, especificadas claramente, são indispensaveis tanto para a expedição por carga, expreso, encomenda postal como por qualquer outra via.

Confirme por escrito todos os pedidos feitos por telefone ou telegrafo.

As reclamações provocadas pela remessa de peças diferentes ou pela falta d'algumas peças requestradas, devem ser efectuadas imediatamente depois da receção da encomenda.

IMPORTANTE

A responsabilidade por roturas, extravio da mercadoria ou avaria dos artigos cessa ao fazer-se a entrega das encomendas ás empresas de transporte, das quaes se obtém um recibo, demonstrativo da encomenda ter sido aceite, pelas mesmas, em bom estado.

Se quaisquer dos artigos relacionados na guia de embarque ou no recibo do expresso, resultar deteriorado, a encomenda só deve ser aceite depois do agente da companhia de transporte registar a falta e a avaria na conta dos gastos.

Notifique o agente da companhia de transportes imediatamente e solicite uma inspecção. Esta formalidade é absolutamente necessaria. A falta de cumprimento desta formalidade levará as companhias de transporte a não tomar em consideração a reclamação por perdas ou avarias. Se o agente não efectuar a inspecção, faça-se uma declaração com testemunhas, reconhecida por Notario, na qual se mencionará que o tal agente foi notificado (indique-se a data) e que não a realizou. Esta declaração com testemunhas e reconhecida por Notario, juntamente com outros documentos, comprovará devidamente a sua reclamação.

INDEX



Name	Page
Accessory Shaft, Water Pump and Governor.....	10
Air Cleaner	12
Air Cleaner Inlet Pipe Hood.....	73
Battery and Box	91
Belt Pulley Drive	102-103-104
Bracket—Trailer Patrol Hand Control	57
Brakes	37
Breather and Oil Filler	11
Bumper—Front	64
Cab	98
Camshaft	11
Canopy Top	96
Carburetor	12-13
Check Breaker	55
Clutch—Flywheel	32
Clutch—Steering	38-39-40
Connecting Rod and Piston	15
Control—Brake—Rear Seat	52
Control—Flywheel Clutch	31
Control—Flywheel Clutch—Rear Seat	53
Control—Gear Shift and Steering Clutch	36
Control—Gear Shift and Steering Clutch—Rear Seat	53
Control—Manifold Heat	29
Control Parts—Rear Seat	52
Control—Temperature	68
Control—Throttle and Choke	28
Crankcase and Covers	22-23
Crank—Detachable Starting	58
Crank—Rear Starting	58-59
Crank—Starting	25
Crankshaft	16
Curtain—Radiator	60
Curtains—Canopy	97
Cylinder, Cylinder Head and Valve Mechanism.....	14-15
Drawbar	29 & 62
Fan	9
Fenders and Platform	31
Fenders and Platform—Rear Seat	54
Filter—Oil	73-74-75
Final Drive	40-41-42
Frame—Track Roller	49
Fuel System	26-27

INDEX (Continued)

Name	Page
Gauge—Oil Pressure	25
Gears—Special	69-70-71
Generator—Lighting	91-92-93
Governor	10
Guard—Crankcase	64-65
Guard—Radiator	65
Guard—Track Roller Alemite Fitting	59
Guards—Engine	44
Guards—Track Roller Frame	50
Hood	30 & 61
Hook—Front Pull	66
Idler—Front	43
Ignition System	17 to 22
Lighting System	76 to 90
Magneto	17 to 22
Manifolds	12-13
Muffler	63
Odometer	72
Oil Filler	11
Oil Lines	24
Piston	15
Platform	31
Platform—Rear Seat	54
Power Lift	100-101
Power Take-off	105 to 110
Pump—Oil	24
Pump—Water	10
Radiator	9
Roller—Track	49
Roller—Track Carrier	48
Seat	50
Seat—Rear	51 to 55
Seat—Side	99
Spark Arrester	63
Spring—Equalizer	44-45 & 56-57
Starter—Electric	93-94-95
Tank—Auxiliary Fuel	67
Tool Box—Rear Seat	55
Tools	111
Track	46-47
Transfers	110
Transmission	34-35
Transmission Case and Covers	33
Valve Mechanism	14-15
Water Lines	10
Wide Gauge	56-57


IMPORTANT

When ordering Alemite Fittings, it is important to consult the two illustrations below.


Two types of Alemite Compressors and Fittings have been used. Throughout this catalog one or the other type of Fittings is illustrated.

In some instances, Fittings actually used on a machine may not correspond with the type shown in this catalog.


Before ordering fittings by the numbers shown in the group drawings, refer to the illustrations below and select the number for the style of Fitting which corresponds to that actually used on the machine.

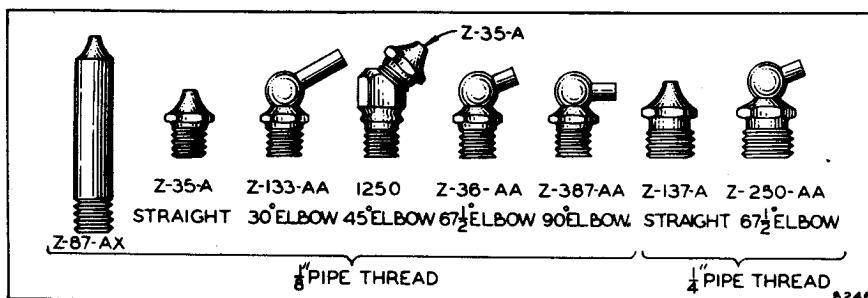


FOR USE WITH AUTOMATIC COMPRESSORS

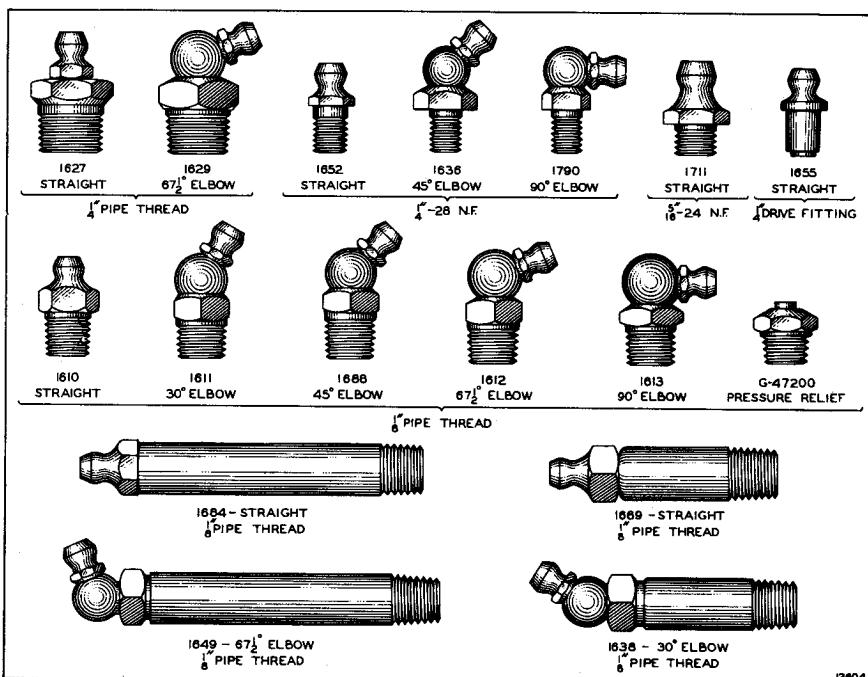

FOR USE WITH HYDRAULIC COMPRESSORS

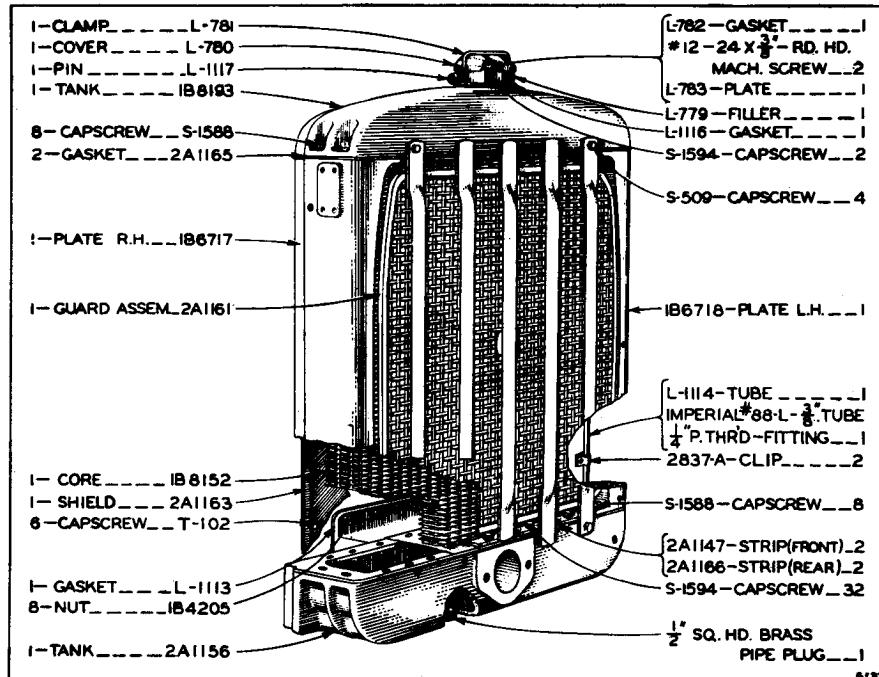


1B8194 RADIATOR GROUP

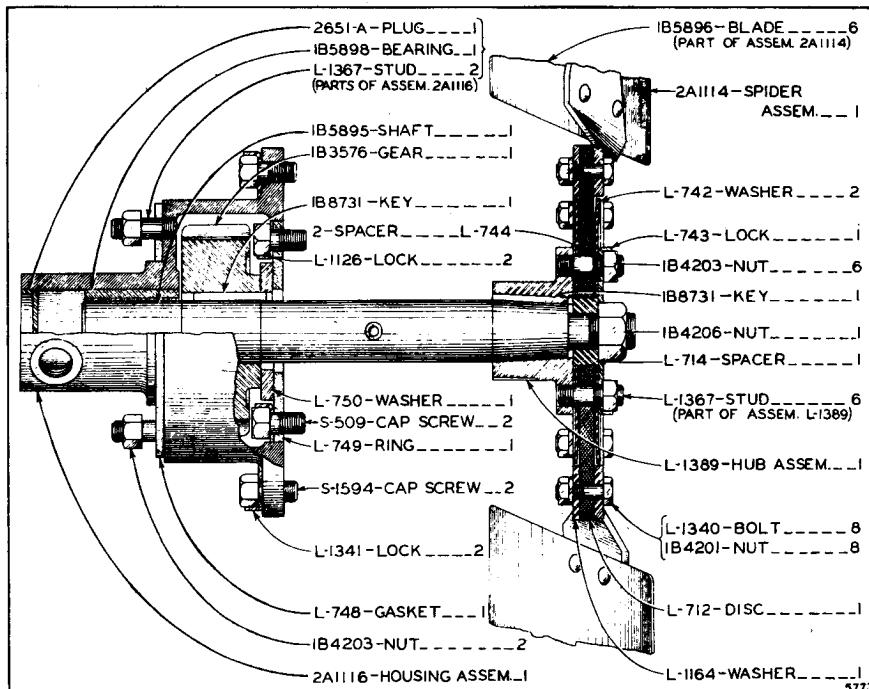


FAN

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

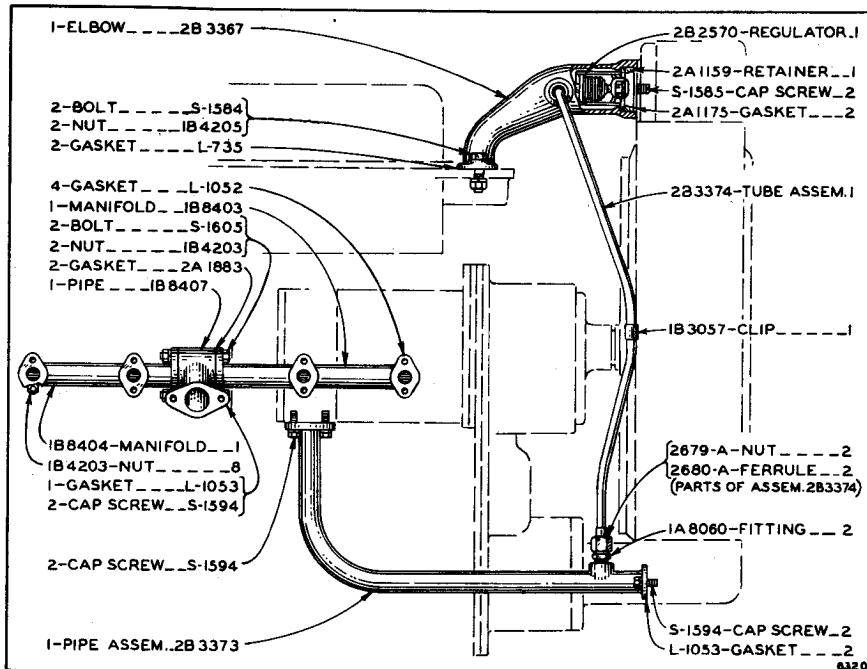


WATER LINES

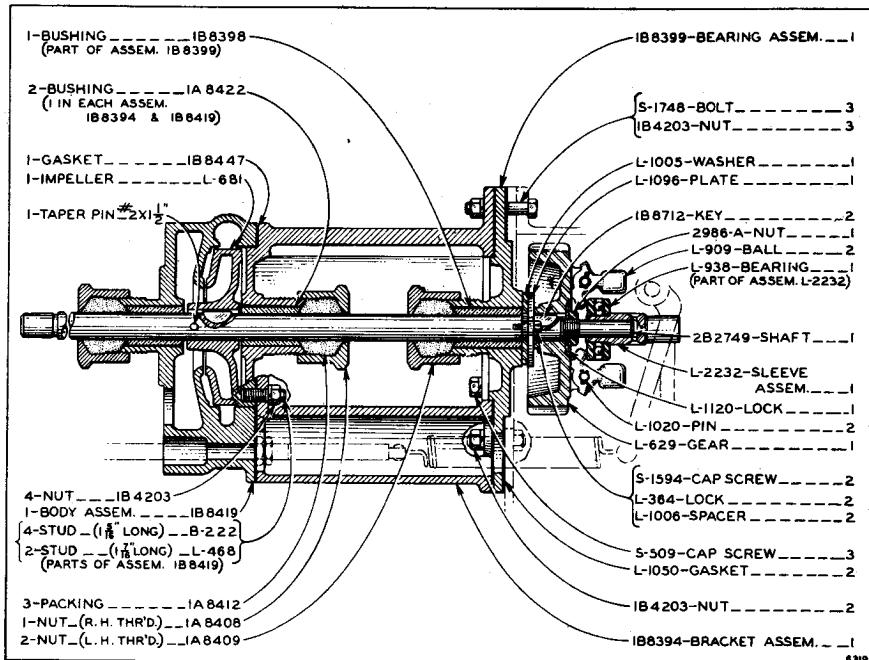

ACCESSORY SHAFT, WATER PUMP AND GOVERNOR

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

I-NUT ----- L-702
 I-LOCK ----- L-1014
 4-LOCK ----- L-364
 4-CAP SCREW _ S-1588

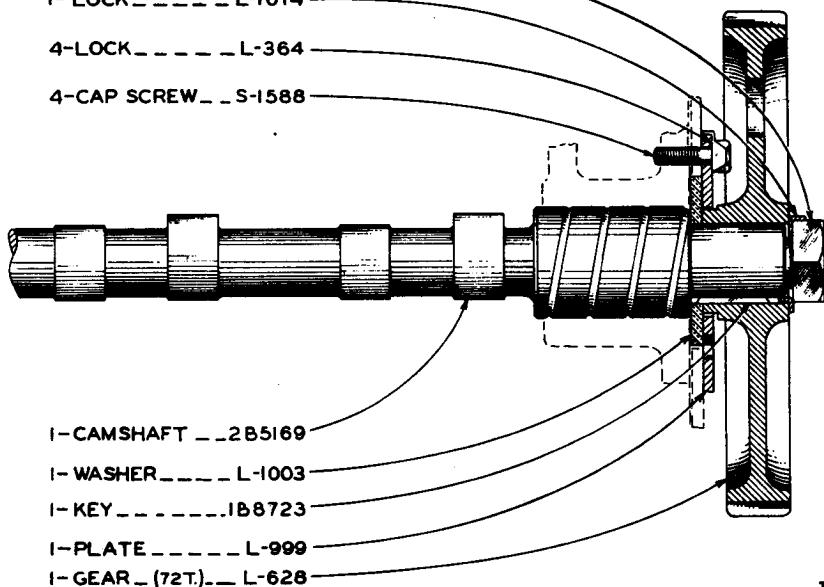

7370


CAMSHAFT

I-COVER ASSEM. IB6867
 2-PLATE _ _ _ L-1686
 I-ELEMENT _ _ _ IB4906
 I-COVER _ _ _ L-905
 I-GASKET _ _ _ L-906
 I-CLAMP _ _ _ L-912
 I-PIN _ _ _ IB5696
 I-MACH. SCREW _
 RD. HD. #12-24 X $\frac{3}{8}$
 I-RETAINER _ _ _ L-907
 I-GASKET _ _ _ L-1160
 IB2718-BOLT _ _ _ I
 (PART OF ASSEM. IB6867)
 IB4330-NUT _ _ _ I
 L-900-CASING _ _ _ I
 IA 4708-BASE _ _ _ I
 2B7457-PLUG _ _ _ I
 S-1588-CAP SCREW _ 2

7380


BREATHER AND OIL FILLER

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

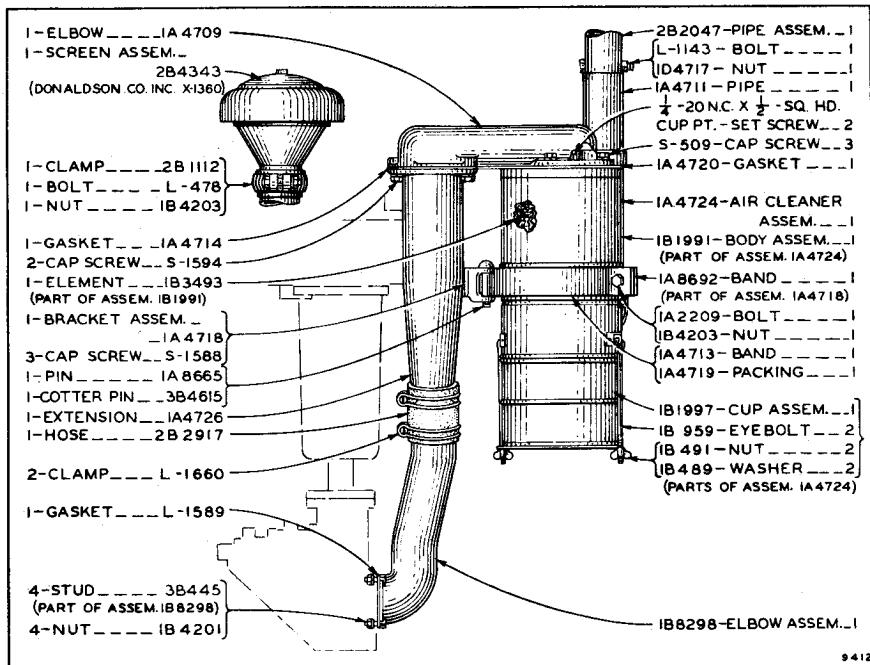

AIR CLEANER


9412

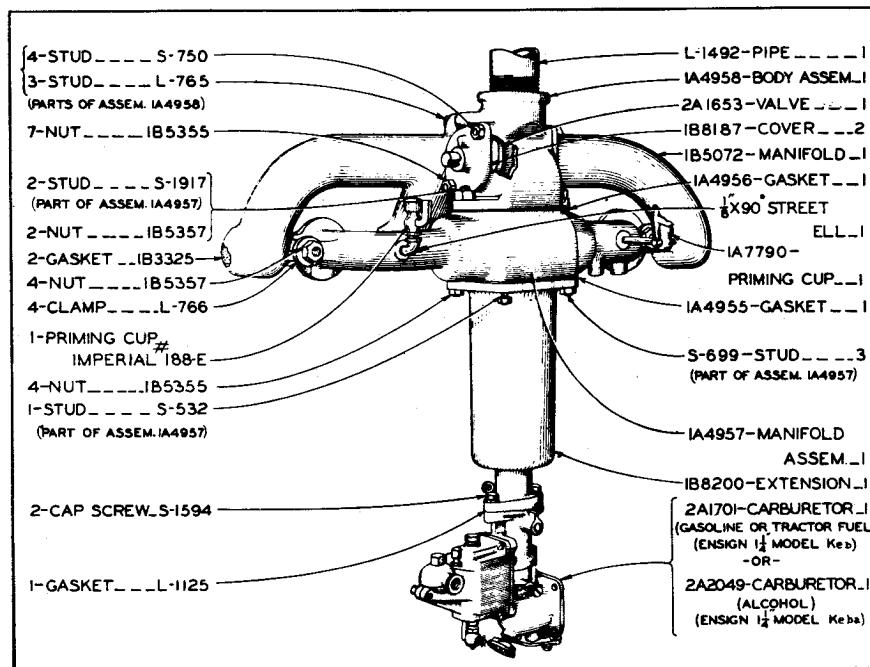


MANIFOLDS

9154

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

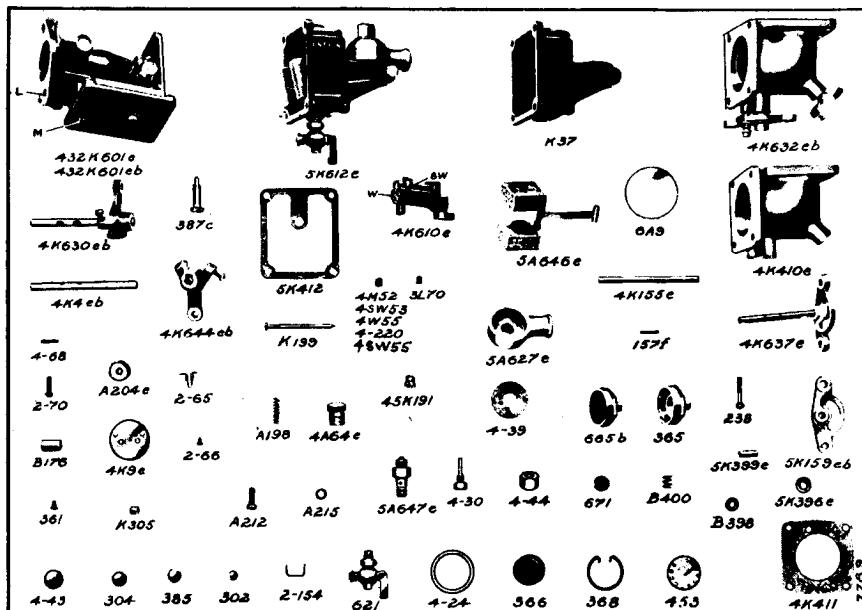


"CATERPILLAR" No. 2A1701 CARBURETOR (Gasoline or Tractor Fuel)

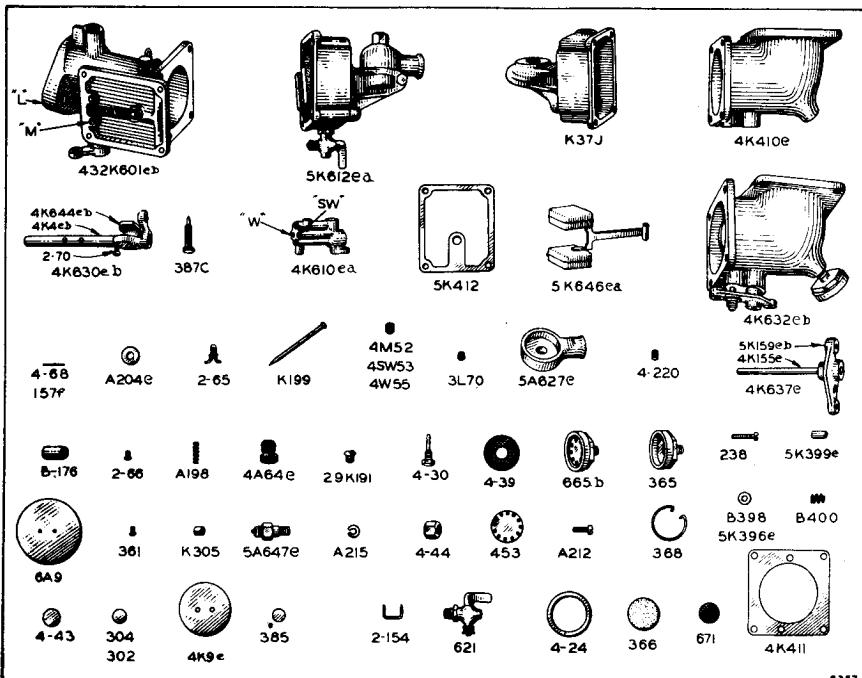

"CATERPILLAR" No. 2A2049 CARBURETOR (Alcohol)
Note: Numbers shown on this page are "Ensign" not "Caterpillar"
part numbers, except when specified. (See Page 112)


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

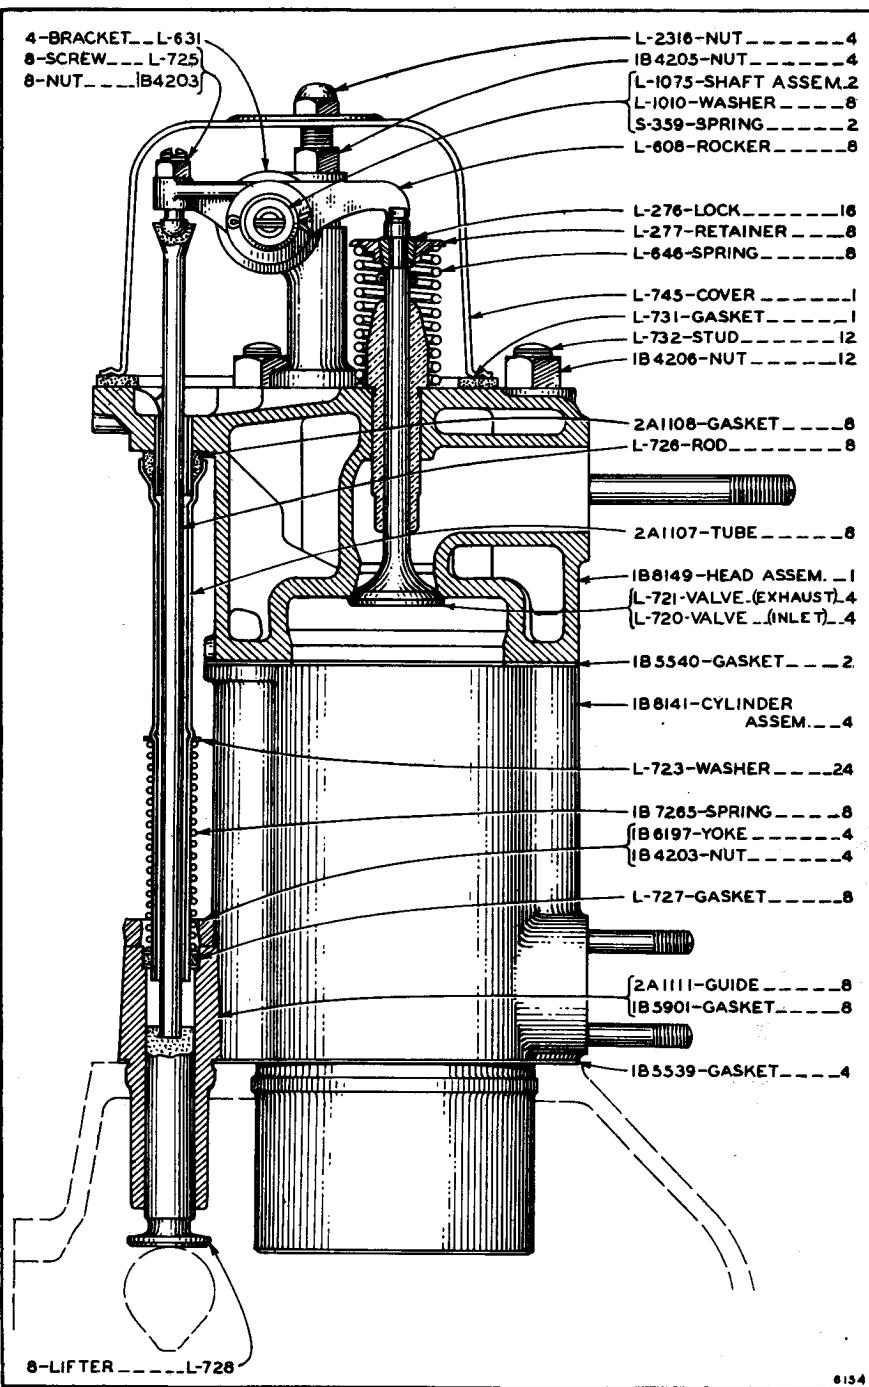


CYLINDER, CYLINDER HEAD AND VALVE MECHANISM

6154

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

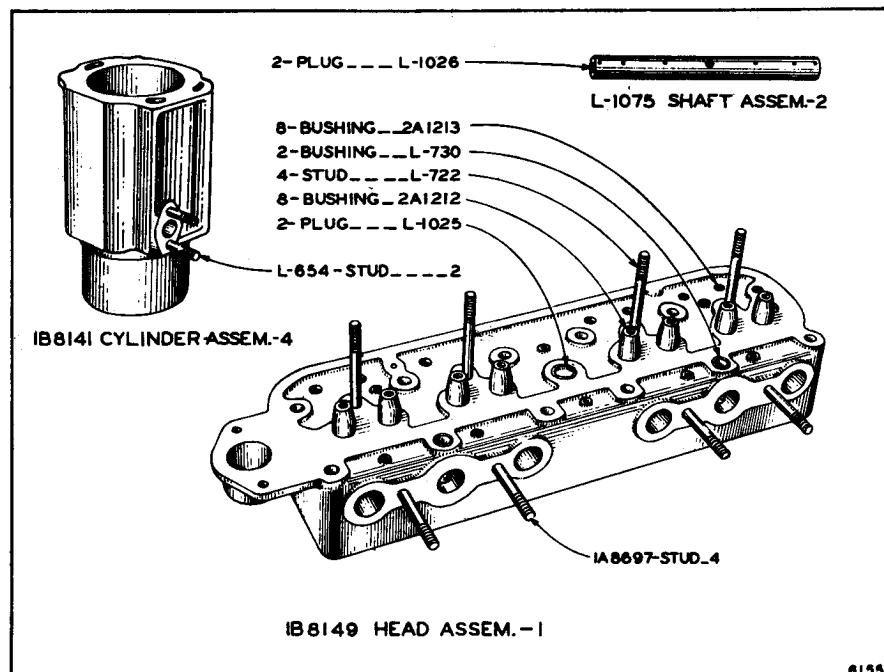


CYLINDER, CYLINDER HEAD AND VALVE MECHANISM ASSEMBLIES

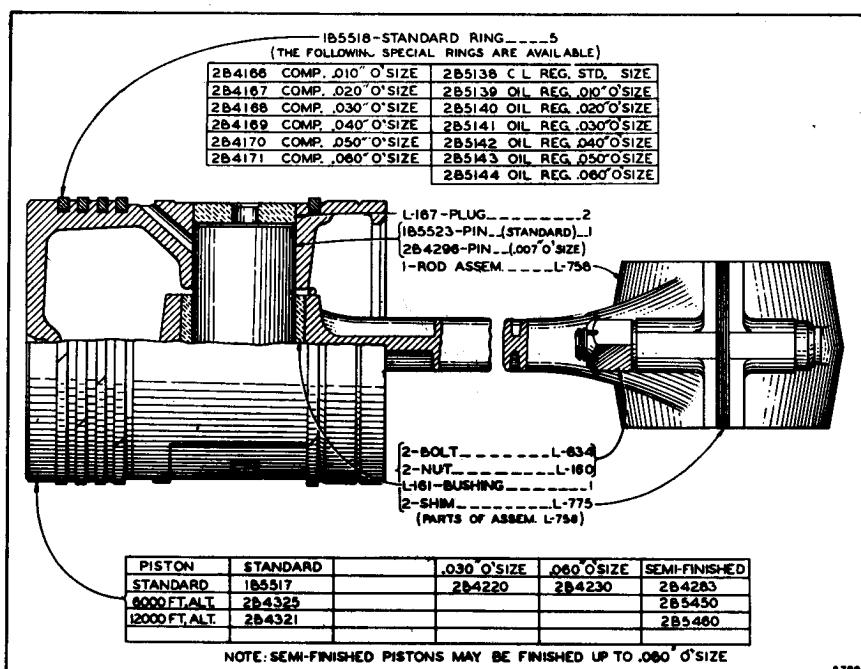

CONNECTING ROD AND PISTON (4 Groups Req'd.)


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

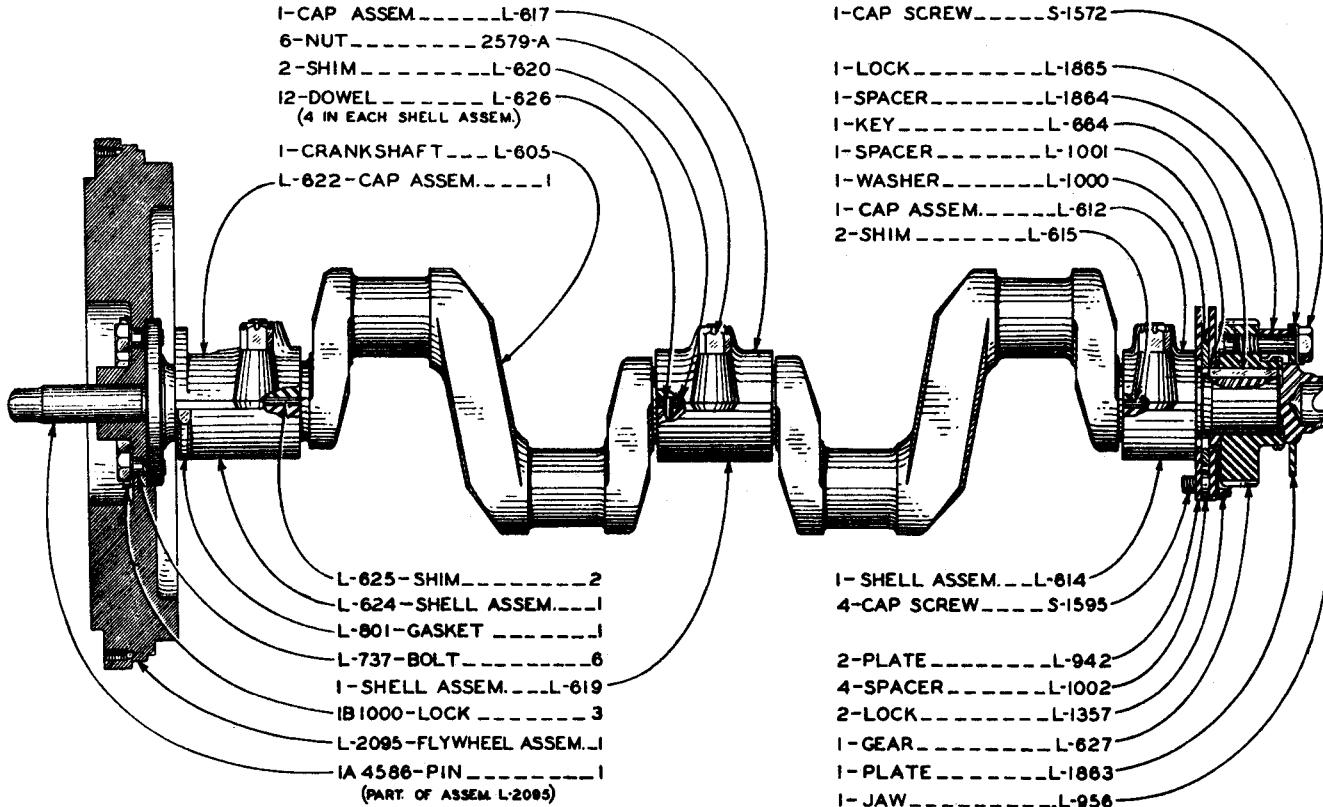


CRANKSHAFT

4782

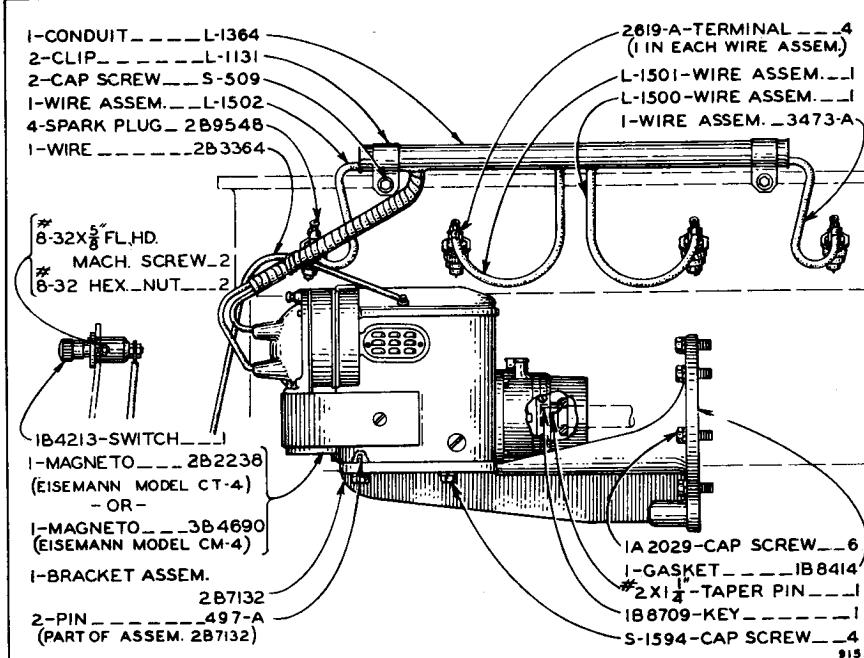

IGNITION SYSTEM

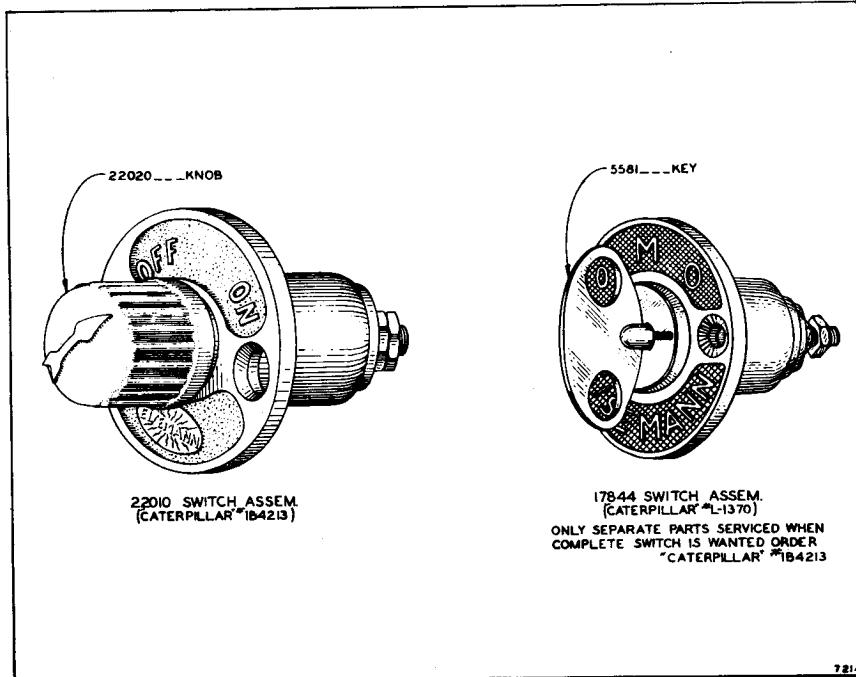

"CATERPILLAR" No. 1B4213 SWITCH

Note: Numbers shown in above illustration are "Eisemann" not "Caterpillar" part numbers. (See Page 112)

7214

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

"Caterpillar" No. 2B2238 Magneto


Consists of:

1	Magneto	Page 18-19
1	-22833 Impulse Starter	" 20
1	-21297 Floating Disc	
1	-21974 Drive Hub Assembly	

"Caterpillar" No. 3B4690 Magneto

Consists of:

1	Magneto	Page 20-21
1	-22833 Impulse Starter	" 20
1	Magneto Coupling	" 22

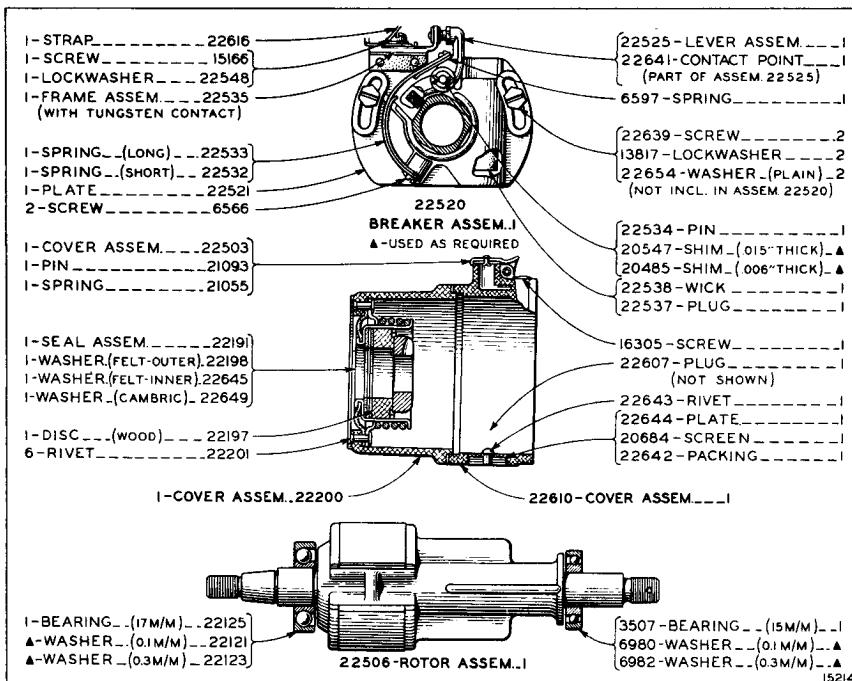
**"CATERPILLAR" No. 2B2238 MAGNETO PARTS**

Note: Numbers shown on this page are "Eisemann" not "Caterpillar" part numbers, except when specified. (See Page 112)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE


INSERT BETWEEN PAGES 18 & 19 IN FORM 7125—PARTS CATALOG FOR TWENTY-EIGHT TRACTOR

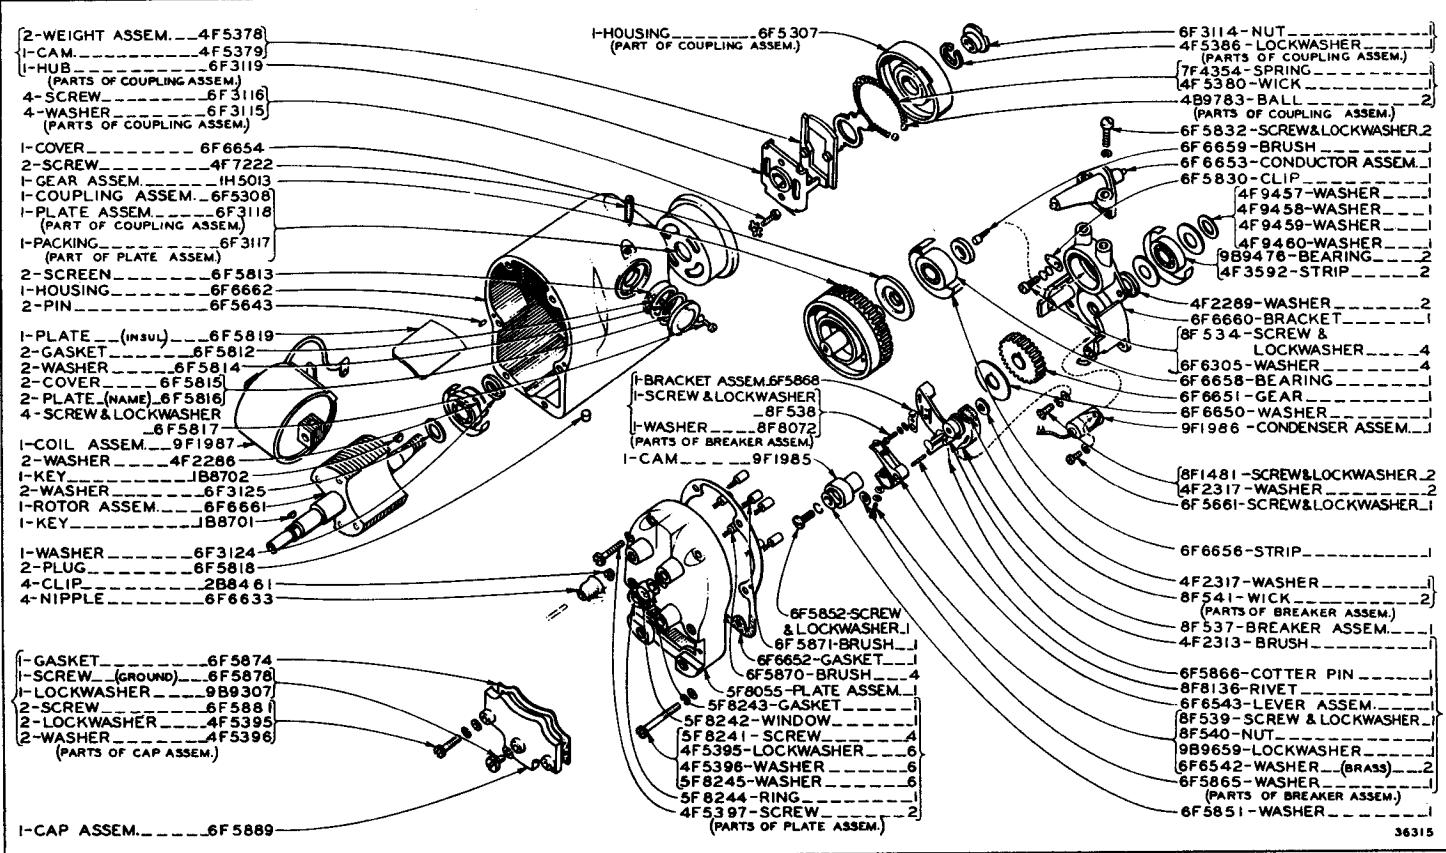

IH3839 MAGNETO—Replaces 4F7493

INSERT BETWEEN PAGES 18 & 19 IN FORM 7125—PARTS CATALOG FOR TWENTY-EIGHT TRACTOR


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

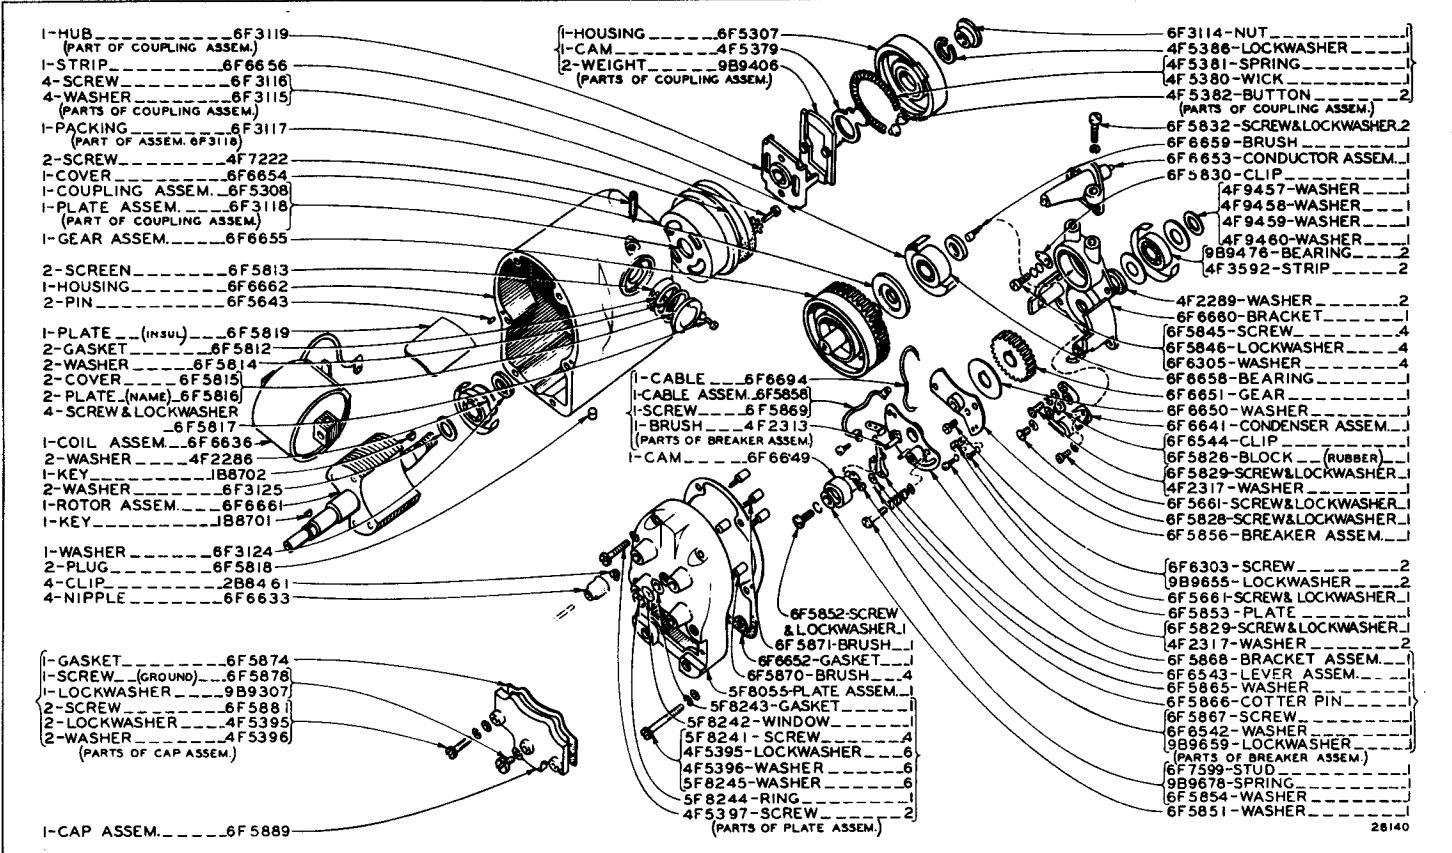

4F7493 MAGNETO—Replaces 282238 and 3B4690


26140

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

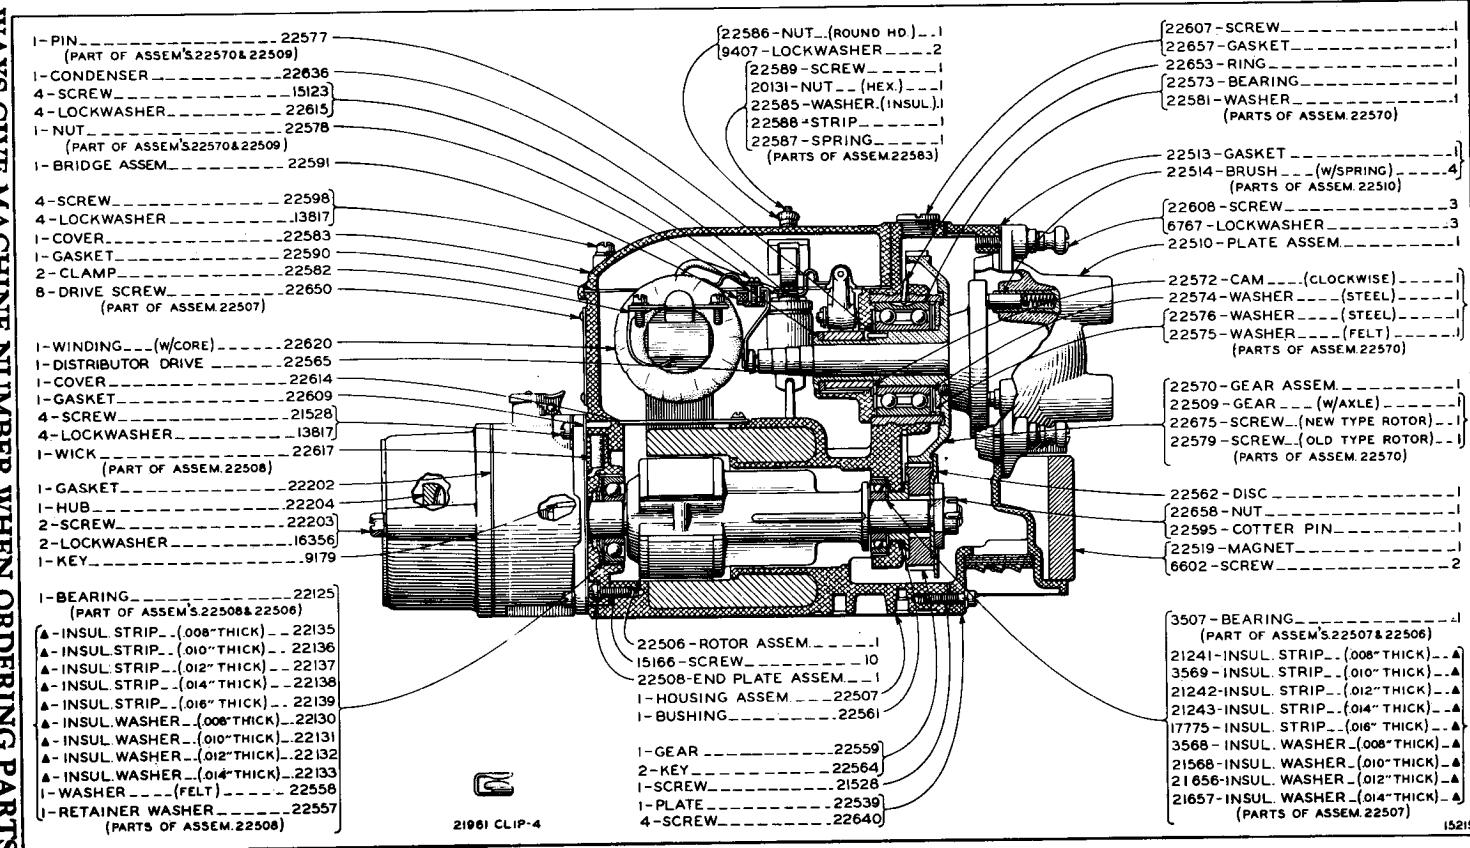


"CATERPILLAR" No. 2B2238 MAGNETO PARTS

Note: Numbers shown on this page are "Eisemann" not "Caterpillar" part numbers, except when specified. (See Page 112)

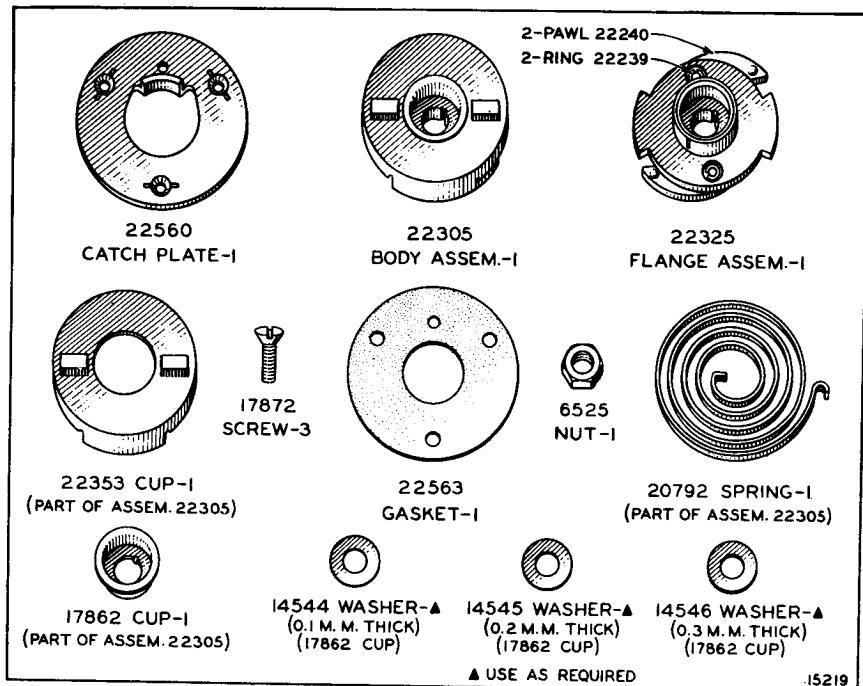

No. 22833 IMPULSE STARTER

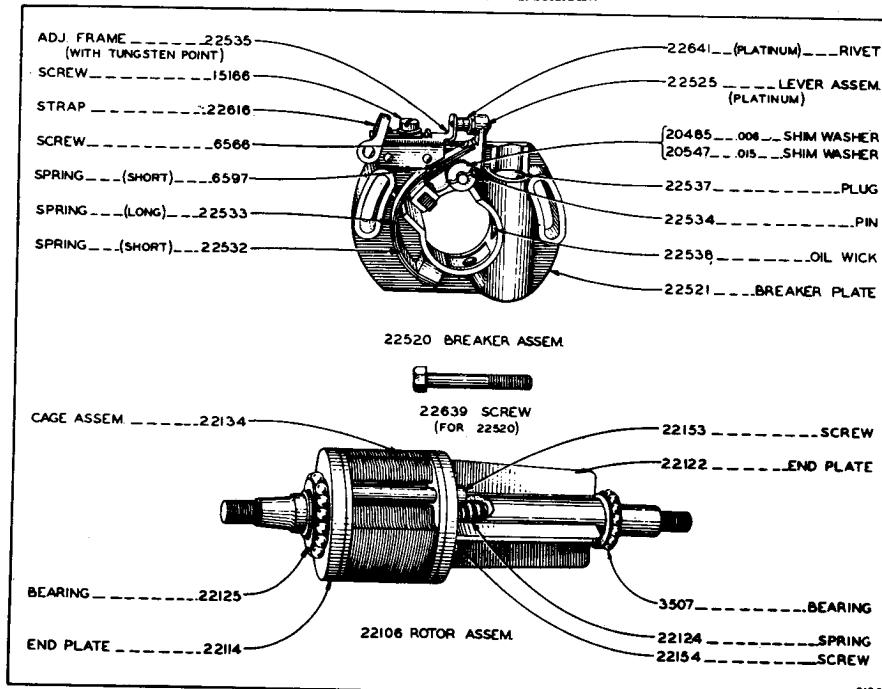

"CATERPILLAR" No. 3B4690 MAGNETO PARTS


Note: Numbers shown on this page are "Eisemann" not "Caterpillar" part numbers, except when specified. (See Page 112)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


PARTS CATALOG

21

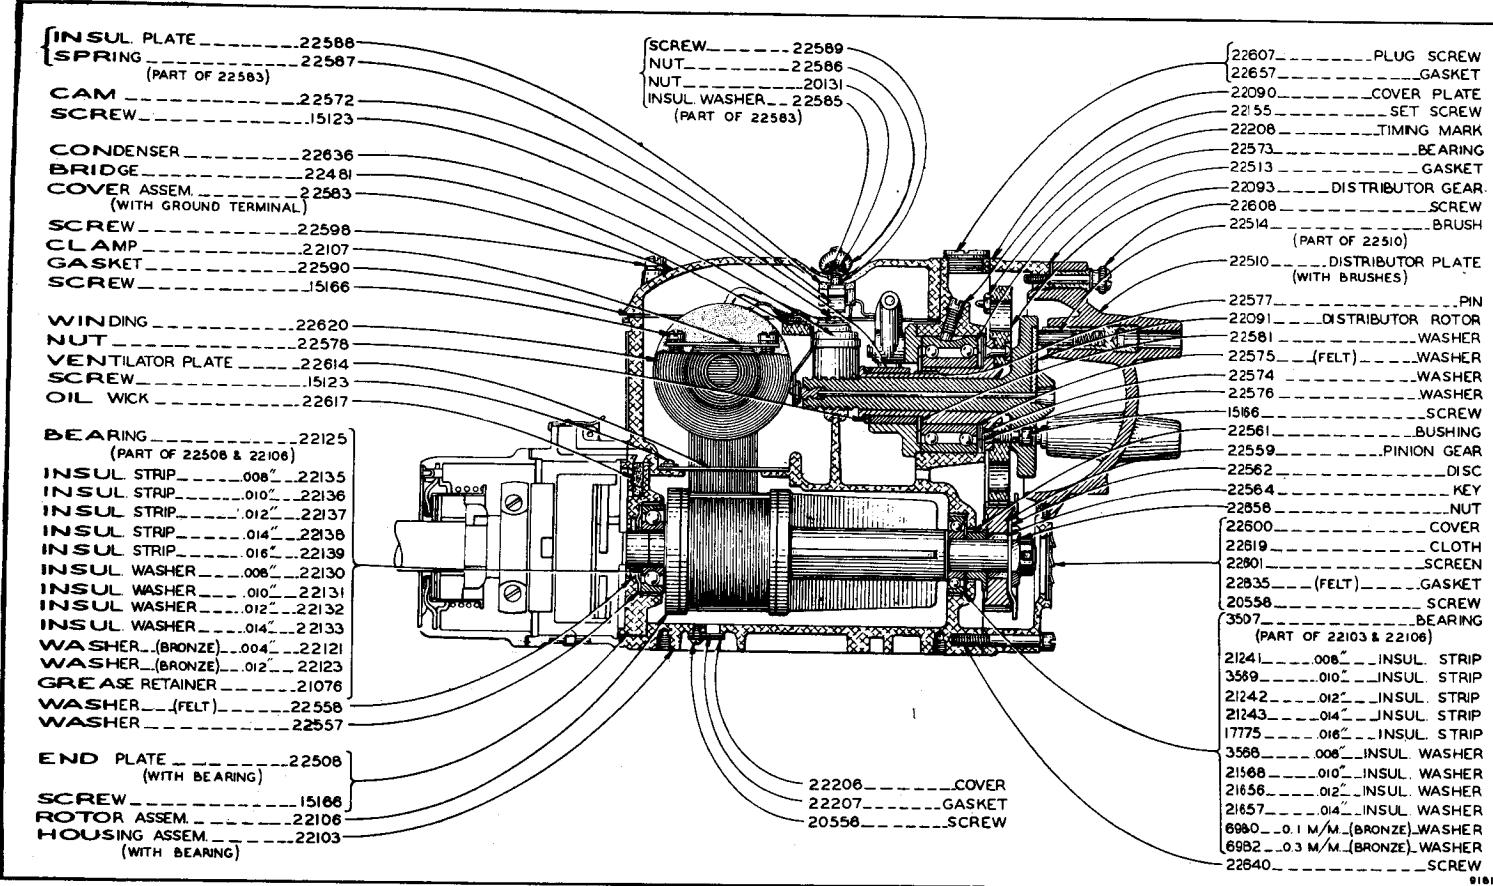


"CATERPILLAR" No. 3B4690 MAGNETO PARTS

Note: Numbers shown on this page are "Eisemann" not "Caterpillar" part numbers, except when specified. (See Page 112)

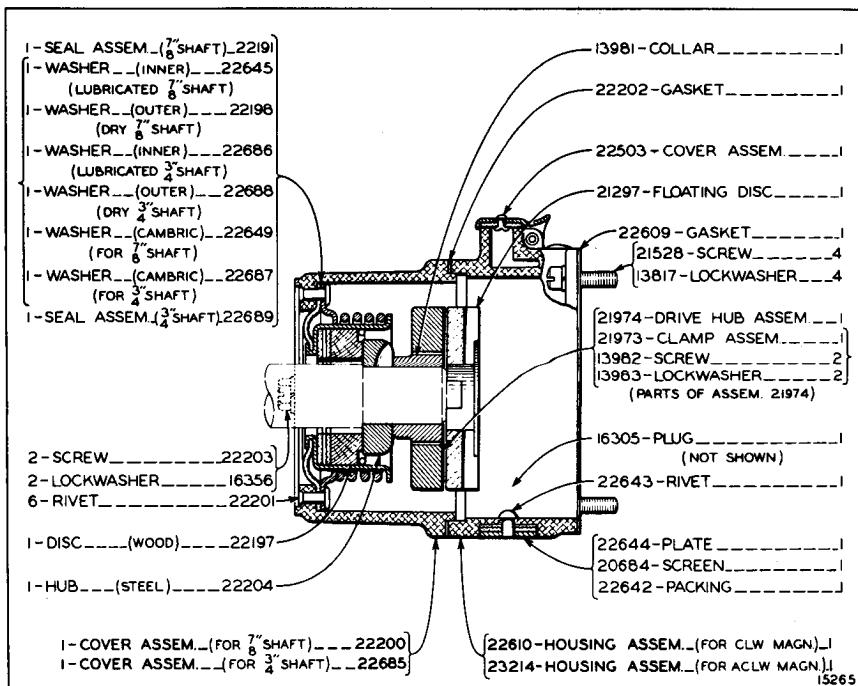

MAGNETO COUPLING


Note: Numbers shown in above illustration are "Eisemann" not "Caterpillar" part numbers. (See Page 112)

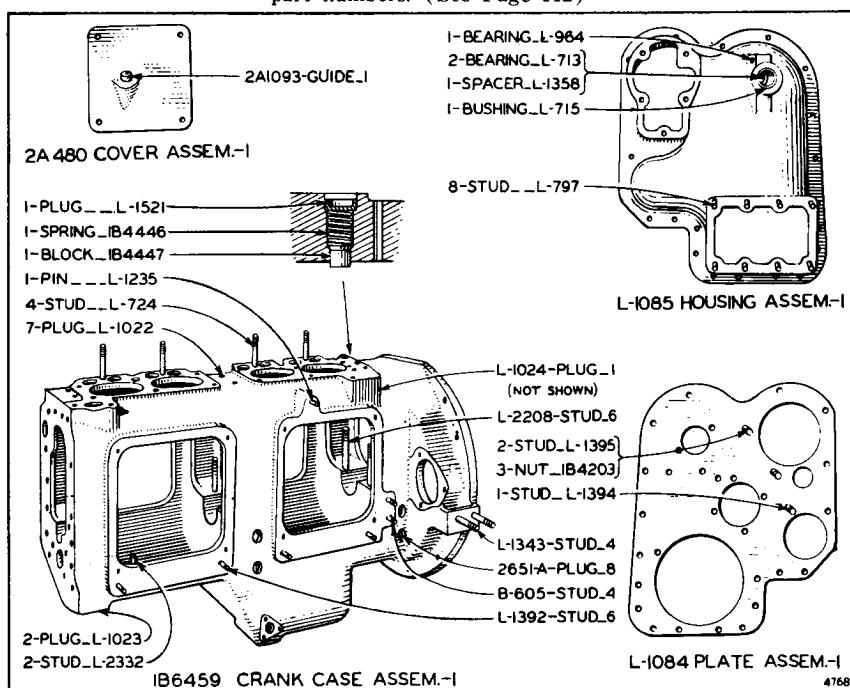


CRANKCASE AND COVER ASSEMBLIES

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

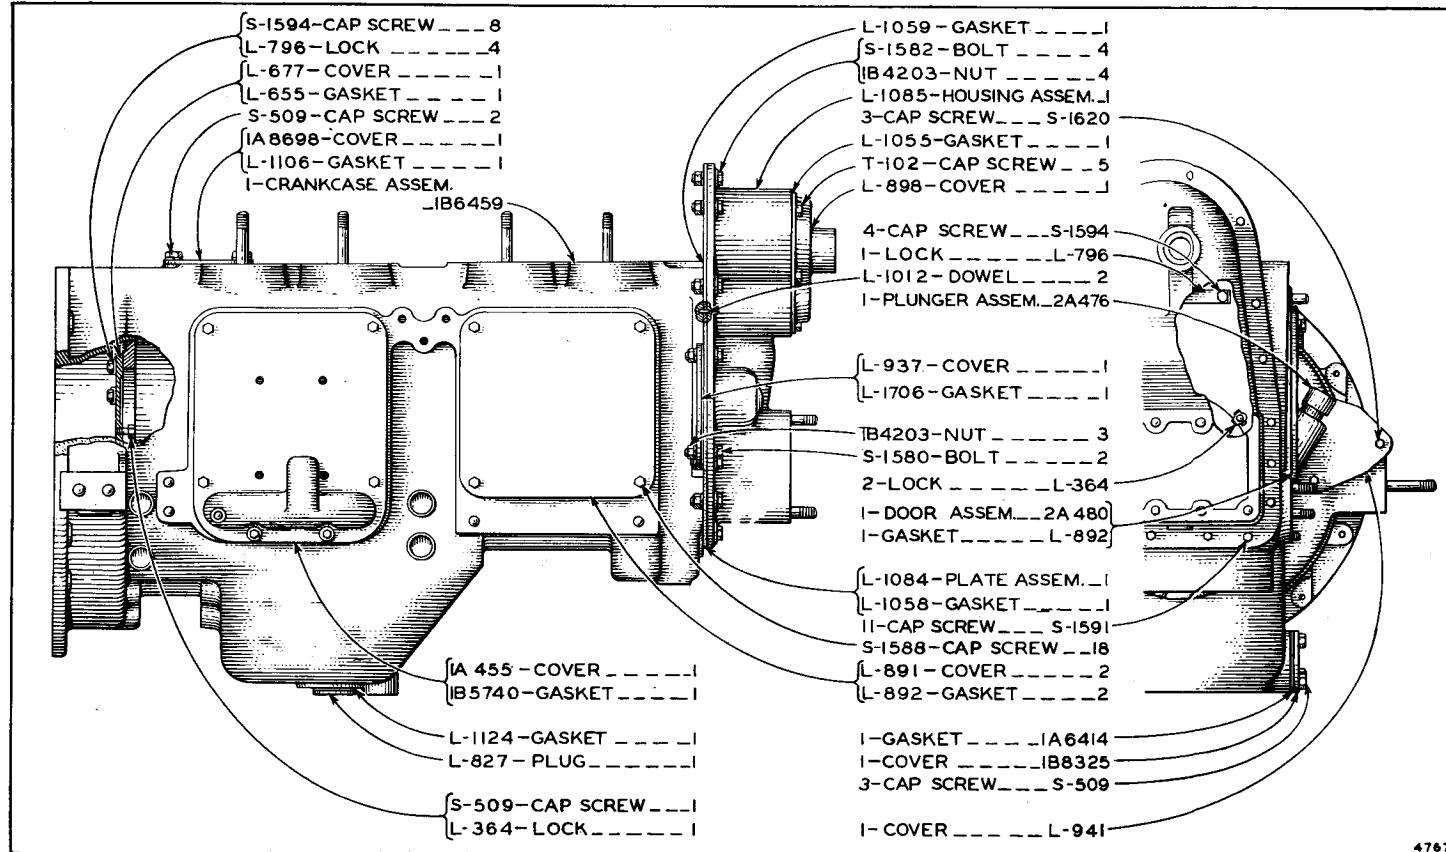

CRANKCASE AND COVERS

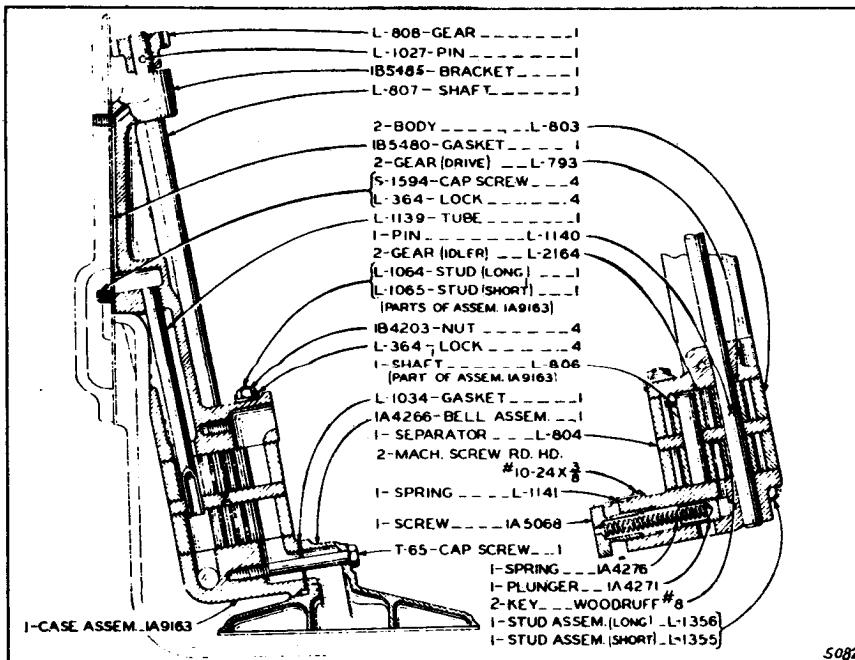


1B1302 OIL PUMP GROUP

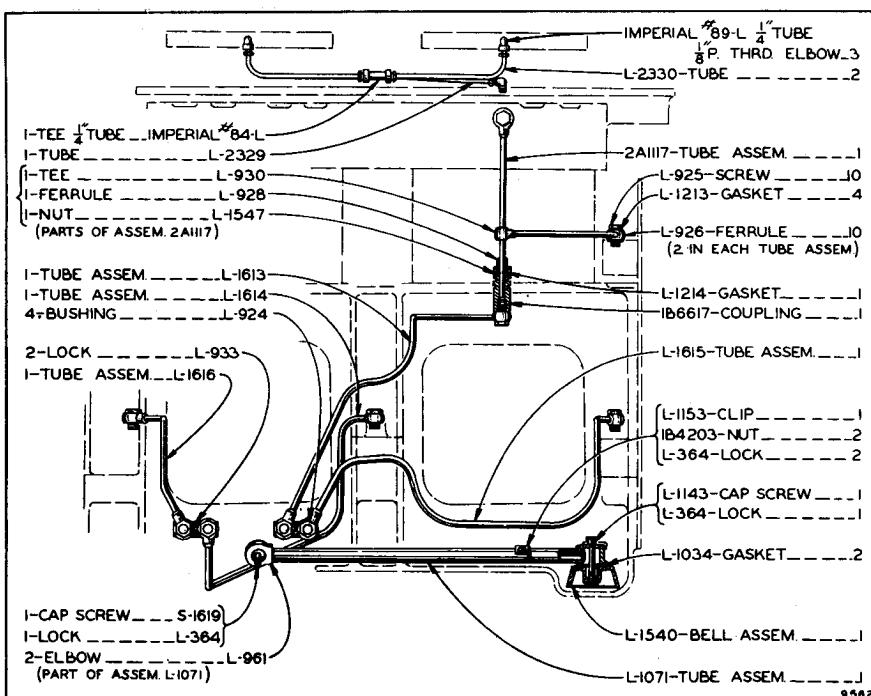


OIL LINES

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

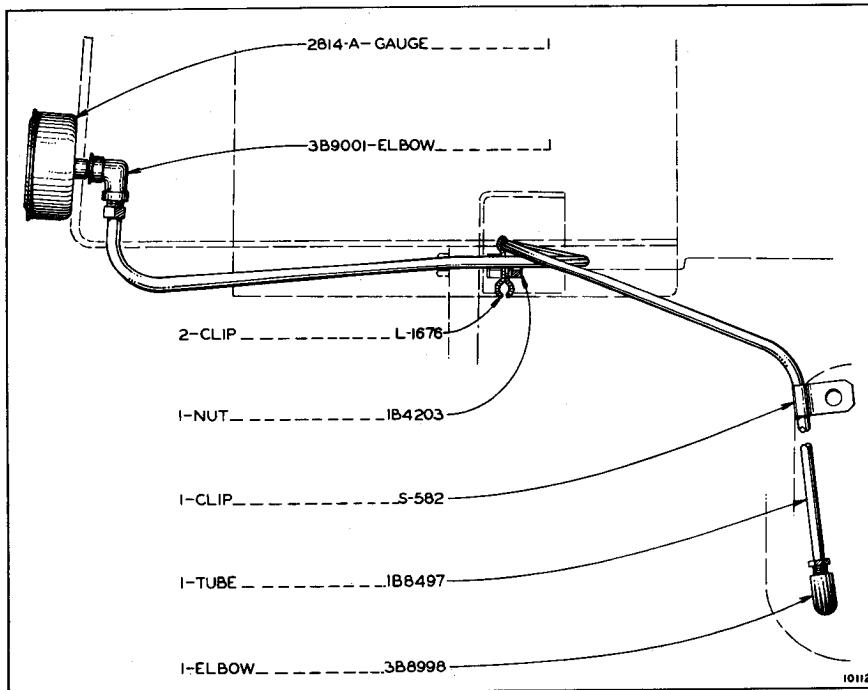


OIL PRESSURE GAUGE

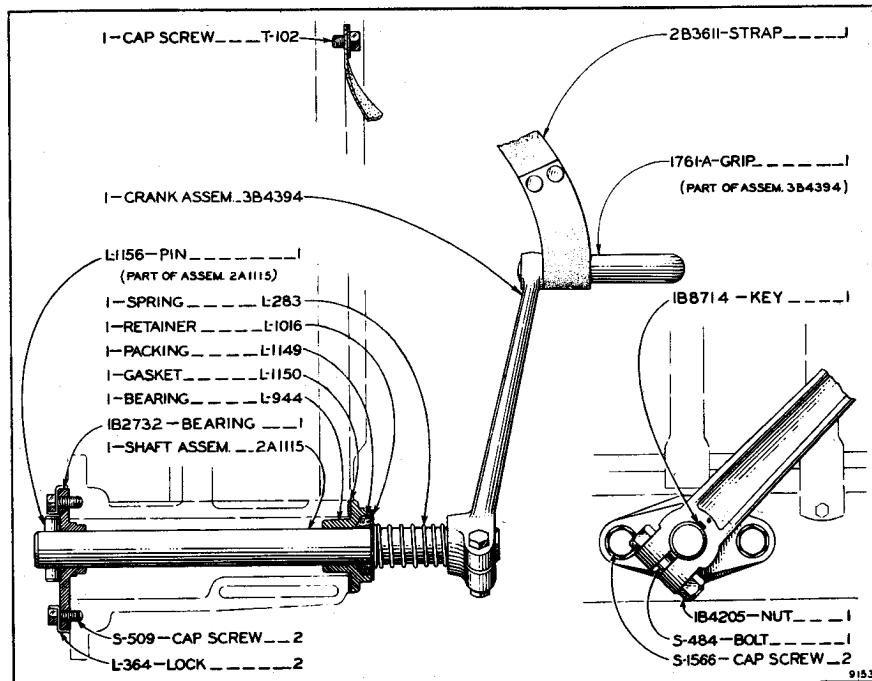

STARTING CRANK


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

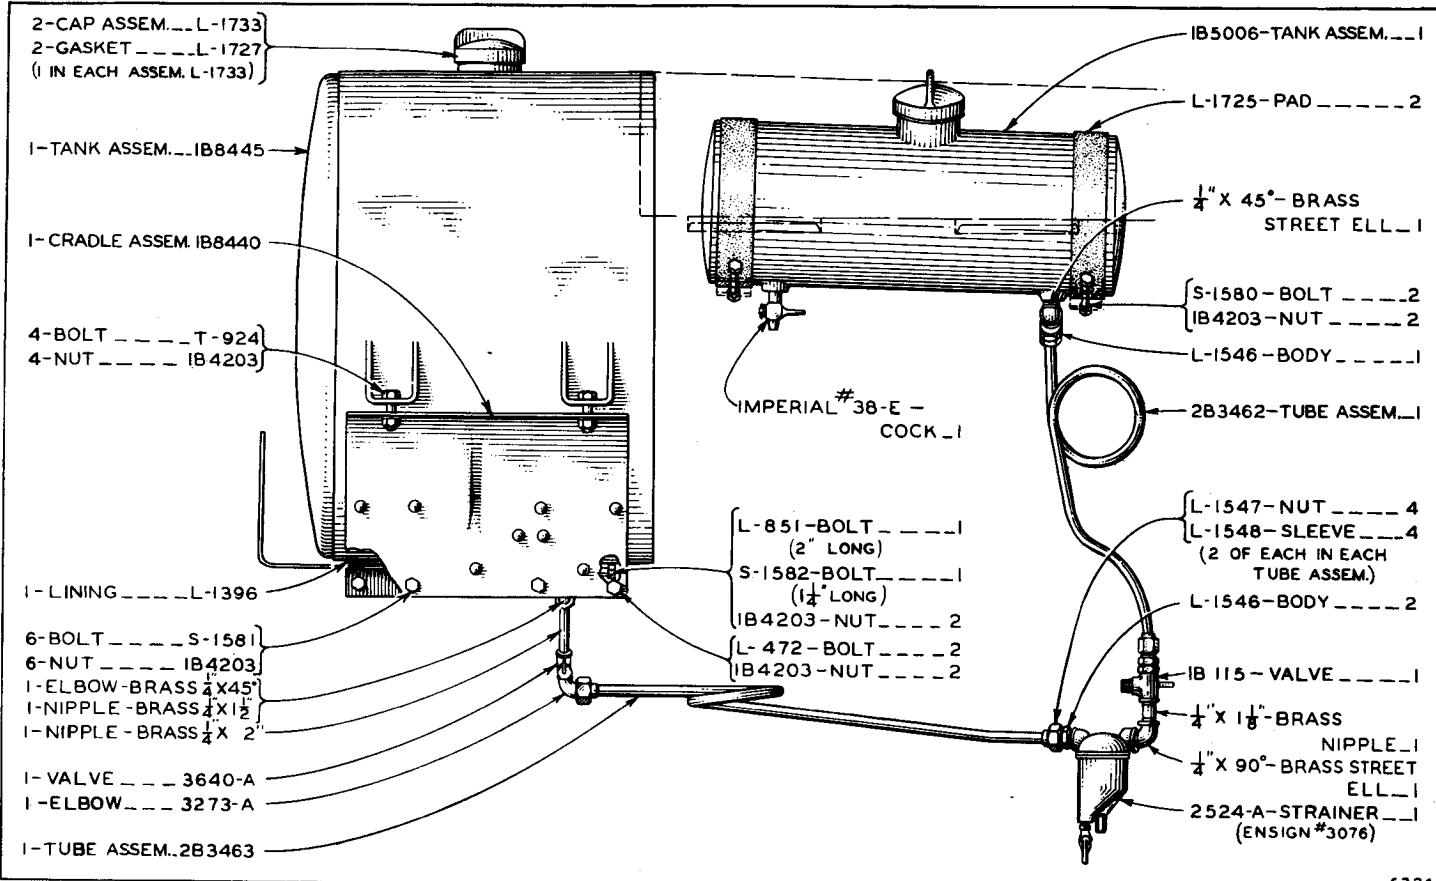


FUEL SYSTEM
(Machines 4F1 to 4F200 Inclusive)

6324

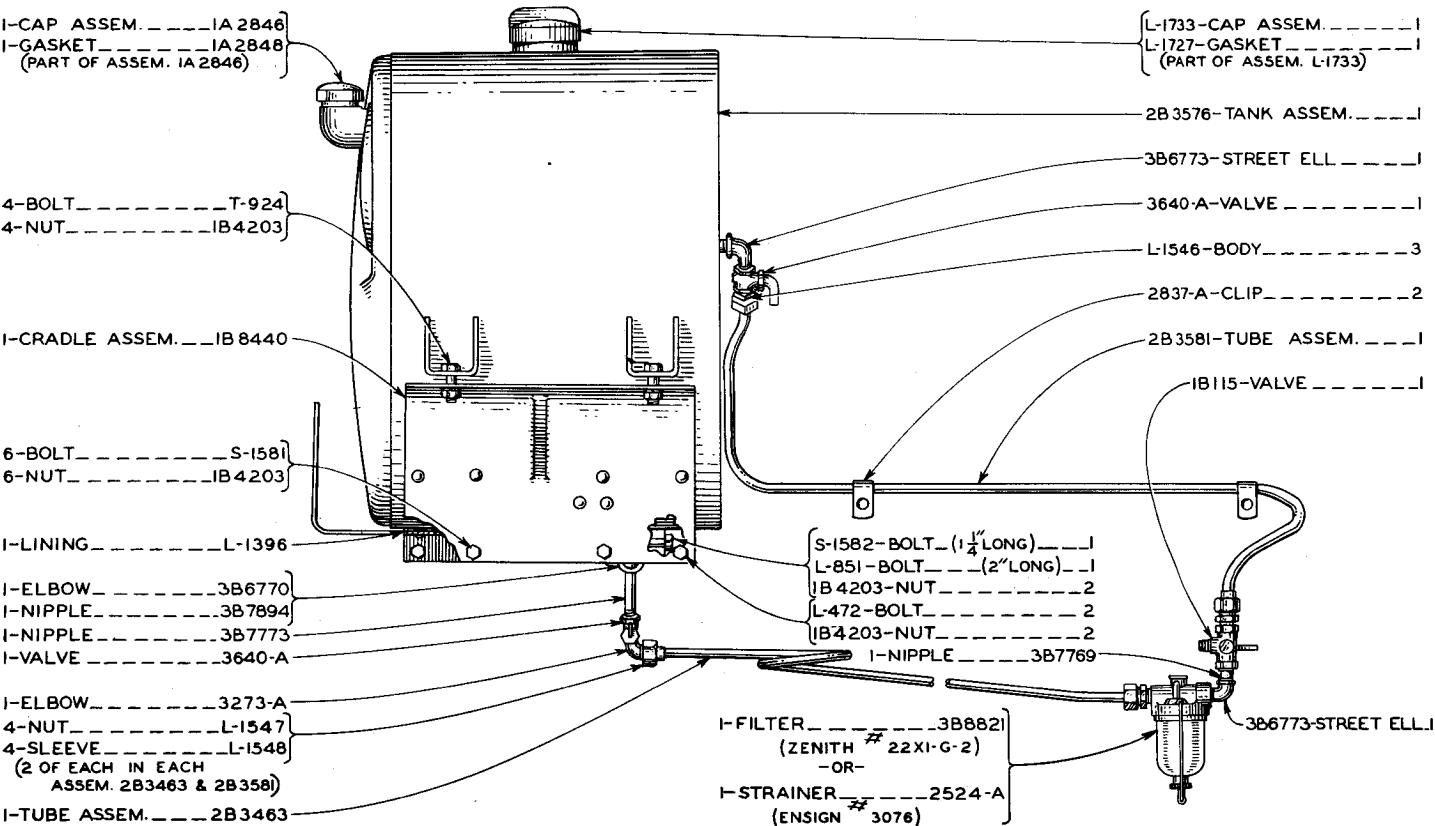


FUEL SYSTEM
(Effective with Machine 4F201)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

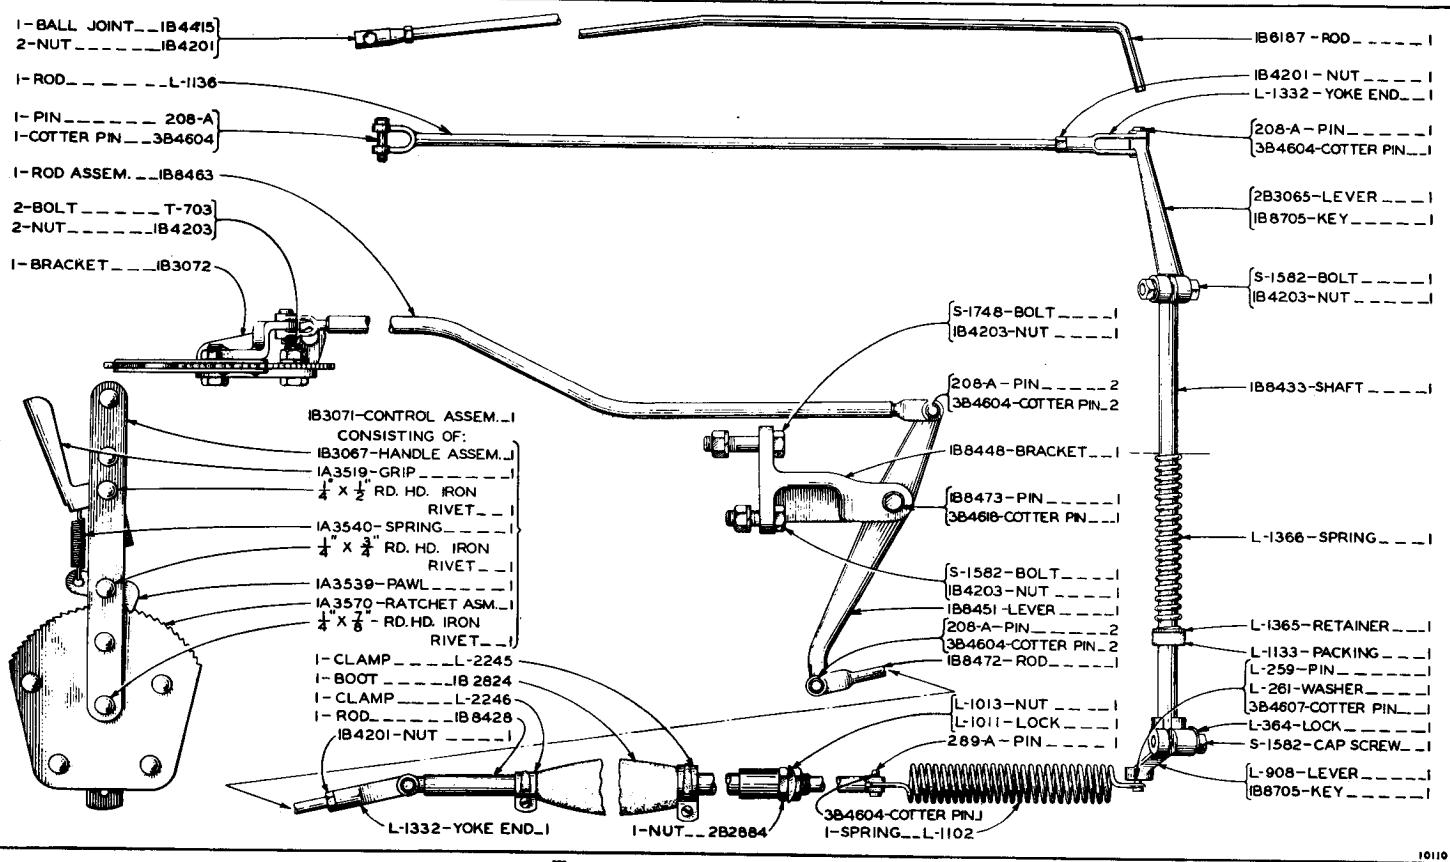


THROTTLE AND CHOKE CONTROL

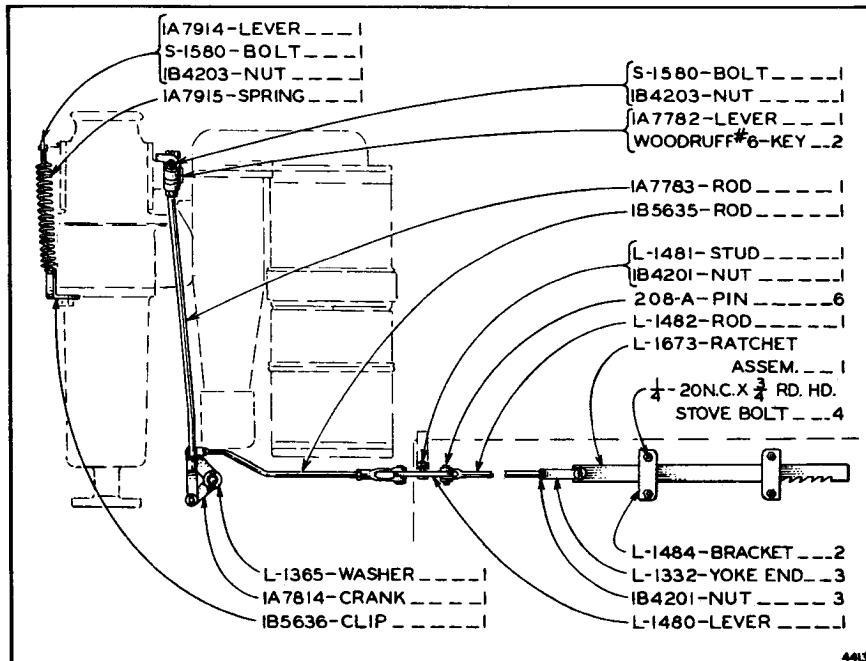

MANIFOLD HEAT CONTROL


4463

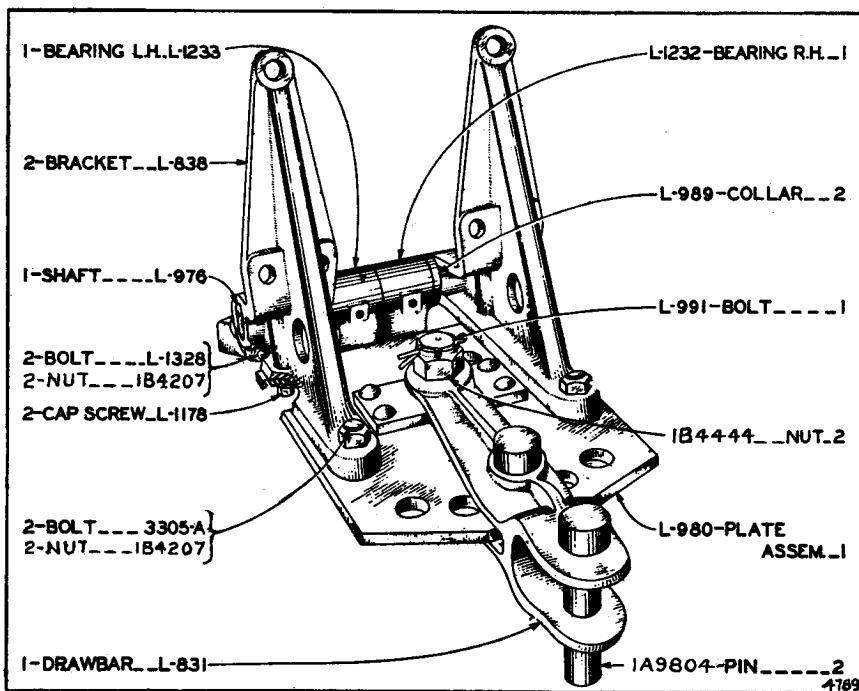


DRAWBAR

4763

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

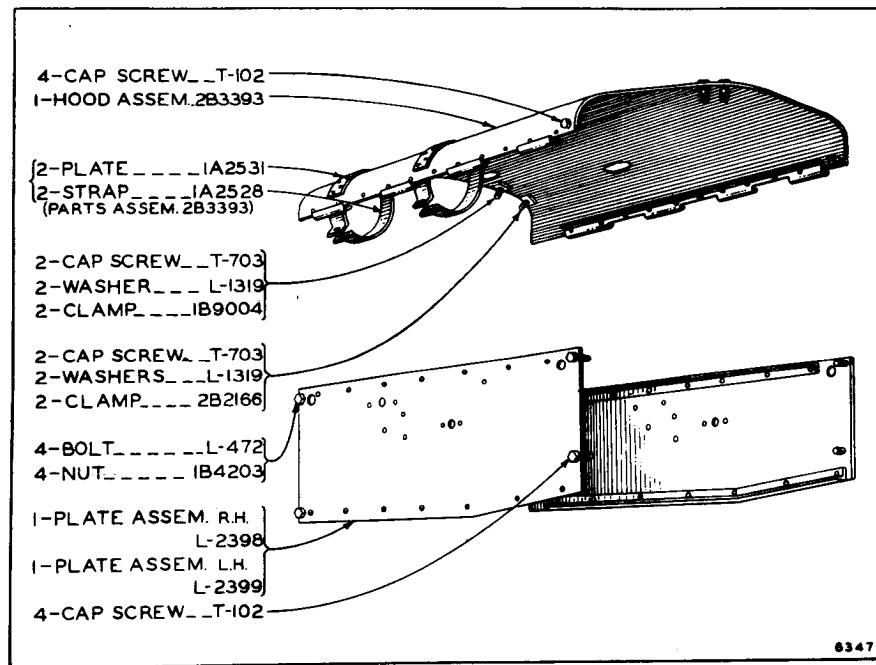


Hood
(Machines 4F1 to 4F200 Inclusive)

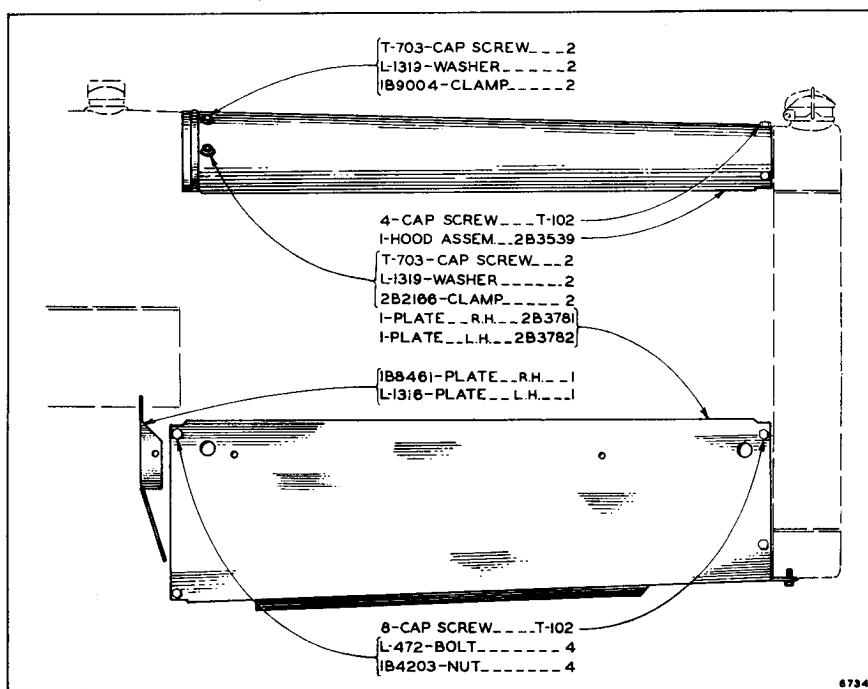


Hood
(Effective with Machine 4F201)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

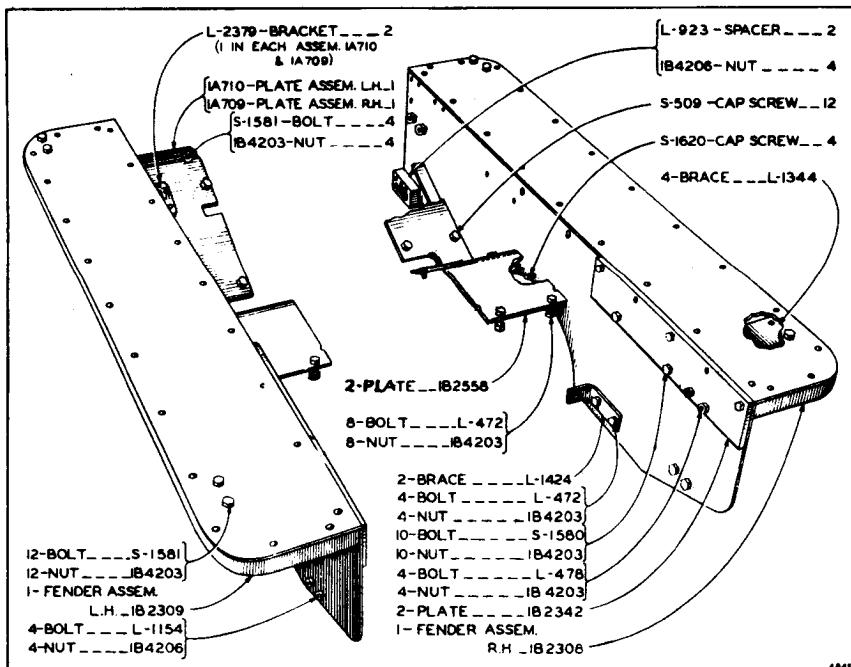


FENDERS AND PLATFORM

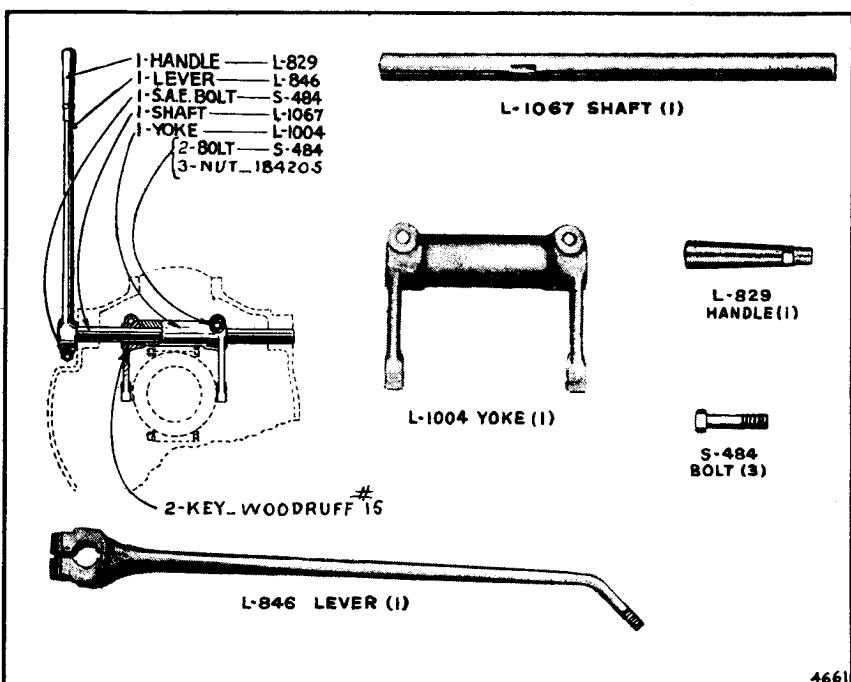


FLYWHEEL CLUTCH CONTROL

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

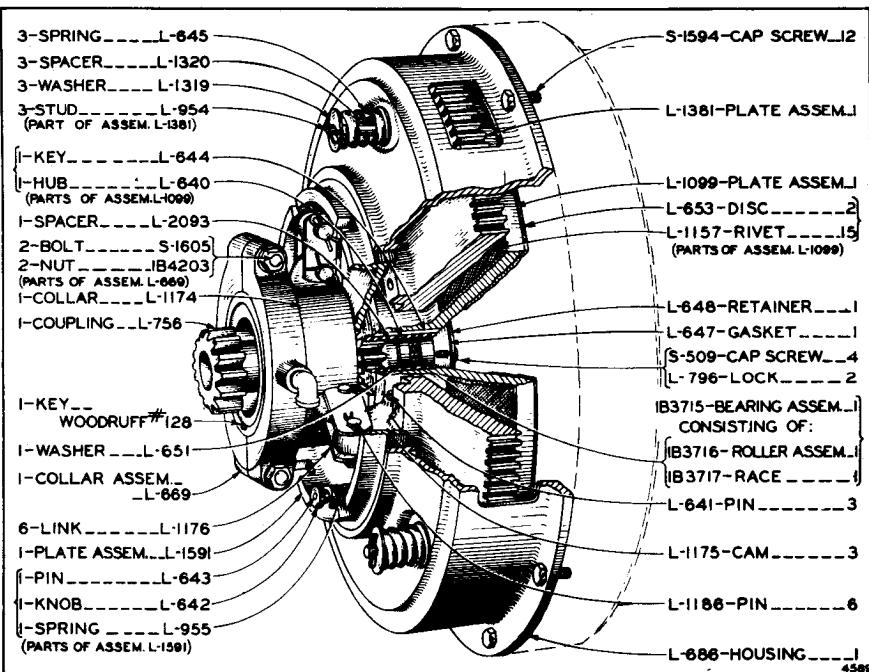


FLYWHEEL CLUTCH

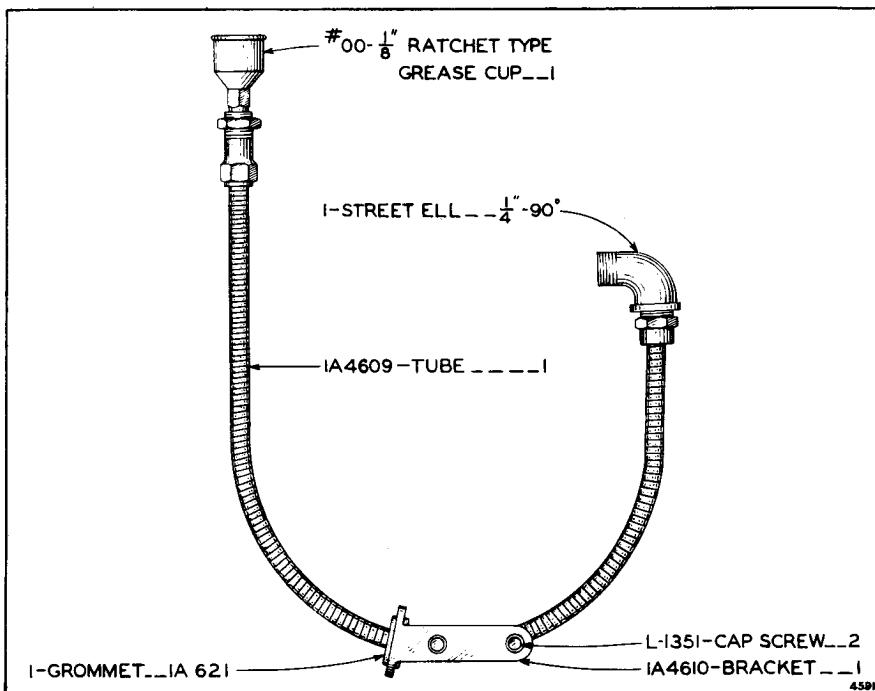


FLYWHEEL CLUTCH RELEASE BEARING OIL TUBE

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

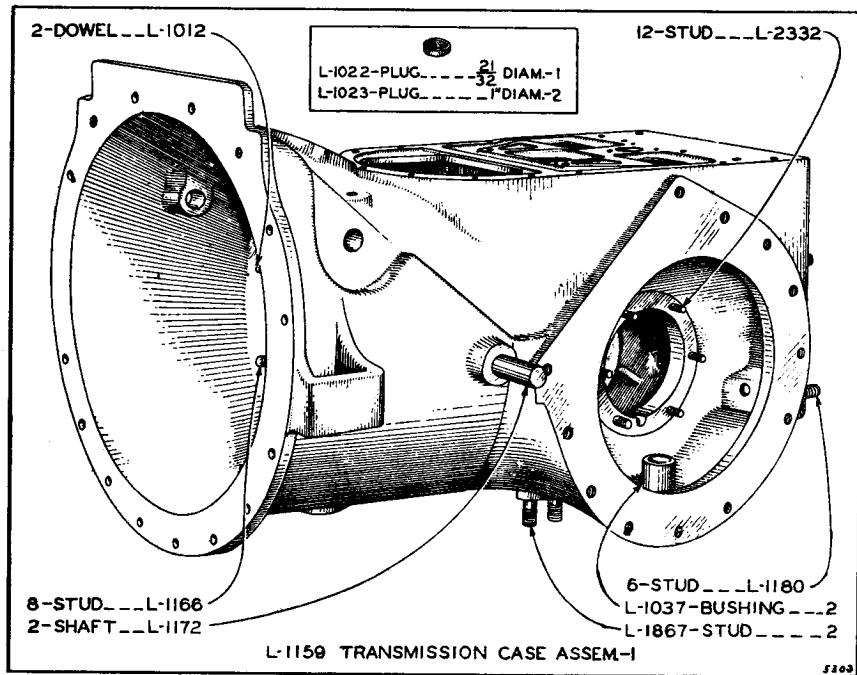


TRANSMISSION CASE ASSEMBLY

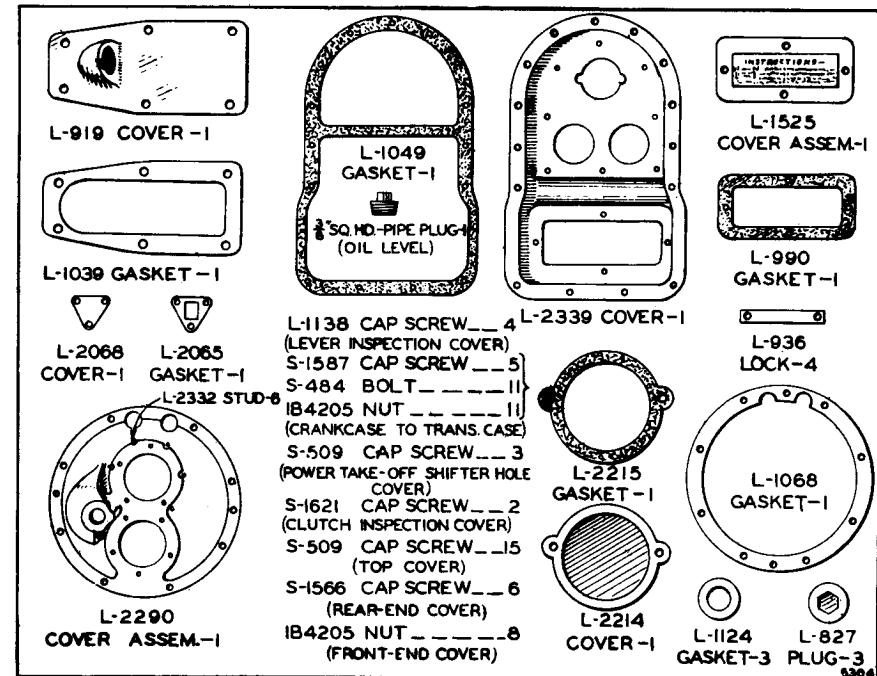


TRANSMISSION CASE COVERS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

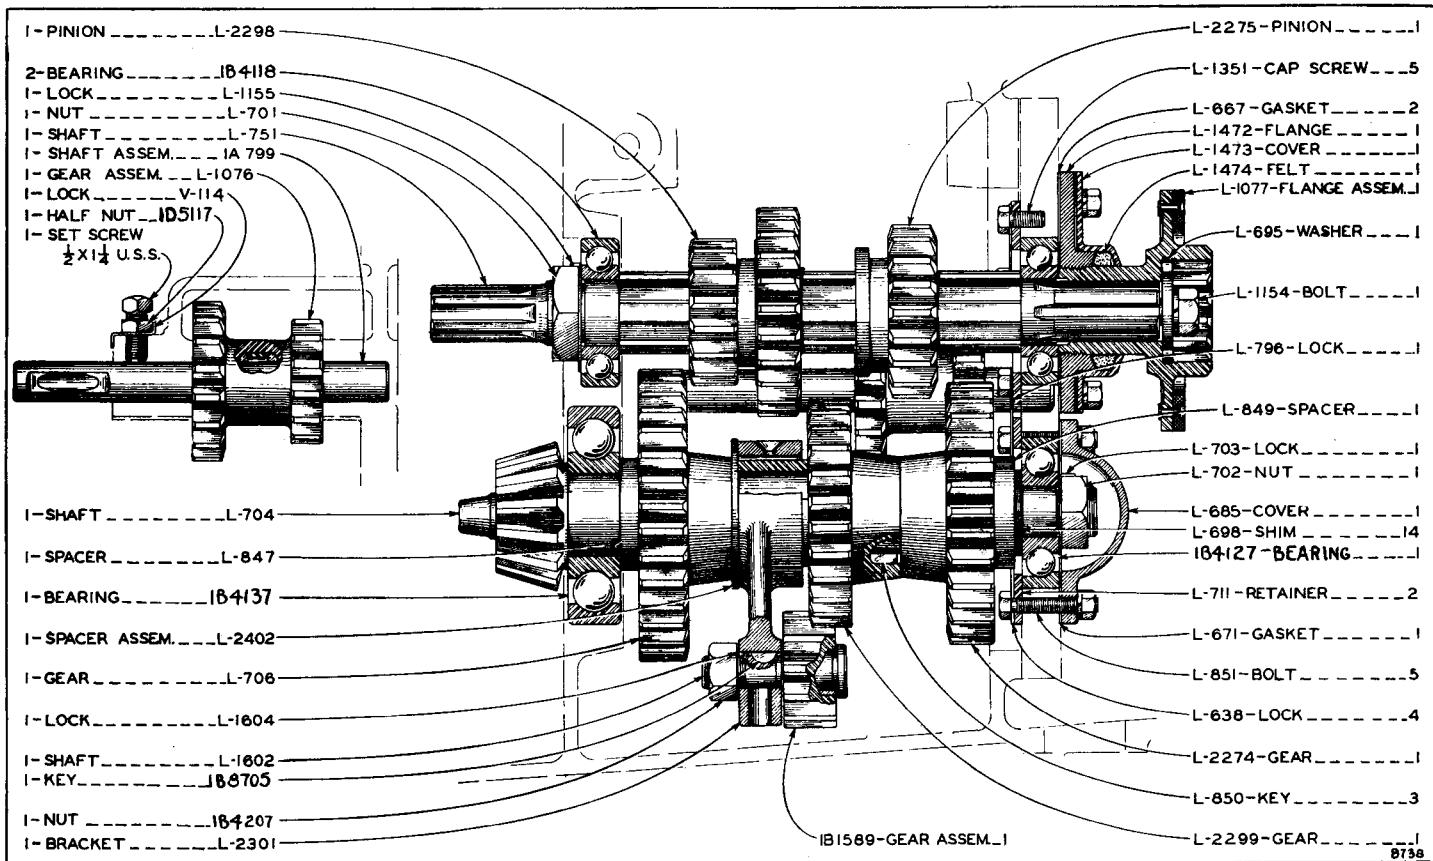

TRANSMISSION

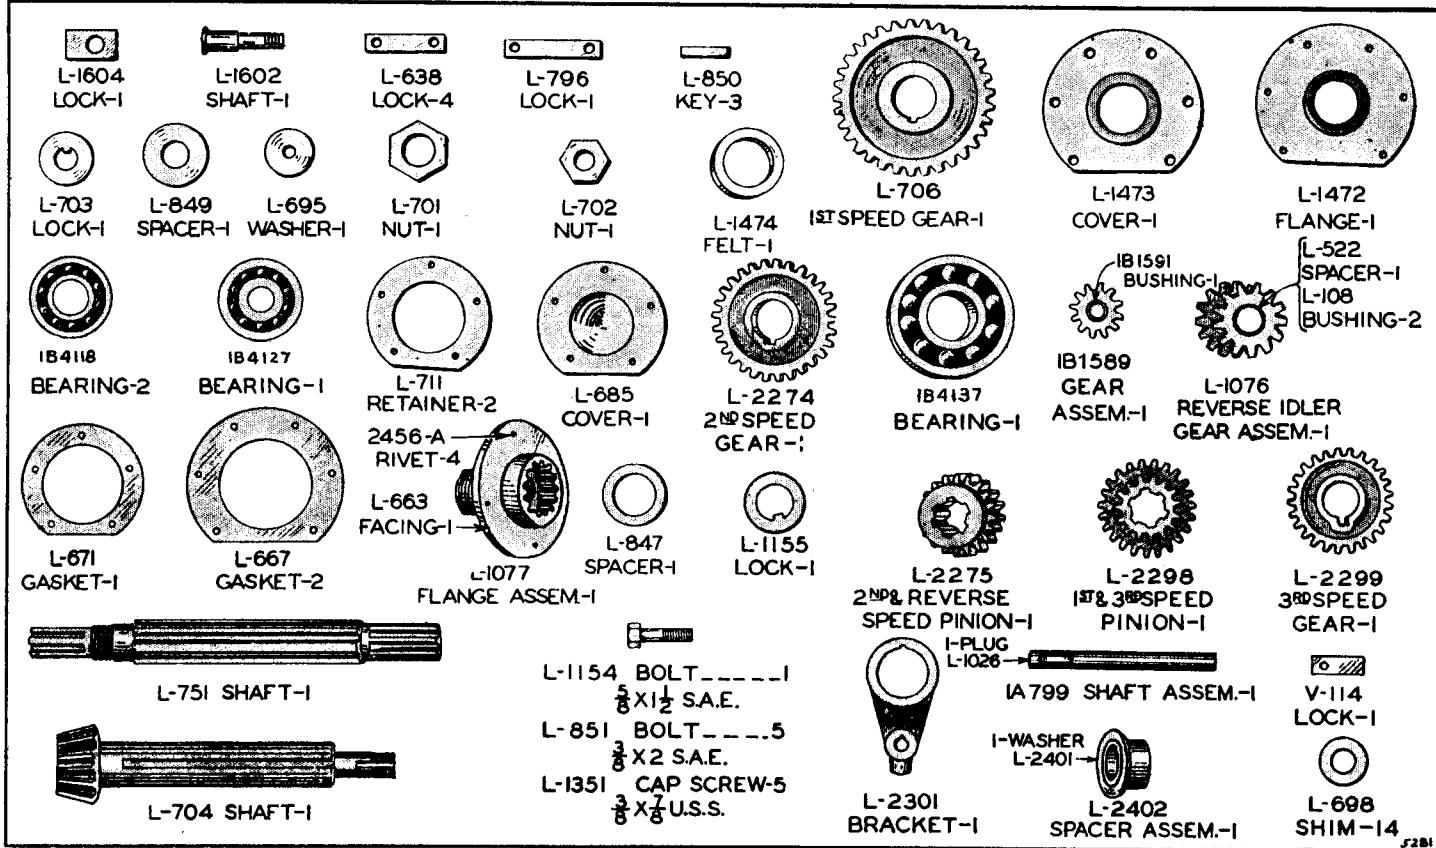


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

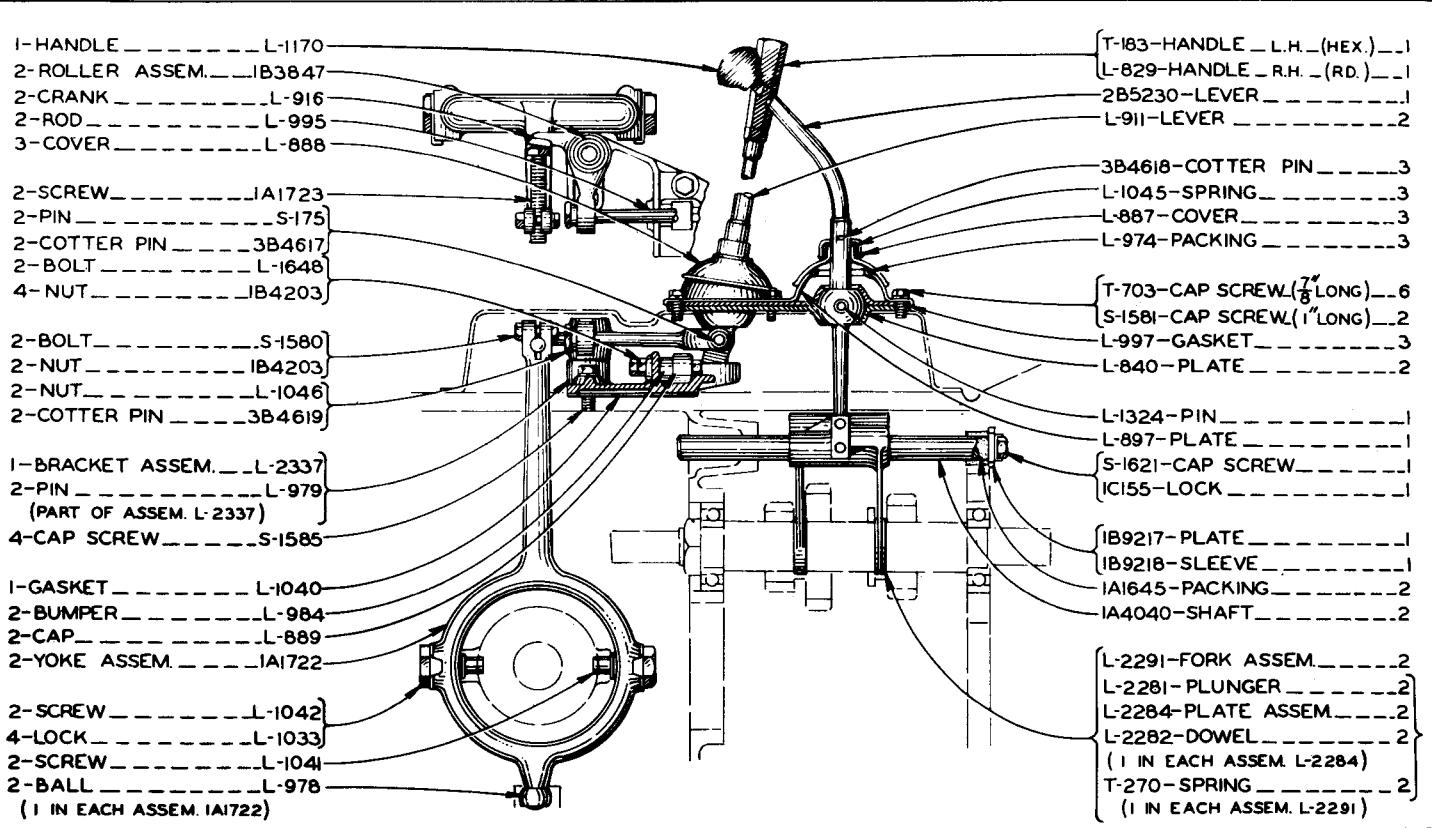

GEAR SHIFT AND STEERING CLUTCH CONTROL


10115

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

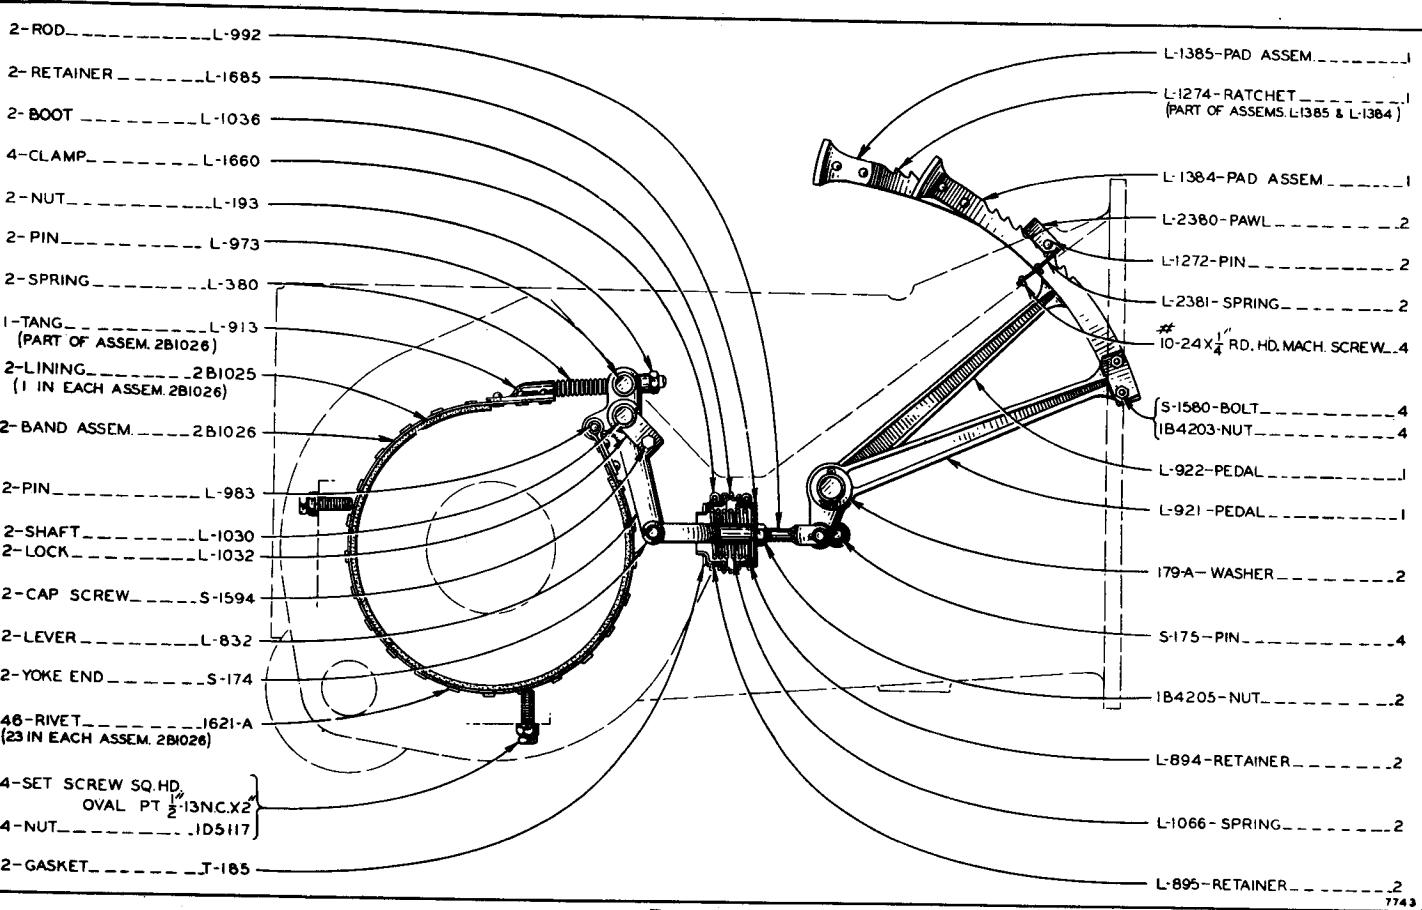

BRAKES

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

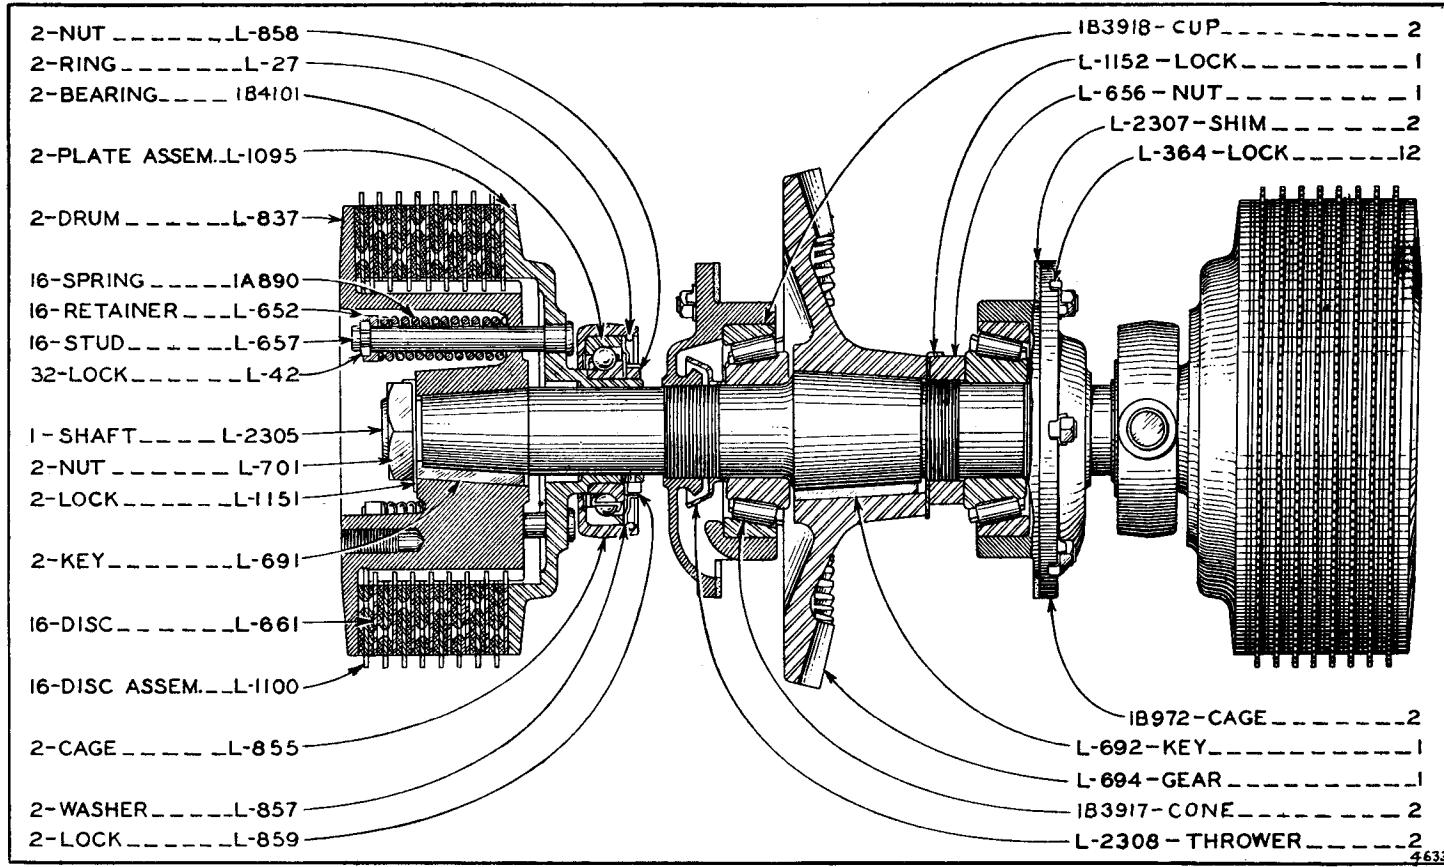

STEERING CLUTCH



L-2308
THROWER-2



L-657
STUD-16




L-2305 SHAFT -1



L-855
CAGE-2




L-1152
LOCK-2

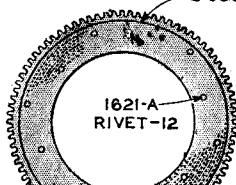


1621-A
RIVET-12


L-1100
DISC ASSEM.-16

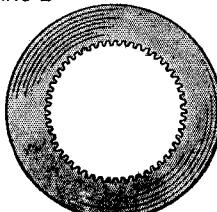


L-661
DISC-16

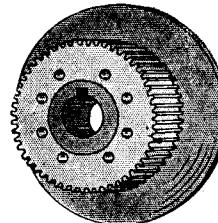

L-837
DRUM-2

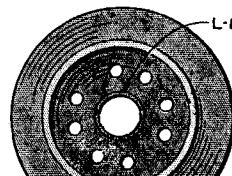

L-1095
PLATE ASSEM.-2

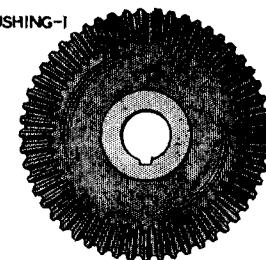


L-694 GEAR -1




IB4101
BEARING -2



IB3917
CONE-2

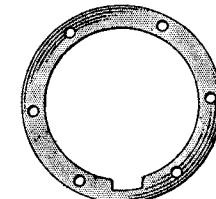

L-2307 SHIM -2

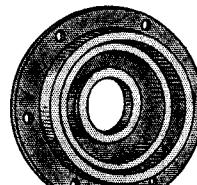

IB972 CAGE-2



IB3918
CUP-2



L-27
RING-2



L-857
WASHER-2



L-656
NUT-1



L-701
NUT-2



L-658
NUT-2



L-1151
LOCK-2



L-691
KEY-2



L-692
KEY-1



L-364
LOCK-12



L-859
LOCK-2




L-42
LOCK-32




IA890
SPRING-16



L-652
RETAINER-16

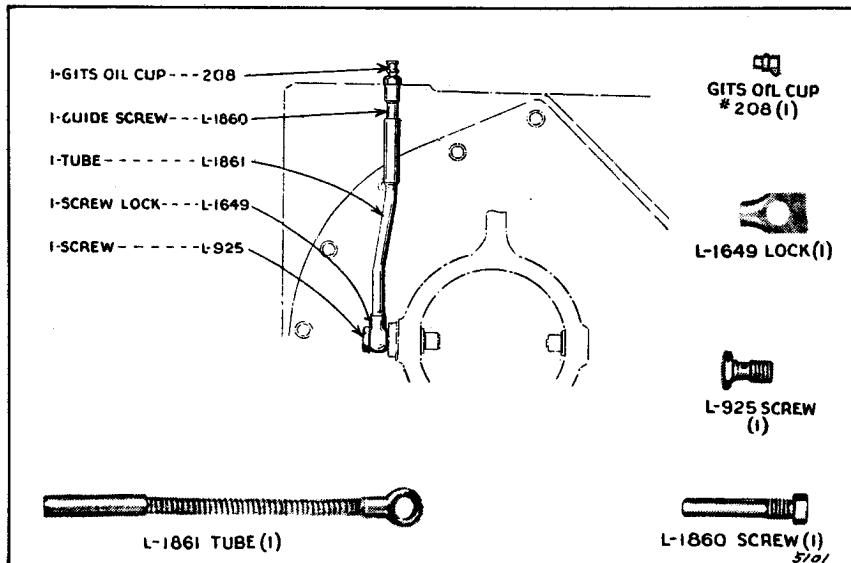


STEERING CLUTCH RELEASE BEARING OIL TUBE (2 Groups Req'd.)

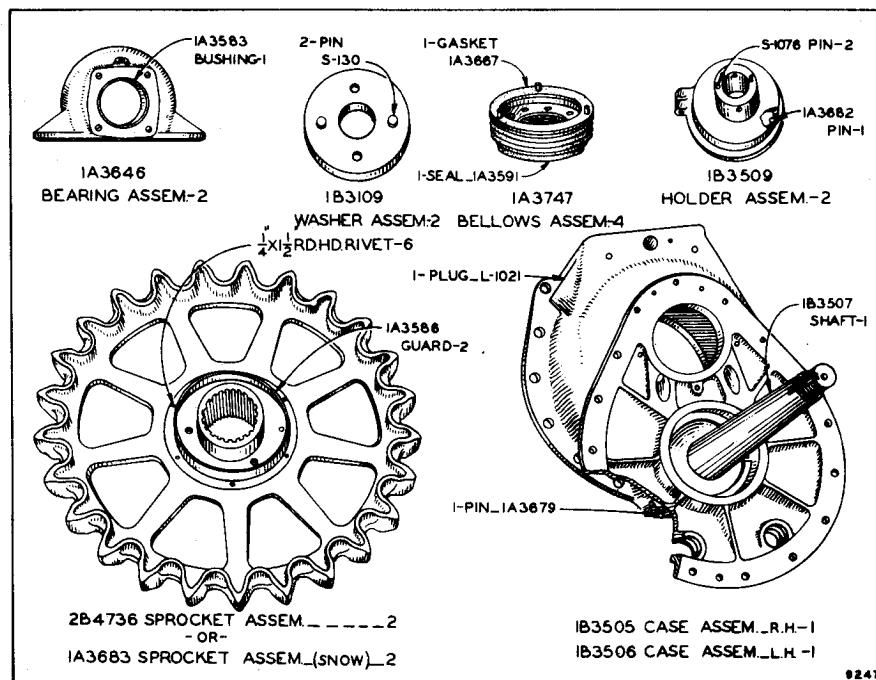

FINAL DRIVE PARTS


8247

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

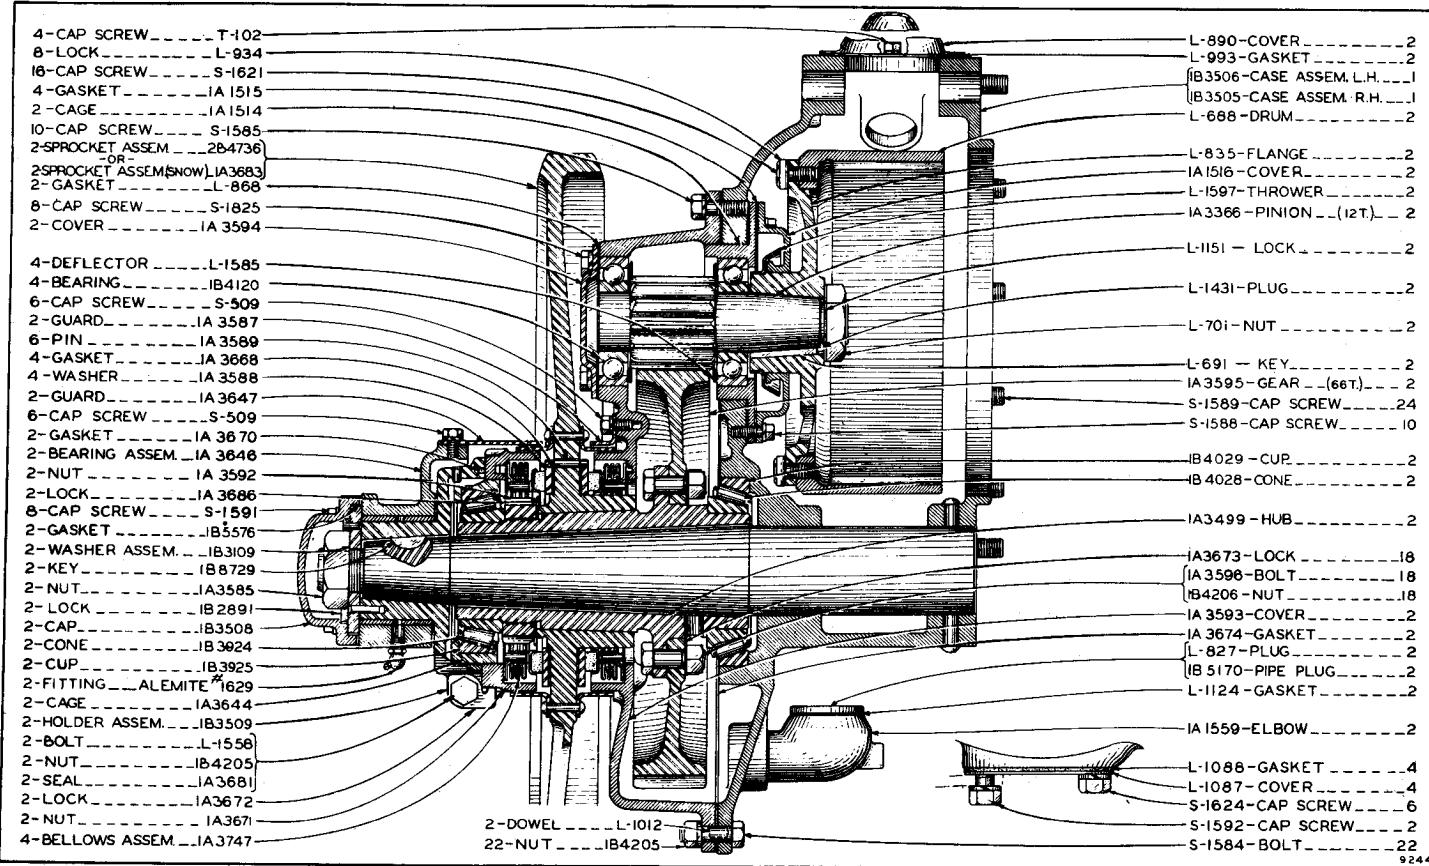


FINAL DRIVE
(Machines 4F1 to 4F22 Inclusive)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

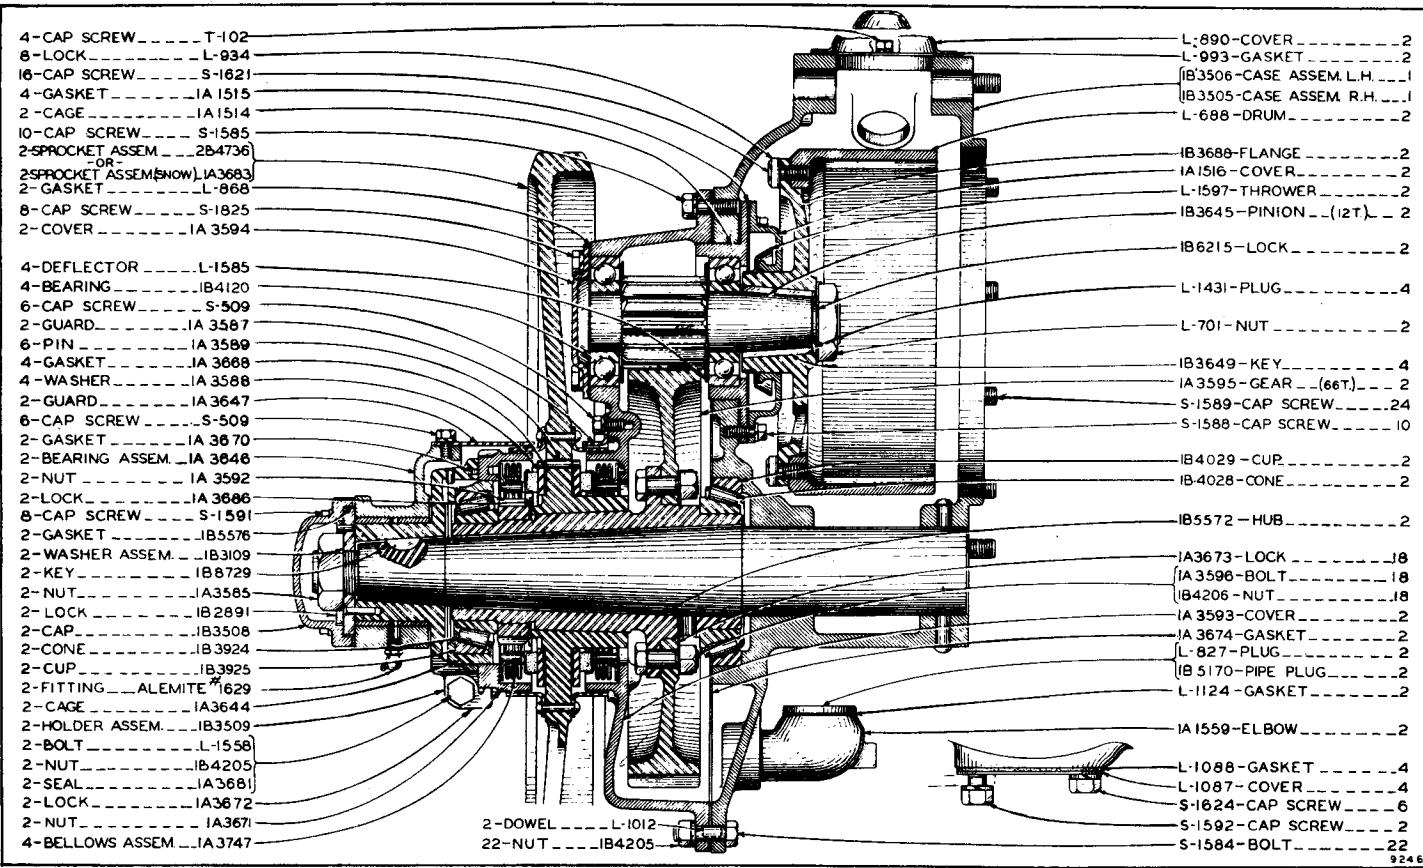


FINAL DRIVE
(Effective with Machine 4F23)


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

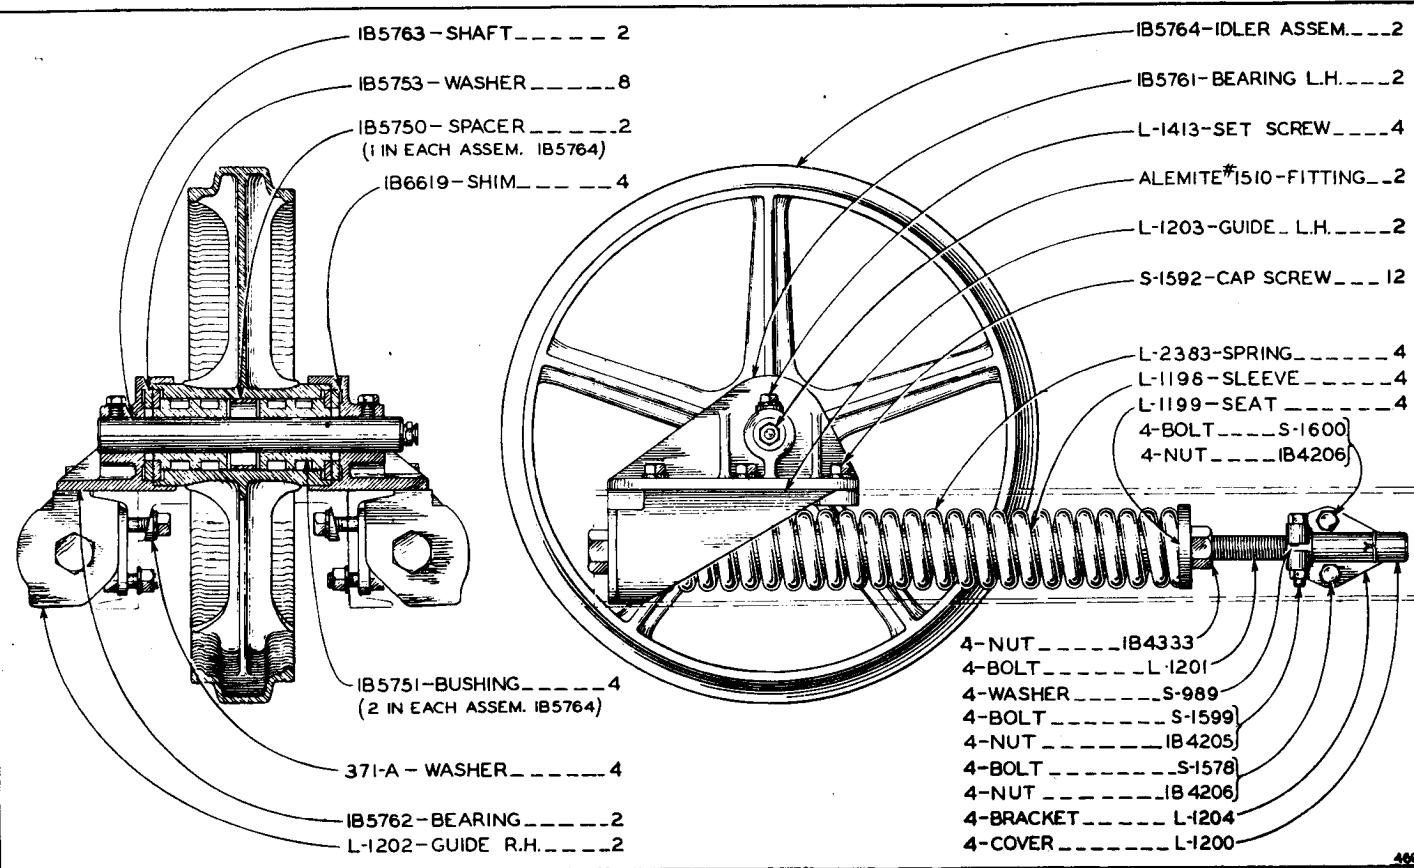

FRONT IDLER

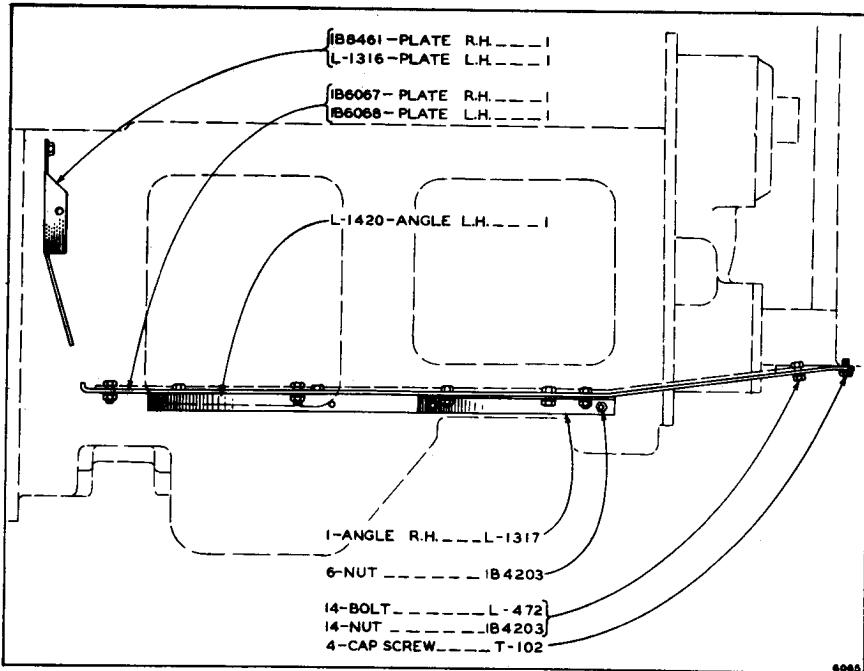


ENGINE GUARDS
(Machines 4F1 to 4F200 Inclusive)

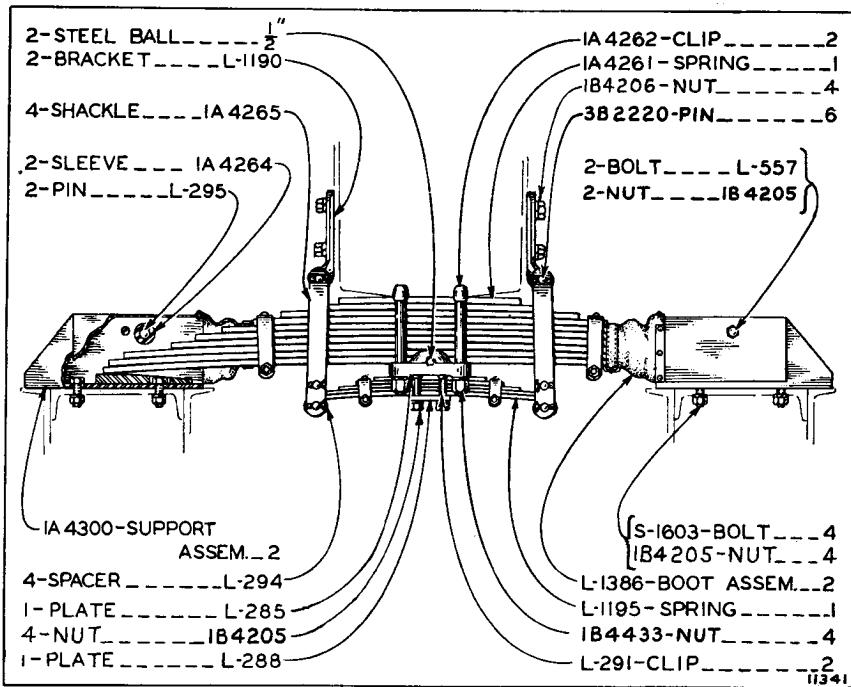


EQUALIZER SPRING

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

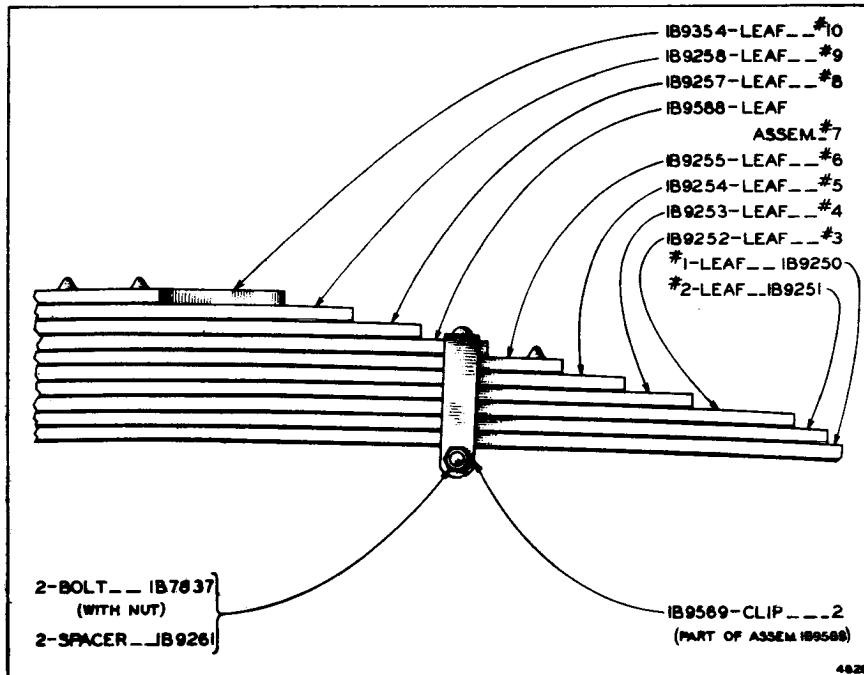


1A4261 SPRING

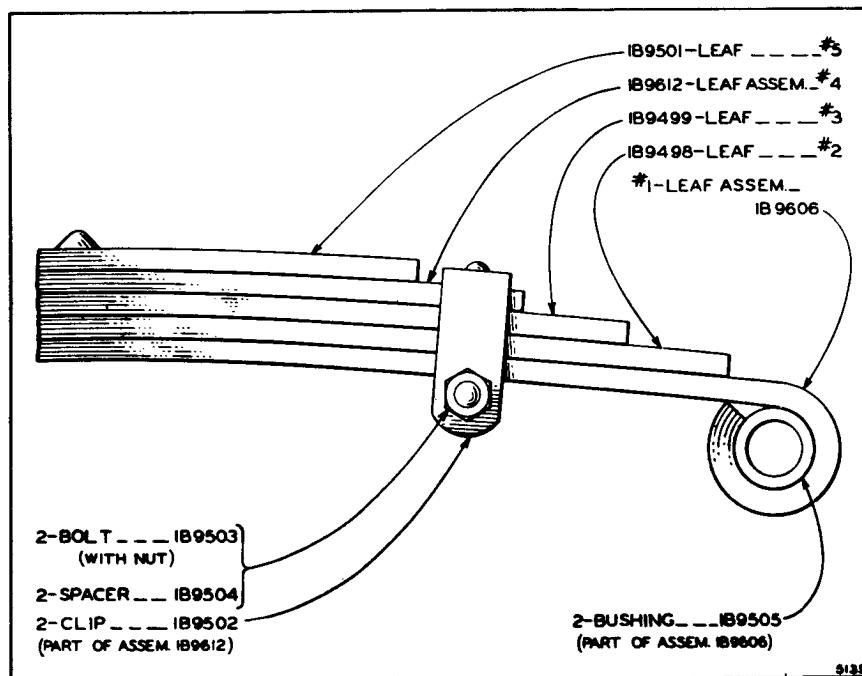

L-1195 SPRING

9133

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

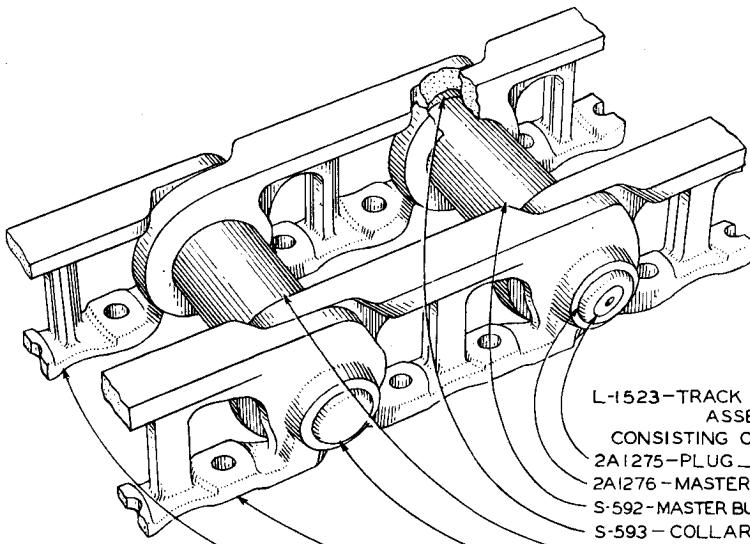

L-1523-TRACK LINK ASSEM. ---
CONSISTING OF:
2A1275-PLUG ____ 2
2A1276-MASTER PIN ____ 1
S-592-MASTER BUSHING ____ 1
S-593-COLLAR ____ 2
S-234-BUSHING ____ 28
S-497-PIN ____ 28
S-236-LINK L.H. ____ 29
S-233-LINK R.H. ____ 29

5901

TRACK LINK ASSEMBLY (2 Assemblies Req'd.)

*651968 Pin & Bushing Group
(Consists of complete set of pins &
bushings for one track)*

Complete Track Assem. (2 Req'd. per Tractor) Shoe (29 Req'd. for One Track)

7" Grouser Shoe	1B5326	1B5215
7" " H.T.	1B5322	1B5179
11" " "	1B5040	1B5041
11" " H.T.	1B5323	1B5178
11" Semi-Skeleton Grouser Shoe	2B7873	2B7688
11" Flat Shoe	1A428	1-1901
11" Skeleton Shoe	1A429	1-1904
11" Semi-Skeleton Snow Shoe	2B9888	{ S.S. } 2B9889 { 14 Req'd. } { D.S. } 2B9890 { 15 Req'd. }
11" Rubber Shoe	S-1813-A	Plate S-1812 Shoe S-1811
13" Grouser Shoe	*1B5327	1B5043
13" " H.T.	*1B5324	1B5177
13" " 1" Offset R.H.	1B9727 { 1 Req'd. }	1B9731
13" " 1" L.H.	1B9728 { 1 Req'd. }	1B9732
16" " "	*1B5117	1B3209
16" " H.T.	*1B5325	1B3217
16" " 22" Offset R.H.	1B5721 { 1 Req'd. }	1B5693
16" " L.H.	1B5722 { 1 Req'd. }	1B5694
18" Angle Shoe	*1A1666	S-2303
20" Grouser Shoe	*2B8840	2B2090
24" Angle Shoe	*1A912	R-217
26" Grouser Shoe 2" Offset R.H.	*2B5813 { 1 Req'd. }	2B5851
26" " " " L.H.	*2B5814 { 1 Req'd. }	2B5852

2A3223 Track Shoe Bolt - 116 Req'd. for one Track

S-1584 " " " " " " " (Used only on Tracks
1A428, 1A429, 1A1666 & 1A912)

1B4432 Nut (Used with 2A3223 & S-1584)

3B4508 Lockwasher (Used with 2A3223 & S-1584)

H.T. - Heat Treated S.S. - Single Spike D.S. - Double Spike

* For use on 55" Gauge Models only.

17383

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS



 
 
 
 
ICE GROUSER



ANGLE SHOE




ICE & DIRT GROUSER

SEMI-SKELETON
GROUSER SHOESEMI-SKELETON SNOW SHOE
(DOUBLE-SPIKE)SEMI-SKELETON SNOW SHOE
(SINGLE-SPIKE)


FLAT SHOE



 GROUSER SHOE



SKELETON SHOE

 RUBBER SHOE
PLATE

RUBBER SHOE



STREET PLATE



DIRT GROUSER

8235

TRACK SHOES, GROUSERS AND STREET PLATES

Name	Complete Group Nos. (Full Set)	Part (Half Set)	Unit Part Number	Qty.in Full Set	Qty.in Half Set	For use on Track Shoes
Ice & Dirt Grouser Street Plate	1B2429 1B5586		S-1828 S-600	58 58		L-812 & S-235*
Ice & Dirt Grouser Street Plate	1B1489 3B3261	2B3232 2B3235	L-1934 3B2242	58 58	30 30	S-235**,1B888, 1B5041,L-1617, 1B5178,2B7688, 2B9889,2B9890, S-2094,1B5043, 1B890,1B5177, 1B9731,1B9732, S-2570,1B3209, 1B1968,1B3217, 1B5693,1B5694, 2B2090,2B5851 & 2B5852
Ice Grouser	1B1484	2B3234	L-1905 R.H. L-1906	29	15	L-1901 & L-1904
Dirt Grouser	1B1479	2B3233	L-1907 R.H. L-1908 L.H.	29 29 29	15 15 15	L-1901

S-1584 Bolt 2 Req'd. for each Grouser S-1828 & L-1934
S-1603 " 2 " " Street Plate S-600, S-1927 & 3B2242

1B4205 Nut (Used with S-1584 & S-1603)

3B4508 Lockwasher (Used with S-1584 & S-1603)

S-1844 Bolt 1 Req'd. for each Grouser L-1905, L-1906, L-1907 & L-1908

1B4331 Nut (Used with S-1844)


15057 Washer (Used with S-1844)

3B4512 Lockwasher (Used with S-1844)

* - Drop Forged ** - Rolled Steel


10127

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

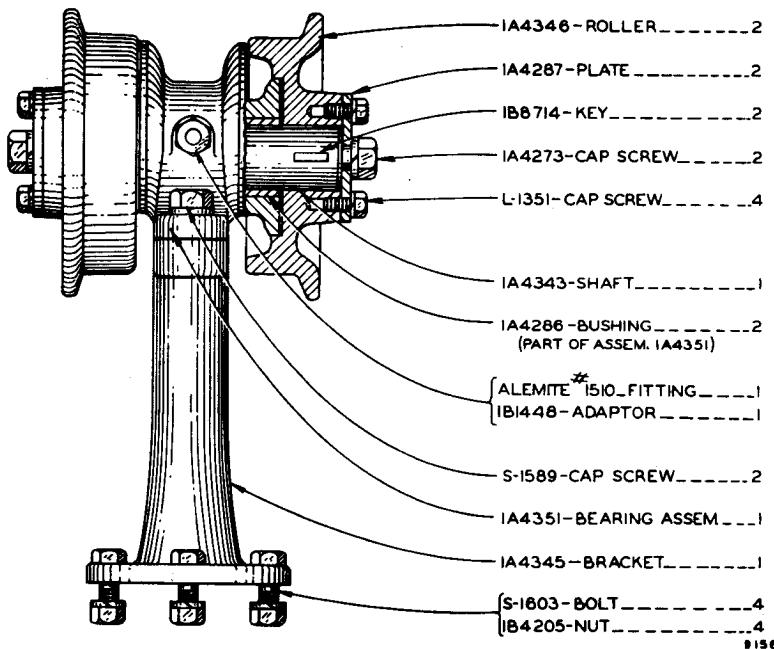


TRACK CARRIER ROLLER GROUP (2 Groups Req'd.)
(Machines 4F1 to 4F845 Inclusive)

Note: Only separate parts serviced. When complete group is wanted order 1A5299.

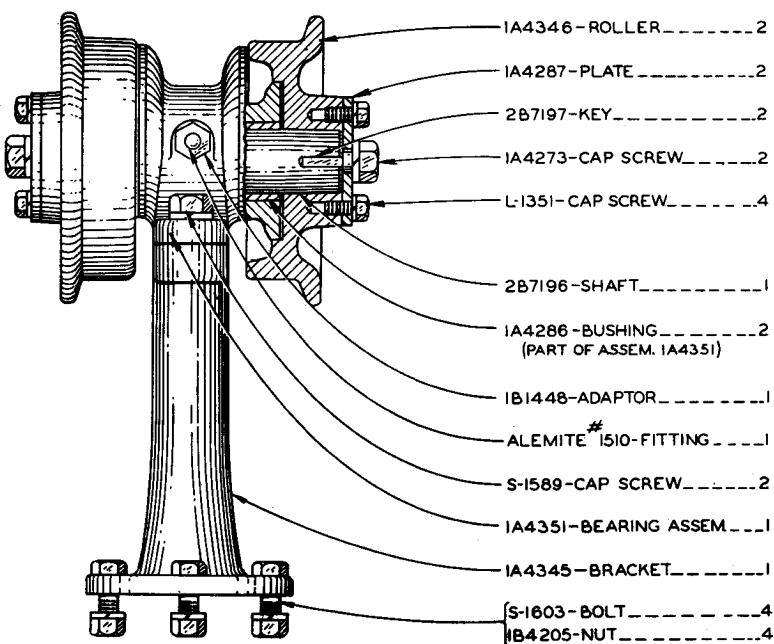


1A5299 TRACK CARRIER ROLLER GROUP (2 Groups Req'd.)
(Effective with Machine 4F846)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

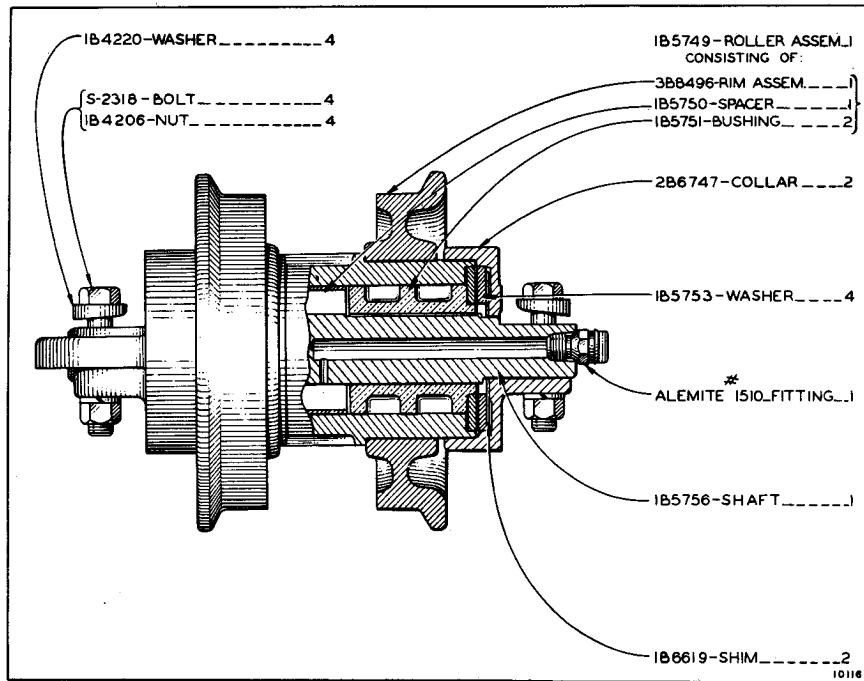


1B5745 TRACK ROLLER GROUP (6 Groups Req'd.)

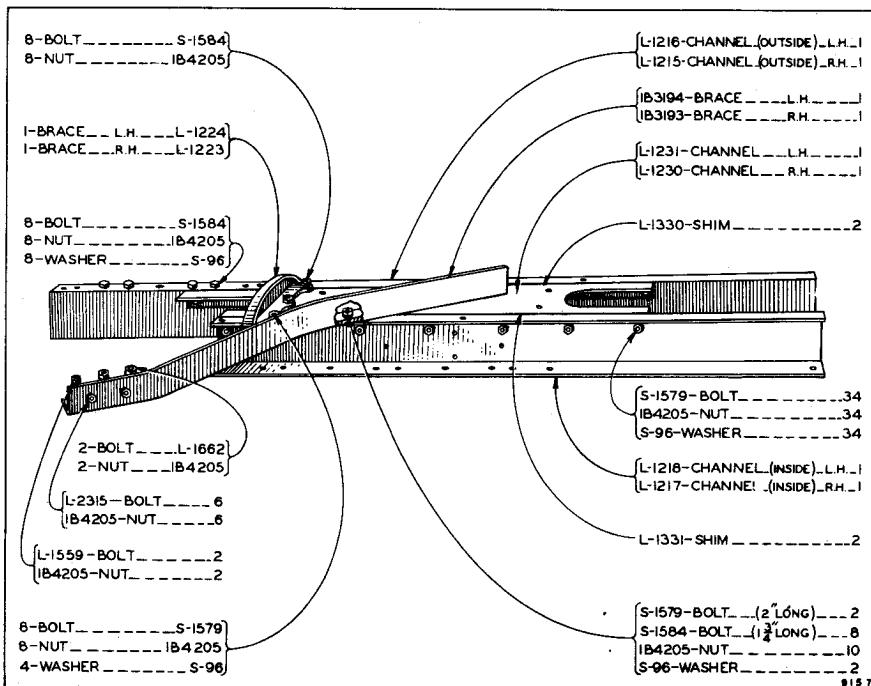


TRACK ROLLER FRAME

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

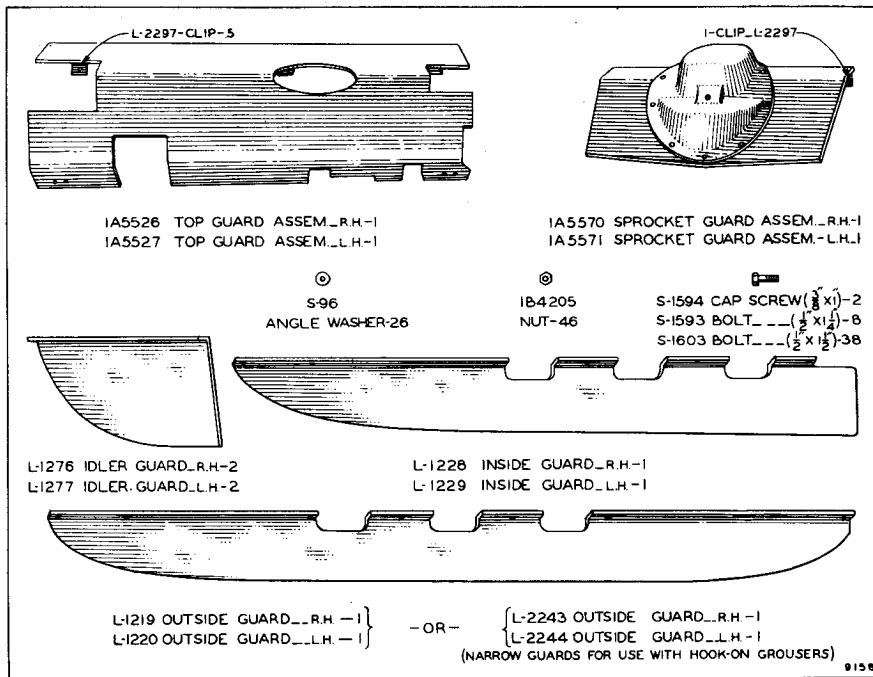

TRACK ROLLER FRAME GUARDS

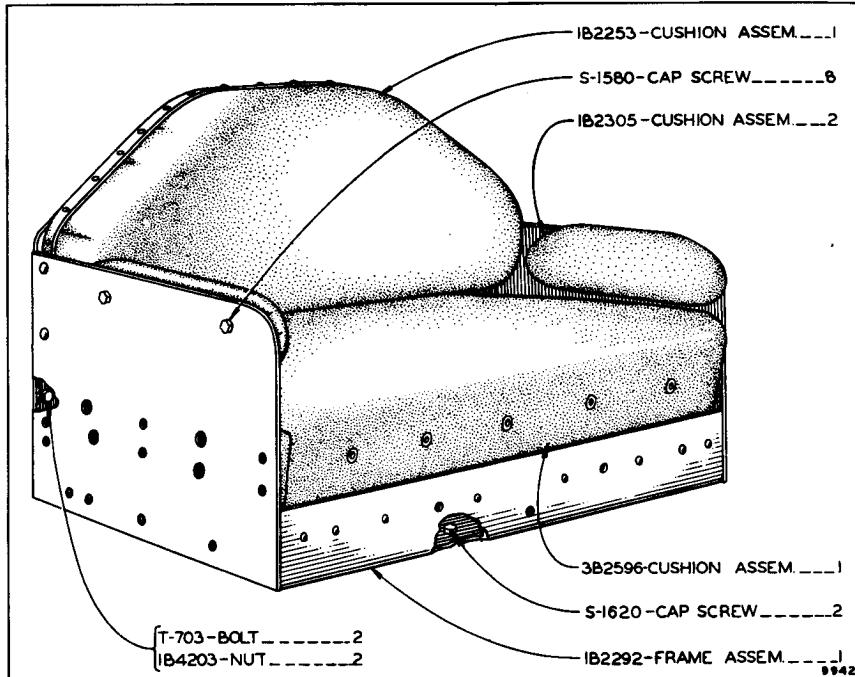


SEAT

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

1B2517 Rear Seat Arrangement

Consists of:


1	Seat Group	Page 51
1	Brake Control Group.	" 52
1	Flywheel Clutch Control Group.	" 53
1	Gear Shift and Steering Clutch Control Group	" 53
1	Fender and Platform Group.	" 54
1	Tool Box Group	" 55

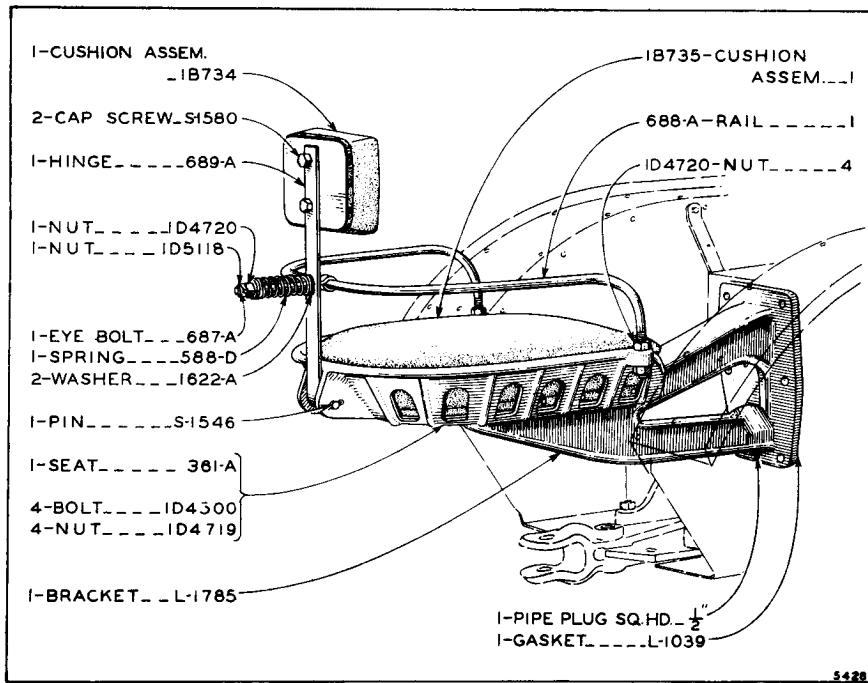

5428


REAR SEAT GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

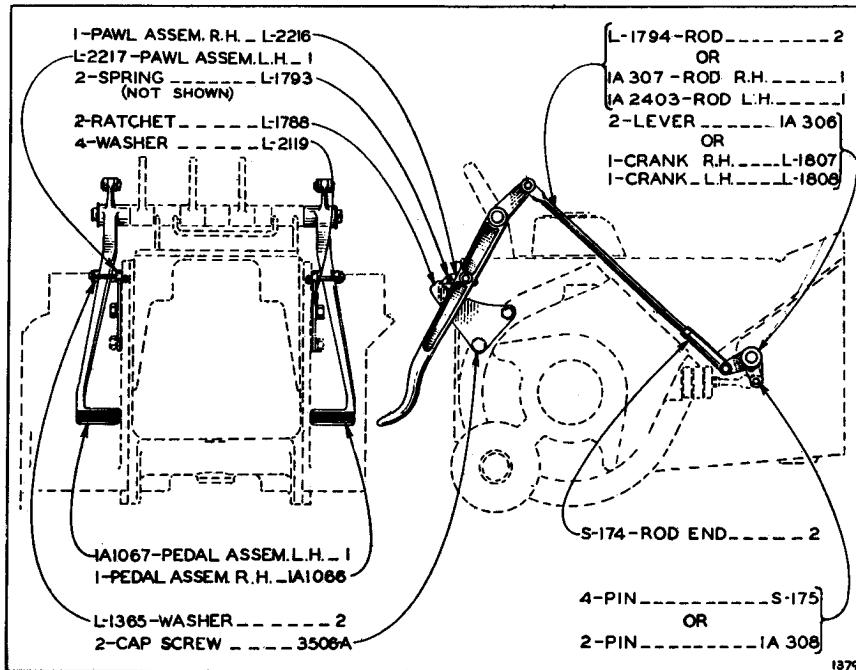

BRAKE CONTROL GROUP—REAR SEAT


1379

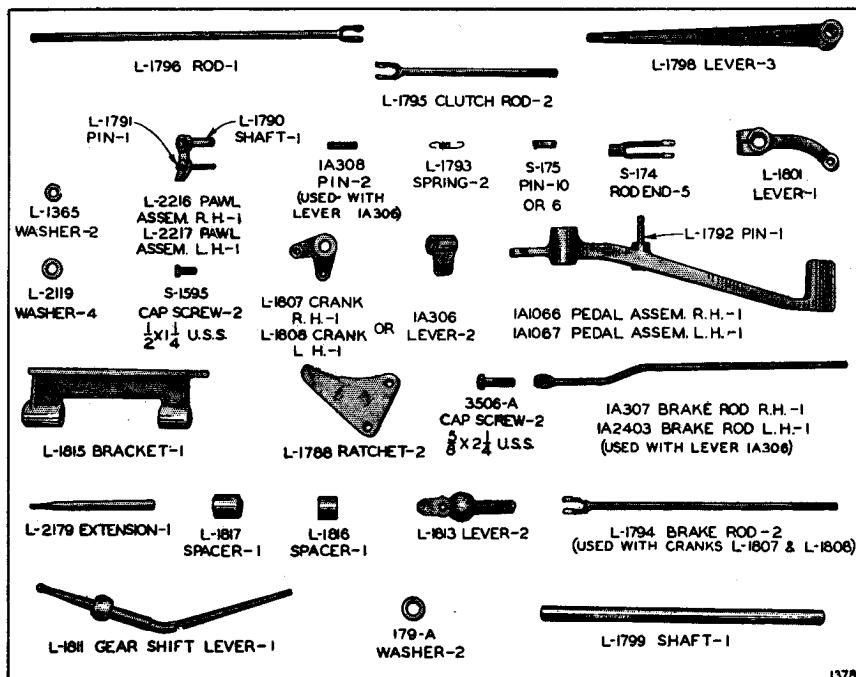

1378


CONTROL PARTS—REAR SEAT

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

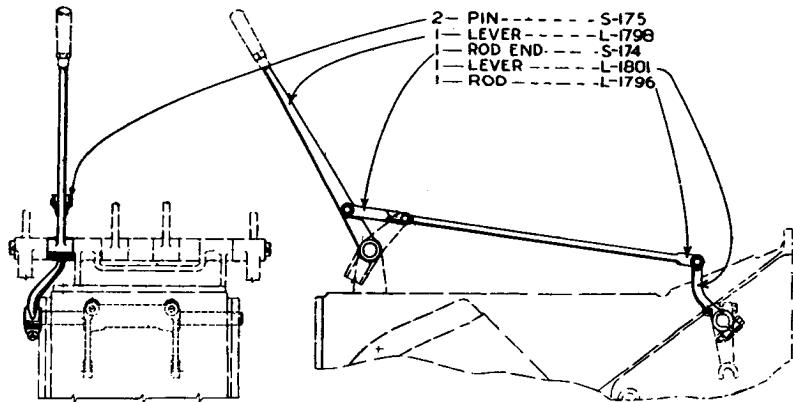

5429


FLYWHEEL CLUTCH CONTROL GROUP—REAR SEAT

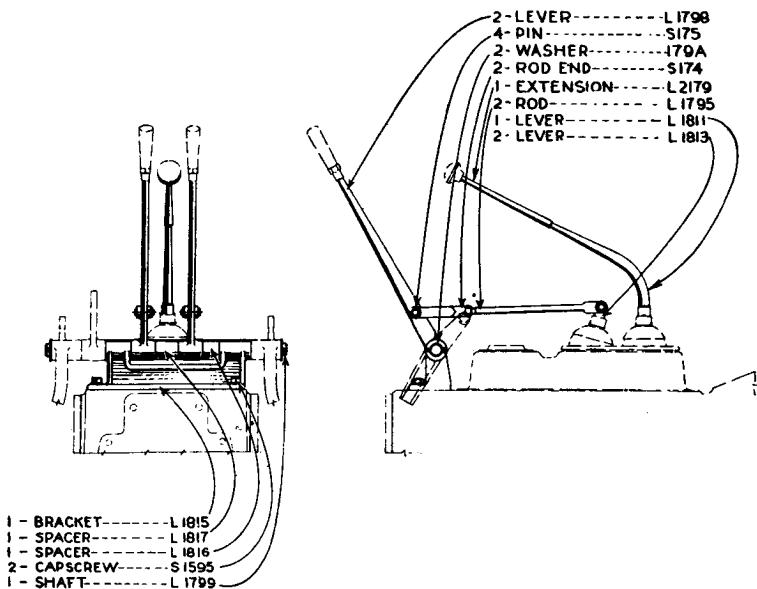

5430


GEAR SHIFT AND STEERING CLUTCH CONTROL GROUP—REAR SEAT

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

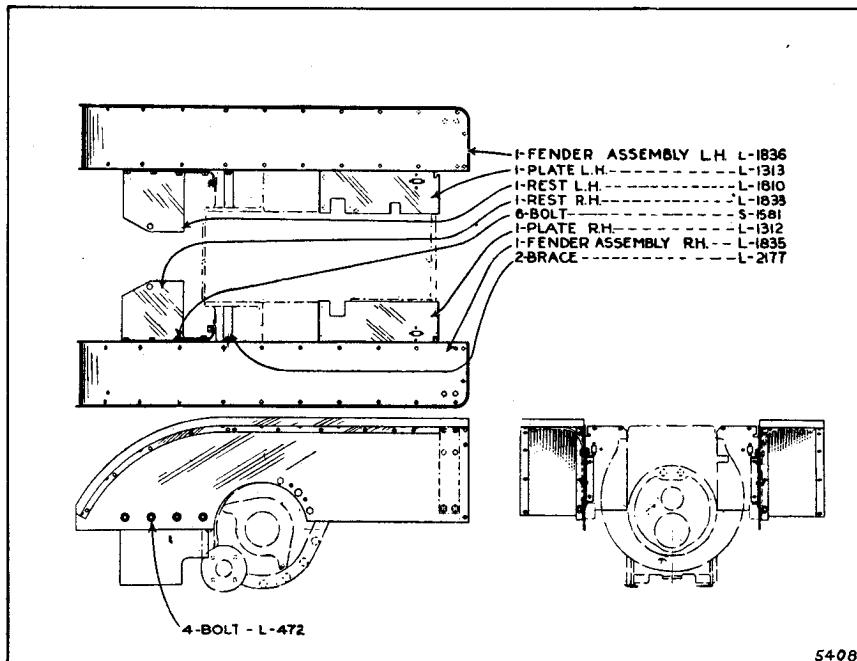

5408


FENDERS AND PLATFORM GROUP—REAR SEAT

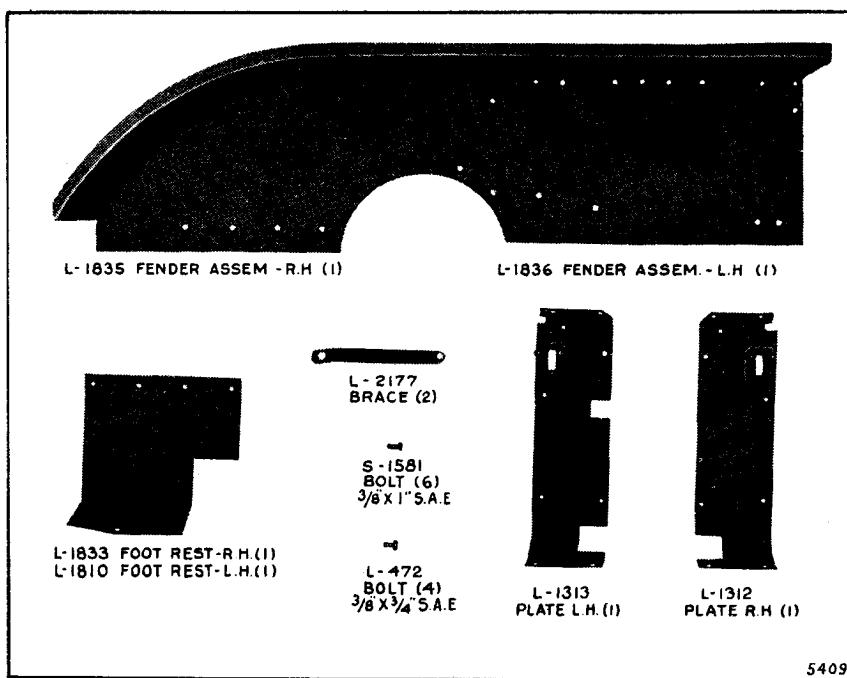

5409


FENDER AND PLATFORM PARTS—REAR SEAT

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

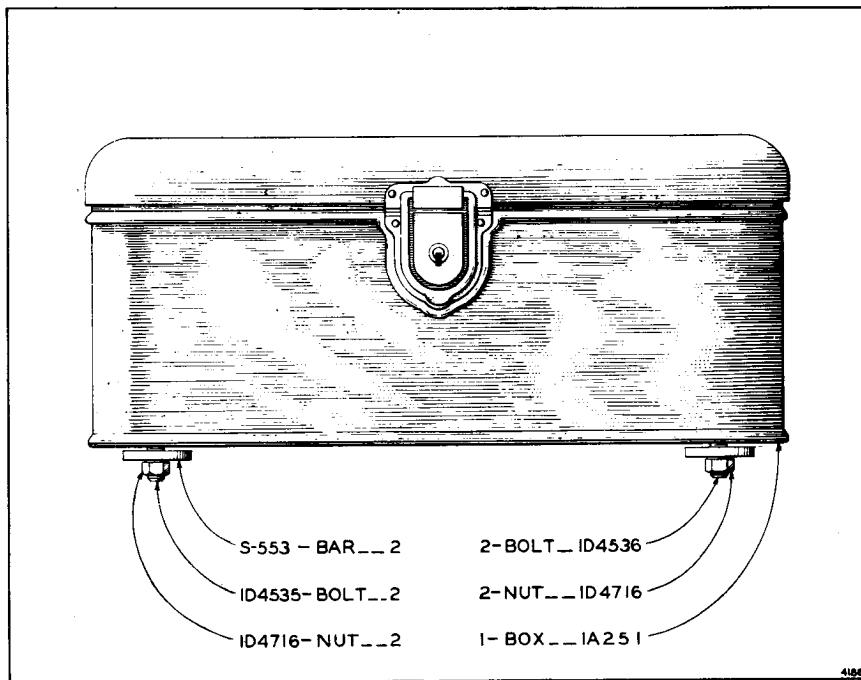

TOOL BOX GROUP—REAR SEAT

4164

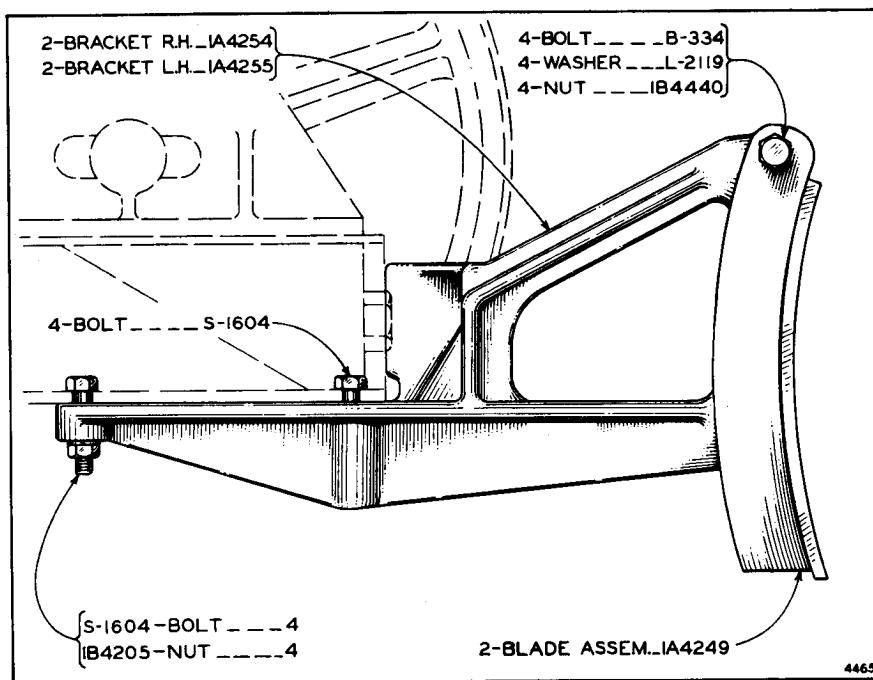


4465

2A473 CHECK BREAKER GROUP


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

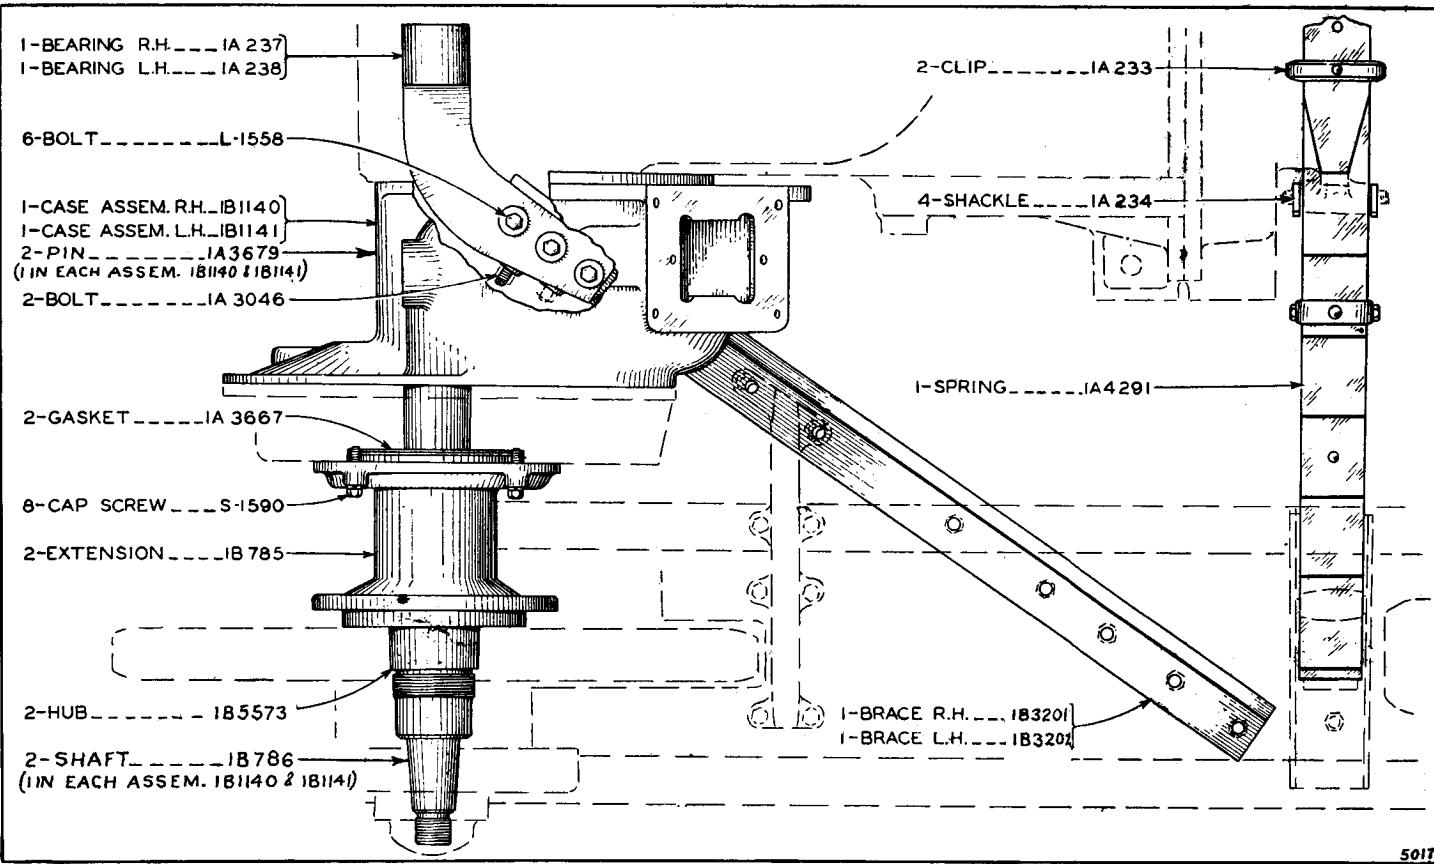


1B1108-55" GAUGE GROUP

5017

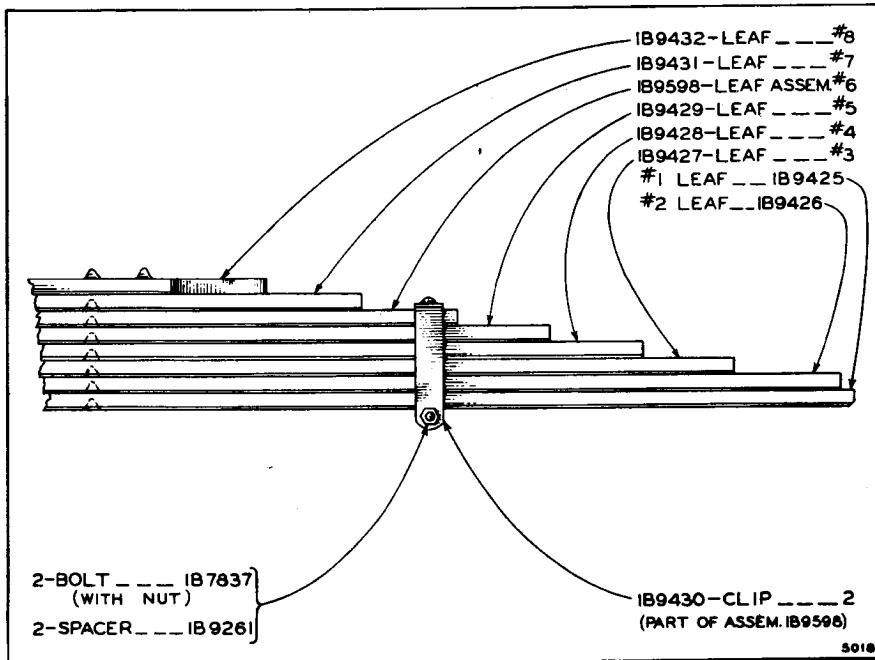


1A4291 SPRING (55" Gauge)

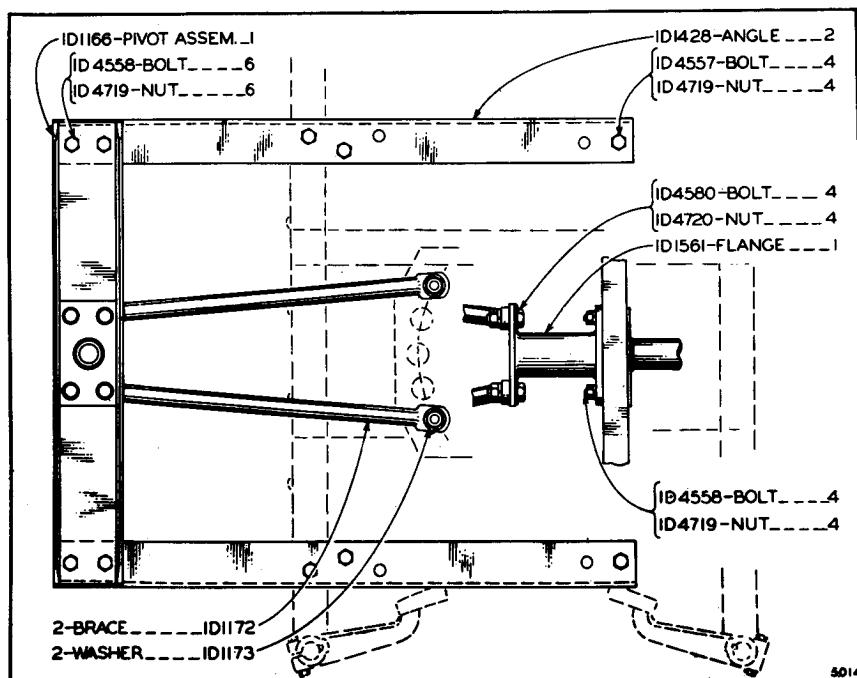


1B1095 TRAILER PATROL HAND CONTROL BRACKET GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

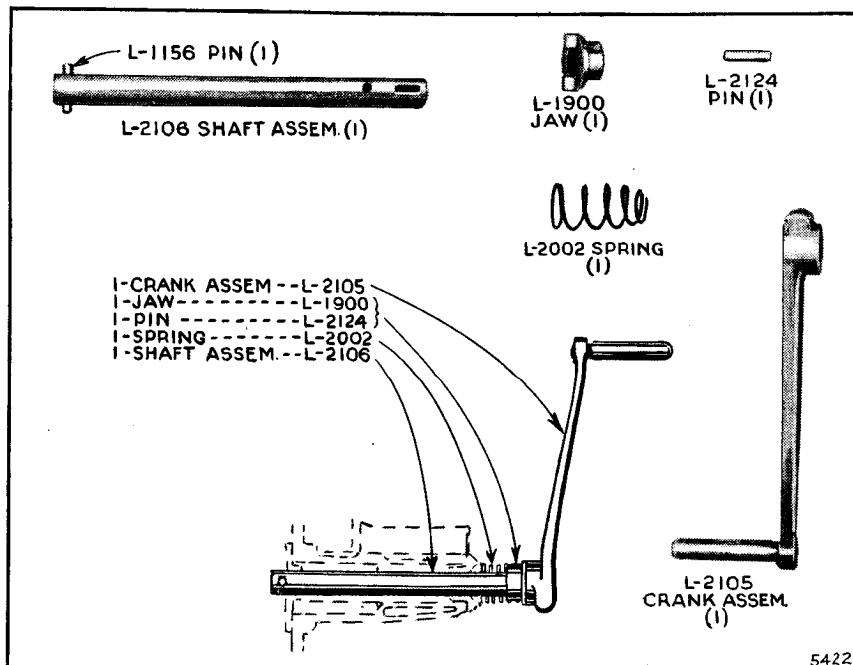

5422


L-2021-A DETACHABLE STARTING CRANK GROUP

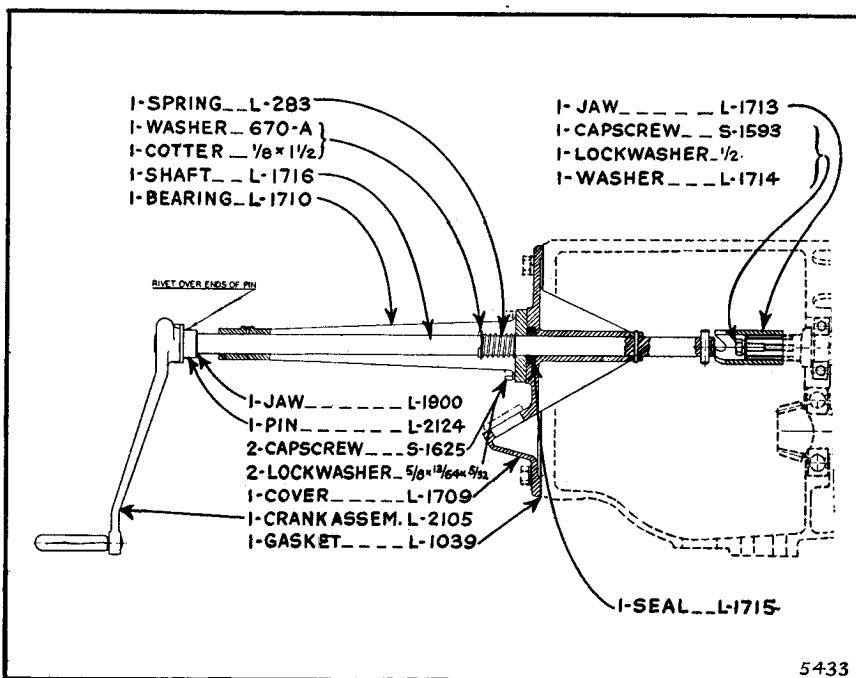


5433

L-2188-A REAR STARTING CRANK GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

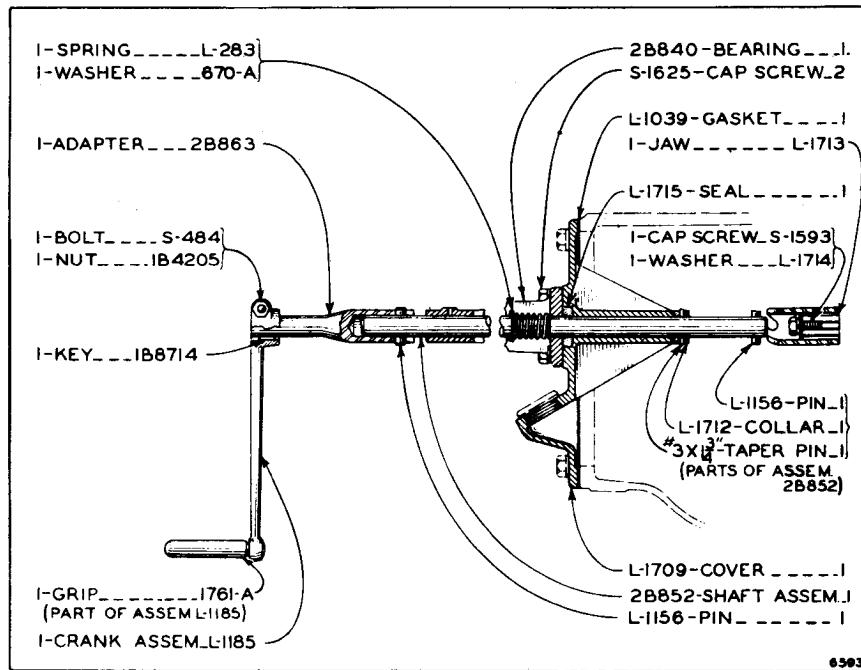


2B864 REAR STARTING CRANK GROUP

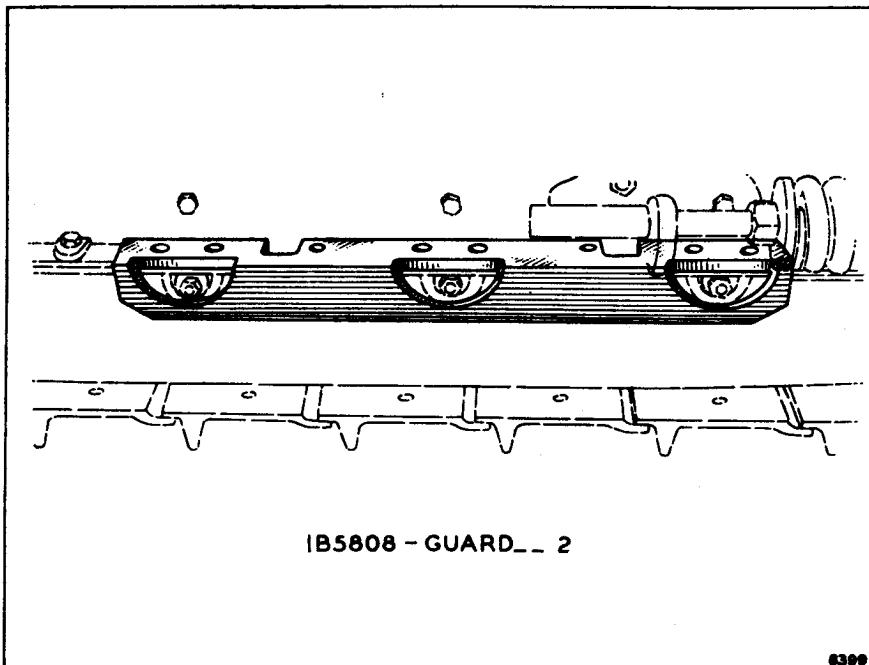


1B6261 TRACK ROLLER ALEMITE FITTING GUARD GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

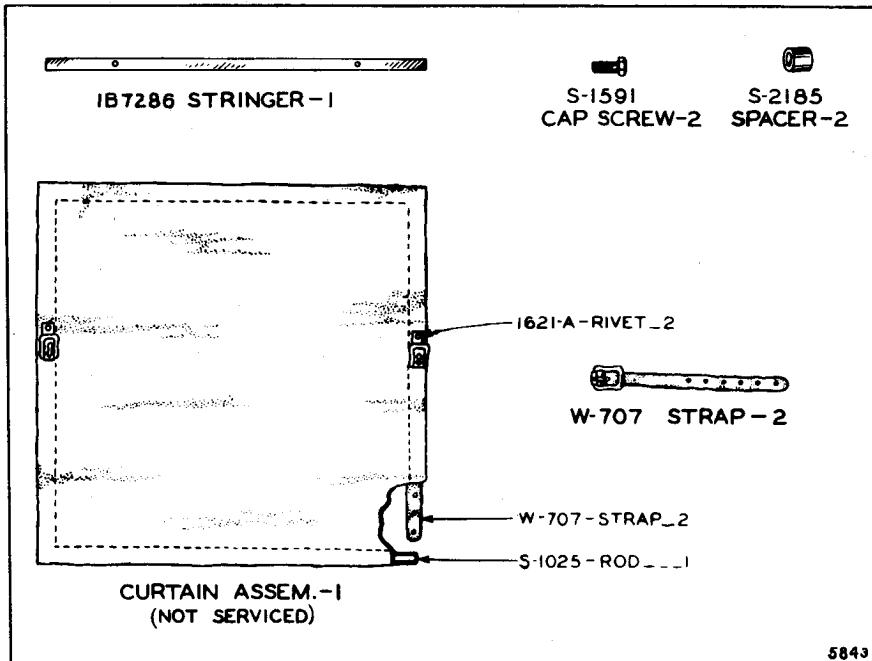


1B6818 RADIATOR CURTAIN GROUP

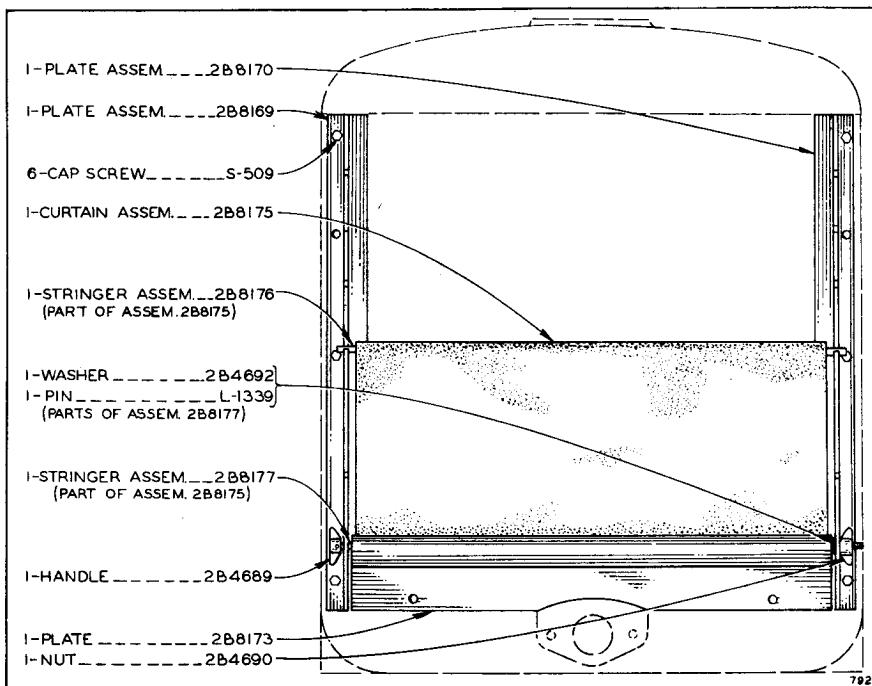

2B8174 RADIATOR CURTAIN GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

IB2286-DOOR ASSEM_2
L-1321-ROD -----
(PART OF ASSEM.IB2286)

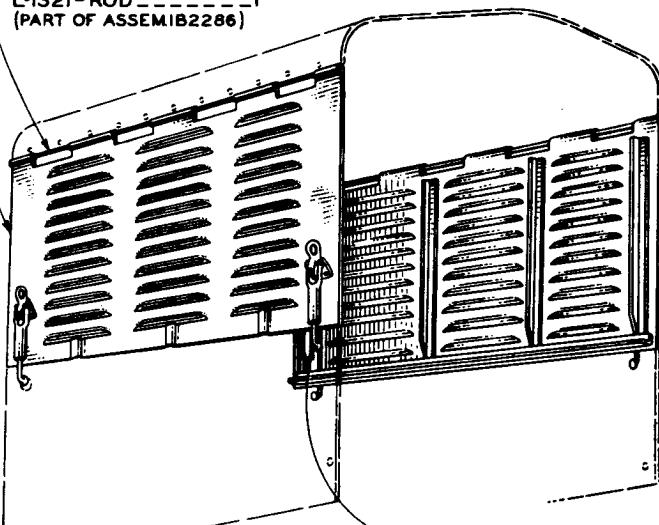


T-537-FASTENER--2
(PART OF ASSEM.IB2286)

6487

2B3885 Hood Door Group
(Machines 4F1 to 4F200 Inclusive)

I-HOOD ASSEM. --- 2B3931
I-ROD ----- L-1321
(PART OF ASSEM.IB2286)

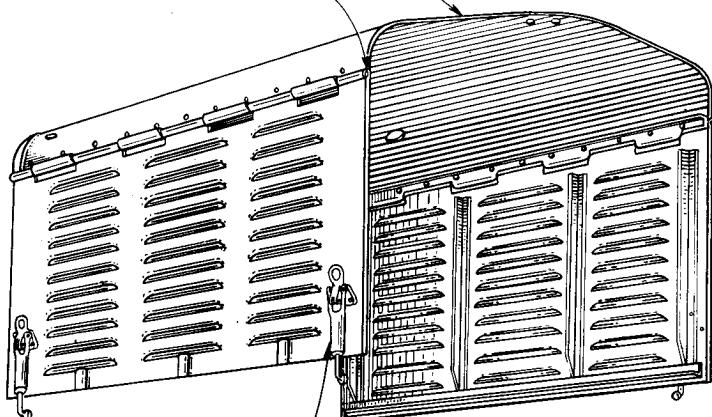


2-FASTENER ---- T-537
(PART OF ASSEM.IB2286)

IB2286-DOOR ASSEM_2

7069


2B3882 Hood Door Group
(Effective with Machine 4F201)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

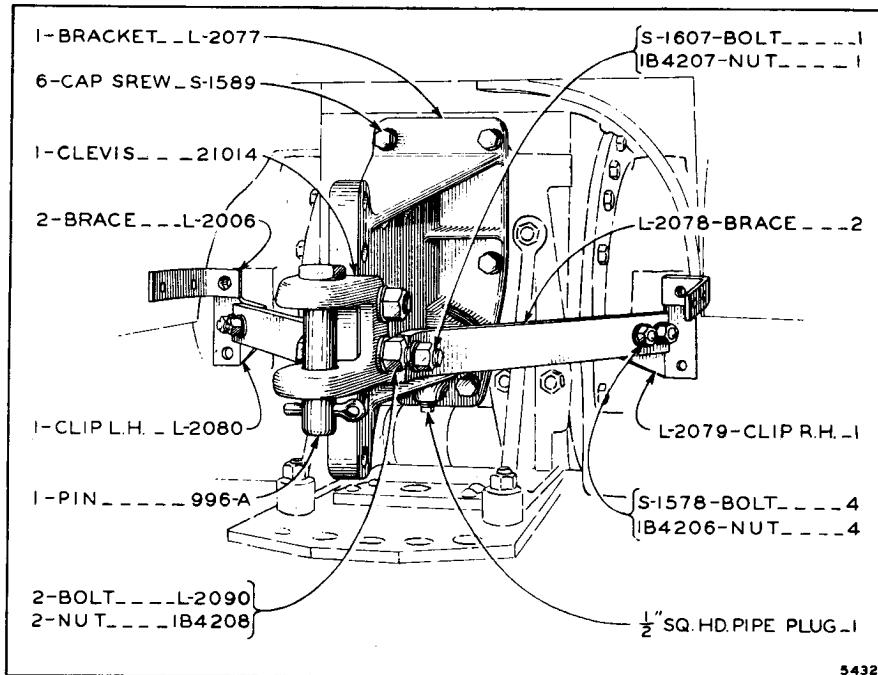

L-2121-A HIGH DRAWBAR GROUP


5432

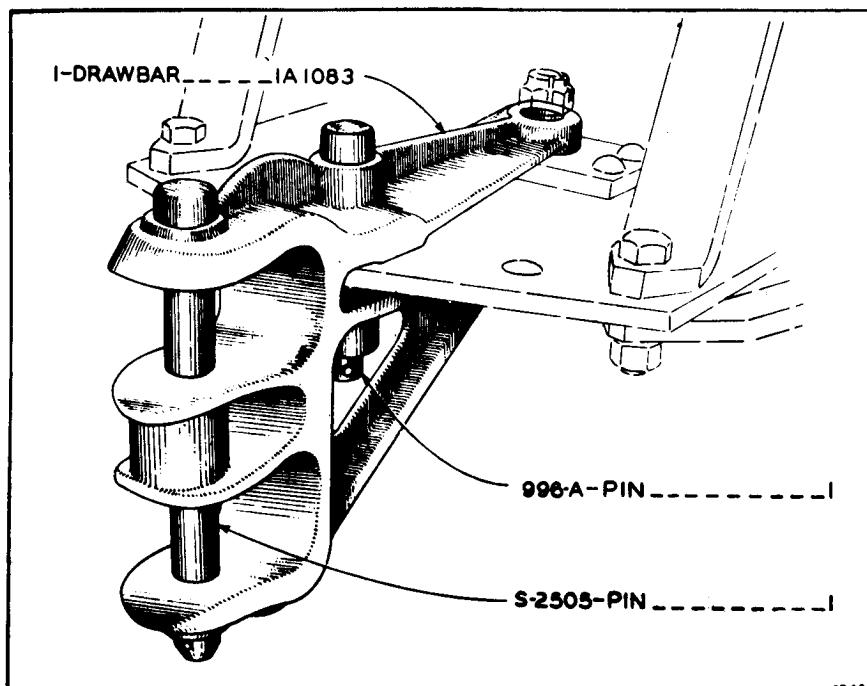

1A3453 UNIVERSAL DRAWBAR GROUP


5444

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

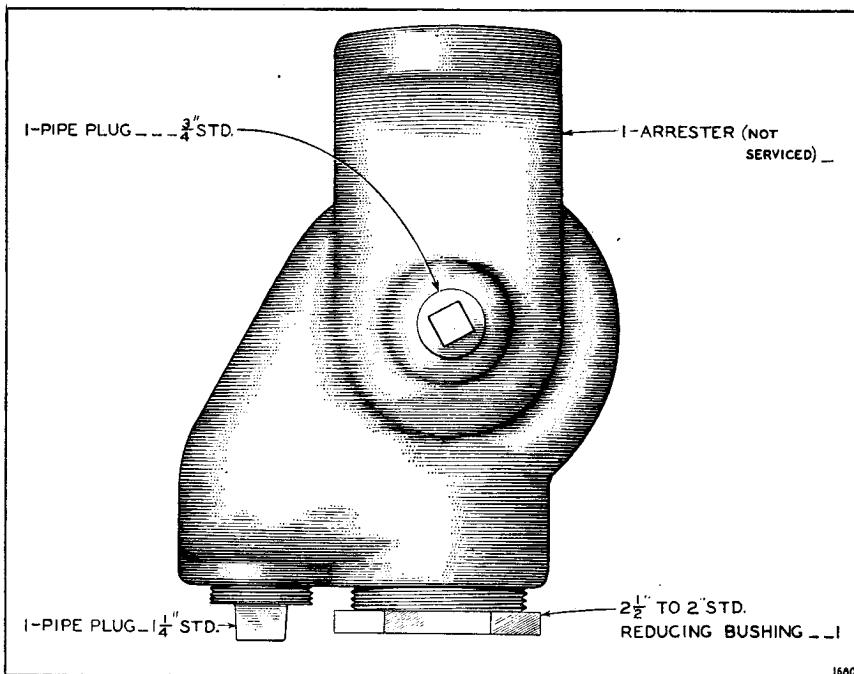

L-2322-A SPARK ARRESTOR GROUP

1660

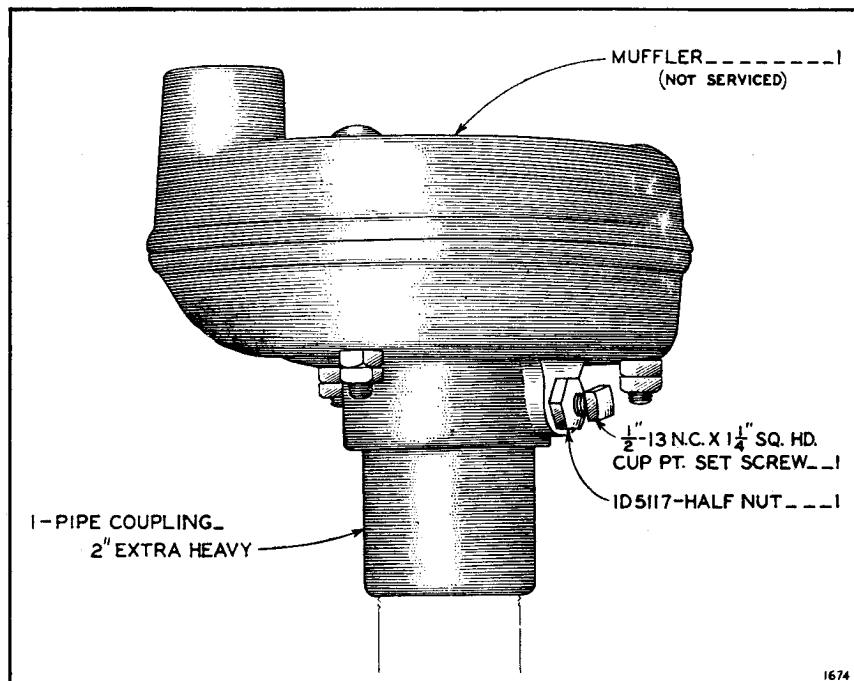


L-2326-A MUFFLER GROUP


1674

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

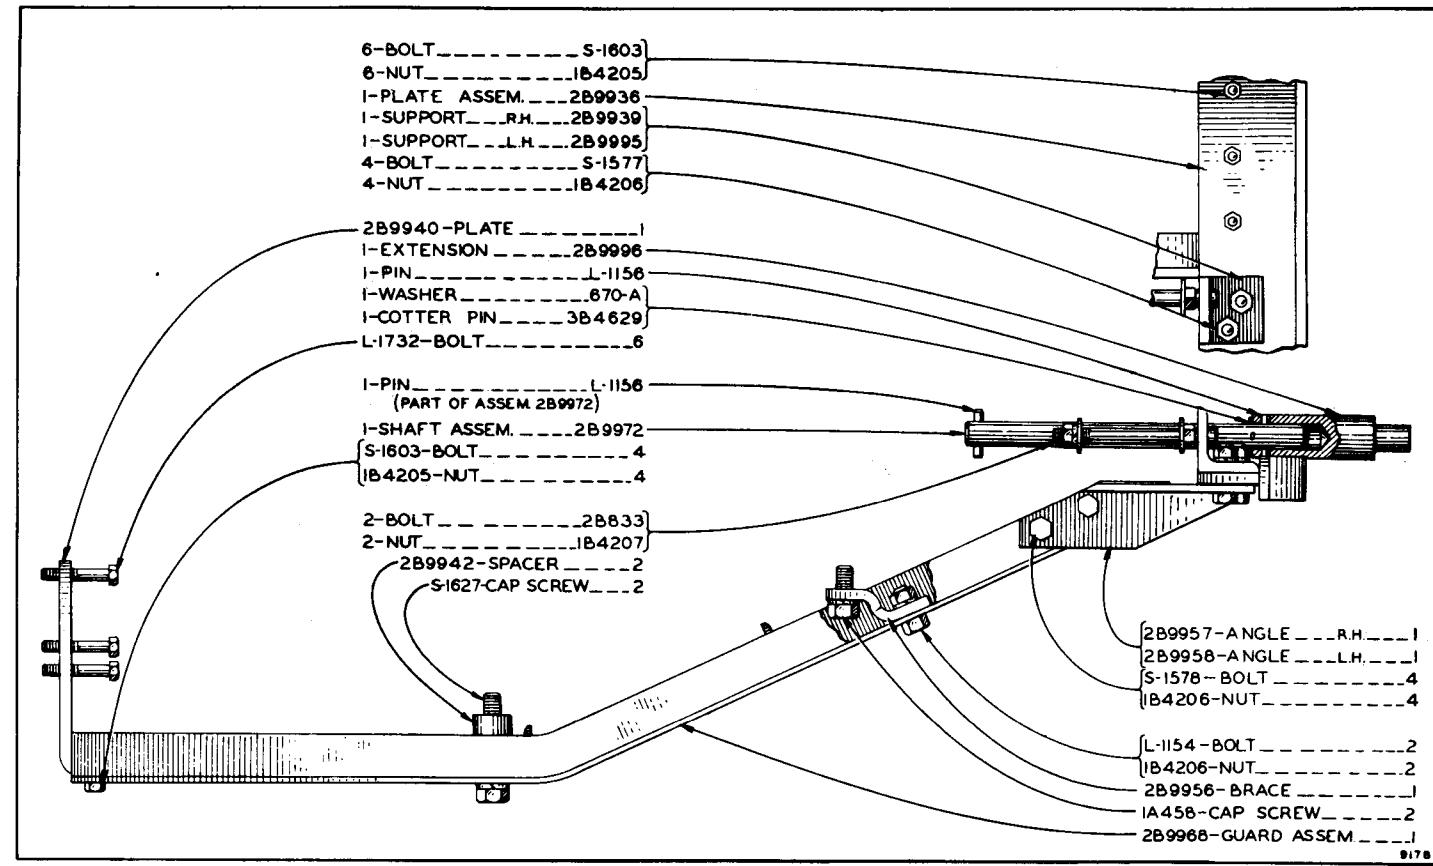

2B9896 FRONT BUMPER AND CRANKCASE GUARD GROUP

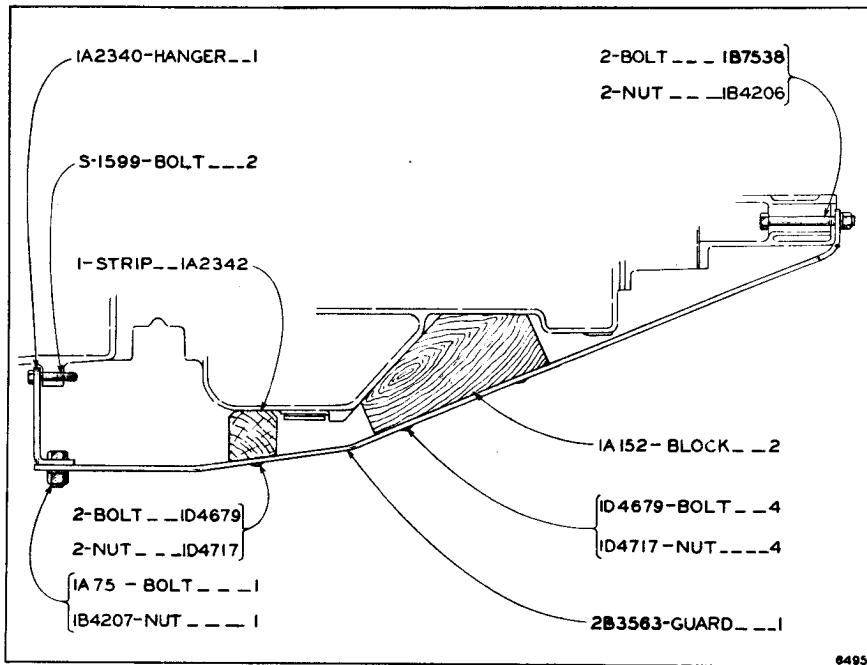


2B3552 CRANKCASE GUARD GROUP

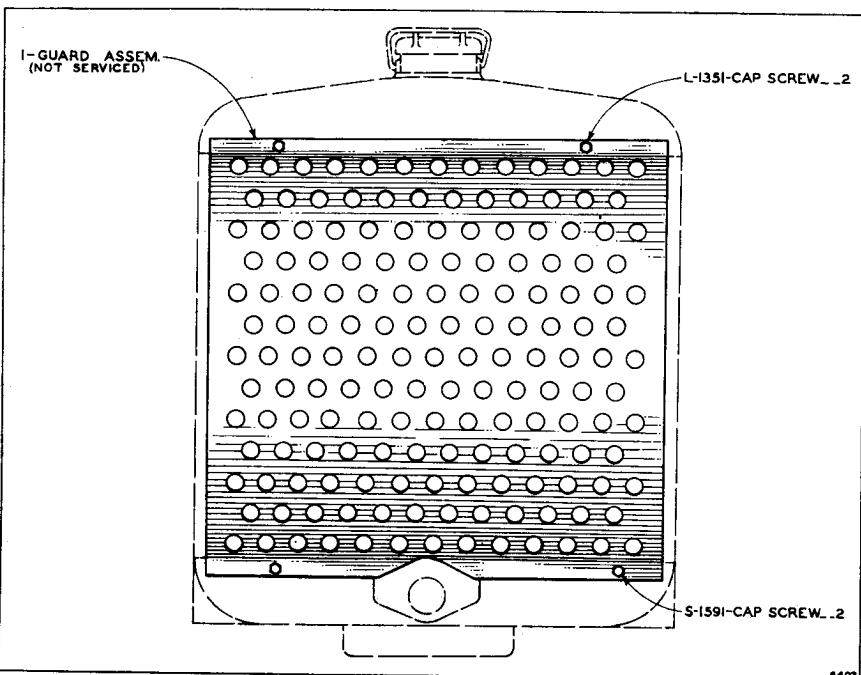


2B3210 RADIATOR GUARD GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

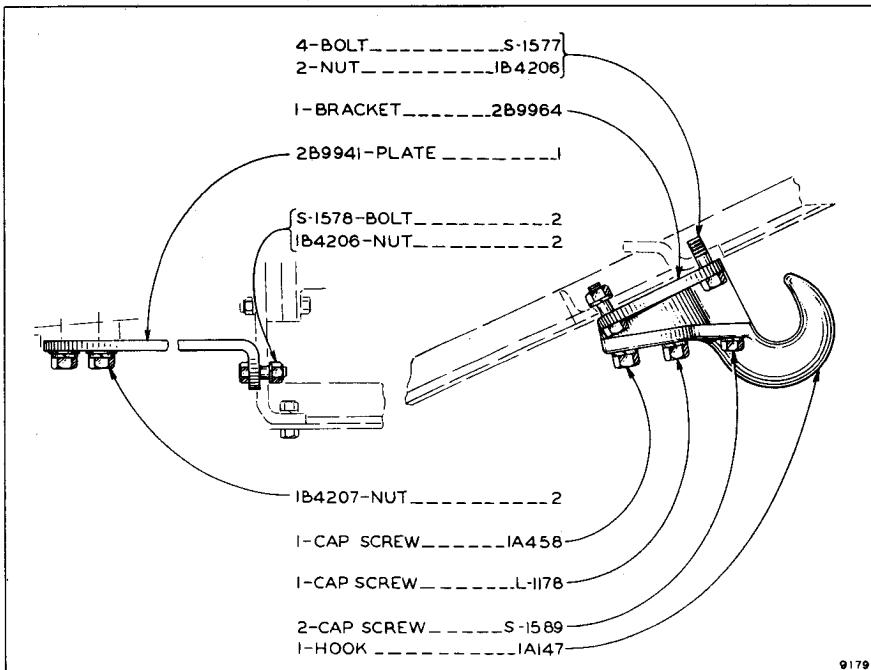


2B9923 FRONT PULL HOOK GROUP

Note: For use with 2B9896 Front Bumper and Crankcase Guard Group.

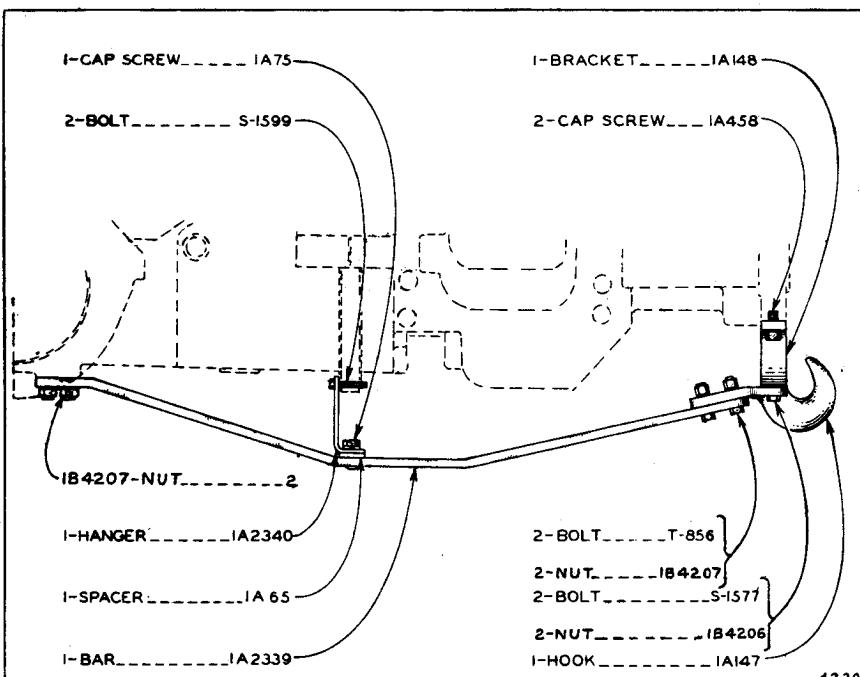


1A2369 FRONT PULL HOOK GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

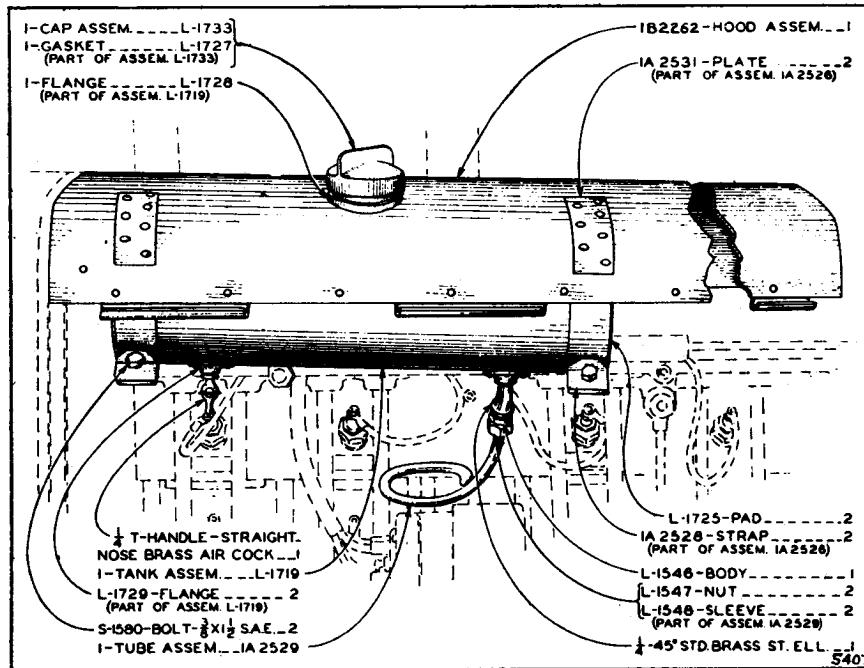

1B2264 AUXILIARY FUEL TANK GROUP

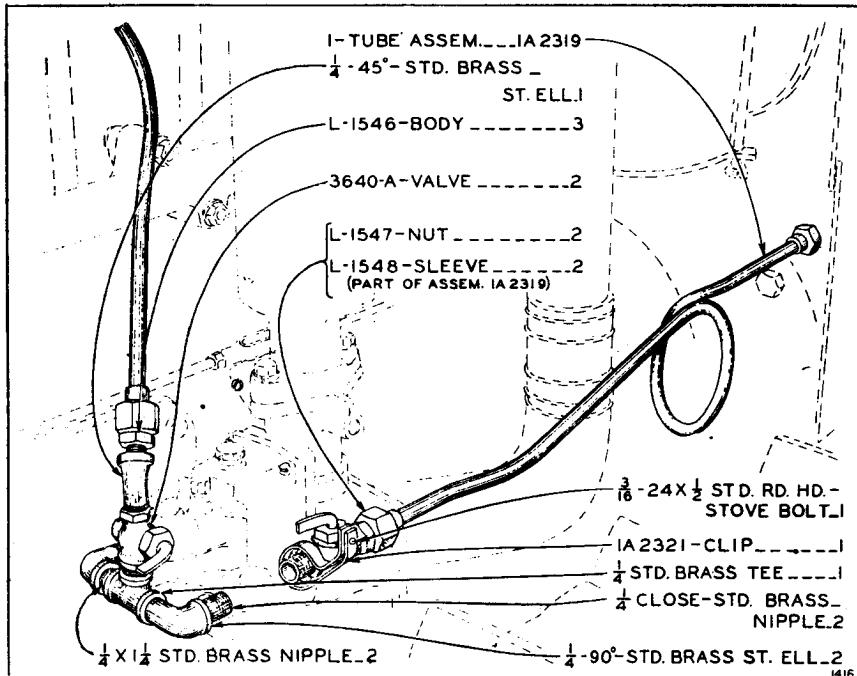

FUEL LINES

(Part of 1B2264 Auxiliary Fuel Tank Group)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

1-SPACER ----- 2A1159
 1-REGULATOR ----- 2B4470
 4-GASKET ----- L-1053
 1-HOUSING ----- 2B6803
 2-GASKET ----- L-735
 2-GASKET ----- 2A1175
 1-CURTAIN GROUP ----- 1B6818
 2-CLIP ----- 2B2404
 2B5714-INDICATOR -----
 1-TUBE ASSEM. ----- 2B6754
 *#8-32X $\frac{5}{8}$ " RD. HD. MACH. SCREW ----- 4
 *#8-32-HEX. NUT ----- 4
 2B5711-BRACKET ASSEM. -----
 1-PIPE ASSEM. ----- 2B6750
 2-CAP SCREW ----- 3373-A

7926


2B6730 TEMPERATURE CONTROL GROUP
(Gasoline to Tractor Fuel Changeover)

1-RETAINER ----- 2B5585
 4-NUT ----- 1B4201
 1-COVER ----- 2B5583
 1-REGULATOR ----- 2B7937
 4-STUD ----- L-1404
 (PART OF ASSEM. 2B8063)
 1-GASKET ----- 2B5584
 1-HOUSING ASSEM. ----- 2B8063
 2-GASKET ----- L-735
 2-GASKET ----- 2A1175
 1-GASKET ----- 2B5721
 2B5711-BRACKET ASSEM. -----
 2B5714-INDICATOR -----
 *#8-32X $\frac{5}{8}$ " RD. HD. MACH. SCREW ----- 4
 *#8-32-HEX. NUT ----- 4
 2-CLIP ----- 2B2404
 4-GASKET ----- L-1053
 1-PIPE ASSEM. ----- 2B6750
 1-TUBE ASSEM. ----- 2B6754
 1-CURTAIN GROUP ----- 2B8174
 2-CAP SCREW ----- 3373-A

7927


2B8144 TEMPERATURE CONTROL GROUP
(Gasoline to Tractor Fuel Changeover)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

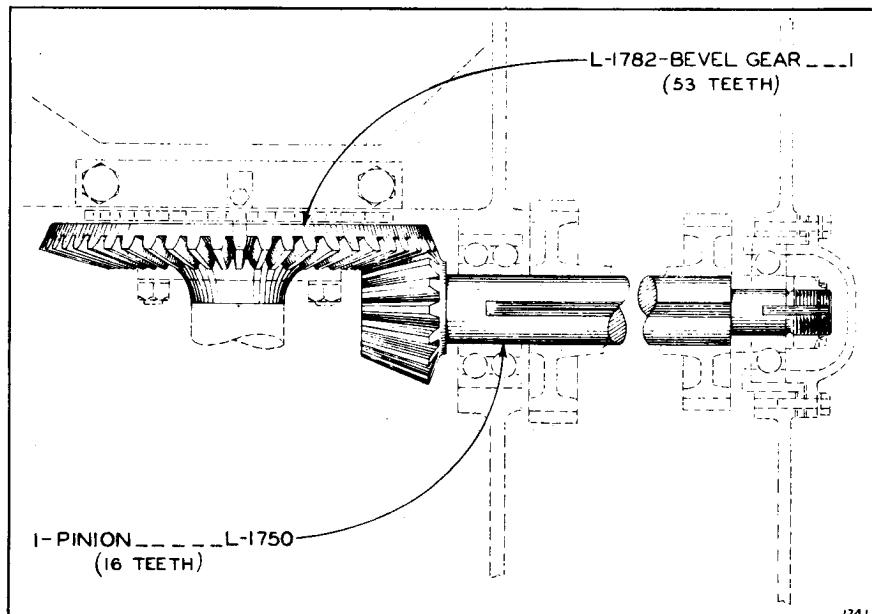

L-2323-A SPECIAL BEVEL GEAR GROUP


Note: When used with Standard Transmission and Final Drive Gears, this group provides the following speeds: Low 2.22 M.P.H., Intermediate 3.19 M.P.H., High 4.48 M.P.H. and Reverse 2.44 M.P.H.

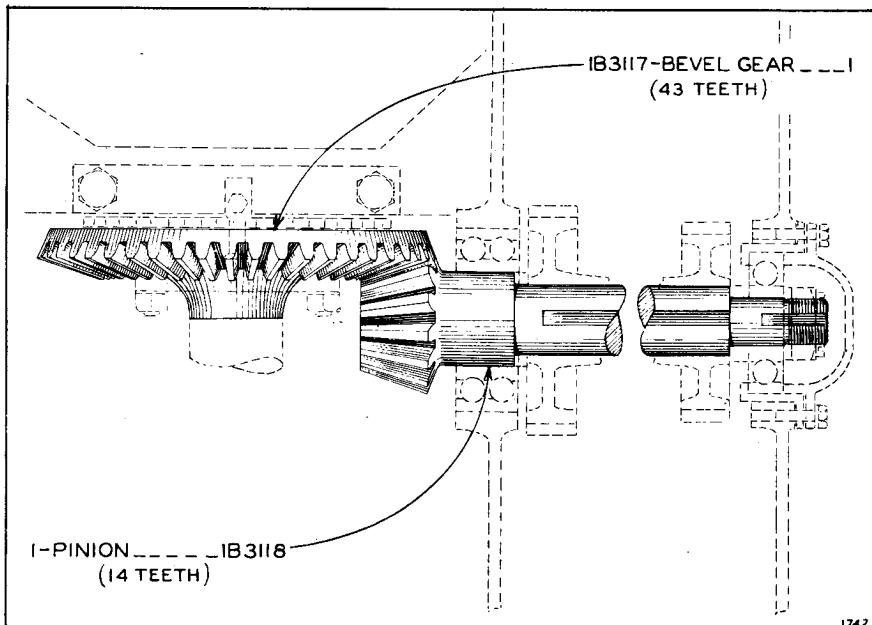


IB3066 SPECIAL BEVEL GEAR GROUP

Note: When used with Standard Transmission and Final Drive Gears this group provides the following speeds: Low 2.39 M.P.H., Intermediate 3.44 M.P.H., High 4.83 M.P.H. and Reverse 2.63 M.P.H.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

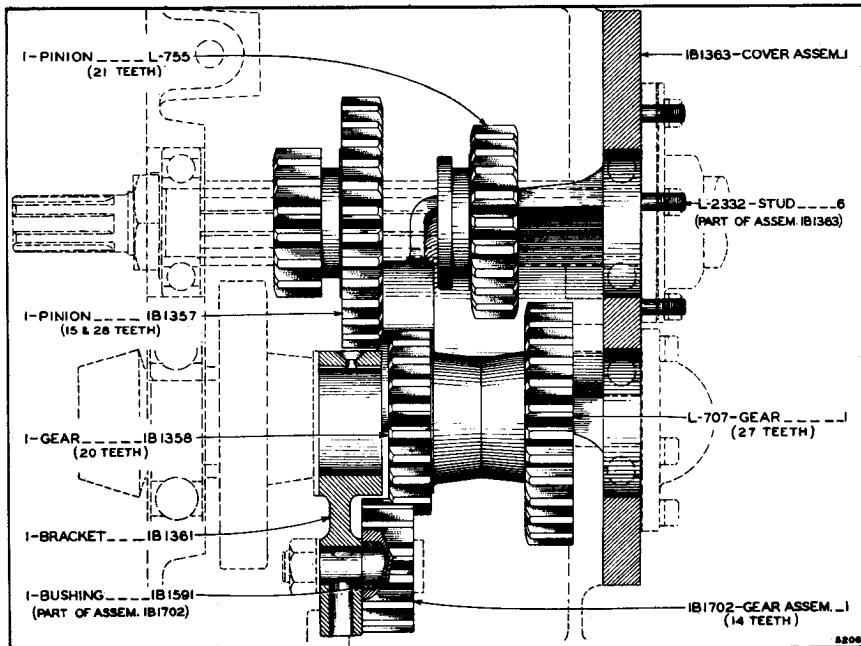
**1B1362 HIGH SPEED TRANSMISSION GEAR GROUP**

Note: When used with Standard Bevel Gear and Final Drive Gears this group provides the following speeds: Low 1.80 M.P.H., Intermediate 3.07 M.P.H., High 5.53 M.P.H. and Reverse 2.35 M.P.H.

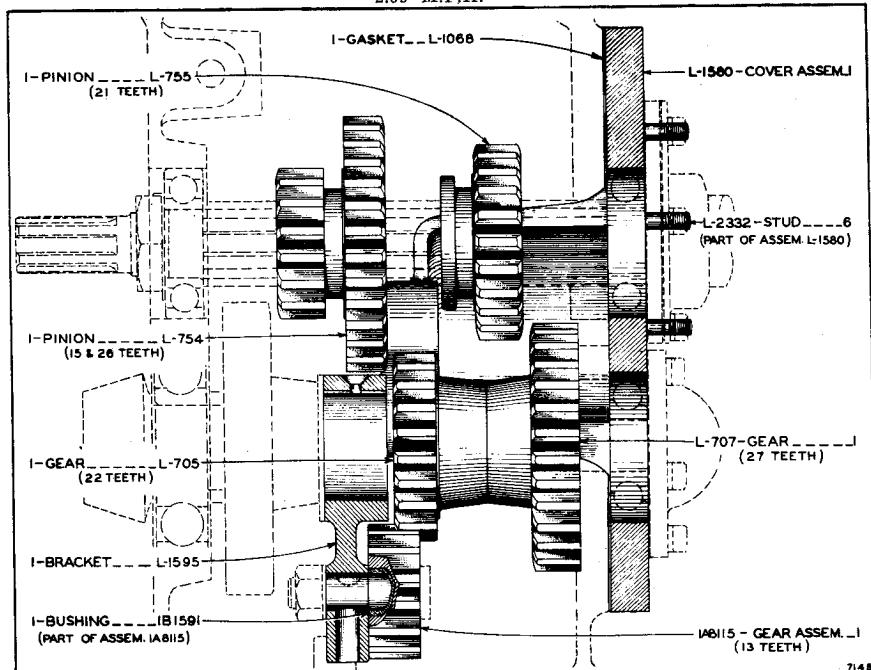**2B4322 SPECIAL INTERMEDIATE AND HIGH GEAR GROUP**


Note: When used with Standard Bevel and Final Drive Gears this group provides an Intermediate Speed of 3.1 M.P.H. and a High Speed of 4.7 M.P.H.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

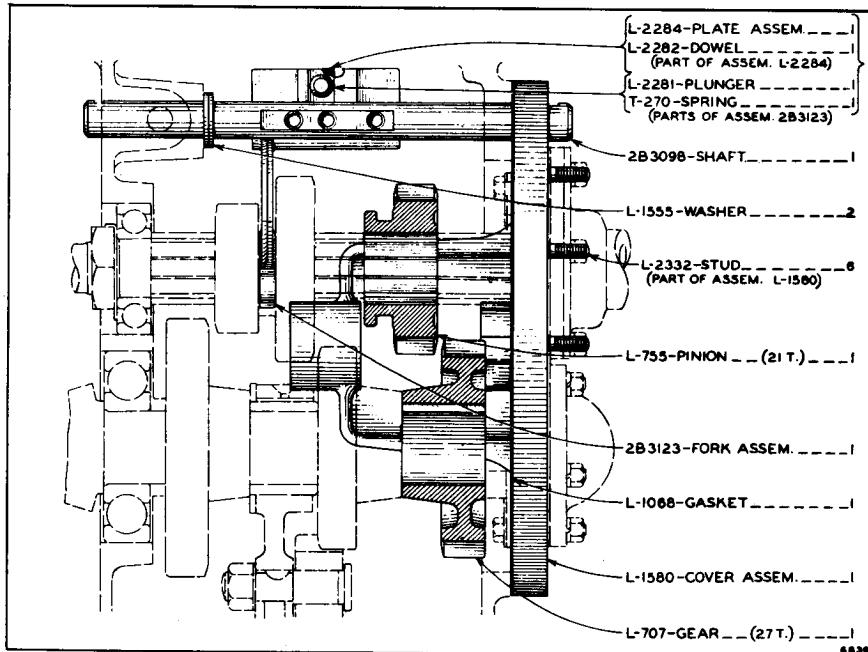

1A712 SPECIAL INTERMEDIATE GEAR GROUP


Note: When used with Standard Bevel and Final Drive Gears this group provides an Intermediate Speed of 3.1 M.P.H. and a Reverse Speed of 2.3 M.P.H.

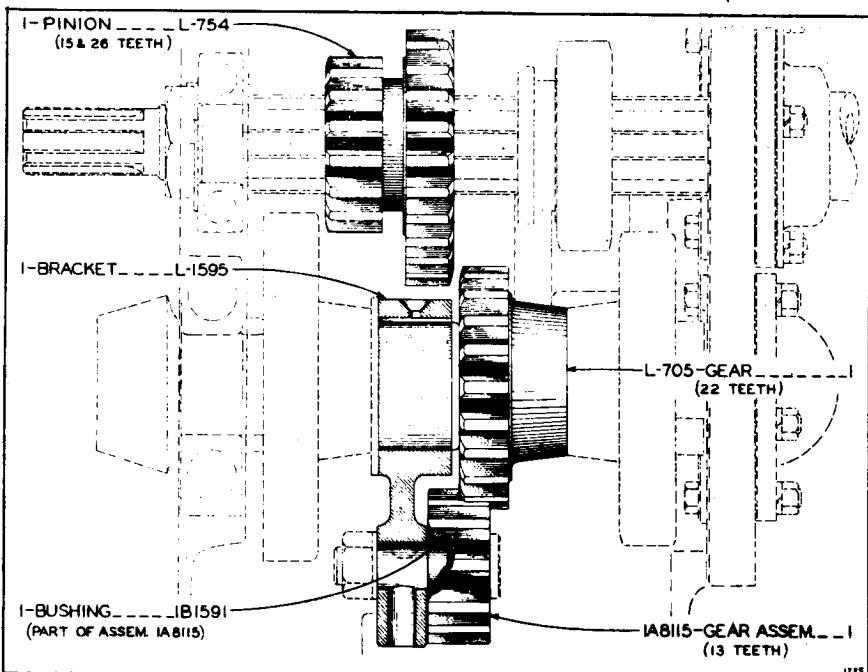


L-2325-A SPECIAL HIGH GEAR GROUP

Note: When used with Standard Bevel and Final Drive Gears this group provides a High Speed of 4.7 M.P.H.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

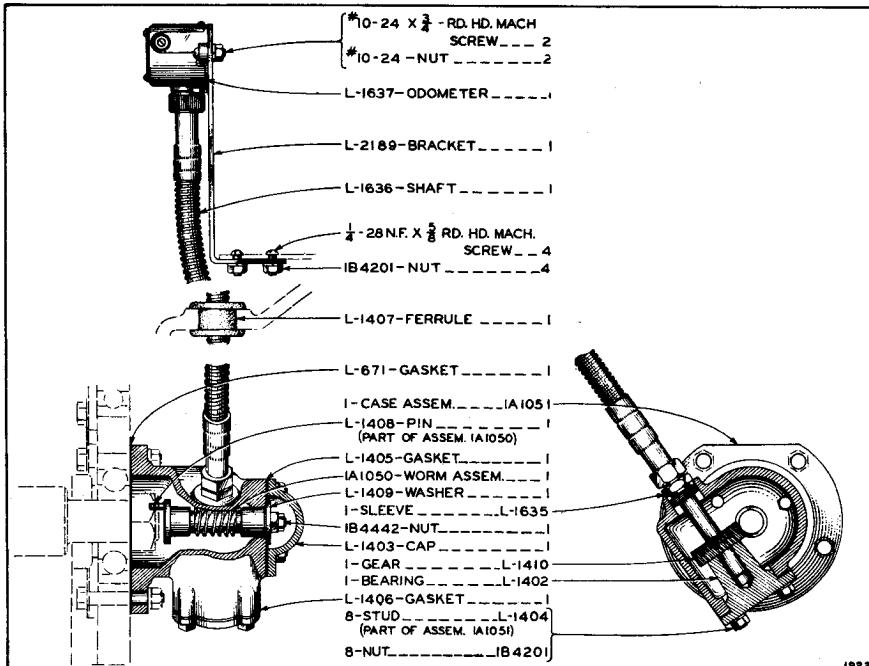


L-1412-A ODOMETER GROUP (Miles)

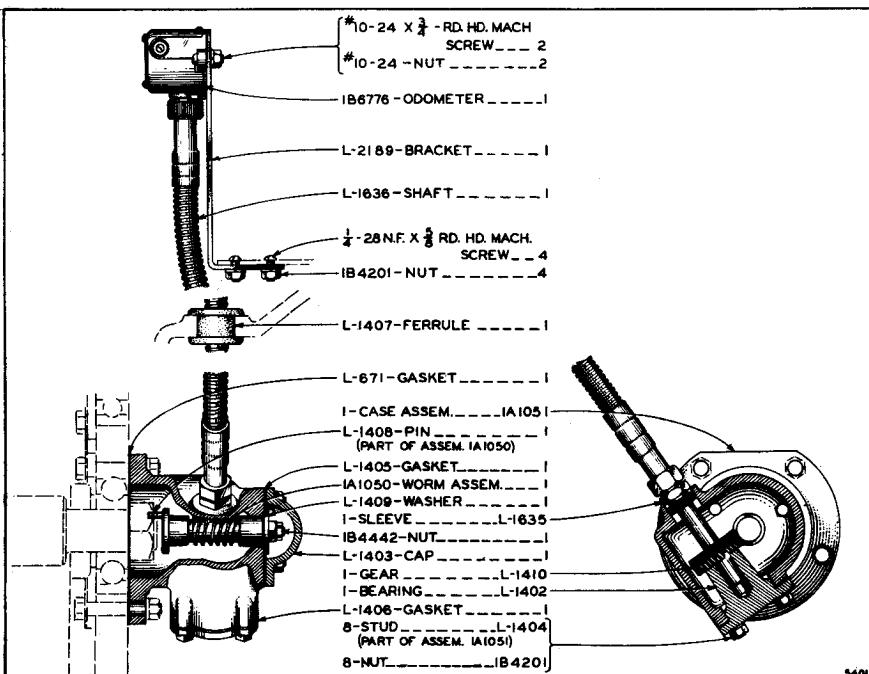


1B6772 ODOMETER GROUP (Kilometers)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


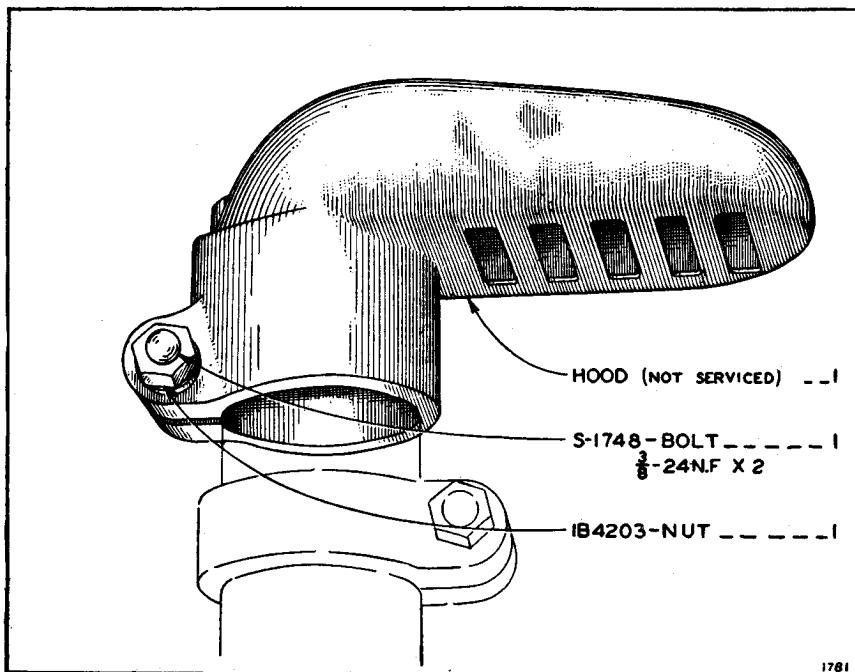


L-2321-A AIR CLEANER INLET PIPE HOOD GROUP

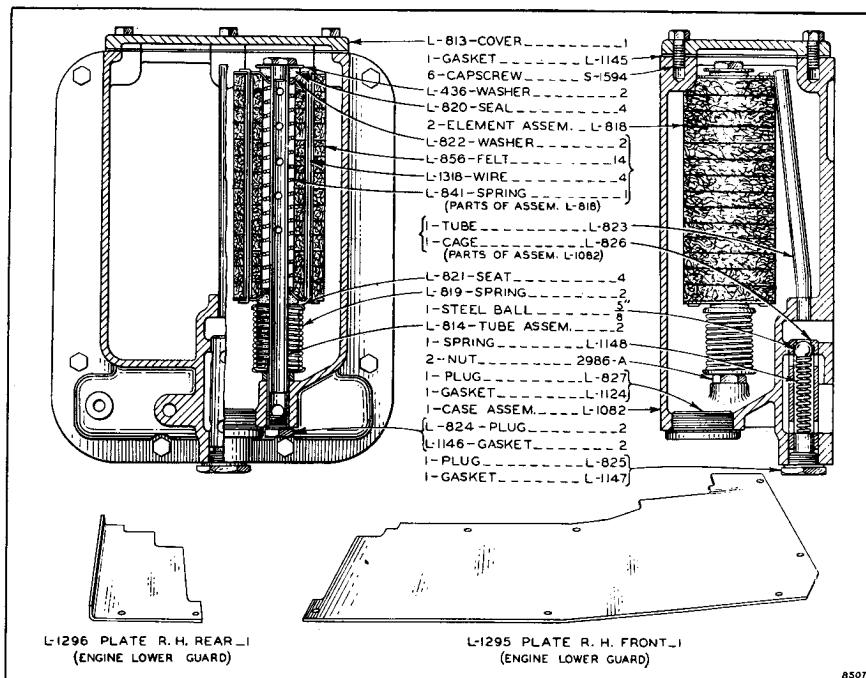


1B1565 OIL FILTER GROUP


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

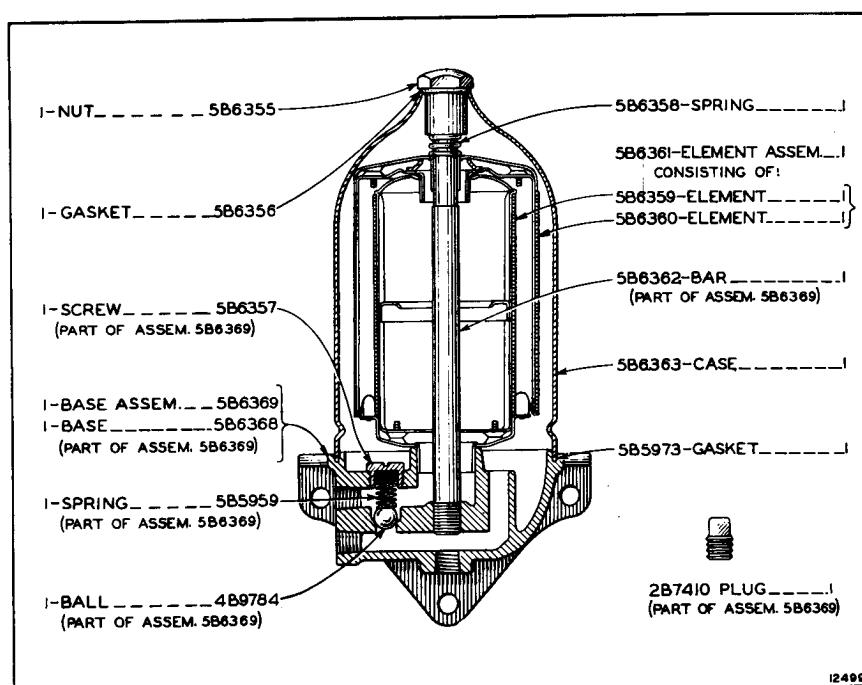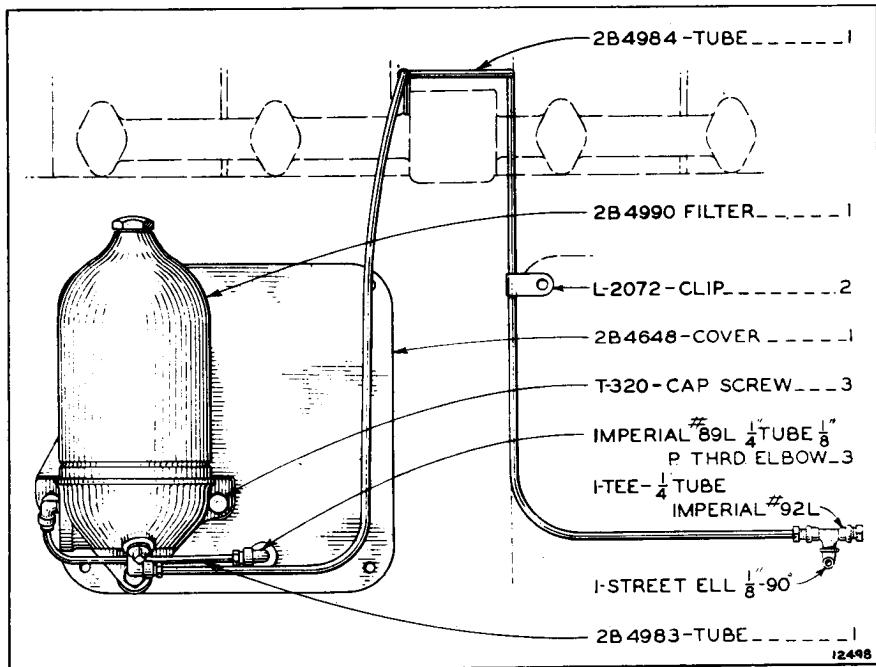

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

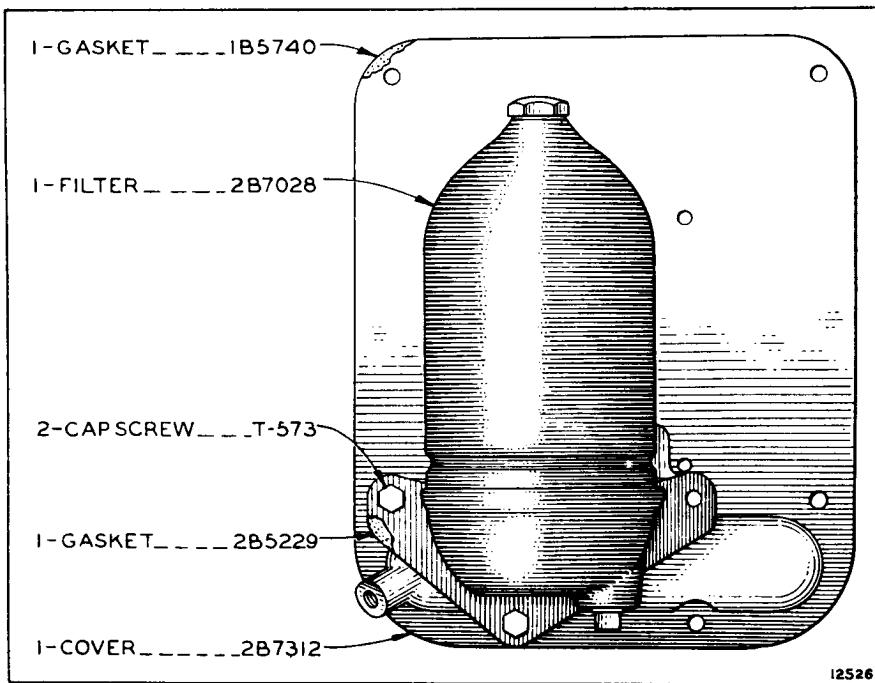


2B6148 OIL FILTER GROUP

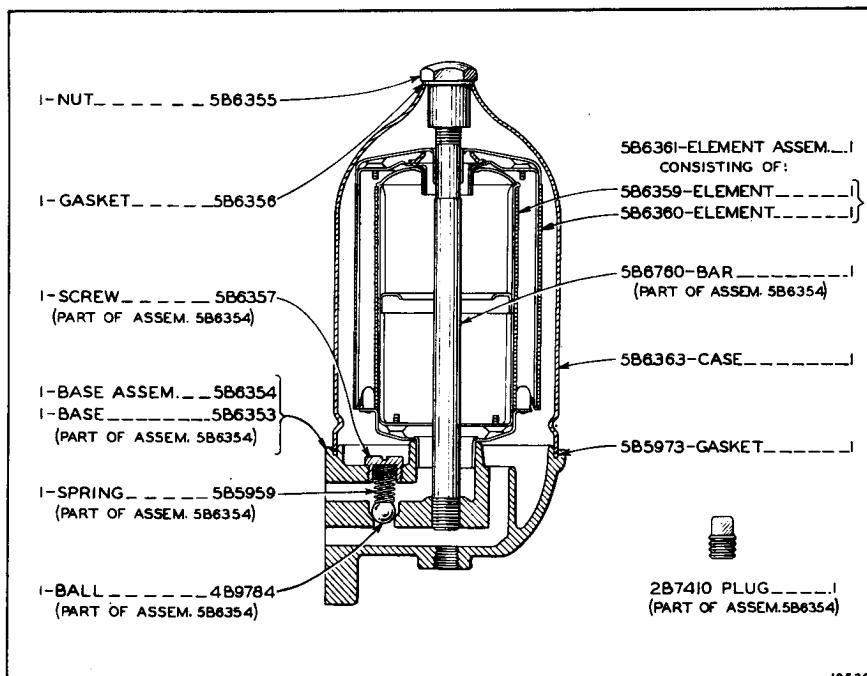

2B7028 OIL FILTER

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

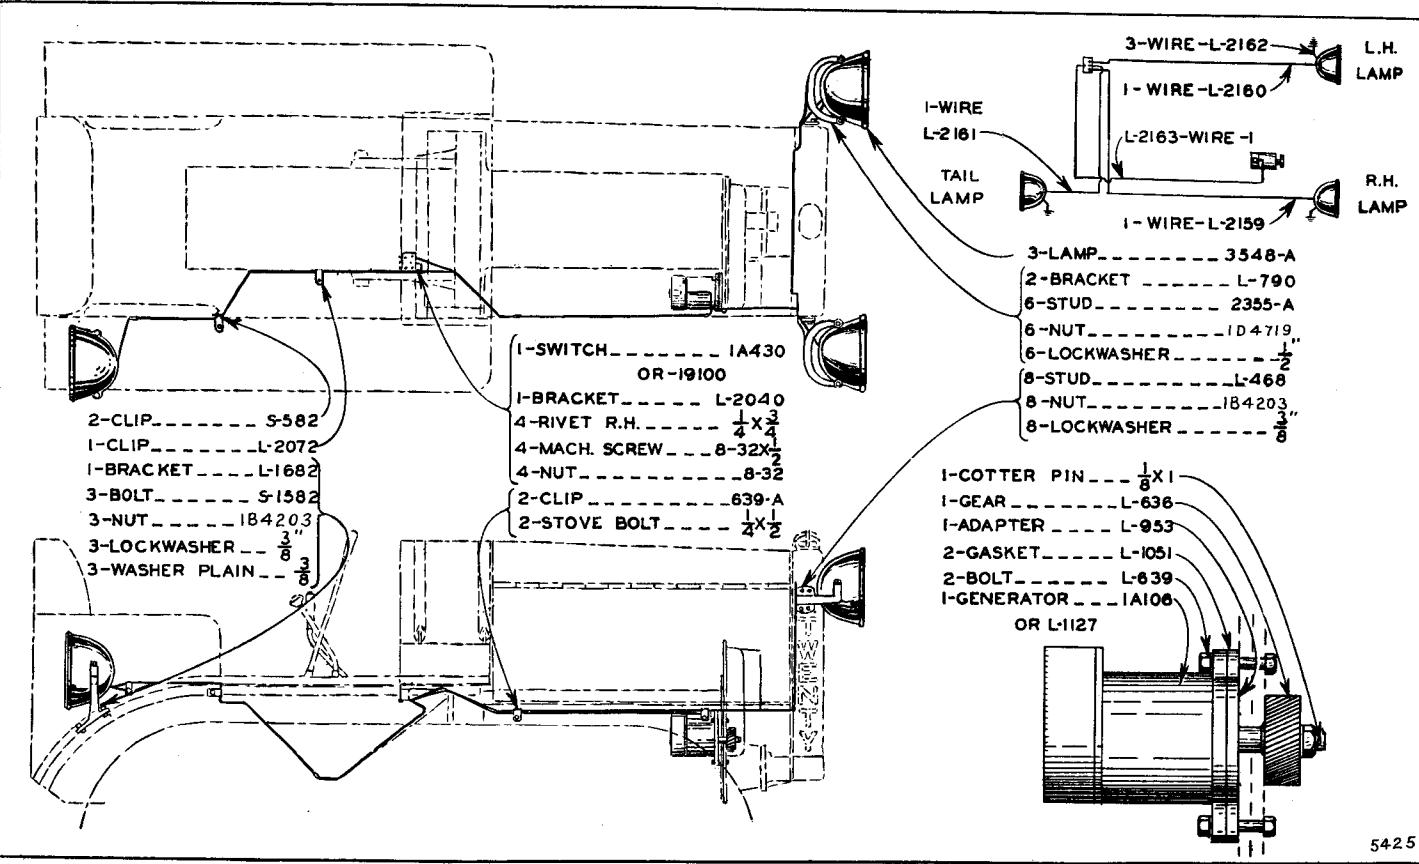

"CATERPILLAR" TWENTY-EIGHT TRACTOR


5425

LIGHTING SYSTEM GROUP


(Without Battery—For use without Cab)

Note: Only separate parts serviced. When complete group is wanted order L-2041-A.


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

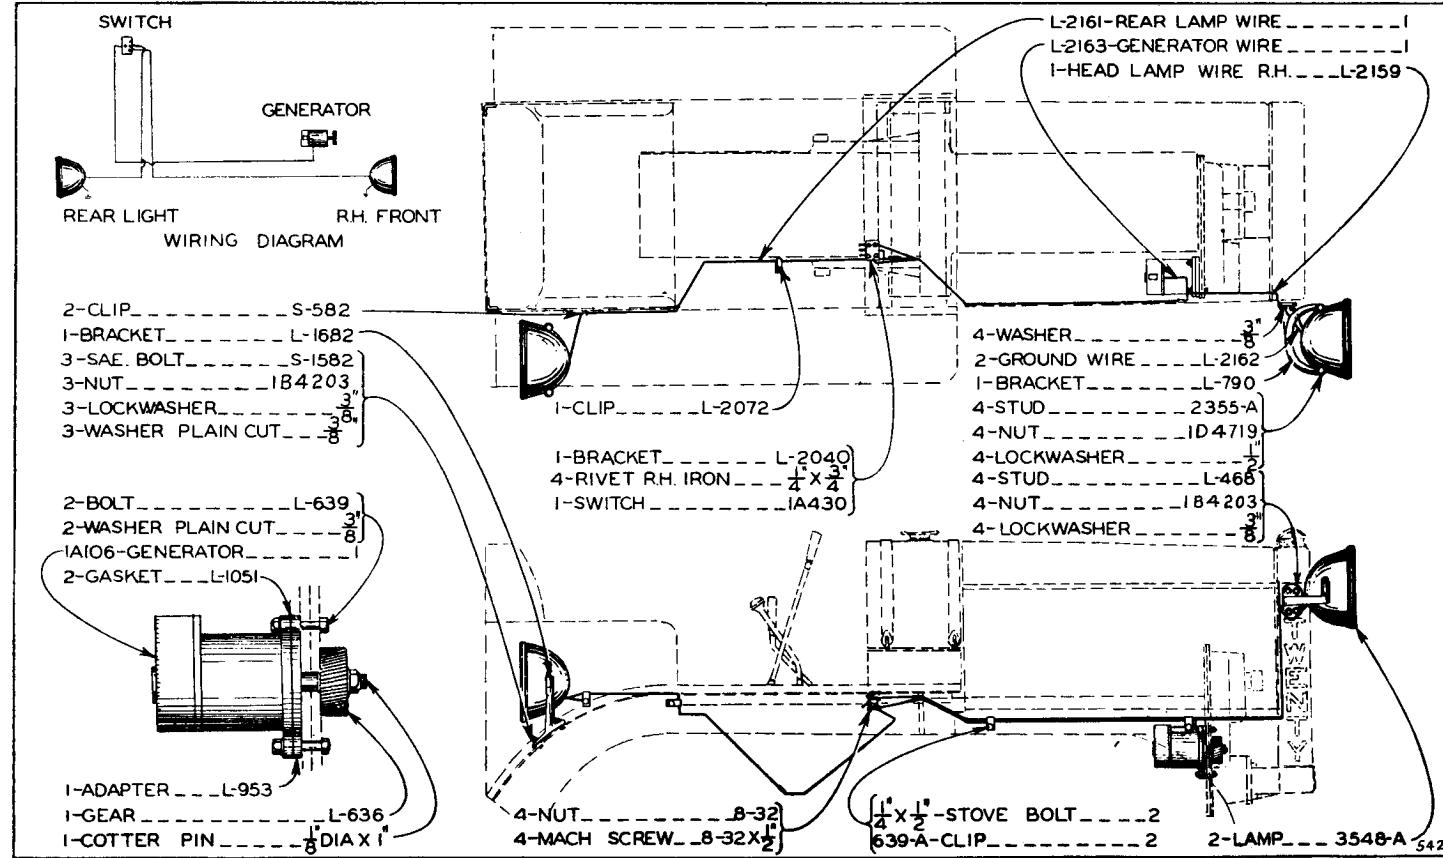

L-2041-A LIGHTING SYSTEM GROUP
 (Without Battery—For use without Cab)

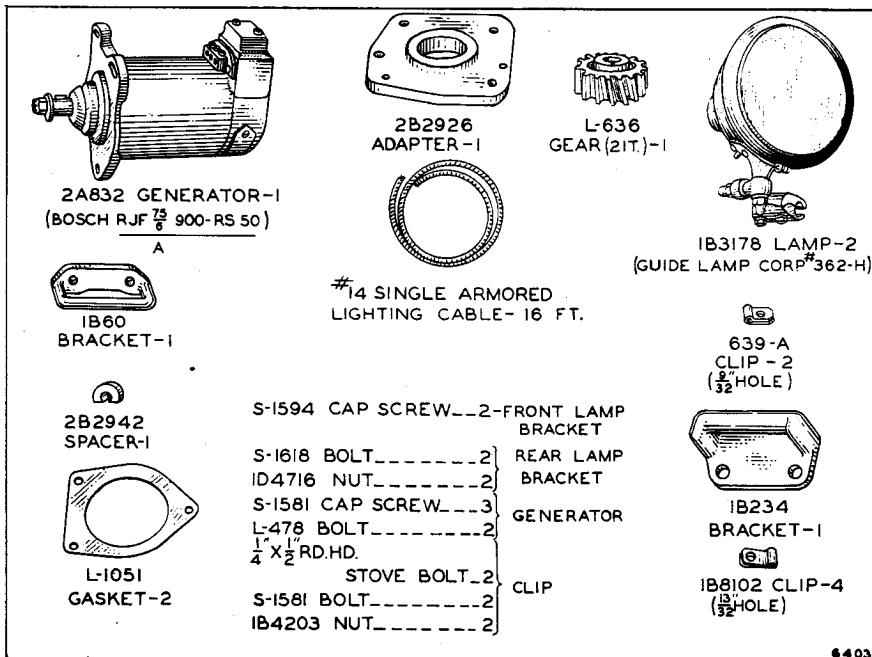

2B2147 LIGHTING SYSTEM GROUP
(Without Battery—For use without Cab)

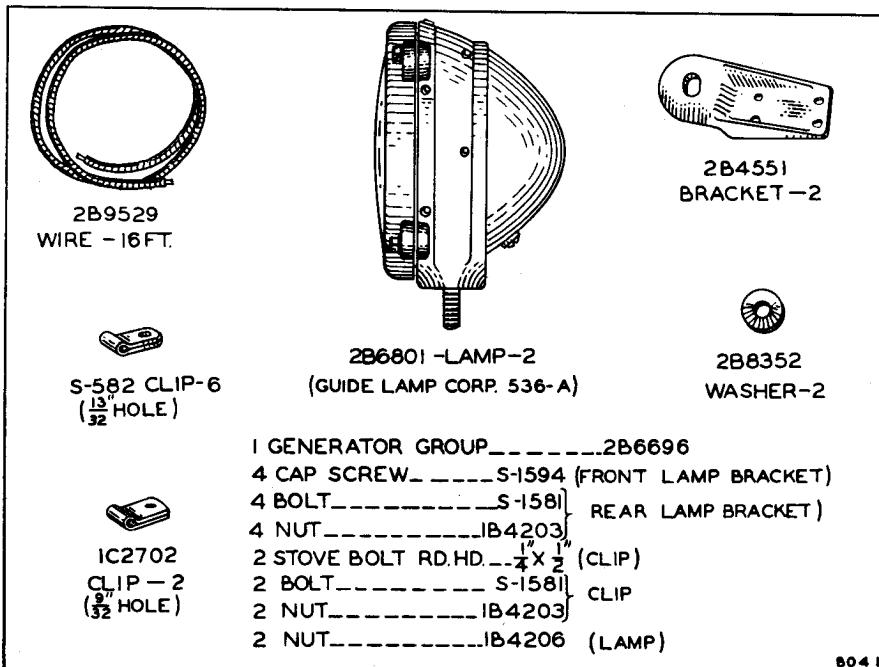


2B9065 LIGHTING SYSTEM GROUP
(Without Battery—For use without Cab)

Note: 2B6696 Generator Group parts are shown on Page 92.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

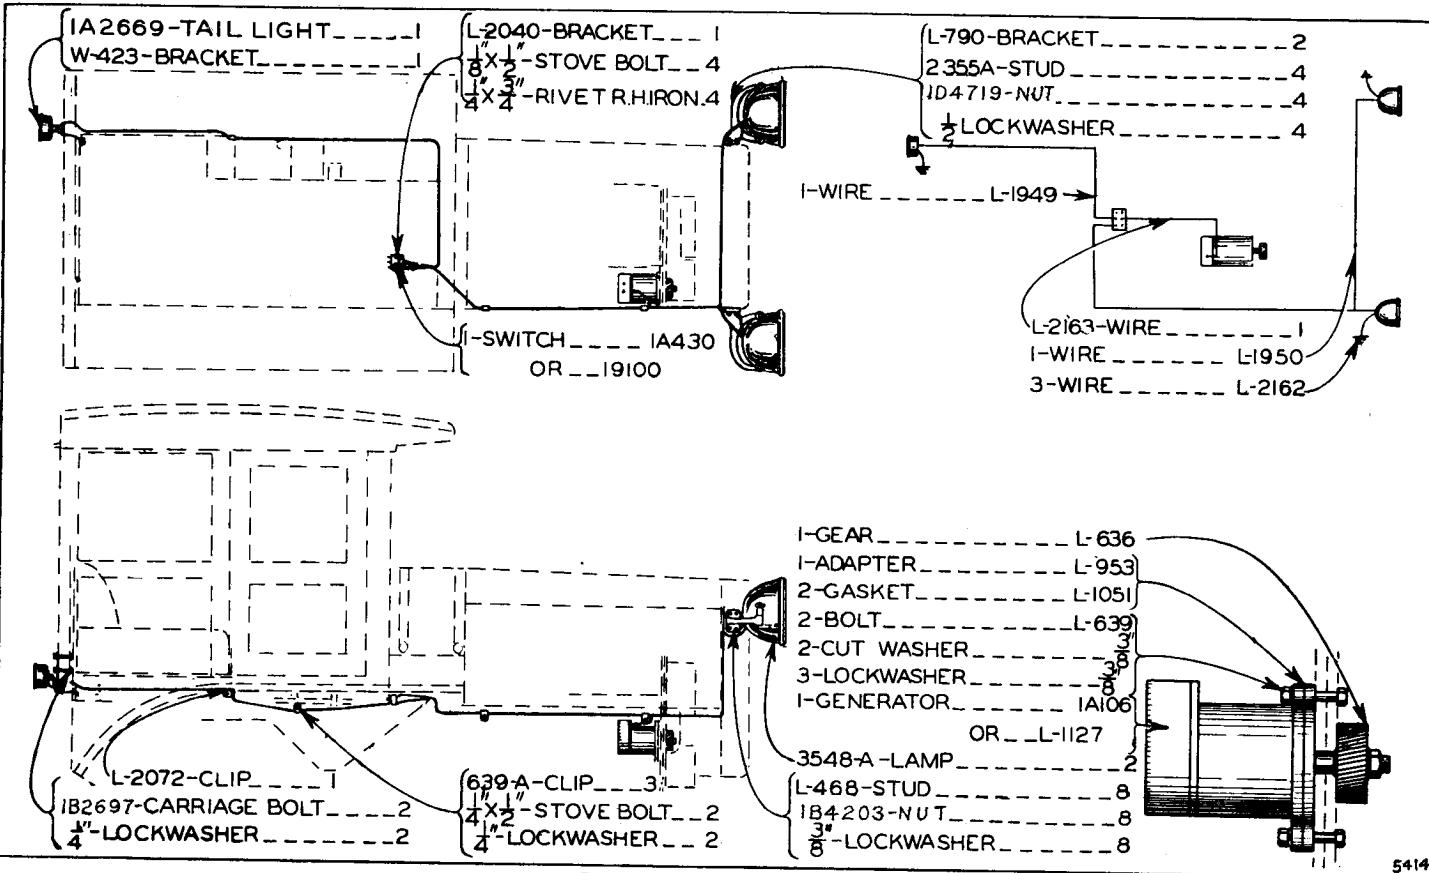


LIGHTING SYSTEM GROUP


(Without Battery—For use with Cab)

Note: Only separate parts serviced. When complete group is wanted order L-1951-A.


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

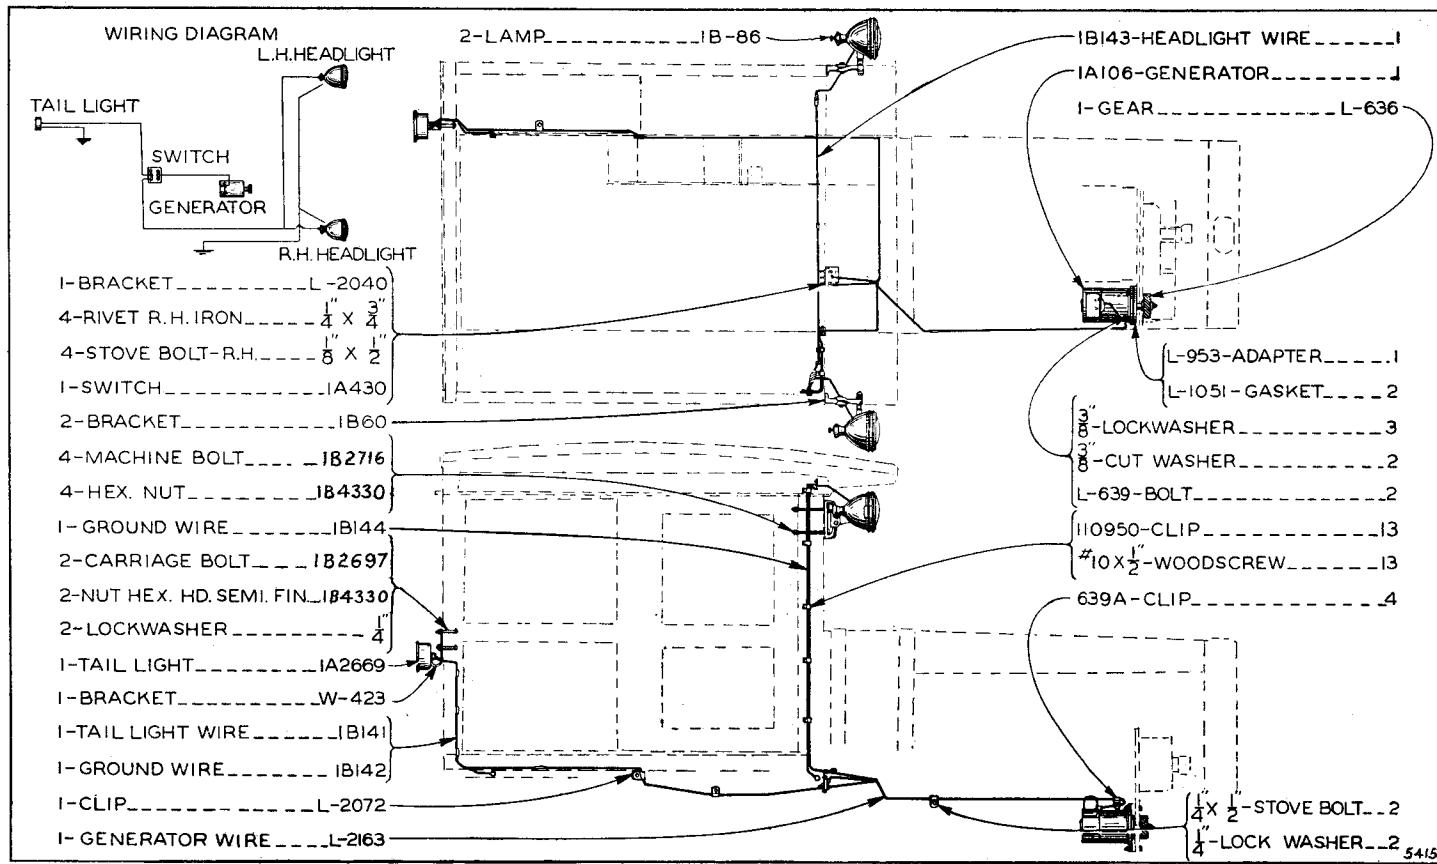

L-1951-A LIGHTING SYSTEM GROUP
(Without Battery—For use with Cab)

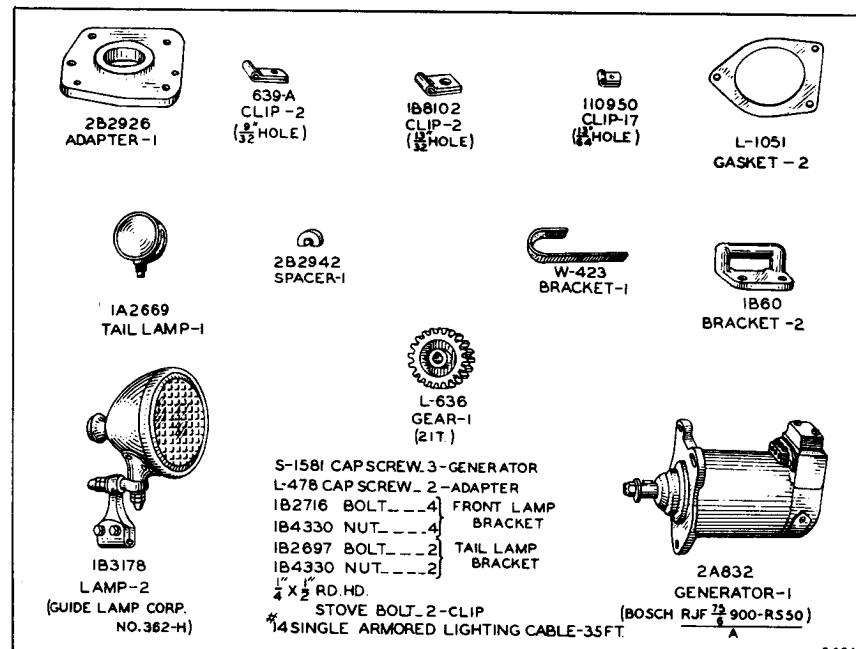


2B2173 LIGHTING SYSTEM GROUP
(Without Battery—For use with Cab)

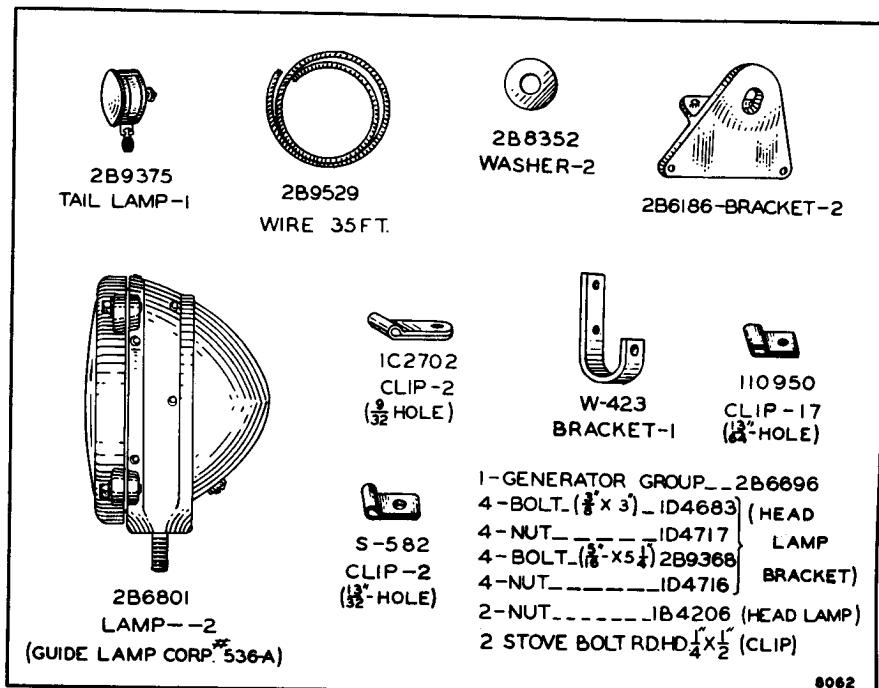

2B9274 LIGHTING SYSTEM GROUP
(Without Battery—For use with Cab)
Note: 2B6696 Generator Group parts are shown on Page 92.


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

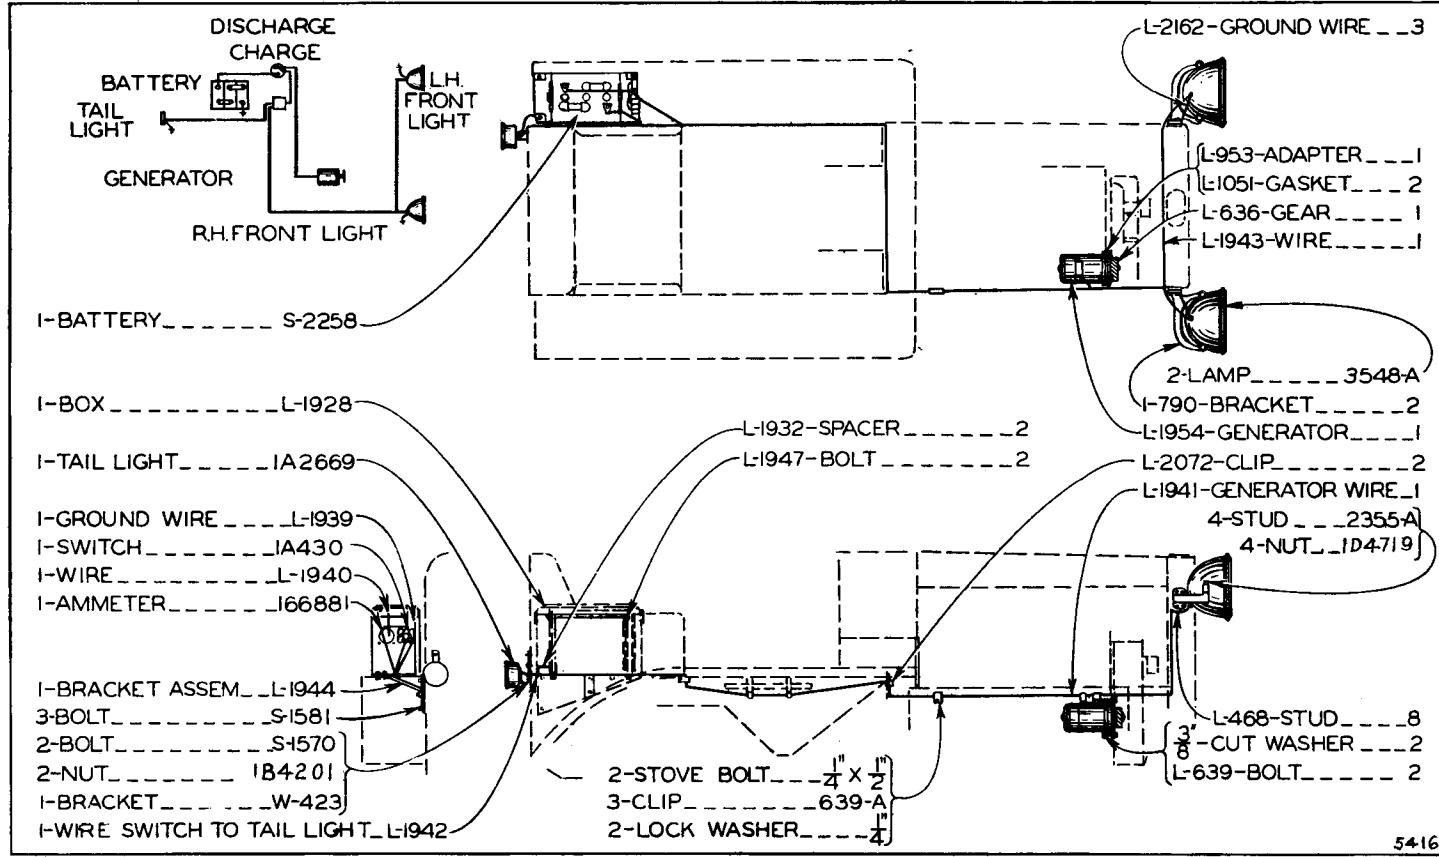

LIGHTING SYSTEM GROUP
(With Battery—For use without Cab)

Note: Only separate parts serviced. When complete group is wanted order L-1952-A.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

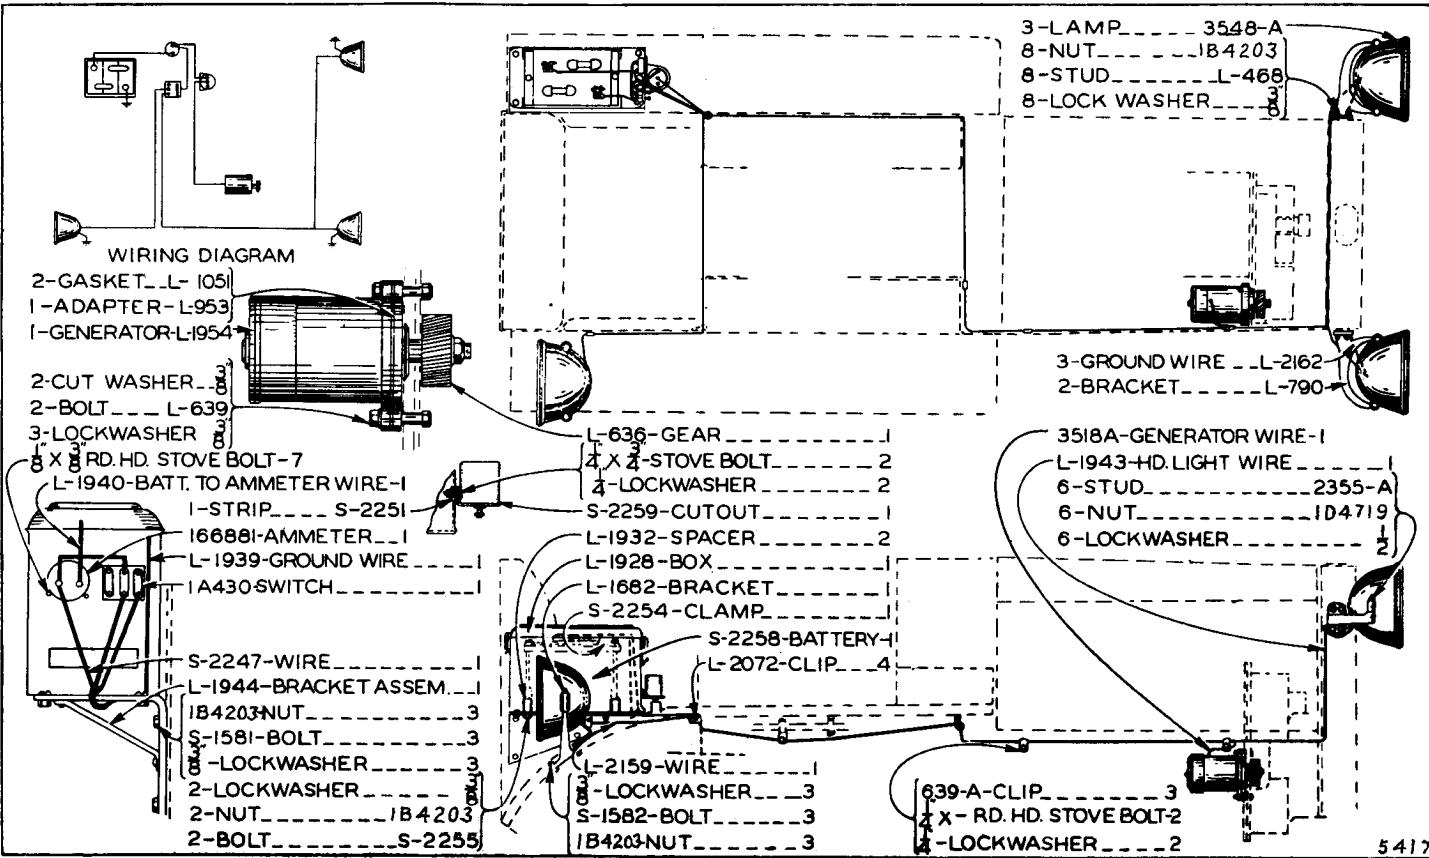


LIGHTING SYSTEM GROUP


(With Battery—For use without Cab)

Note: Only separate parts serviced. When complete group is wanted order L-1952-A.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

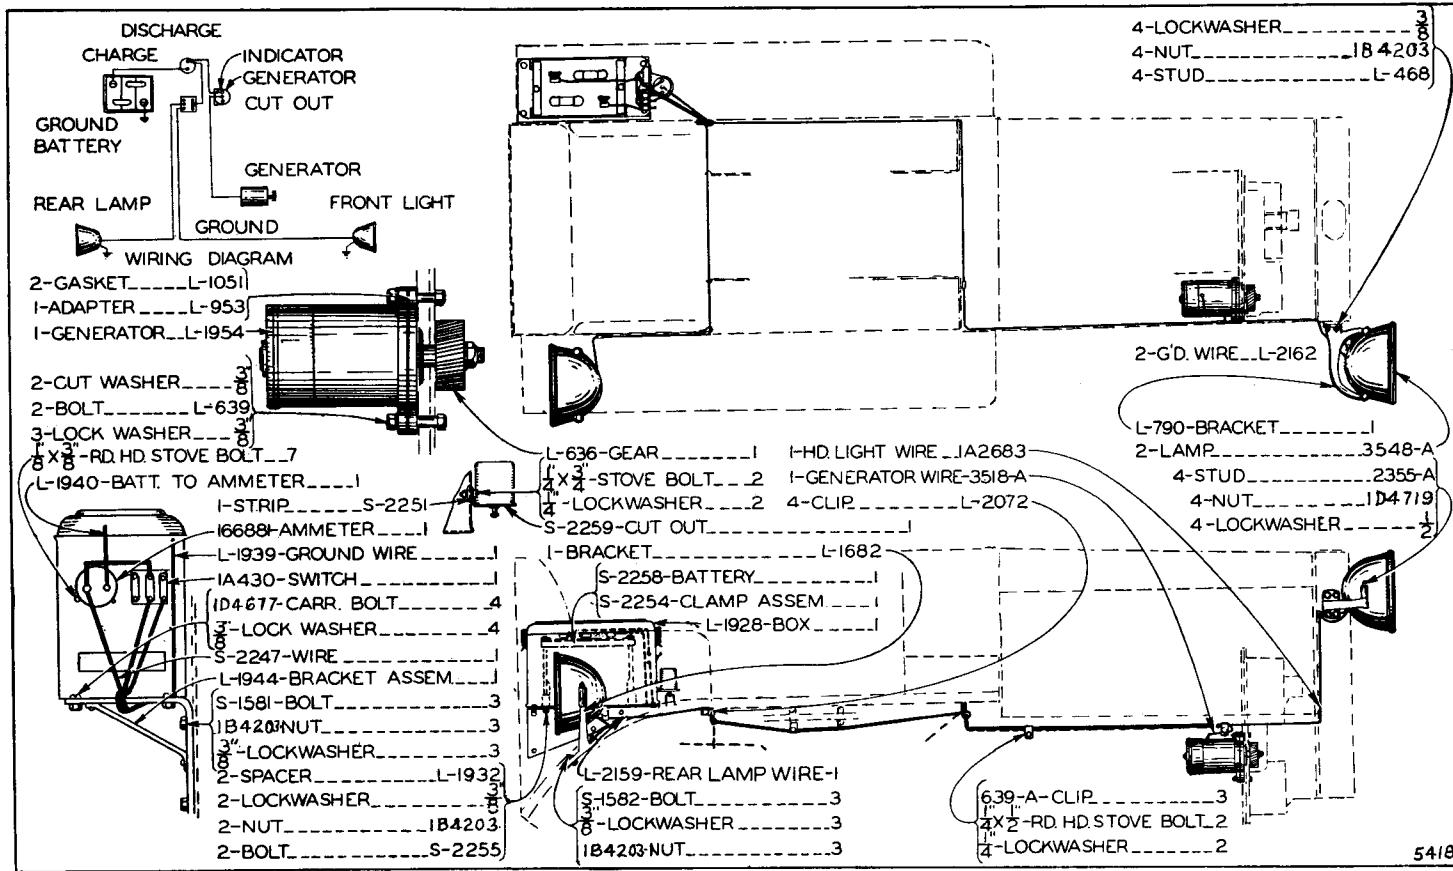


L-1952-A LIGHTING SYSTEM GROUP
(With Battery—For use without Cab)

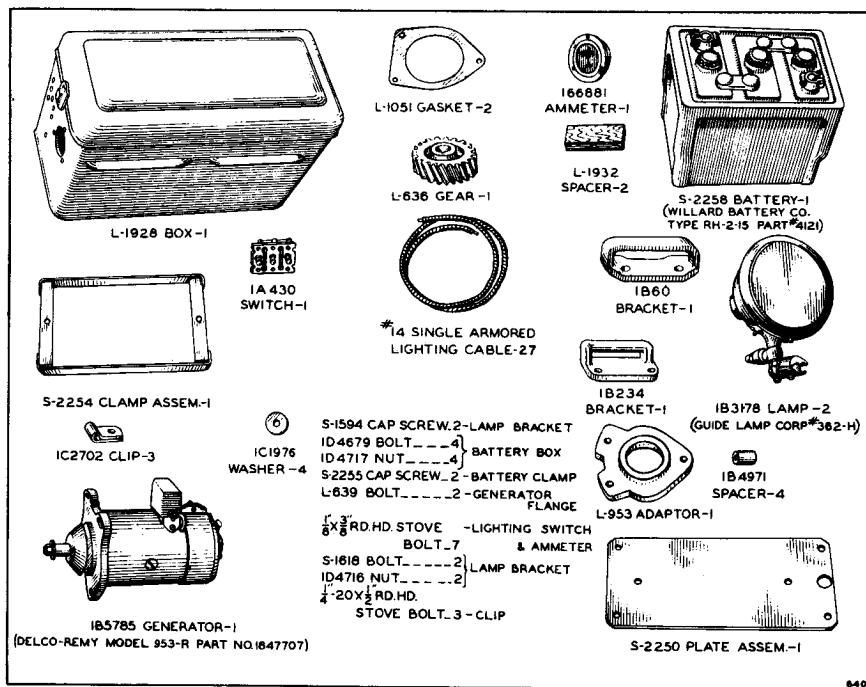

6401

2B2229 LIGHTING SYSTEM GROUP
(With Battery—For use without Cab)

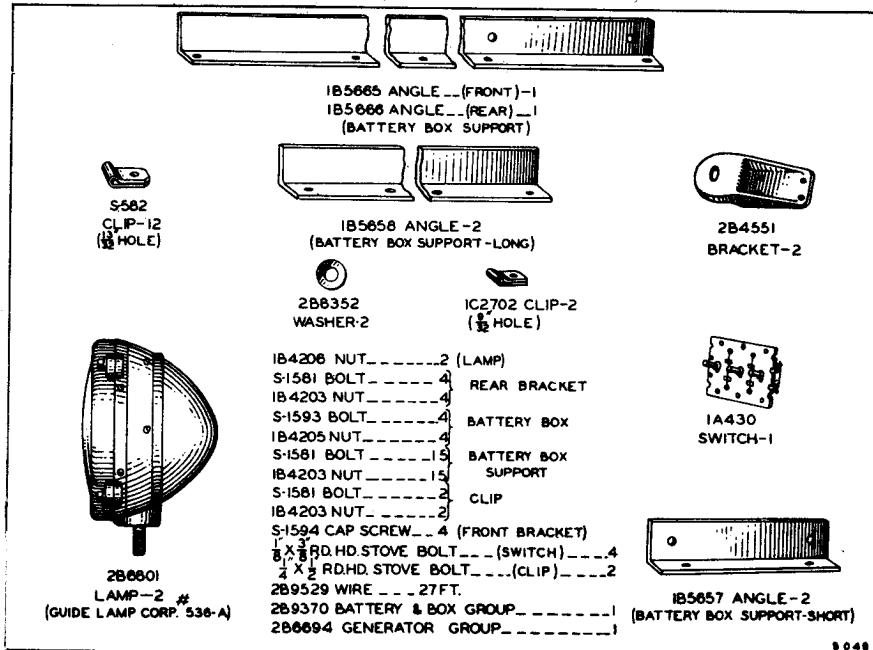

8401

2B9166 LIGHTING SYSTEM GROUP


(With Battery—For use without Cab)

Note: 2B6694 Generator Group parts are shown on Page 91.

2B9370 Battery and Box Group parts are shown on Page 91.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

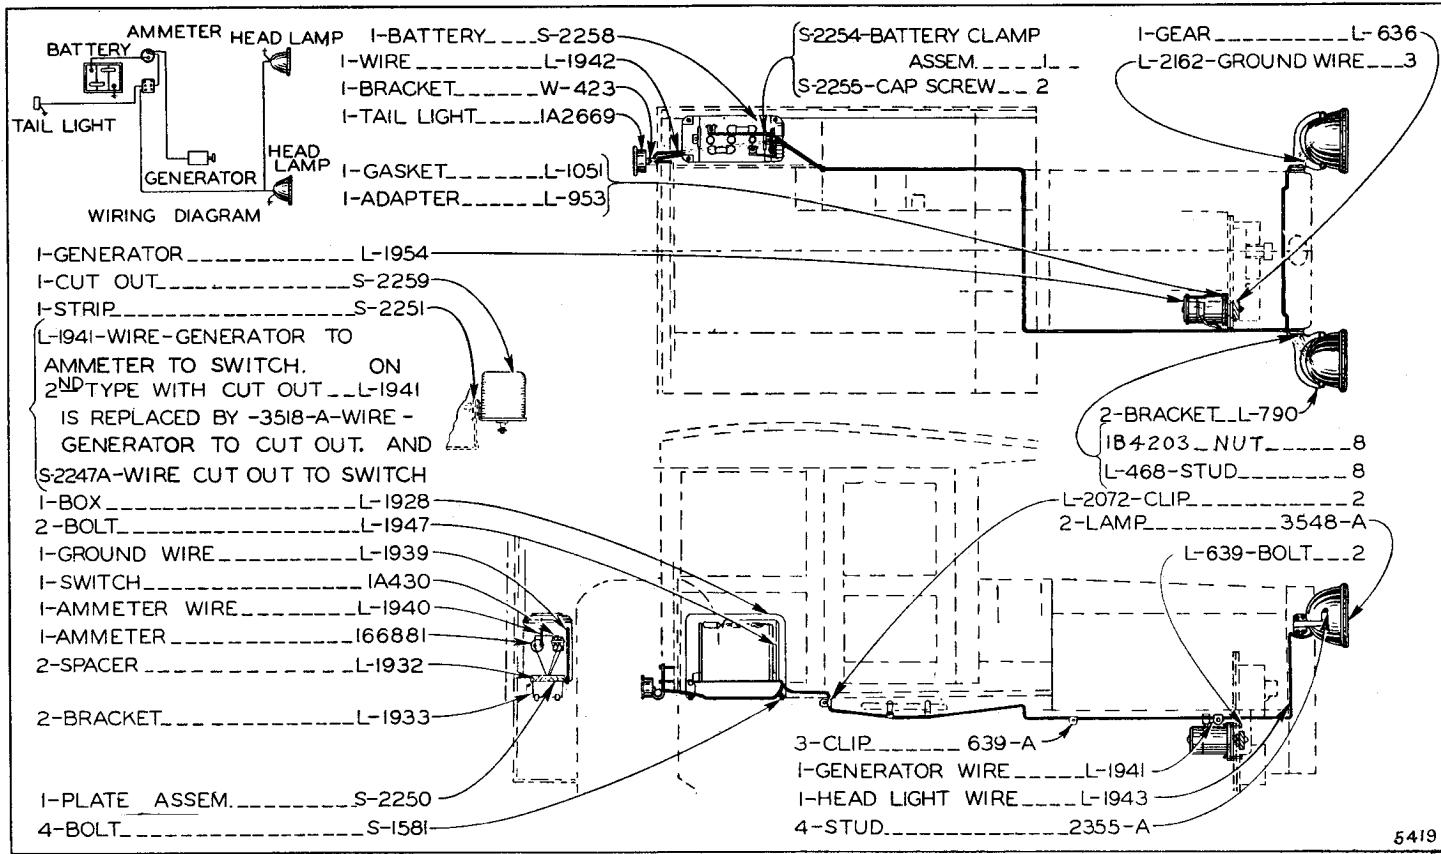



5419

LIGHTING SYSTEM GROUP
(With Battery—For use with Cab)


Note: Only separate parts serviced. When complete group is wanted order L-1953-A.

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

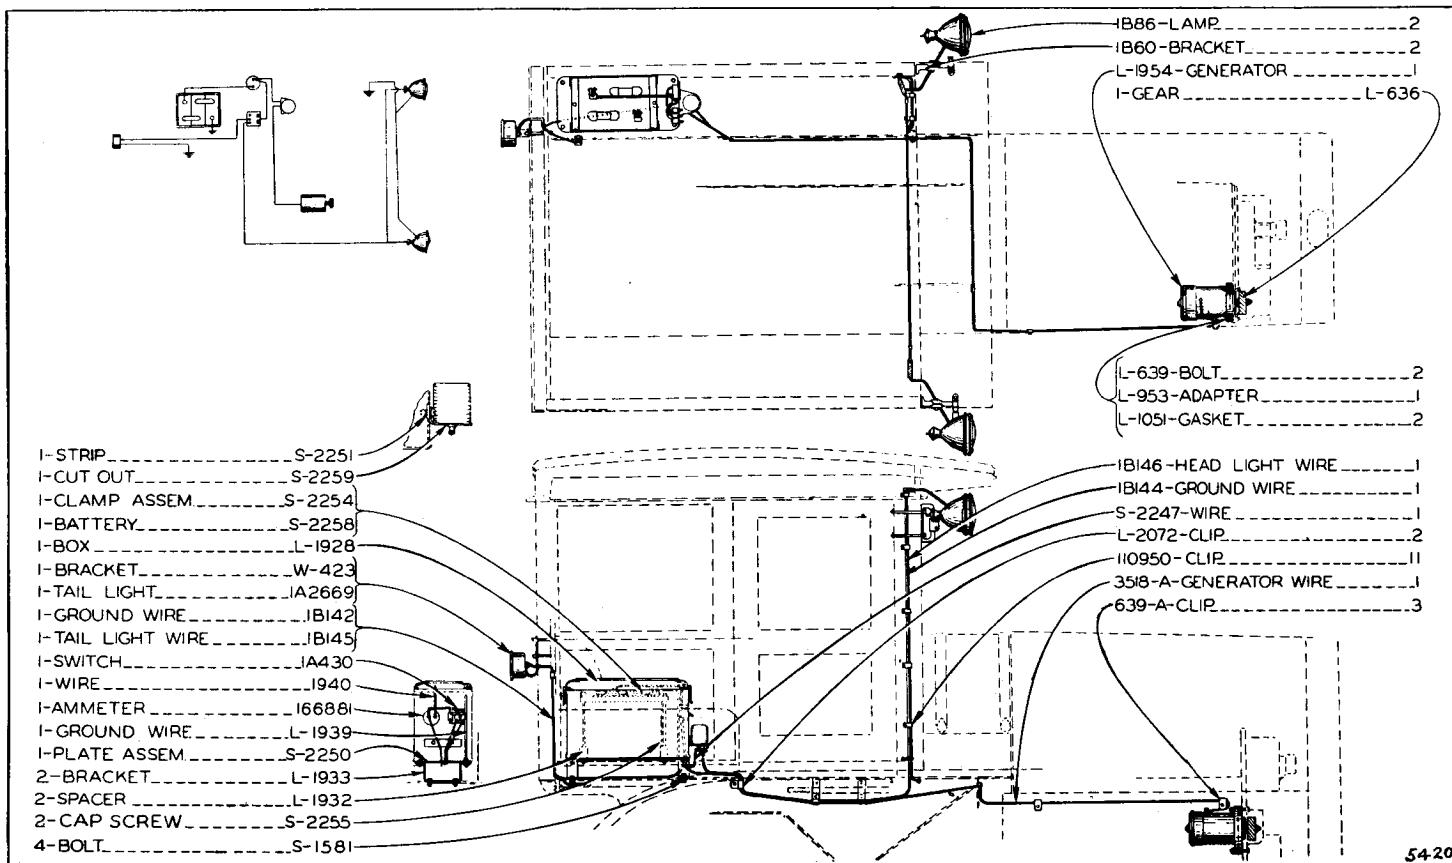

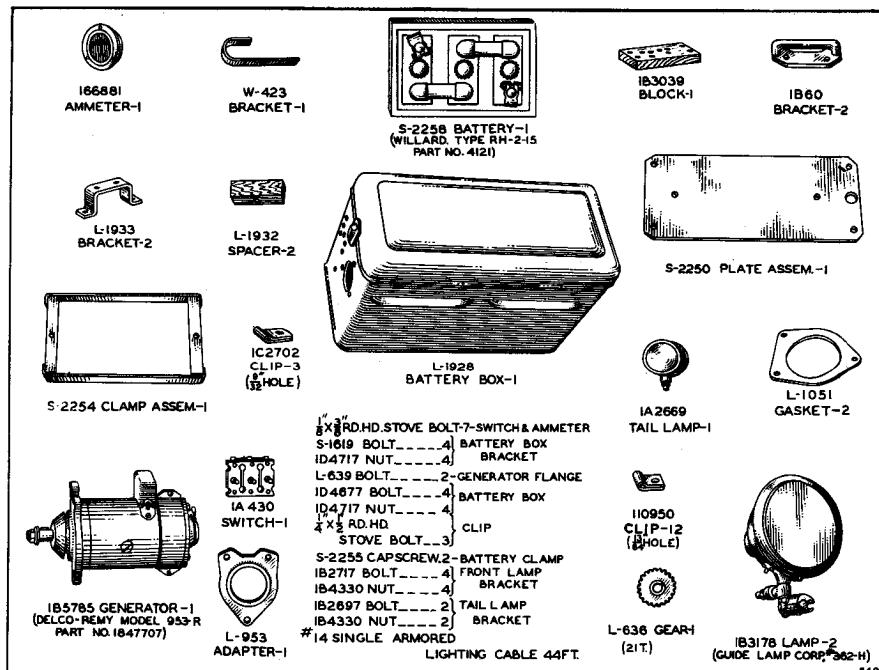

2B2400 LIGHTING SYSTEM GROUP
(With Battery—For use with Cab)

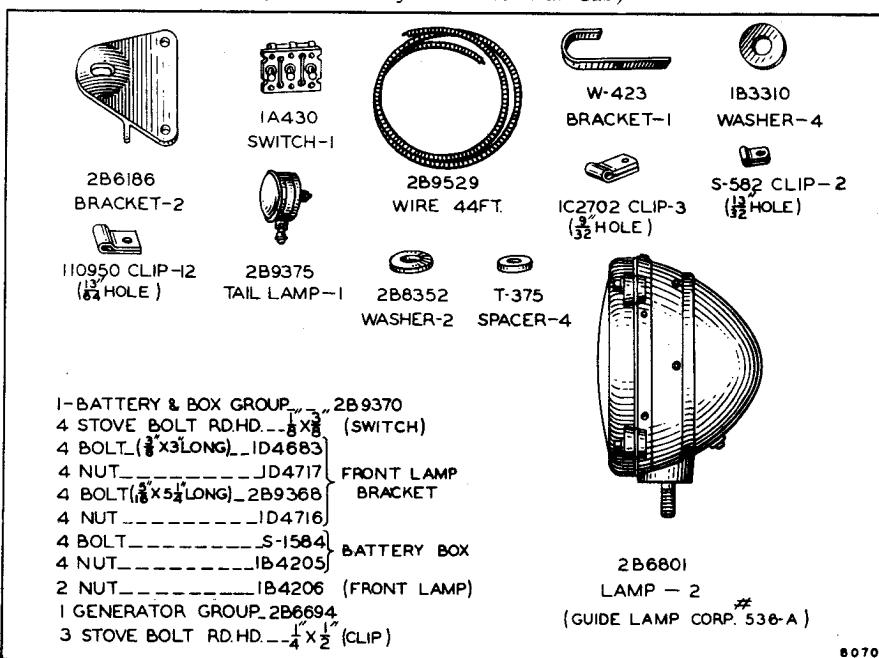


2B9332 LIGHTING SYSTEM GROUP
(With Battery—For use with Cab)

Note: 2B6694 Generator Group parts are shown on Page 91.

2B9370 Battery and Box Group parts are shown on Page 91.


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

S-1594 CAP SCREW-2
(FRONT LAMP BRACKET)

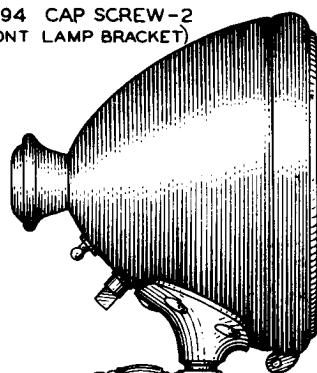

S-1618 BOLT-2
ID4716 NUT-2
(REAR LAMP BRACKET)

8-32 X $\frac{1}{2}$ RD. HD.
MACH. SCREW-4
8-32 HEX. NUT-2
(SWITCH)

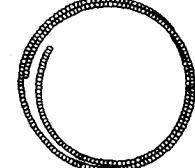


14 SINGLE -
ARMORED LIGHTING
CABLE -18 FT.


IB60 BRACKET-1
(REAR LAMP)

S-582 CLIP-2
(REAR LAMP WIRE)


IB3178 LAMP-2
(GUIDE LAMP CORP. # 362-E)

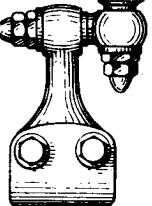

IA 430
SWITCH-1

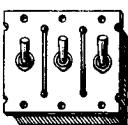


IB234 BRACKET-1
(FRONT LAMP)

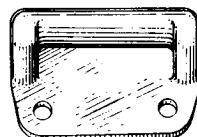

1B5363 LIGHTING SYSTEM GROUP
(For use with Starter—Without Cab)

4BI172 LAMP ($\frac{3}{8}$ " DIA.)-2
(GUIDE LAMP CORP. # 534-A)

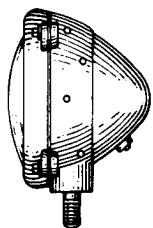

IA 430
SWITCH-1



IB1301
DASH LAMP-1

2B8352
WASHER-2

ID1510
CLIP-2
($\frac{5}{16}$ " HOLE)



S-550
CLIP-15
($\frac{15}{32}$ " HOLE)

2B6801 LAMP ($\frac{9}{16}$ " DIA.)-2
(GUIDE LAMP CORP. # 536-A)

— OR —




2B4551
BRACKET-2

4B9388 WIRE	-----	32 FT.
4B9389 LOOM	-----	32 FT.
IB4206 NUT	-----	2 (LAMP)
S-1594 CAP SCREW	-----	4
S-1581 BOLT	-----	4 } LAMP IB4203 NUT
IB4203 NUT	-----	4 } BRACKET
S-1581 BOLT	-----	5 } CLIP
IB4203 NUT	-----	5 } CLIP
4B6593 STOVE BOLT	-----	2 (DASH LAMP)
4B5591 STOVE BOLT	-----	4 (SWITCH)
4B5596 STOVE BOLT	-----	2 (CLIP)


11023

2B9447 LIGHTING SYSTEM GROUP
(For use with Starter—Without Cab)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

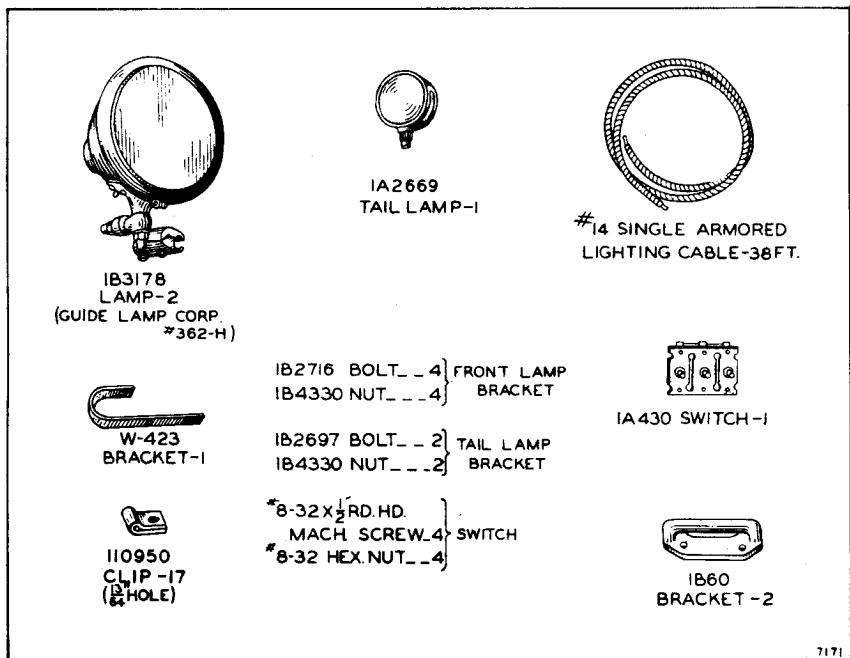


2B5303 LIGHTING SYSTEM GROUP
(For use with Starter—With Cab)

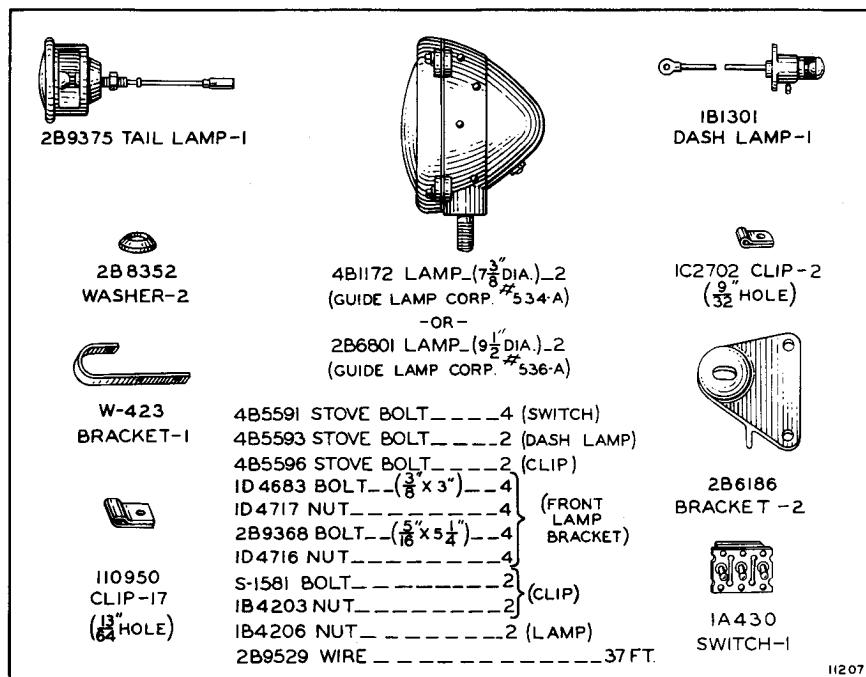


2B9449 LIGHTING SYSTEM GROUP
(For use with Starter—With Cab)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

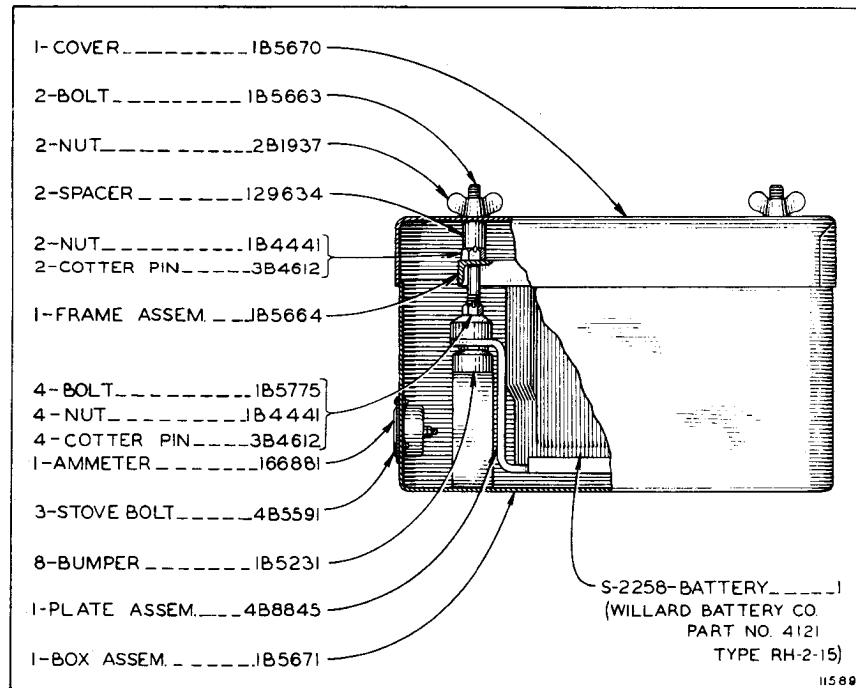


2B9370 BATTERY AND BOX GROUP

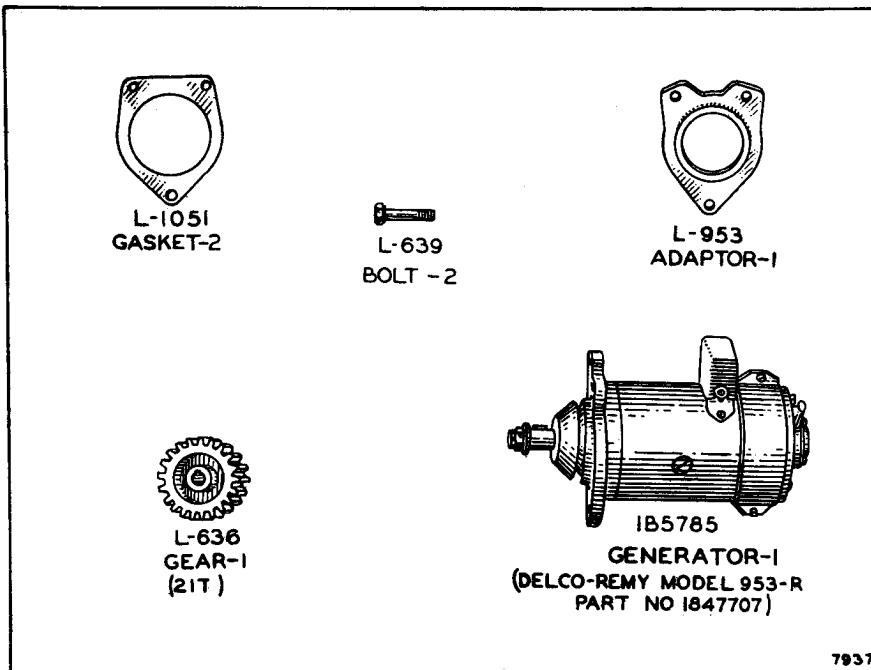
2B6694 LIGHTING GENERATOR GROUP
(6 Volt—For use with Battery)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

2B2942
SPACER -1

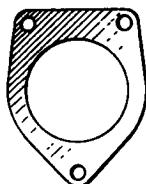

L-1051
GASKET -2

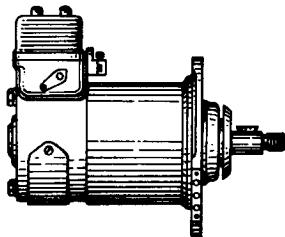

3B754 GENERATOR -1
(BOSCH R JF $\frac{75}{8}$ 900 - RS606)


A

-OR-

2A632 GENERATOR -1
(BOSCH R JF $\frac{75}{8}$ 900 - RS50)

A

L-639 BOLT _____ 1
3B46II COTTER PIN. (3 $\frac{3}{32}$ x 1) 1

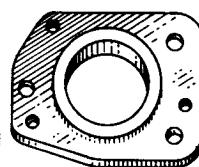


2B2926
ADAPTOR -1


10116

2B6696 LIGHTING GENERATOR GROUP (First Type)
(6 Volt—For use without Battery)

2B2942
SPACER -1

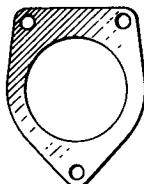


L-1051
GASKET -2

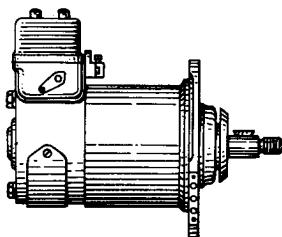

7B8344 GENERATOR -1

L-639 BOLT _____ 2
3B46II COTTER PIN _____

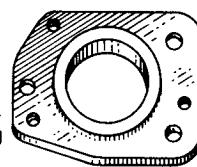

2B2926
ADAPTOR -1

 

15526

2B6696 LIGHTING GENERATOR GROUP (Second Type)
(6 Volt—For use without Battery)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS



L-953 ADAPTOR-I

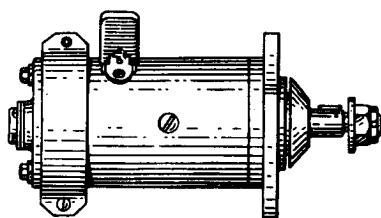L-636
GEAR_(21-T)_IL-639
BOLT-2L-1051
GASKET-21B5240
GENERATOR-I
(DELCO-REMY MOD.*965-Z
PART NO. 1845567)

7983

2B6695 LIGHTING GENERATOR GROUP
(12 Volt—For use with Battery)

2B5308	Electric Starter Group (With Lights-for use with Cab) Consists of:	
1	2B5303 Lighting System Group	Page 90
1	2B6497 Electric Starter Group.	" 95


2B9451	Electric Starter Group (With Lights-for use with Cab) Consists of:	
1	2B9449 Lighting System Group	Page 90
1	2B6497 Electric Starter Group.	" 95

2B5309	Electric Starter Group (With Lights-for use without Cab) Consists of:	
1	1B5363 Lighting System Group	Page 89
1	2B5083 Electric Starter Group.	" 94

2B9453	Electric Starter Group (With Lights-for use without Cab) Consists of:	
1	2B9447 Lighting System Group	Page 89
1	2B5083 Electric Starter Group.	" 94

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

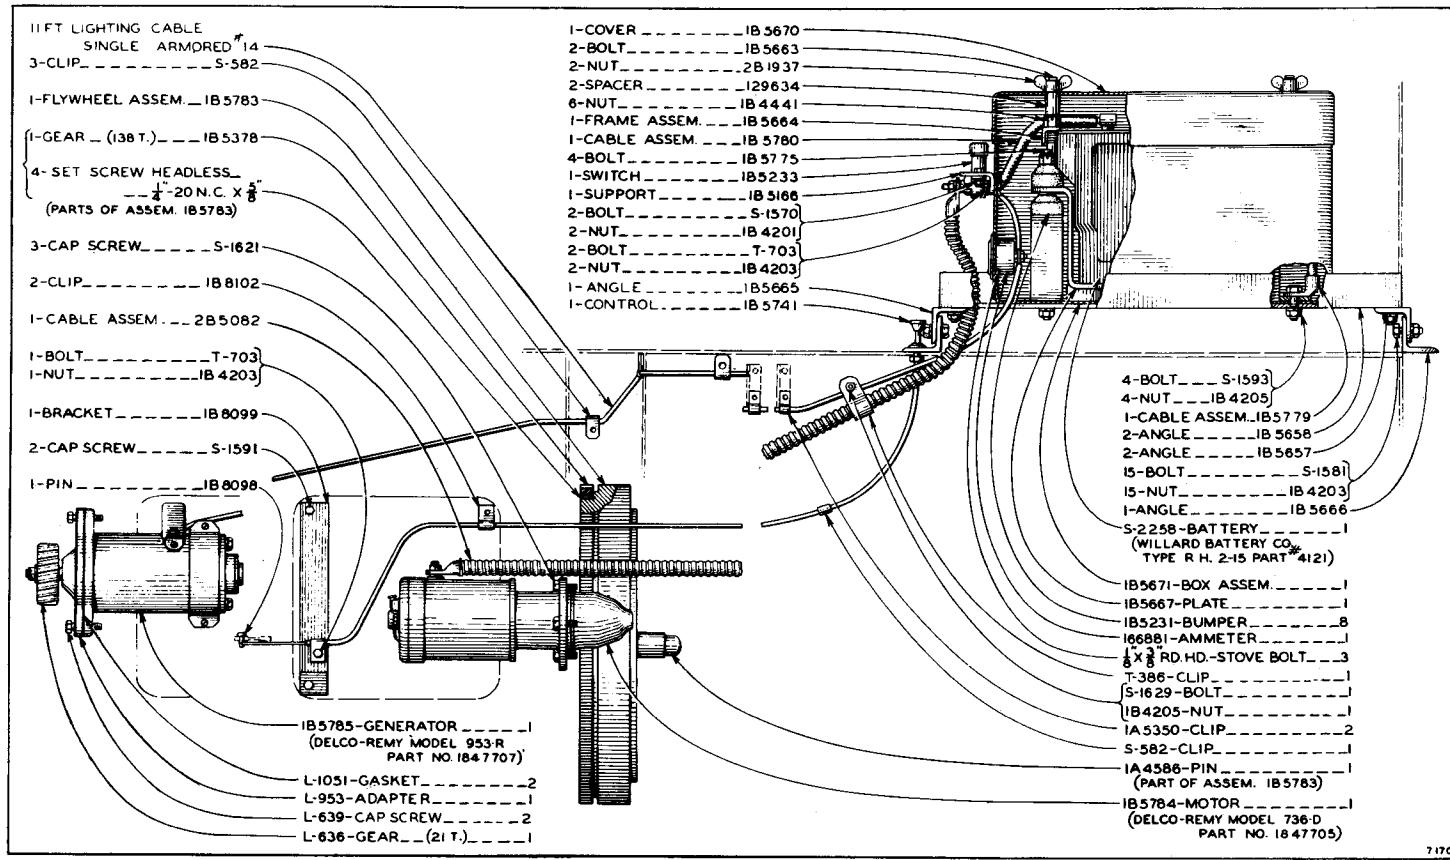


2B5083 ELECTRIC STARTER GROUP
(Without Lights—For use without Cab)



2B5082 CABLE ASSEM.-I
(SWITCH TO STARTER)

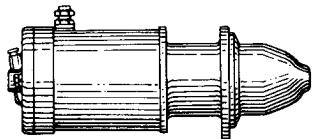

IB5784 MOTOR-I
(DELCO-REMY MODEL 736-D)
PART NO. 1847705

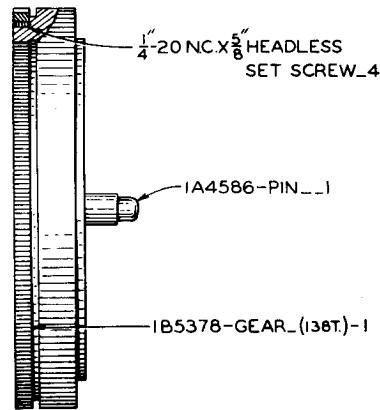

IB5783 FLYWHEEL ASSEM.-I



IB8099 BRACKET_(FRONT)-I
(CONTROL)




IA5350
CLIP-2
($\frac{5}{32}$ HOLE)



S-582
CLIP-6
($\frac{13}{32}$ HOLE)



 
T-386
CLIP-1
($\frac{11}{32}$ HOLE)




IB5779 CABLE ASSEM.-I
(BATTERY TO GROUND)



 
IB5741 CONTROL-I
(CHOKE)



IB5233
SWITCH-I
(STARTER)

 

IB8098 PIN-I
(CHOKE CONTROL)

 

IB5780 CABLE ASSEM.-I
(BATTERY TO SWITCH)




2B5016
BRACKET-I
(CHOKE CONTROL)
(REAR)



IB3310 WASHER-4
(BATTERY BOX BOLT)



IB5166 SUPPORT-I
(STARTER SWITCH)

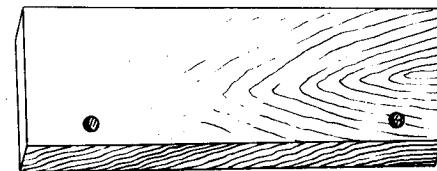


3B3885 SPACER-(BATTERY BOX)-I

6908


2B6497 ELECTRIC STARTER GROUP (Without Lights—For use with Cab)

Note: 2B6694 Generator Group parts are shown on Page 91.
2B9370 Battery and Box Group parts are shown on Page 91.

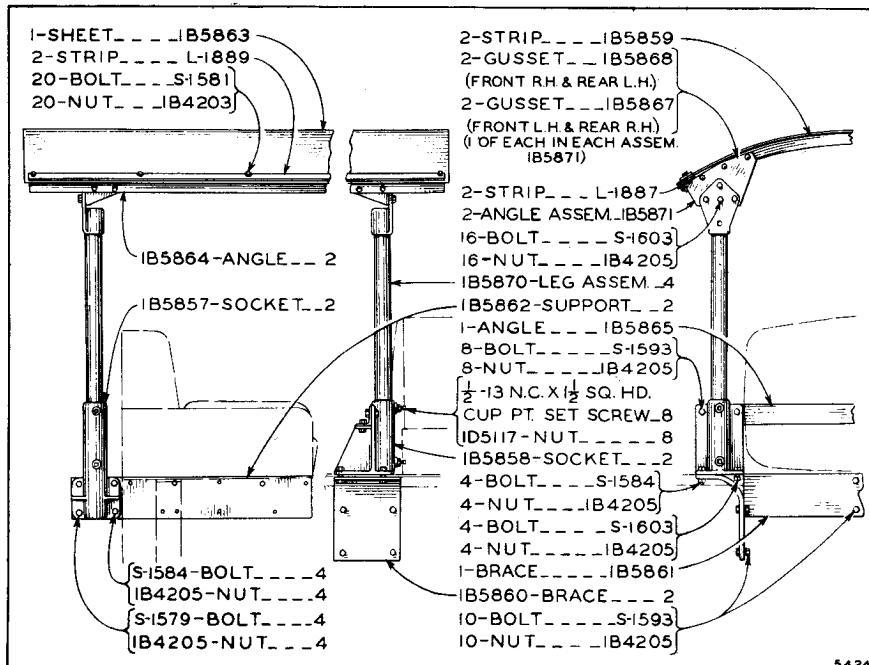


1B5872 CANOPY TOP GROUP

5424

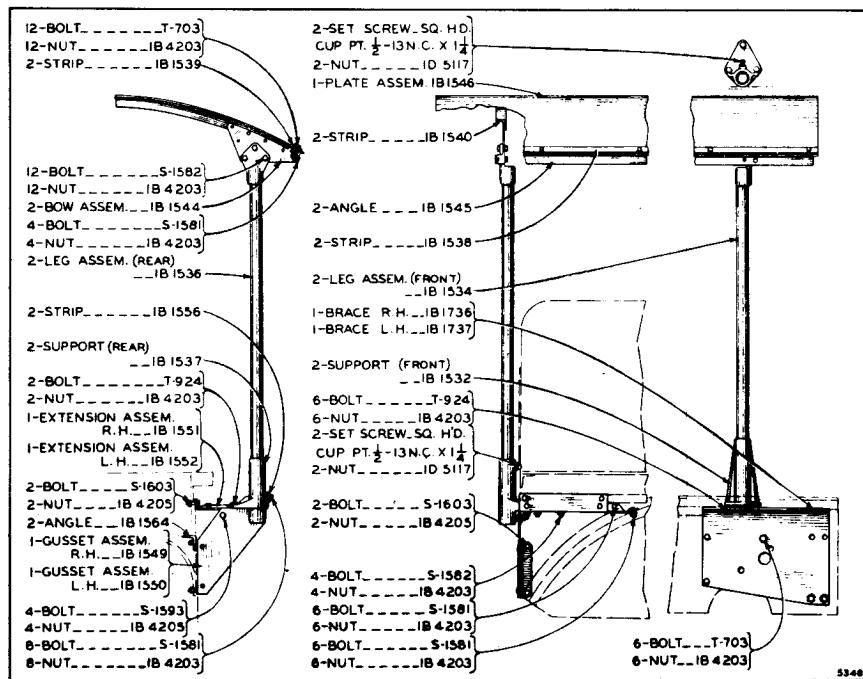1B1557 CANOPY TOP GROUP
(For use on Side Seat Tractors)


5346

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

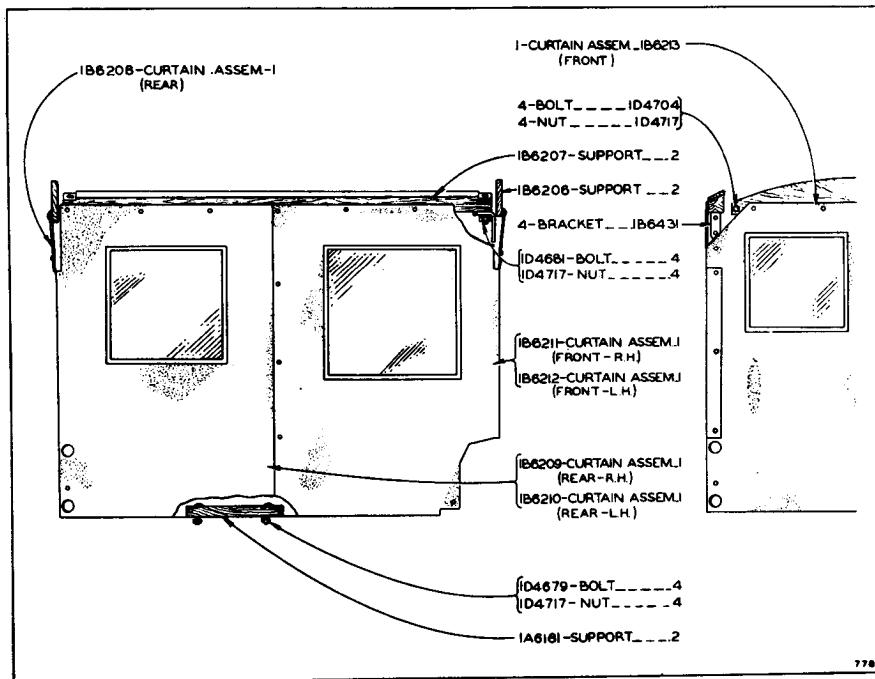

7782


1B6214 CANOPY TOP CURTAIN GROUP

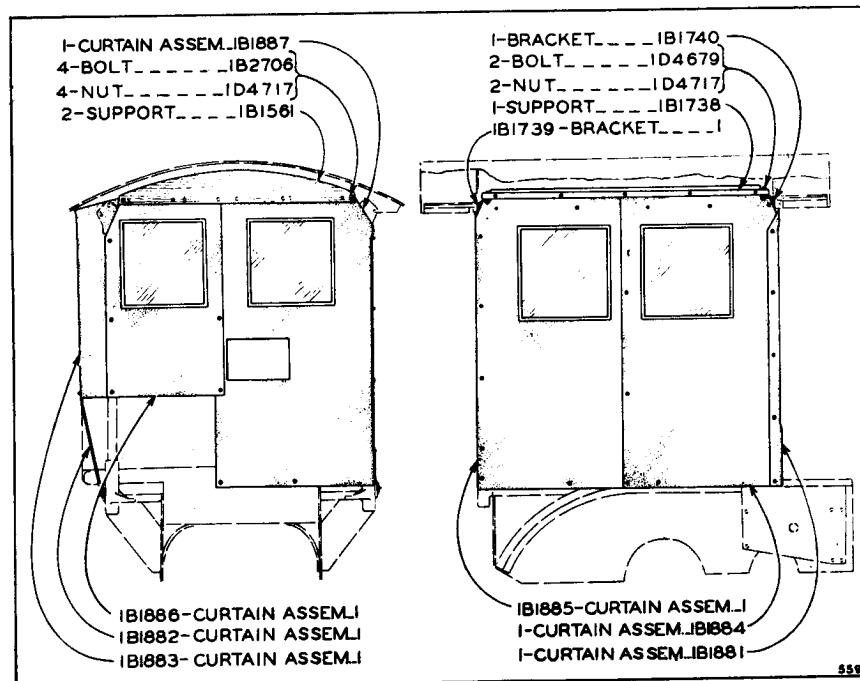

5591


1B3085 CANOPY TOP CURTAIN GROUP
(For use with Side Seat Canopy Top Group 1B1557)**ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS**

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

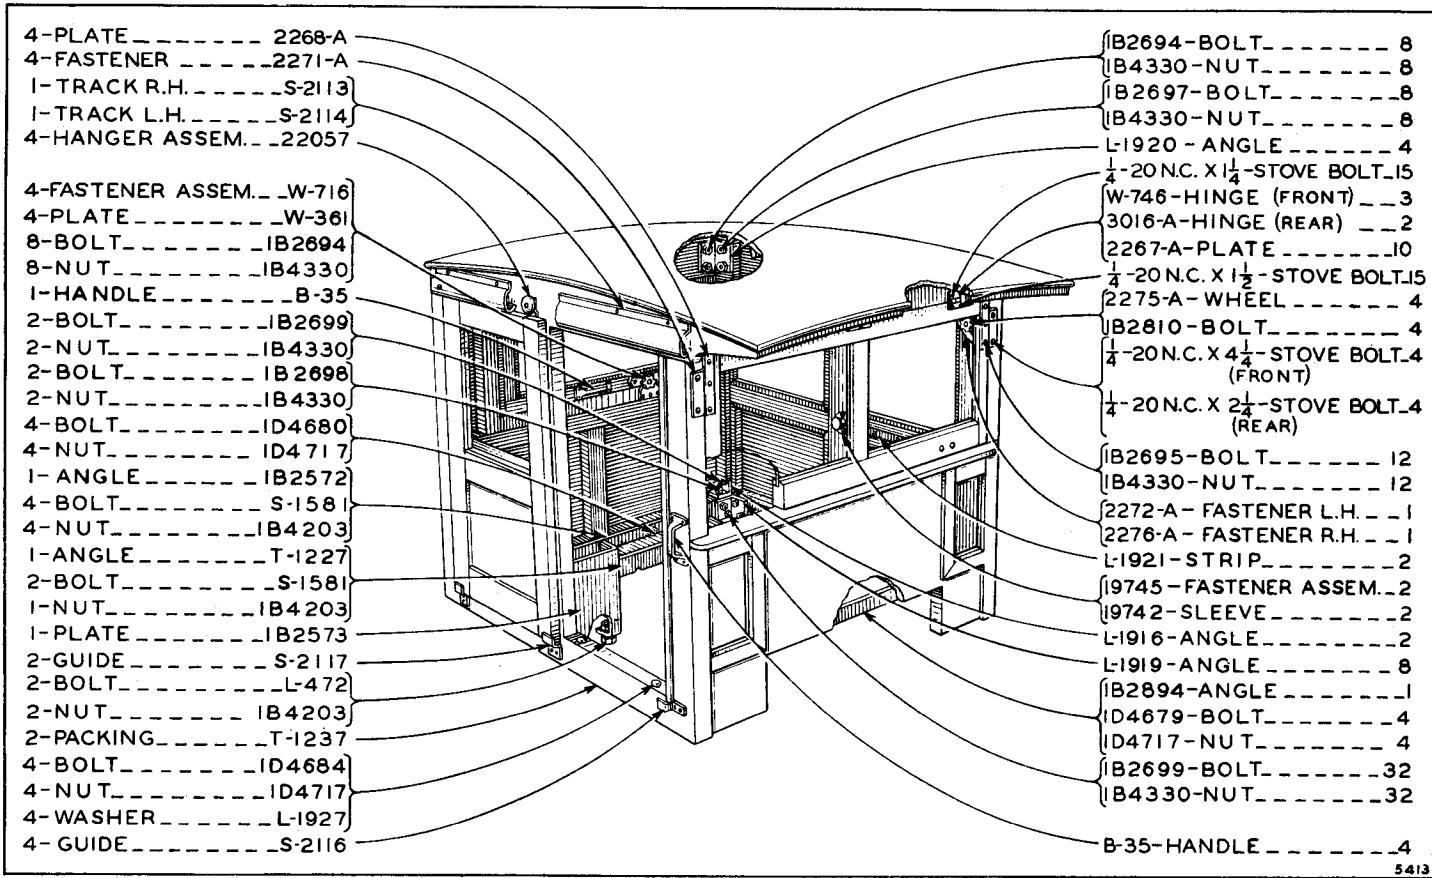


1B2478 CAB GROUP

5413

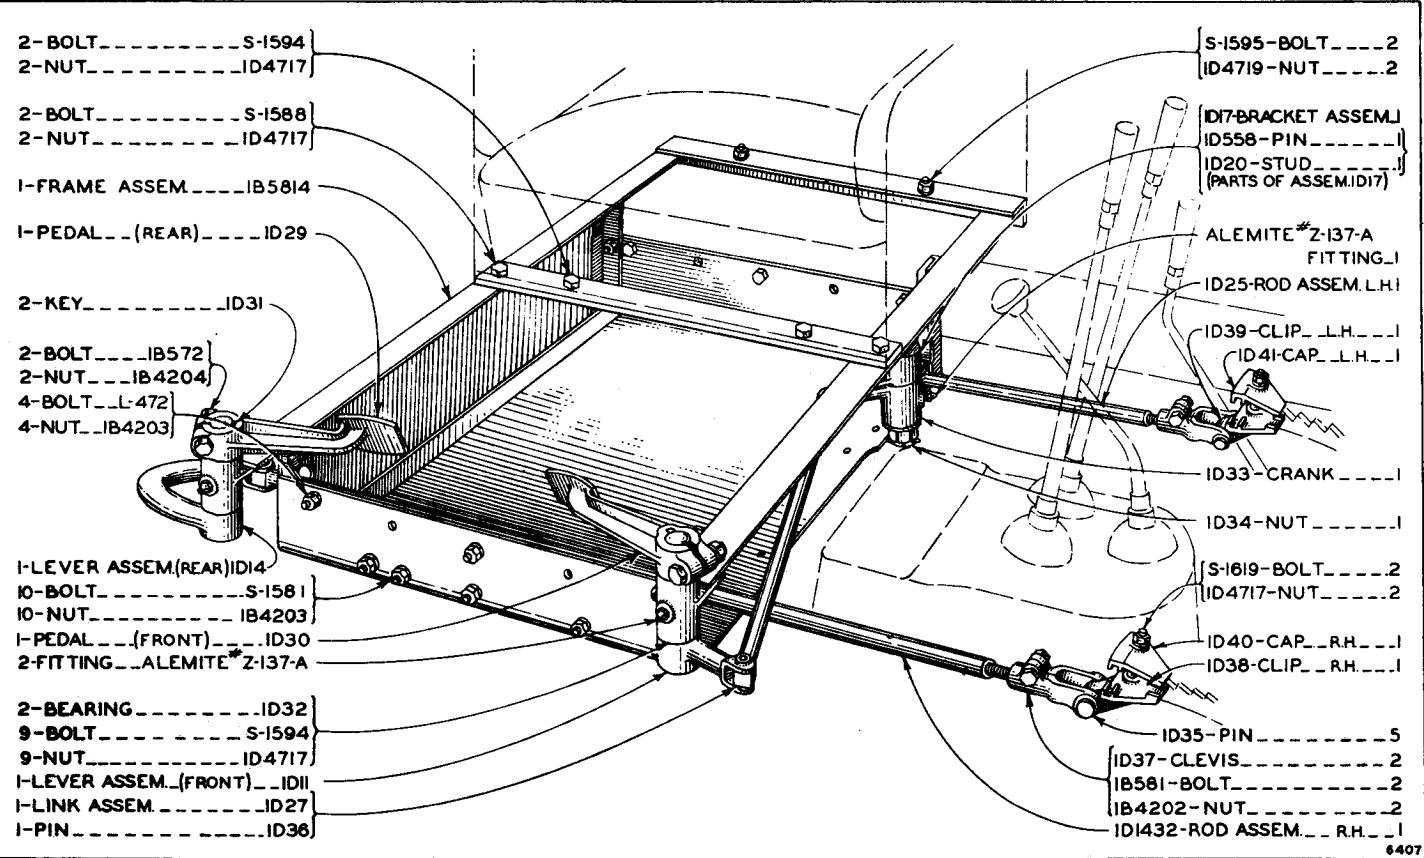


1B5822 SIDE SEAT GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

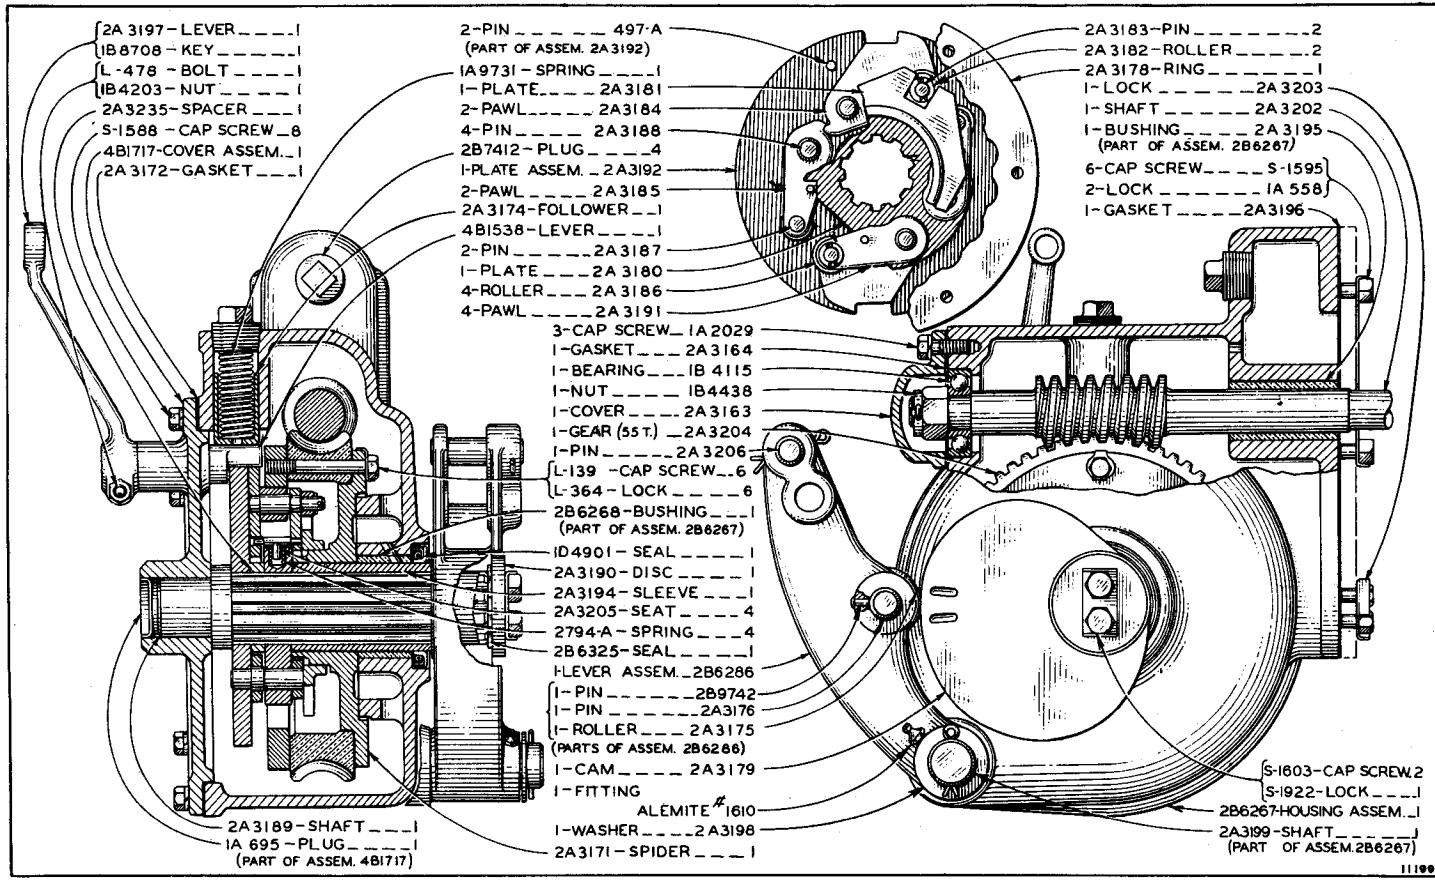


2B6291 POWER LIFT GROUP

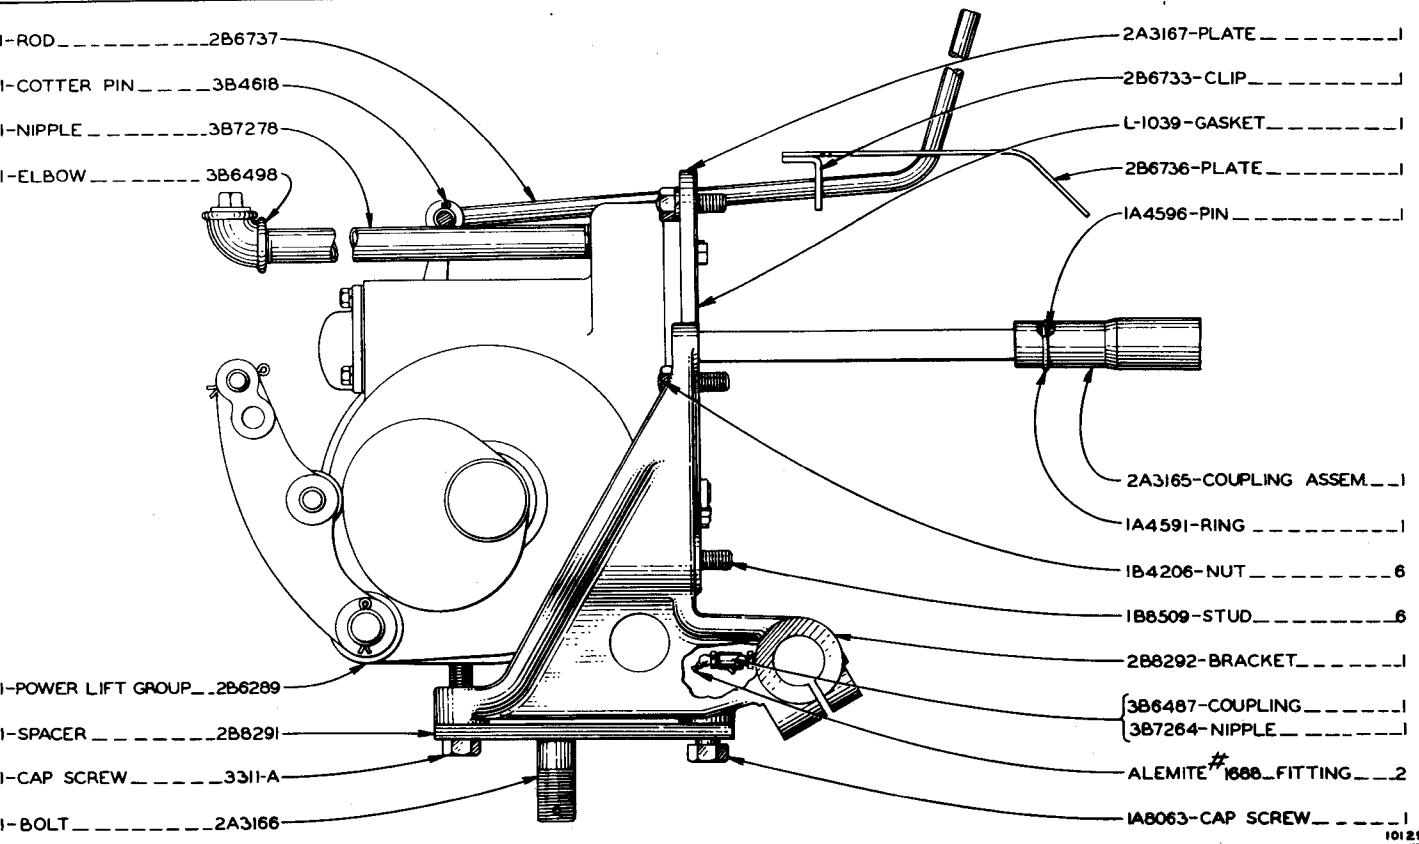

POWER LIFT MOUNTING AND CONTROLS
(Part of 2B6291 Power Lift Group)

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

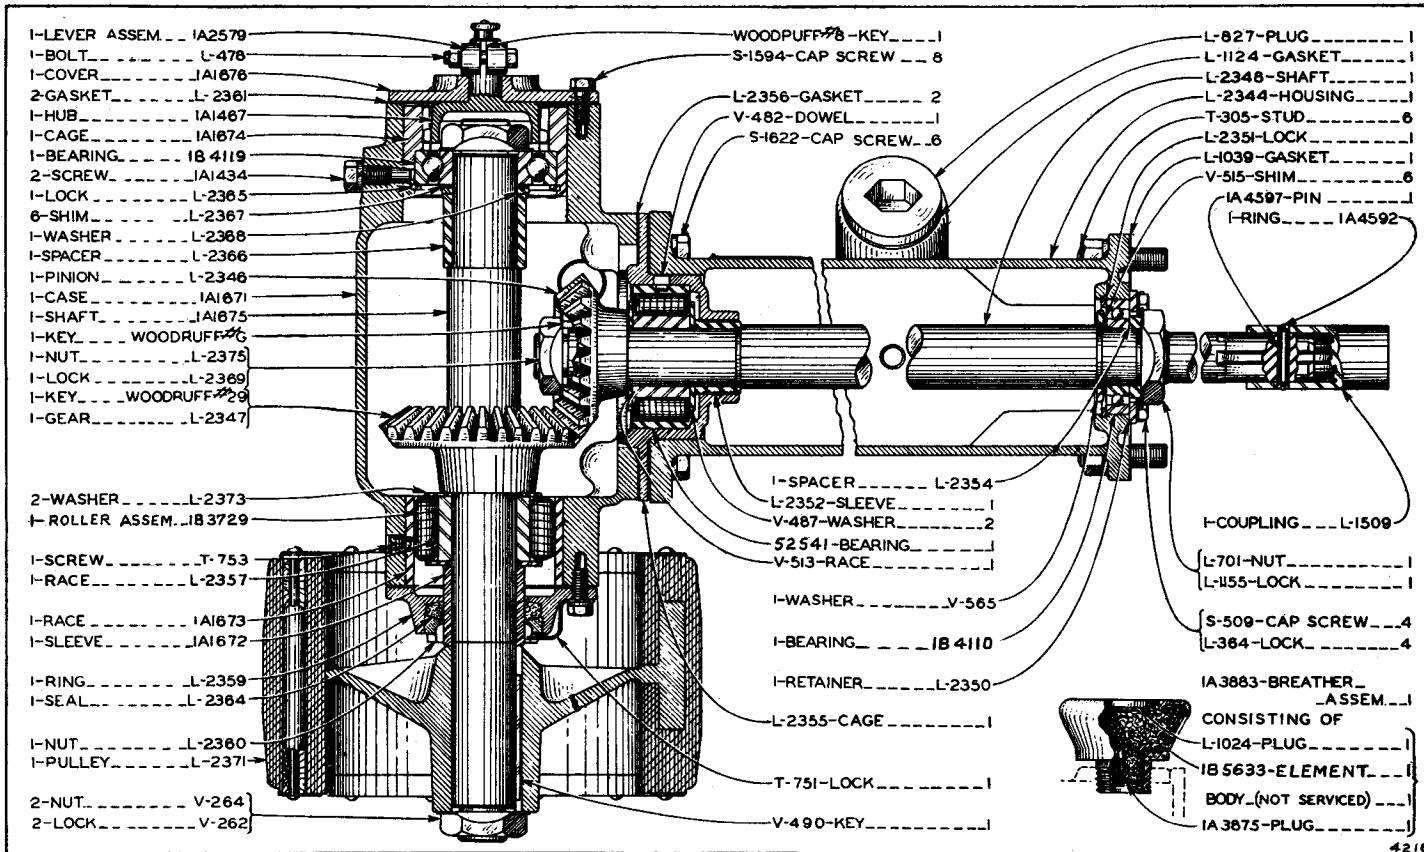

1A1689 BELT PULLEY DRIVE GROUP—WITH PULLEY
1A1668 BELT PULLEY DRIVE GROUP—WITHOUT PULLEY

PARTS CATALOG


103

<p>L-1024 -PLUG----- IB 5633 -ELEMENT--- IA3675 -PLUG----- IA 3663 BREATHER ASSEM.-I</p>		<p>WOODRUFF #8 KEY-I</p>		<p>IA 4597 PIN-I</p>	
IA 1434 SCREW-2	WOODRUFF #8 KEY-I	WOODRUFF #29 KEY-I	V-482 DOWEL-I	T-753 SCREW-I	V-490 KEY-I
V-264 NUT-2	IA 4592 RING-I	S-1622 CAP SCREW-6 $\frac{1}{2} \times 2$ U.S.S.	L-478 BOLT-I $\frac{1}{2} \times 1\frac{1}{2}$ S.A.E.	S-1594 CAP SCREW-8 $\frac{1}{2} \times 1$ U.S.S.	S-509 CAP SCREW-4 $\frac{1}{2} \times \frac{3}{4}$ U.S.S.
L-1155 LOCK-I	V-262 LOCK-2	T-305 STUD-6 $\frac{1}{2} \times 2\frac{1}{2}$ S.A.E.	T-751 LOCK-I	L-364 LOCK-4	L-701 NUT-I
L-2375 NUT-1	V-513 RACE-I	L-2366 SPACER-I	L-2352 SLEEVE-I	IA 1672 SLEEVE-I	L-2357 RACE-I
V-565 WASHER-I	L-2368 WASHER-I	V-515 SHIM-6	L-2373 WASHER-2	L-2367 SHIM-6	L-2354 SPACER-I
L-2360 NUT-1	L-2364 SEAL-I	L-2365 LOCK-I	L-2351 LOCK-I	V-487 WASHER-2	L-2369 LOCK-I
IA 1673 RACE-I	IB 3729 ROLLER ASSEM.-I	I-ROLLER ASSEM. 52366	52365- RACE-I	IB 4110 BEARING-I	L-2350 RETAINER-I
L-2347 GEAR-I	L-2346 PINION-I	52541 BEARING-I	IB 4119 BEARING-I	IA 1676 COVER-I	L-1509 COUPLING-I
<p>L-1039 GASKET-I</p>		<p>IA 1675 SHAFT-I</p>		<p>L-2355 CAGE-I</p>	<p>L-2356 GASKET-2</p>
<p>I-KNOB--2795-A I-SPRING--II0222 I-PIN---II0223</p>		<p>IA 2579 LEVER ASSEM.-I</p>		<p>IA 1671 CASE-I</p>	
<p>L-2348 SHAFT-I</p>		<p>L-2371 PULLEY-I 12" DIA. 6$\frac{1}{2}$" FACE</p>		<p>L-2359 RING-I</p>	<p>L-2361 GASKET-2</p>
<p>L-2344 HOUSING-I</p>					


1A1689 AND 1A1668 BELT PULLEY DRIVE GROUP PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

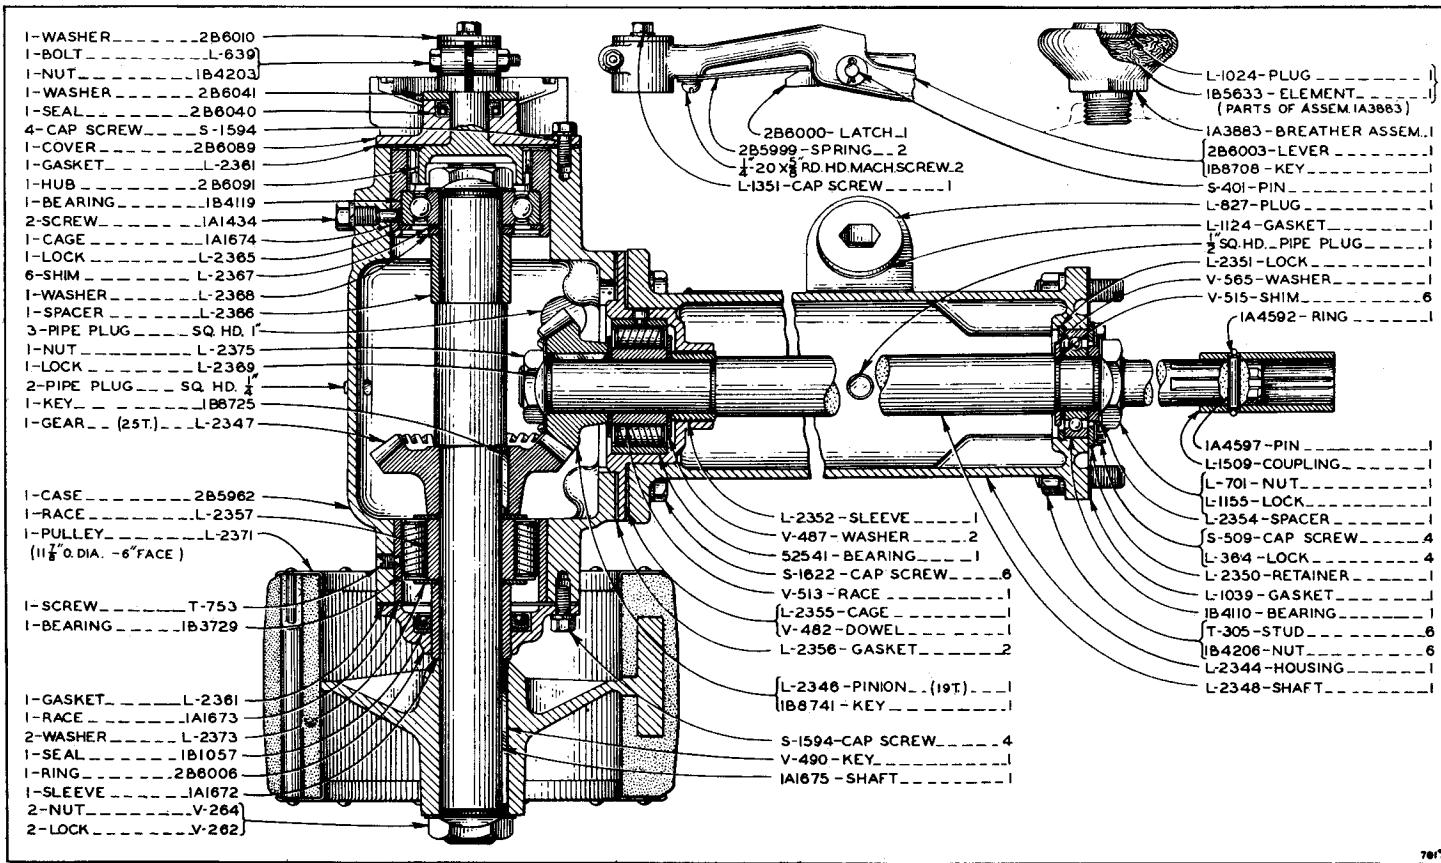


2B6022 BELT PULLEY DRIVE GROUP—WITH PULLEY
2B6028 BELT PULLEY DRIVE GROUP—WITHOUT PULLEY

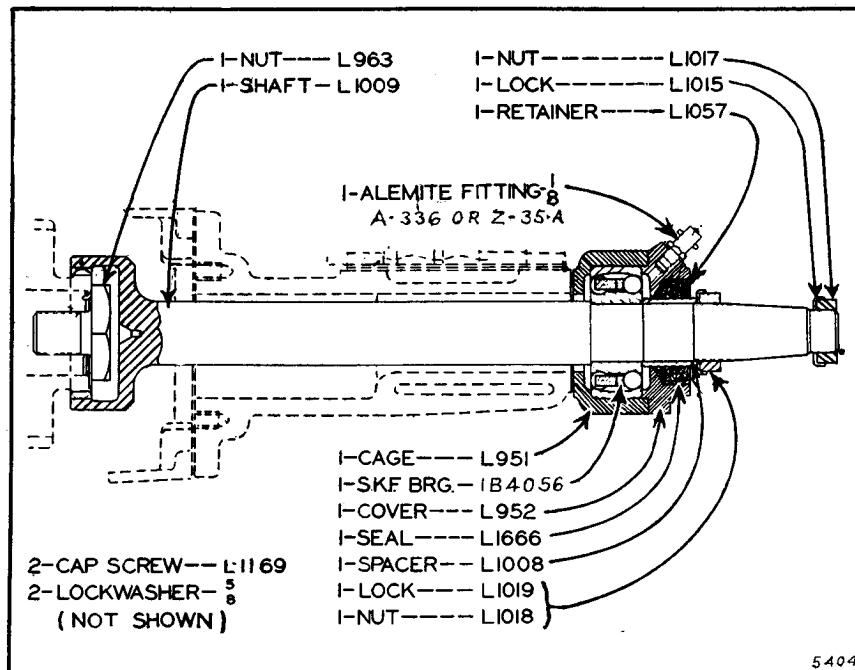

5404


L-1663-A FRONT POWER TAKE-OFF GROUP

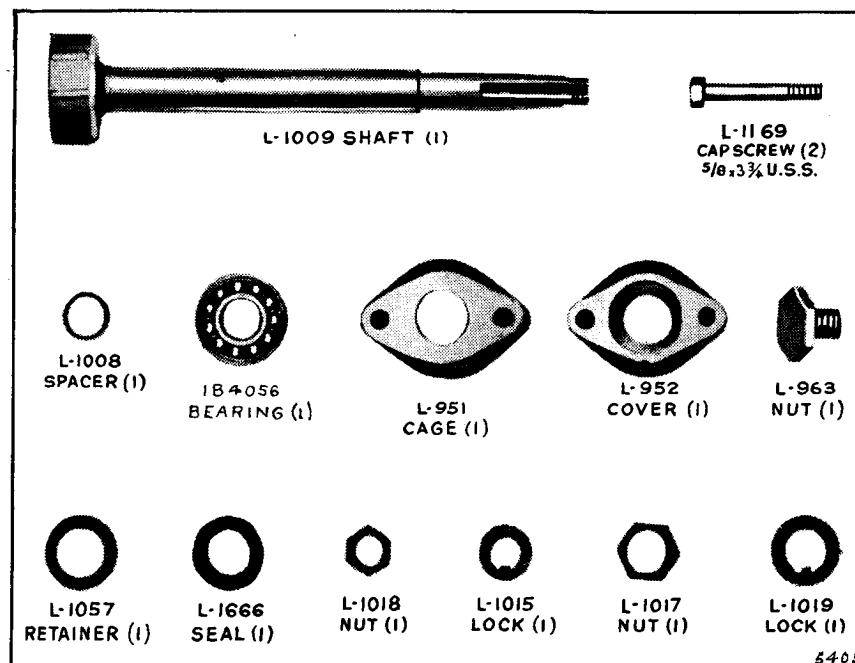

5405

L-1663-A FRONT POWER TAKE-OFF GROUP PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

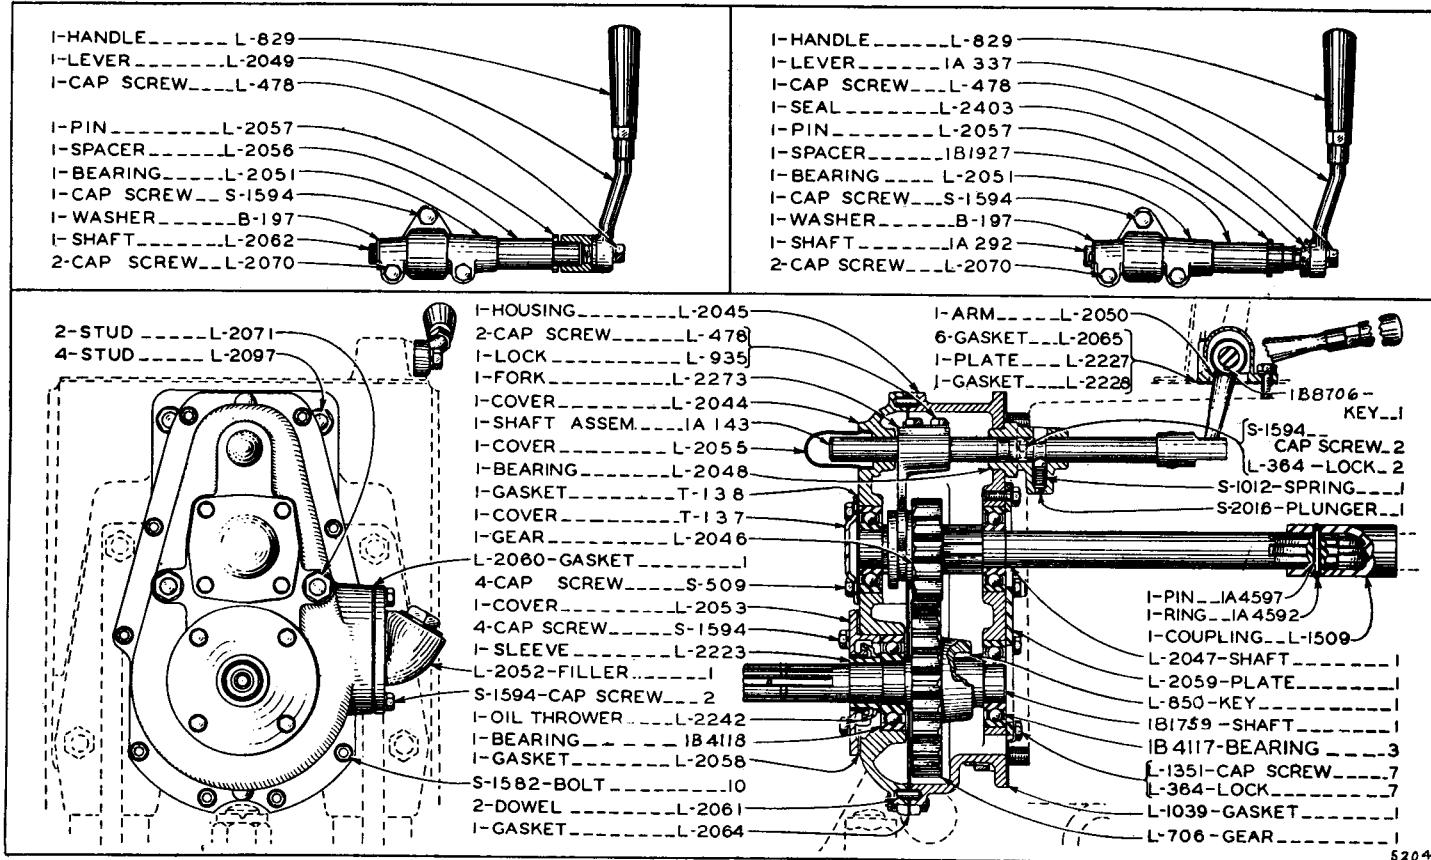


L-2069-A REAR POWER TAKE-OFF GROUP—TOP SEAT
1B1226 REAR POWER TAKE-OFF GROUP—REAR SEAT

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


PARTS CATALOG

107

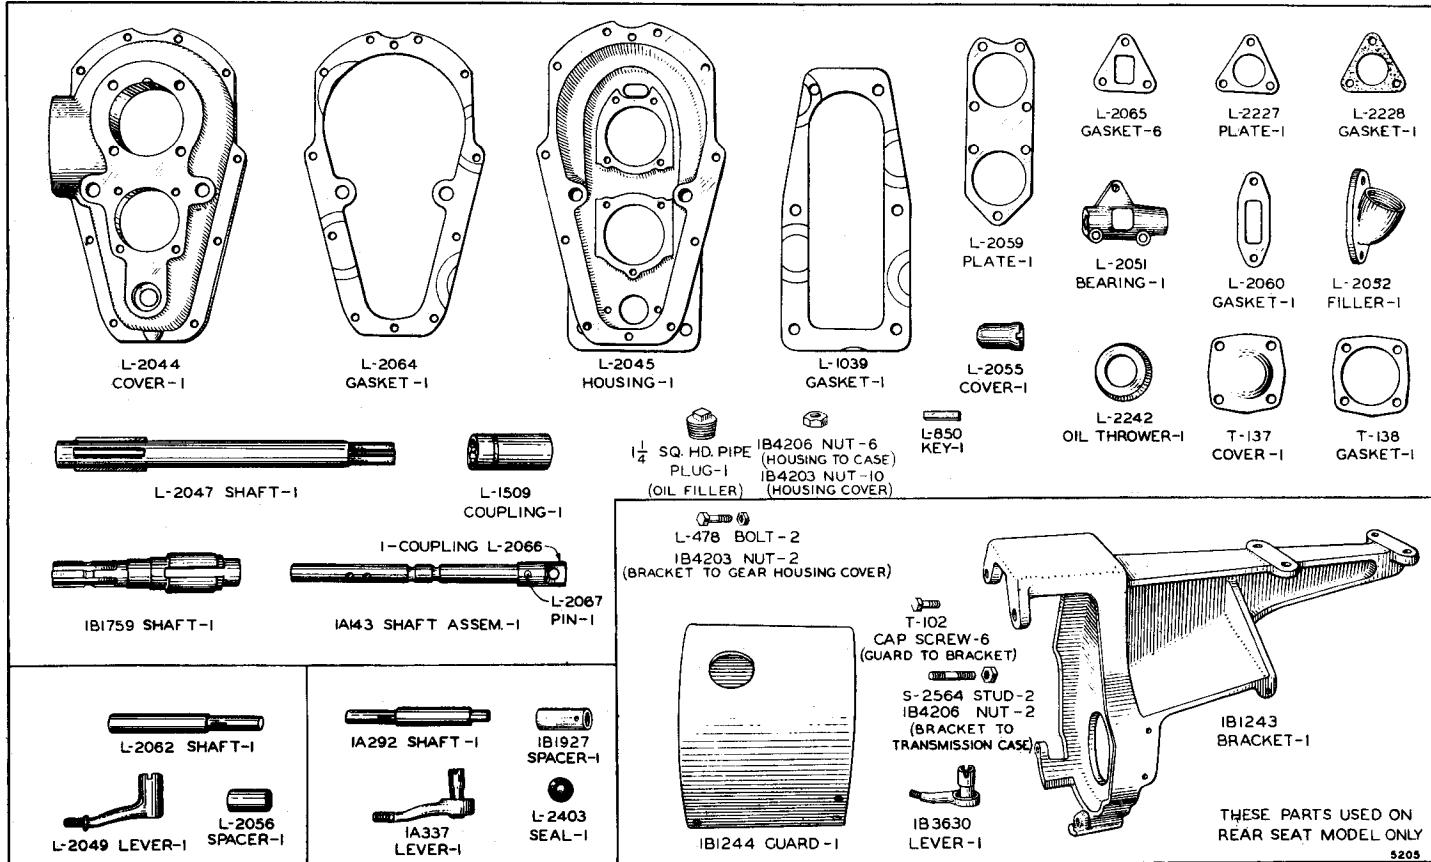


L-2069-A AND 1B1226 REAR POWER TAKE-OFF GROUP PARTS

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

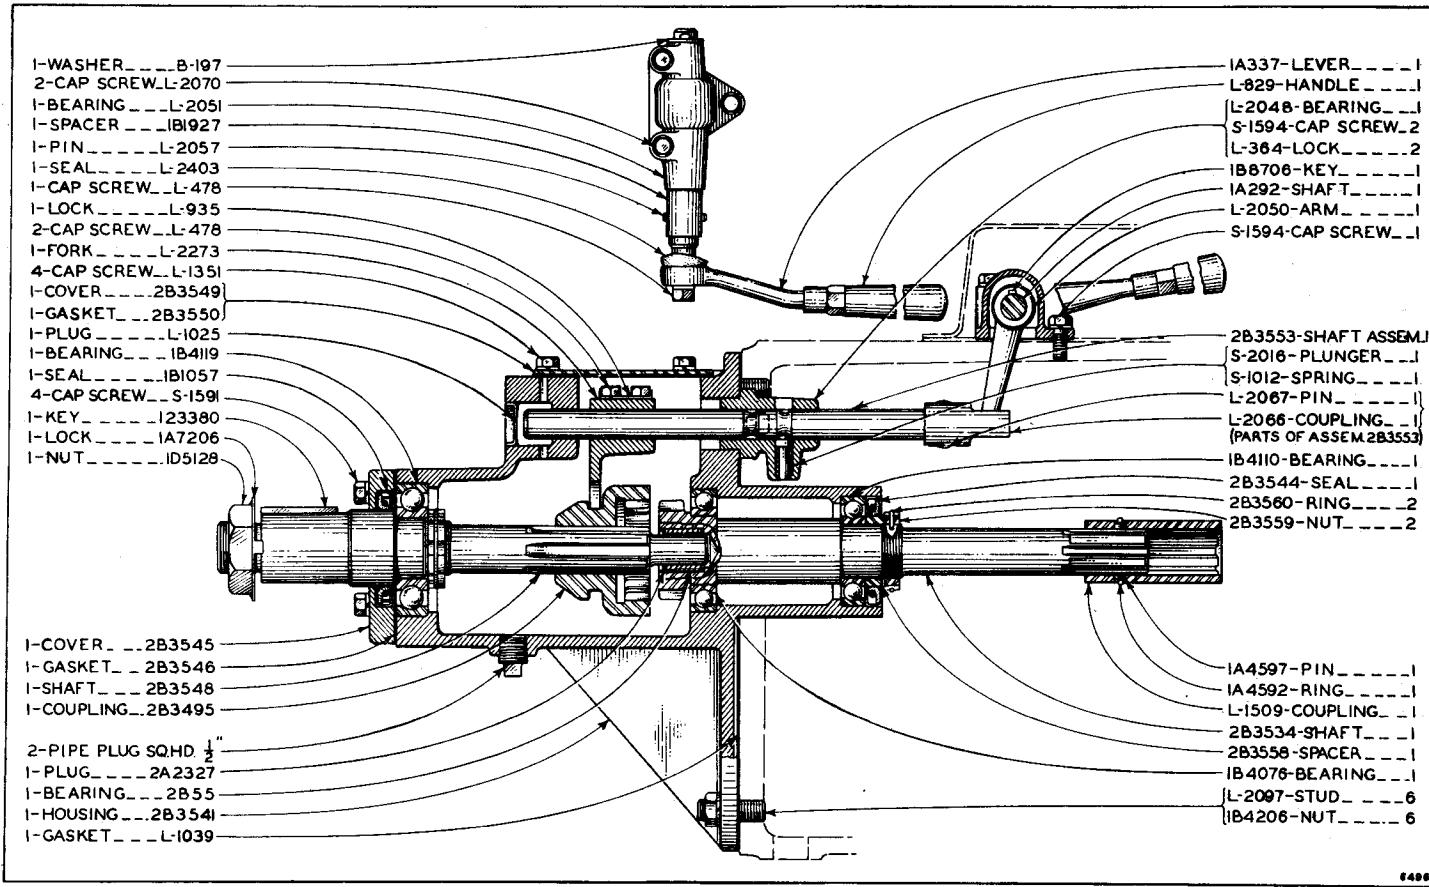


2B3562 REAR POWER TAKE-OFF GROUP—DIRECT DRIVE

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

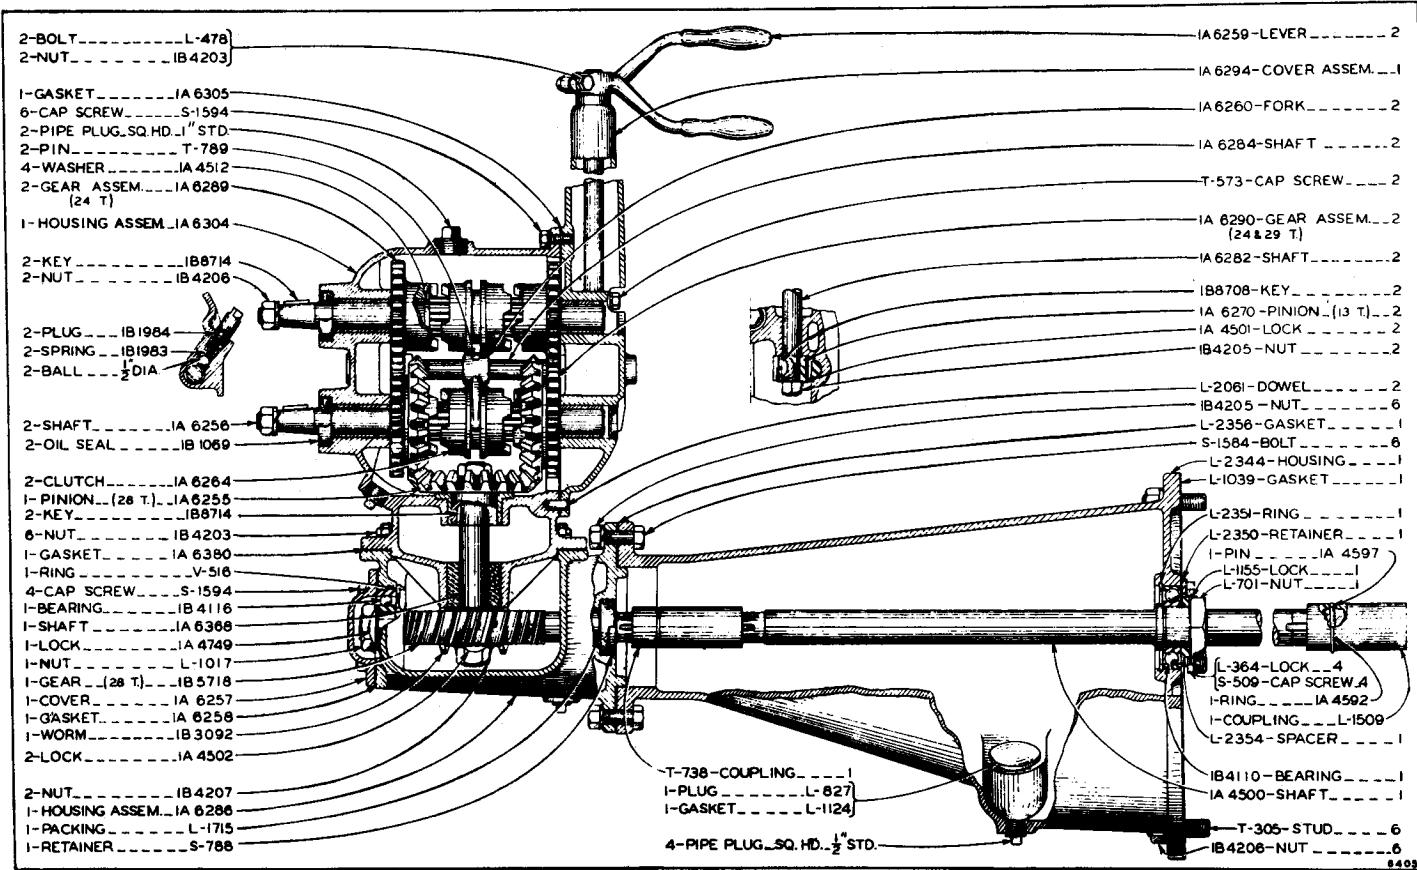

1B5728 REAR DOUBLE POWER TAKE-OFF GROUP
(For use with Side Seat)

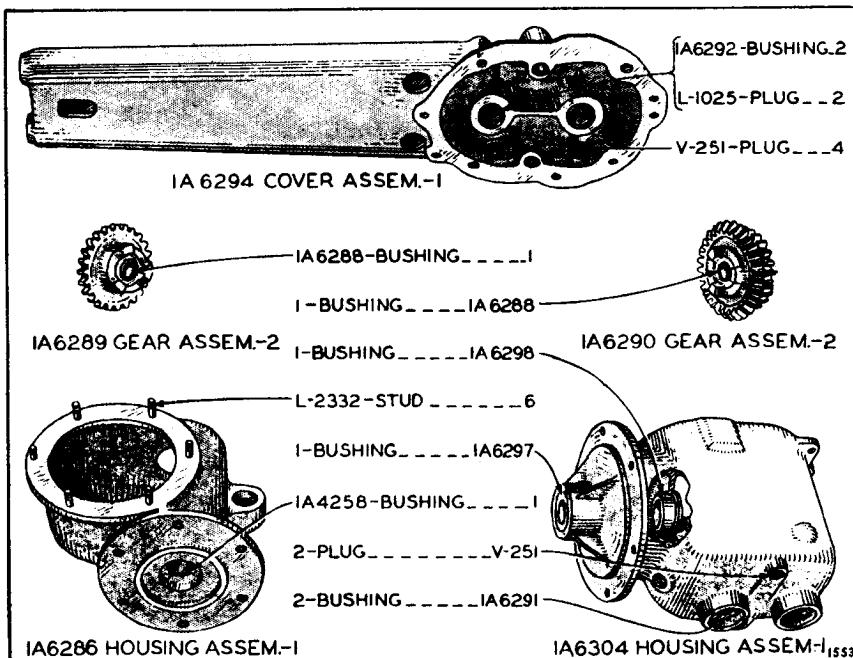


1B5728 REAR DOUBLE POWER TAKE-OFF GROUP PARTS

LIST OF TRANSFERS

Quantity Used	Part Number	Description
2	8B87	Transfer ("Caterpillar")
1	4B1503	Transfer (Manufactured by Caterpillar Tractor Co., Peoria, Ill.)
1	1B8784	Transfer-Tractor Instructions

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

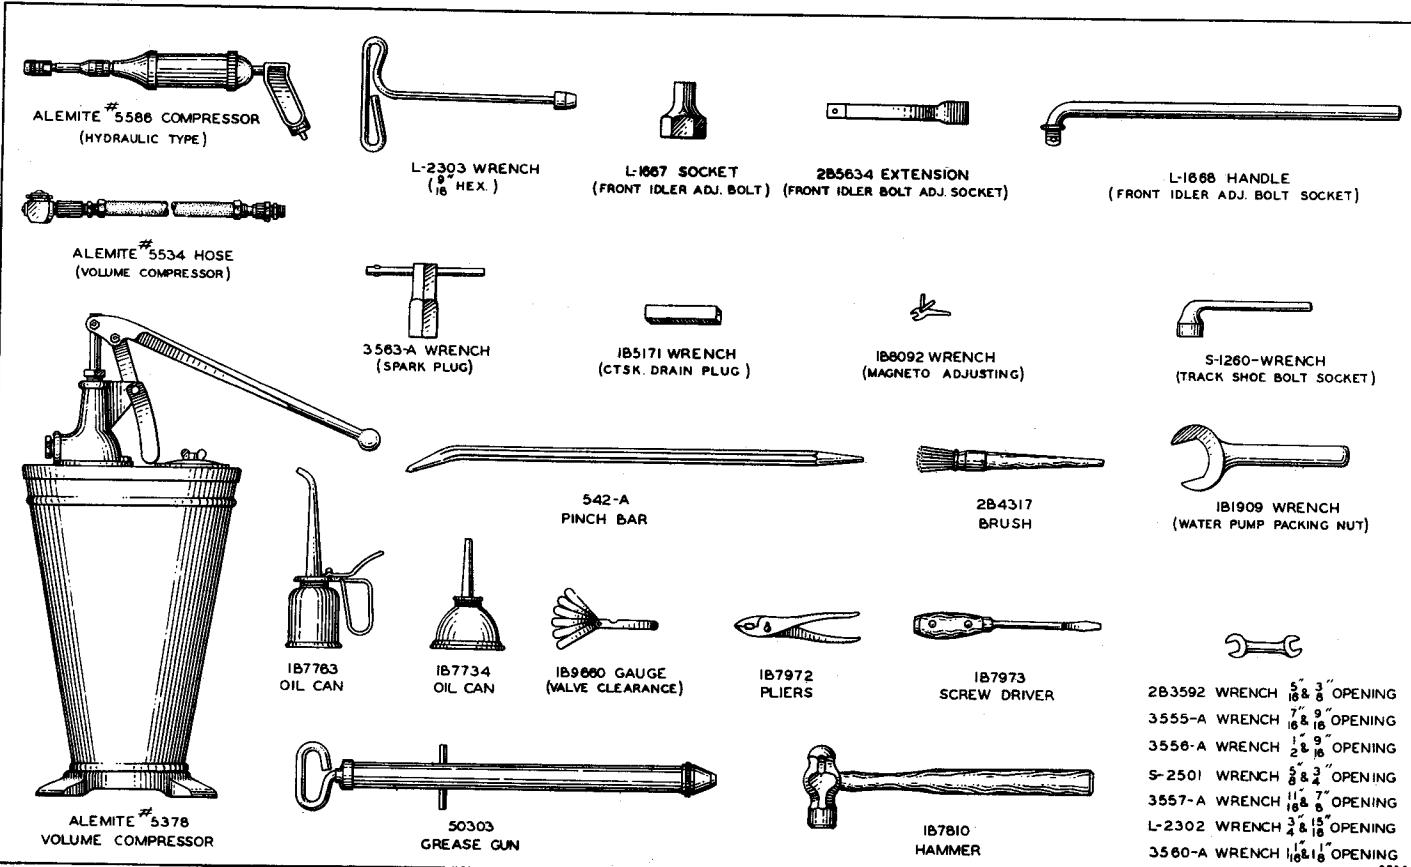

1A2458 TOOL GROUP (With Volume Compressor)
4B7508 TOOL GROUP (Without Volume Compressor)

LIST OF ACCESSORY MANUFACTURERS**"Eisemann"**

Eisemann Magneto Corporation
60 East 42nd Street, New York, New York

"Ensign"

Ensign Carburetor Co., Ltd.
7010 S. Alameda Street, Huntington Park, California
or
2644 S. Michigan Avenue, Chicago, Illinois

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS**FORM 7125****PRINTED IN U. S. A.**