

D2 TRACTOR

50 INCH GAUGE

Bunting Tractor Co., Inc.
Burley, Idaho

SERIAL NUMBERS
5J1 TO 5J1863
INCLUSIVE

CATERPILLAR TRACTOR CO.
PEORIA, ILLINOIS, U. S. A.

**RÉPRINT
PUBLISHED
MARCH
1948**

THIS PARTS CATALOG contains illustrations, part numbers, names and the quantities required of all serviced parts of the "Caterpillar" Diesel D2 Tractor and attachments.

"Caterpillar" machines and attachments are sold and serviced by a world-wide organization of responsible distributors and dealers with well stocked Parts Departments and factory trained servicemen. To insure the continued satisfactory operation of your "Caterpillar", equipment, use only **Genuine "CATERPILLAR" Parts** which are built to the same high standards of quality, material and workmanship as the original parts.

There is a "Caterpillar" Dealer near you.

How to Order Parts Correctly

To insure receiving correct parts with a minimum of delay, place orders with your "Caterpillar" Dealer, being sure to furnish the quantity, part number and name of each item wanted. The serial number of the machine for which the parts are intended should always be given. This is important!

Do not overlook furnishing the correct name of the consignee, also the street address, town, county and state to which the parts are to be shipped and state whether shipment is to be made by freight, express, parcel post or other means.

Claims

Claims for mistakes or failure to ship all parts ordered should be made promptly upon receipt of the shipment.

The shipper's responsibility for breakage, loss or damage ceases upon delivery of the merchandise to the transportation company from whom a receipt is obtained indicating that the shipment was accepted by them in good condition.

If any of the material shown on the bill of lading or express receipt is short, broken or otherwise damaged do not accept the shipment until the carrier's agent acknowledges the shortage or damage on the original freight bill. This should always be done otherwise the transportation companies will not entertain a claim for loss or damage. If the agent does not make an inspection, then an affidavit should be made that he was notified (on a certain date) and failed to do so. This affidavit with the original freight bill and the original bill of lading (if available) will support your claim.

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

INDEX

Diesel Engine

Name	Page	Name	Page
Accessory Shaft	12	Fuel Injection System	36
Air Cleaner	31	Gauge-Oil Pressure	52
Breather	34 & 35	Gear-Accessory Idler	12
Camshaft	11	Governor	12
Connecting Rod	16	Heat Indicator	11
Control-Compression Release	35	Hour Meter	64
Control-Fuel Pump	50 & 116	Manifolds	13
Control-Governor	50 & 116	Oil Filler	34
Cooler-Oil	62	Oil Lines	53
Crank-Hand	17	Piston	16
Crankshaft	14	Pump-Fuel Transfer	49
Crankshaft Bearings	13	Pump-Oil	61
Cylinder Block & Covers	18	Pump-Water	9
Cylinder Head	29	Radiator	8
Fan	9	Valve Mechanism	29
Filter-Fuel	43	Water Lines	10
Filter-Oil	56 & 59		

Starting Engine

Air Cleaner	74	Cylinder Head	66
Breather	75	Filter-Fuel	80
Camshaft	73	Fuel System	80
Carburetor	70	Governor	76
Clutch	81	Housing-Clutch	82
Connecting Rod	74	Ignition System	78
Control-Carburetor	75	Magneto	78
Control-Choke	75	Oil Filler	75
Control-Starter Pinion	82	Piston	74
Crankshaft	73	Starter Pinion	81
Cylinder Block	66	Valve Mechanism	66

Clutch, Transmission and Chassis


Name	Page
Brake	106
Clutch-Flywheel	91
Clutch-Steering	84
Control-Flywheel Clutch	89
Control-Fuel Pump	116
Control-Gear Shift	89
Control-Governor	116
Control-Steering Clutch	86
Drawbar	119
Fenders	118
Final Drive	96
Frame-Track Roller	108
Fuel System	91

Name	Page
Guard-Track Roller Frame	109
Hood and Dash	114
Idler-Front	100
Pivot Shaft	107
Roller-Track	110
Seat Cushions	117
Spring-Equalizer	104
Tool Box	117
Tools	188
Track	112
Transfers	191
Transmission	92
Transmission Case and Covers	93


Attachments

Air Cleaner-Rear Seat	142
Battery and Box	162
Belt Pulley Drive	180
Bumper-Front	125
Cab	138
Canopy Top	134
Control-Fuel Pump-Rear Seat	144
Control-Governor-Rear Seat	144
Controls-Rear Seat	143
Curtain-Canopy	136
Curtain-Radiator	122
Disc-Flywheel Clutch	179
Drawbar-High	179
Exhaust Pipe-Orchard Type	152
Extension-Air Cleaner Pipe	137
Fenders-Orchard Type	150
Fenders-Rear Seat	145
Frame-Track Roller	164
Fuel System-Rear Seat	141
Fuel Sys. Arr.-Fender Mtd. Tank	147
Gears-Special	154
Generator	160
Guard-Crankcase	155


Guard-Radiator	122
Guard-Track Roller (H.D.)	166
Guard-Track Roller (Narrow)	163
Hood-Orchard Type	129
Hood-Rear Seat	146
Hood Doors	130
Hood Side Plates	139
Hook-Front Pull	126
Idler-Front (Large O.D.)	169
Indicator-Heat-Rear Seat	146
Lighting System	158
Misc. Group-Rear Seat	147
Muffler	153
Power Lift	171
Power Take-off-Front	173
Power Take-off-Rear	174
Roller-Track Carrier	167
Seat-Fender Mtd. Tank	148
Seat-Rear	140
Shutter-Radiator	124
Spacer & Extension Group	187
Spark Arrester	153
Track-31 and 35 Link	170

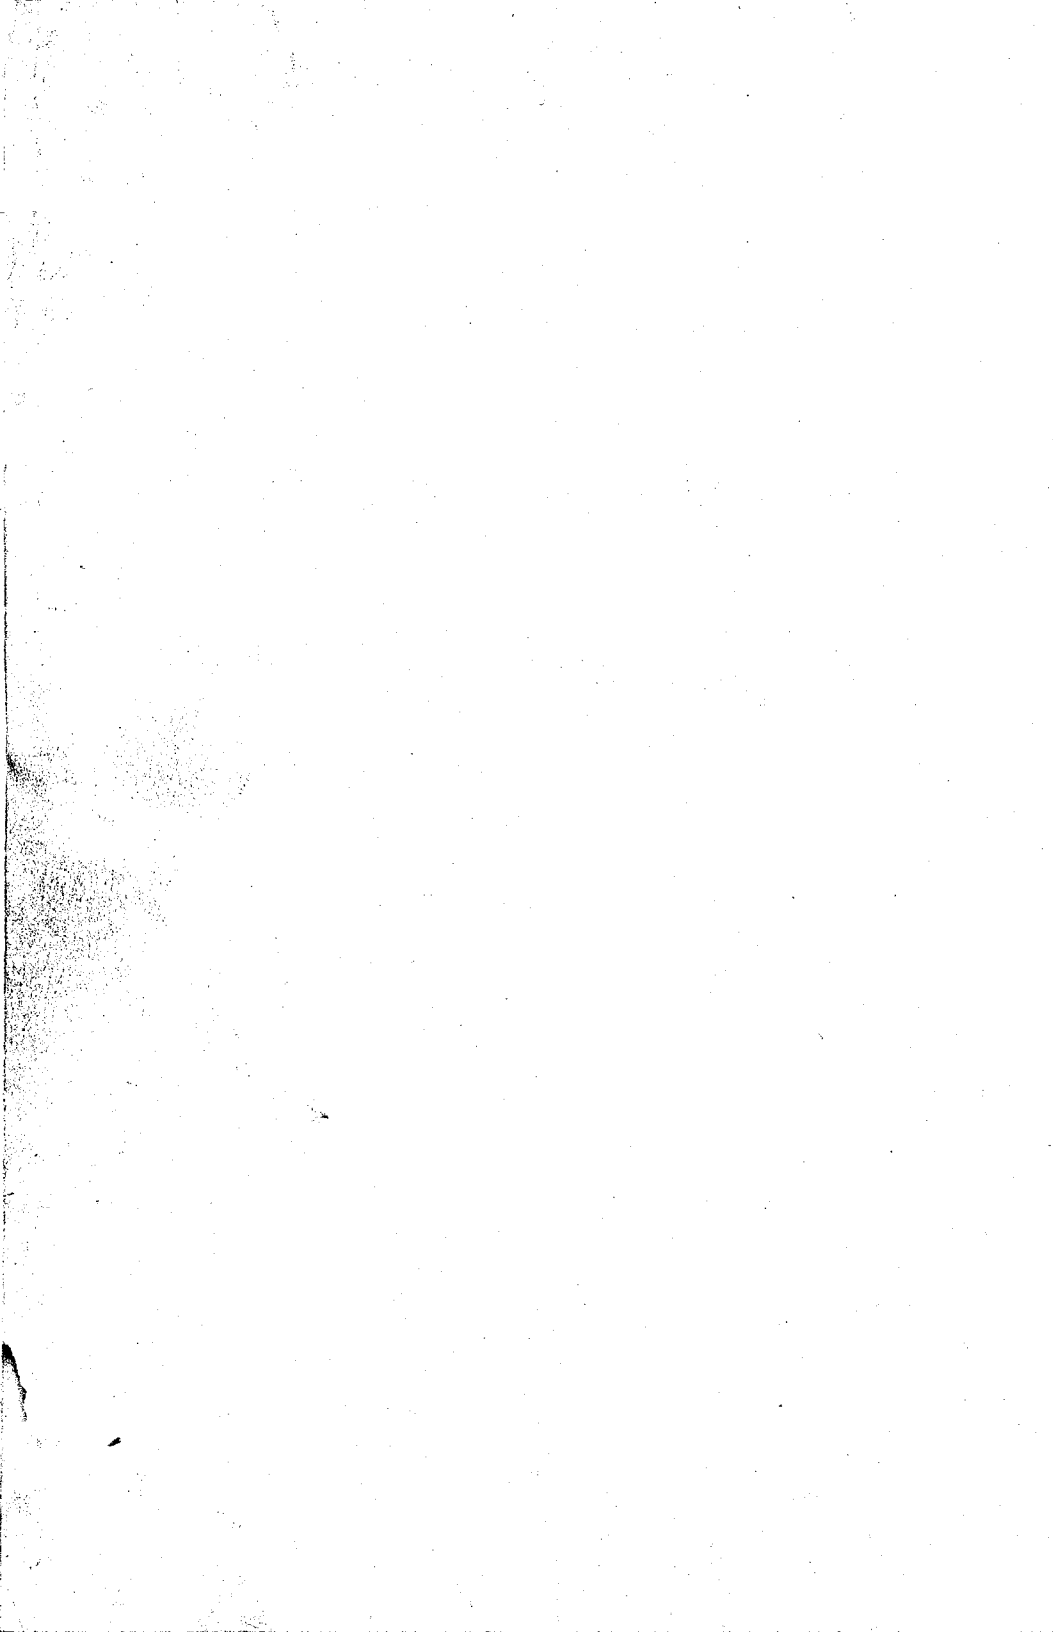

Diesel Engine

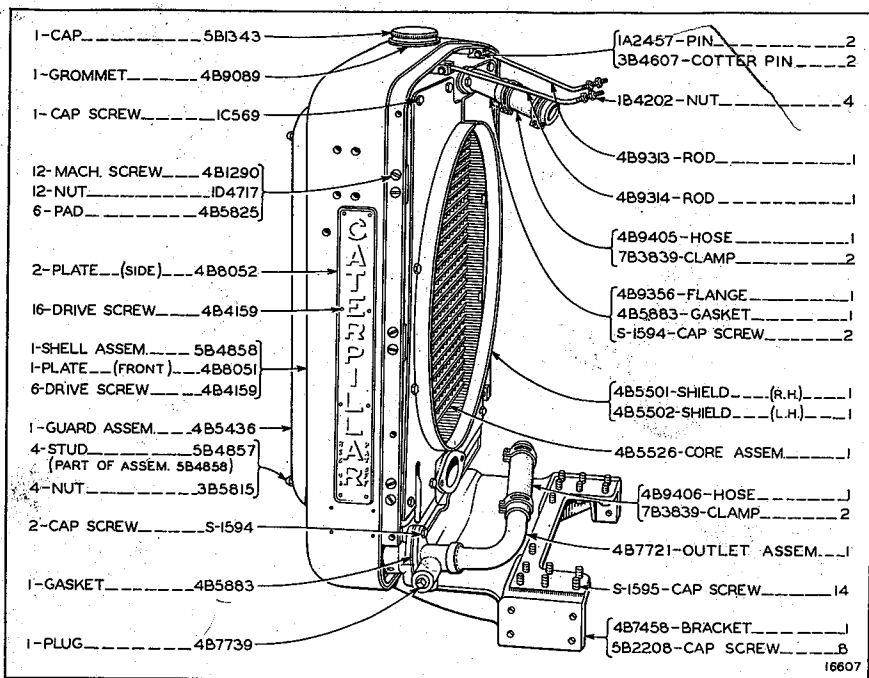
**RADIATOR**

Serial No. 5J1 to 5J1275 Inclusive

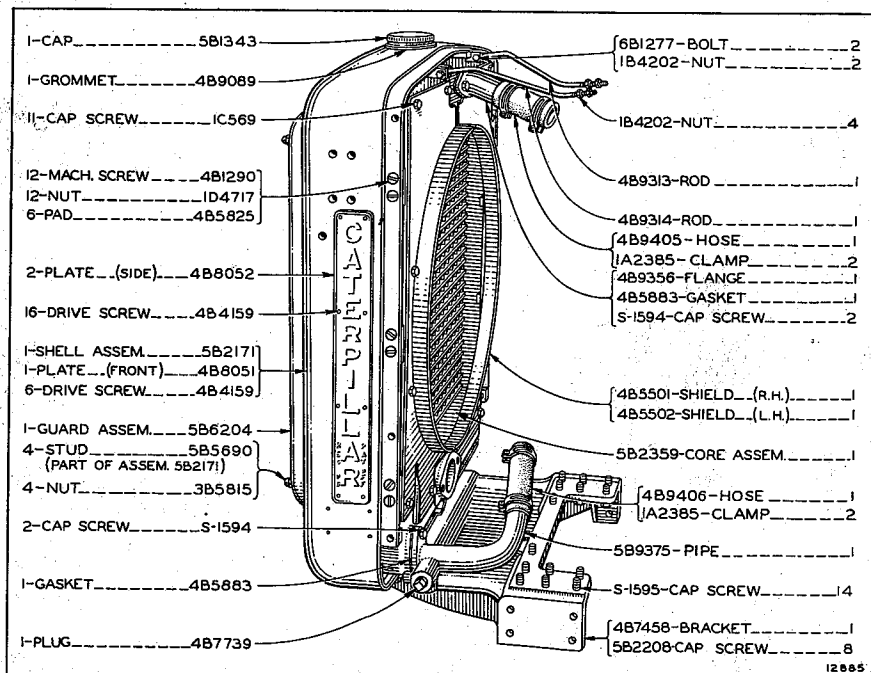
**RADIATOR**

Effective with Serial No. 5J1276


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

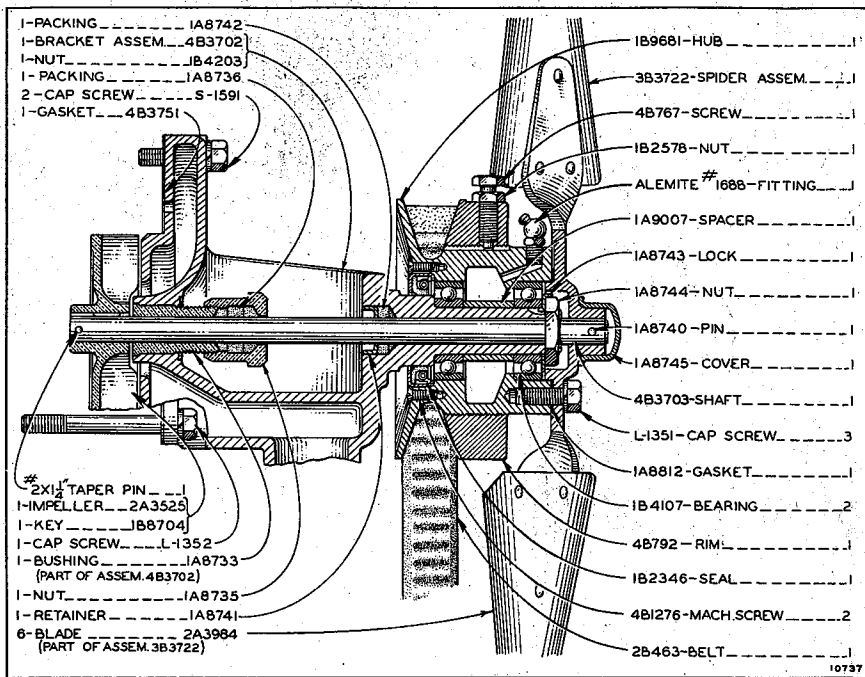

FAN AND WATER PUMP
 Serial No. 5J1 to 5J142 Inclusive

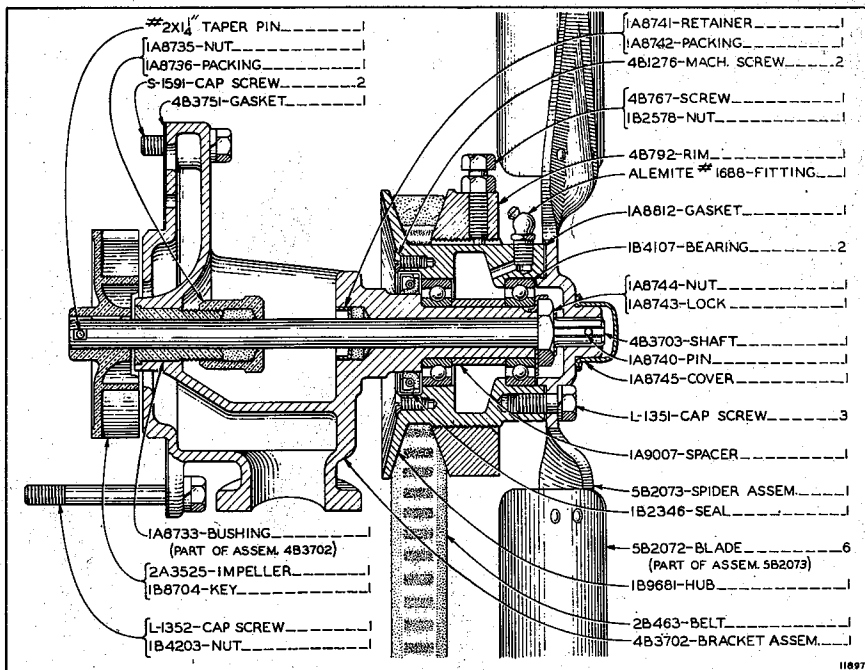


FAN AND WATER PUMP
 Serial No. 5J1413 to 5J1705 Inclusive

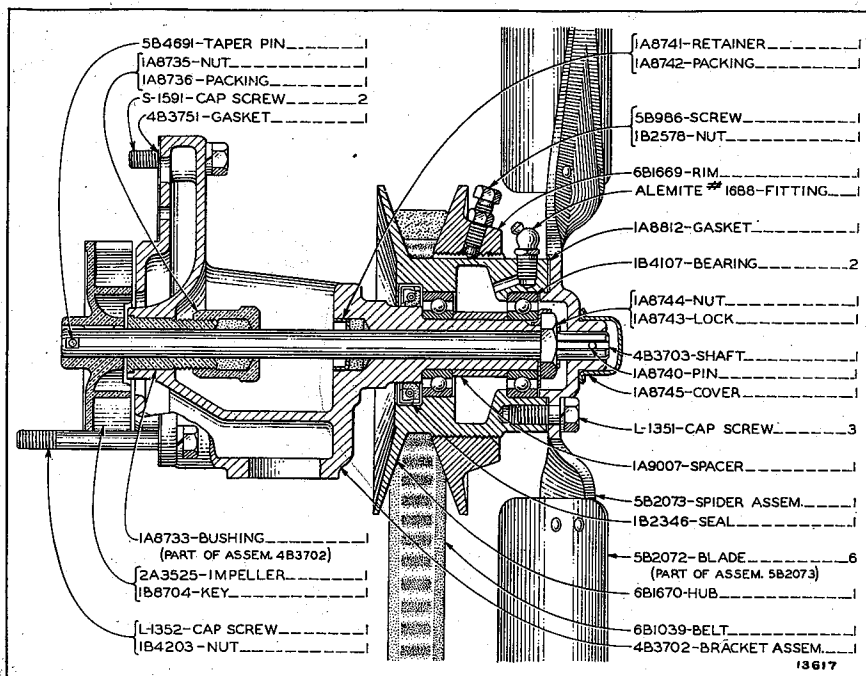


FAN AND WATER PUMP

Effective with Serial No. 5J1706

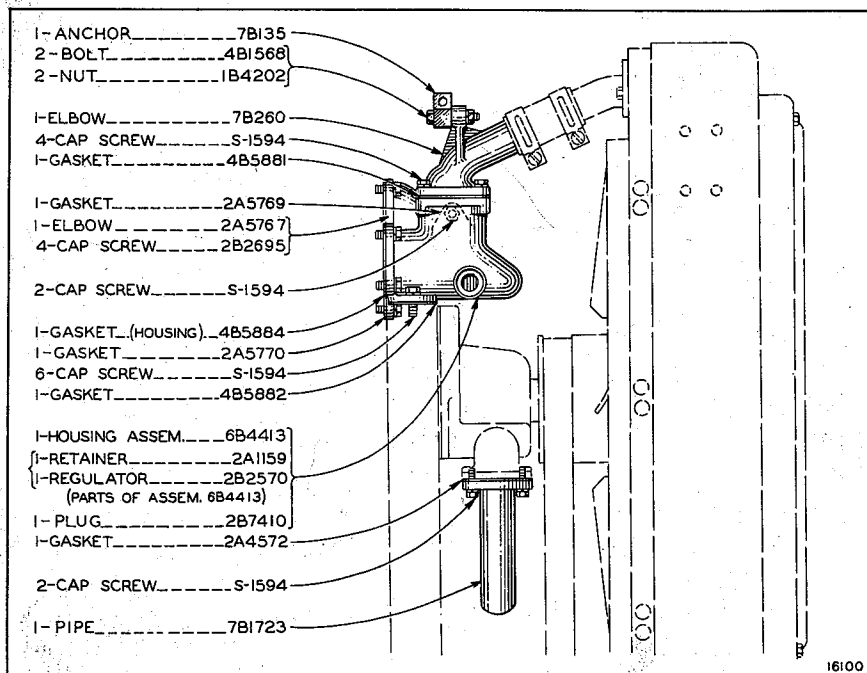


WATER LINES


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

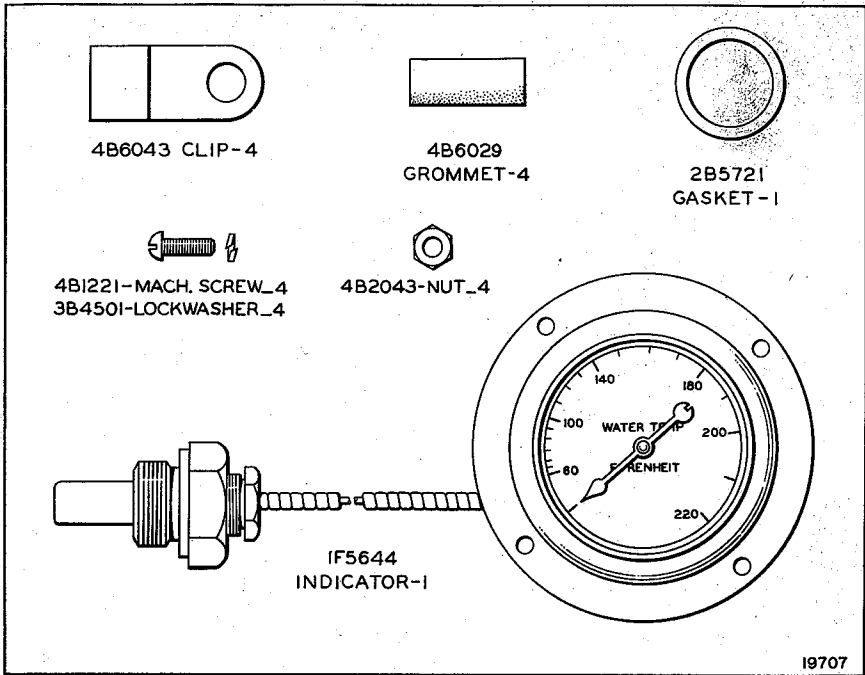


HEAT INDICATOR

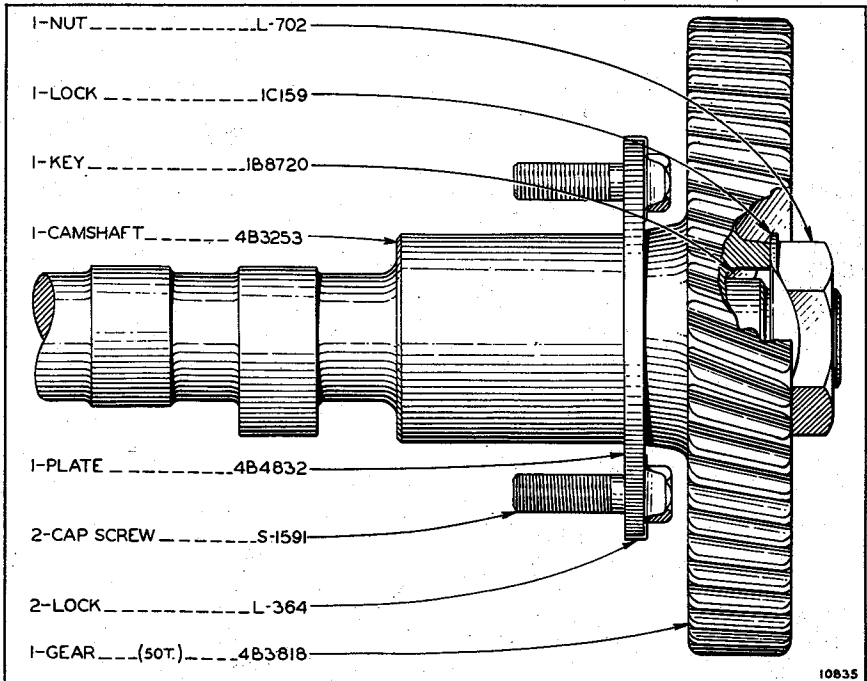


CAMSHAFT

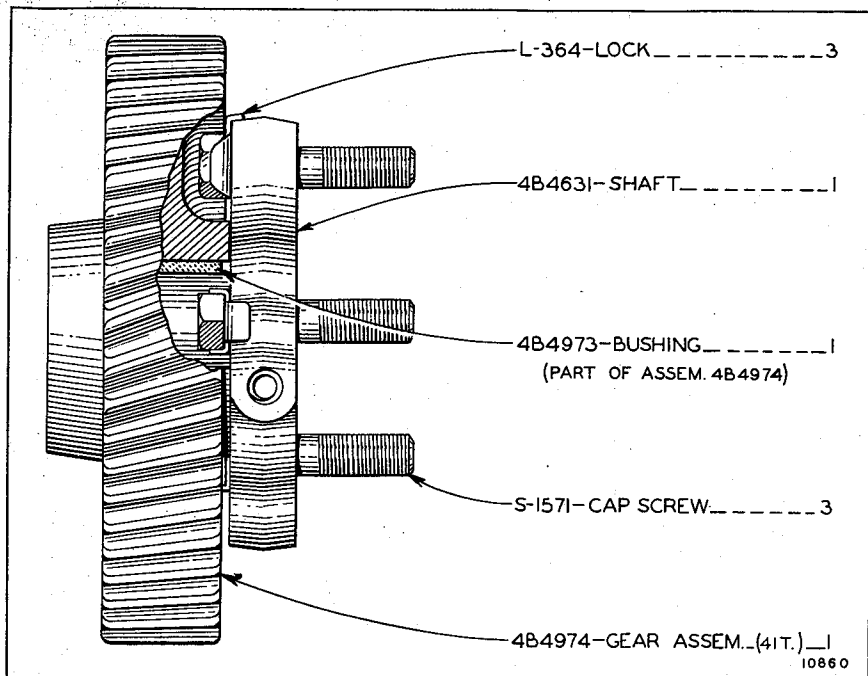

ACCESSORY IDLER GEAR

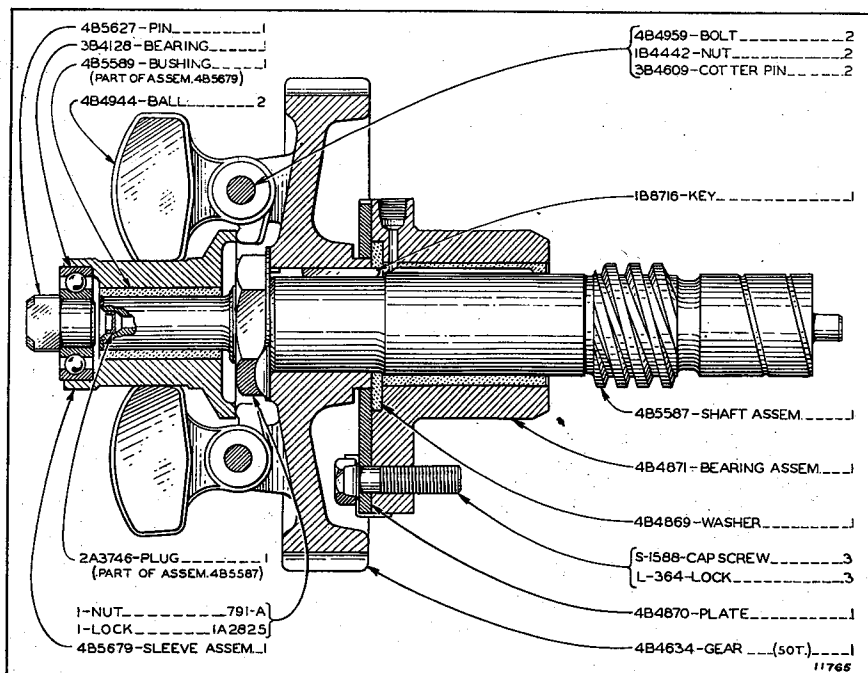

ACCESSORY SHAFT AND GOVERNOR

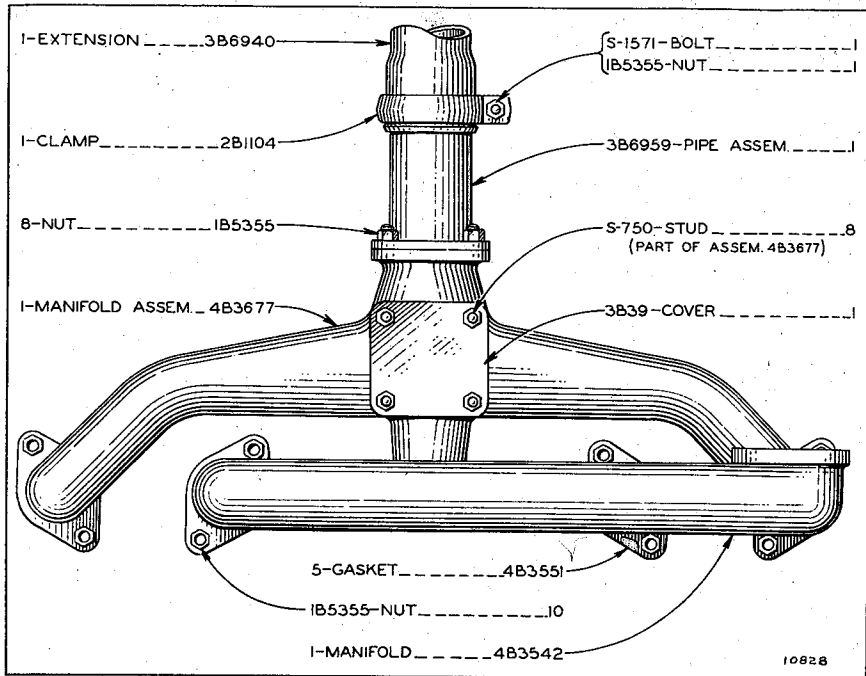

MANIFOLDS

2F624 Crankshaft Bearing Replacement Group

For use with Standard Crankshaft

Consists of:


Complete set of Bearing Assemblies as shown with Standard Crankshaft.

2F633 Crankshaft Bearing Replacement Group

For use with .030 Undersize Crankshaft

Consists of:


- 1 2F626 Bearing Assembly—Front
- 2 2F628 Bearing Assembly—Intermediate
- 1 2F630 Bearing Assembly—Center
- 1 2F632 Bearing Assembly—Rear

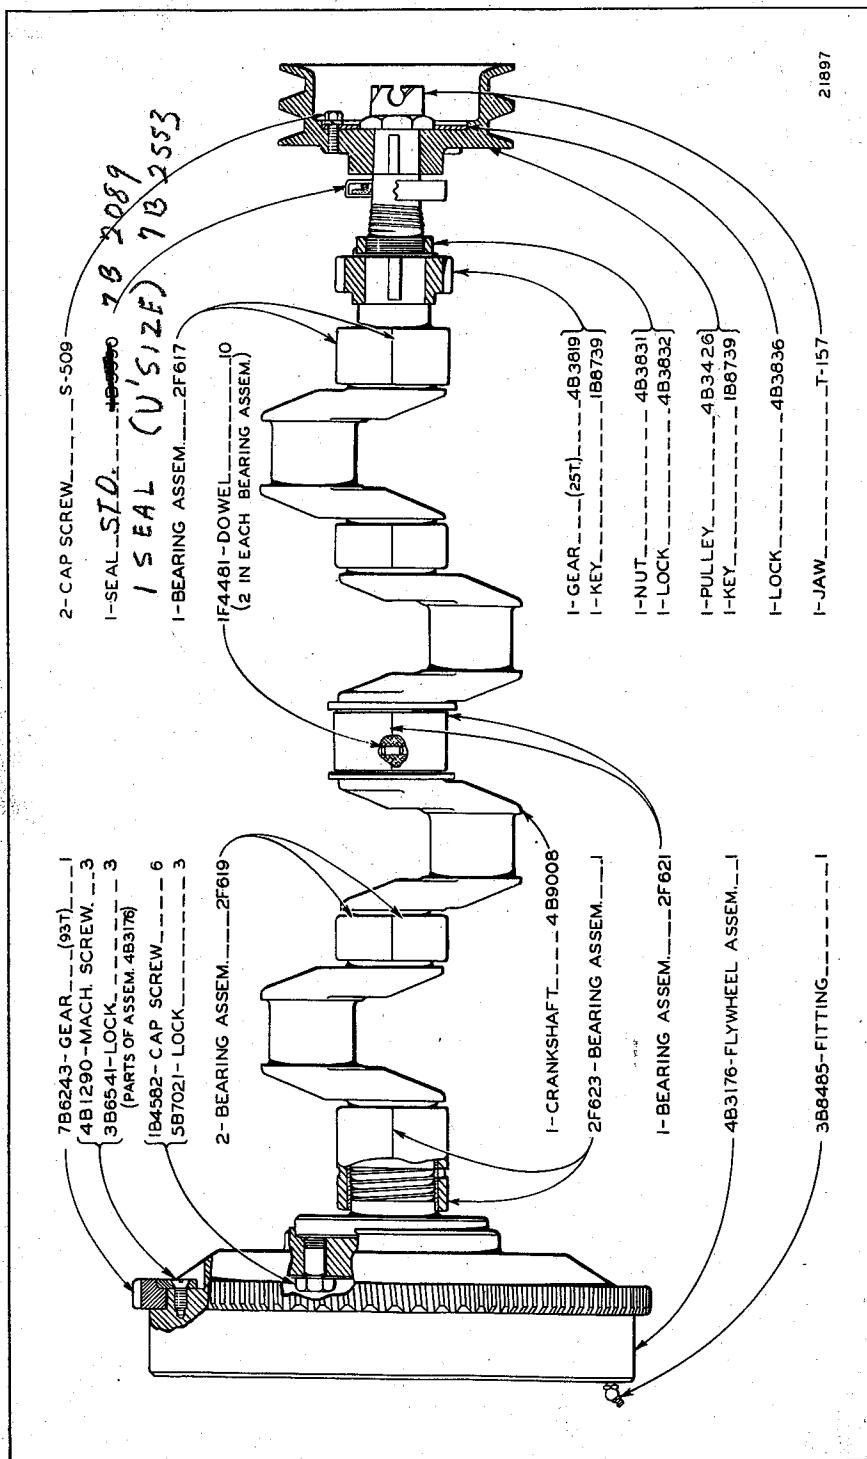

21897


CRANKSHAFT

Serial No. 5J1 to 5J1421 Inclusive

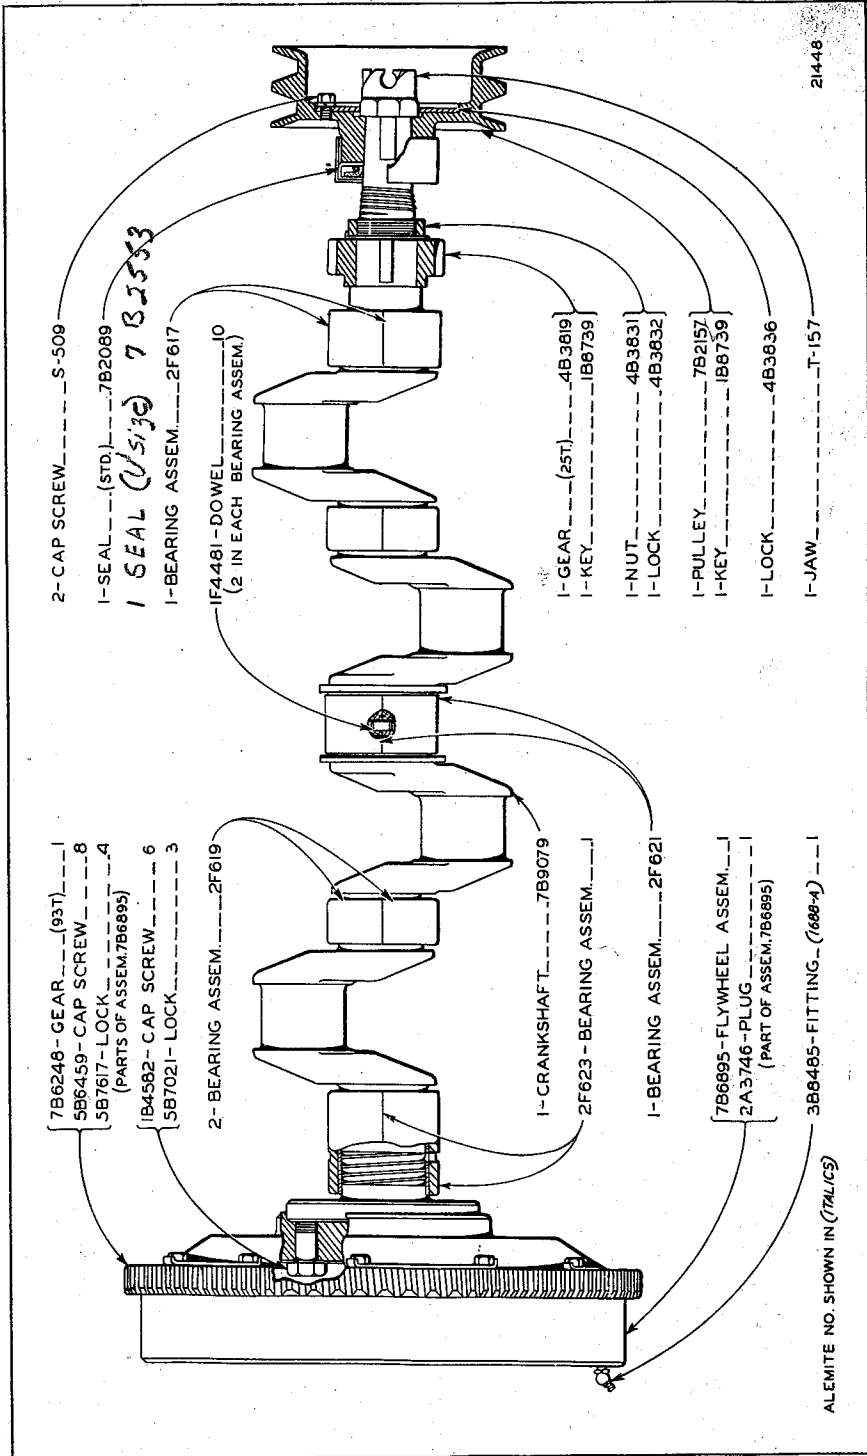


CRANKSHAFT
Effective with Serial No. 5J1422

"CATERPILLAR" D2 TRACTOR

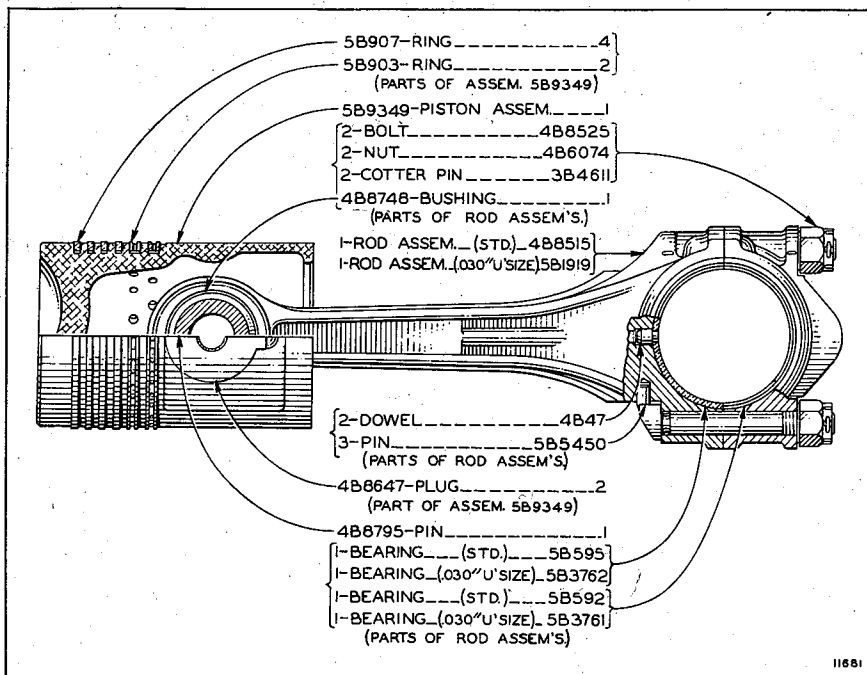

CONNECTING ROD AND PISTON (4 Groups Req'd.)


Serial No. 5J1 to 5J1622 Inclusive

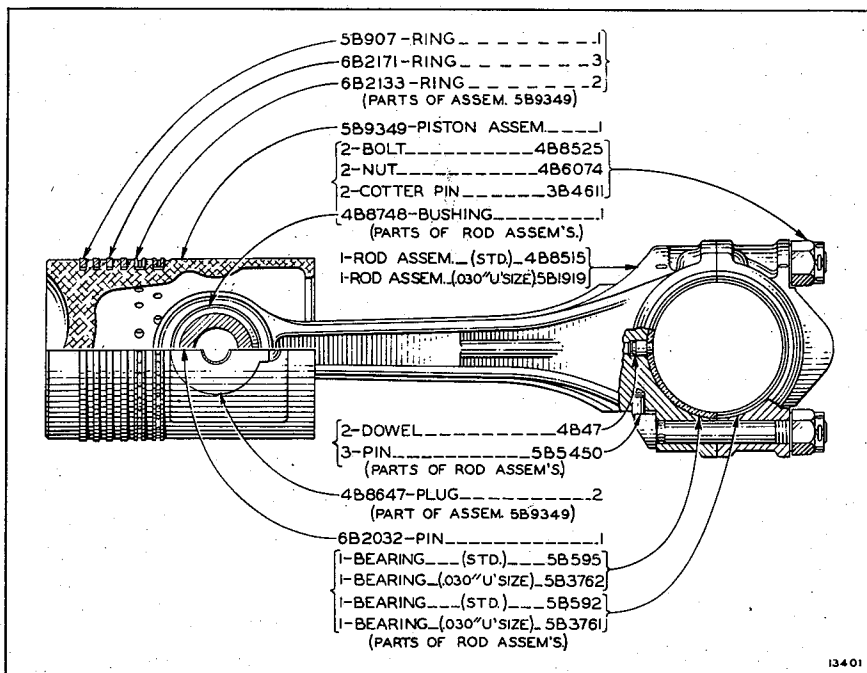

CONNECTING ROD AND PISTON (4 Groups Req'd.)


Serial No. 5J1623 to 5J1749 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

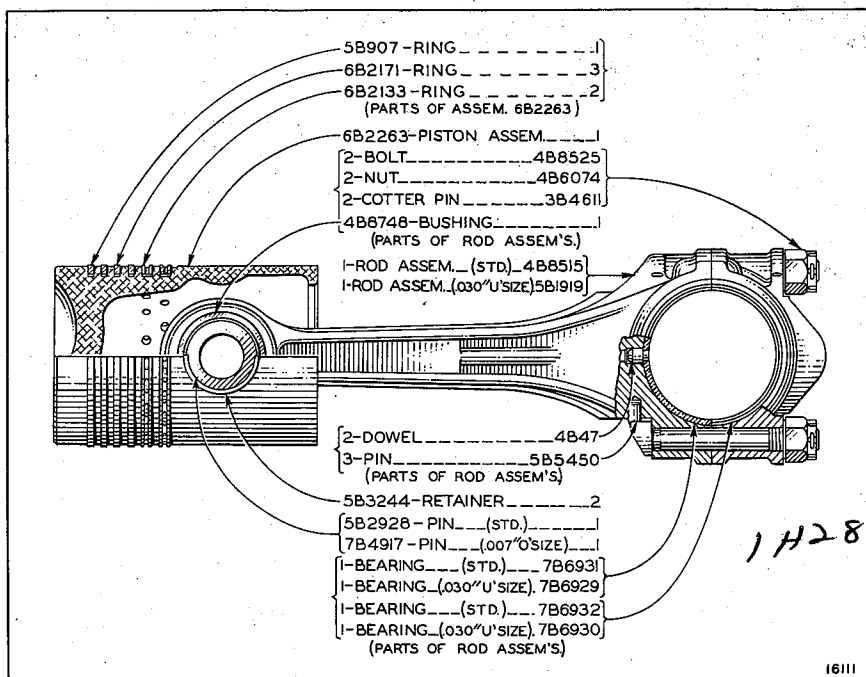


CONNECTING ROD AND PISTON (4 Groups Req'd.)

Effective with Serial No. 5J1750

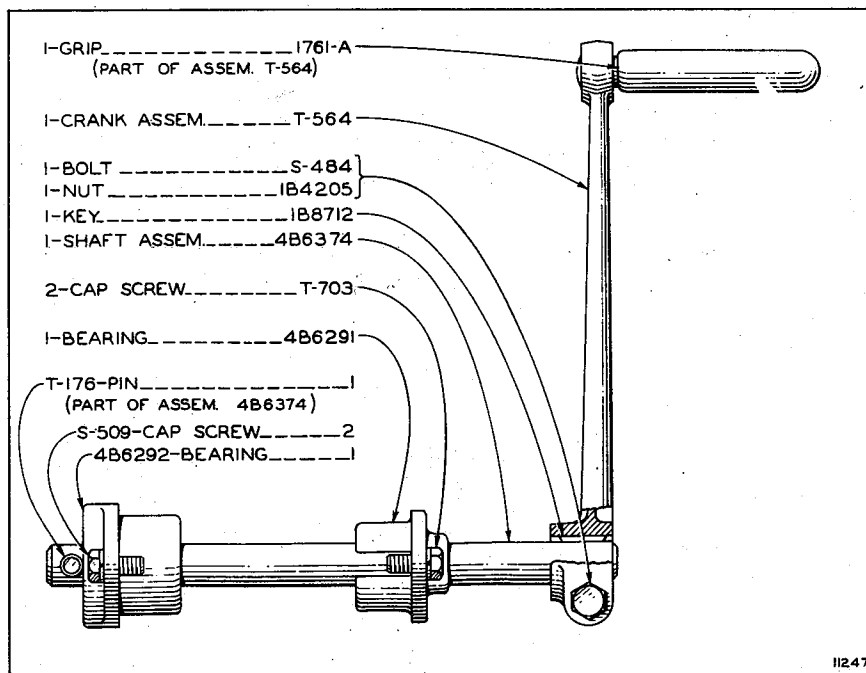

HAND CRANK


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

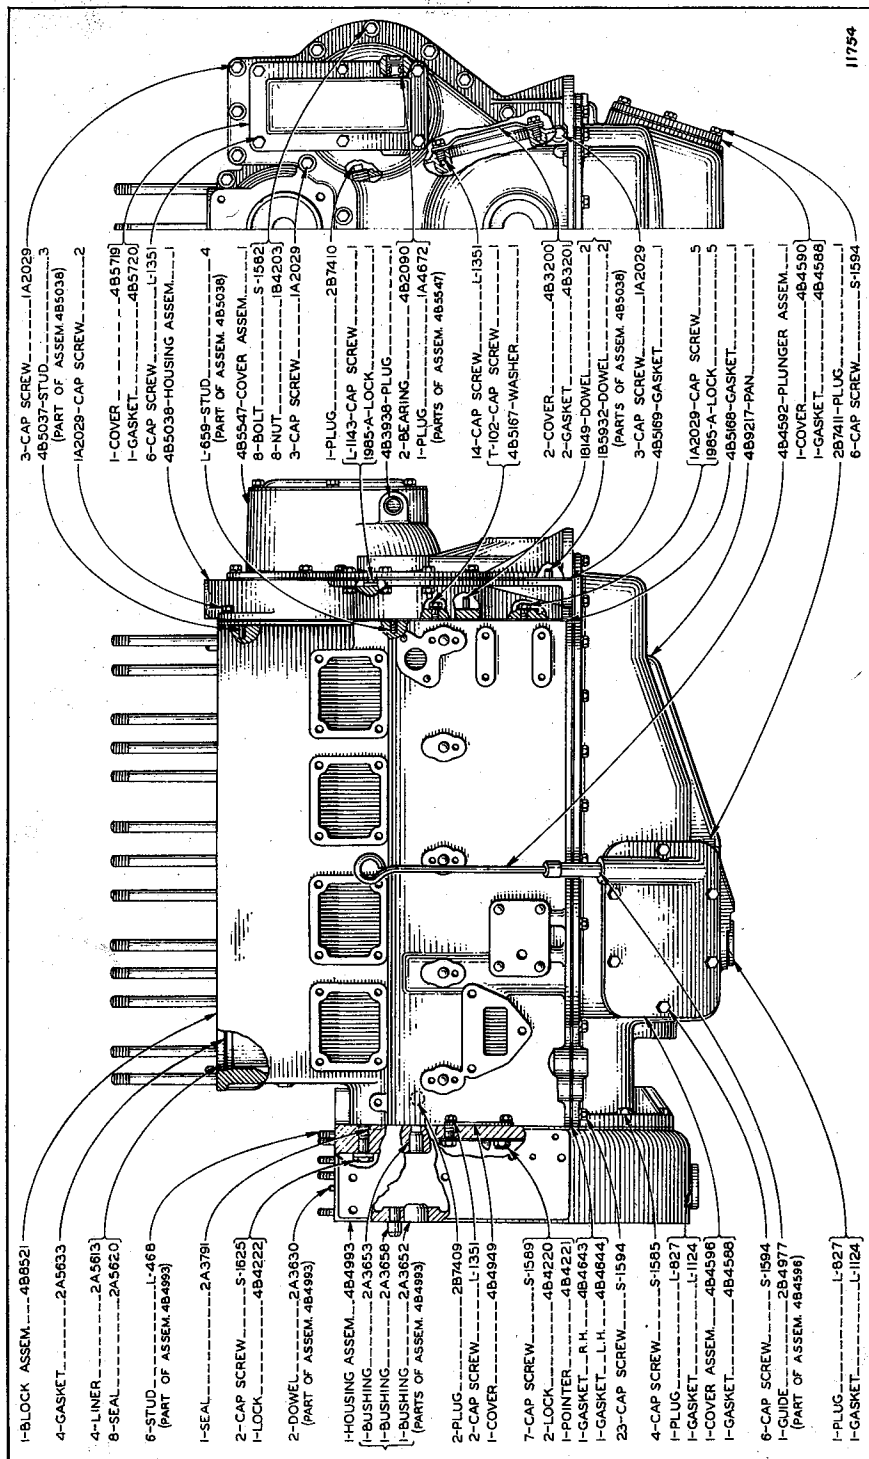

11754

CYLINDER BLOCK AND COVERS
 Serial No. 511 to 51124 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

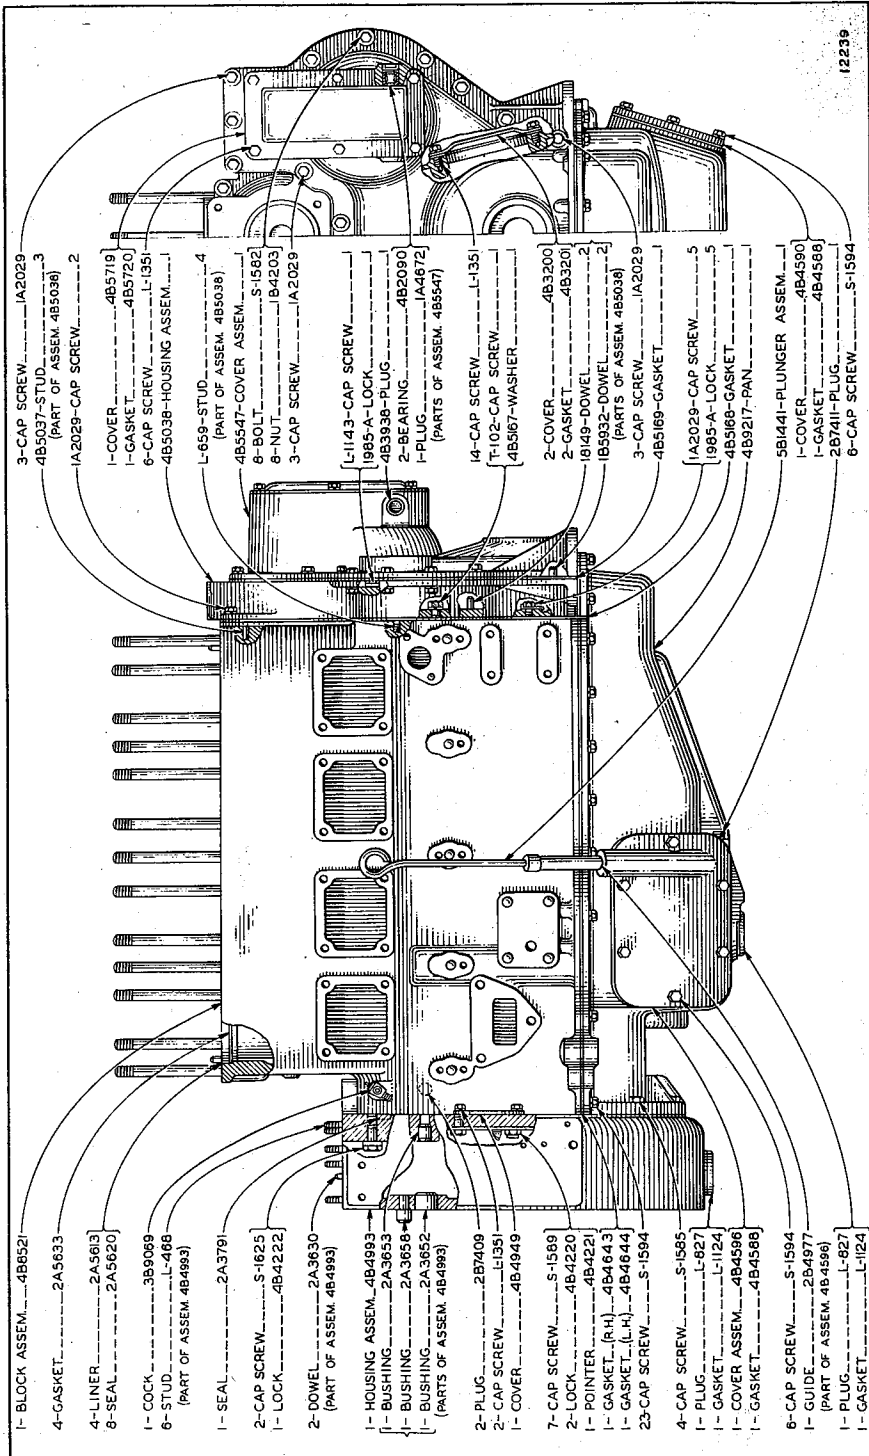


12239

CYLINDER BLOCK AND COVERS

Serial No. 5135 to 51397 Inclusive

4B8521 Block Assembly parts are shown on Page 26. Refer also to Page 164 for special parts.


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

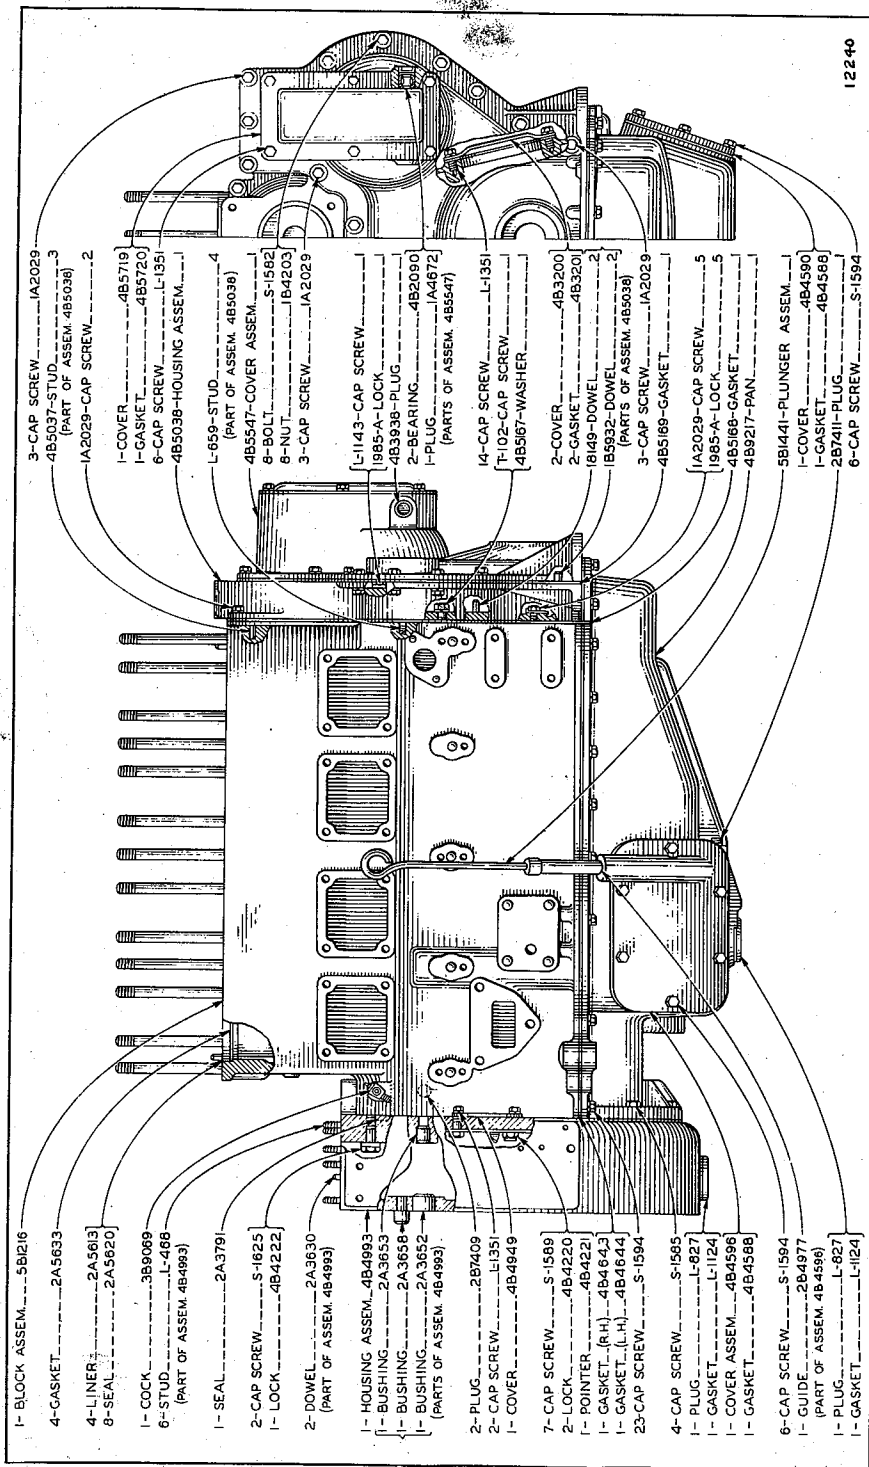

12240

CYLINDER BLOCK AND COVERS
Serial No. 5J398 to 5J637 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

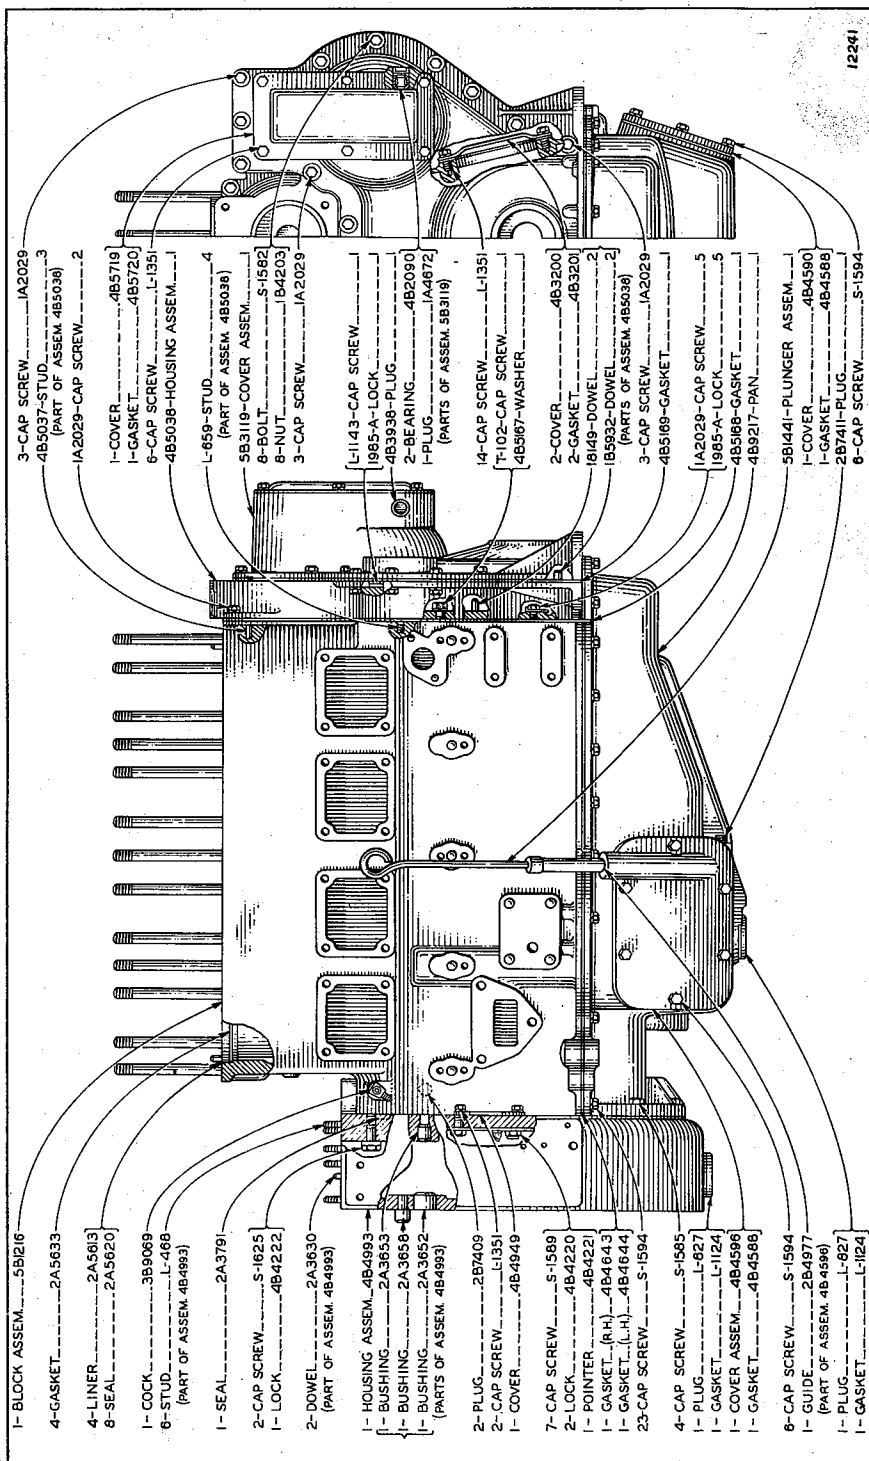


12241

CYLINDER BLOCK AND COVERS


Serial No. 5J638 to 5J707 Inclusive

5B1216 Block Assembly parts are shown on Page 27. Refer also to Page 164 for special parts.

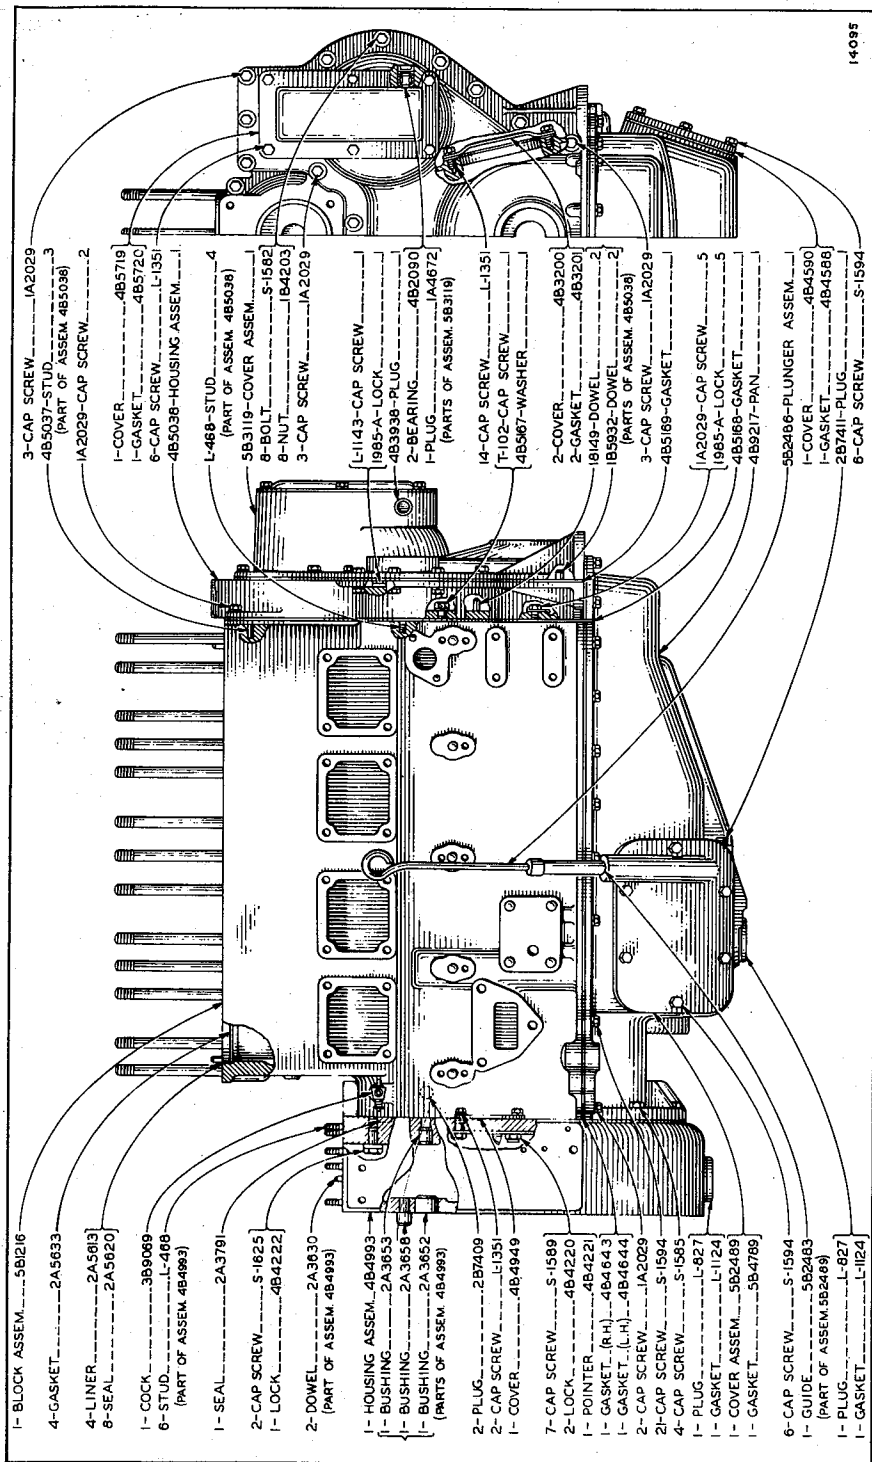

14095


CYLINDER BLOCK AND COVERS
 Serial No. 5J708 to 5J1777 Inclusive

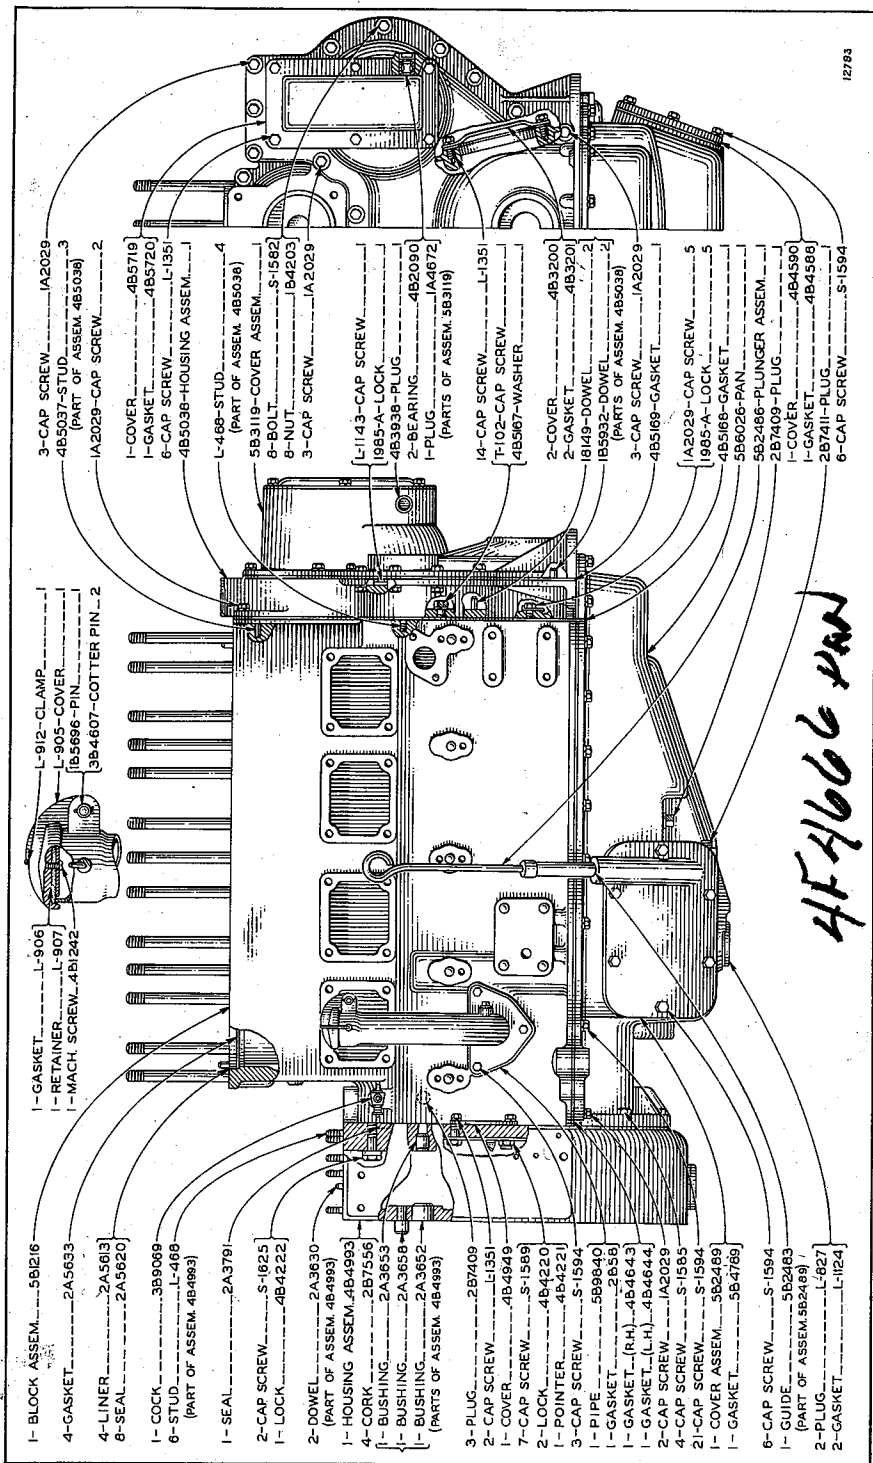

454666 part

CYLINDER BLOCK AND COVERS
Serial No. 5J1240 to 5J1802 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

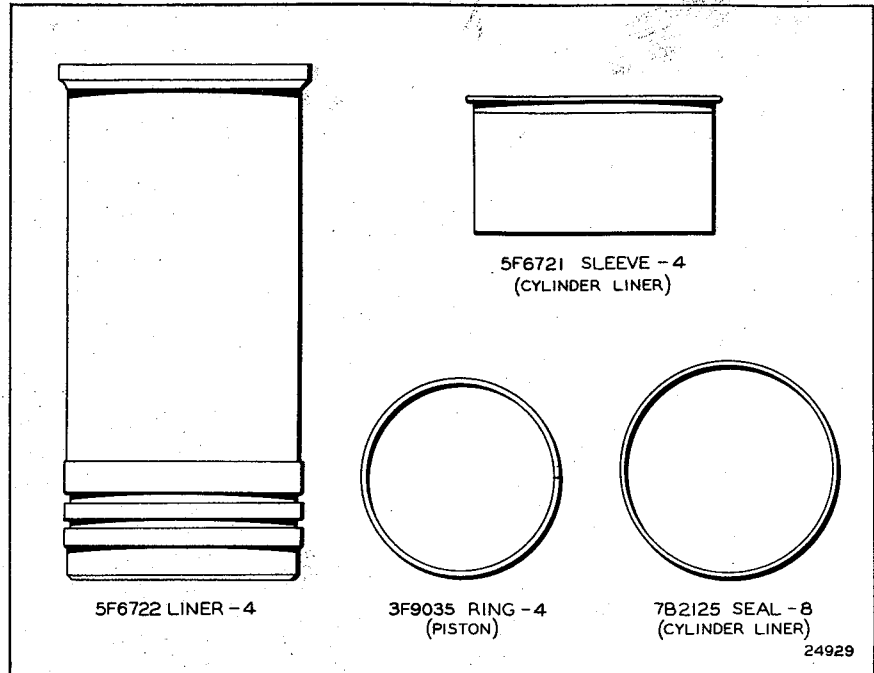**6F3004 CYLINDER LINER AND RING GROUP**

For use with fuel having sulphur in excess of .5% (by weight)


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE



Effective with Serial No. 5J1803

7B963 Block Assembly parts are shown on Page 28. Refer also to Page 164 for special parts.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

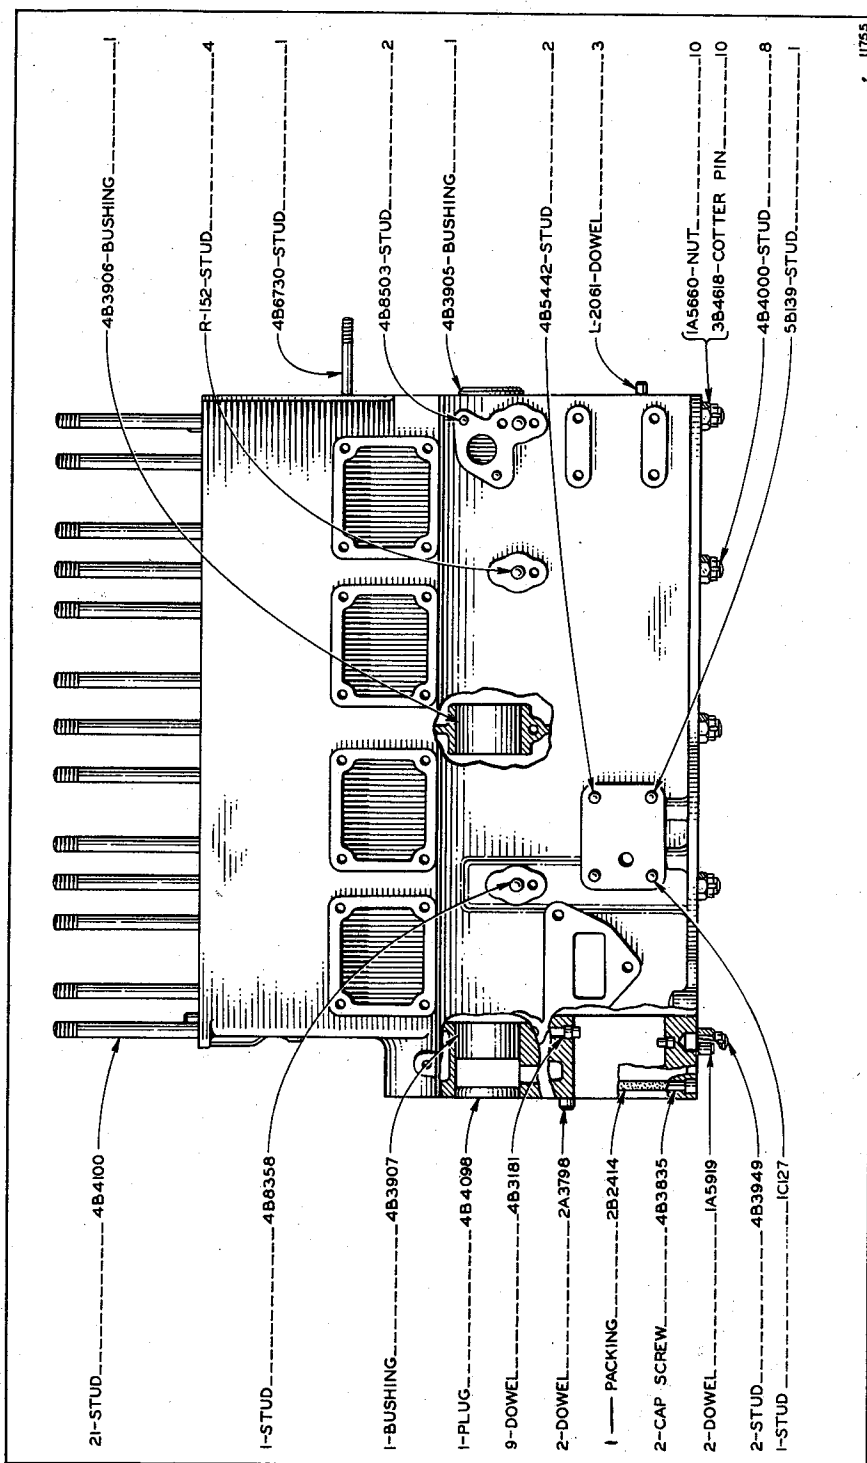


11755

488521 CYLINDER BLOCK ASSEMBLY

Serial No. 511 to 51397 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

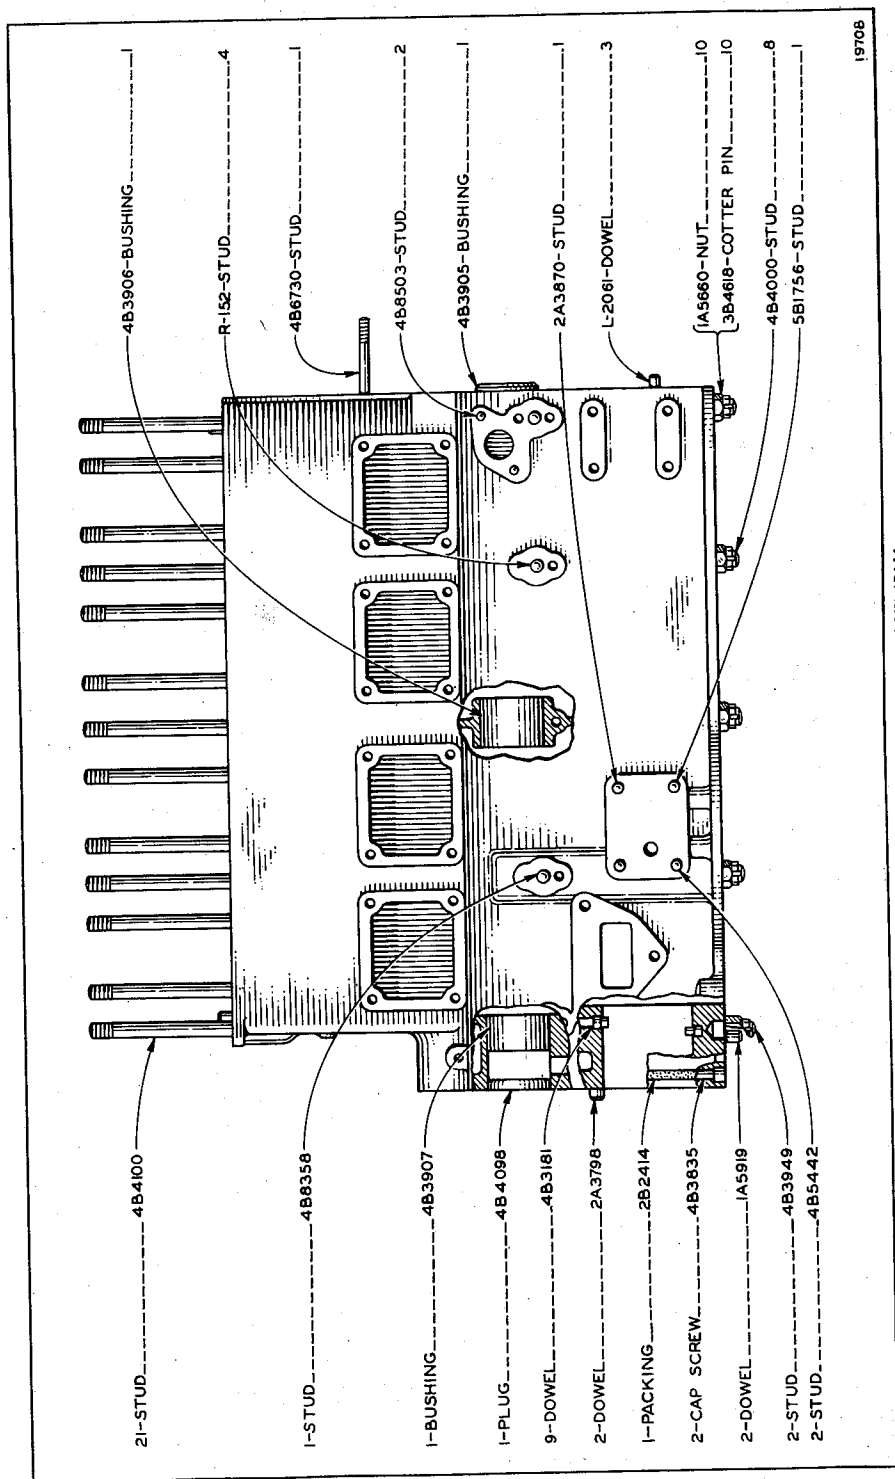


19708

5B1216 CYLINDER BLOCK ASSEMBLY
Serial No. 5J398 to 5J1802 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

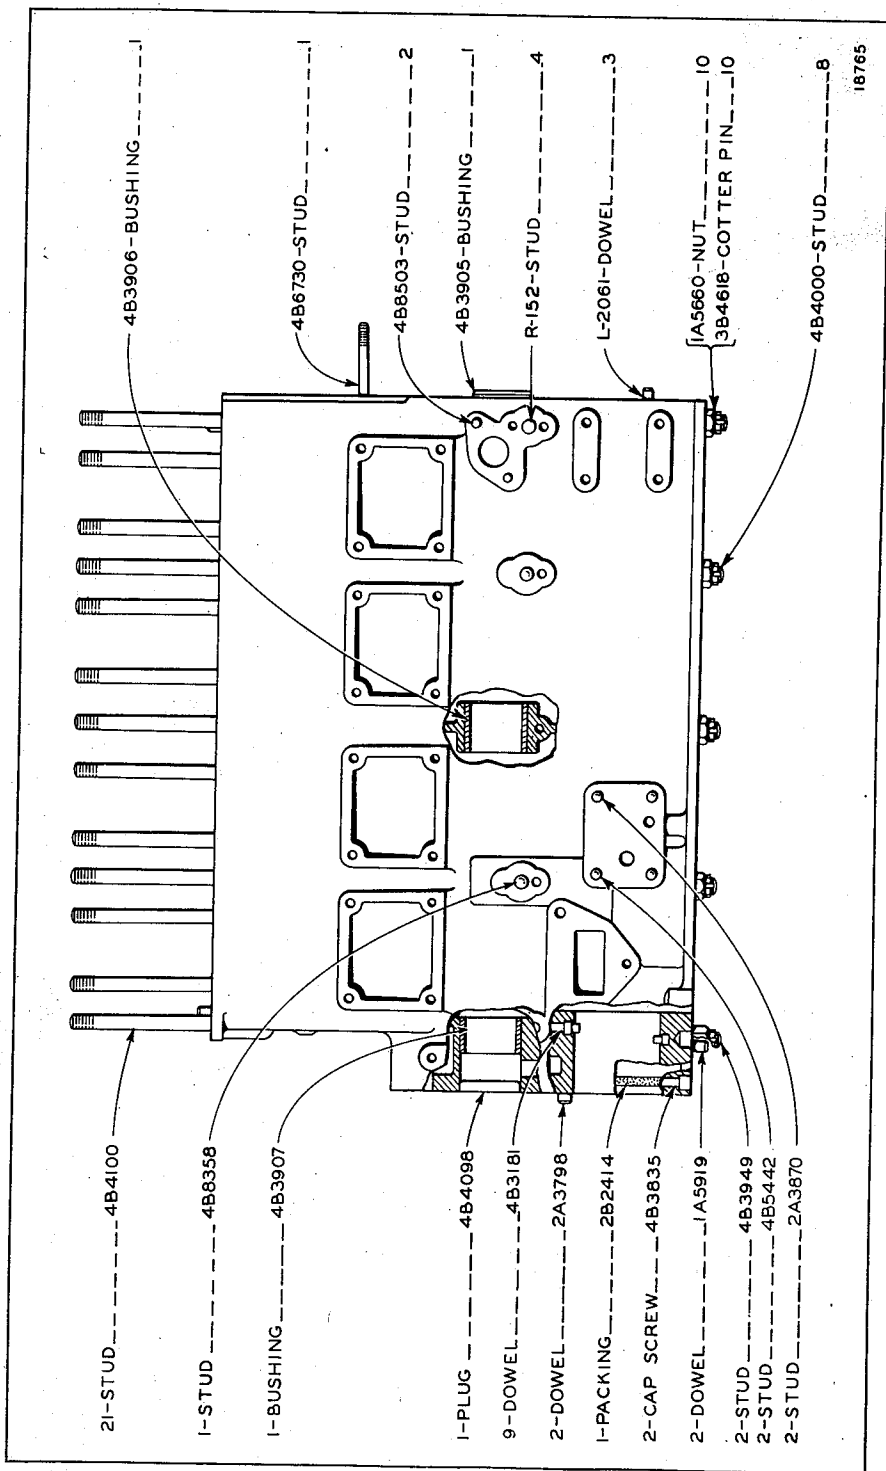


7B963 CYLINDER BLOCK ASSEMBLY
Effective with Serial No. 511803

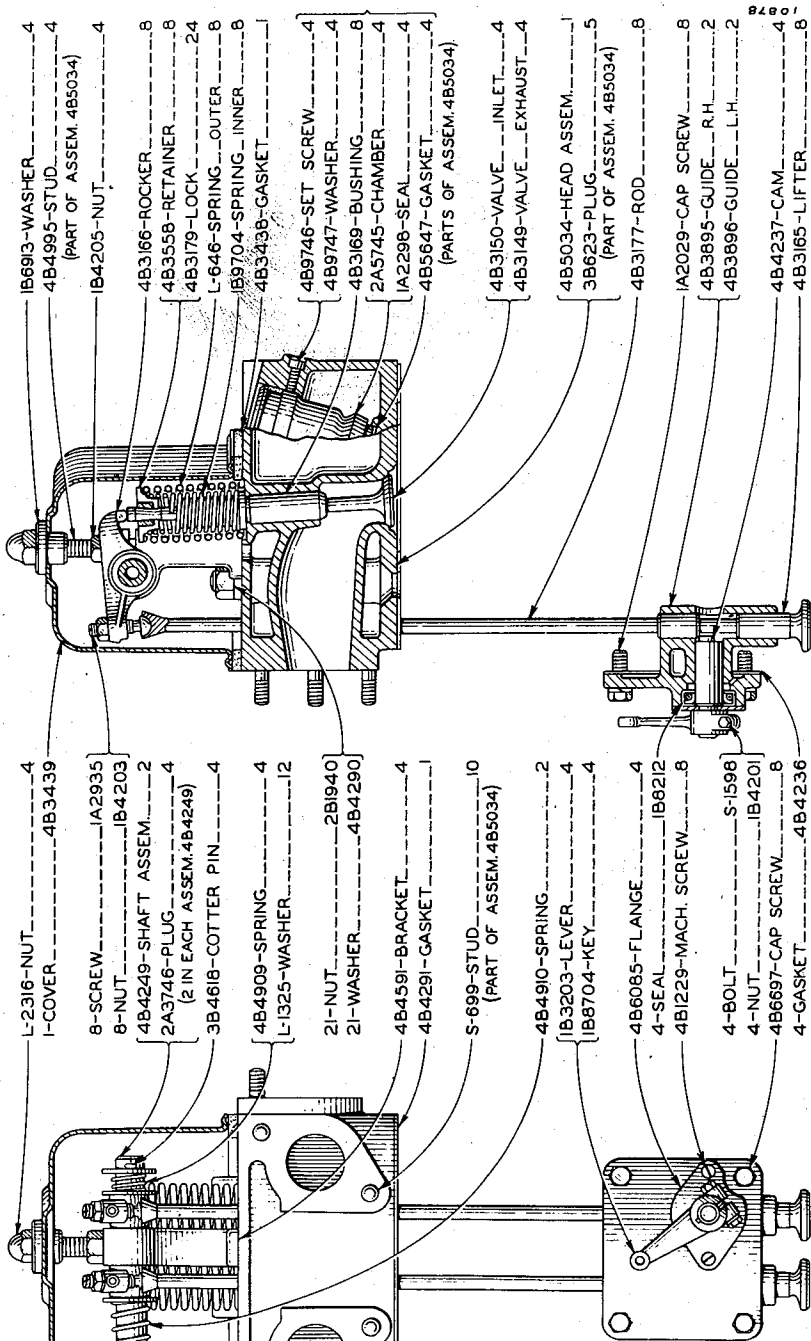


CYLINDER HEAD AND VALVE MECHANISM


Serial No. 5J1 to 5J1239 Inclusive

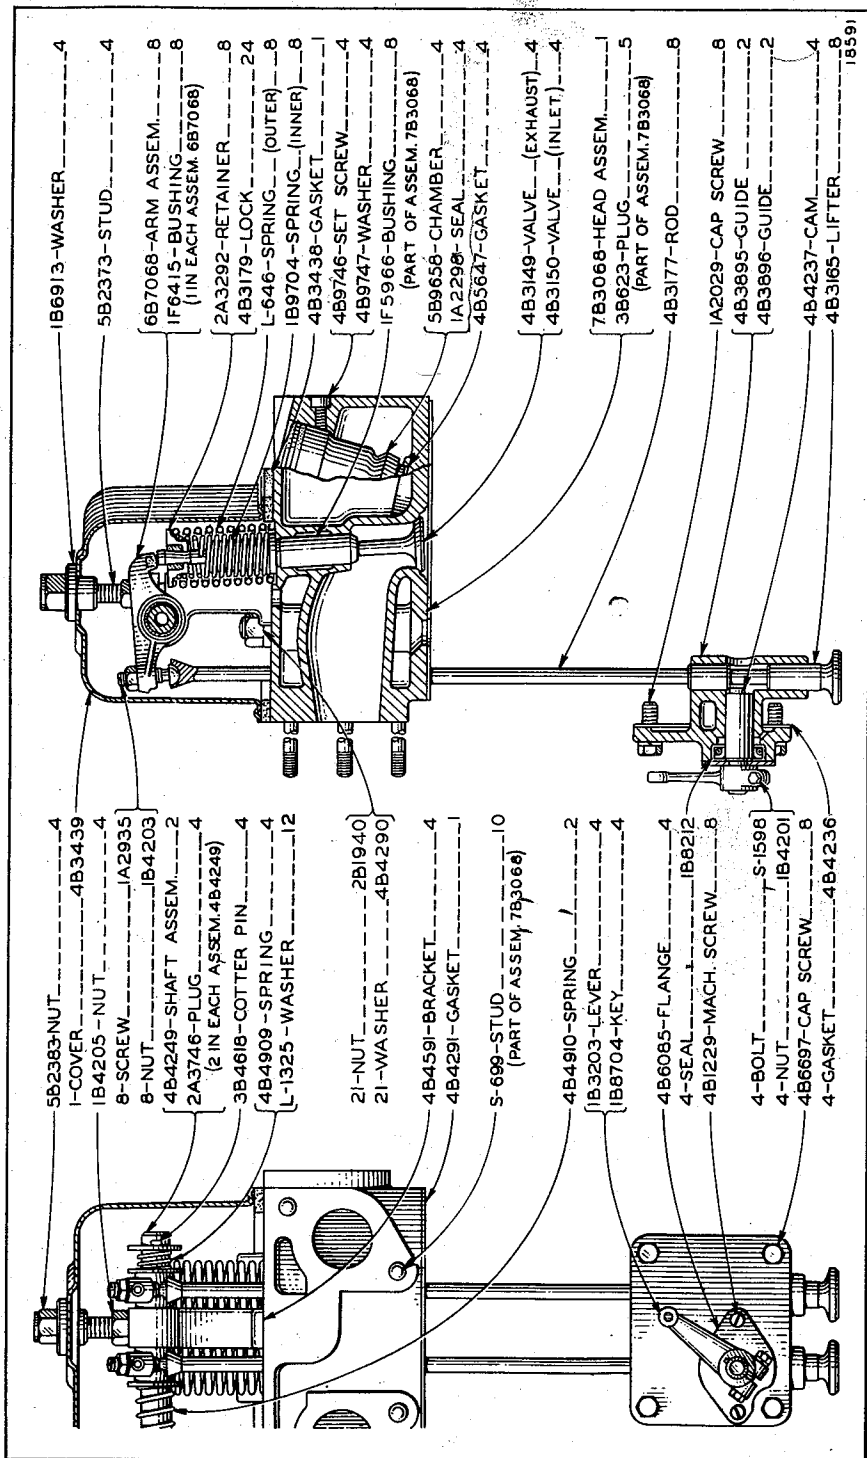

CYLINDER HEAD AND VALVE MECHANISM
Effective with Serial No. 5J1240

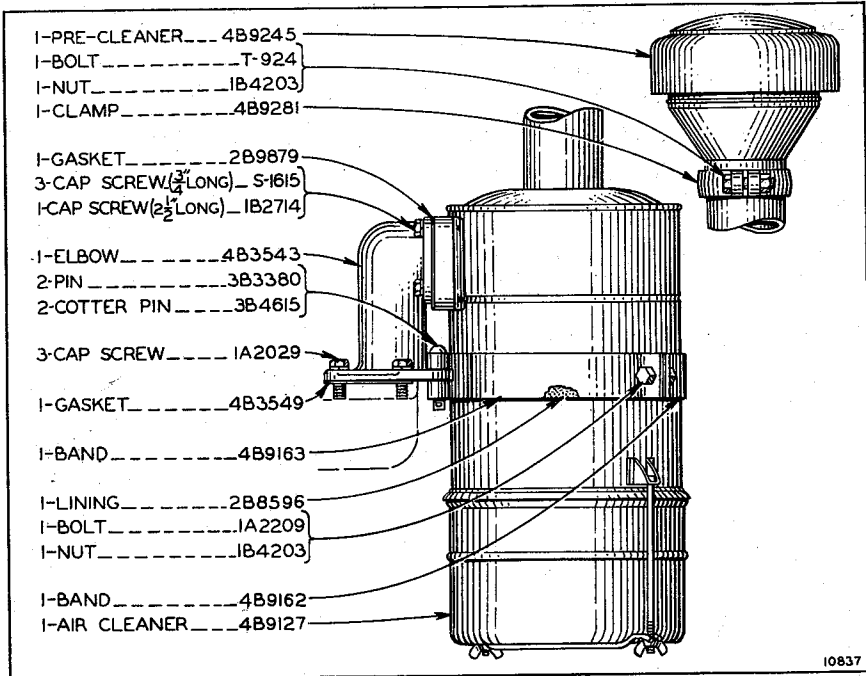
**AIR CLEANER**

Serial No. 5J1 to 5J722 Inclusive
 4B9127 Air Cleaner is shown on Page 32

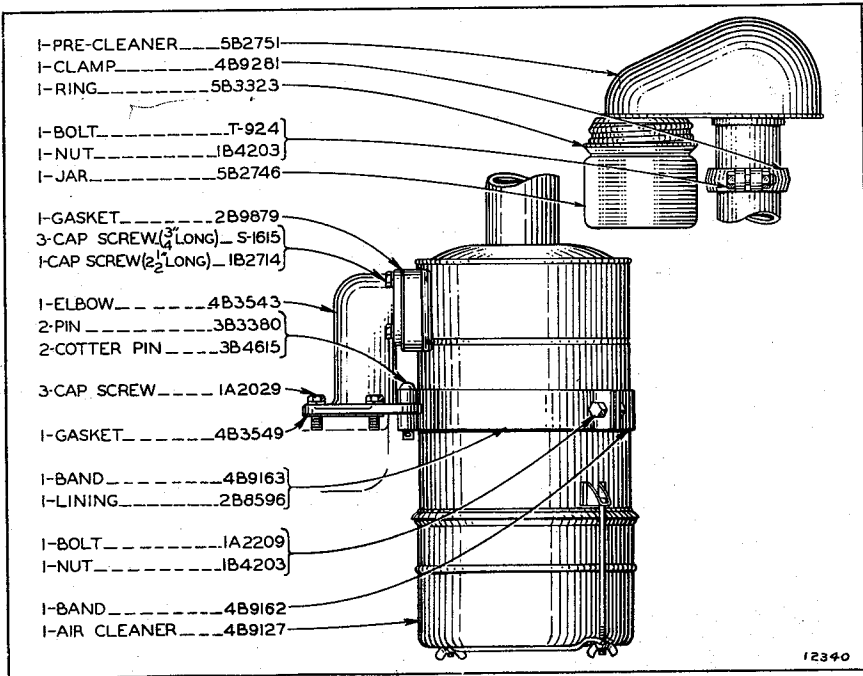
**AIR CLEANER**

Serial No. 5J723 to 5J1841 Inclusive
 4B9127 Air Cleaner is shown on Page 32

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

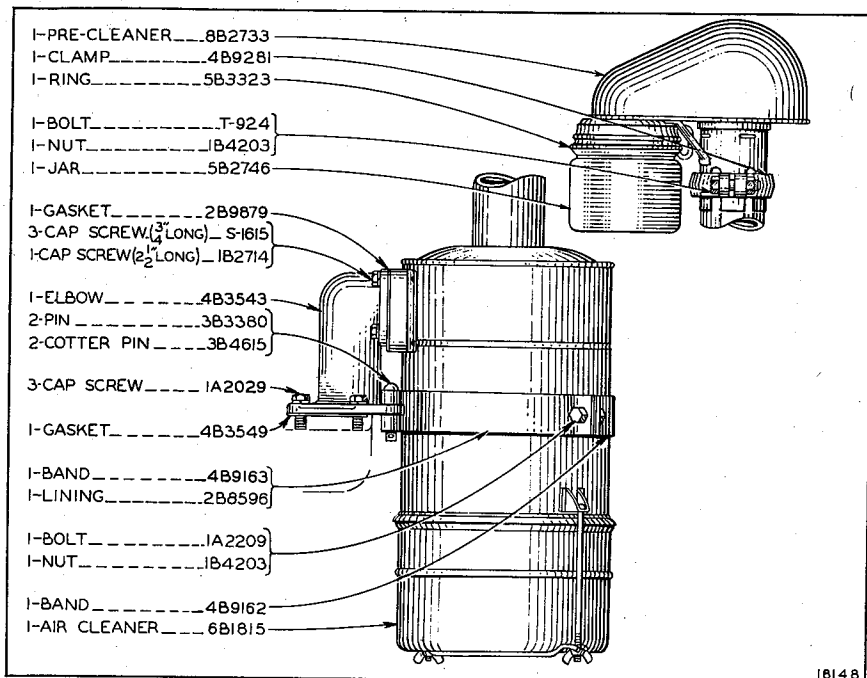
**AIR CLEANER**

Effective with Serial No. 5J1842
6B1815 Air Cleaner is shown on Page 33

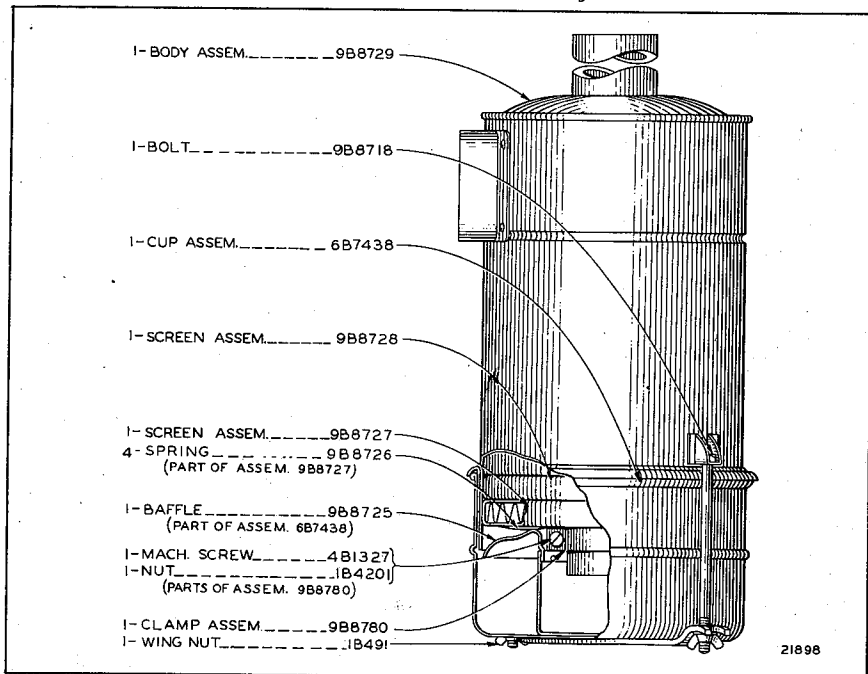**4B9127 AIR CLEANER**


Only separate parts serviced. When complete assembly is required order 6B9210.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

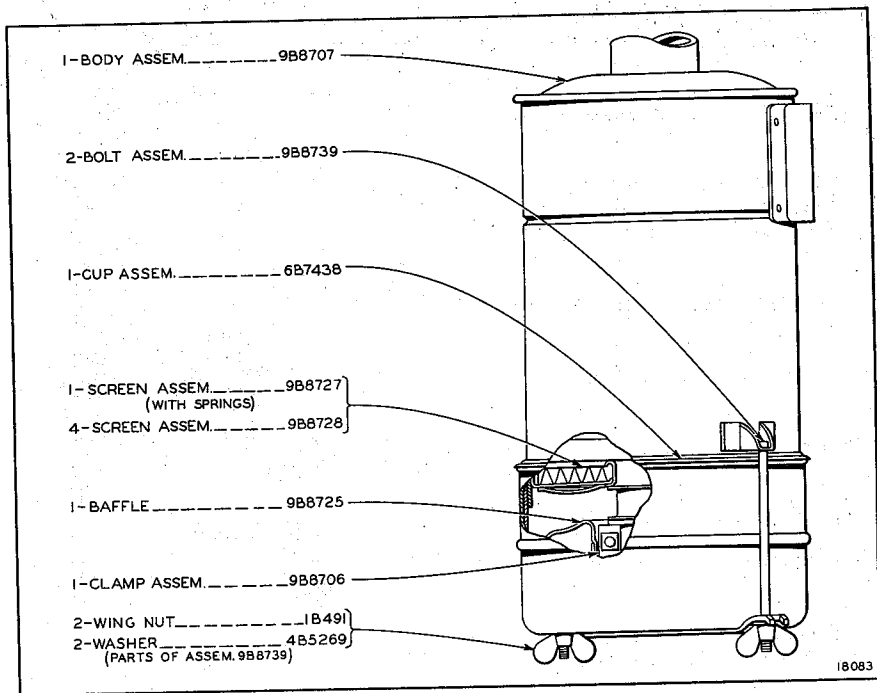


6B1815 AIR CLEANER

Only separate parts serviced. When complete assembly is required order 6B9210.

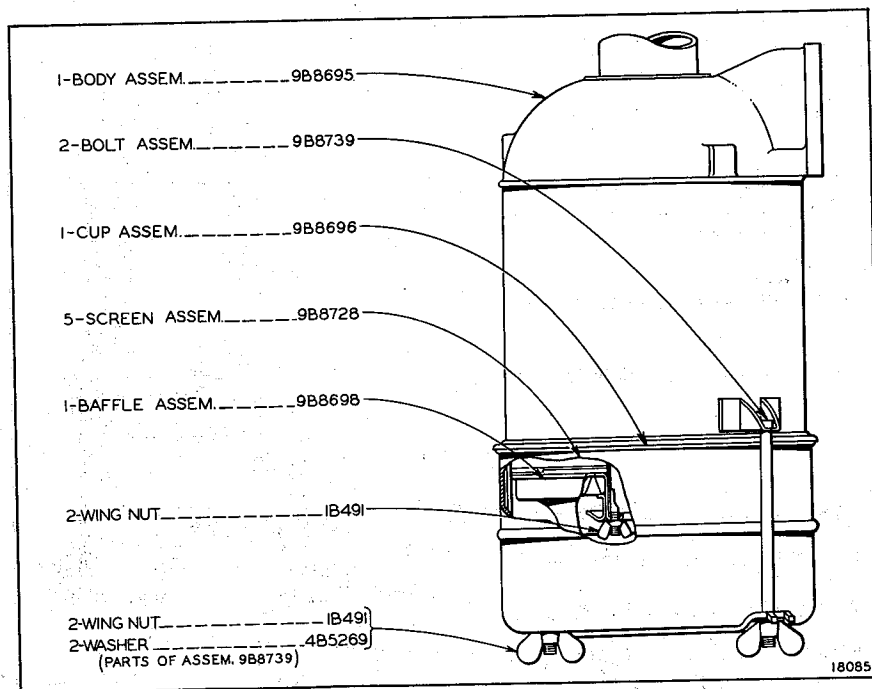


6B9210 AIR CLEANER

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

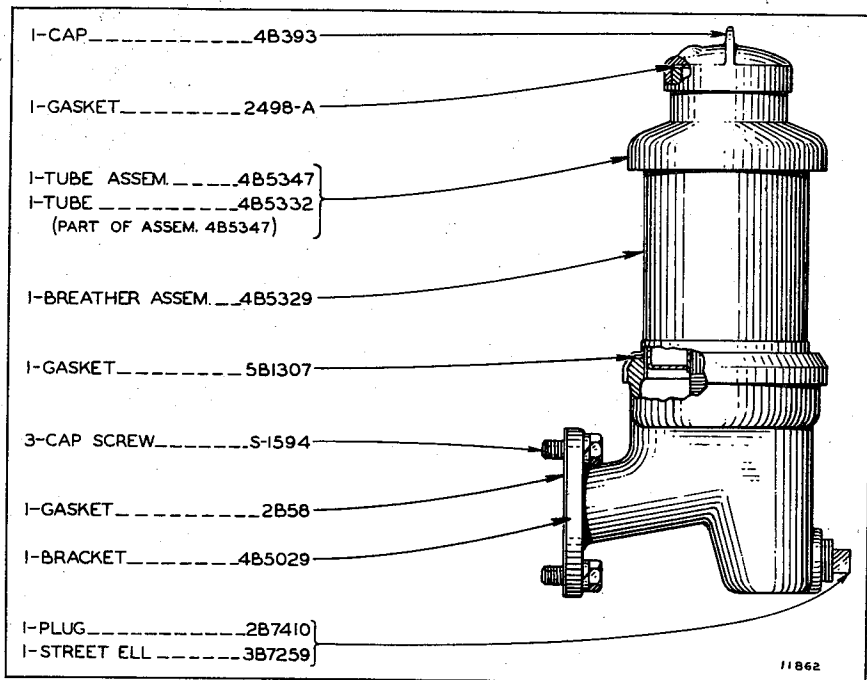


BREATHER AND OIL FILLER
 Serial No. 5J1 to 5J366 Inclusive

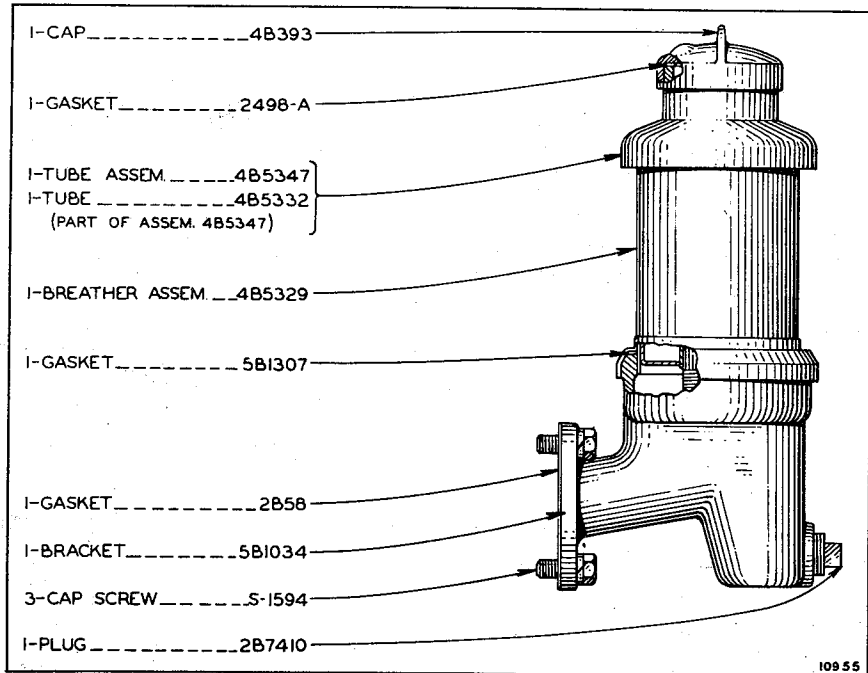


BREATHER AND OIL FILLER
 Serial No. 5J367 to 5J1227 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

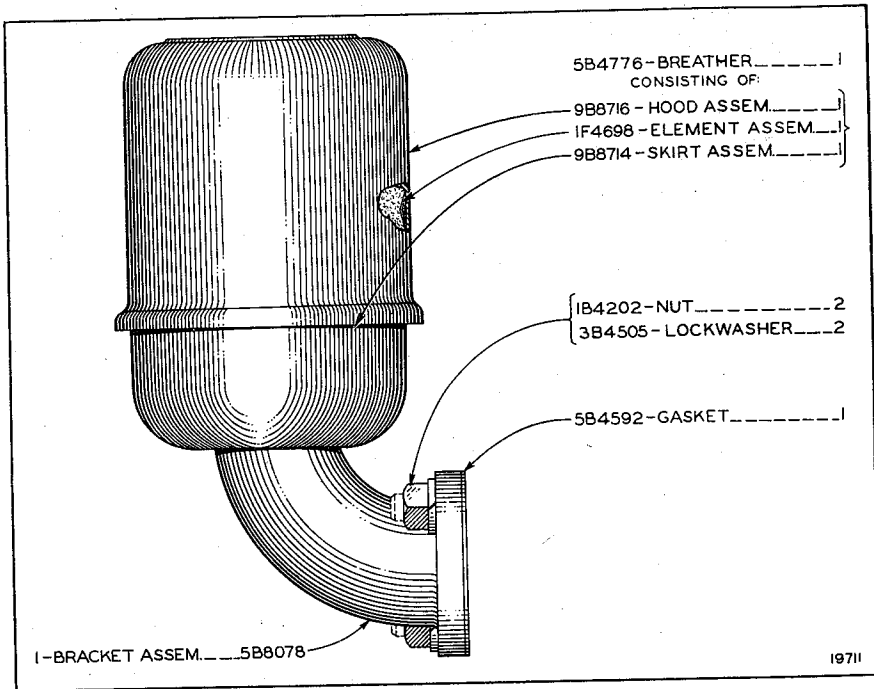


BREATHER

Effective with Serial No. 5J1228

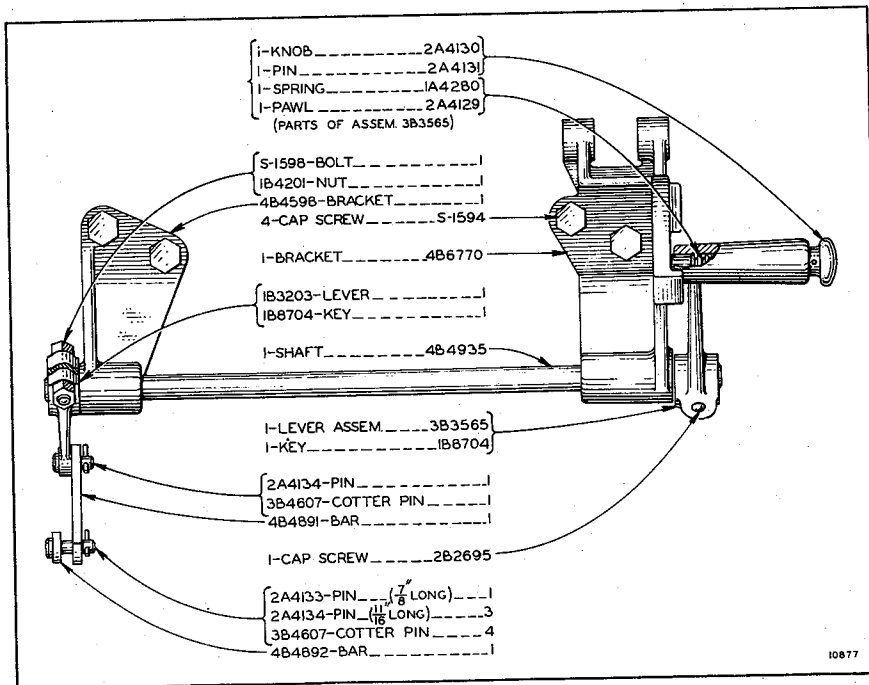

COMPRESSION RELEASE CONTROL


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

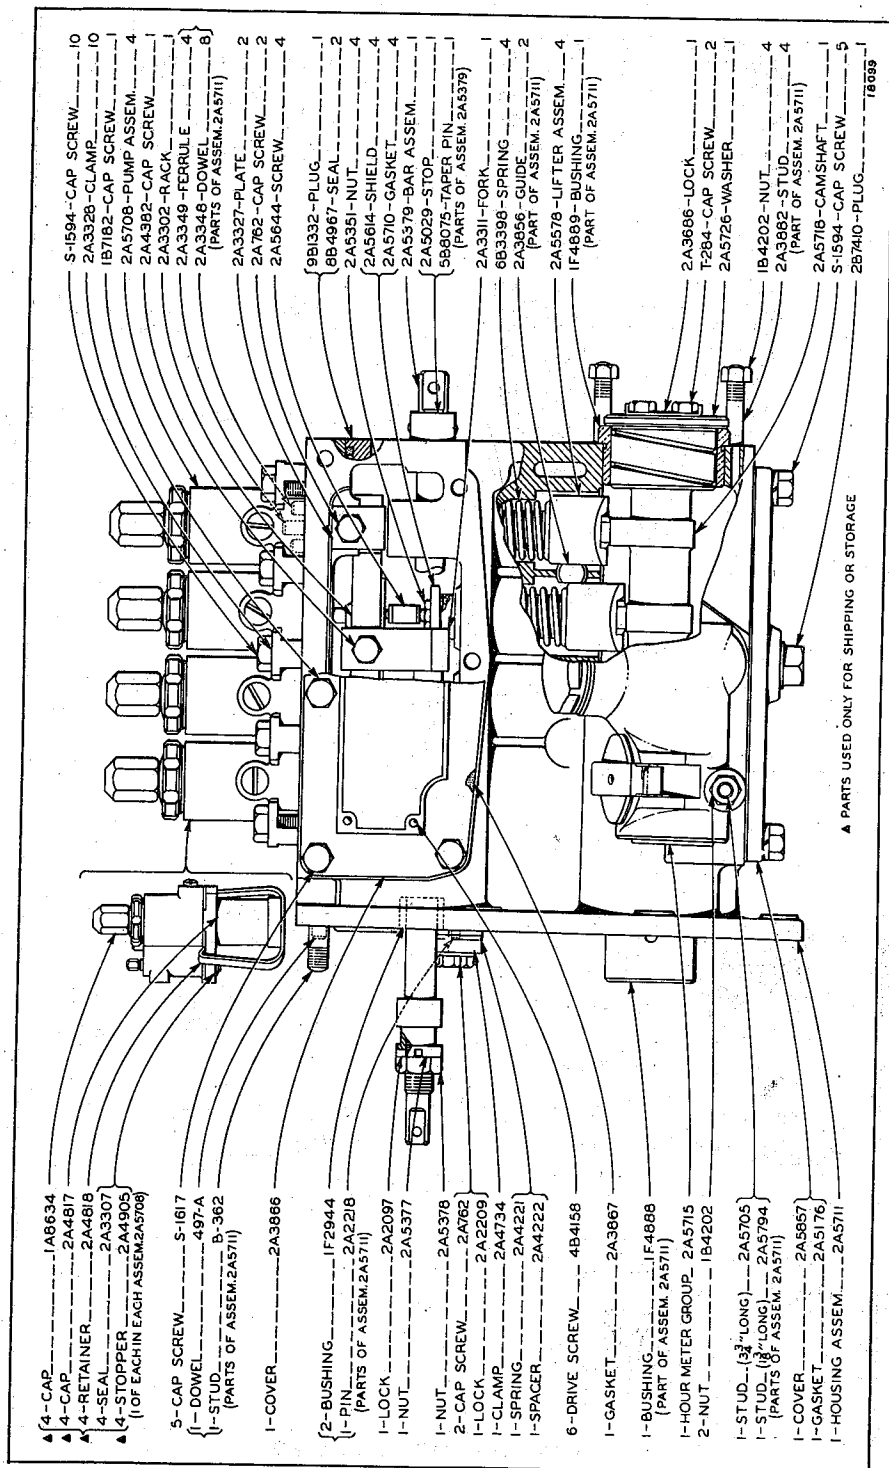

A PARTS USED ONLY FOR SHIPPING OR STORAGE

FUEL PUMP HOUSING
Fuel Pump Housing Serial No. 10P1 to 10P4339 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

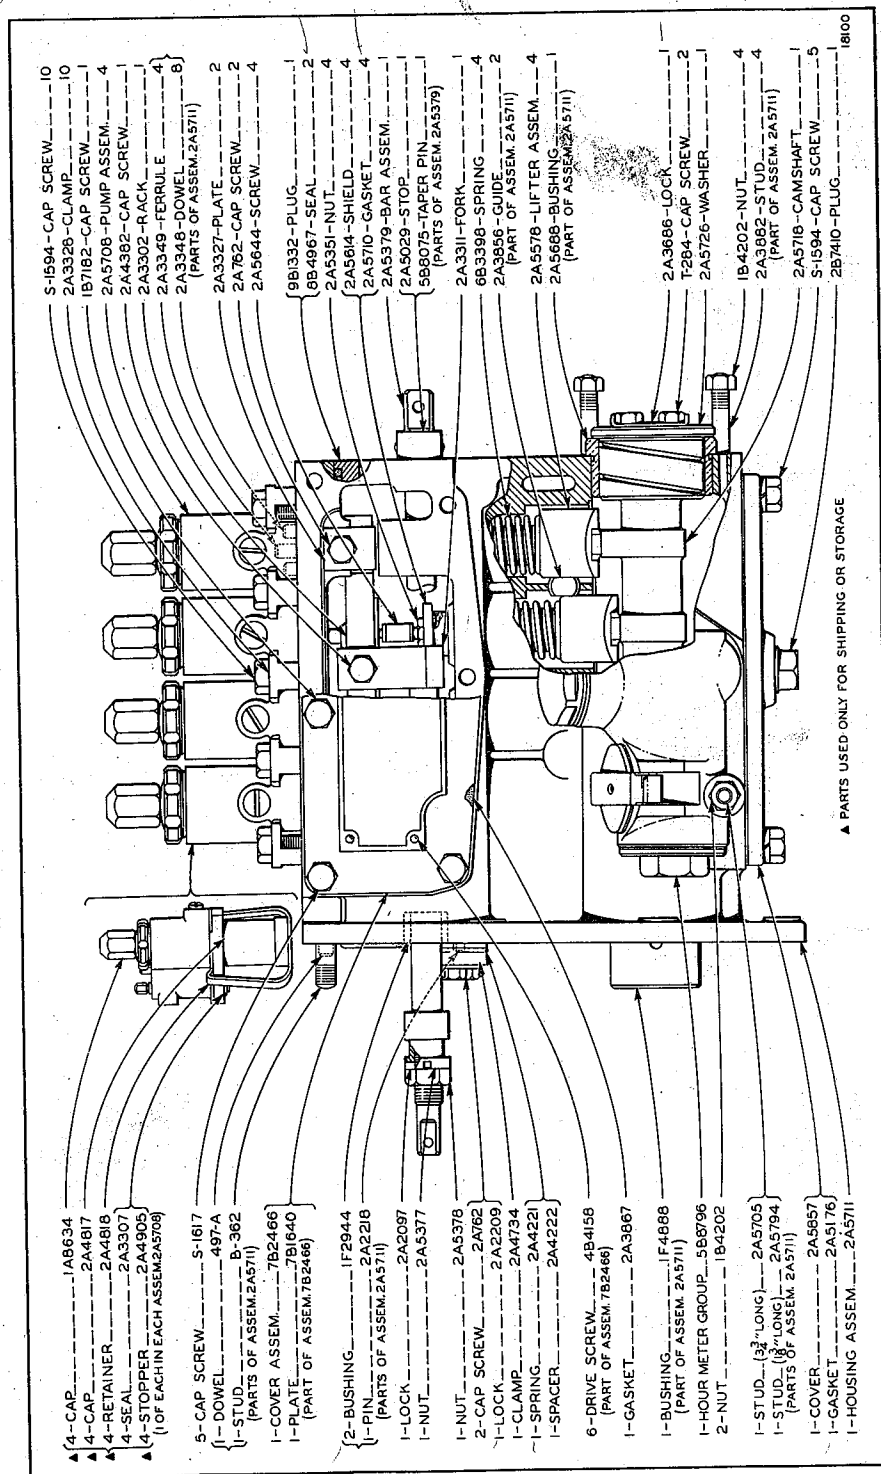


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

FUEL PUMP HOUSING

Fuel Pump Housing Serial No. 10P4340 to 10P9999 Incl., 20P1 to 20P9999 Incl. and 24P1 & up

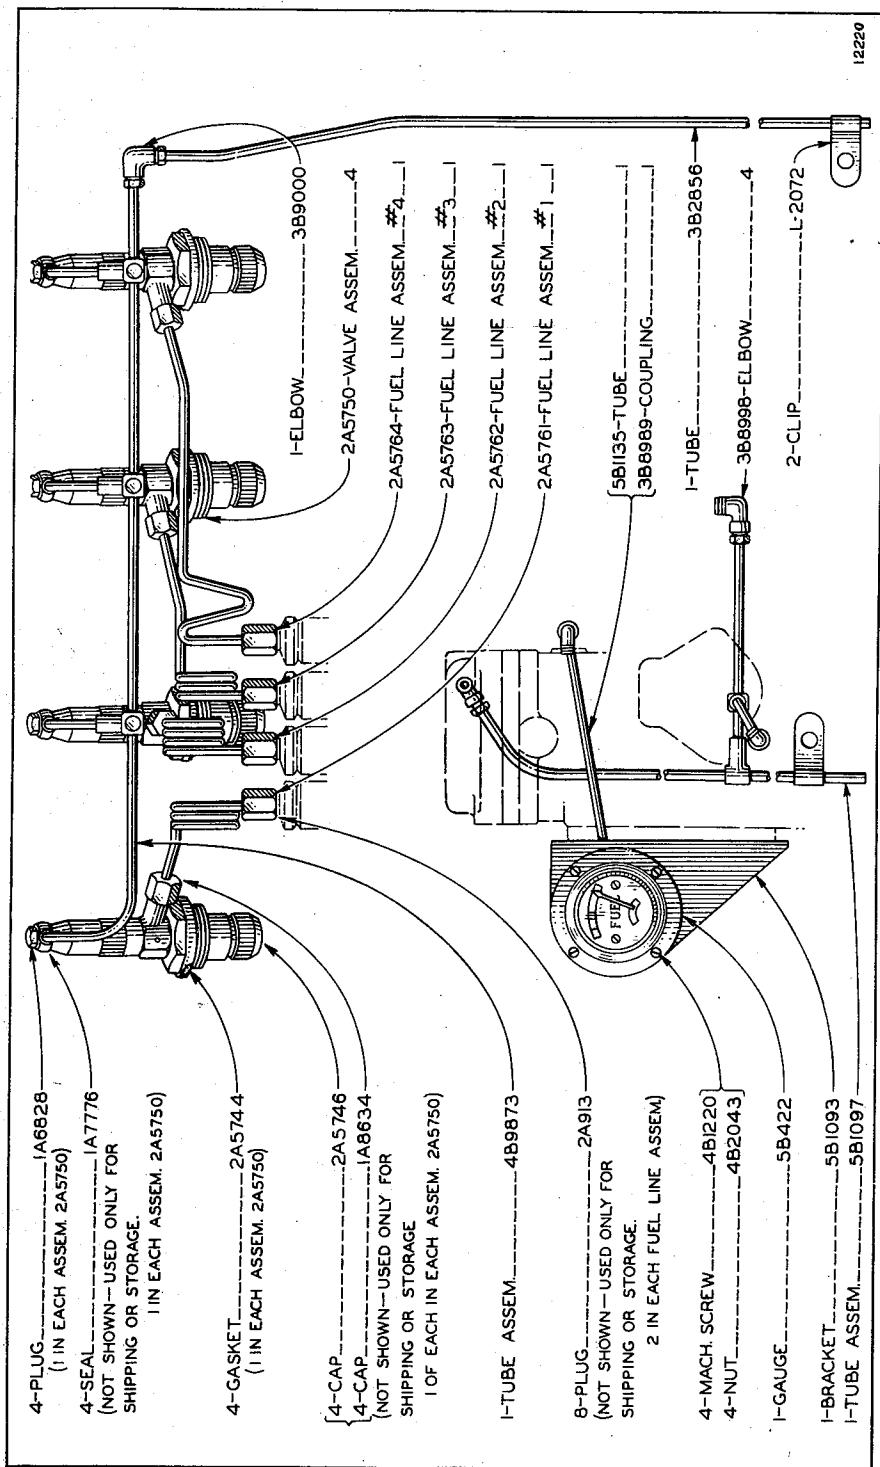


FUEL INJECTION VALVES AND LINES
Serial No. 511 to 5199 Inclusive

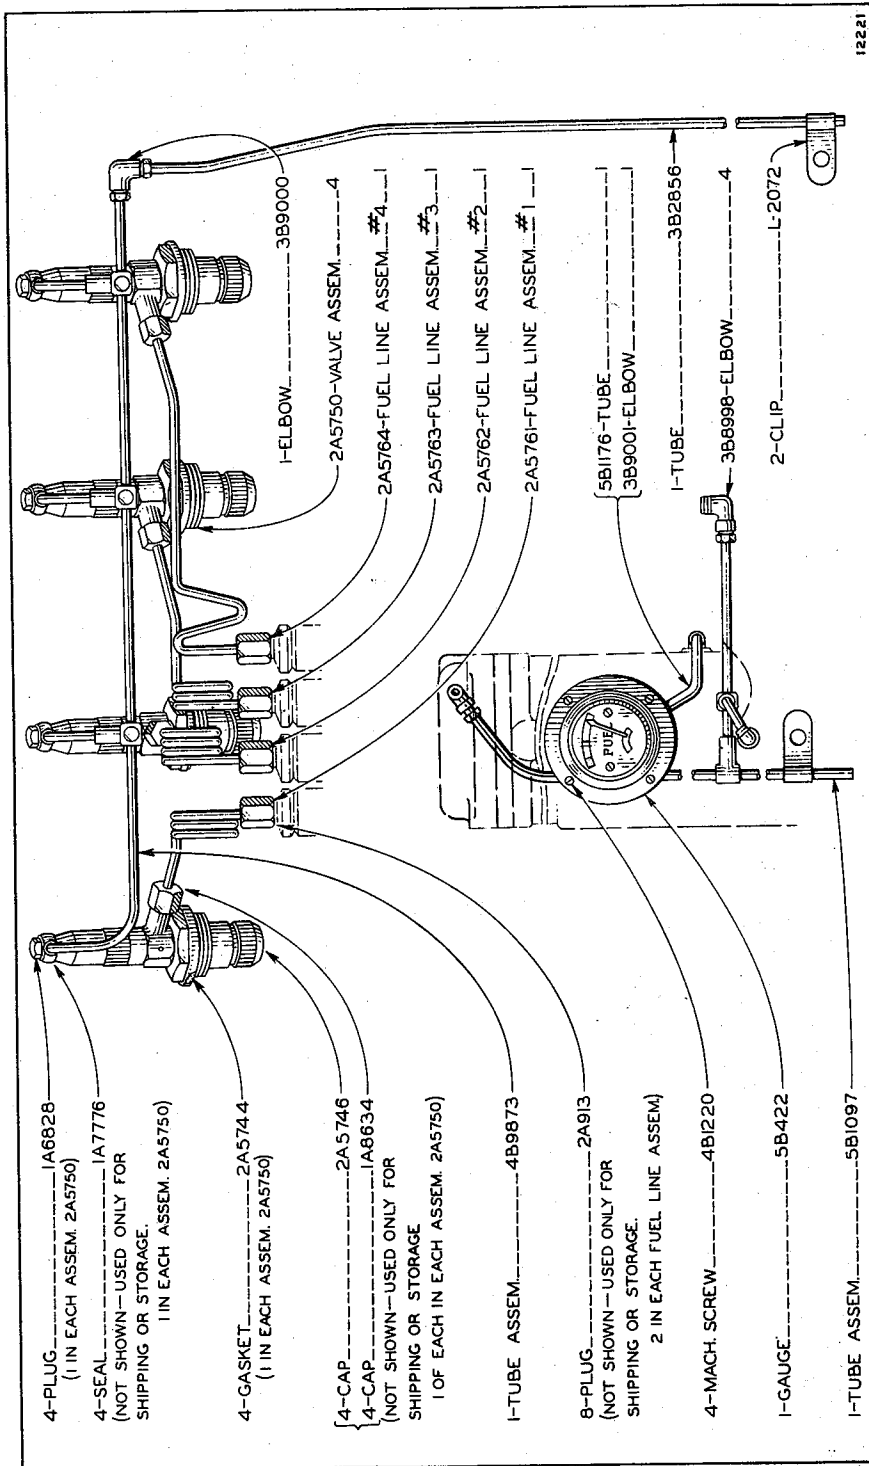


12221

FUEL INJECTION VALVES AND LINES
Serial No. 5J89 to 5J383 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

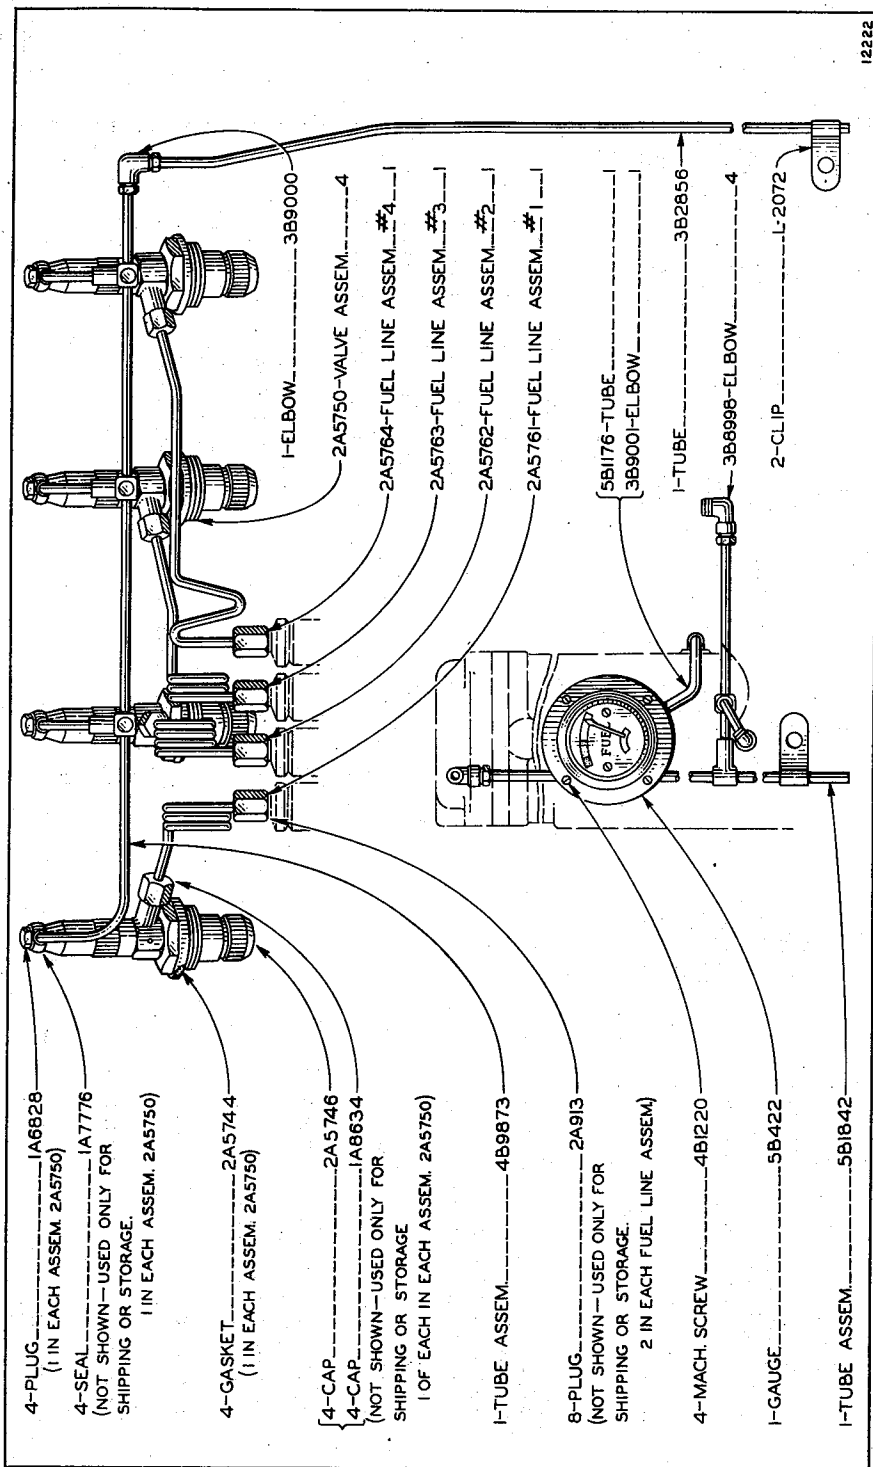


12/92

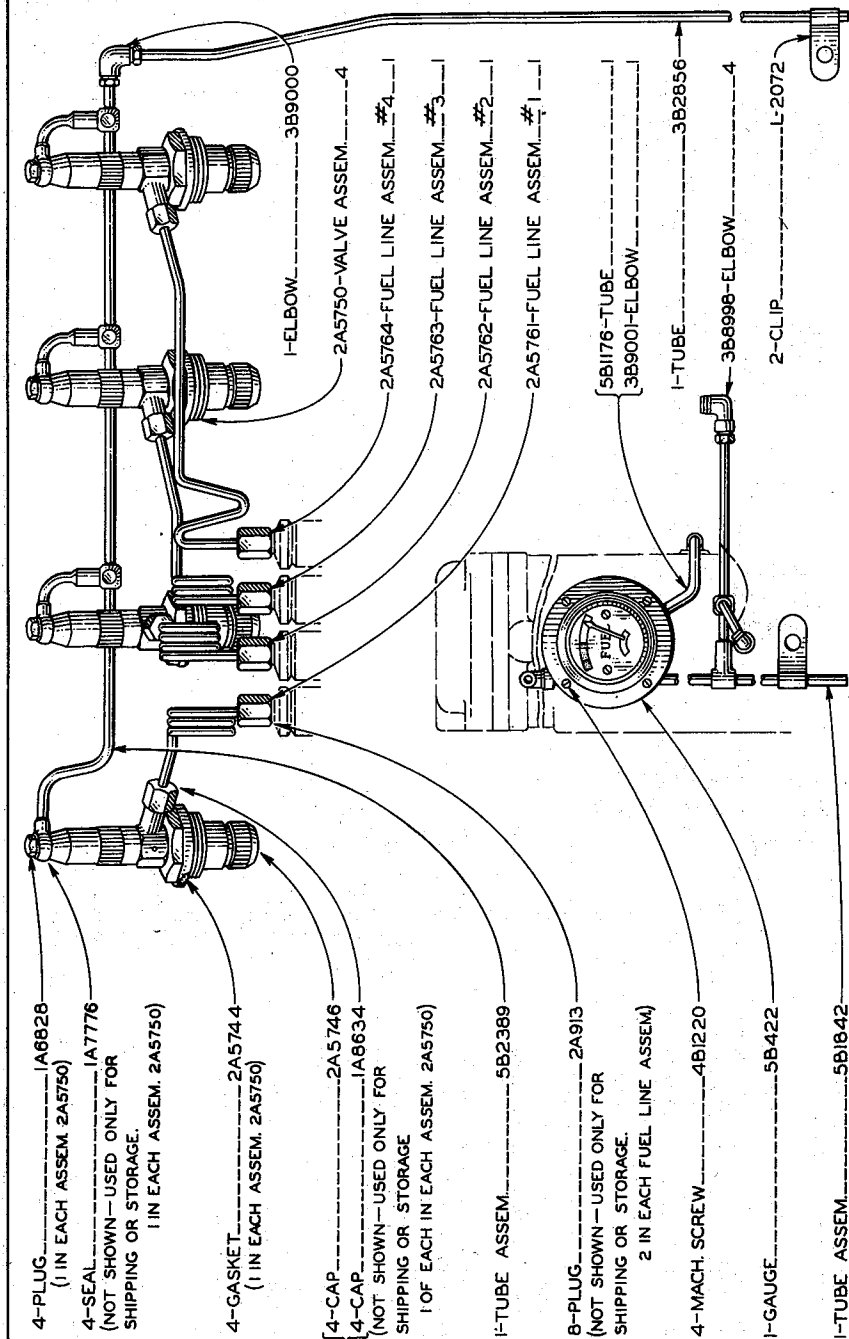

FUEL INJECTION VALVES AND LINES
Serial No. 5J573 to 5J1676 Inclusive

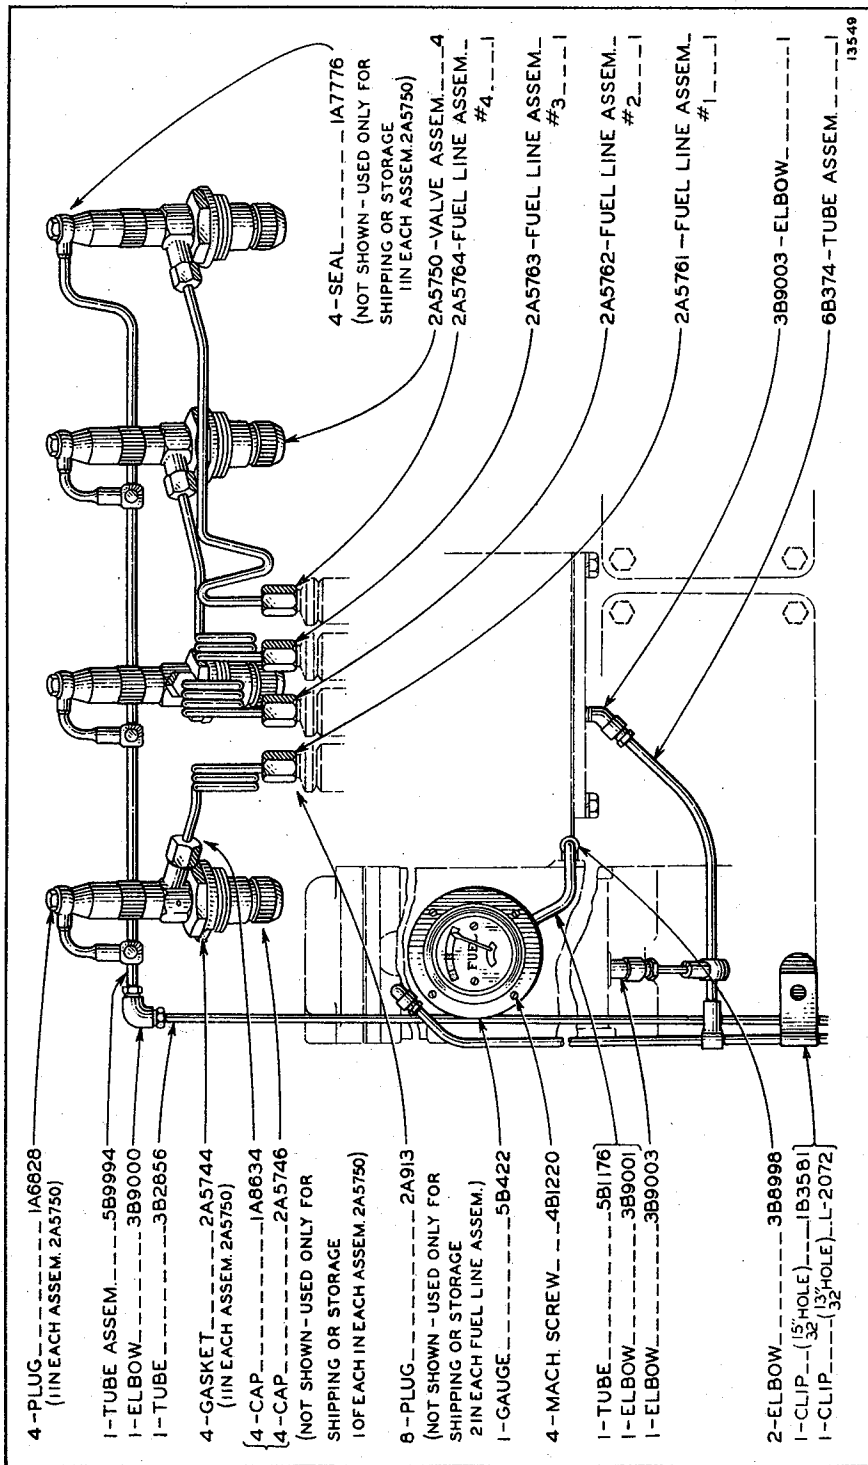

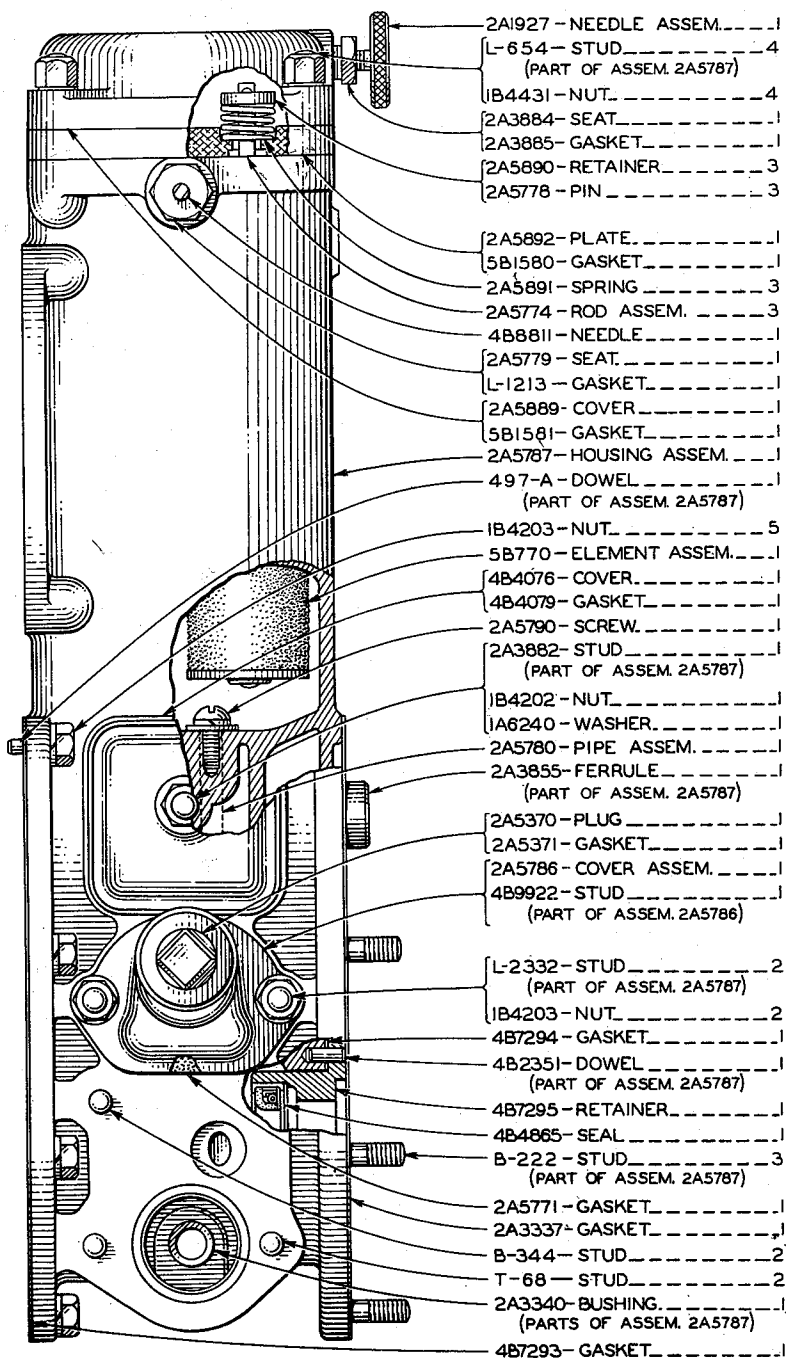


12218

FUEL FILTER —

Serial No. 5J1 to 5J88 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

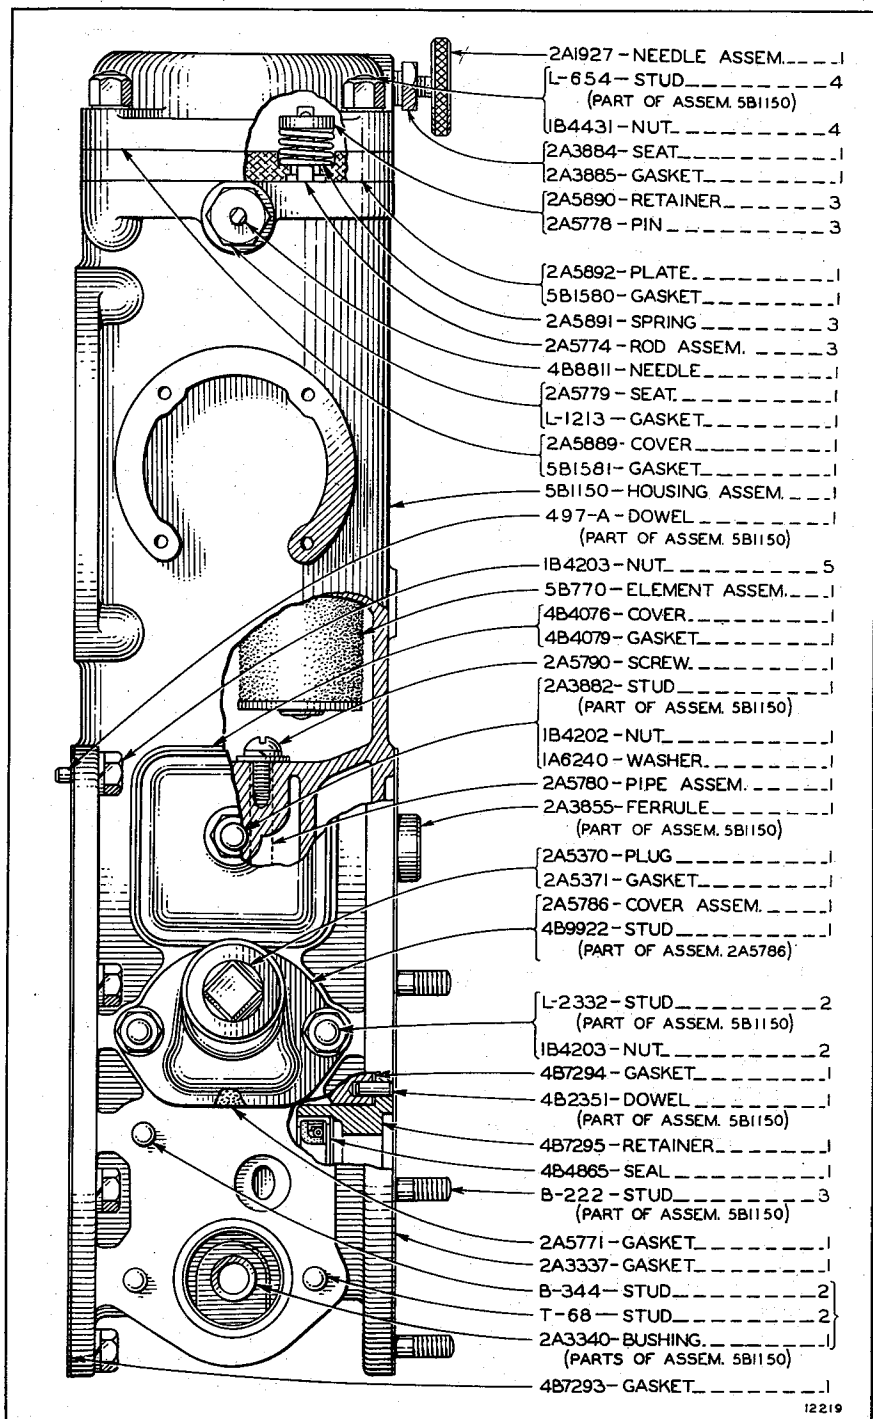


12219

FUEL FILTER

Serial No. 5J89 to 5J383 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

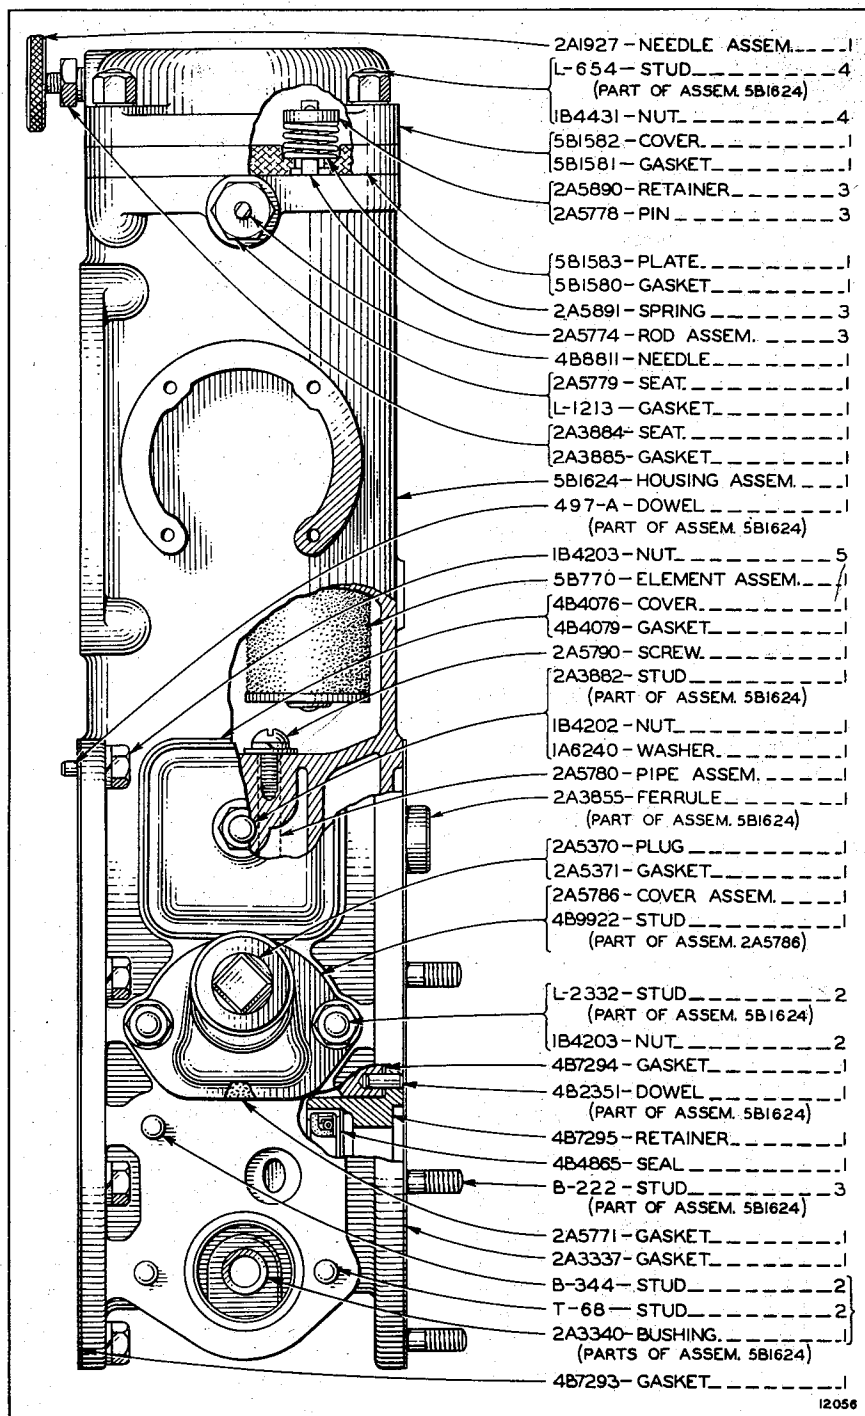


12056

FUEL FILTER

Serial No. 5J384 to 5J1015 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

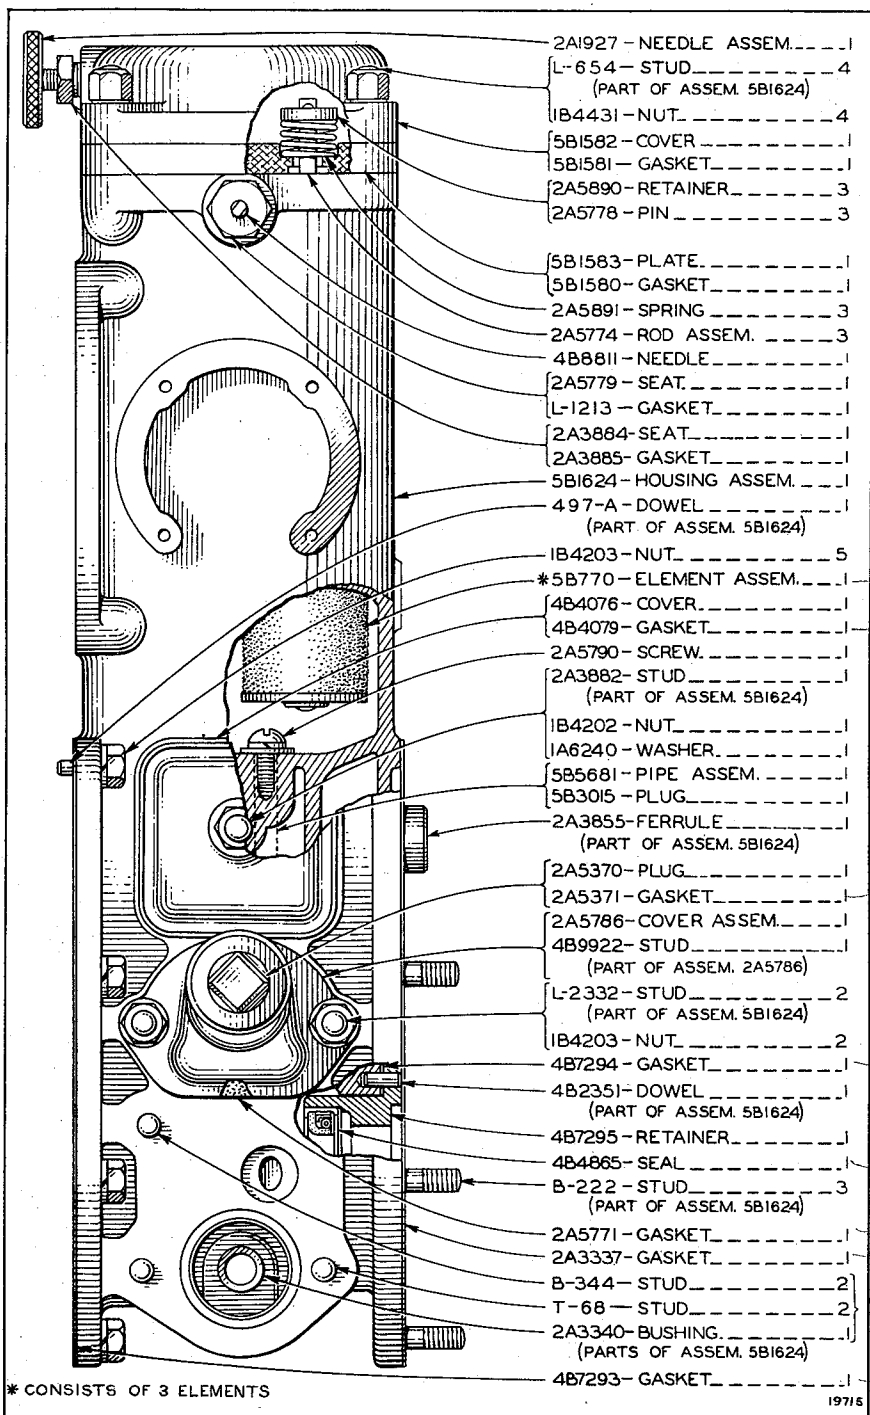


19715

FUEL FILTER

Serial No. 5J1016 to 5J1705 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

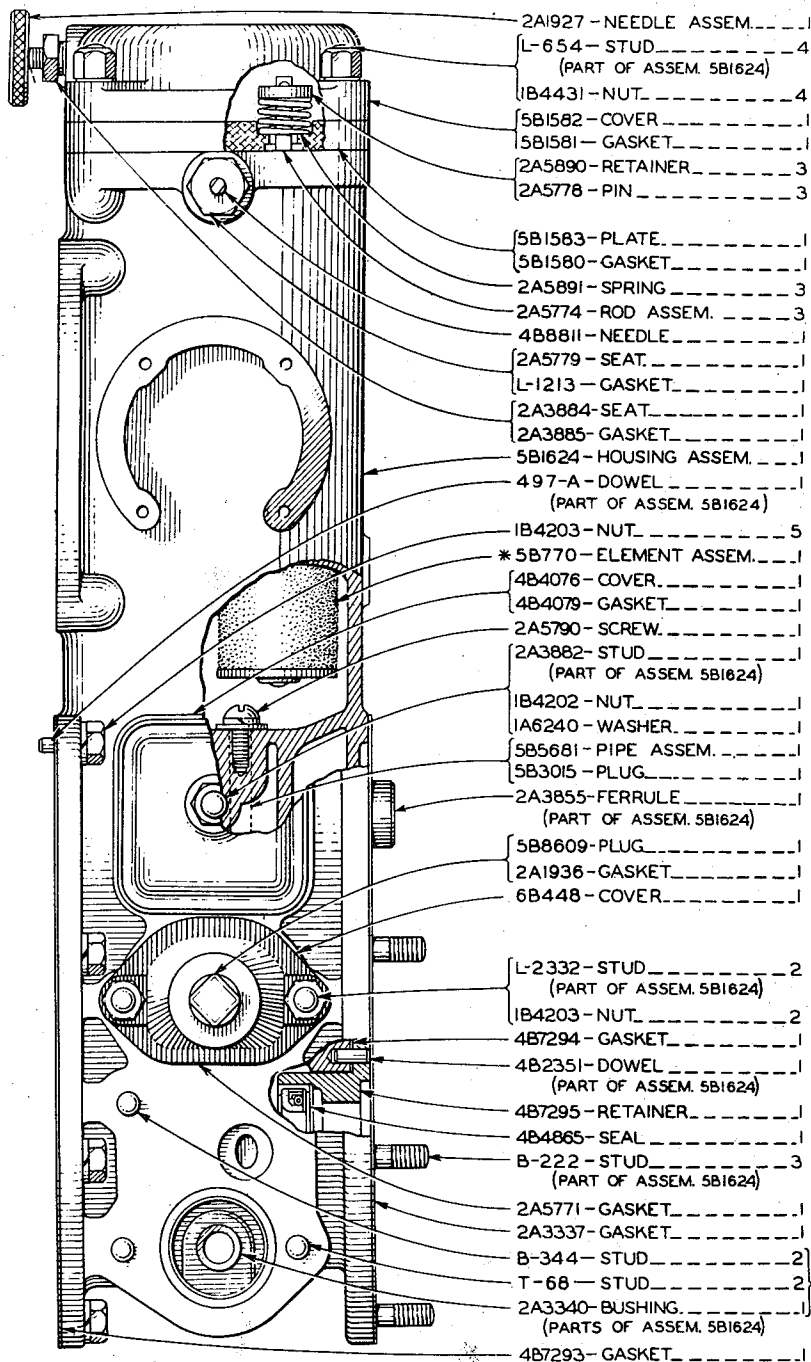


* CONSISTS OF 3 ELEMENTS.

19716

FUEL FILTER

Serial No. 5J1706 to 5J1725 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

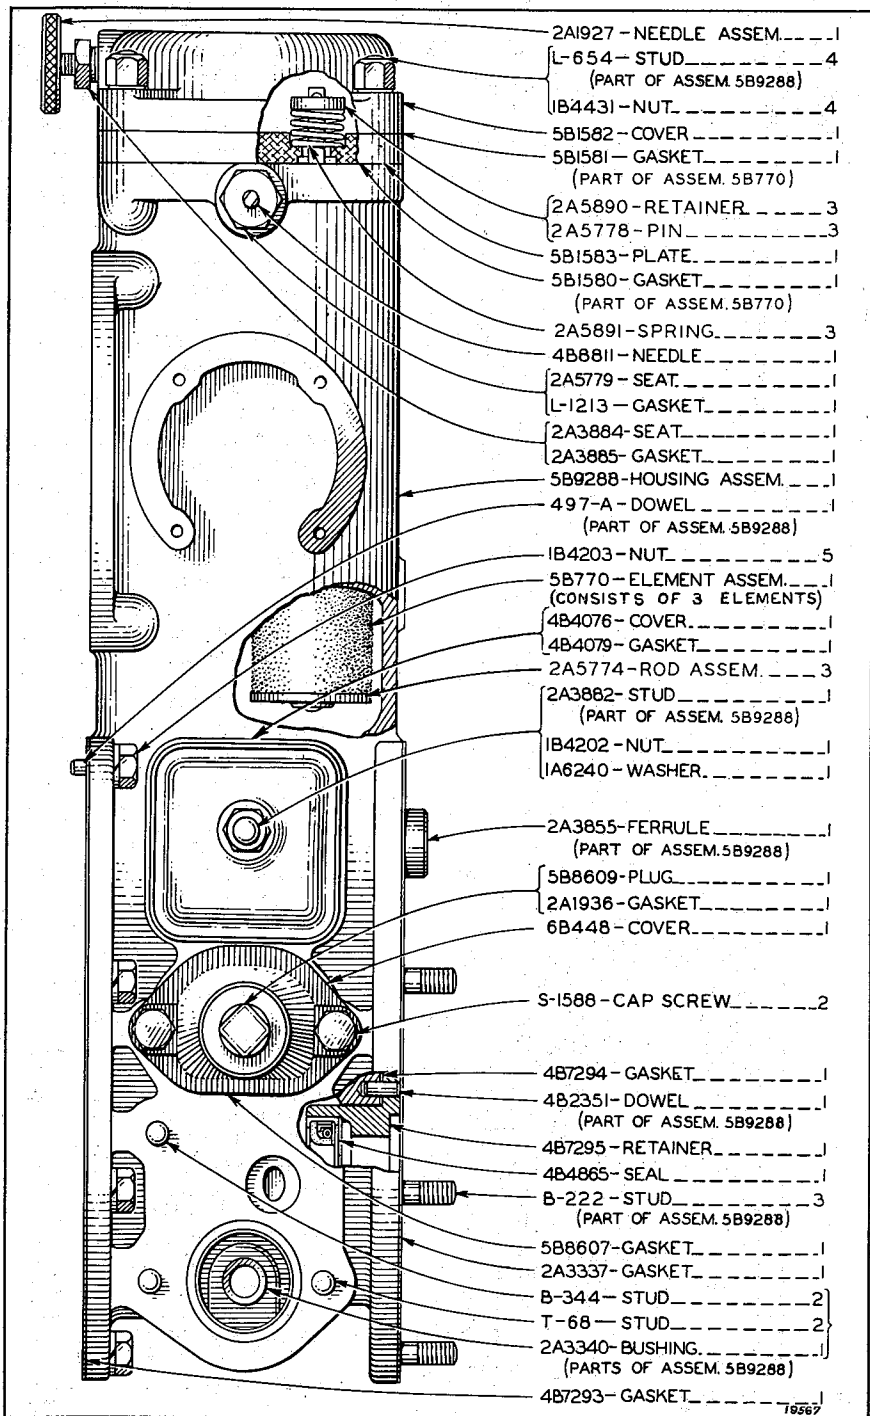


FUEL FILTER

Effective with Serial No. 5J1726

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

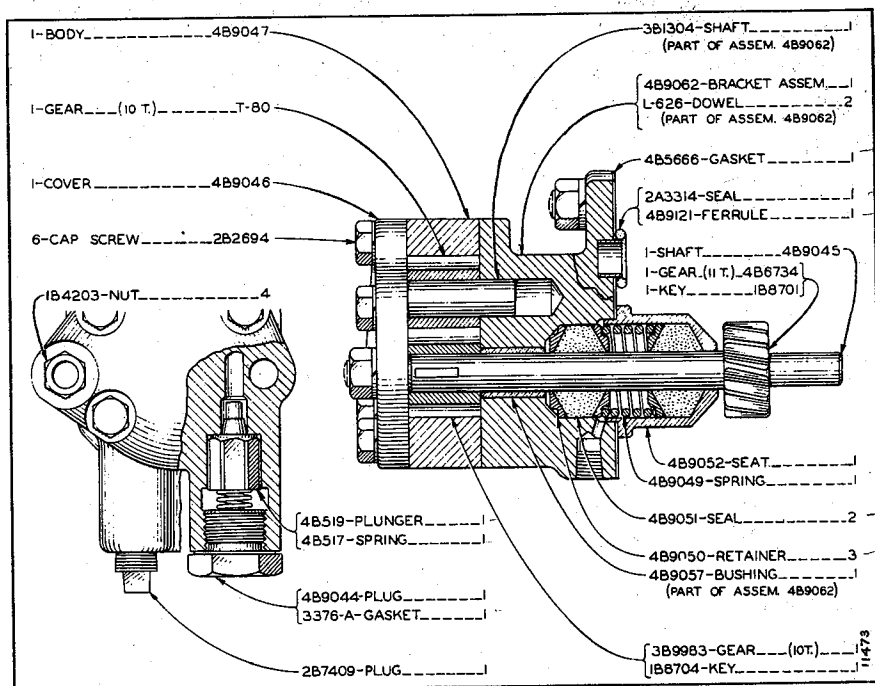


FUEL TRANSFER PUMP 4B9120
Serial No. 5J1 to 5J1676 Inclusive

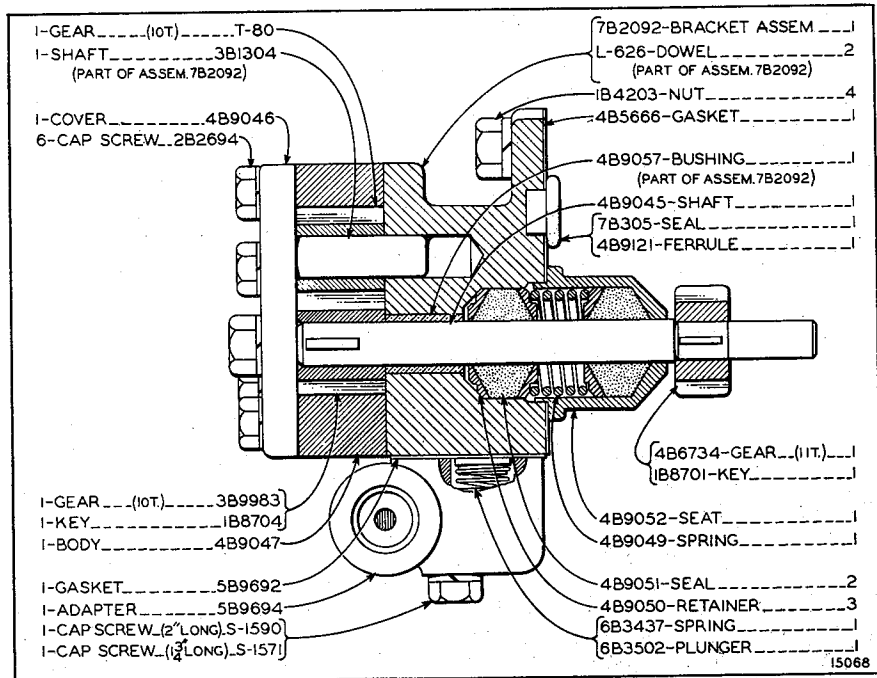

FUEL TRANSFER PUMP
Effective with Serial No. 5J1677


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

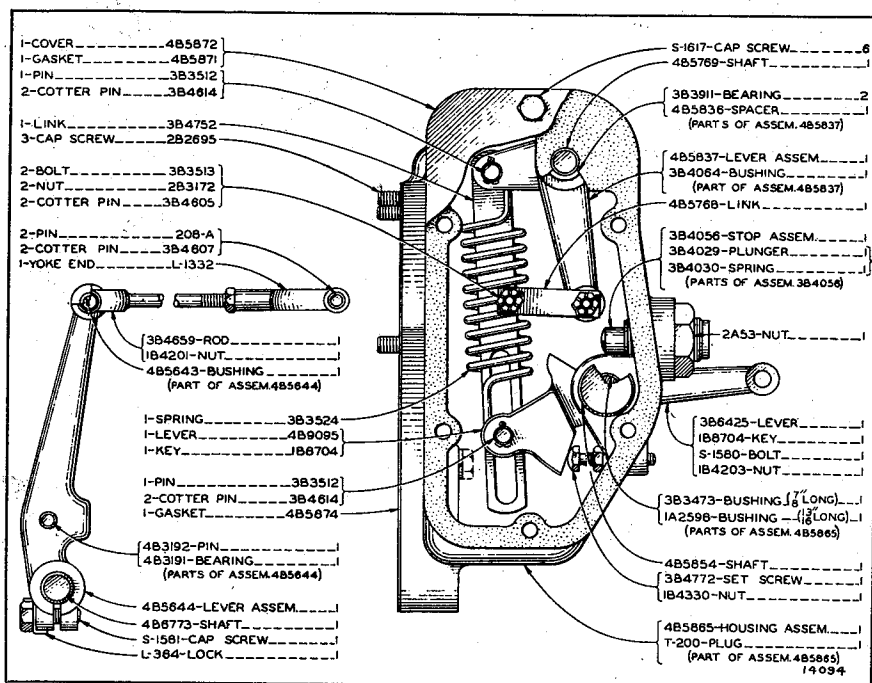

FUEL PUMP AND GOVERNOR CONTROL MECHANISM

Serial No. 5J1 to 5J637 Inclusive

Additional Control parts are shown on Page 116

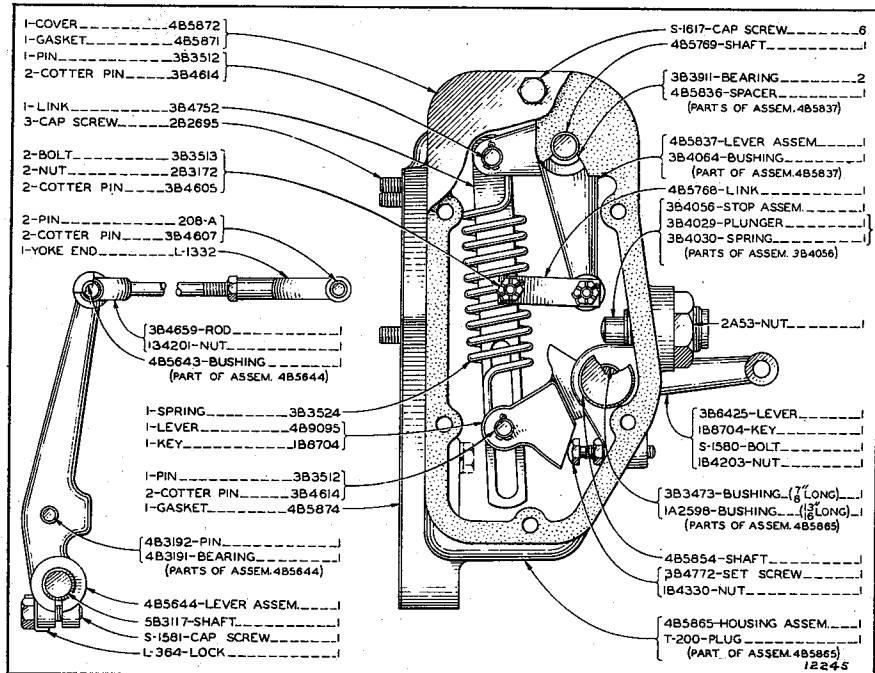


FUEL PUMP AND GOVERNOR CONTROL MECHANISM

Serial No. 5J638 to 5J707 Inclusive


Additional Control parts are shown on Page 116

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

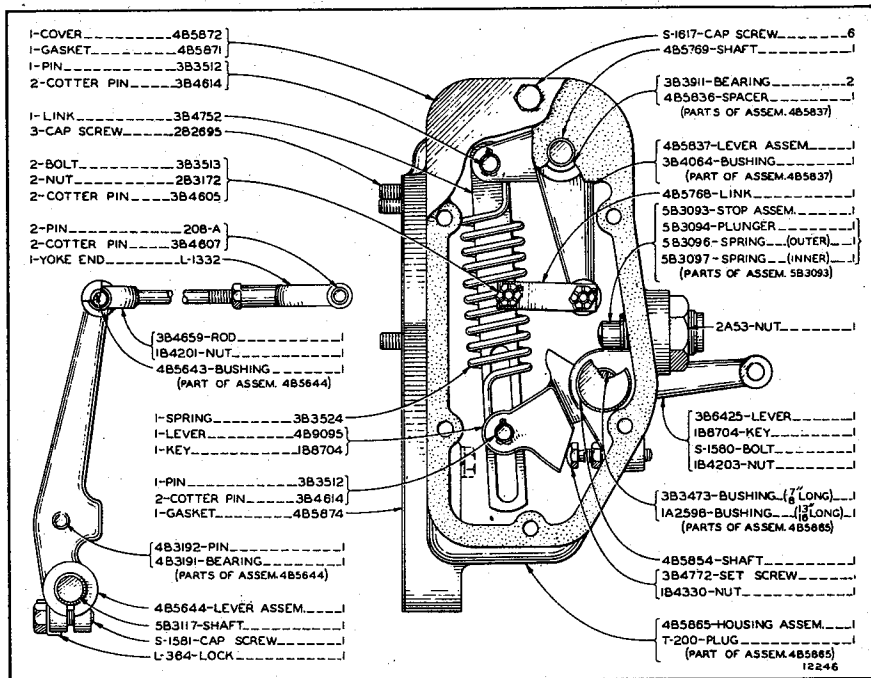**FUEL PUMP AND GOVERNOR CONTROL MECHANISM**

Serial No. 5J708 to 5J938 Inclusive


Additional Control parts are shown on Page 116

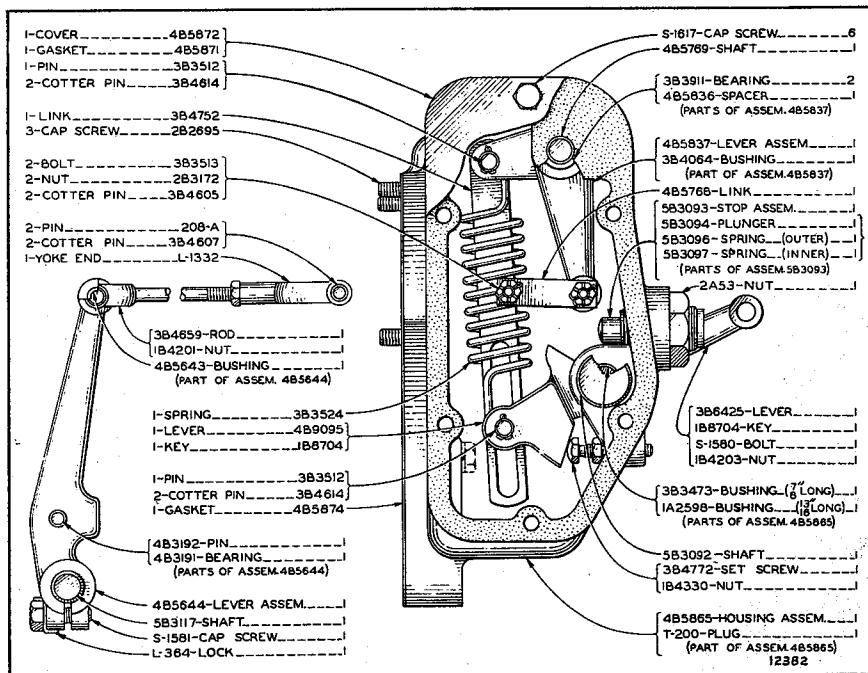**FUEL PUMP AND GOVERNOR CONTROL MECHANISM**

Serial No. 5J939 to 5J1459 Inclusive

Additional Control parts are shown on Page 116


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

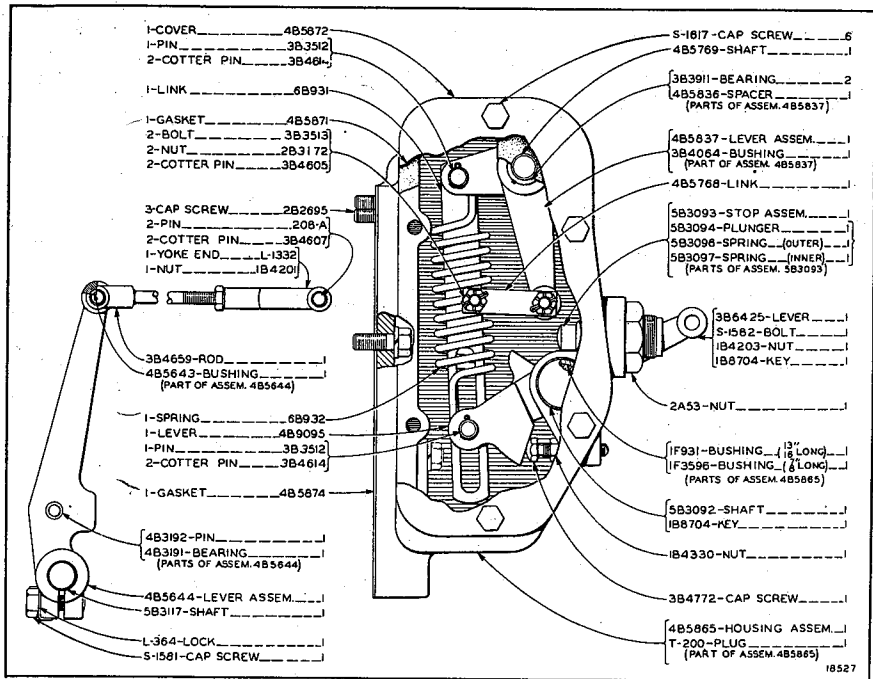

FUEL PUMP AND GOVERNOR CONTROL MECHANISM


Effective with Serial No. 5J1460

Additional Control parts are shown on Page 116

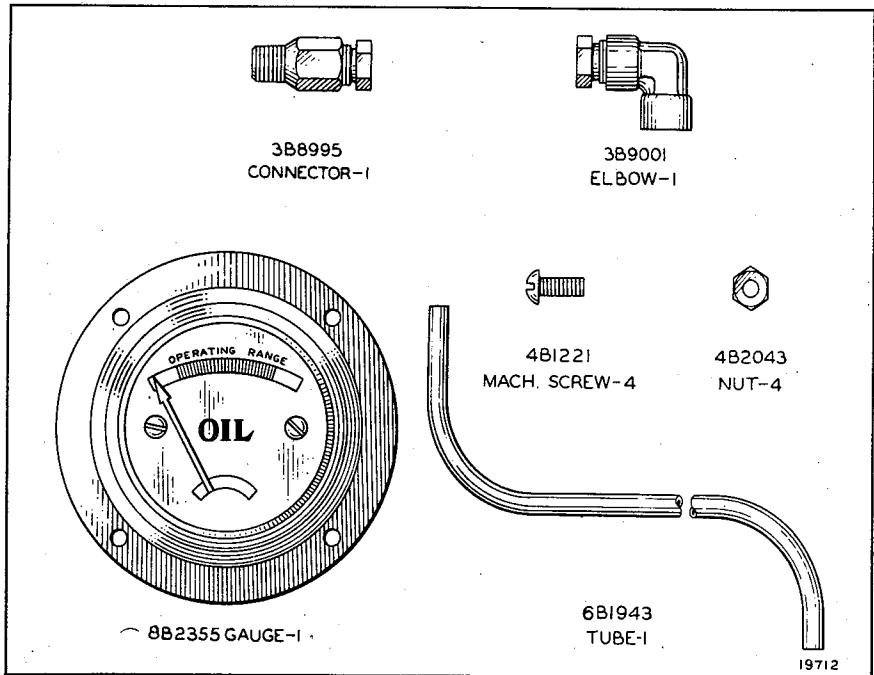


OIL PRESSURE GAUGE

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

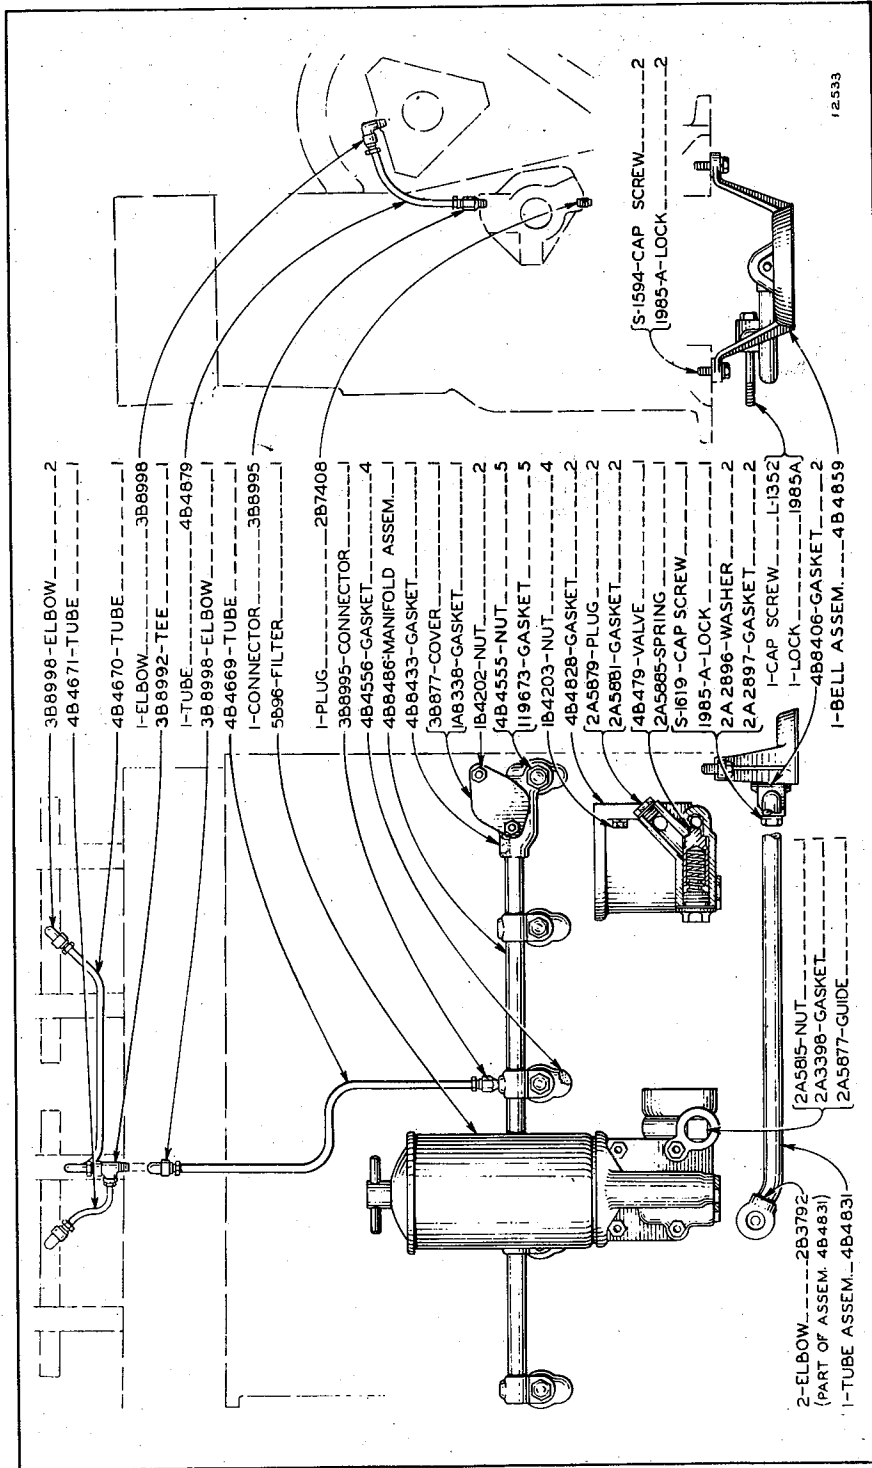

OIL LINES AND FILTER

Serial No. 5J1 to 5J397 Inclusive
5896 Oil Filter is shown on Page 59

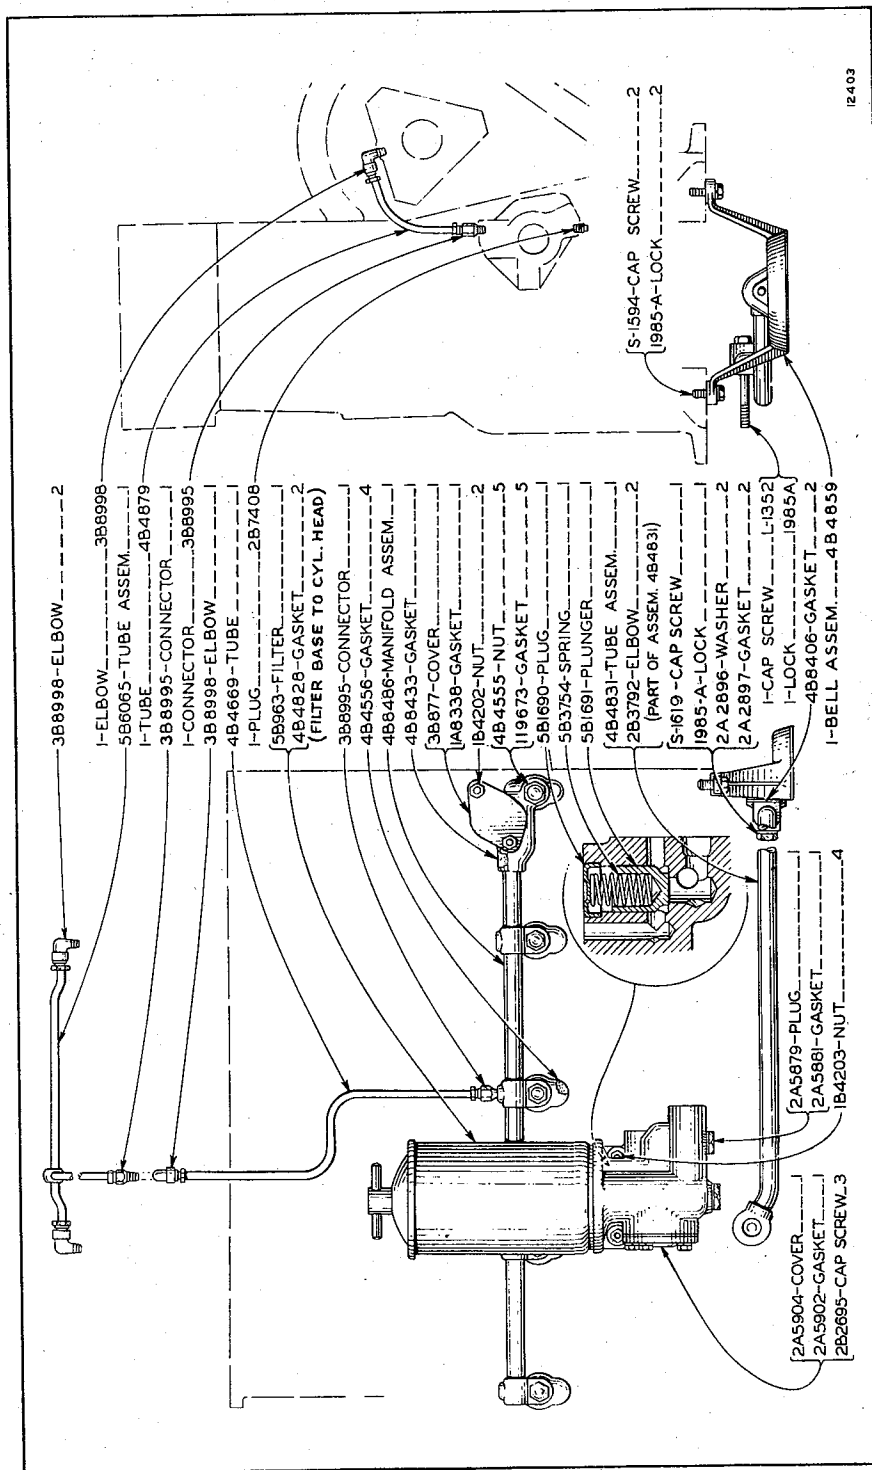


12403

OIL LINES AND FILTER


Serial No. 5J946 to 5J1227 Inclusive
5B963 Oil Filter is shown on Page 60

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

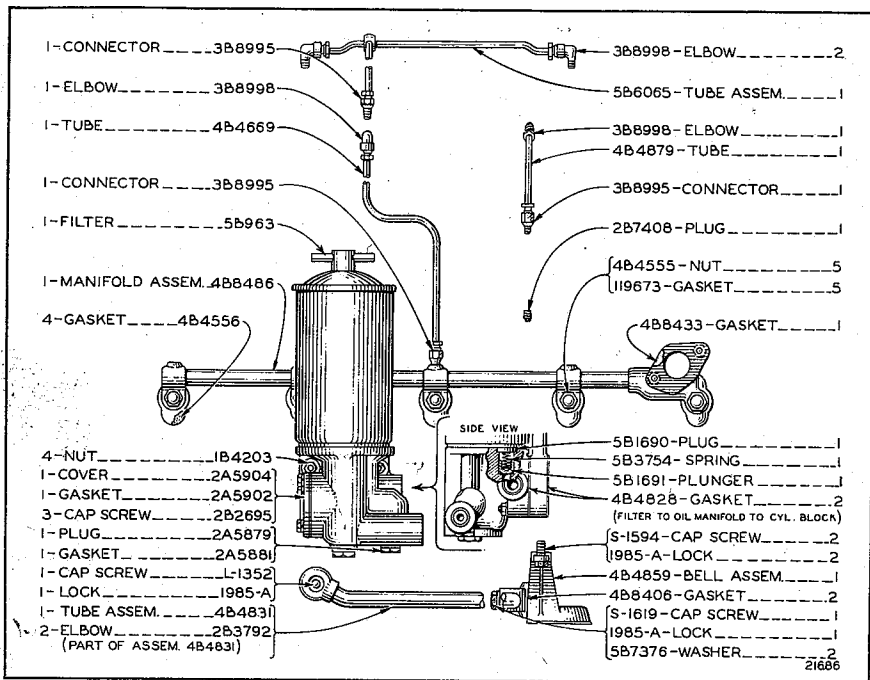

OIL LINES AND FILTER


Serial No. 5J1228 to 5J1496 Inclusive
5B963 Oil Filter is shown on Page 60

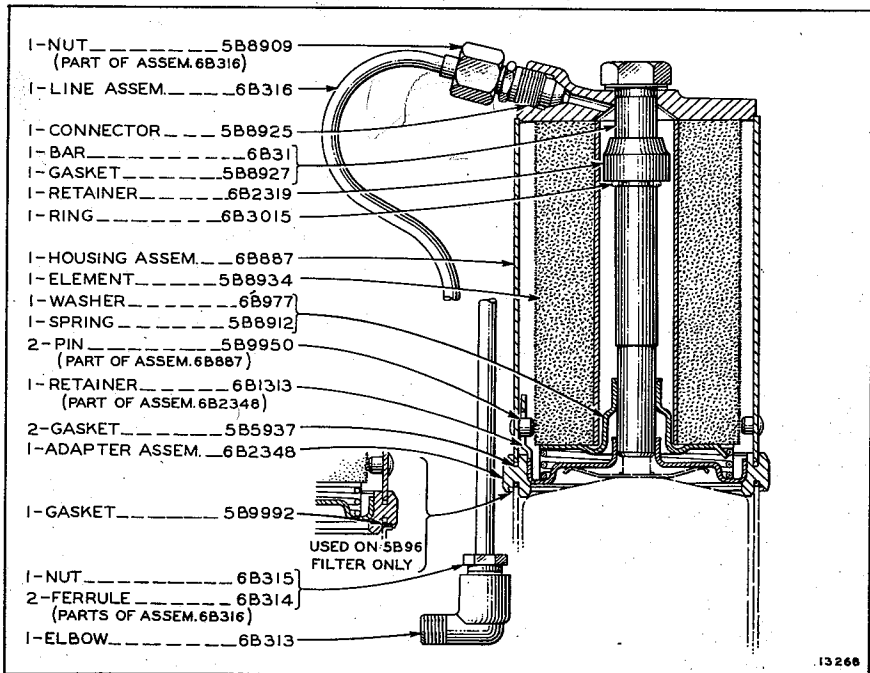

6B463 OIL FILTER GROUP


For Field Installation
Serial No. 5J1 to 5J1496 Inclusive

 ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS




Serial No. 5J1497 to 5J1802 Inclusive
6B1878 Oil Filter is shown on Page 60


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

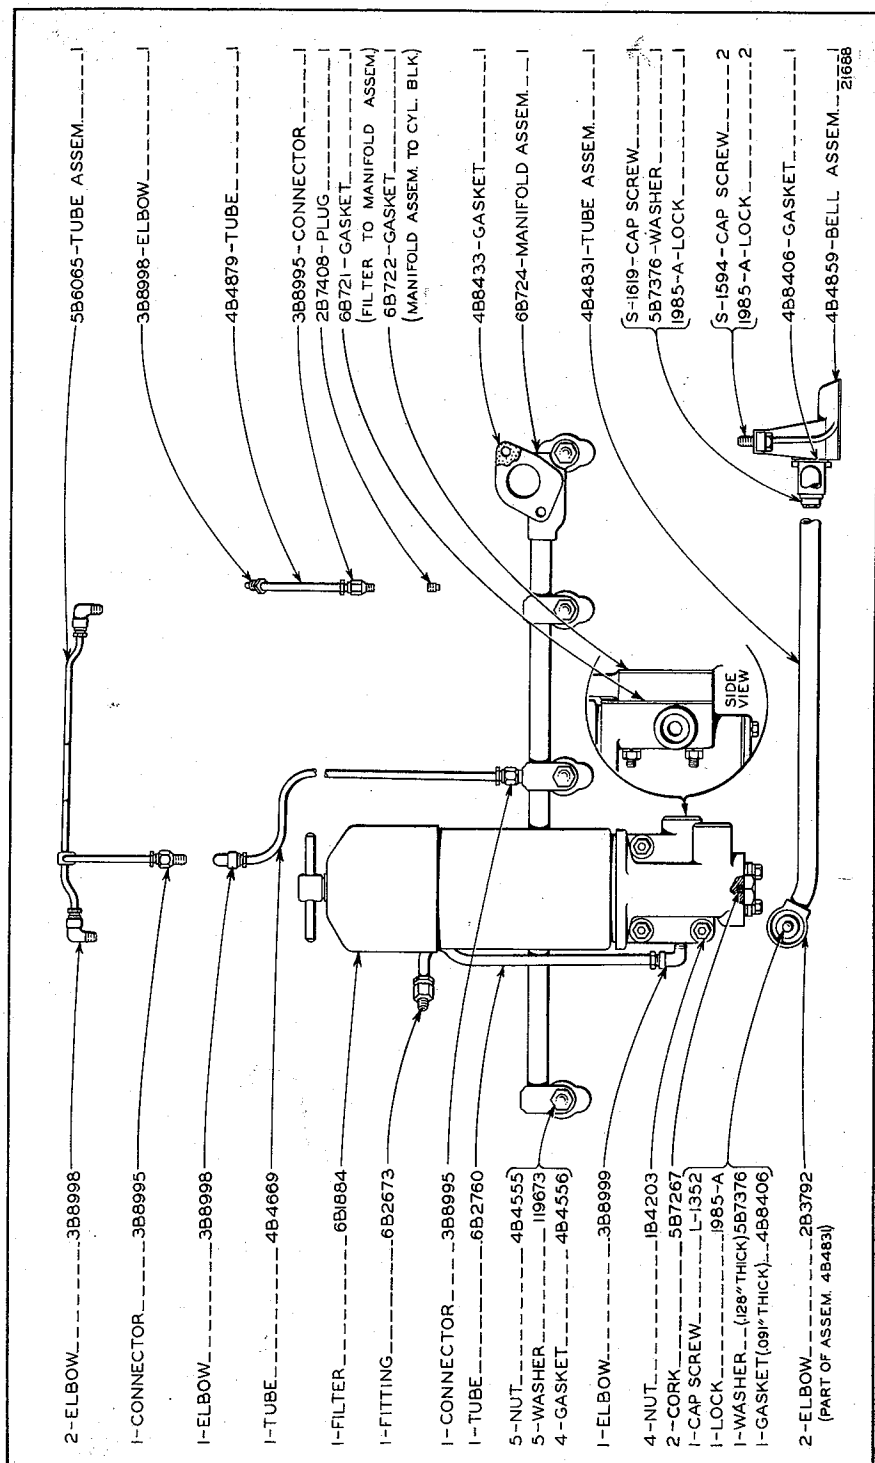

OIL LINES AND FILTER
 Illustration with Serial No. 511003

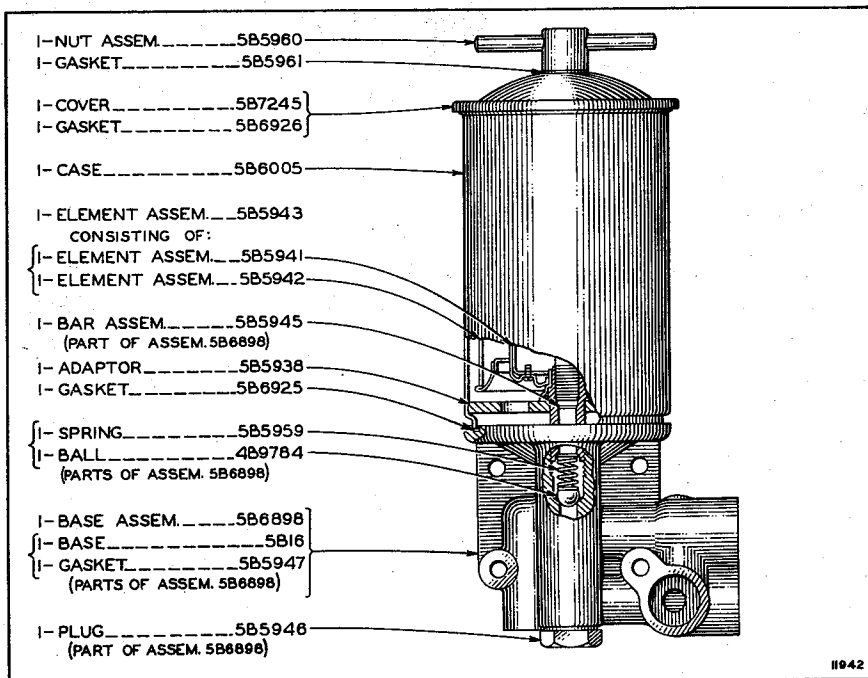
**5B96 OIL FILTER**

Serial No. 5J1 to 5J397 Inclusive

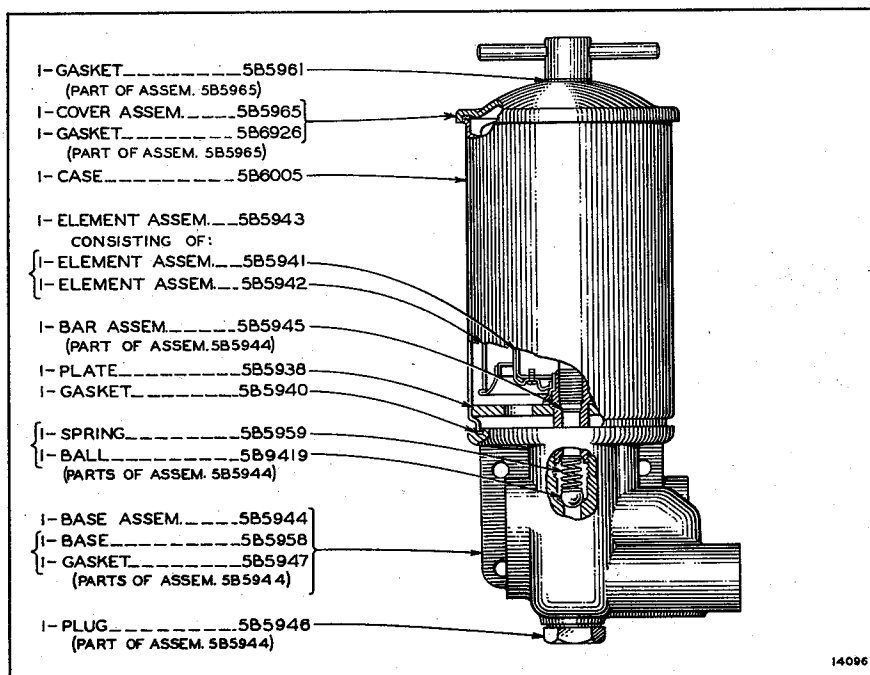
**5B963 OIL FILTER (First Type)**

Serial No. 5J398 to 5J945 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

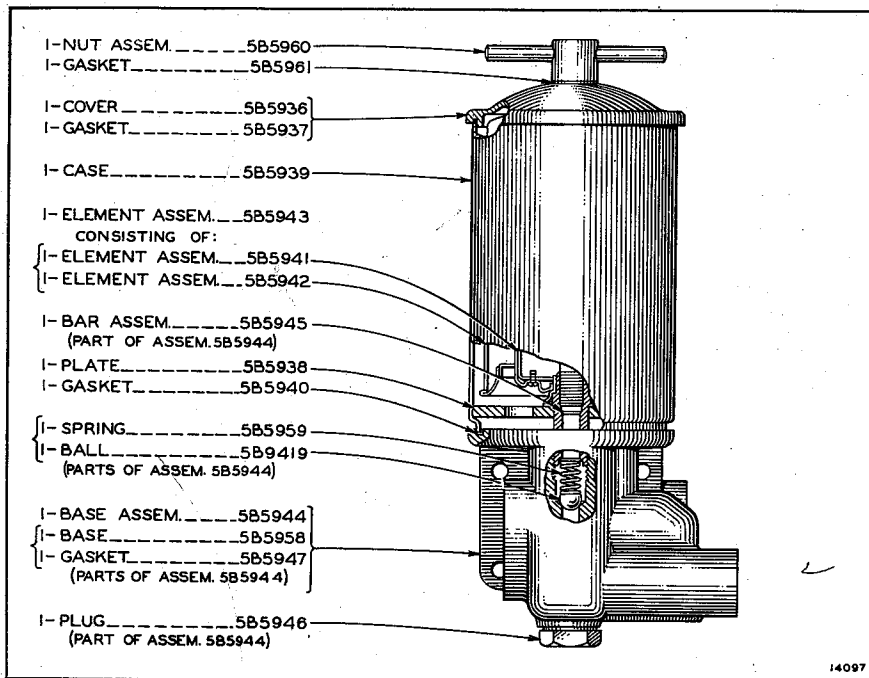**5B963 OIL FILTER (Second Type)**


Serial No. 5J398 to 5J1496 Inclusive

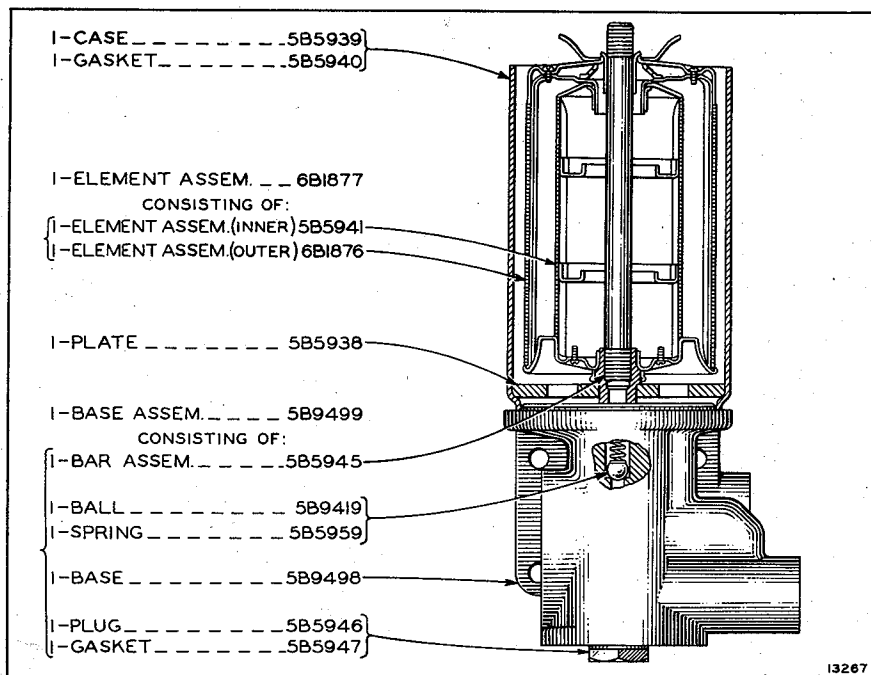**6B1878 OIL FILTER**

Serial No. 5J1497 to 5J1802 Inclusive

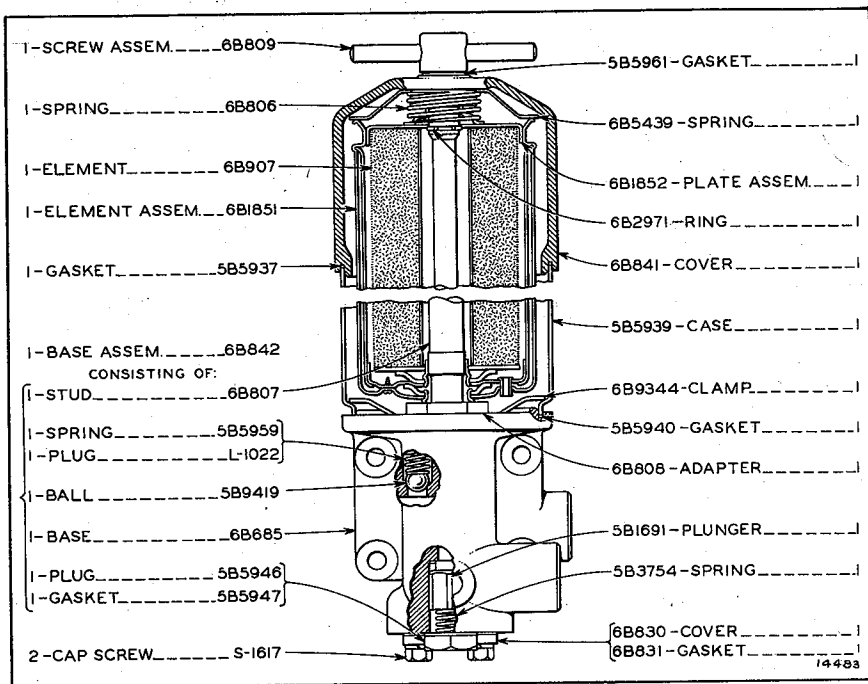


6B1884 OIL FILTER
Effective with Serial No. 5J1803

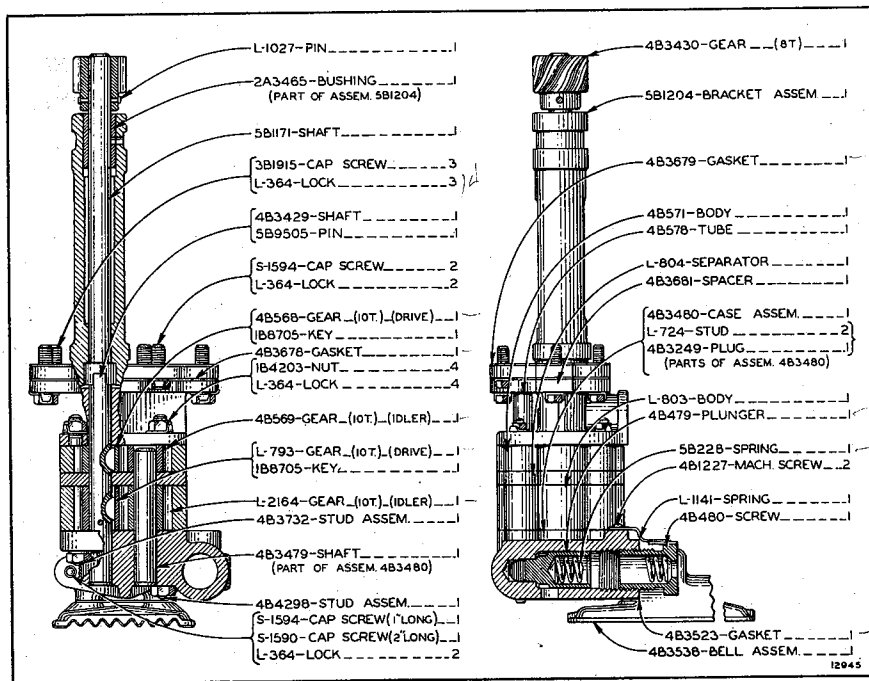


OIL PUMP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

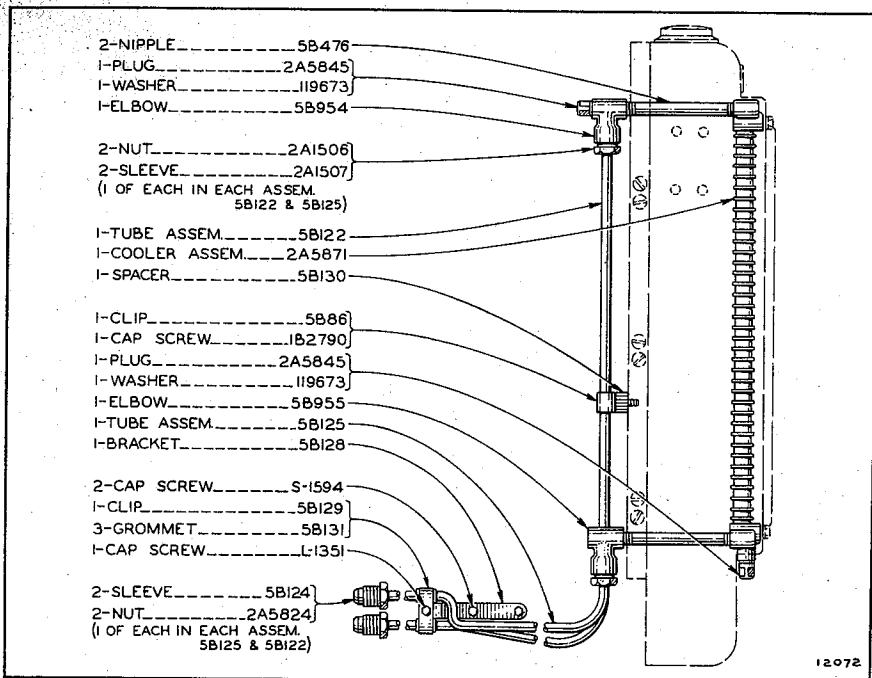

OIL COOLER


Serial No. 5J1 to 5J397 Inclusive

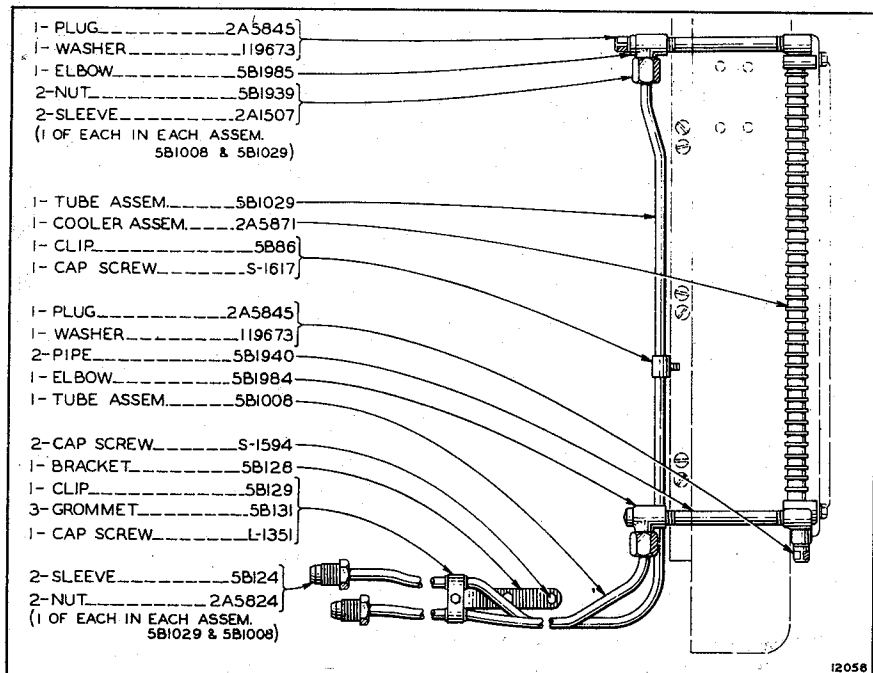

OIL COOLER


Serial No. 5J398 to 5J1275 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

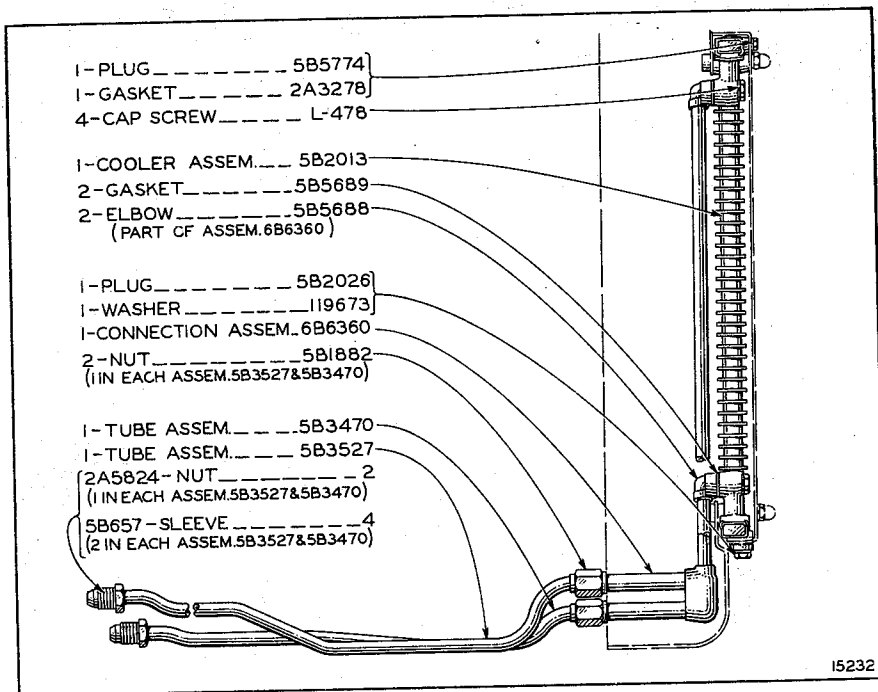

OIL COOLER


Serial No. 5J1276 to 5J1802 Inclusive

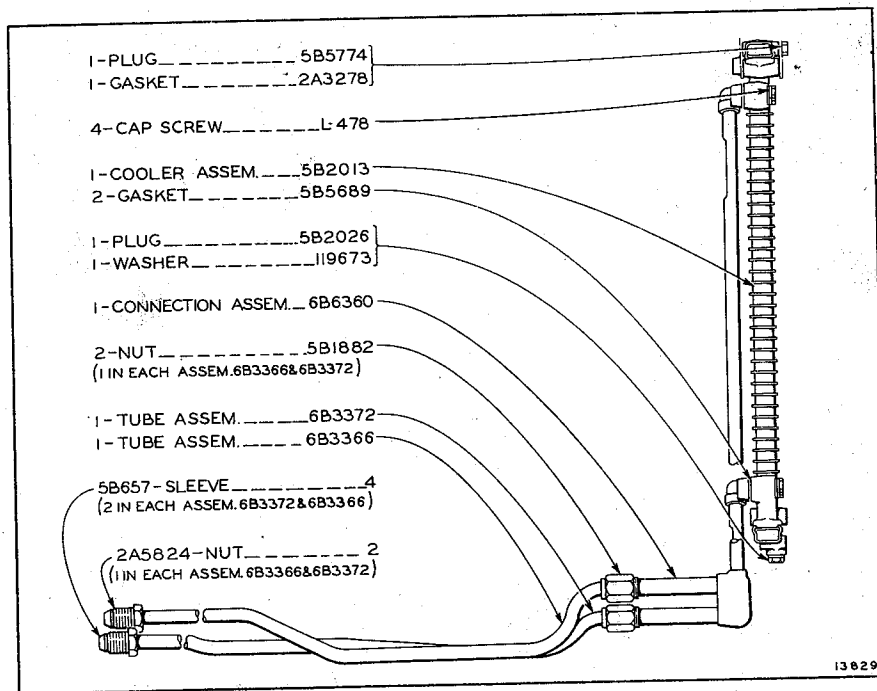


OIL COOLER

Effective with Serial No. 5J1803

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

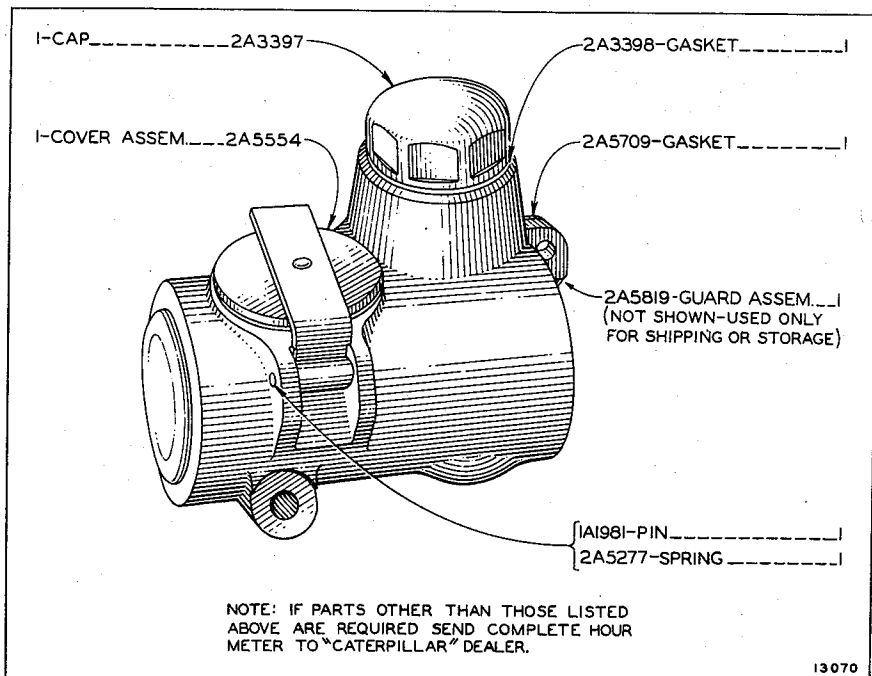**2A5715 HOUR METER GROUP**


Serial No. 5J1 to 5J1473 Inclusive

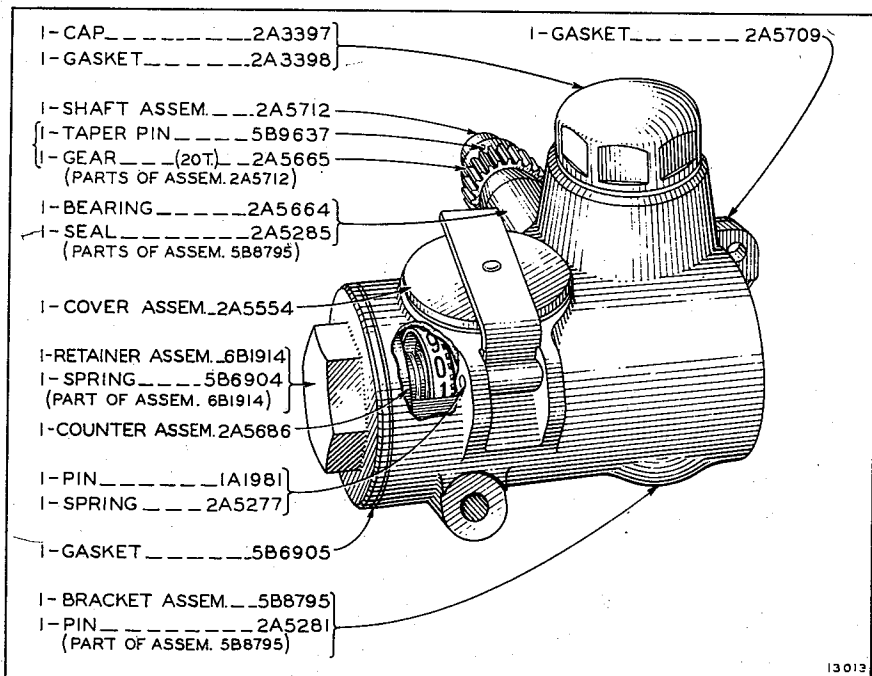**5B8796 HOUR METER GROUP**

Effective with Serial No. 5J1474


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

Starting Engine

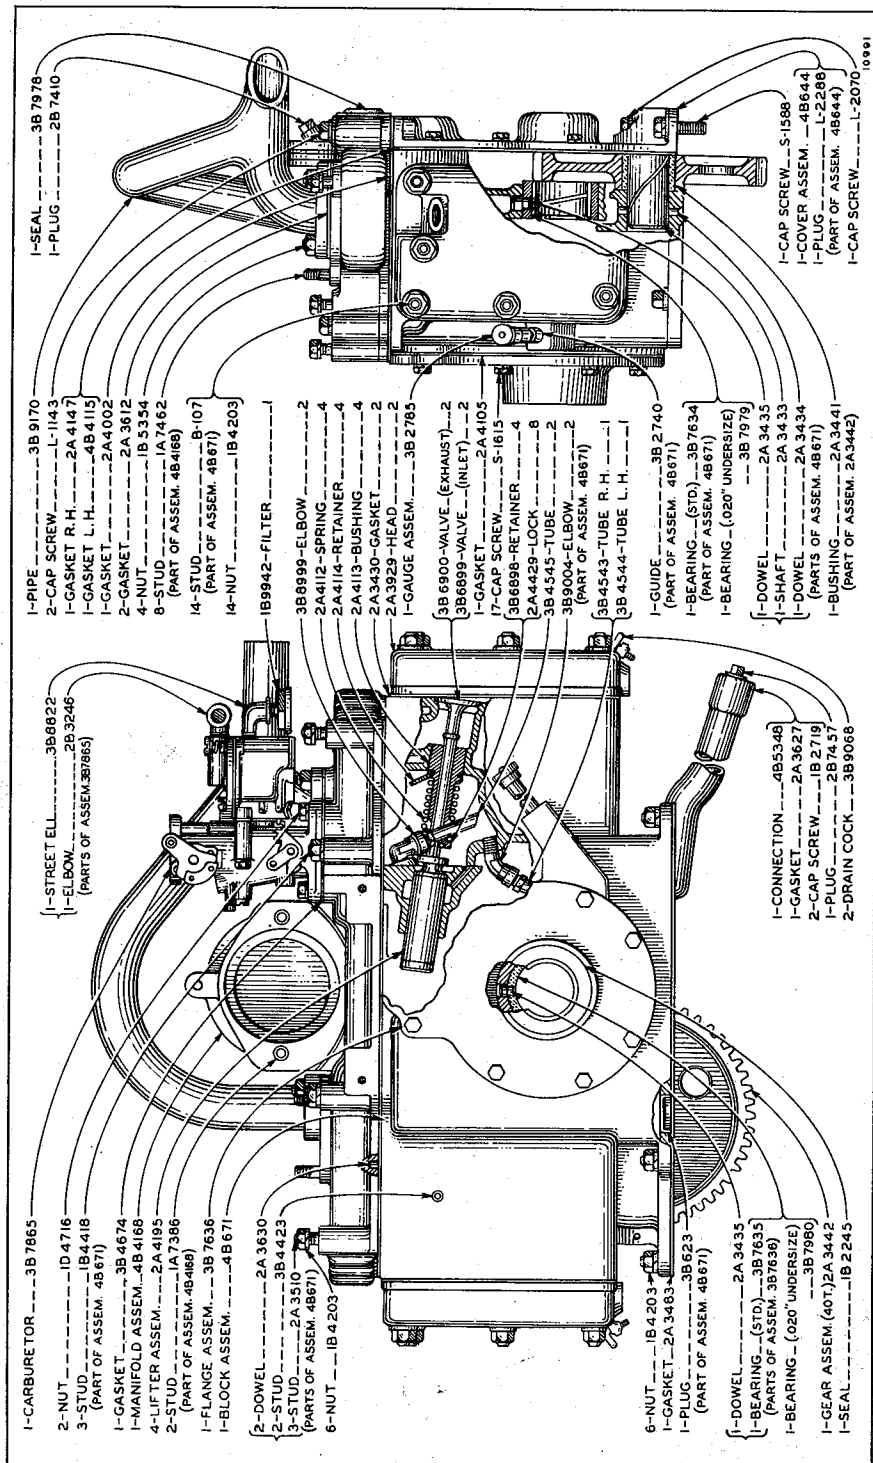

CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM


Serial No. 511 to 51366 Inclusive

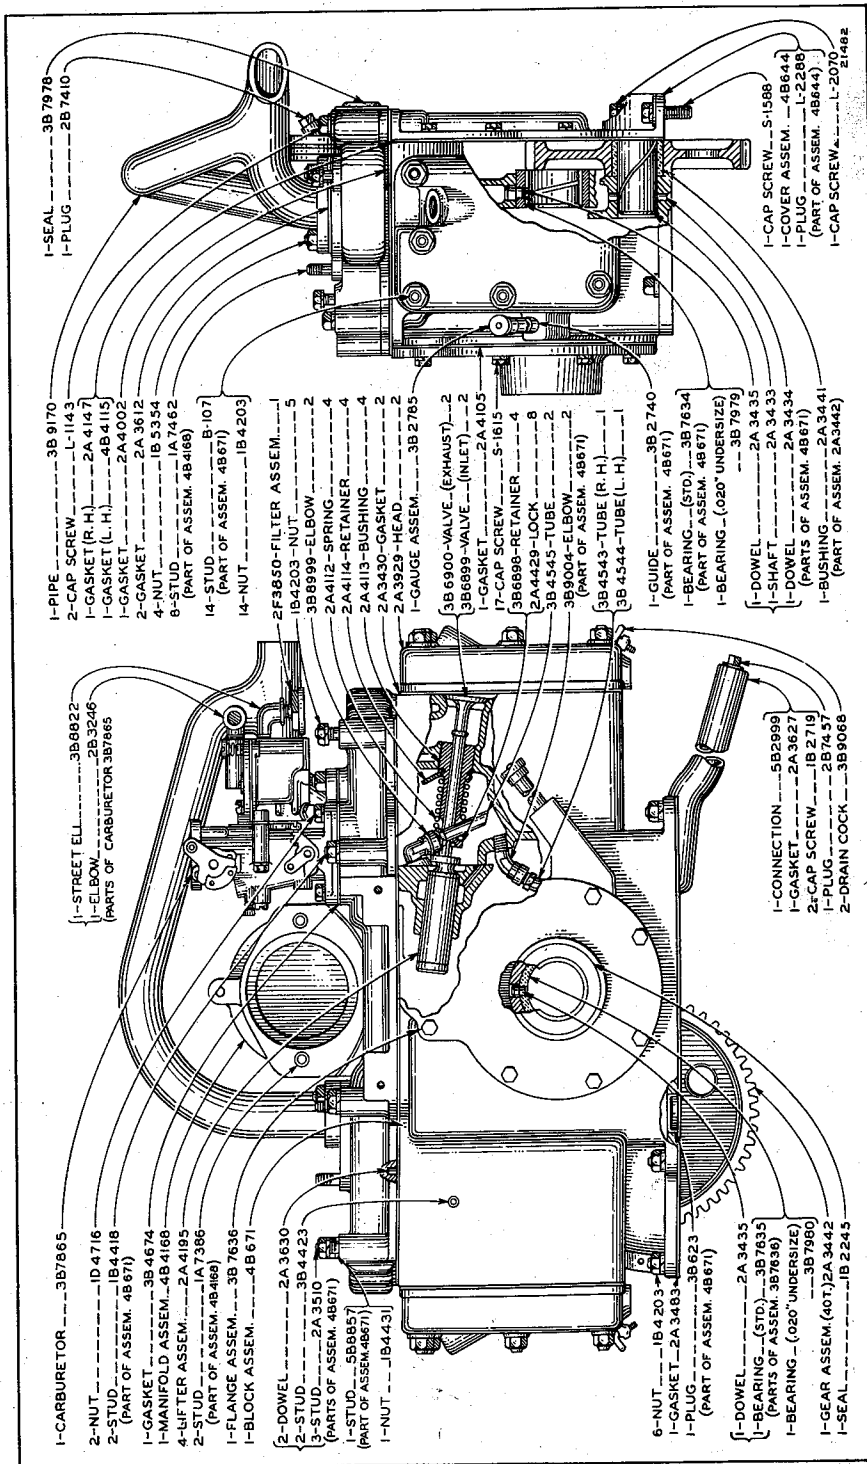

CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM


Serial No. 5J367 to 5J1424 Inclusive

3B7865 Carburetor is shown on Page 70

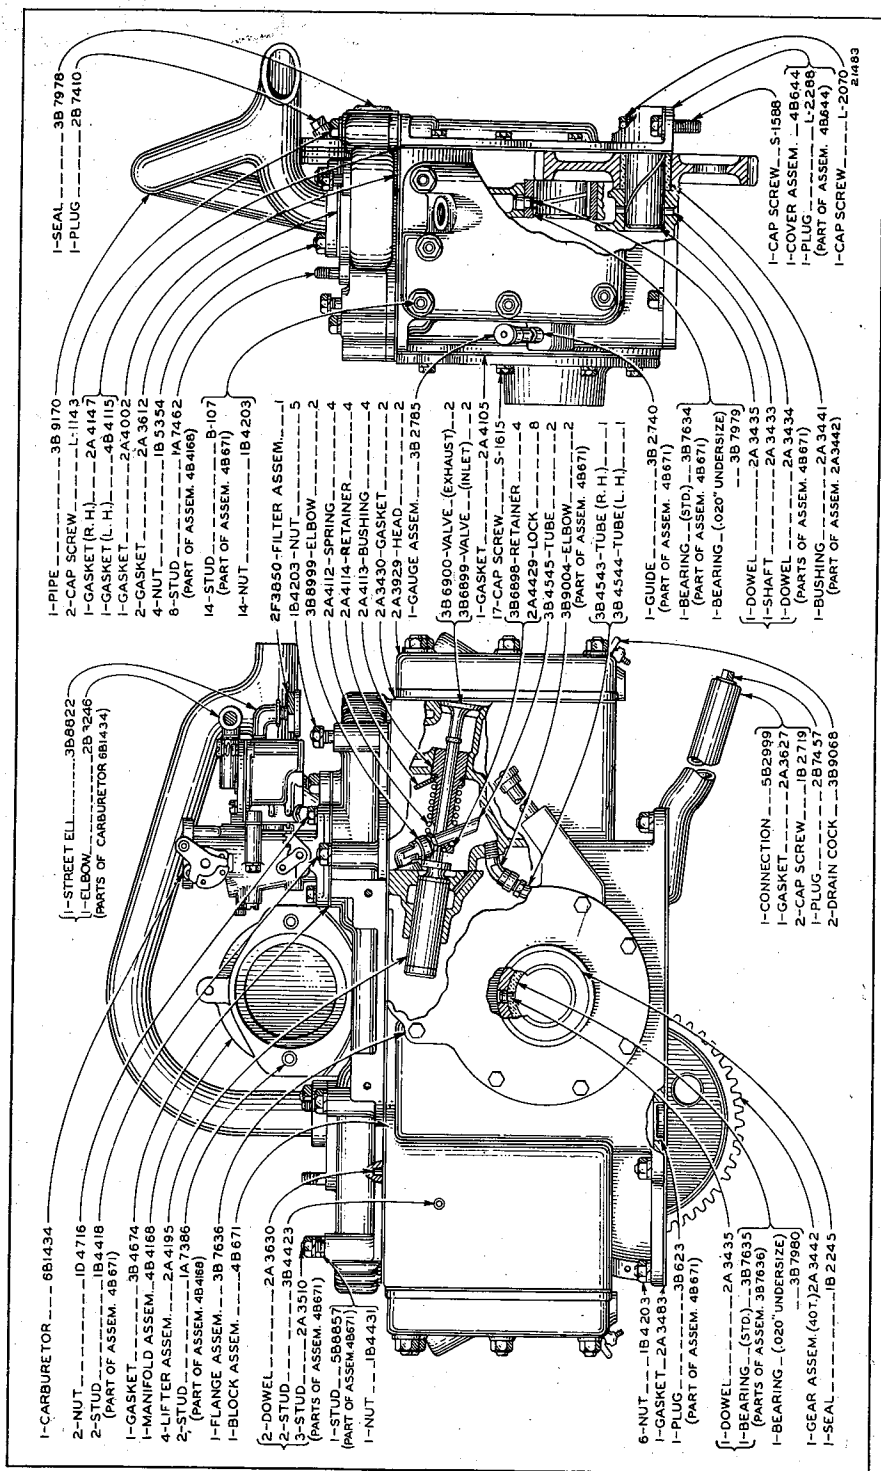

CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM


Serial No. 5J1425 to 5J1819 Inclusive

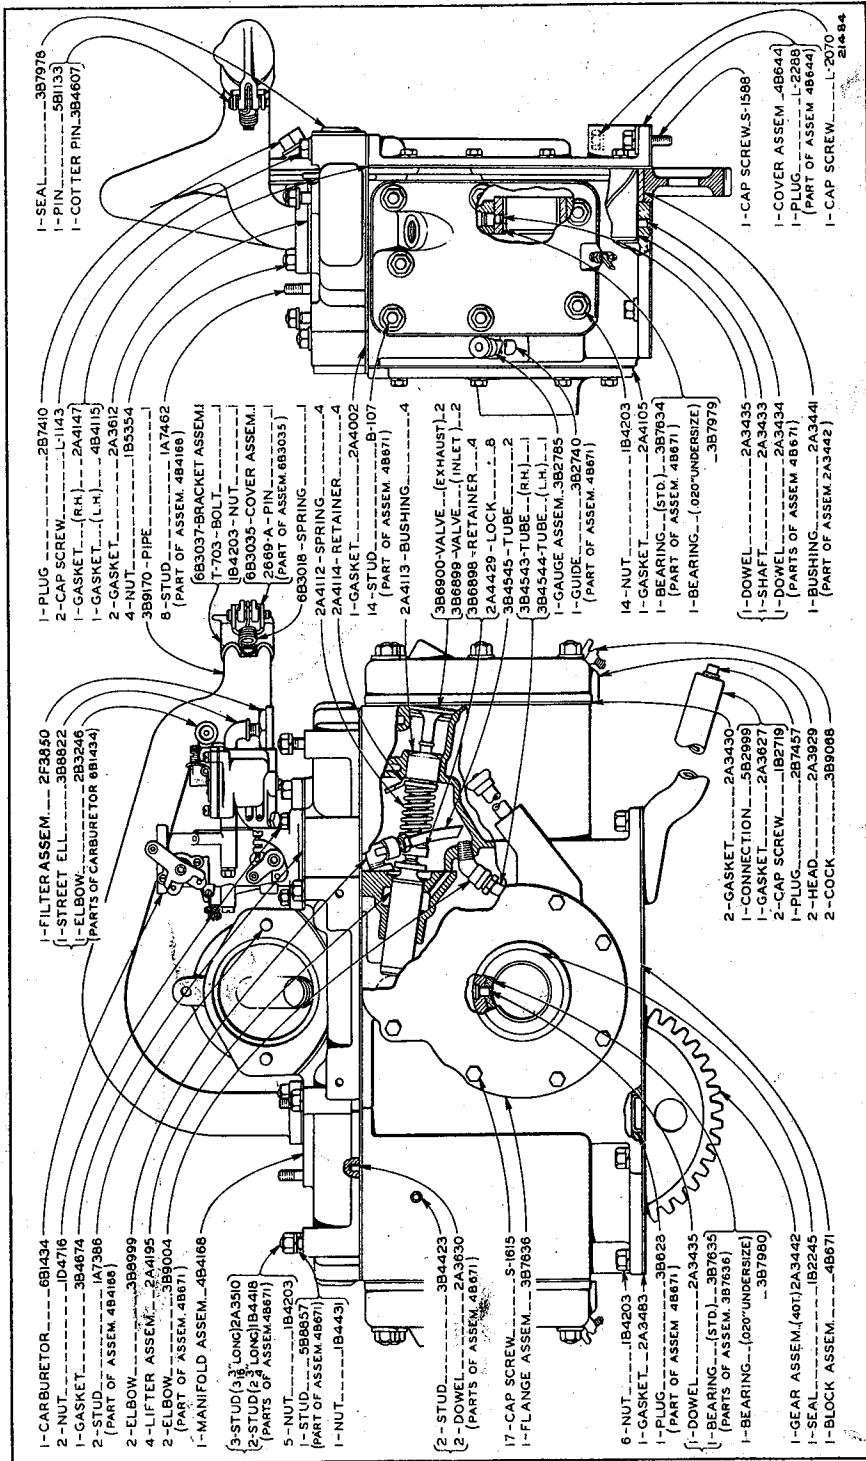


CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM

Effective with Serial No. 5J1820

6B1434 Carburetor is shown on Page 71

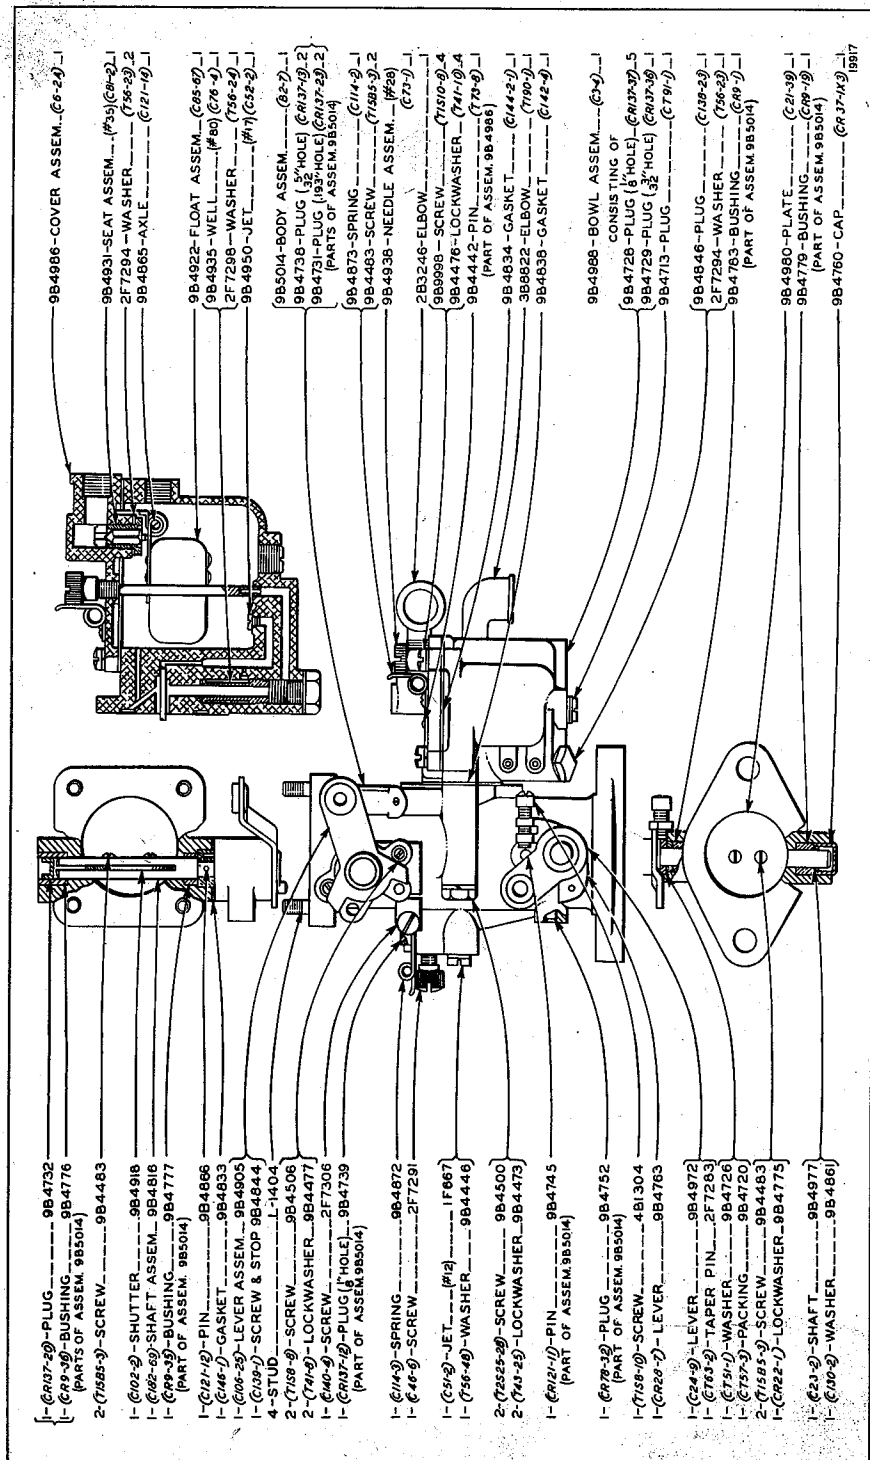


3B7865 CARBURETOR

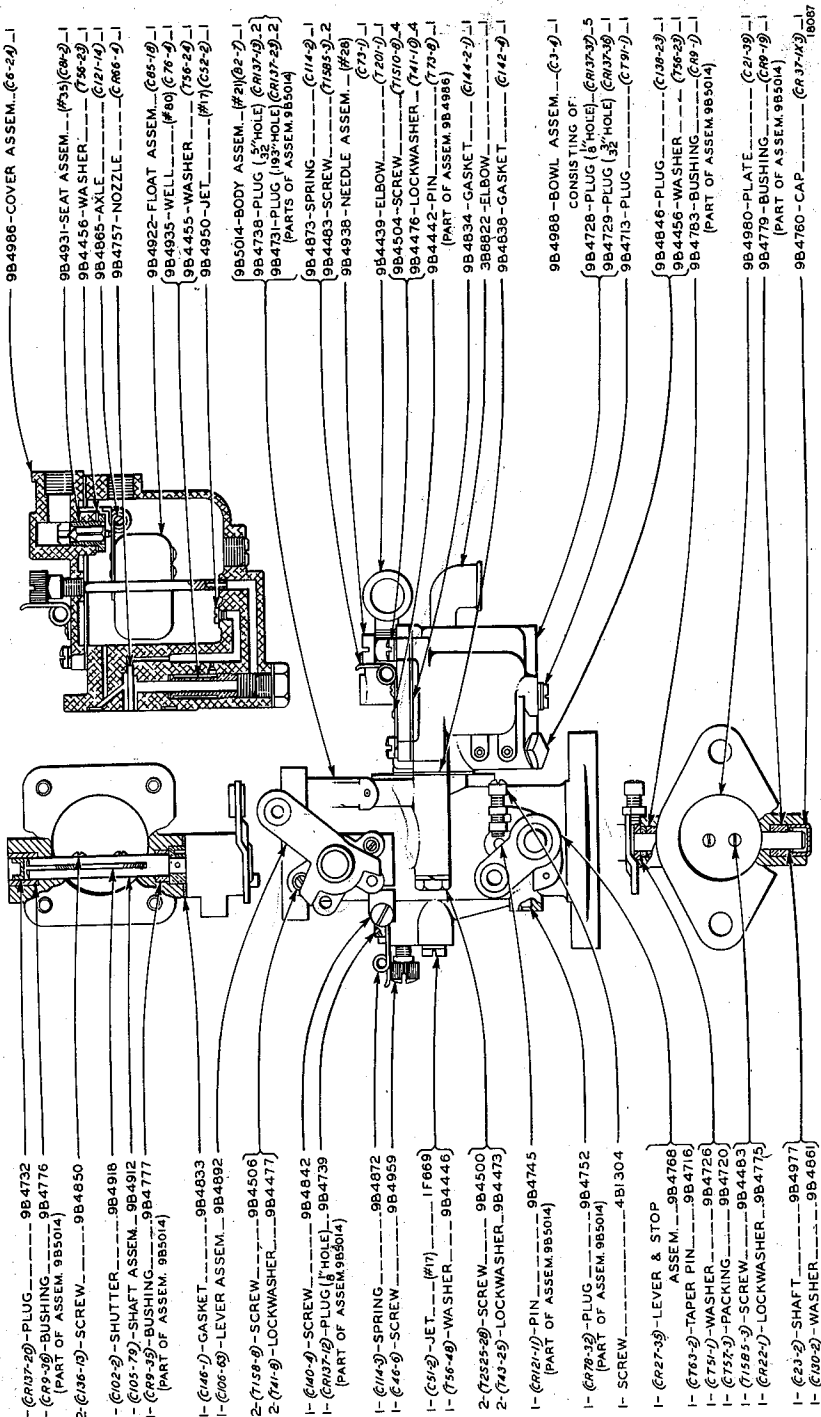

6B1434 CARBURETOR


Numbers shown in (italics) are "Zenith" part numbers. (See Page 191)
Only separate parts serviced. When complete Carburetor is required order 7B4717

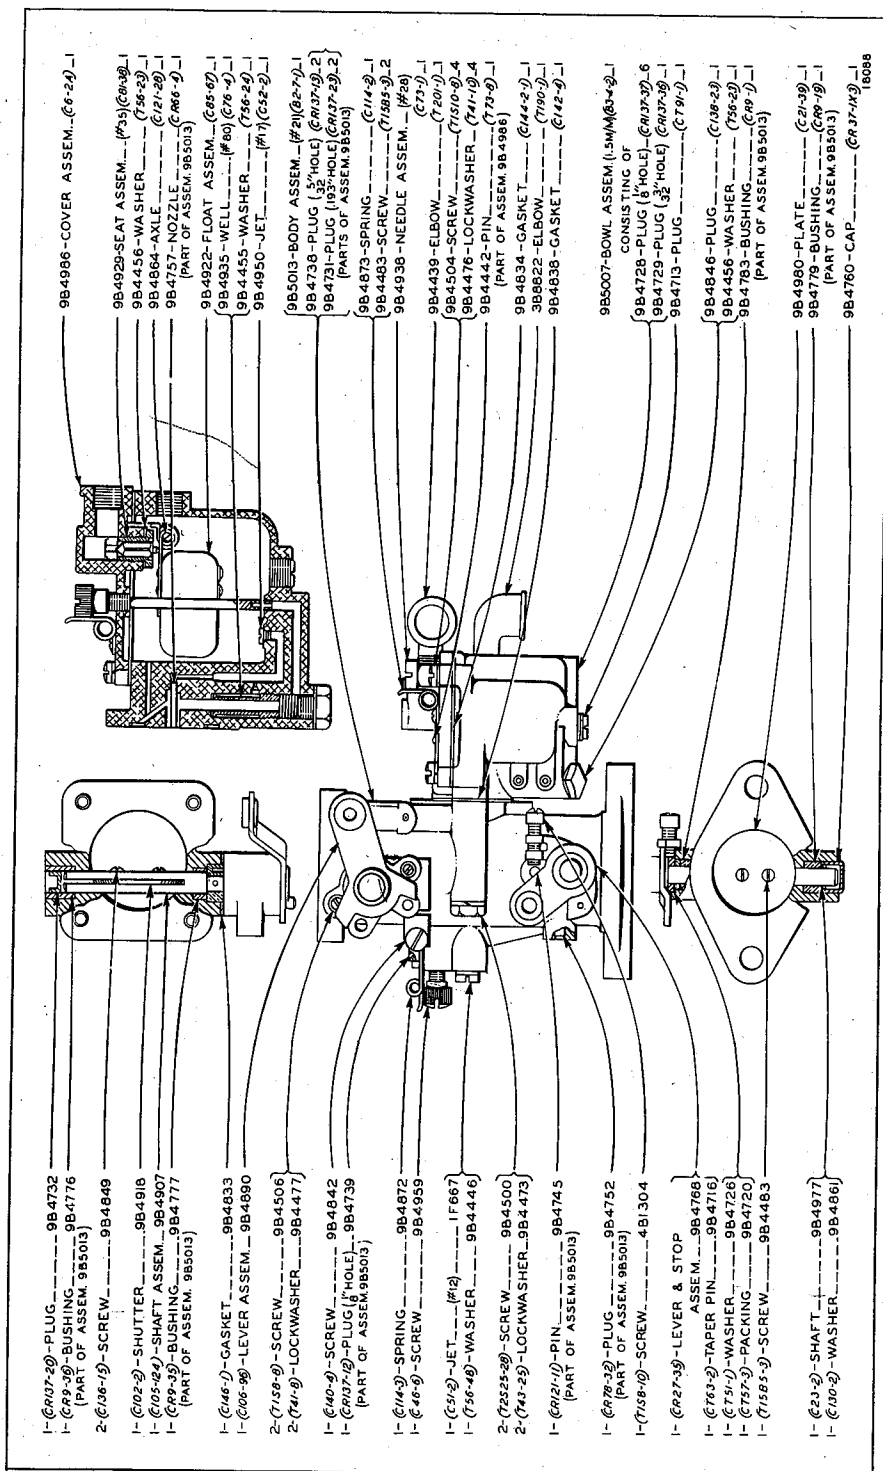


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

Before 73


7-22-46

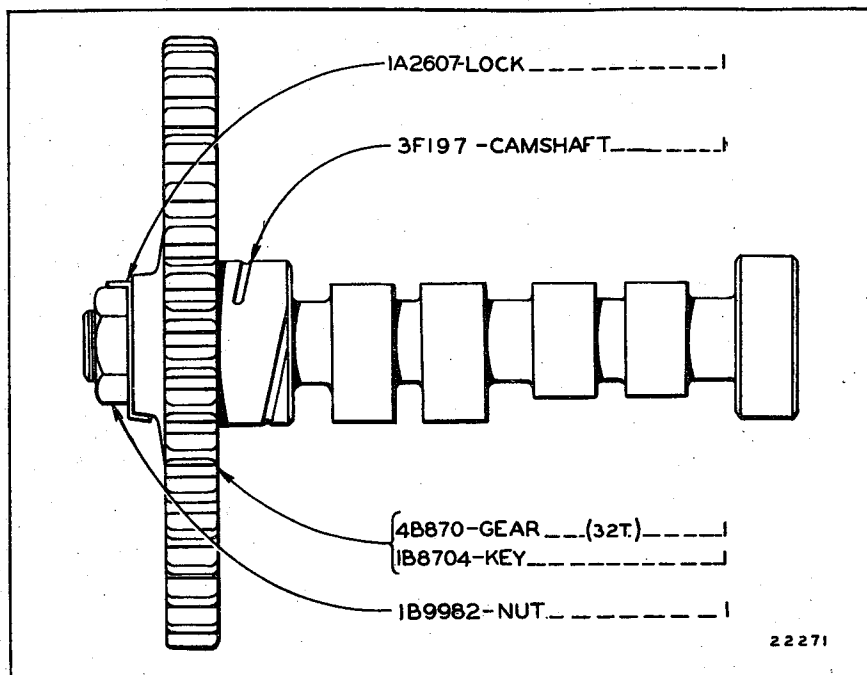

CAMSHAFT
Effective with Serial No. 5J946

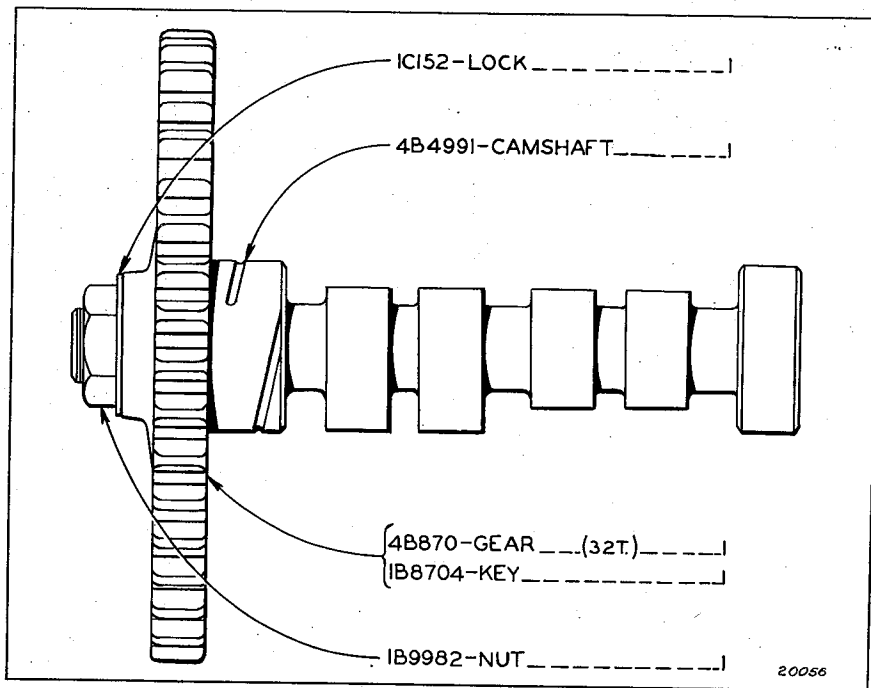


CAMSHAFT

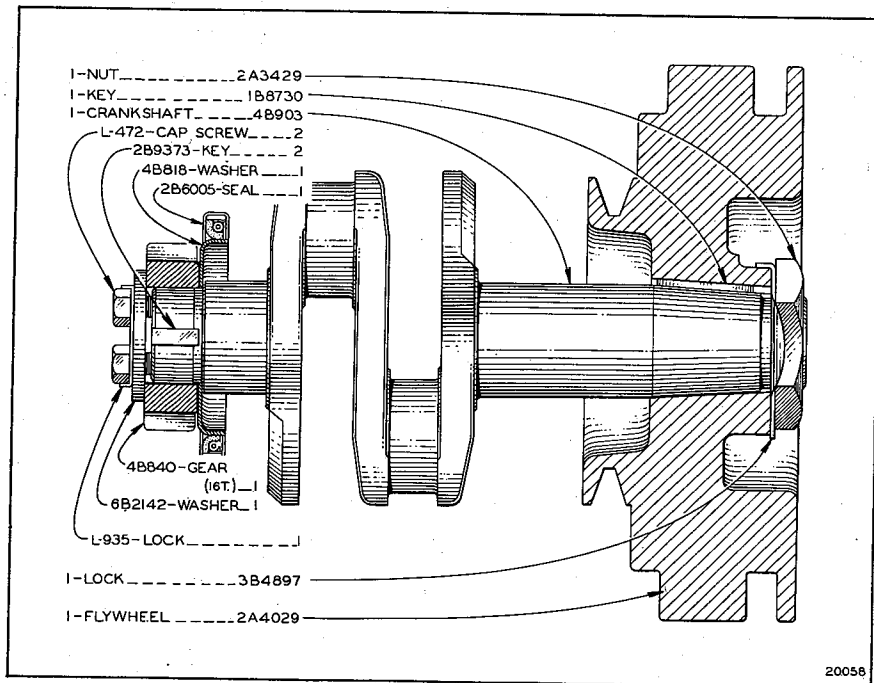


CRANKSHAFT

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

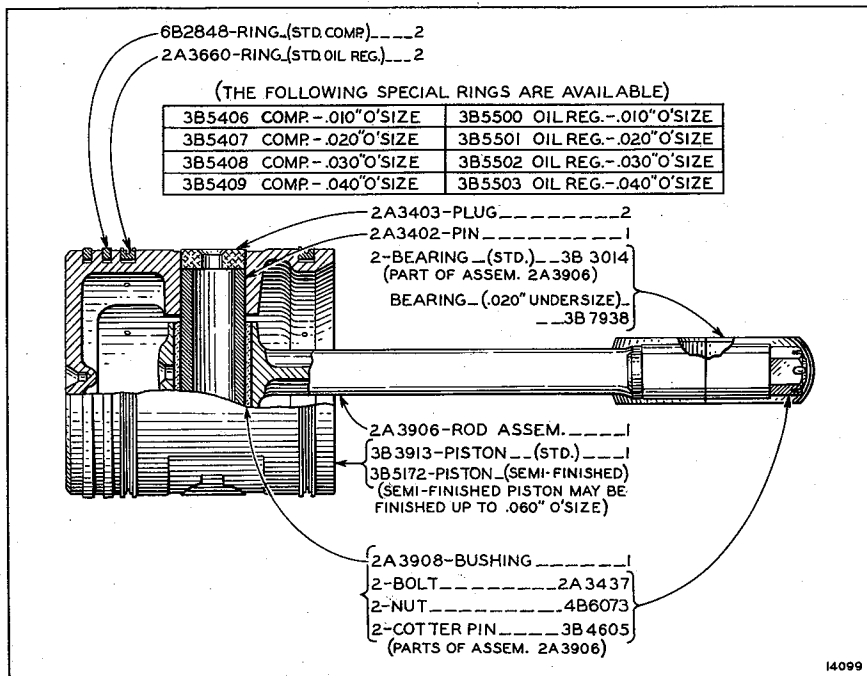


CONNECTING ROD AND PISTON (2 Groups Req'd.)

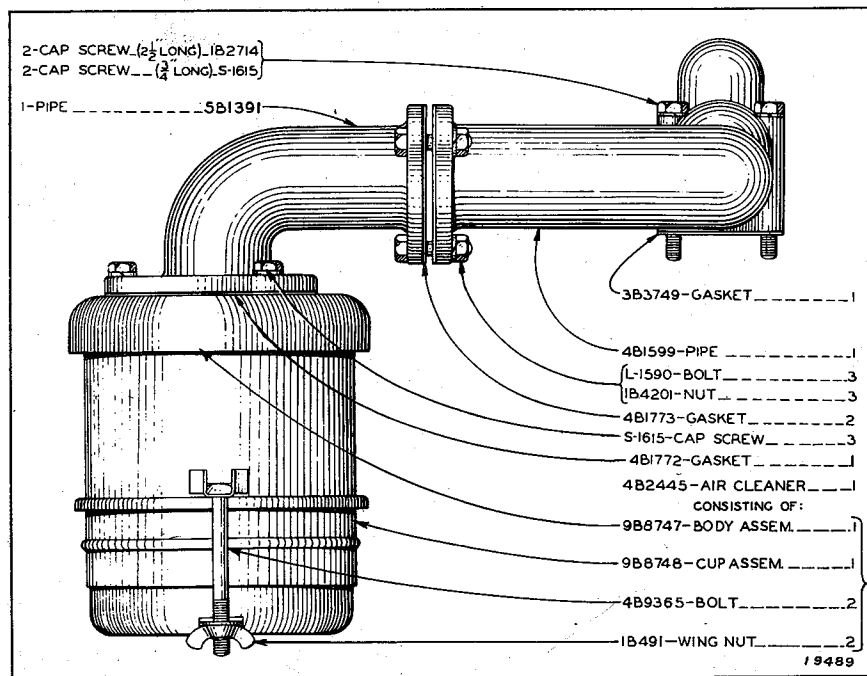


AIR CLEANER

Refer also to Page 142 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

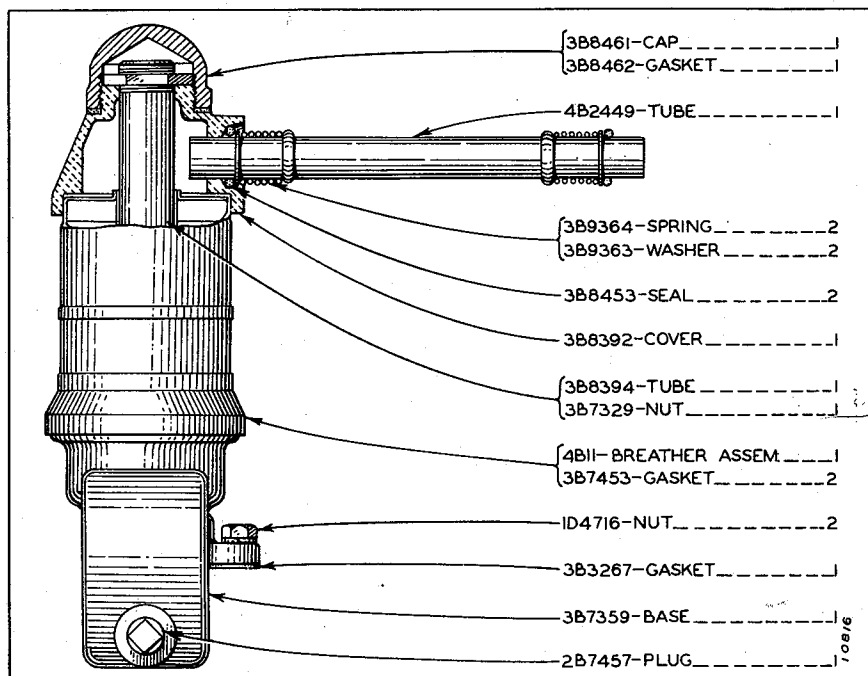


BREATHER AND OIL FILLER

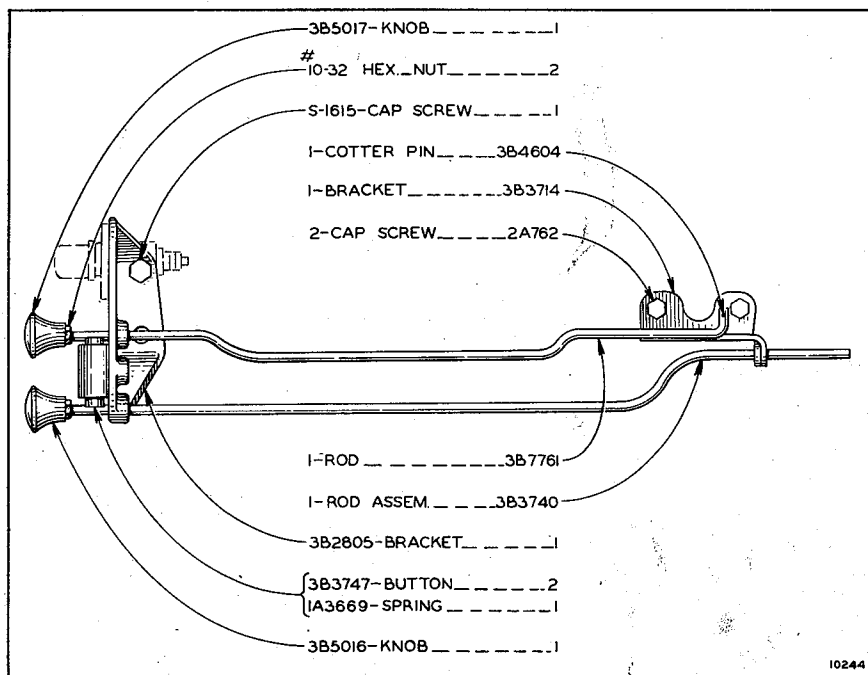


CARBURETOR AND CHOKE CONTROL

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

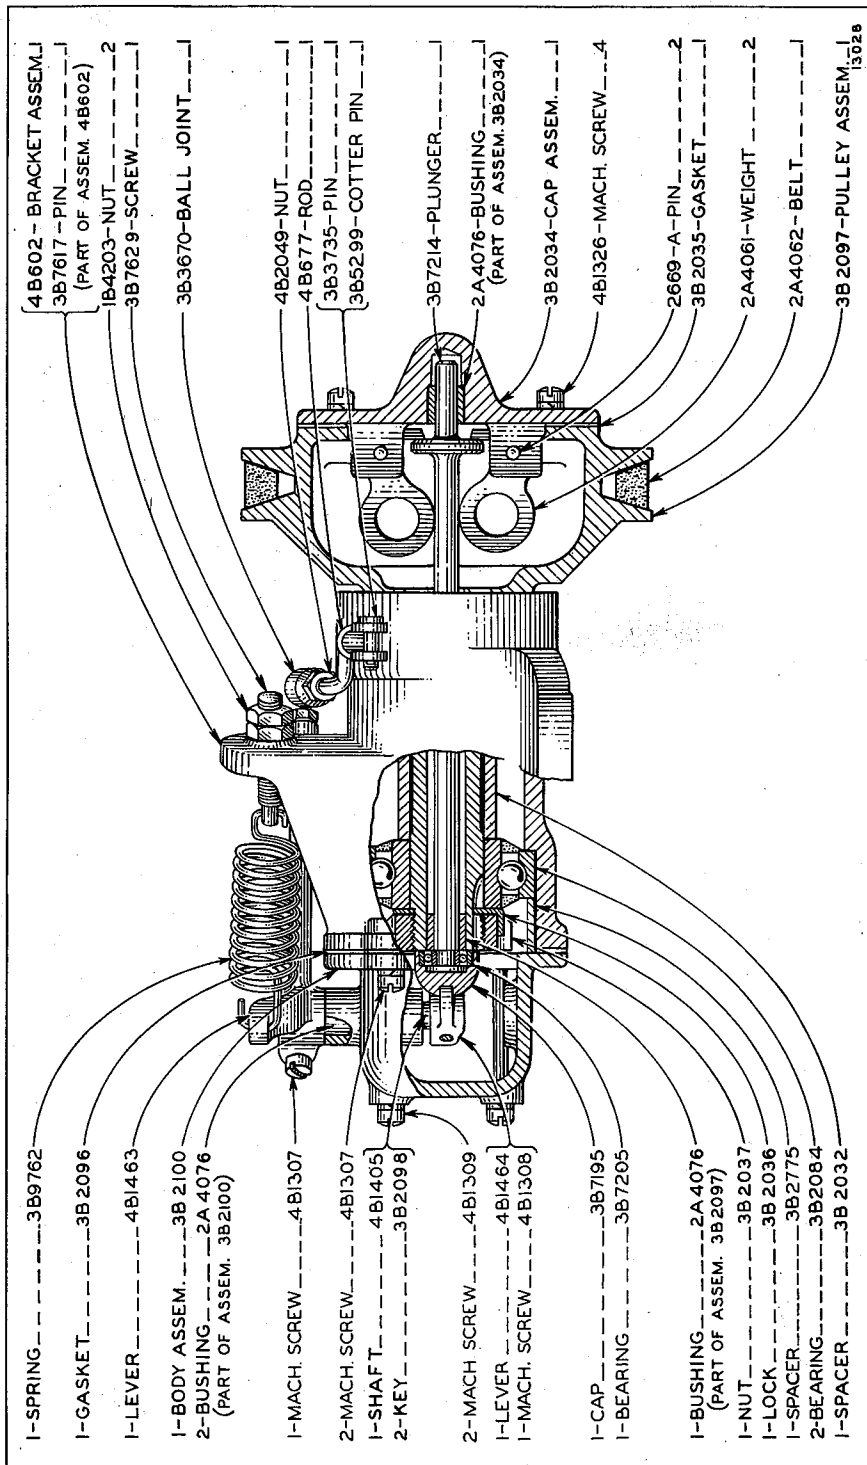

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

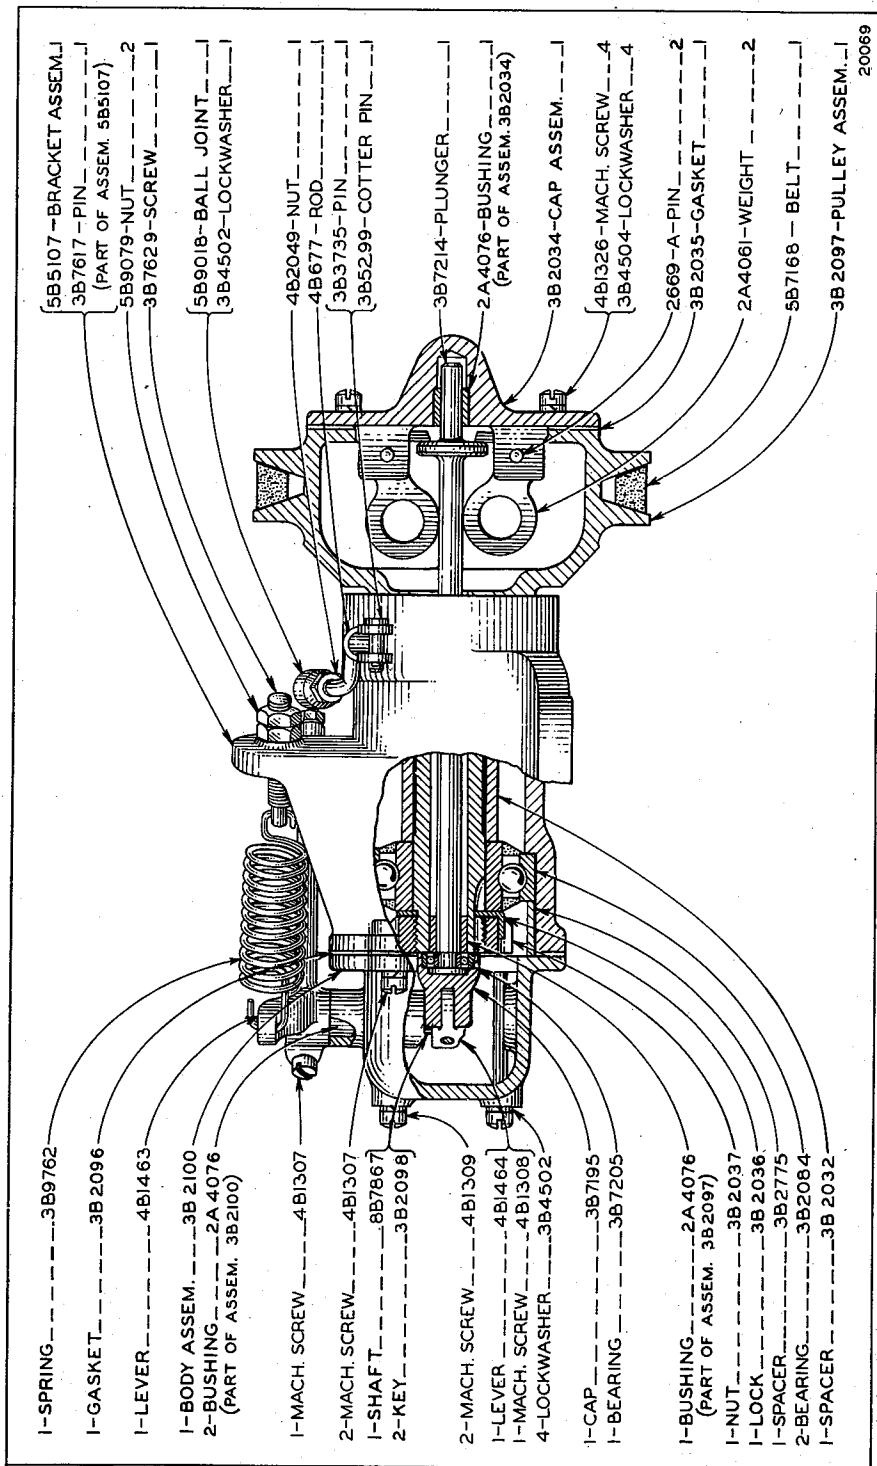


20069

GOVERNOR
Effective with Serial No. 5J1460


Before 78
5/1/1978

1-15-47

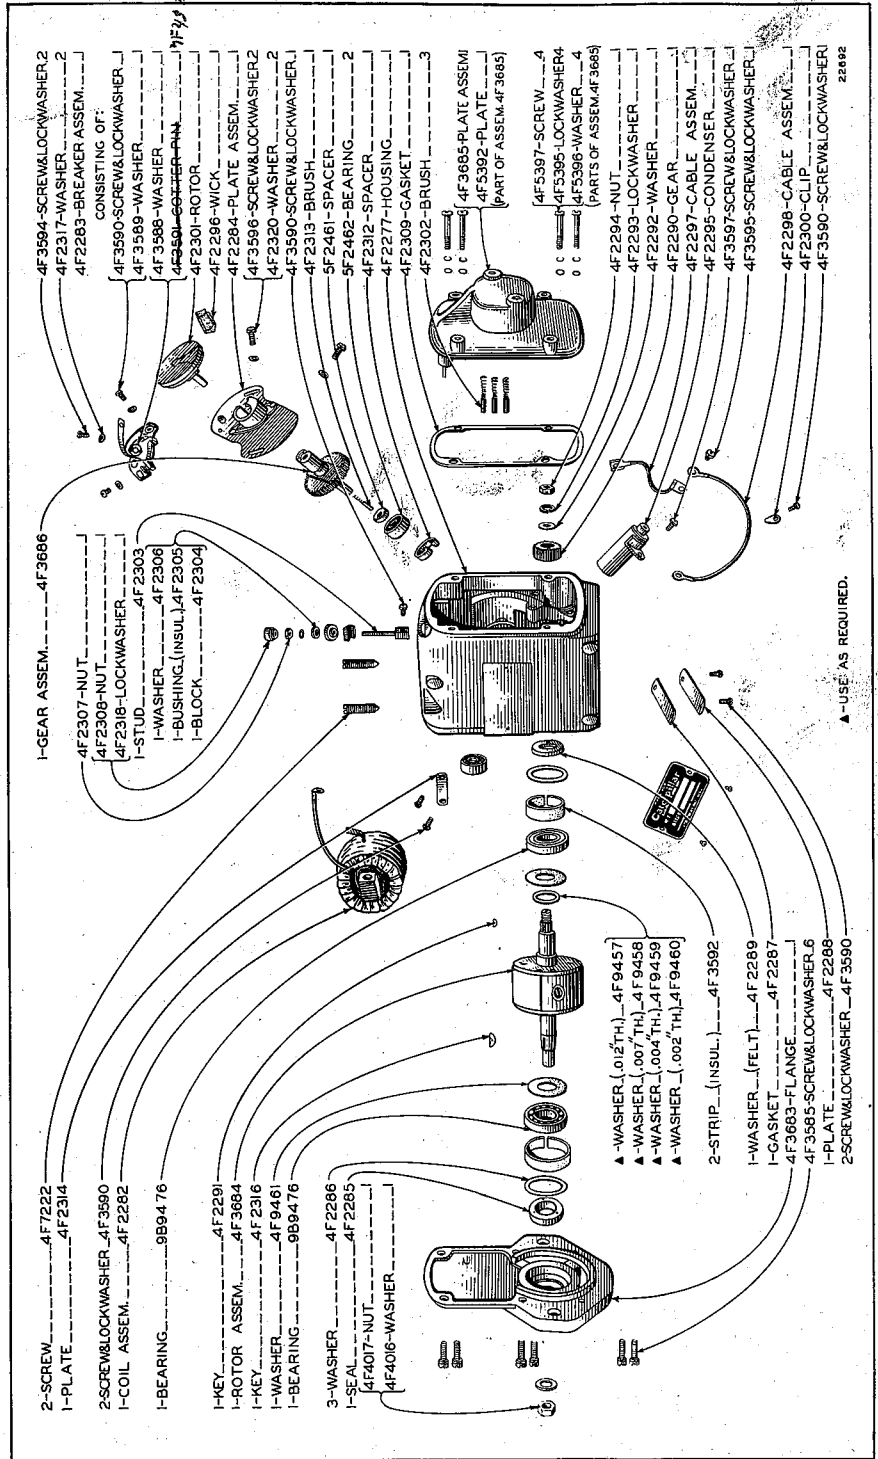


3F8572 MAGNETO

When complete replacement of 4B389 Magneto is required, order 1—3F8572 Magneto,
1—4F8016 Choke Rod and 1—4F7997 Throttle Rod Assembly.

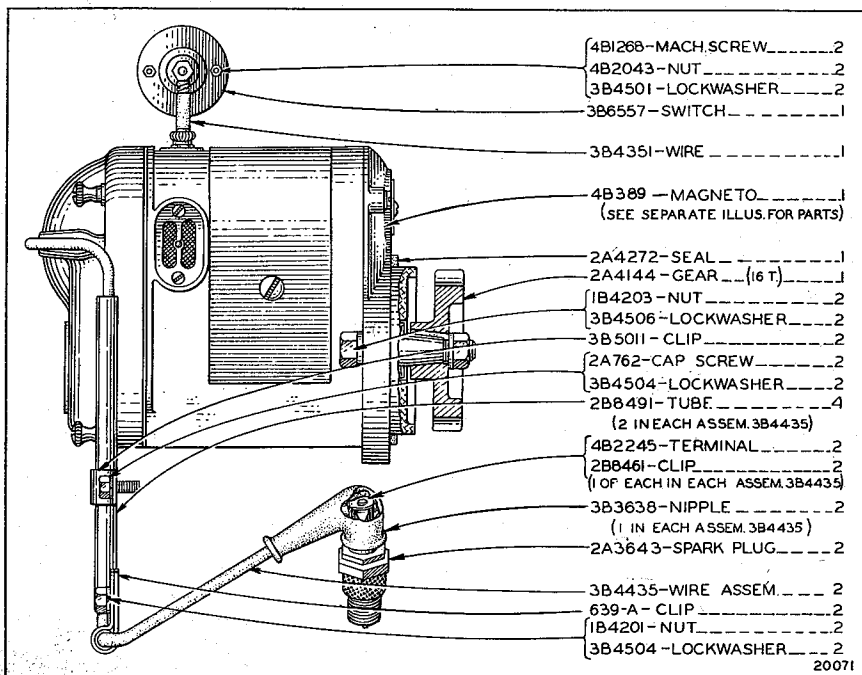


IGNITION SYSTEM

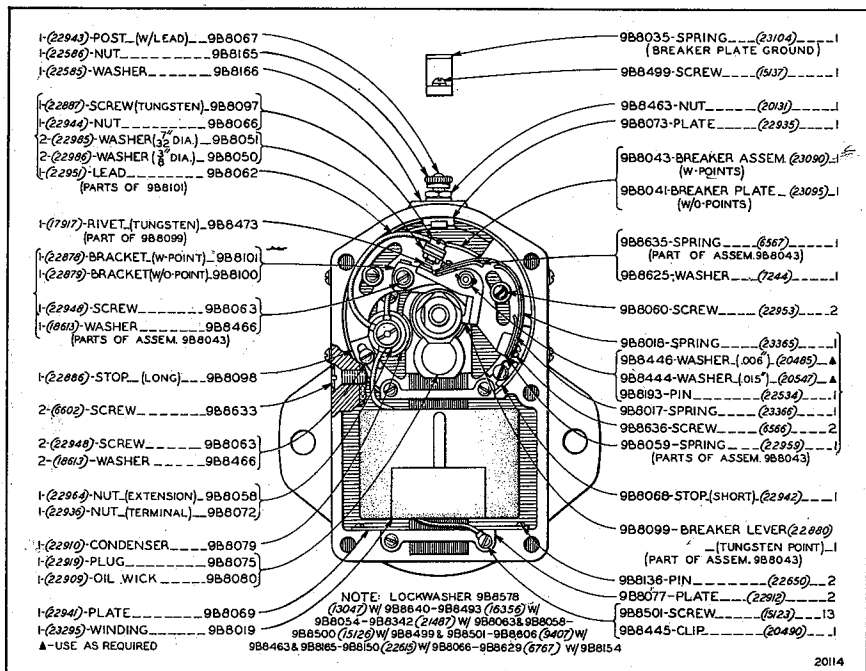

4B389 MAGNETO PARTS

Numbers shown in (italics) are "Eisemann" part numbers. (See Page 191)


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

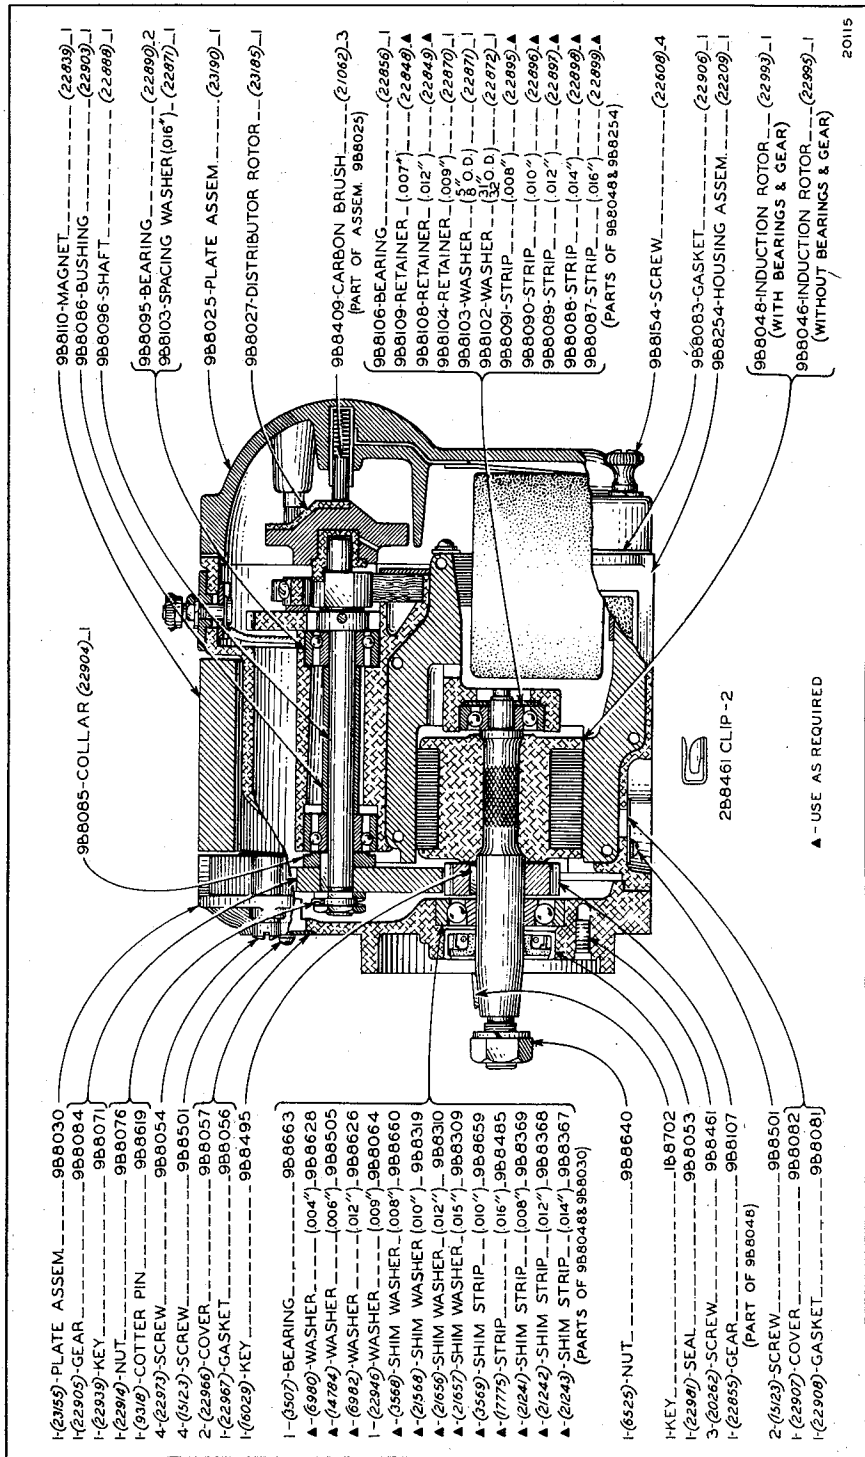


20115

4B389 MAGNETO PARTS

Numbers shown in (italics) are "Eisemann" part numbers. (See Page 191)

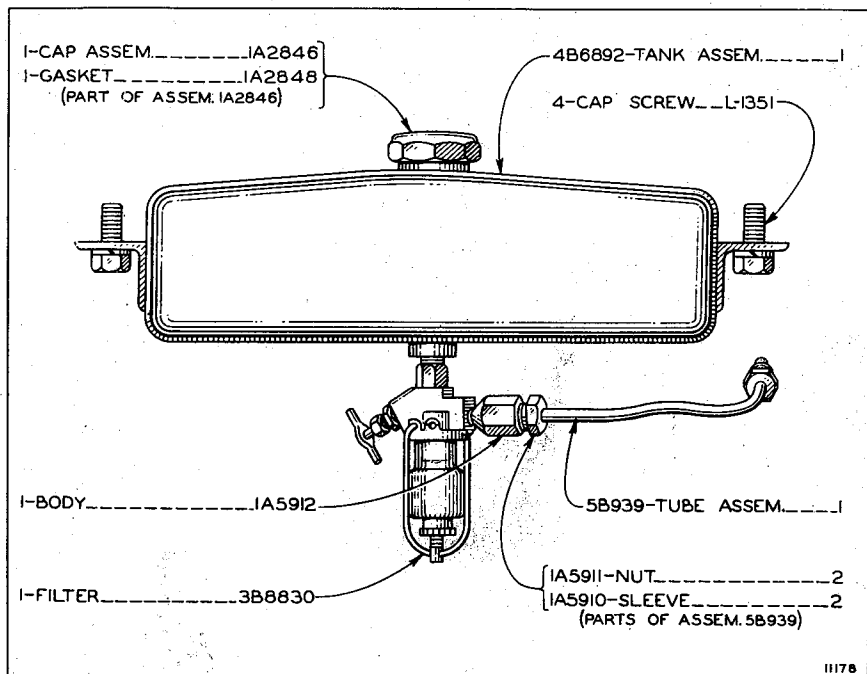


FUEL SYSTEM

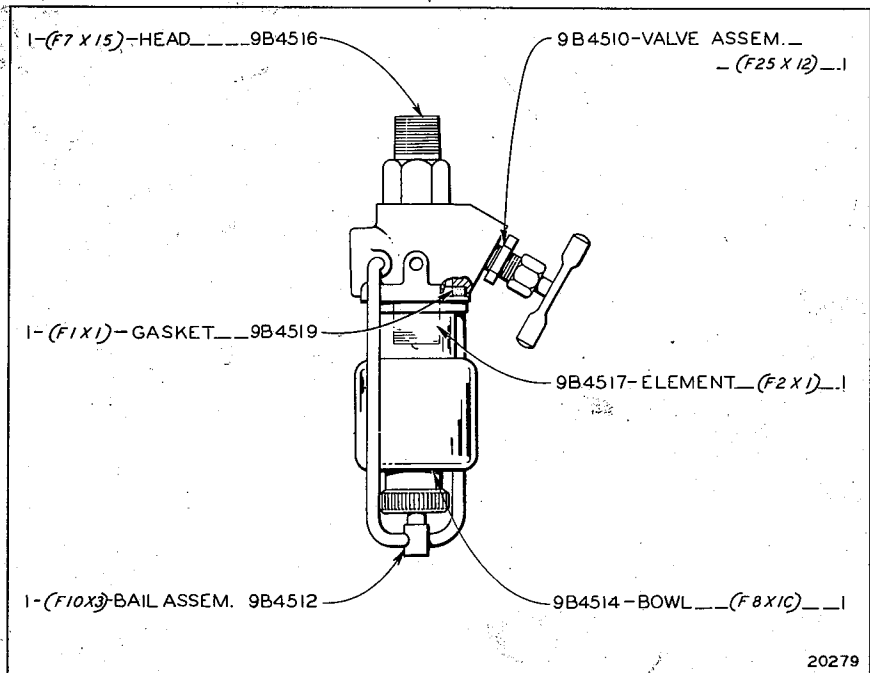


3B8830 FUEL FILTER

Numbers shown in (italics) are "Zenith" part numbers. (See Page 191)

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

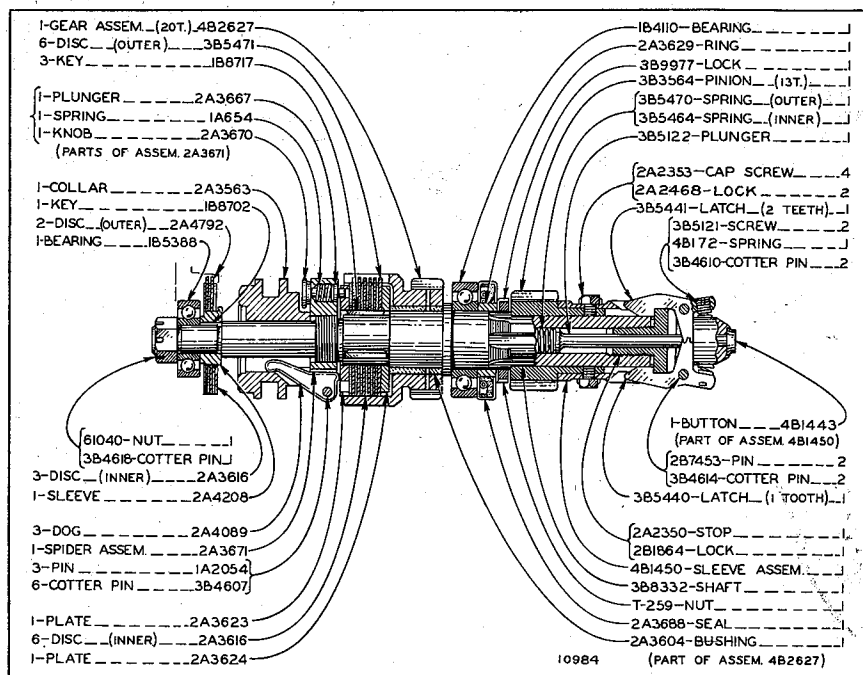


CLUTCH AND STARTER PINION
 Serial No. 5J1 to 5J1093 Inclusive

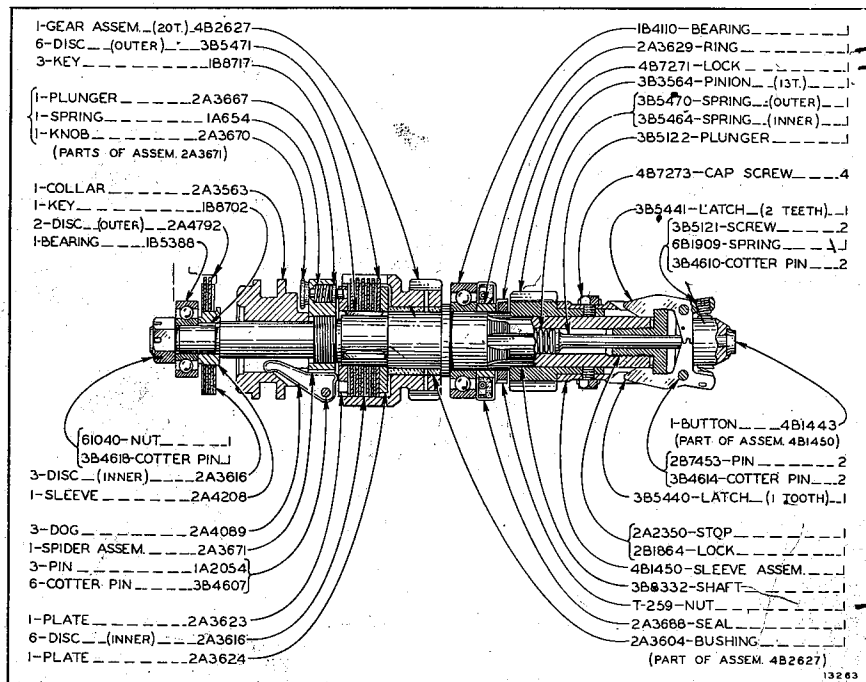


CLUTCH AND STARTER PINION
 Effective with Serial No. 5J1094


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

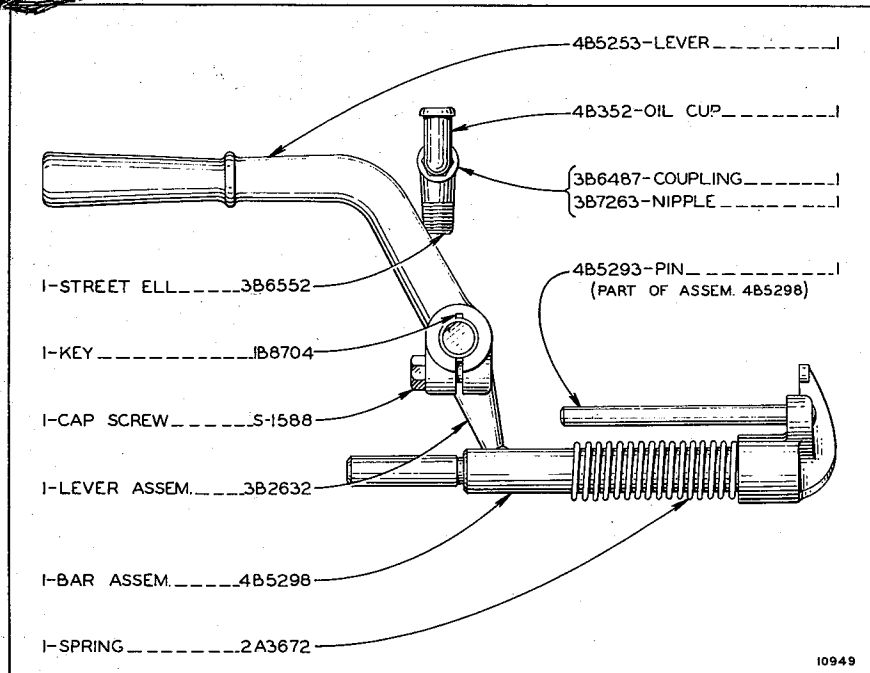

STARTER PINION CONTROL

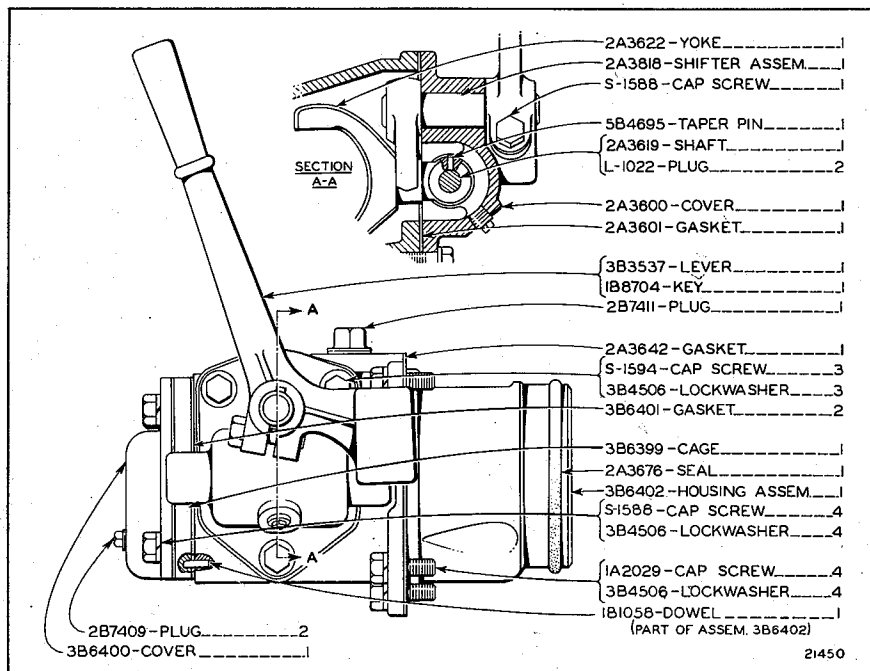


CLUTCH HOUSING AND CONTROL

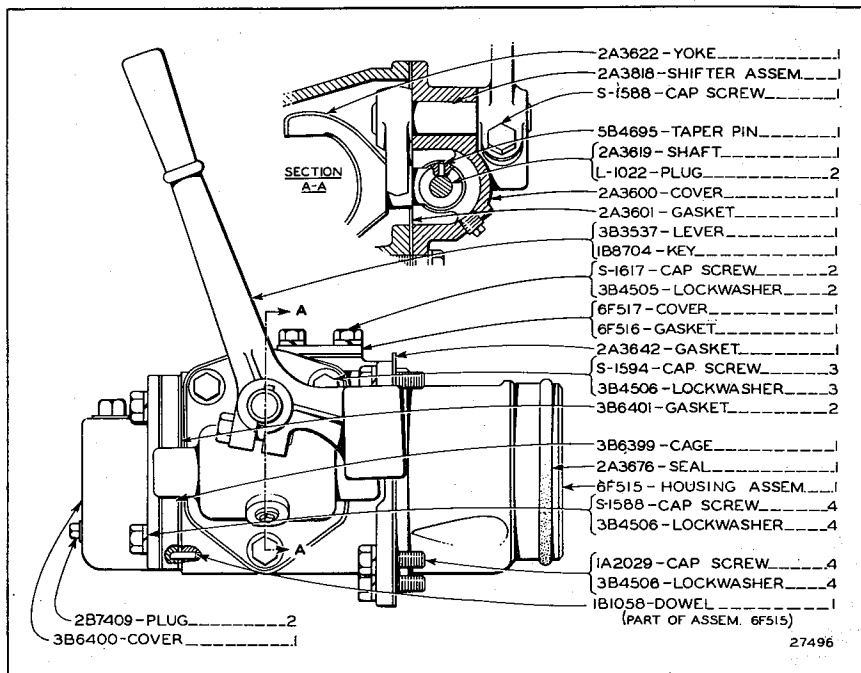


CLUTCH HOUSING AND CONTROL—Field Replacement


3B9178
 3B9235
 8T
 7T
 6U
 9S
 9K

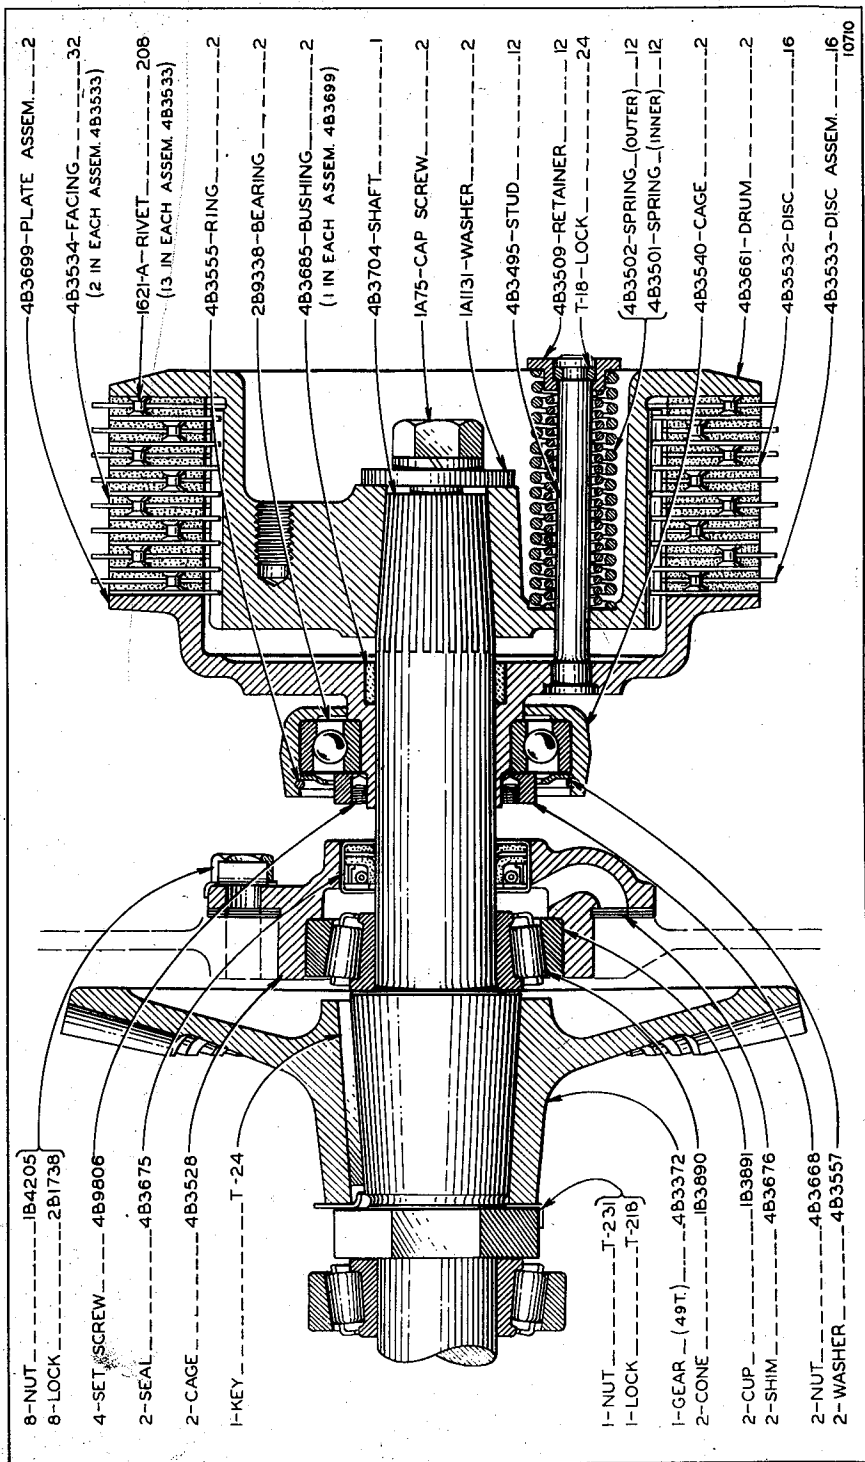

STEERING CLUTCH
Serial No. 5J1 to 5J527 Inclusive

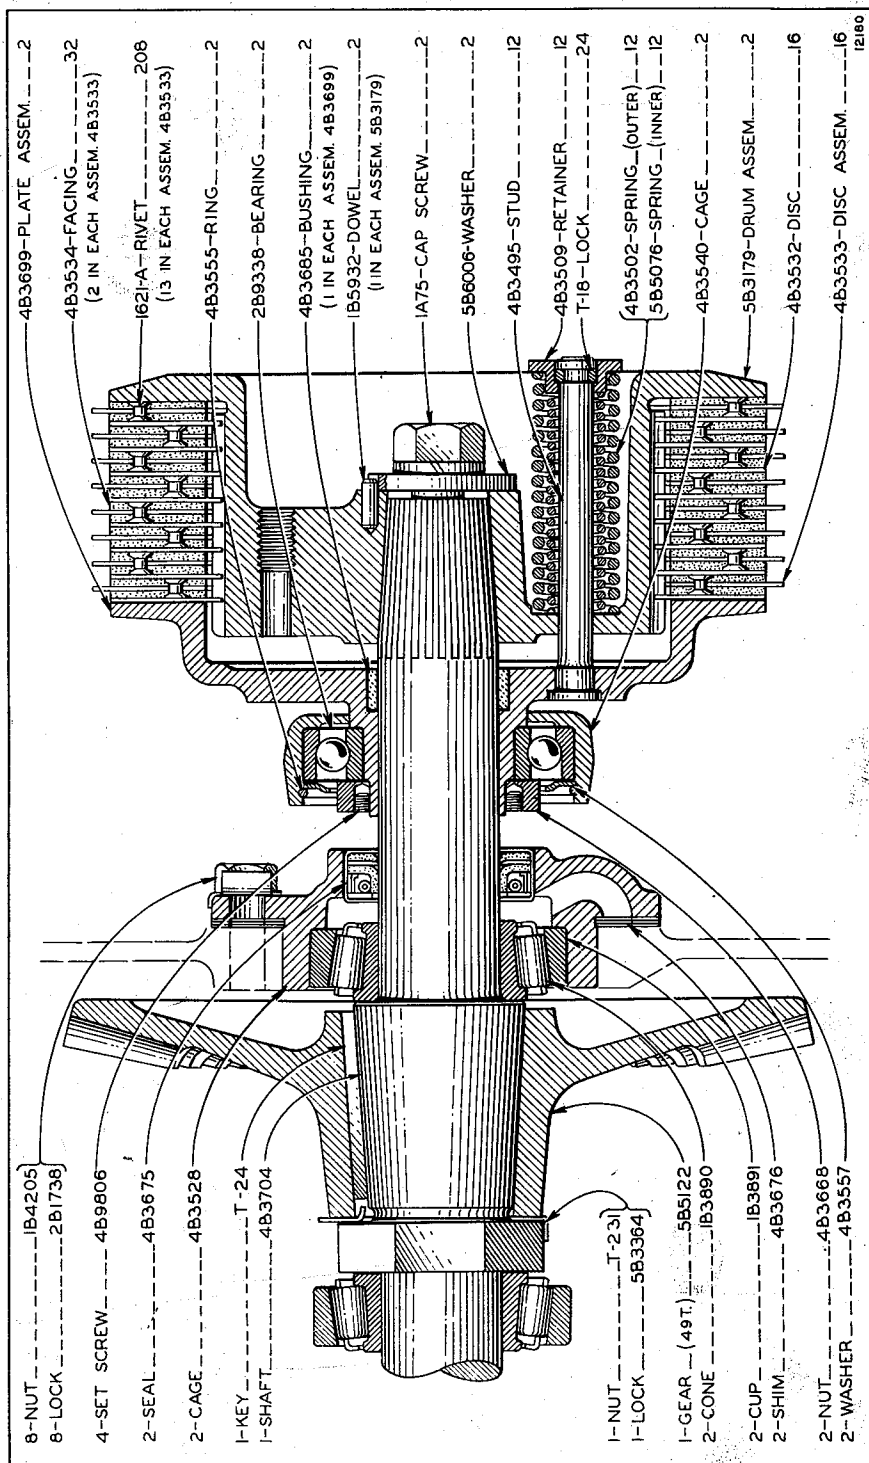

STEERING CLUTCH
Effective with Serial No. 5J528

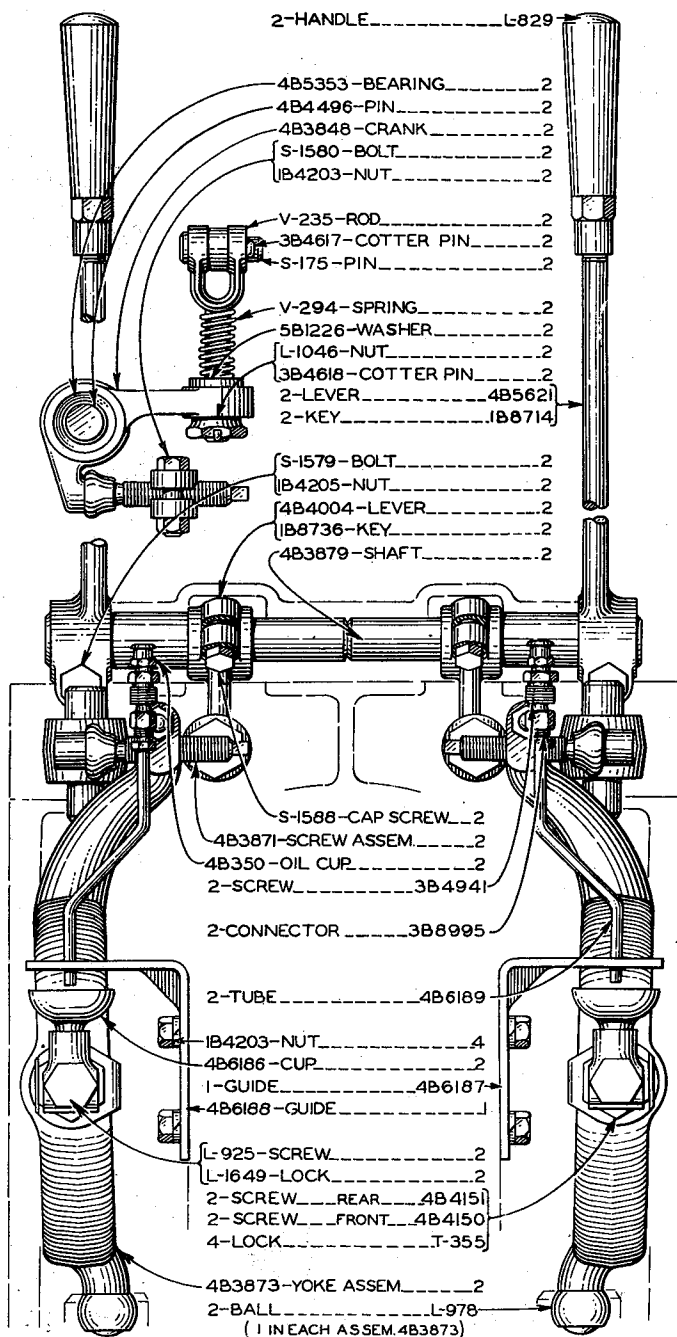


11060

STEERING CLUTCH CONTROL

Serial No. 5J1 to 5J676 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS.

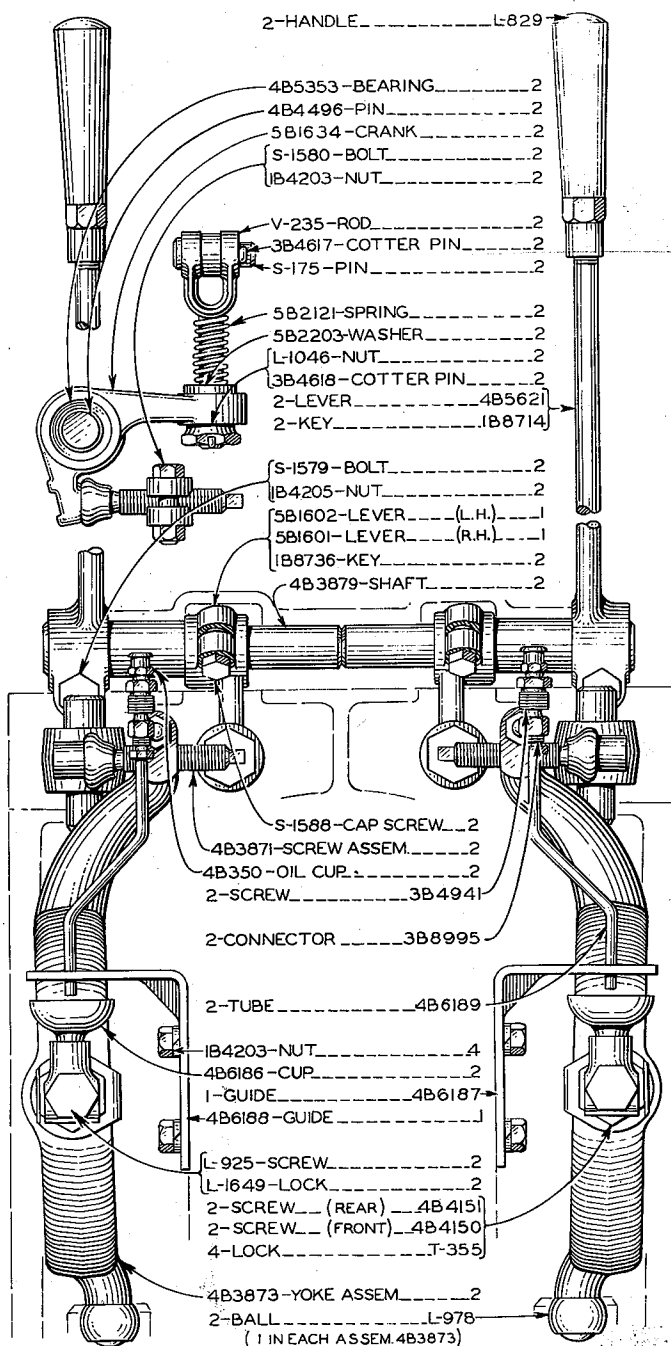


11962

STEERING CLUTCH CONTROL


Serial No. 5J677 to 5J1178 Inclusive.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

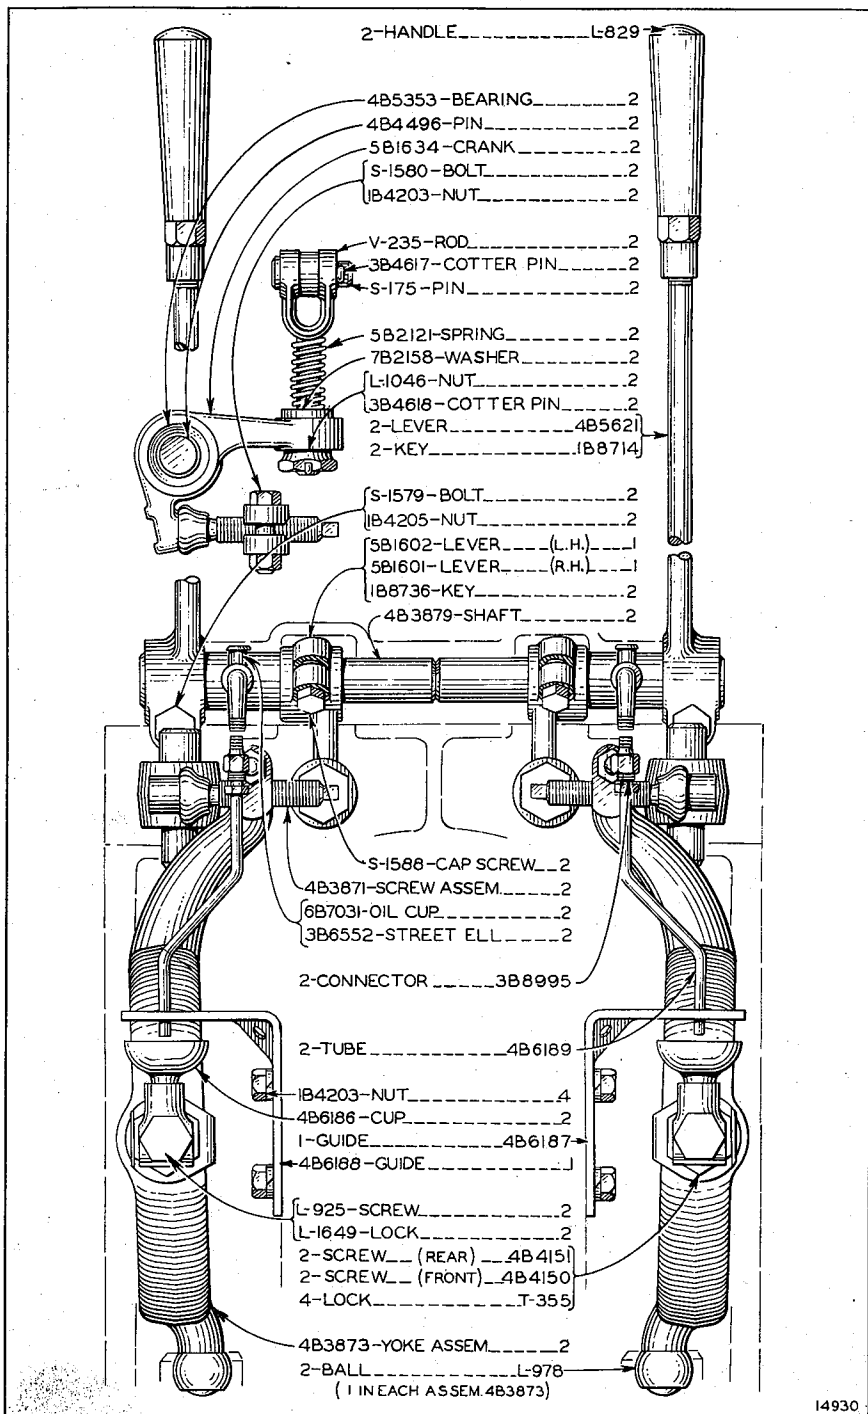

14930

STEERING CLUTCH CONTROL
Effective with Serial No. 5J1179

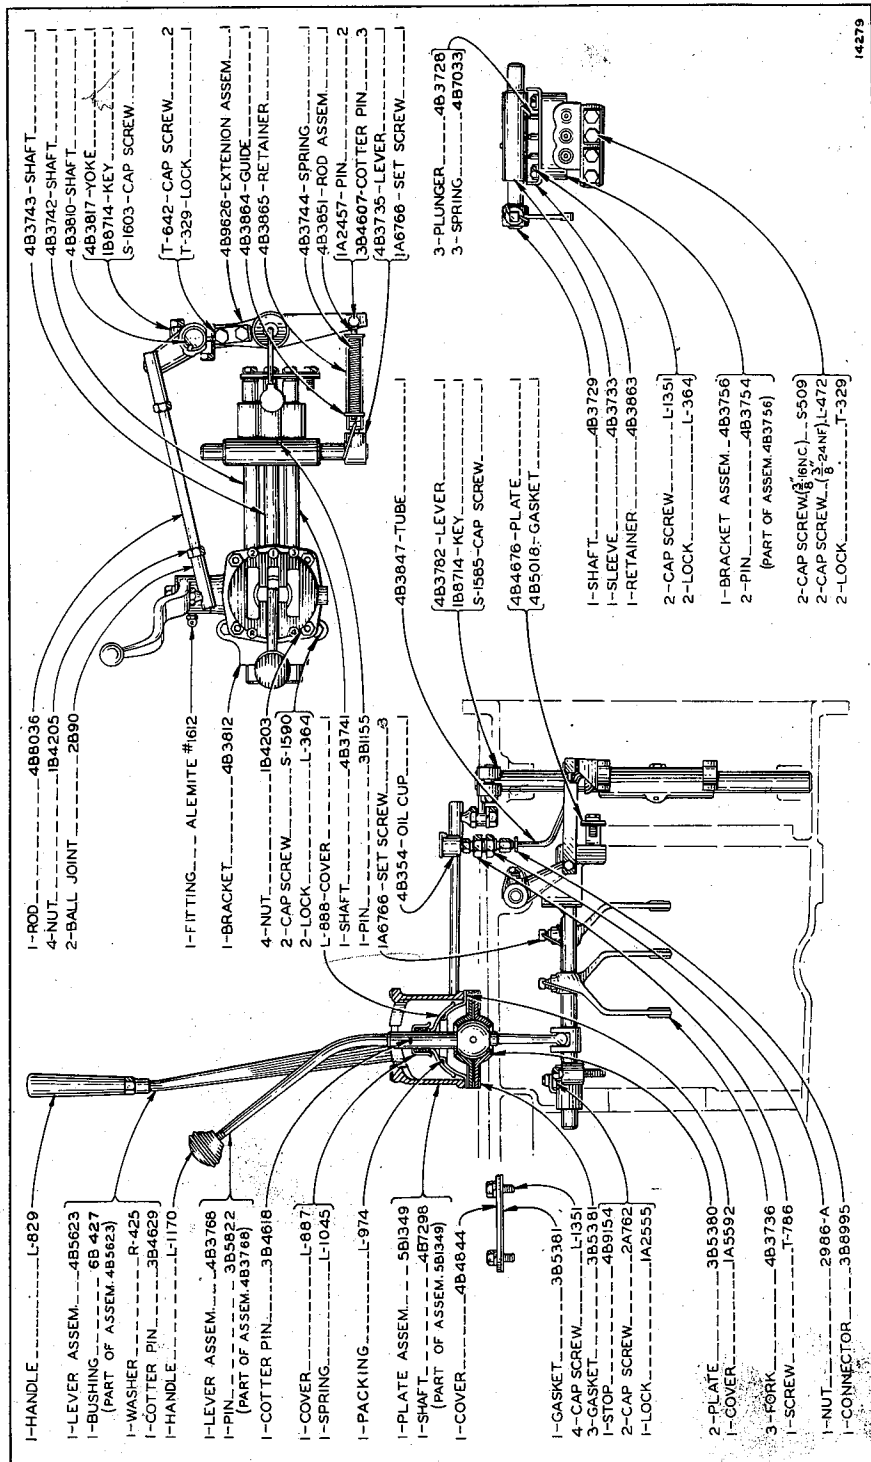


14279

GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL

Serial No. 5J1 to 5J1602 Inclusive


Refer also to Page 143 for special parts

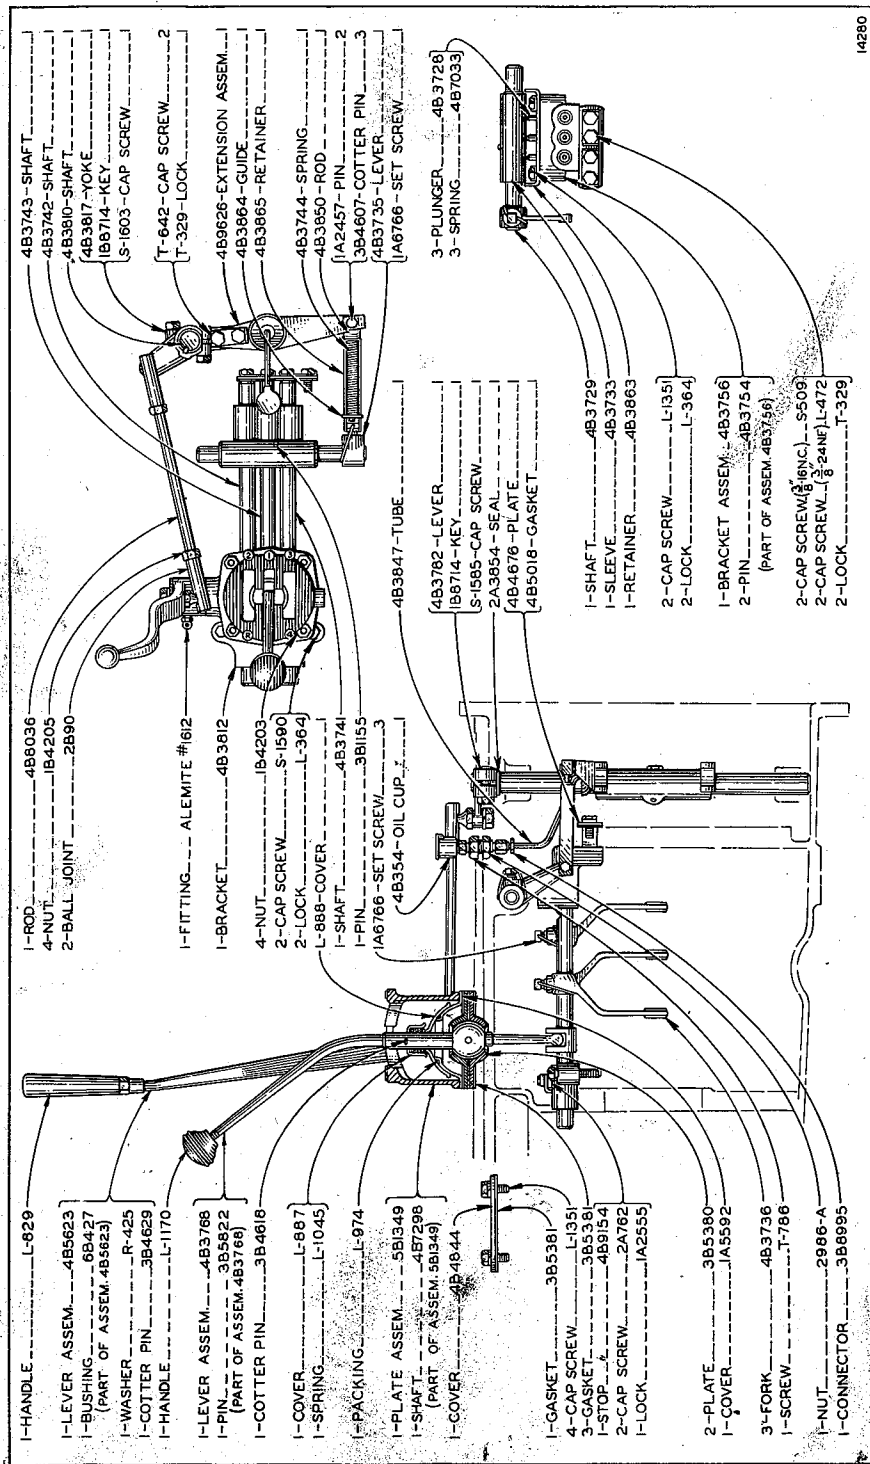

14280


GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL

Effective with Serial No. 511A03

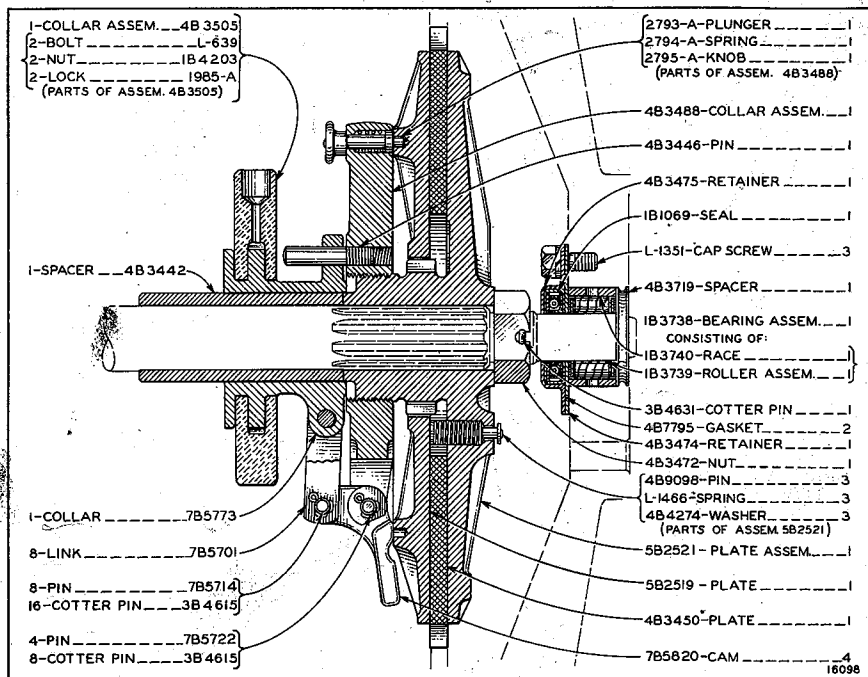


FLYWHEEL CLUTCH

Refer also to Page 179 for special parts

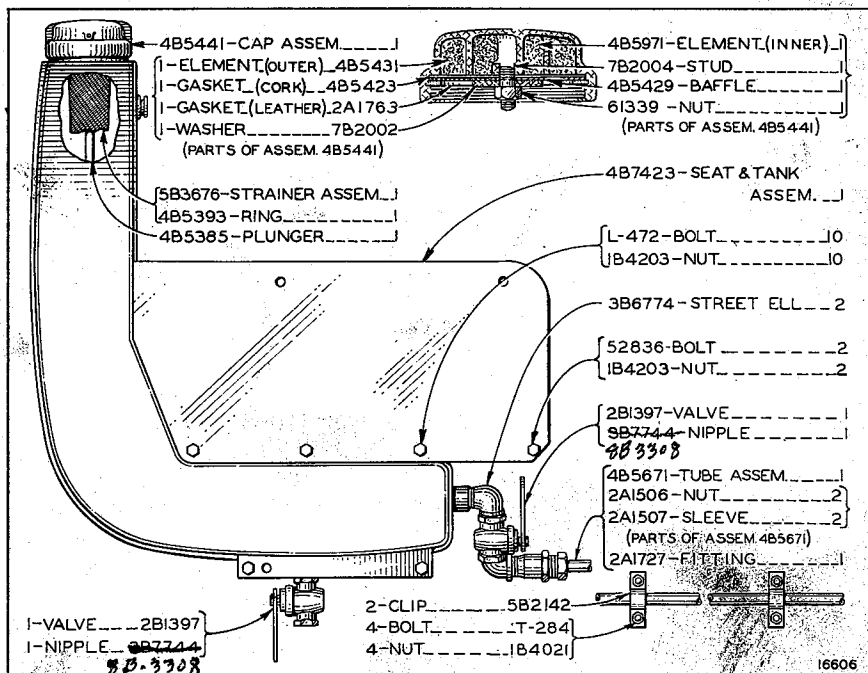

FUEL SYSTEM


Refer also to Pages 141, 147 and 148 for special parts

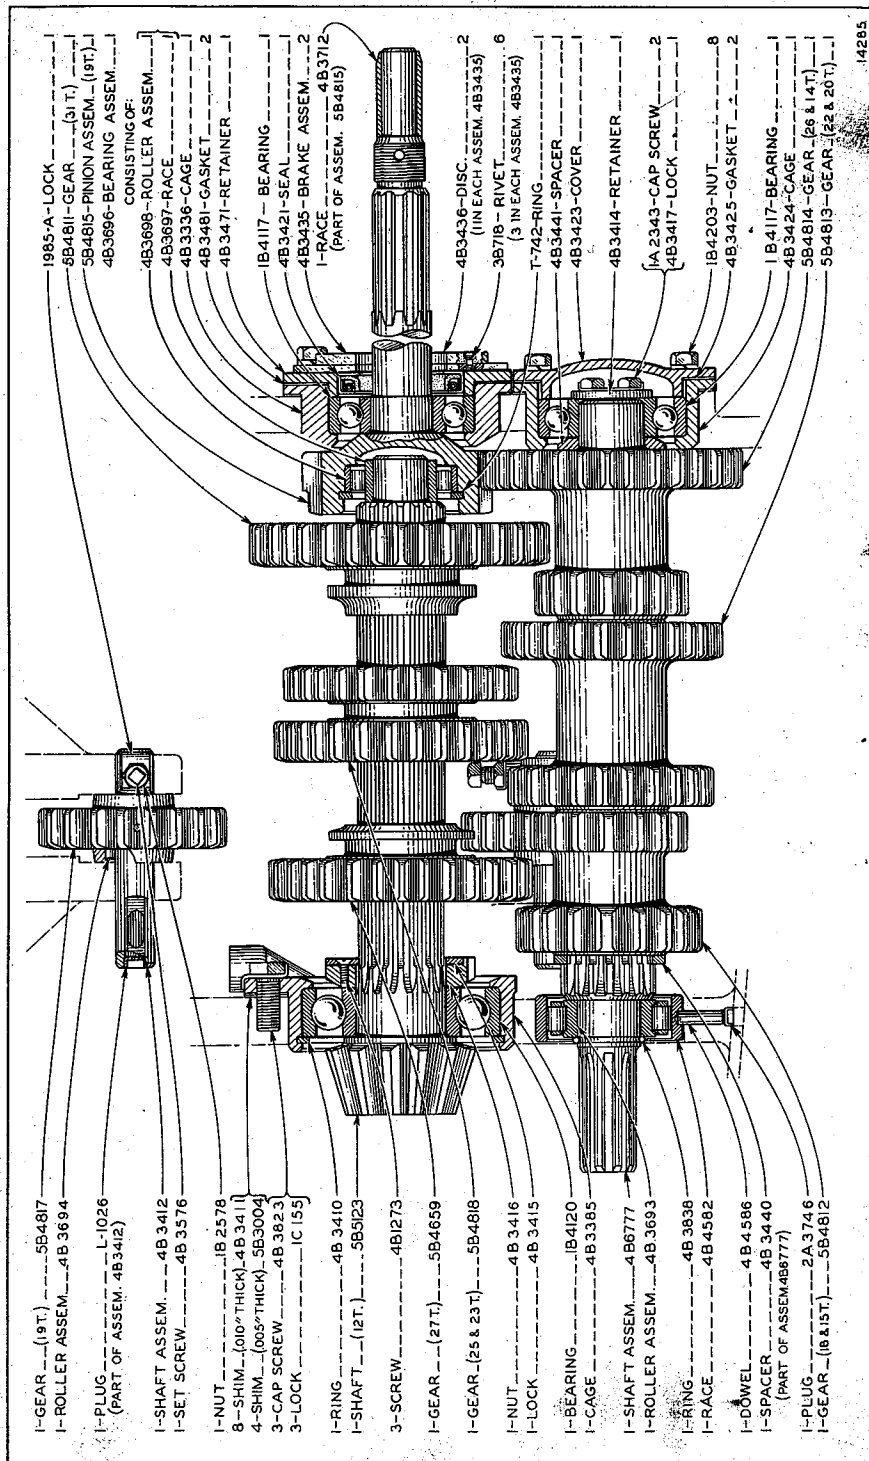


TRANSMISSION

Refer also to Draw 154 for special parts.


14285

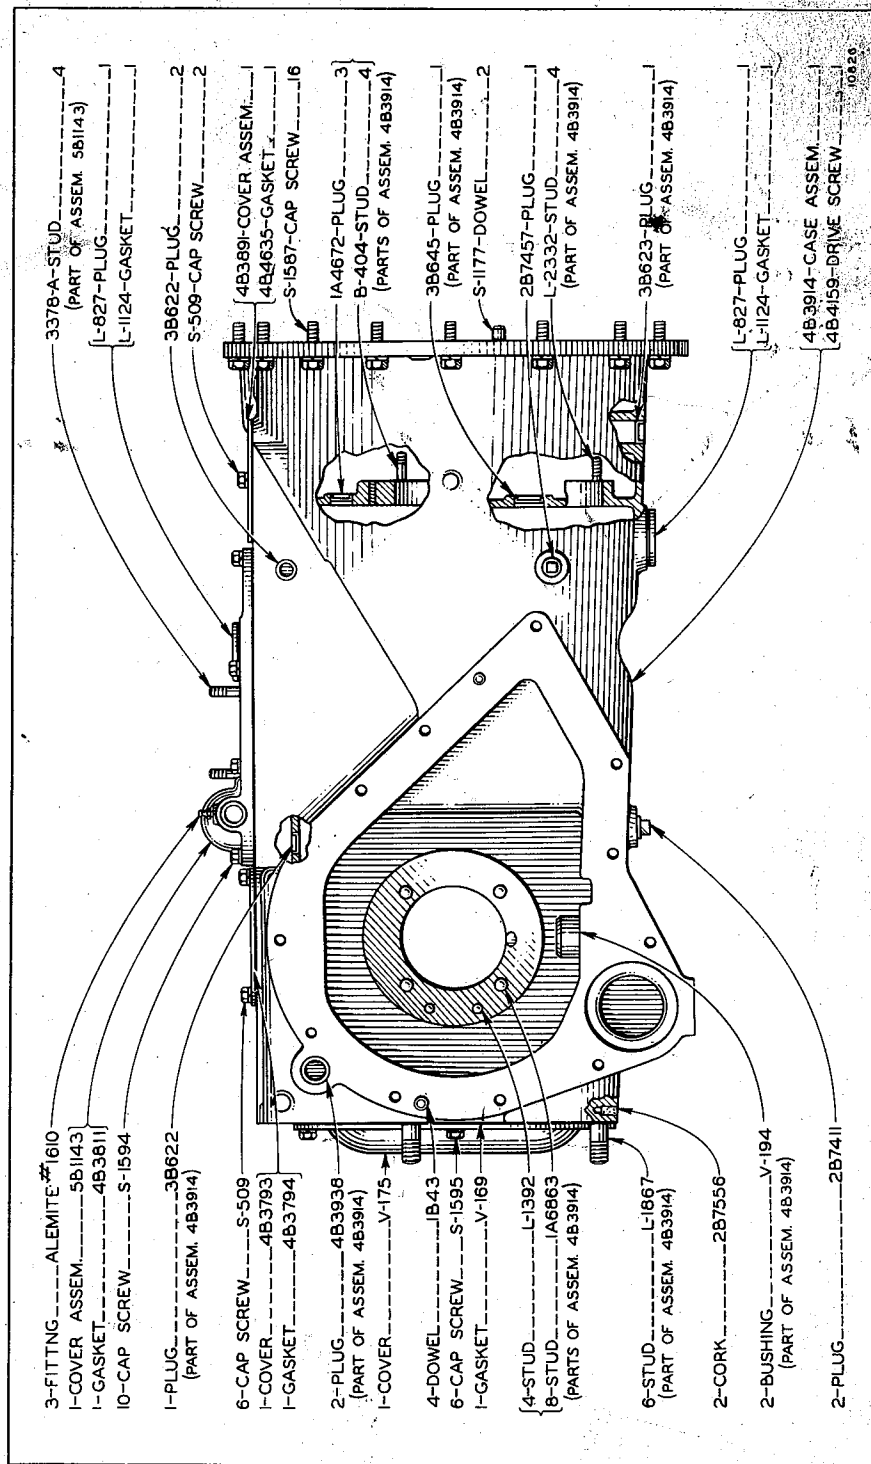


TRANSMISSION CASE AND COVERS
 Serial No. 5J1 to 5J1 178 Inclusive

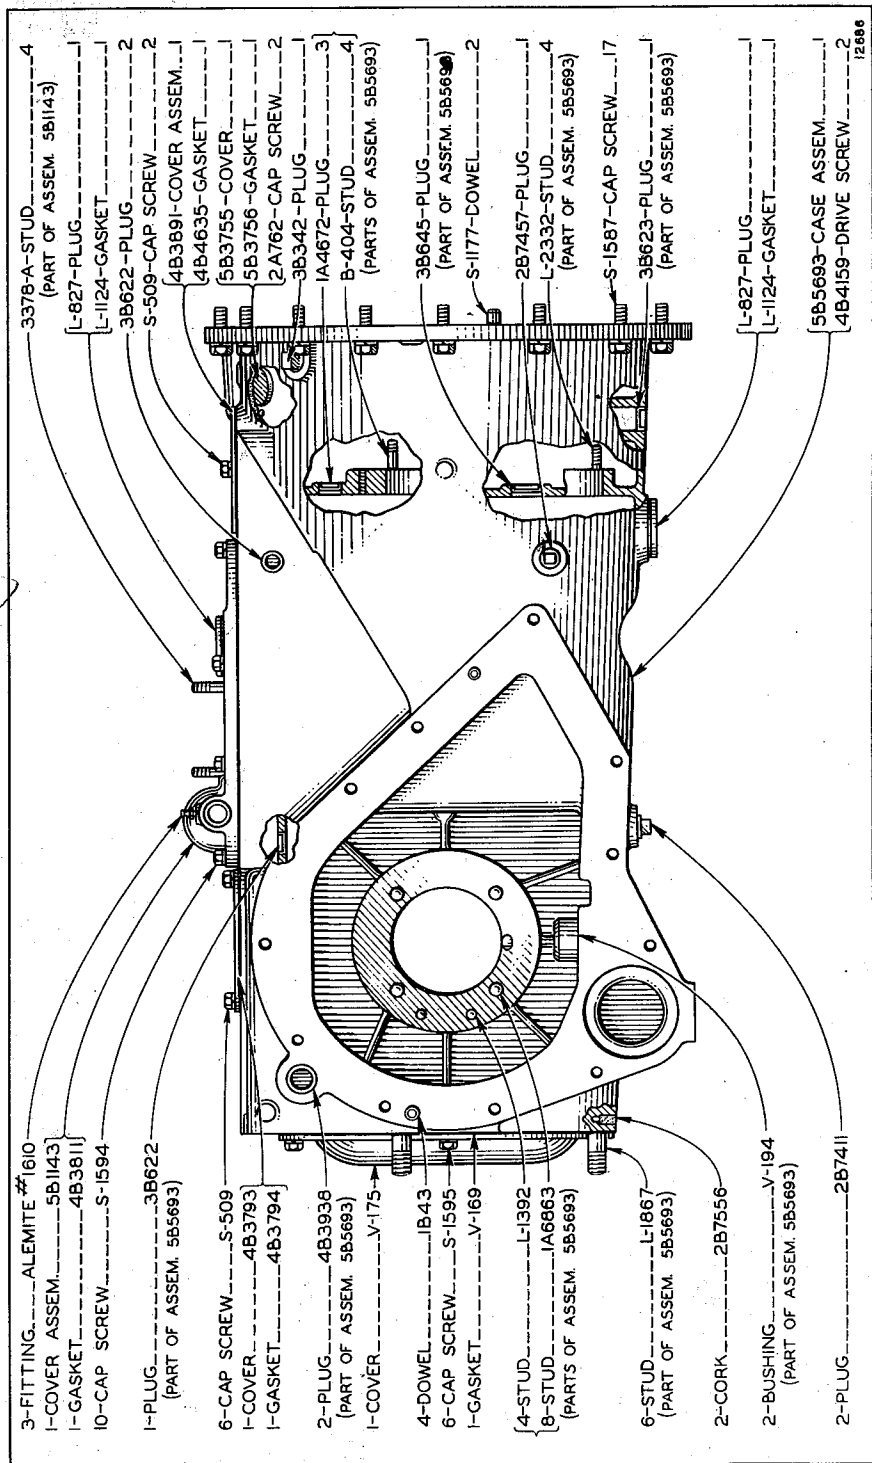


TRANSMISSION CASE AND COVERS

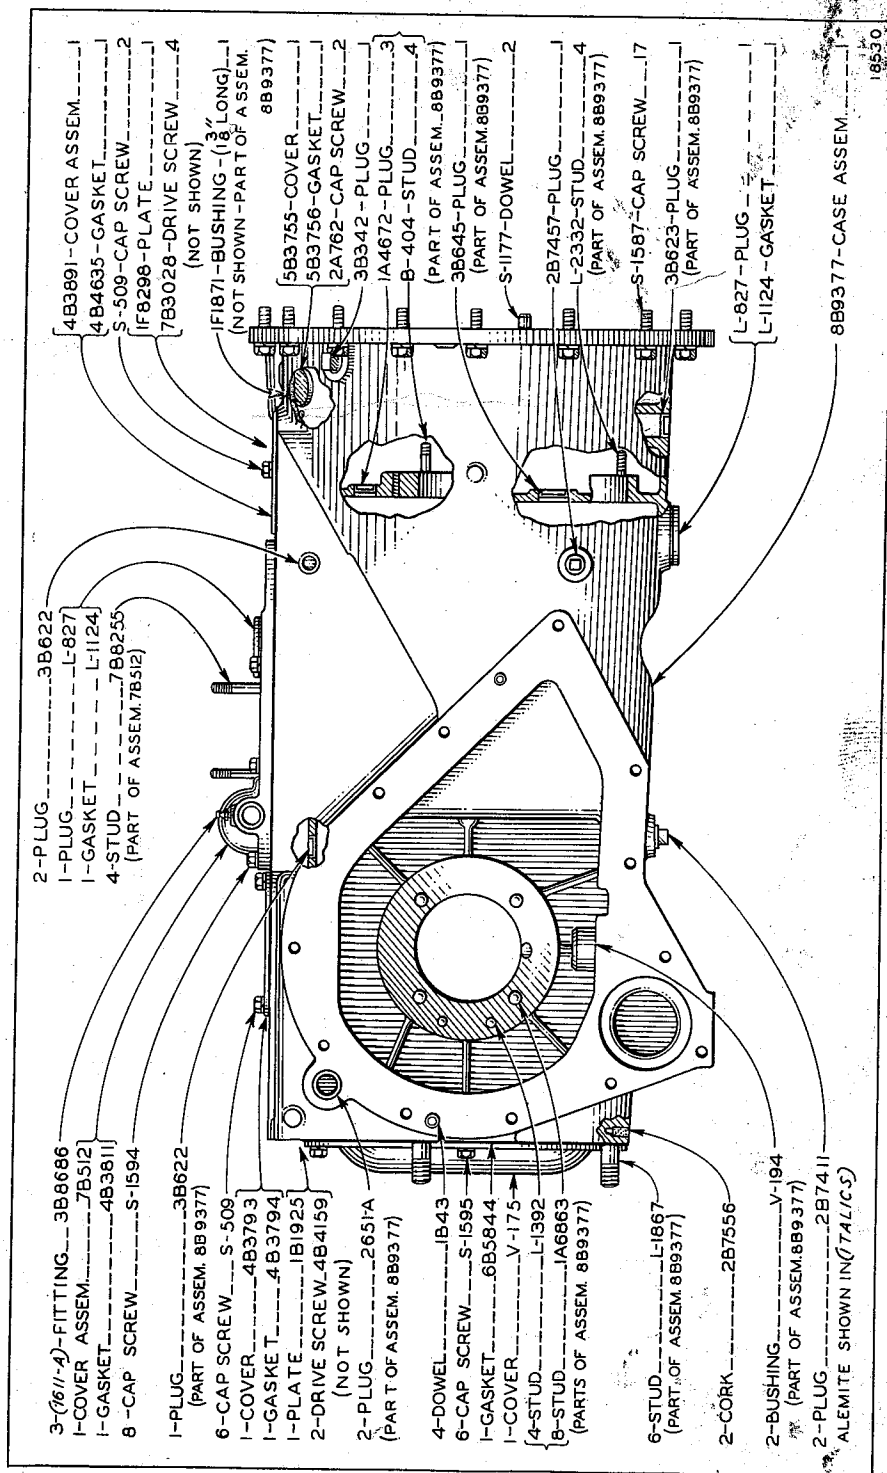


TRANSMISSION CASE AND COVERS
Effective with Serial No. 5J1603

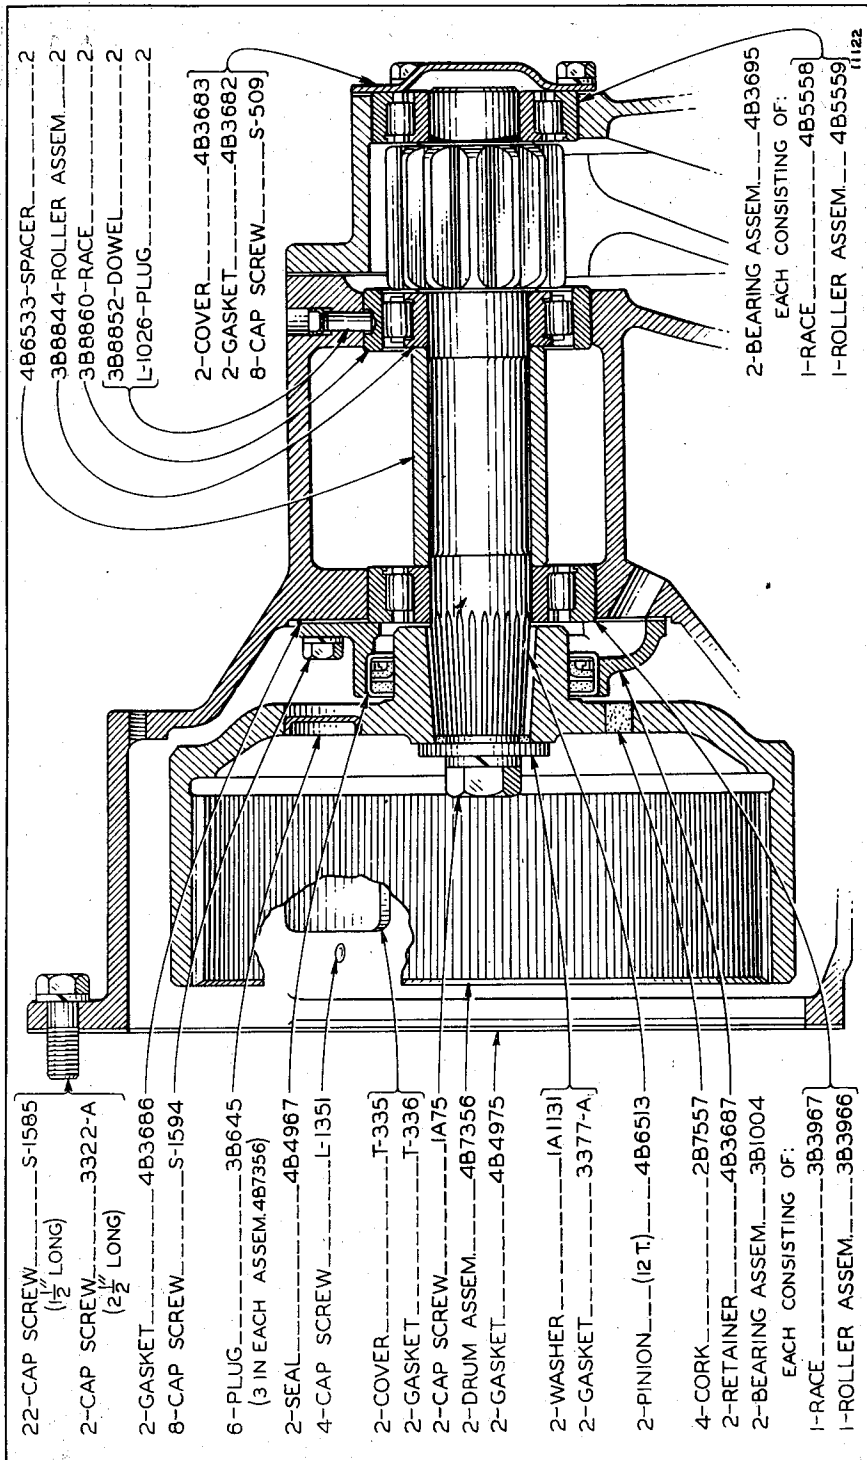

FINAL DRIVE

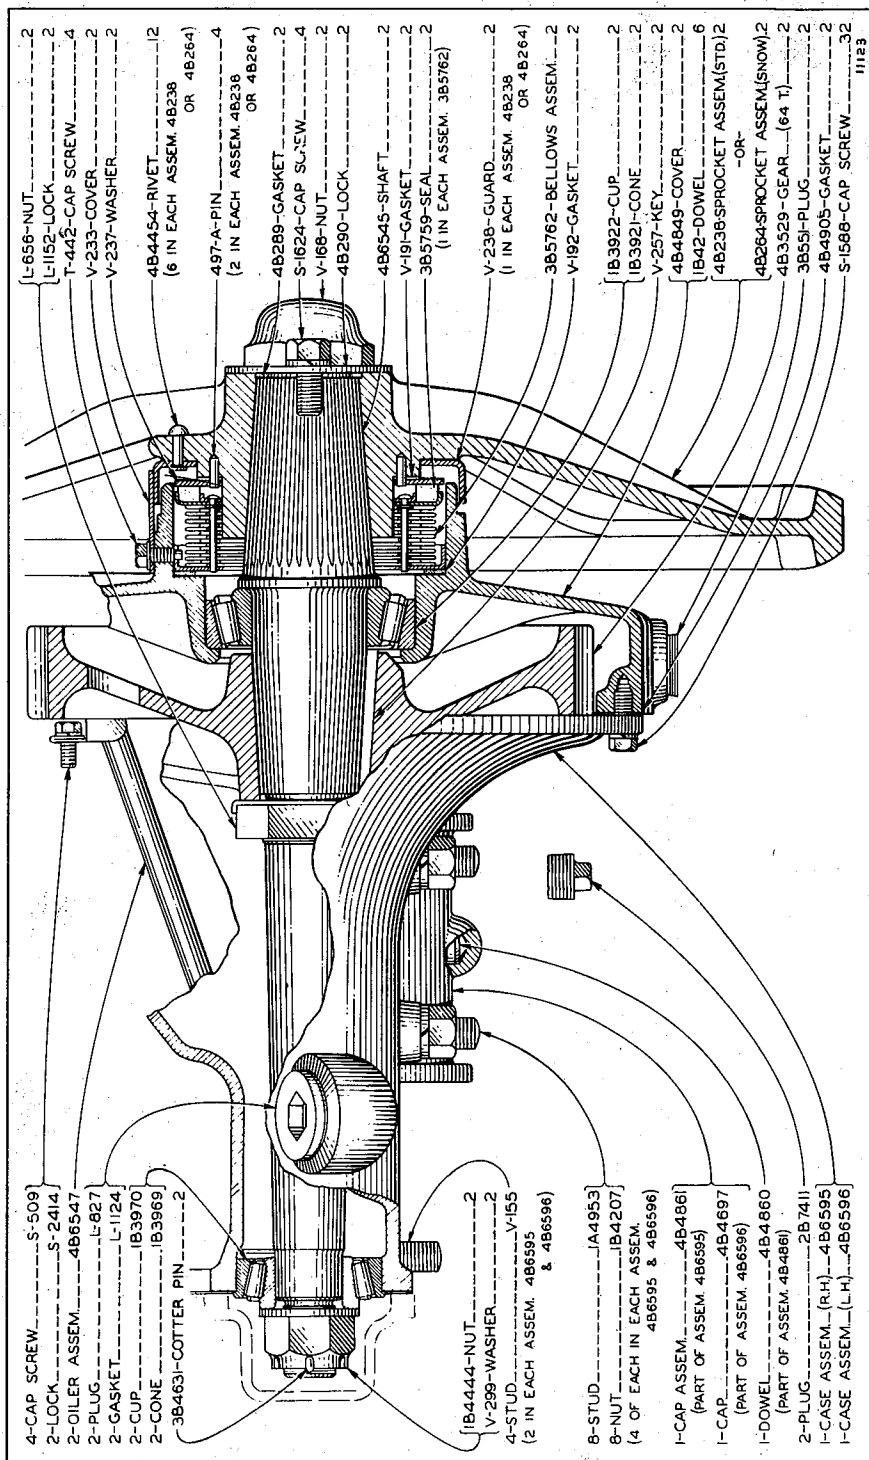


FINAL DRIVE
Serial No. 5J1 to 5J57 Inclusive

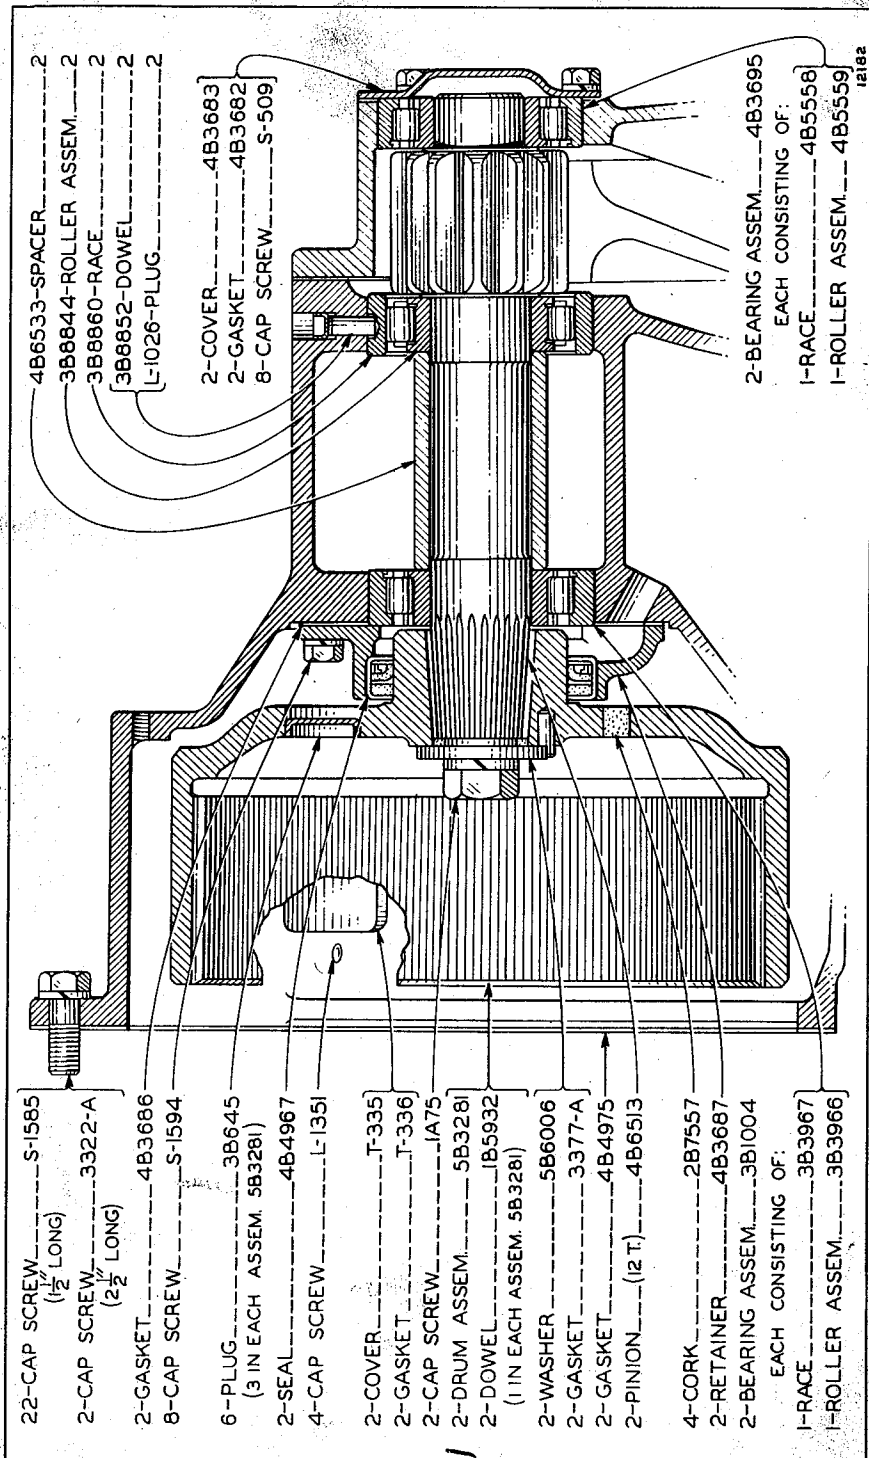


FINAL DRIVE
Effective with Serial No. 5J528

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

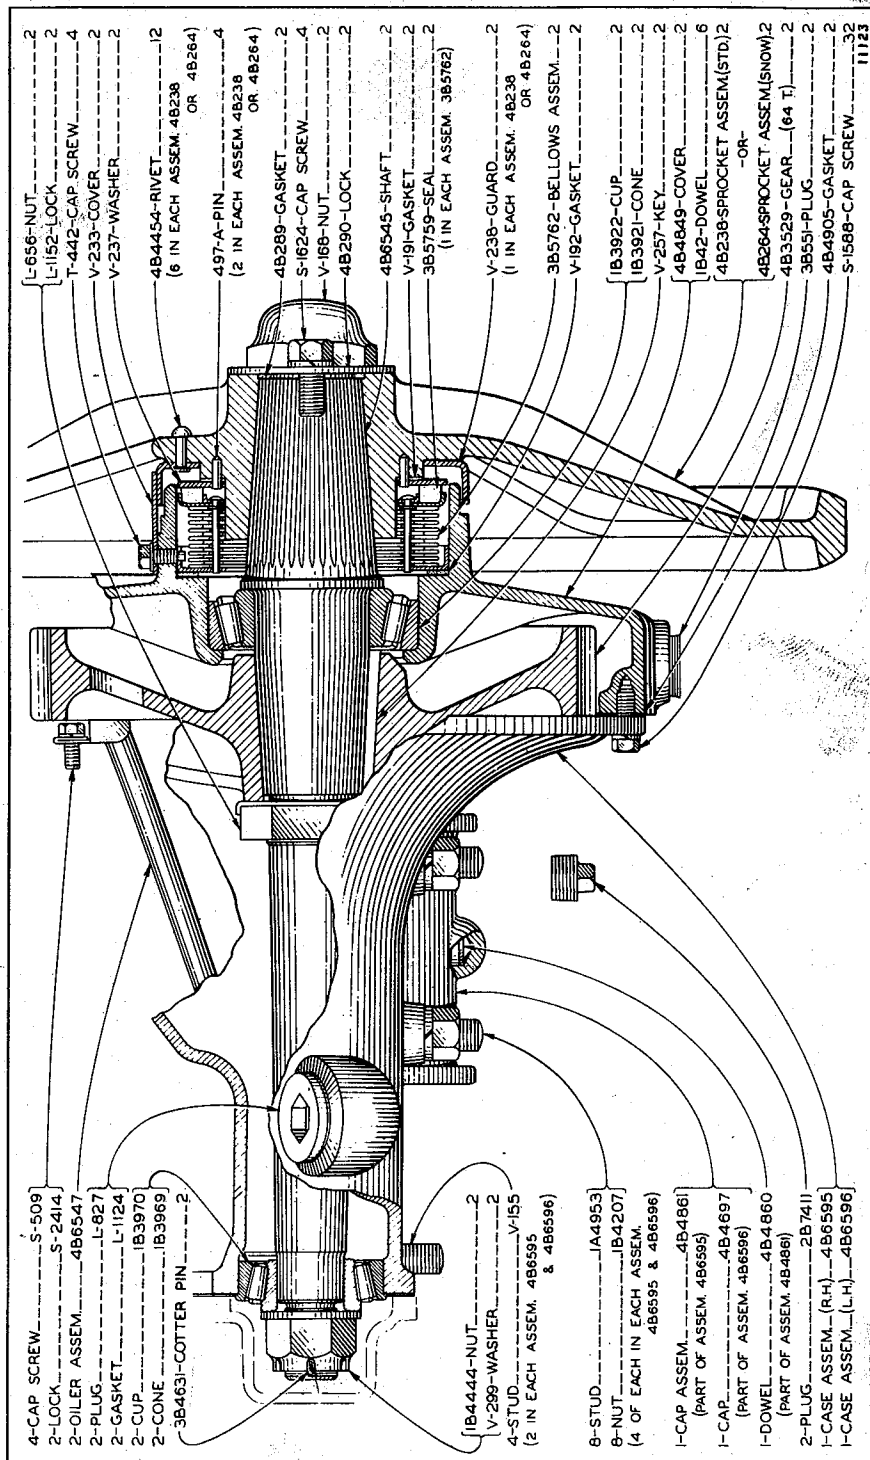

FINAL DRIVE
 Effective with Serial No. 5J528

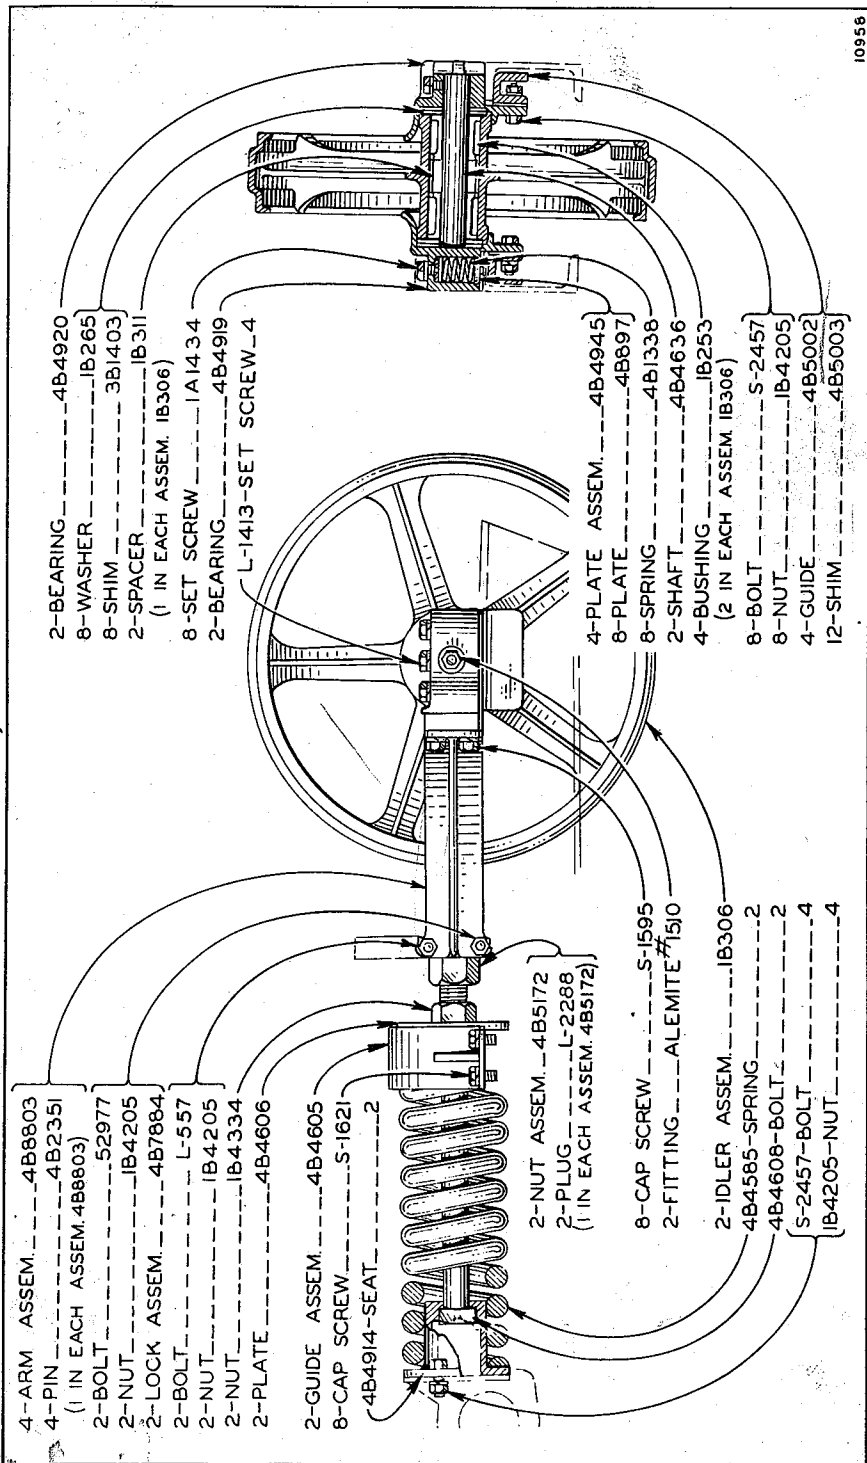


10958

FRONT IDLER

Serial No. 5J1 to 5J451 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

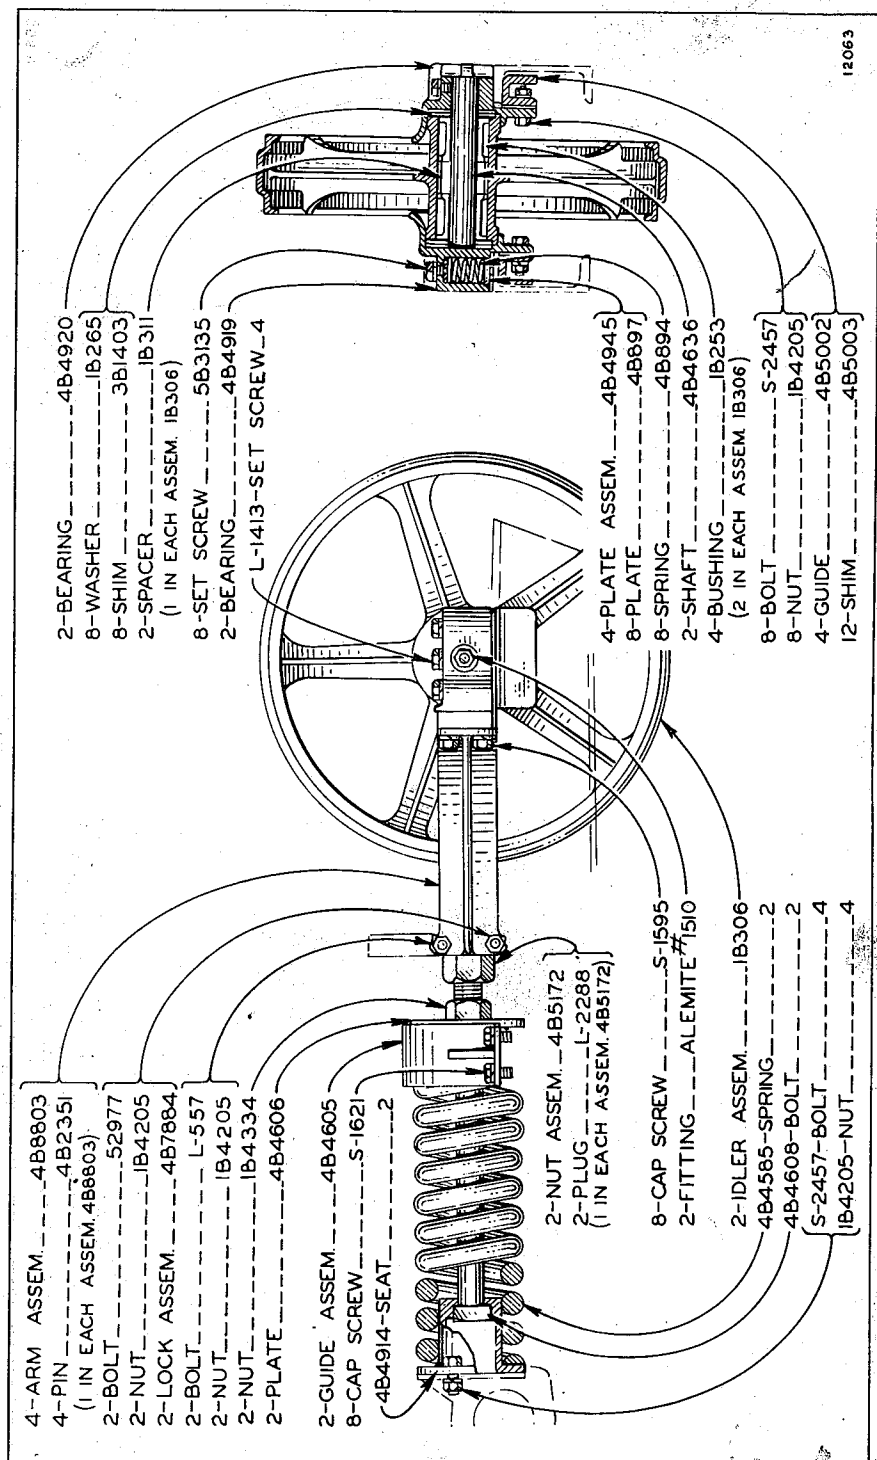

12063

FRONT IDLER


Serial No. 5J452 to 5J1805 Inclusive
Refer also to Page 169 for special parts

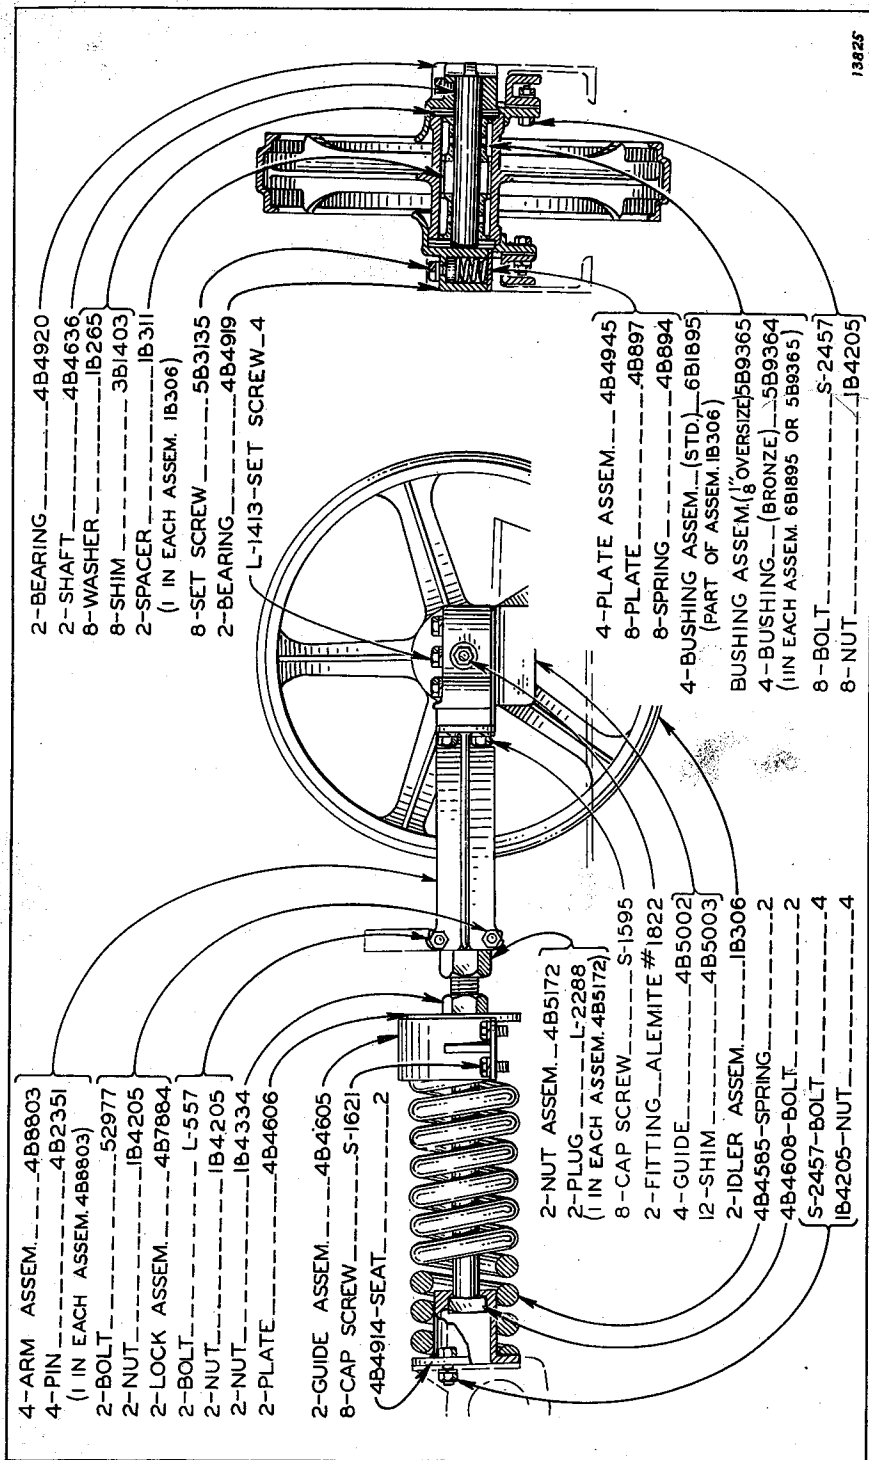

13825

FRONT IDLER

Serial No. 5J1806 to 5J1862 Inclusive

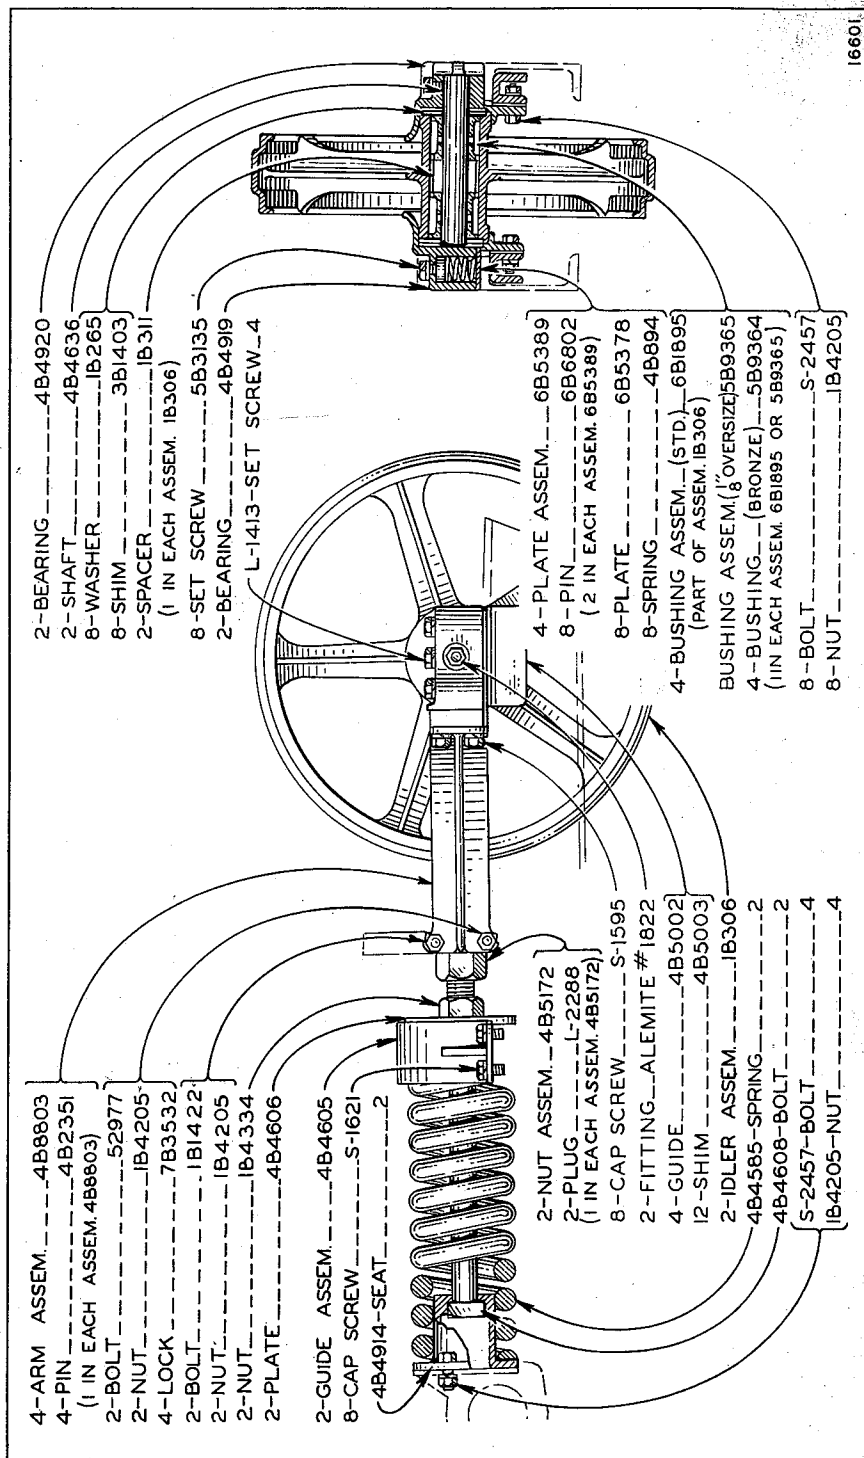


16601


FRONT IDLER

Effective with Serial No. 5J1863

Refer also to Page 169 for special parts

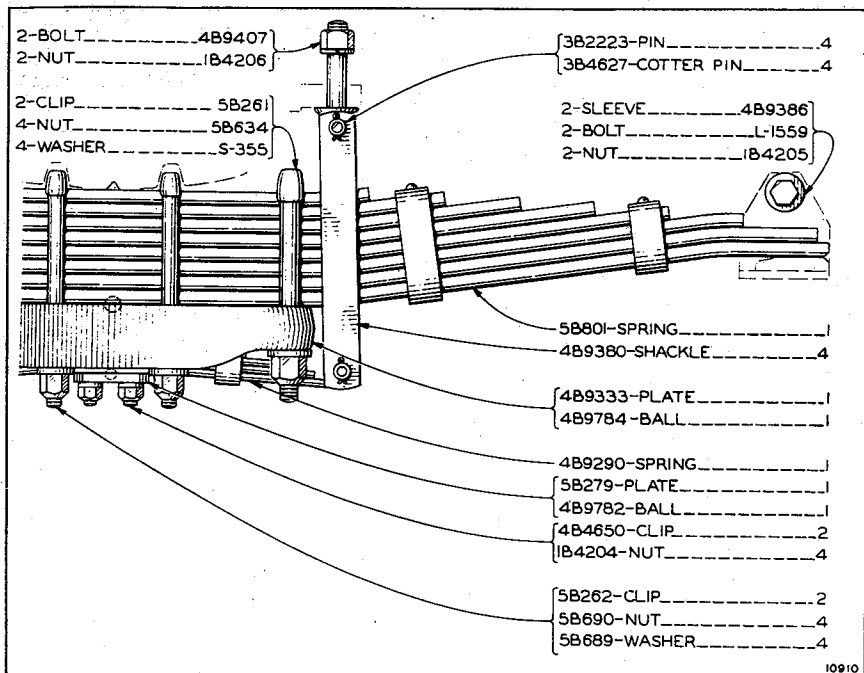
**EQUALIZER SPRING**

Serial No. 5J1 to 5J337 Inclusive

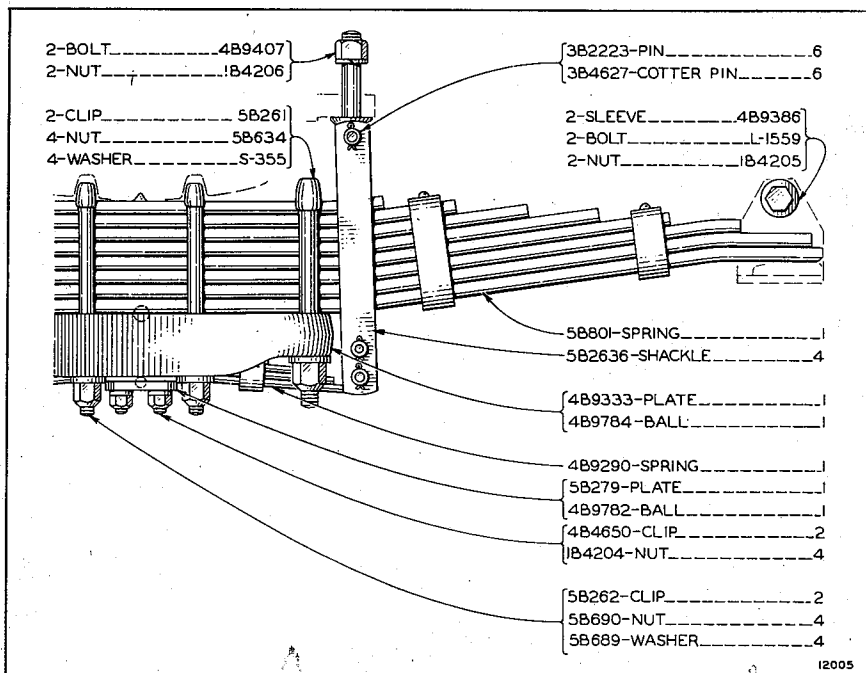
**EQUALIZER SPRING**

Effective with Serial No. 5J338

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

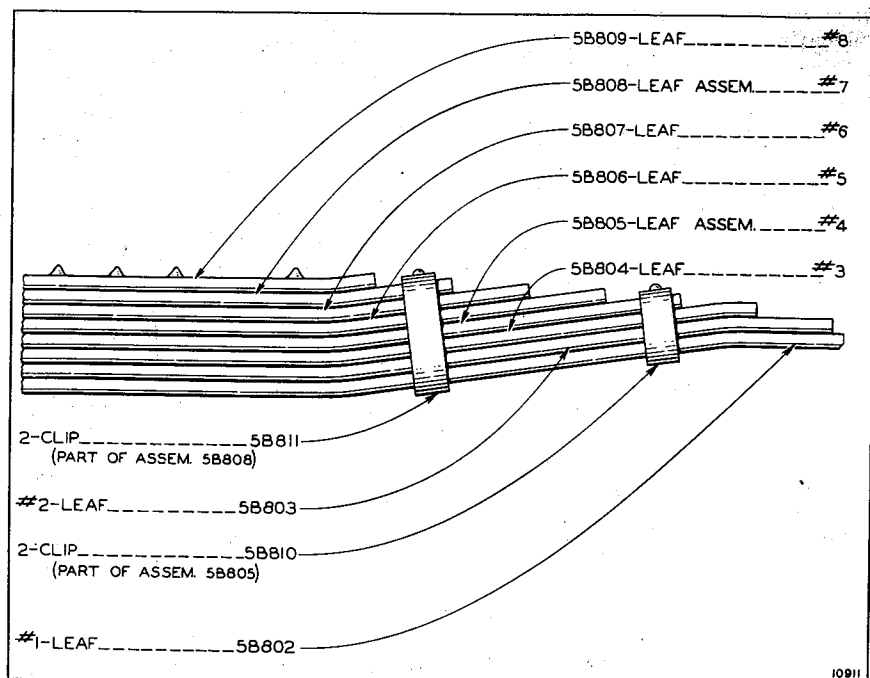


5B801 SPRING

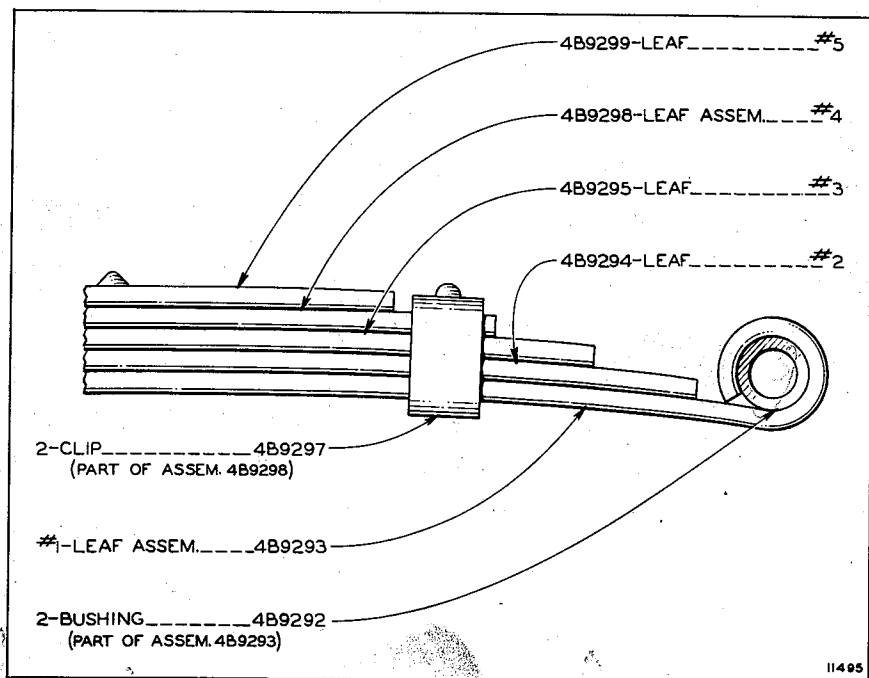


4B9290 SPRING

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

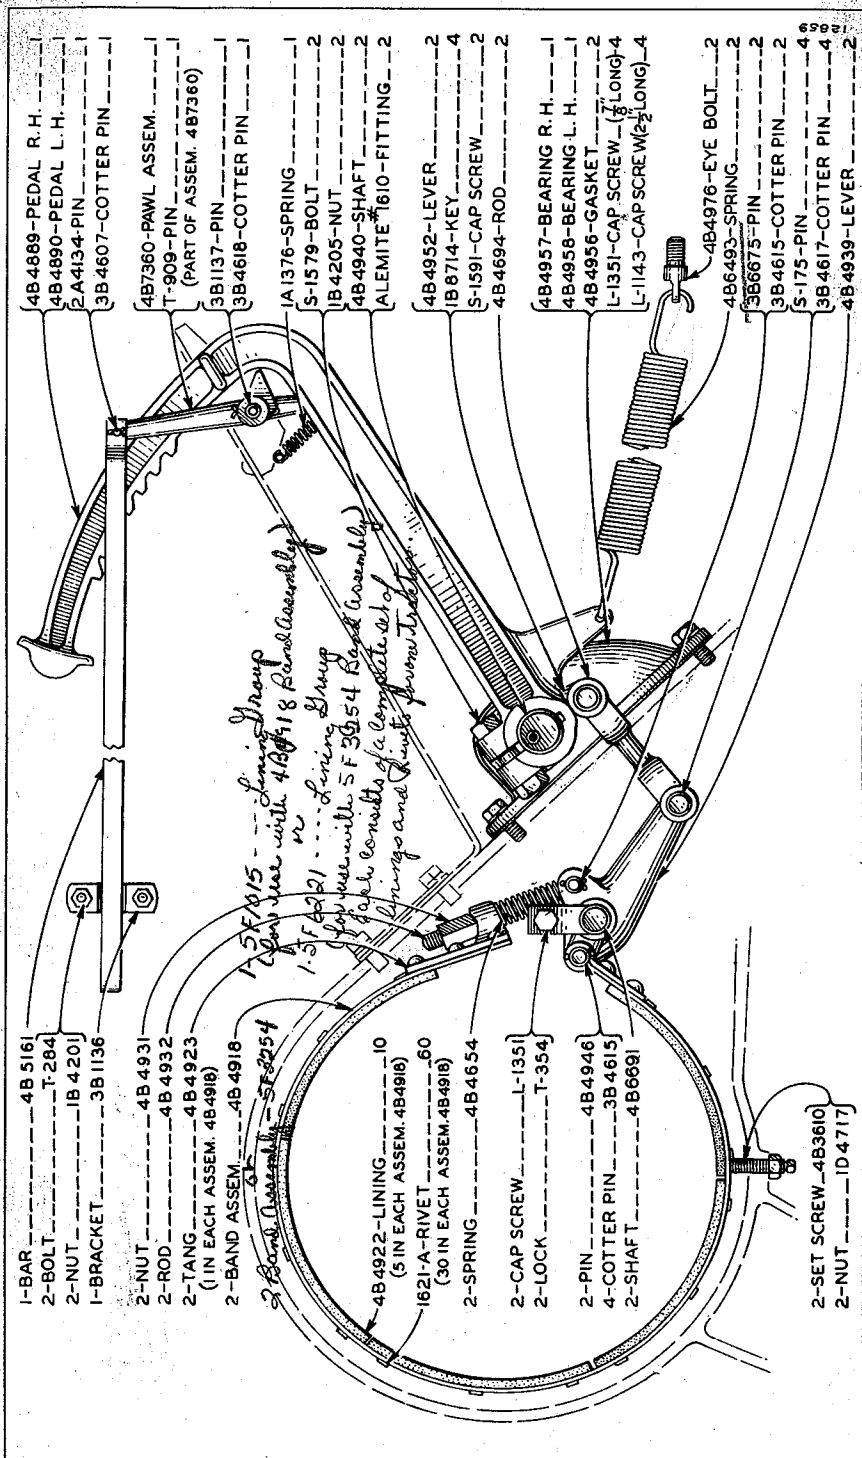


BRAKES

Refer also to Page 143 for special parts

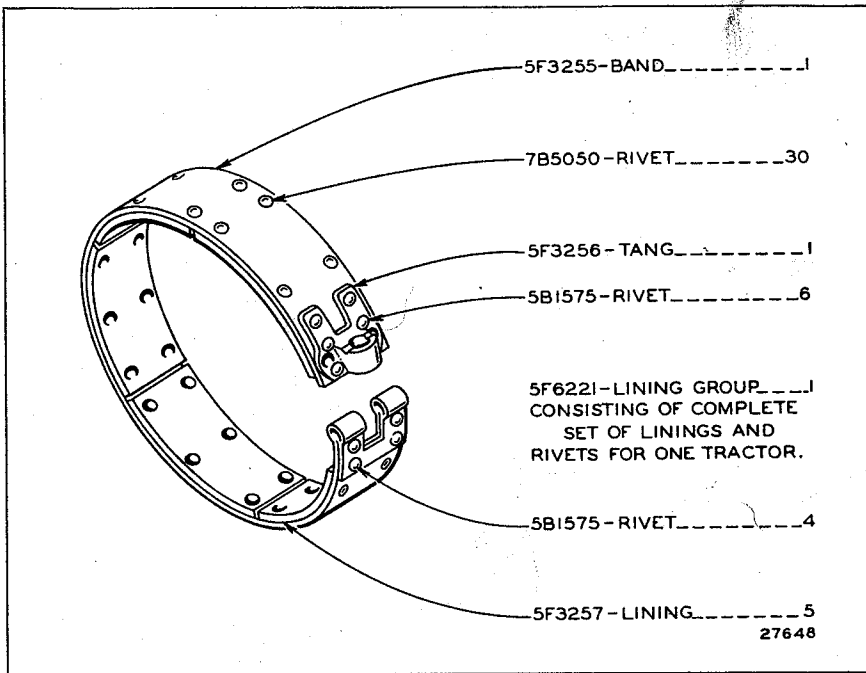


5F3254 BAND ASSEMBLY (Replaces 4B4918)

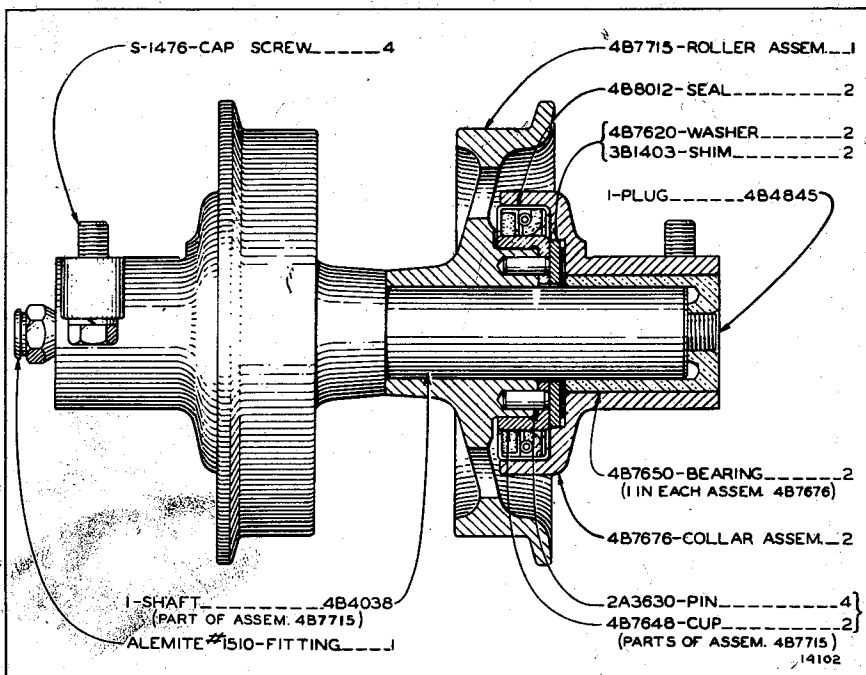


TRACK ROLLER—Single Flange (4 Groups Req'd.)

Serial No. 5J1 to 5J1614 Inclusive

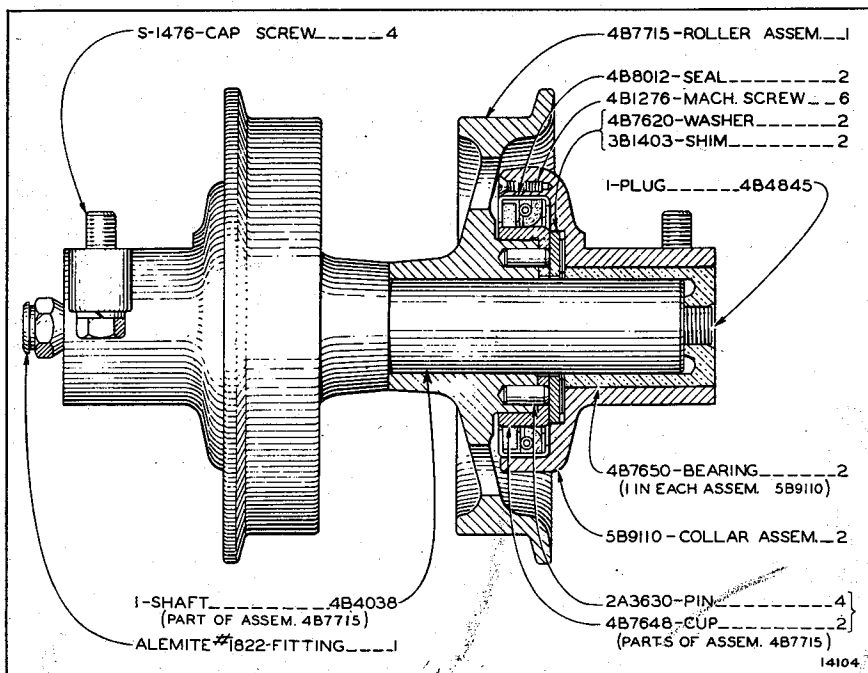


TRACK ROLLER—Single Flange (4 Groups Req'd.)


Effective with Serial No. 5J1615

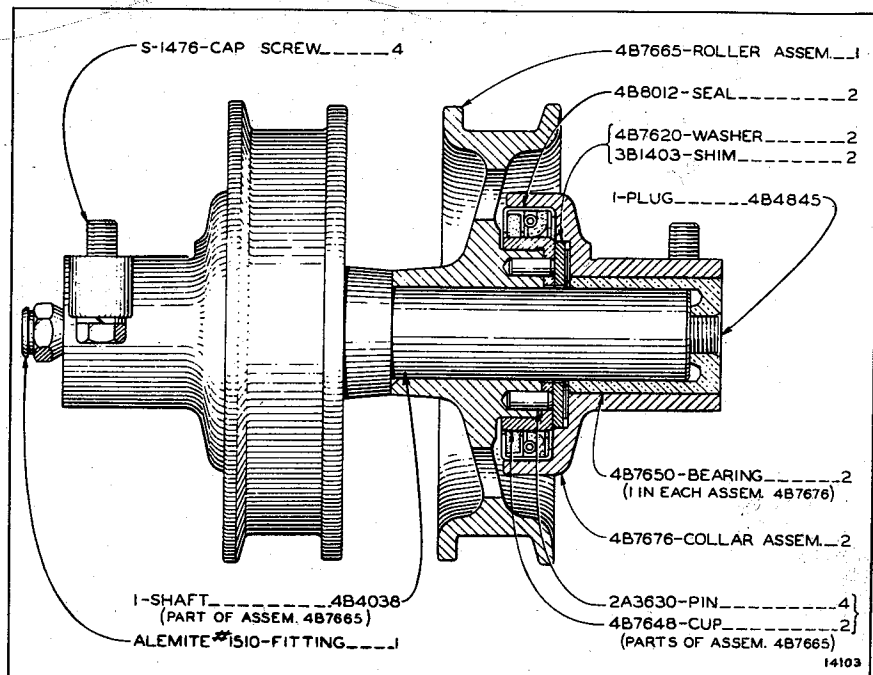

TRACK ROLLER—Double Flange (4 Groups Req'd.)
 Serial No. 5J1 to 5J1614 Inclusive

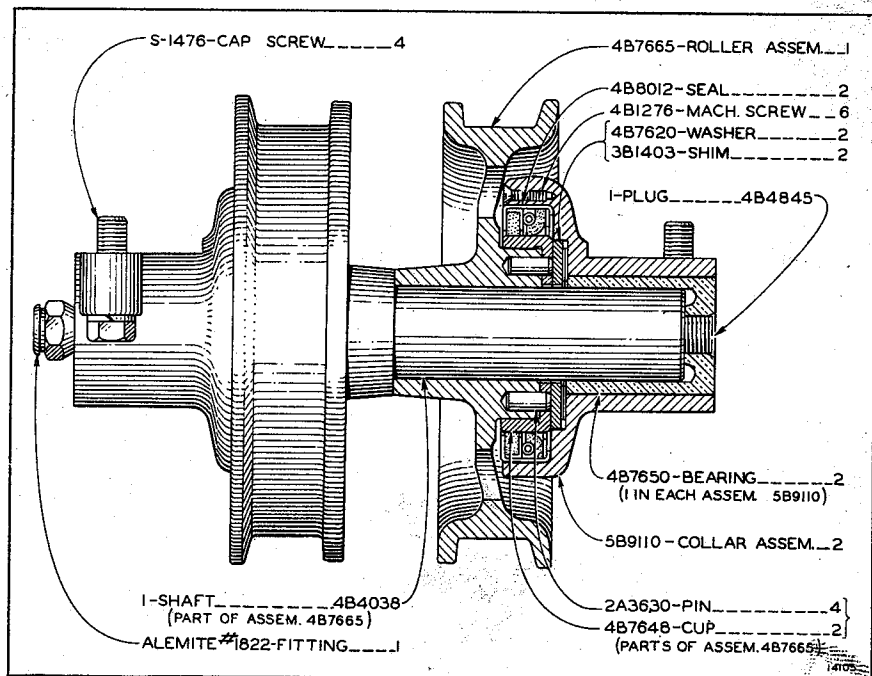

4B7698 TRACK ROLLER—Double Flange (4 Groups Req'd.)
 Effective with Serial No. 5J1615

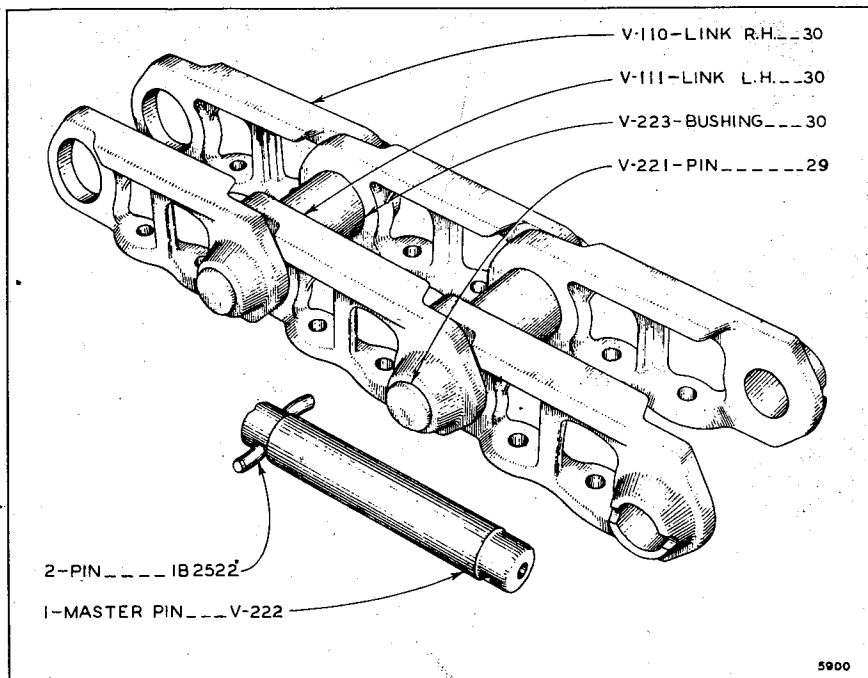

TRACK LINK ASSEMBLY (2 Assemblies Req'd.)
 6B1471 Track Pin and Bushing Group (consists of complete set
 of Track Pins and Bushings for one Track)

Name	Complete Track Group (Hardware Included) 2 Req'd. per Tractor	Shoe (30 Req'd. For One Track)
7" Grouser Shoe	1A992	1B91
7" Grouser Shoe H.T.	1B1957	1B1969
10" Grouser Shoe	V-401-A	V-140
10" Grouser Shoe H.T.	1B887	1B886
10" Grouser Shoe—1" Offset R.H.	3B3165 (1 Req'd.)	3B3167
10" Grouser Shoe—1" Offset L.H.	3B3166 (1 Req'd.)	3B3168
10" Semi-Skeleton Grouser Shoe H.T.	2B7872	2B7689
10" Semi-Skeleton Snow Shoe H.T.	2B9924	2B9925 (S.S. — 15 Req'd.) 2B9926 (D.S. — 15 Req'd.)
10" Flat Shoe	1A401	V-803
10" Skeleton Shoe	1A400	V-802
10" Rubber Shoe	V-534-A	V-519 Plate V-520 Shoe
12" Grouser Shoe—1" Offset R.H.—H.T.	4B9329 (1 Req'd.)	4B9331
12" Grouser Shoe—1" Offset L.H.—H.T.	4B9330 (1 Req'd.)	4B9332
12" Grouser Shoe	2B4766	2B4765
12" Grouser Shoe H.T.	2B8317	2B8337
12" Semi-Skeleton Snow Shoe H.T.	5B7797	5B7795 (S.S. — 15 Req'd.) 5B7796 (D.S. — 15 Req'd.)
13" Grouser Shoe H.T.	1B1958	1B1970
13" Semi-Skeleton Grouser Shoe H.T.	2B9185	2B9218
13" Semi-Skeleton Snow Shoe H.T.	3B3557	3B3731 (S.S. — 15 Req'd.) 3B3730 (D.S. — 15 Req'd.)
13" Angle Shoe	2B4645	2B4641
16" Grouser Shoe H.T.	1B1959	1B1971
20" Grouser Shoe H.T.	1B2456	1B2469
20" Angle Shoe	1A811	V-559

Note: 2B5484 Track Shoe Bolt — 120 Req'd. for One Track

2B5483 Nut (Used with 2B5484)

3B4507 Lockwasher (Used with 2B5484)

H.T. = Heat Treated, S.S. = Single Spike and D.S. = Double Spike



 
DIRT GROUSER



ICE GROUSER

ICE & DIRT
GROUSER

FLAT SHOE



ANGLE SHOE



 
GROUSER SHOE




SKELETON SHOE




STREET PLATE



RUBBER SHOE

 RUBBER SHOE
PLATE

 SEMI-SKELETON GROUSER SHOE

SEMI-SKELETON SNOW SHOE
(DOUBLE SPIKE)SEMI-SKELETON SNOW SHOE
(SINGLE SPIKE)

8276


TRACK SHOES, GROUSERS AND STREET PLATES

Name	Group Numbers (Hardware Included)		Grouser or Street Plate			
	Full Set	Half Set	Part Number	Full Set Quantity	Half Set Quantity	For Use on Track Shoes
Ice & Dirt Grouser	1B1488	2B3236	V-801	60	30	V-140, 1B886, 1B1970, 1B1971, 1B2469, 2B4765, 2B7689, 2B8337, 2B9218, 2B9925, 2B9926, 3B3167, 3B3168, 3B3730, 3B3731, 4B9331, 4B9332
Street Plate	1B1493	2B3239	T-332	60	30	
Ice Grouser	1B1483	2B3238	V-807 R.H. V-808 L.H.	30 30	15 15	V-802 & V-803
Dirt Grouser	1B1478	2B3237	V-805 R.H. V-806 L.H.	30 30	15 15	V-803

Note: T-490 Bolt—2 Req'd. for each Grouser V-801
 T-244 Bolt—2 Req'd. for each Street Plate T-332
 1B4204 Nut (Used with T-490 & T-244)
 3B4507 Lockwasher (Used with T-490 & T-244)
 V-819 Bolt—1 Req'd. for each Grouser V-805, V-806, V-807 & V-808
 1D4720 Nut (Used with V-819)
 T-1215 Washer (Used with V-819)
 3B4510 Lockwasher (Used with V-819)

21073


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

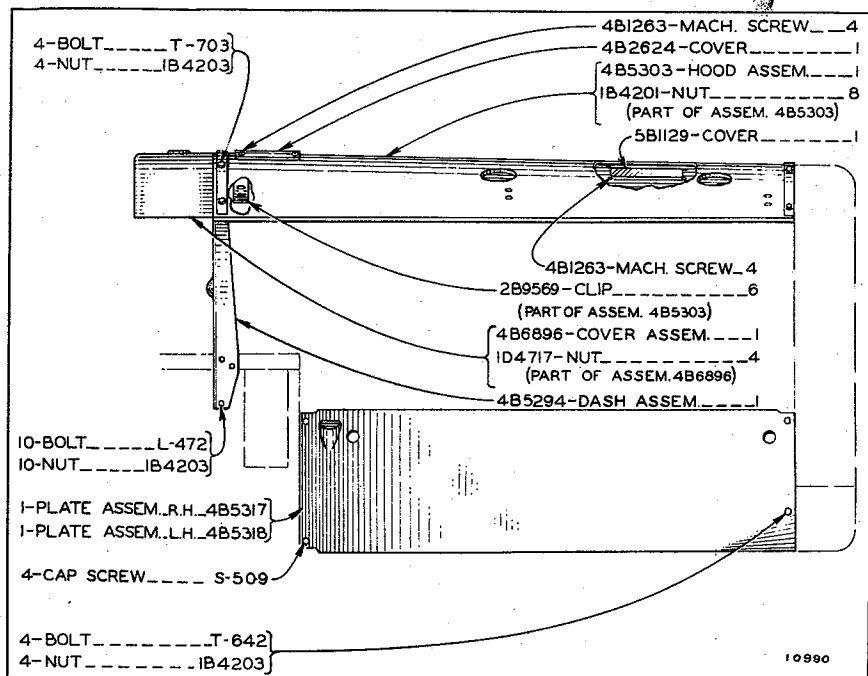

HOOD AND DASH

Serial No. 5J1 to 5J5 Inclusive

Refer also to Pages 129 and 146 for special parts

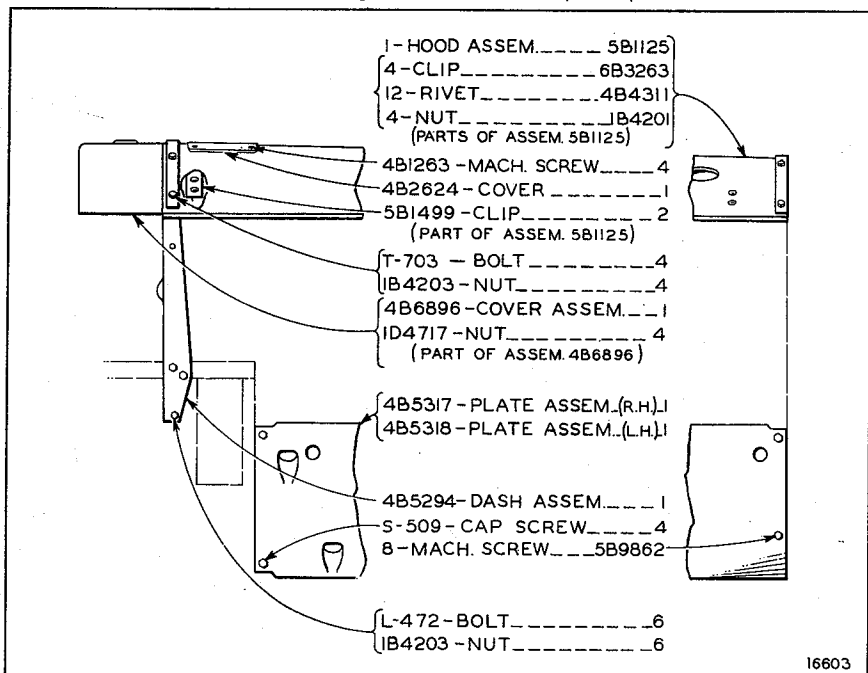


HOOD AND DASH

Serial No. 5J6 to 5J366 Inclusive

Refer also to Pages 129 and 146 for special parts


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

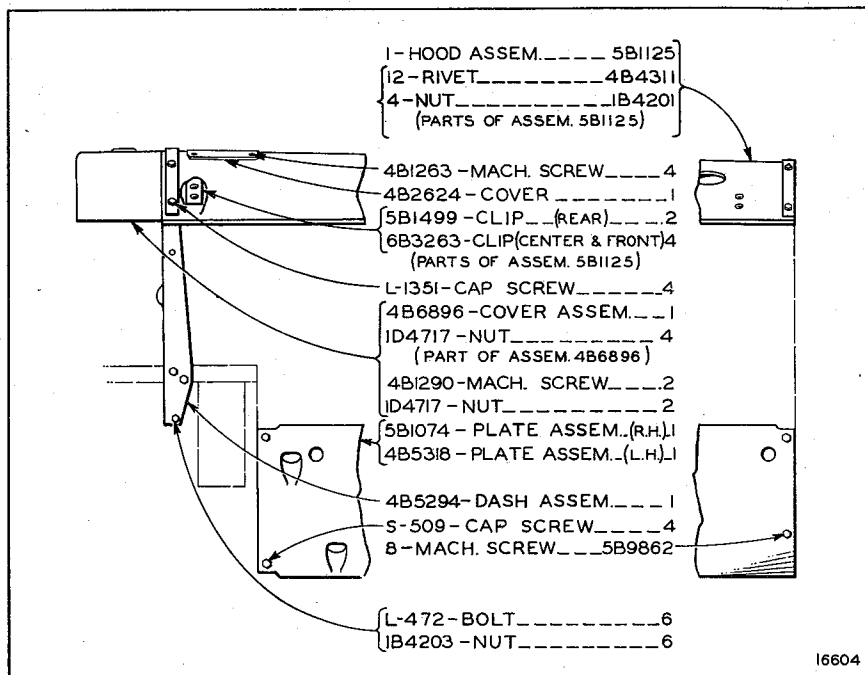

HOOD AND DASH

Serial No. 5J367 to 5J811 Inclusive

Refer also to Pages 129 and 146 for special parts

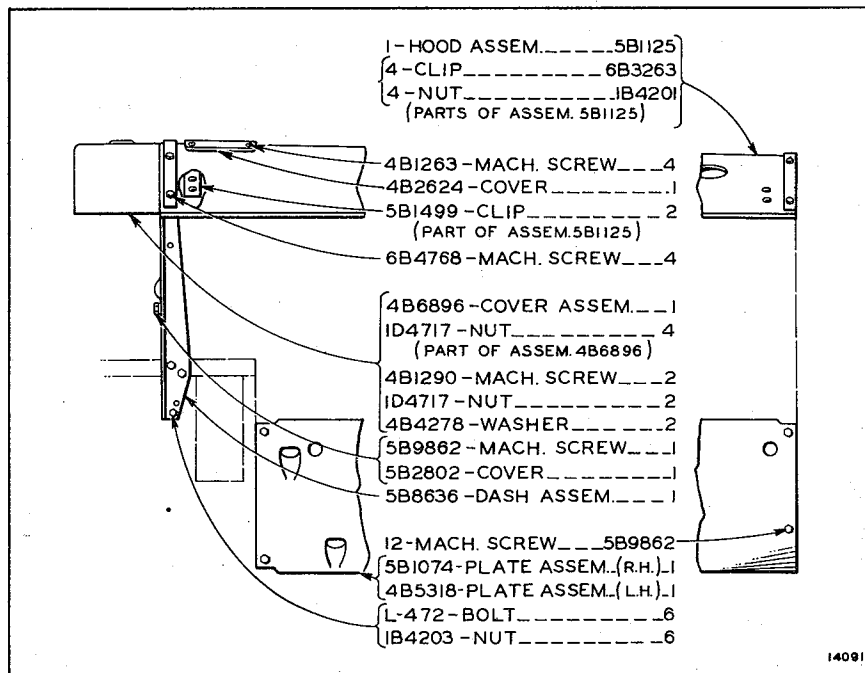


HOOD AND DASH

Effective with Serial No. 5J812

Refer also to Pages 129 and 146 for special parts


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

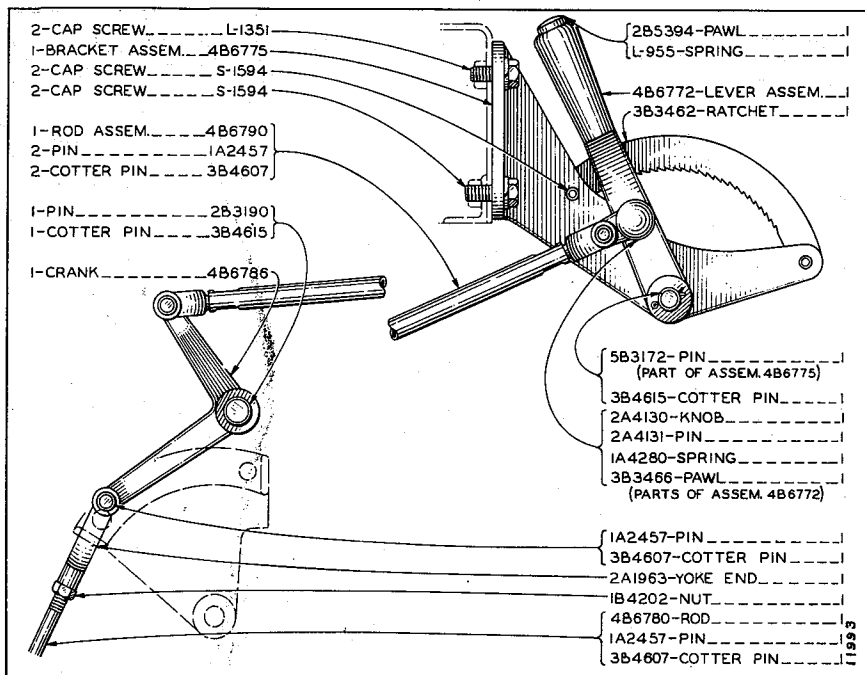

FUEL PUMP AND GOVERNOR CONTROL

Serial No. 5J1 to 5J938 Inclusive

Refer also to Page 144 for special parts

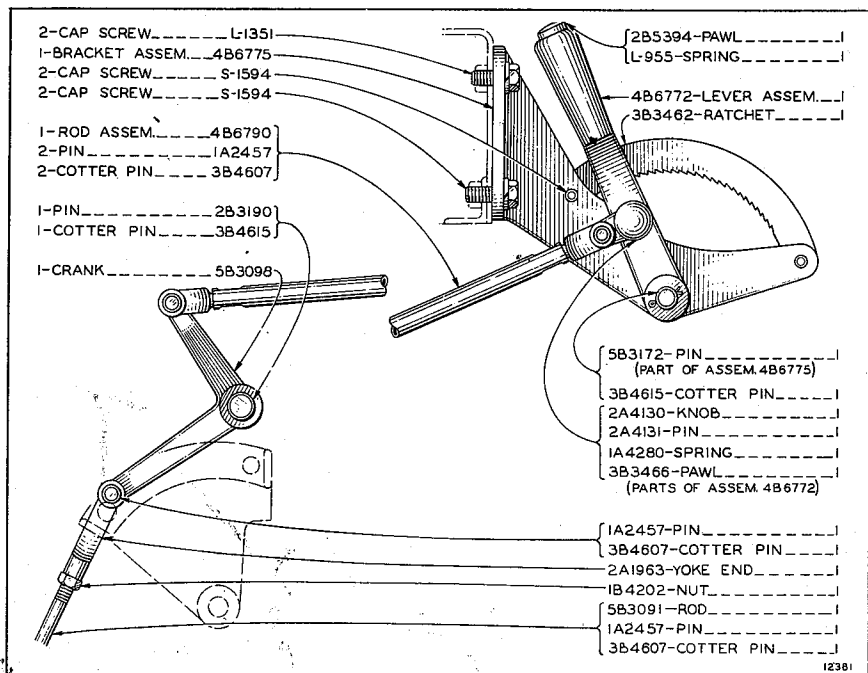


FUEL PUMP AND GOVERNOR CONTROL

Effective with Serial No. 5J939


Refer also to Page 144 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

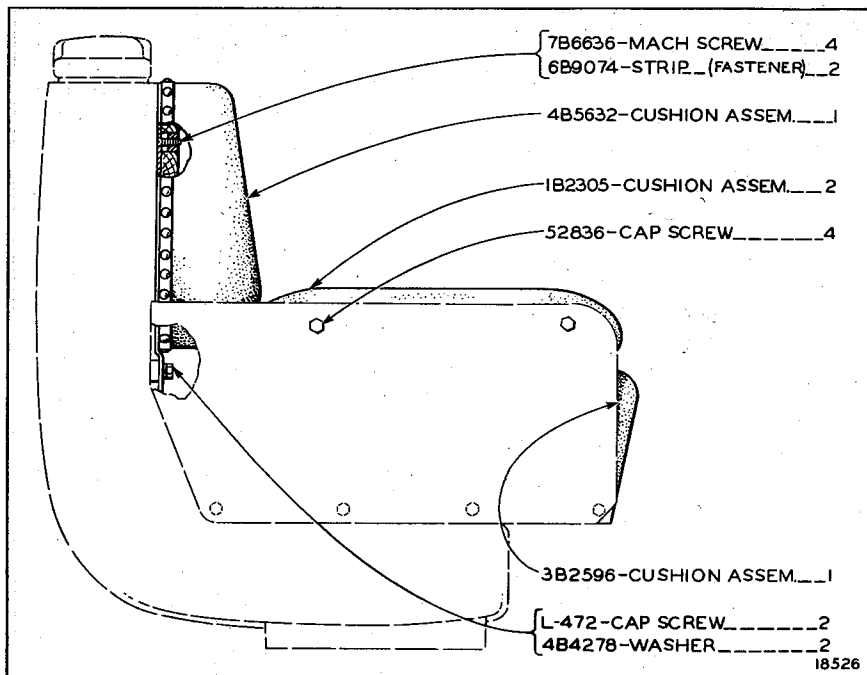


SEAT CUSHIONS

Refer also to Pages 140 and 148 for special parts

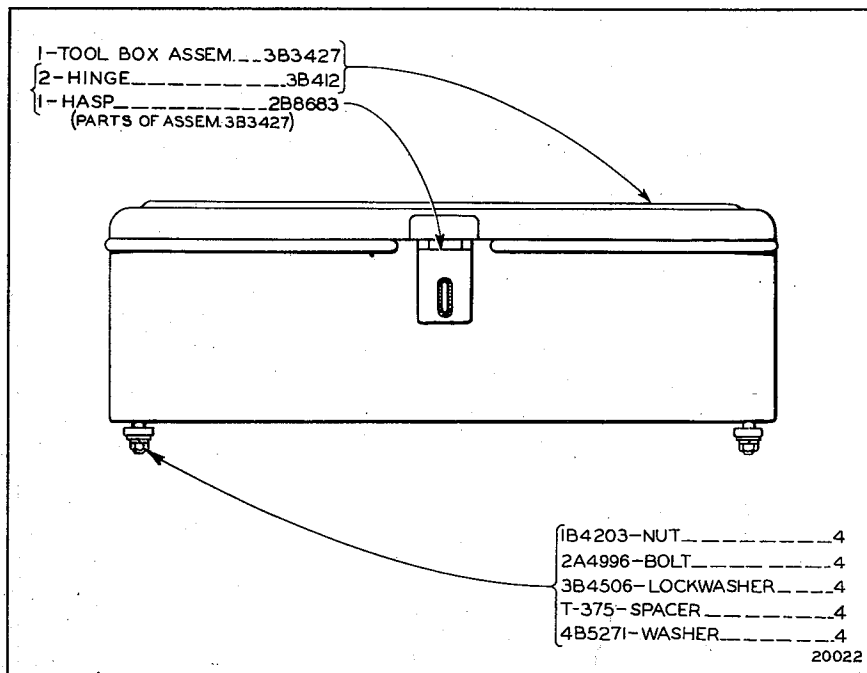

TOOL BOX


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

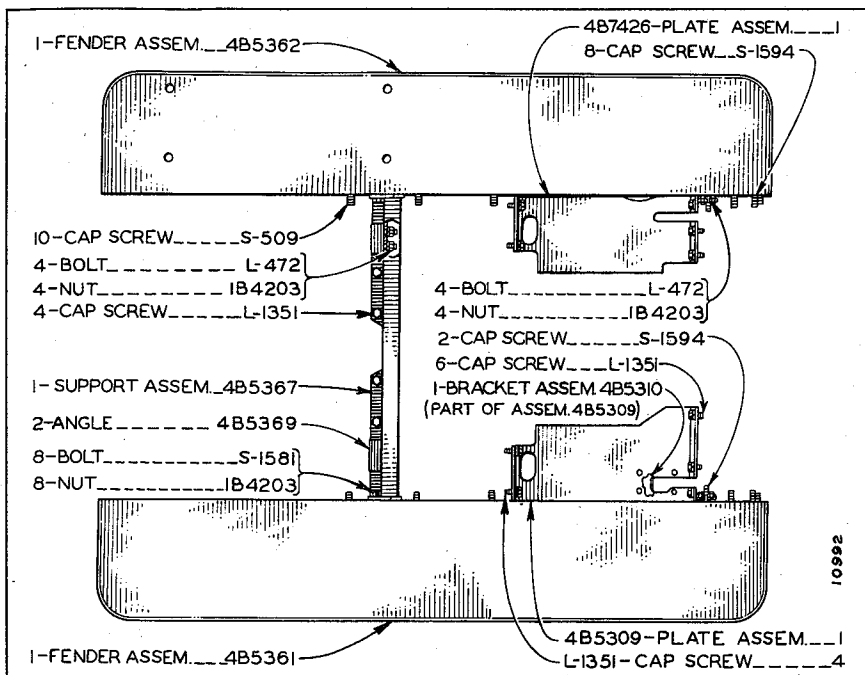

FENDERS

Serial No. 5J1 to 5J727 Inclusive

Refer also to Pages 145 and 149 to 151 for special parts

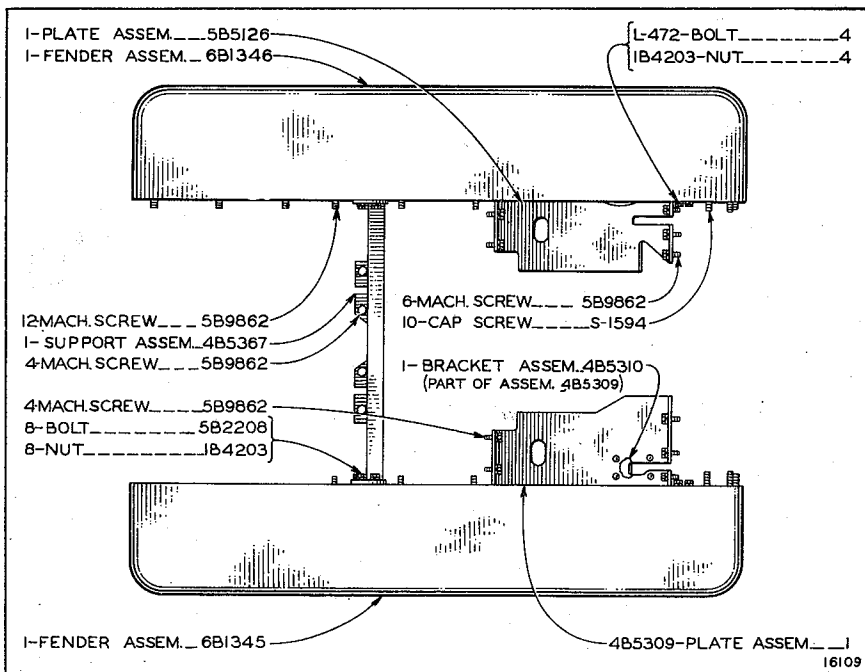


FENDERS


Effective with Serial No. 5J728

Refer also to Pages 145 and 149 to 151 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

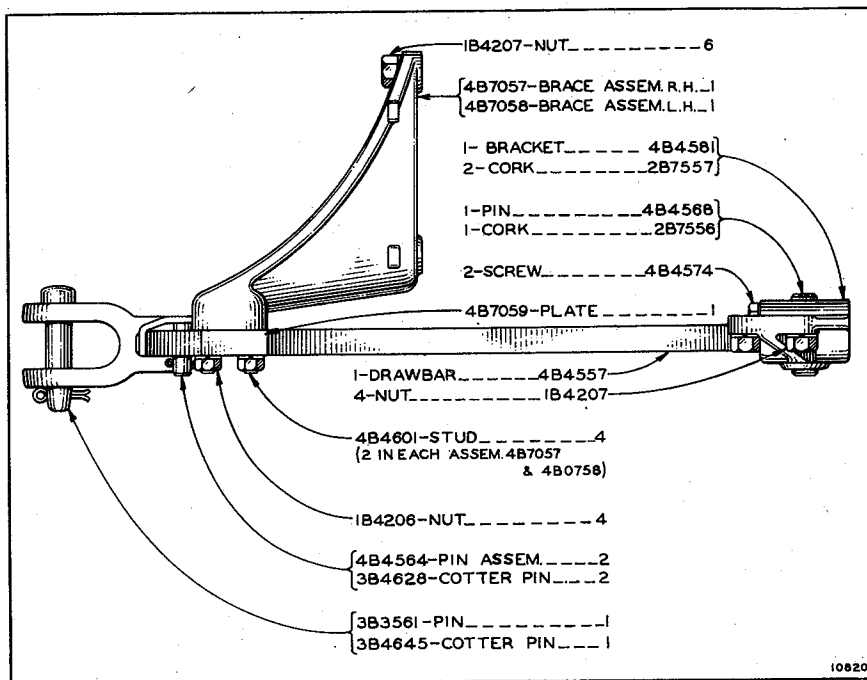
**DRAWBAR**

Serial No. 5J1 to 5J1071 Inclusive
 Refer also to Page 179 for special parts

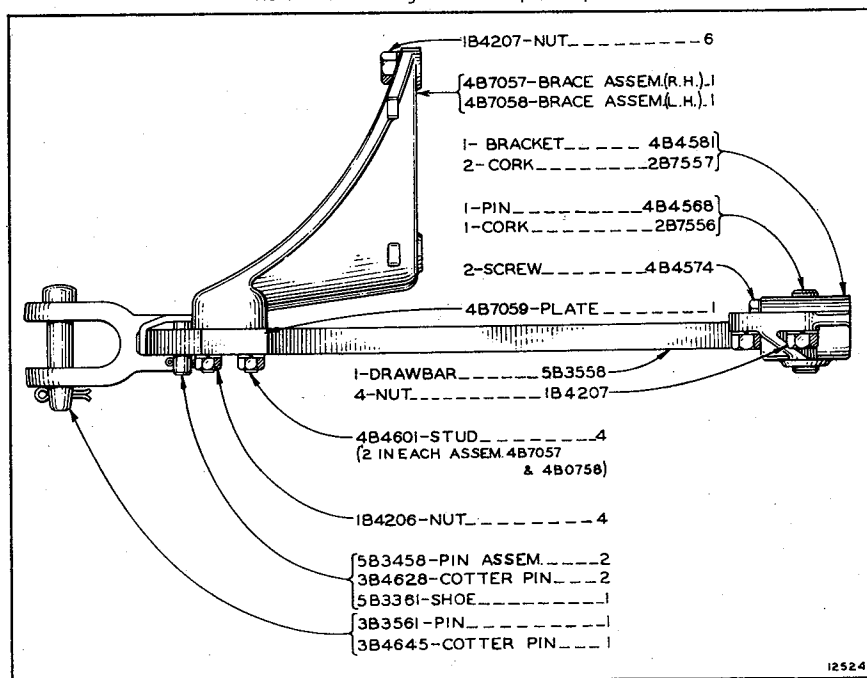**DRAWBAR**


Effective with Serial No. 5J1072
 Refer also to Page 179 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

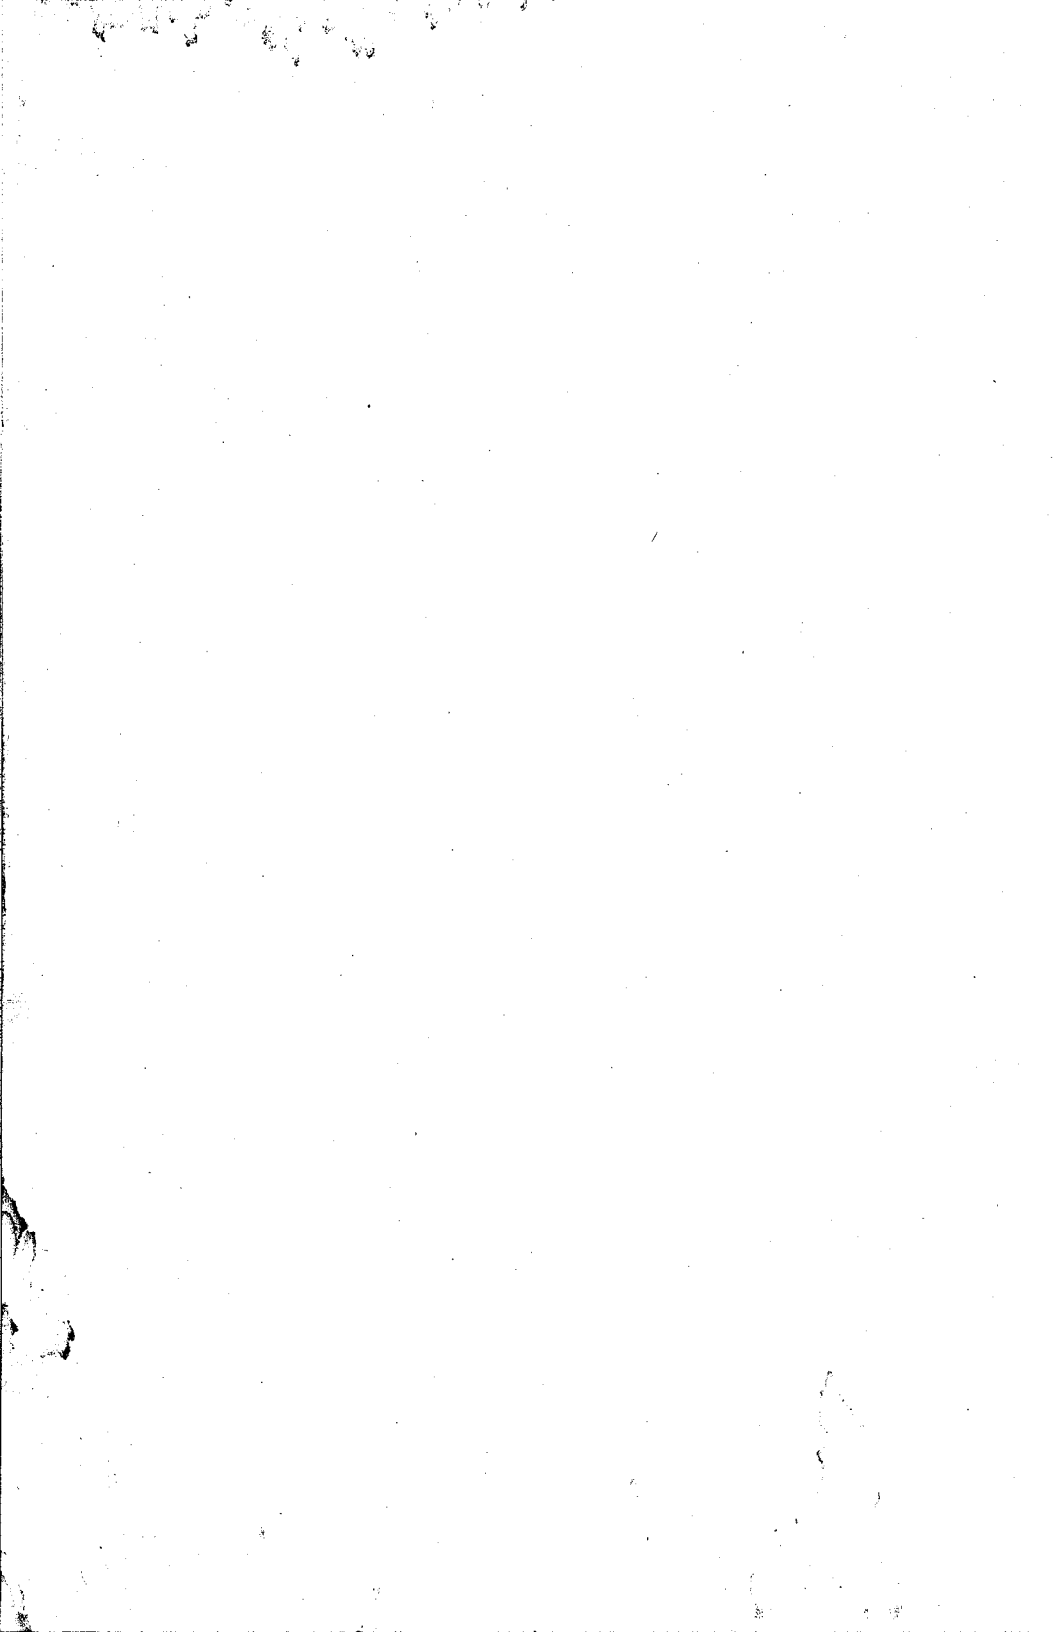


Attachments



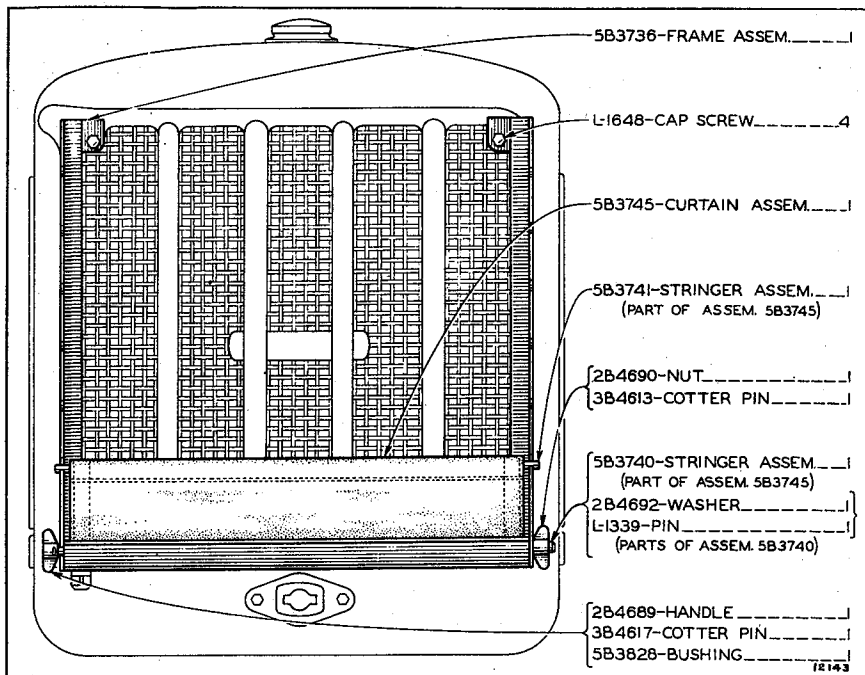


RADIATOR CURTAIN

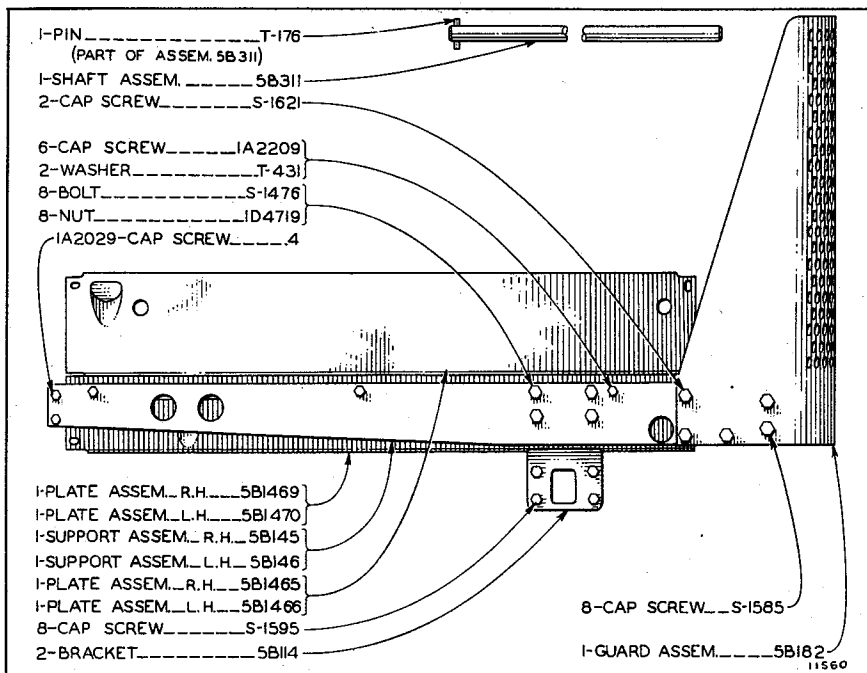


4B7966 RADIATOR GUARD GROUP

For use without Bumper

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

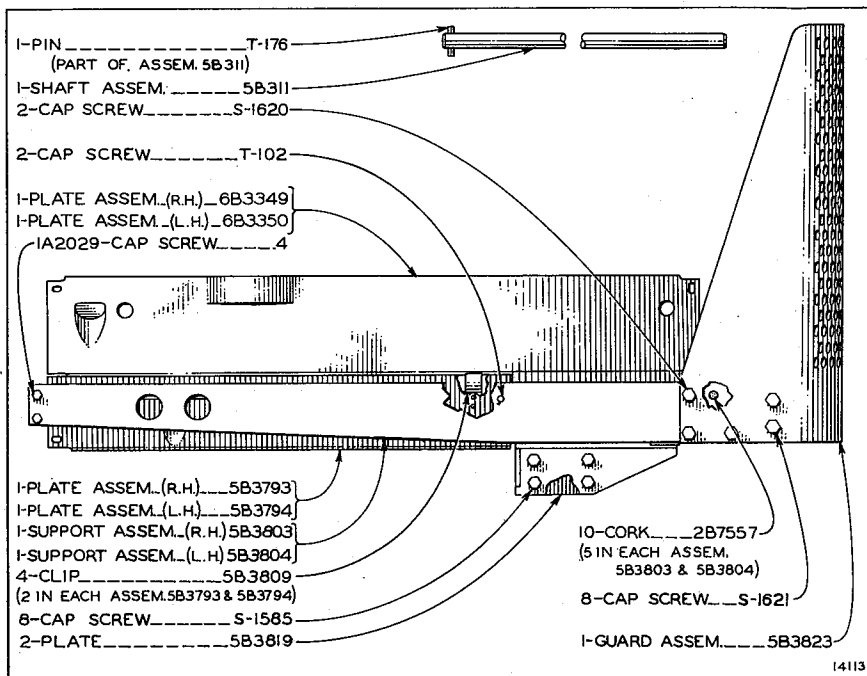
**5B3820 RADIATOR GUARD GROUP**

For use without Bumper

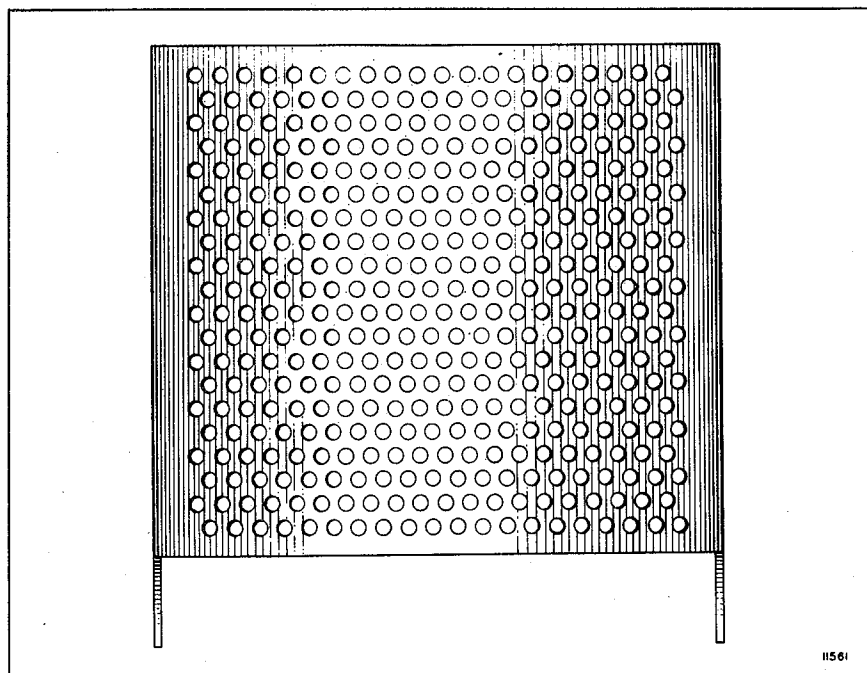
**5B157 RADIATOR GUARD ASSEMBLY**

For use with 4B7952 Front Bumper Group


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

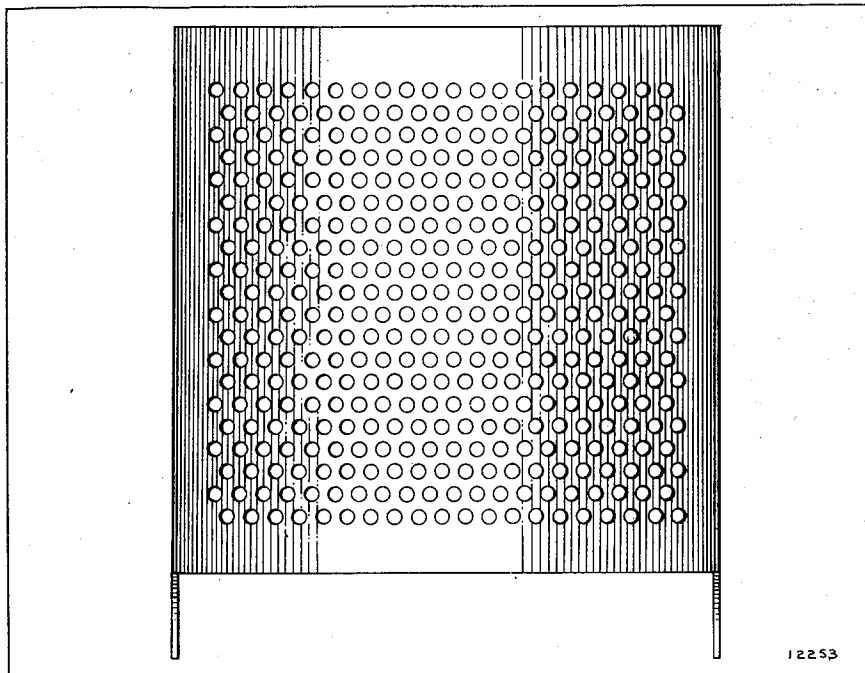**5B3826 RADIATOR GUARD ASSEMBLY**


For use with 3F4737 Front Bumper Group

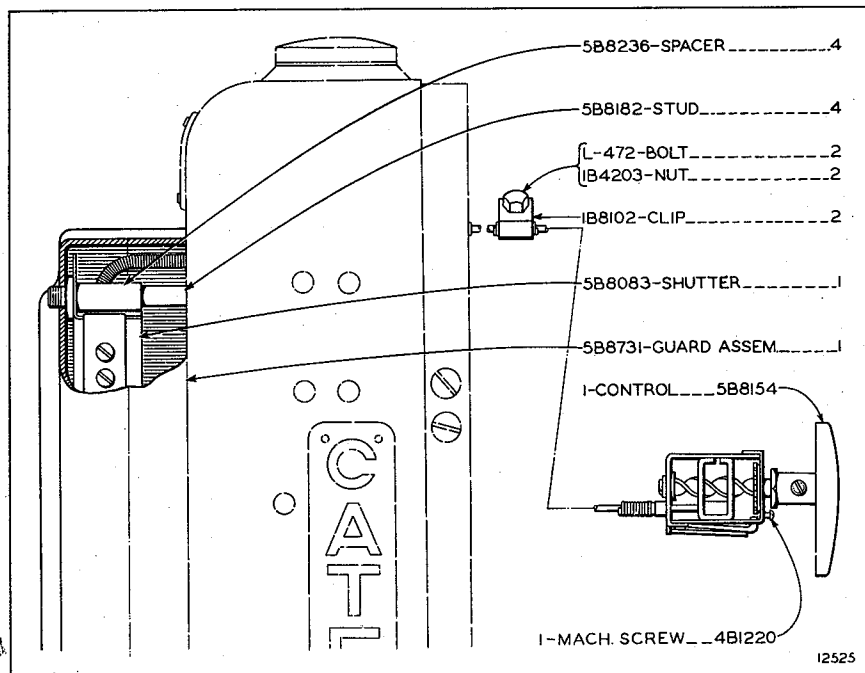**4B7984 RADIATOR SHUTTER GROUP**


Serial No. 5J1 to 5J1275 Inclusive

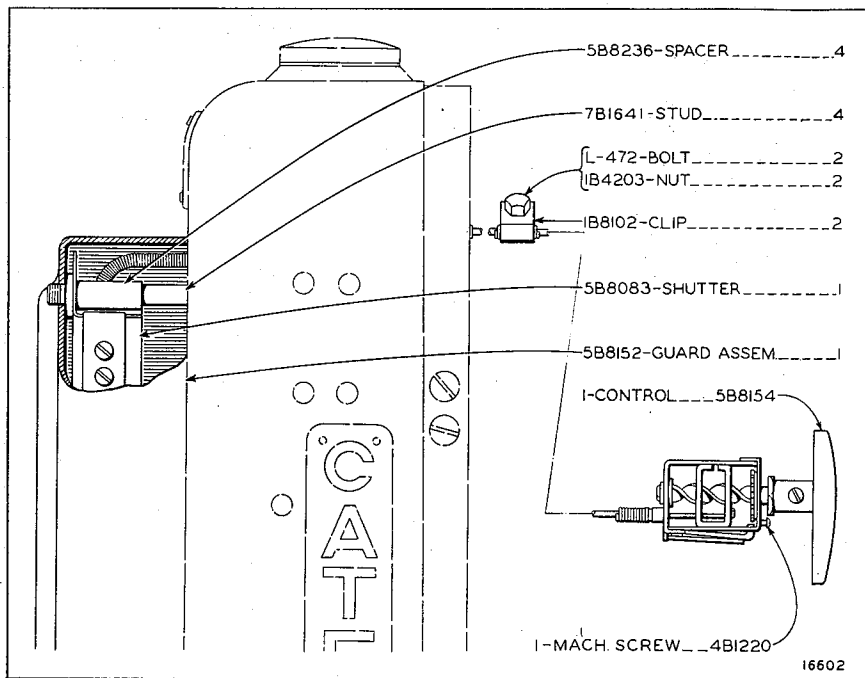**5B8183 RADIATOR SHUTTER GROUP**


Effective with Serial No. 5J1276

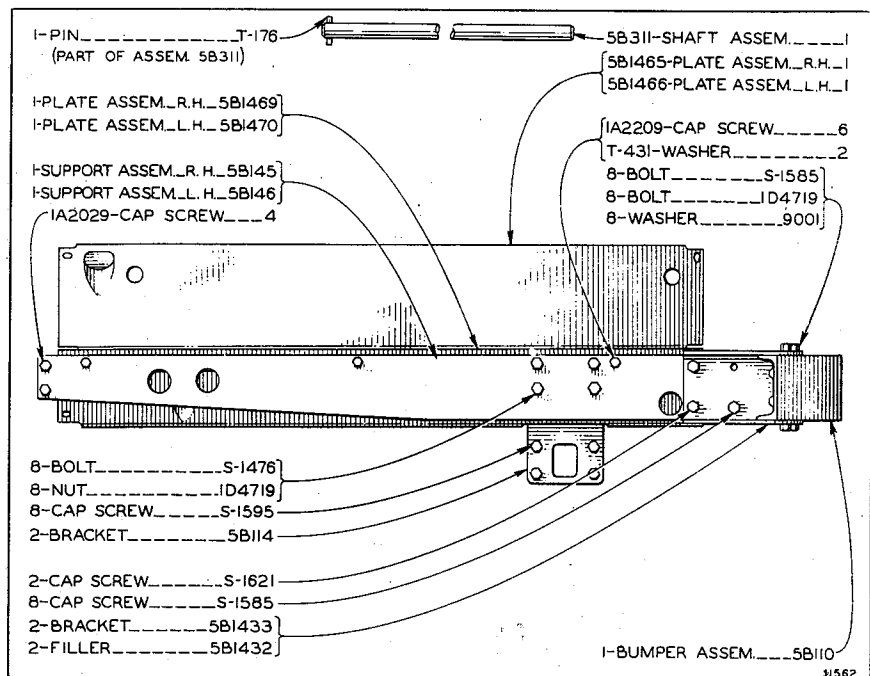**4B7952 FRONT BUMPER GROUP**

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

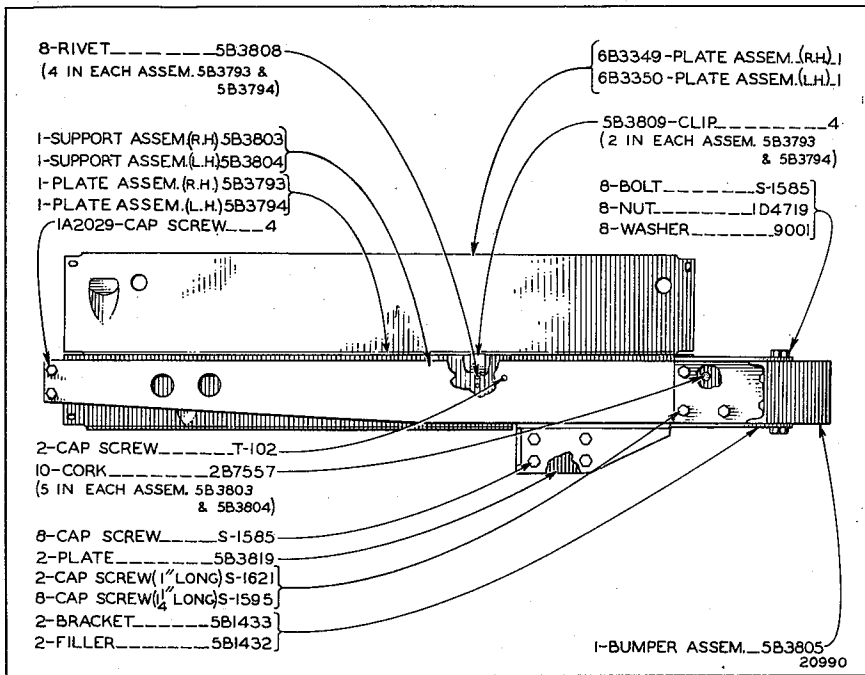

3F4737 FRONT BUMPER GROUP

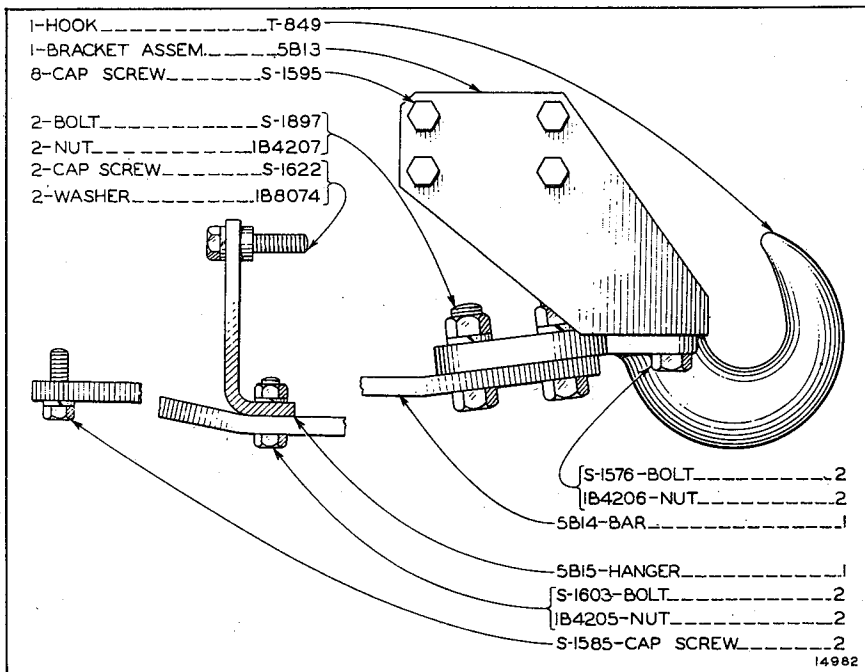


4B7970 FRONT PULL HOOK GROUP


For use without Crankcase Guard

Only separate parts serviced. When complete group is required order 9B4185

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

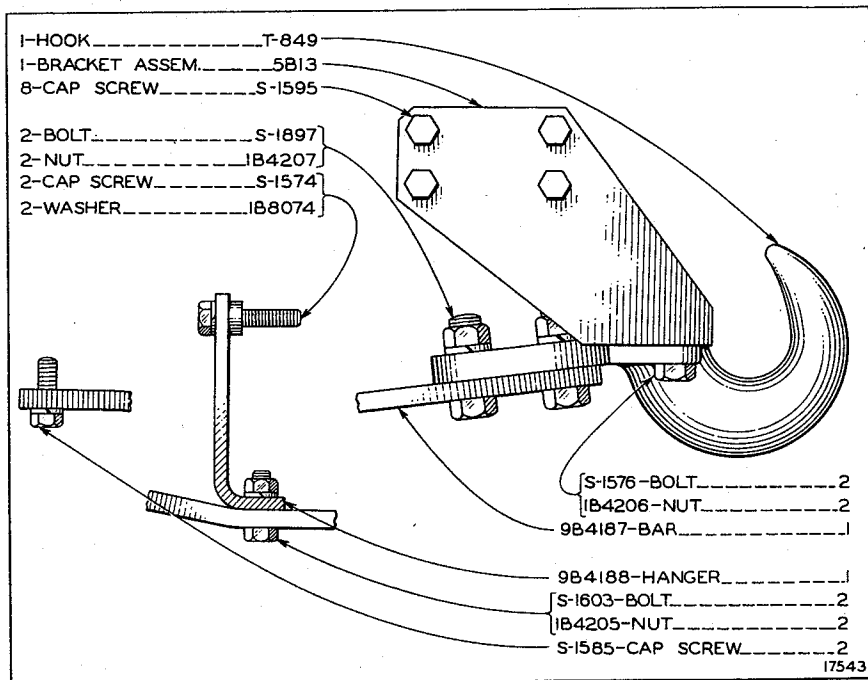
**9B4185 FRONT PULL HOOK GROUP**

For use without Crankcase Guard

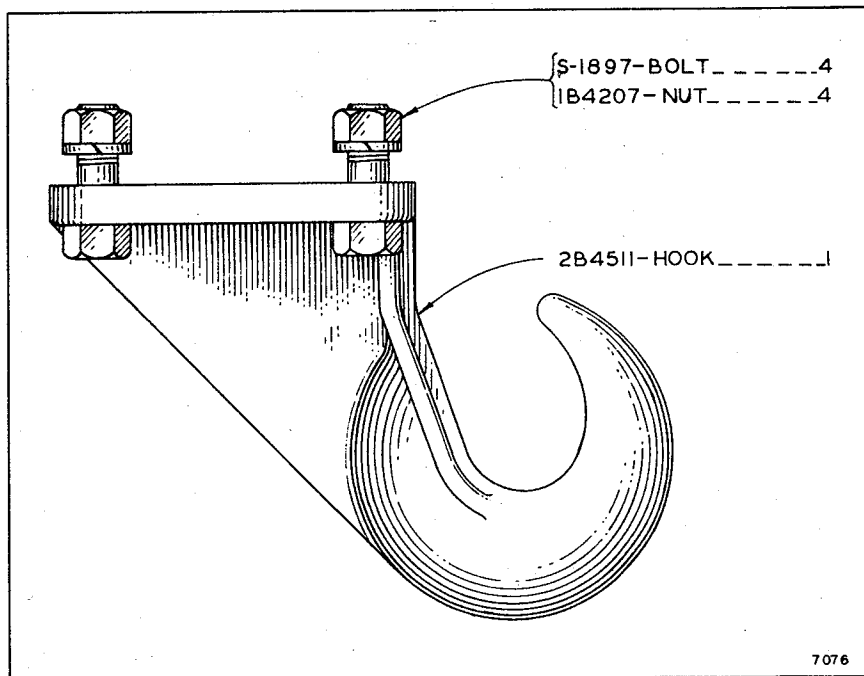
**2B4512 FRONT PULL HOOK GROUP**

For use with Crankcase Guard

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

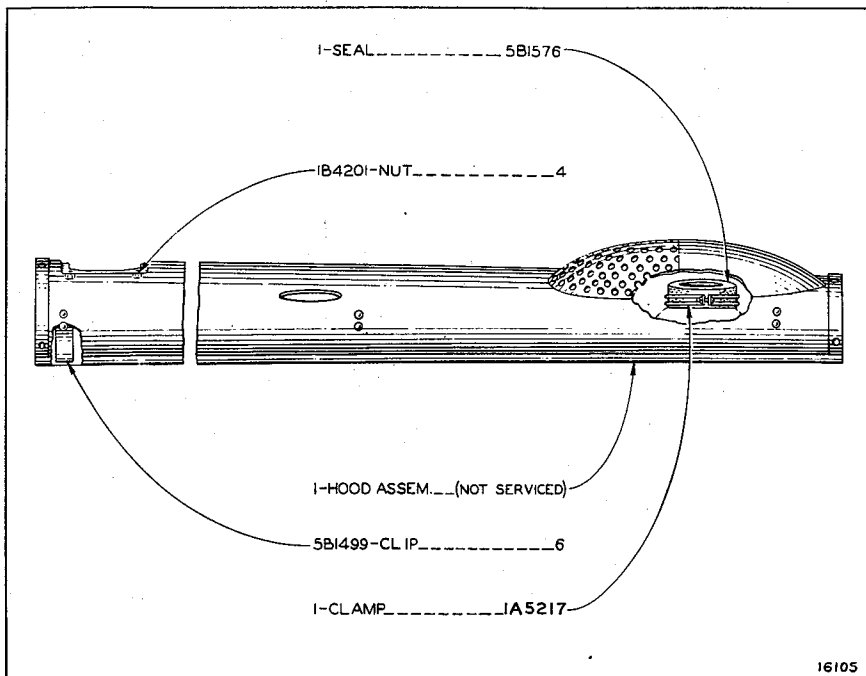

4B7969 HOOD GROUP—Orchard Type
For use on Top Seat Tractors

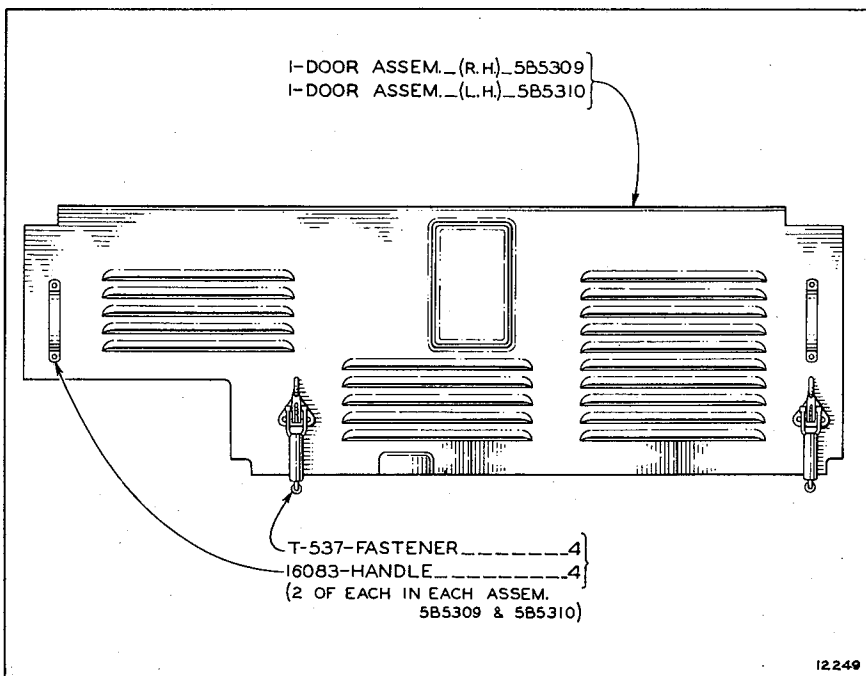


4B7957 HOOD DOOR GROUP


For use on Rear Seat Tractors

Only separate parts serviced. When complete group is required order 6B1966


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

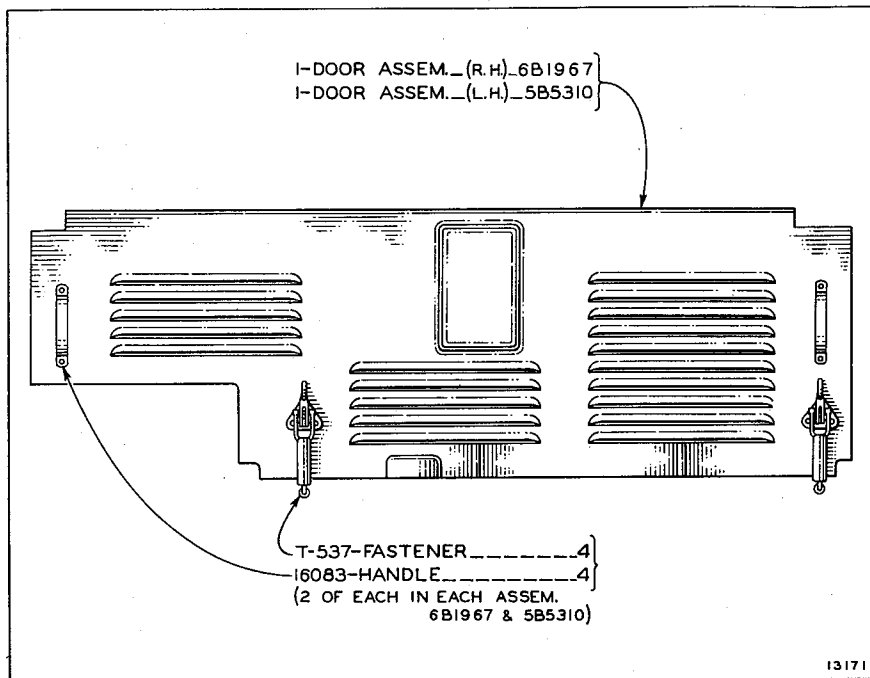**6B1966 HOOD DOOR GROUP**


For use on Rear Seat Tractors

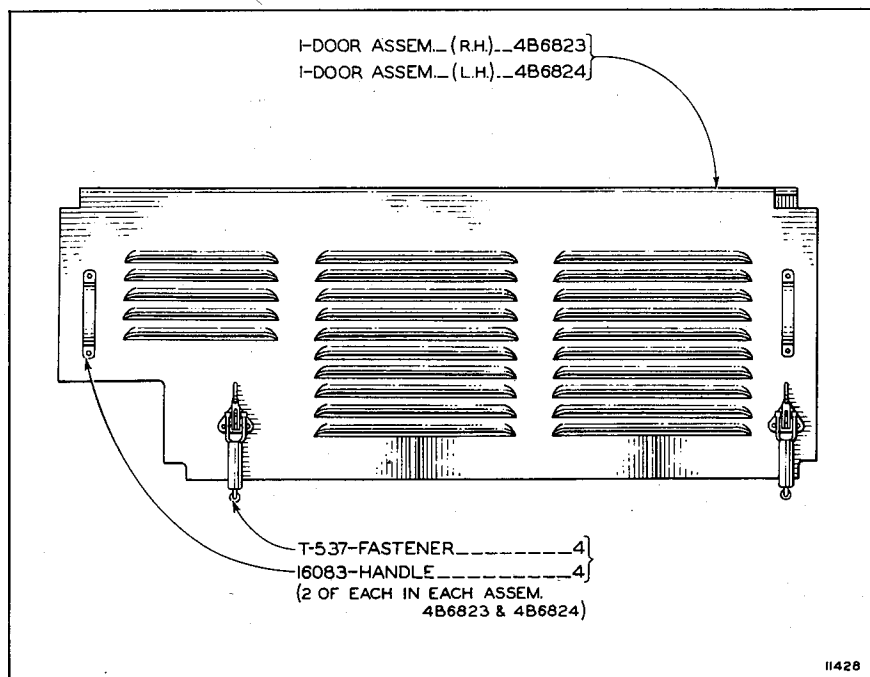**4B6825 HOOD SIDE DOOR GROUP**

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

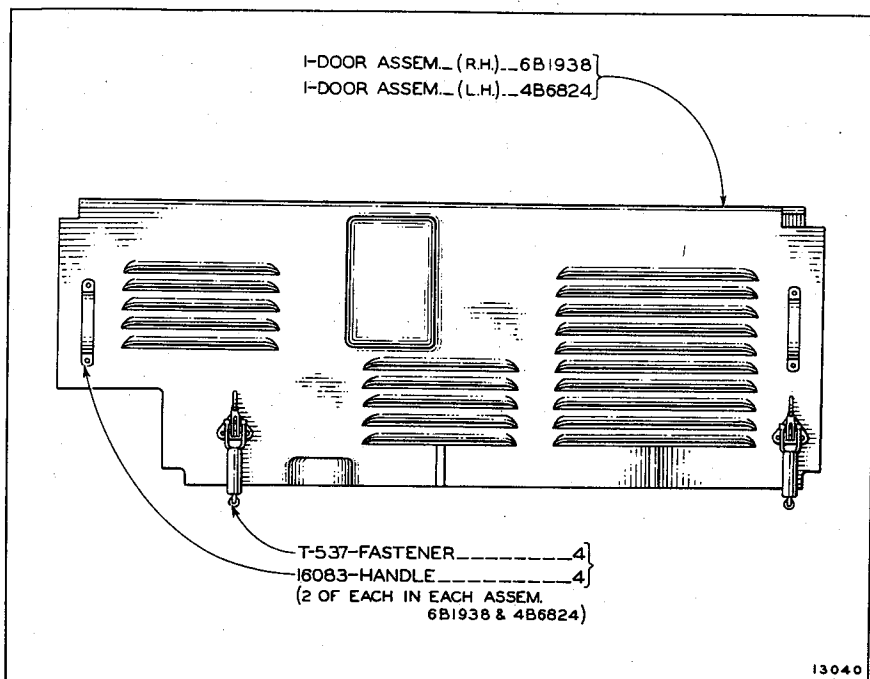


6B1942 HOOD SIDE DOOR GROUP

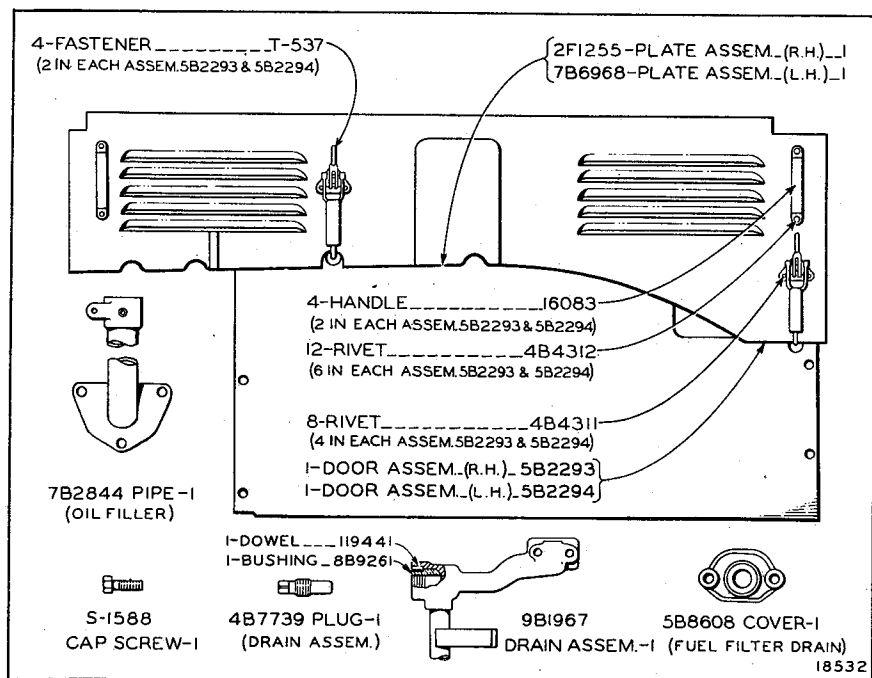


7B6970 HOOD SIDE DOOR GROUP

For use with Bulldozer


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

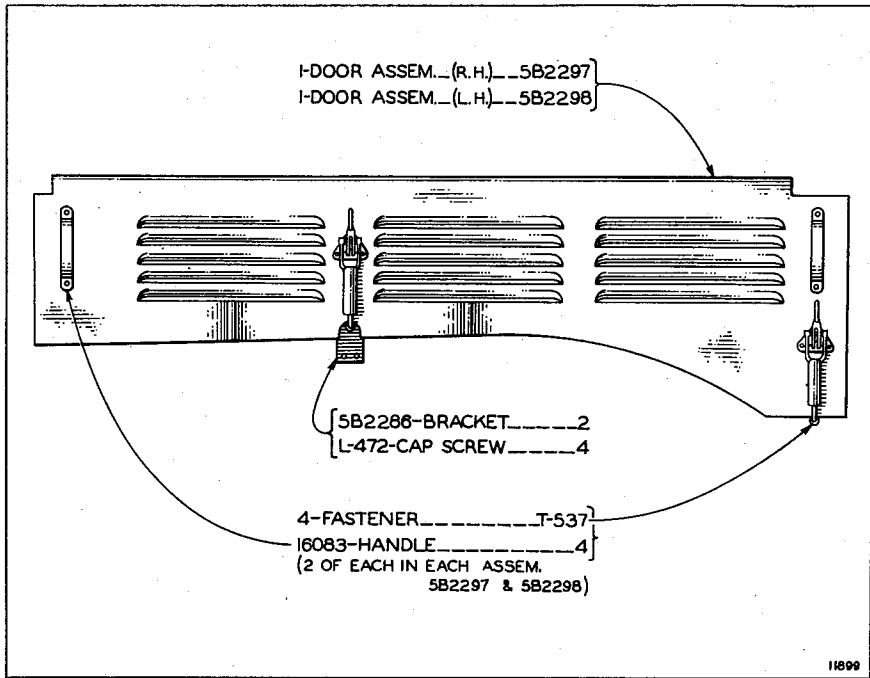


487959 HOOD SIDE DOOR GROUP—Orchard Type
For use on Rear Seat Tractors

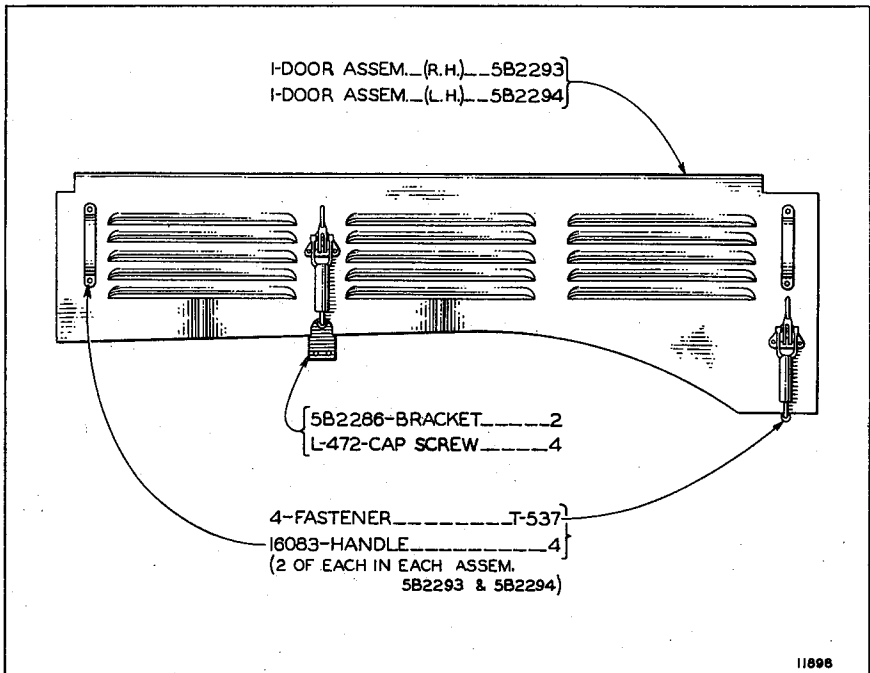

487958 HOOD SIDE DOOR GROUP—Orchard Type
For use on Top Seat Tractors

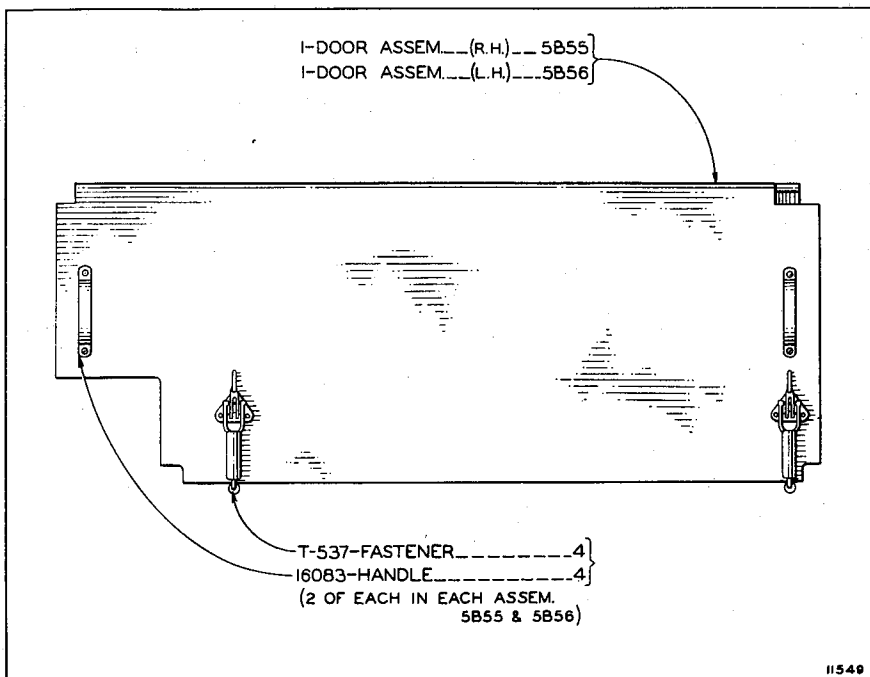


4B7967 WINTER HOOD SIDE DOOR GROUP

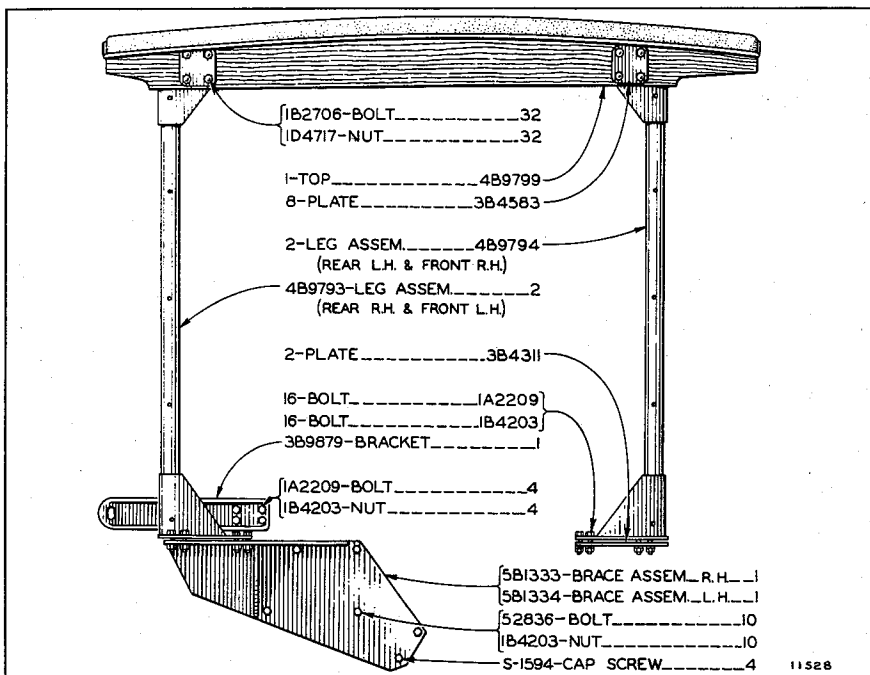


4B7985 CANOPY GROUP

Only separate parts serviced. When complete group is required order 5B7651

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

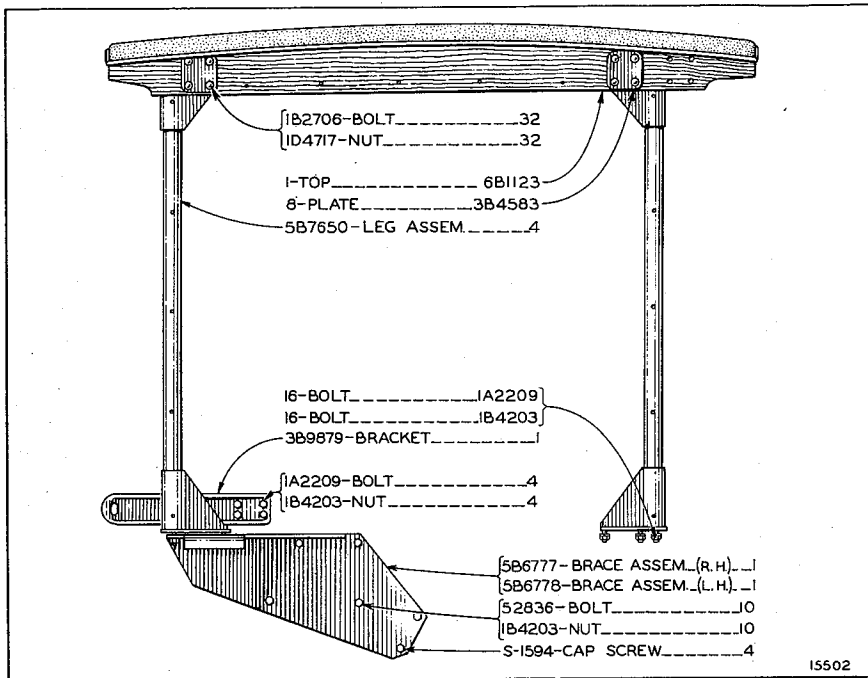


5B7651 CANOPY GROUP

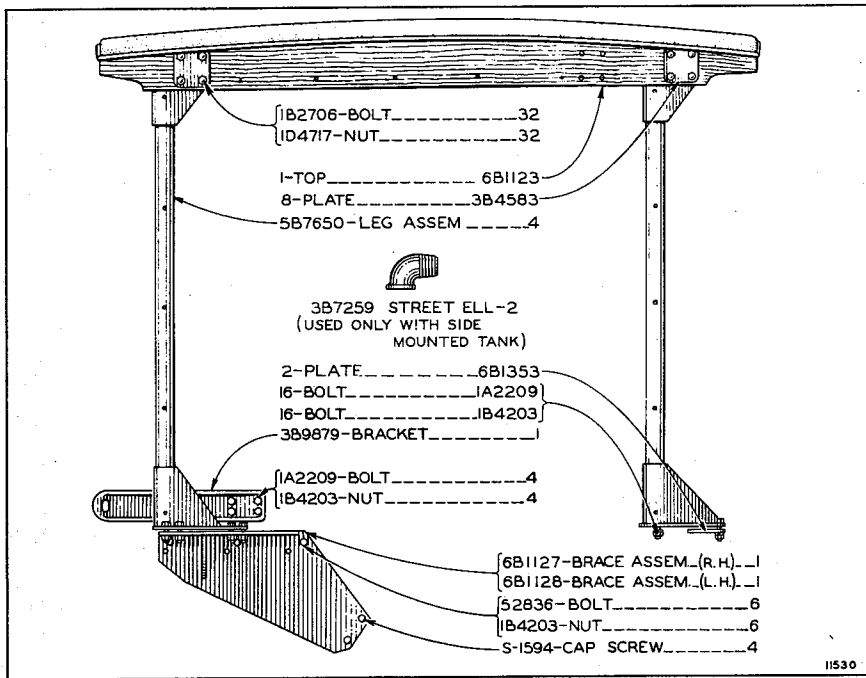


4B9973 CANOPY GROUP


For use with Fender Mounted Fuel Tank

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

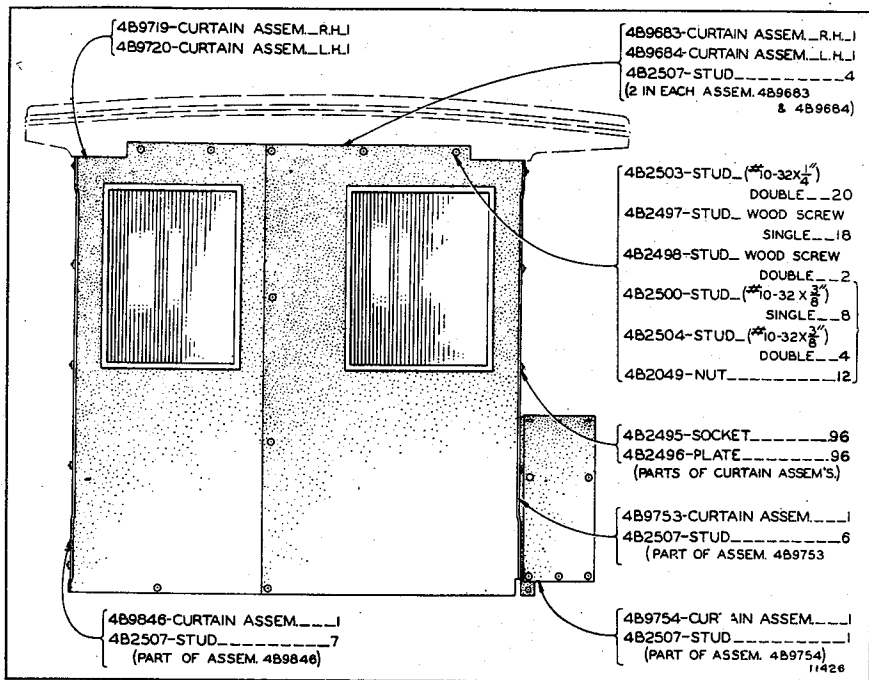


4B7955 CANOPY CURTAIN GROUP

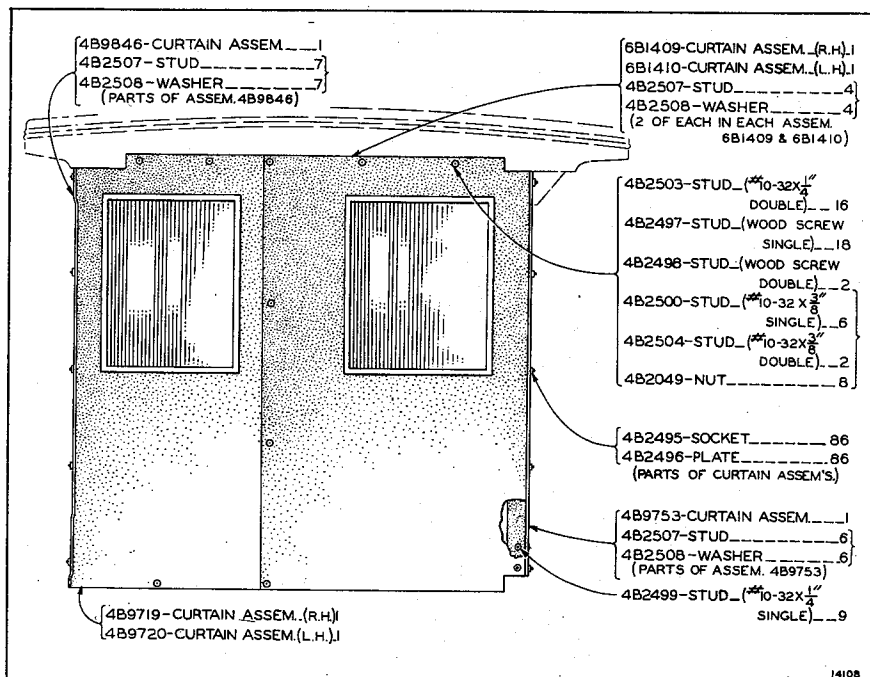
4B7992 CANOPY CURTAIN GROUP
For use with Fender Mounted Fuel Tank

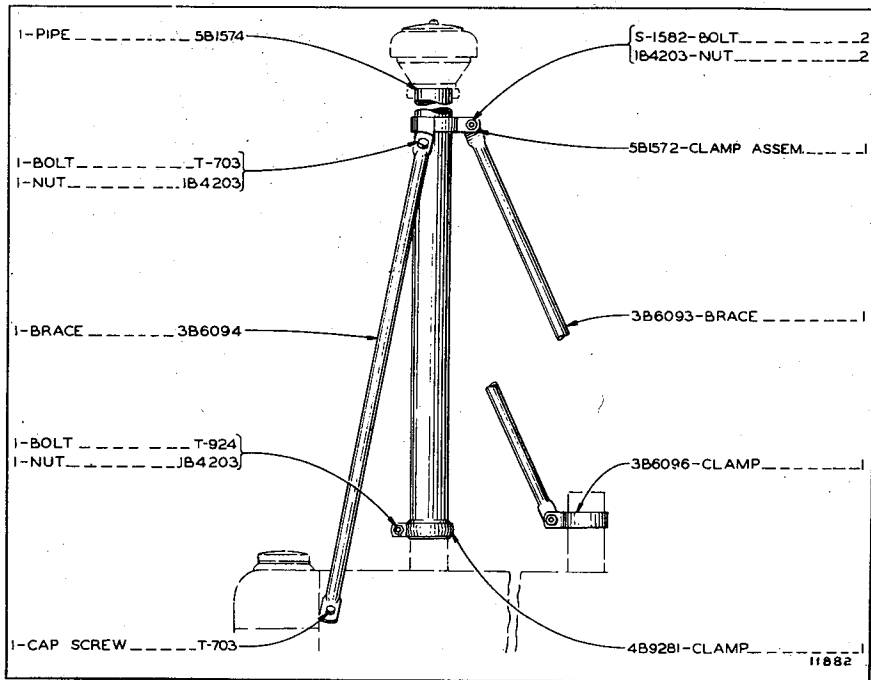


4B7961 AIR CLEANER INLET PIPE EXTENSION GROUP

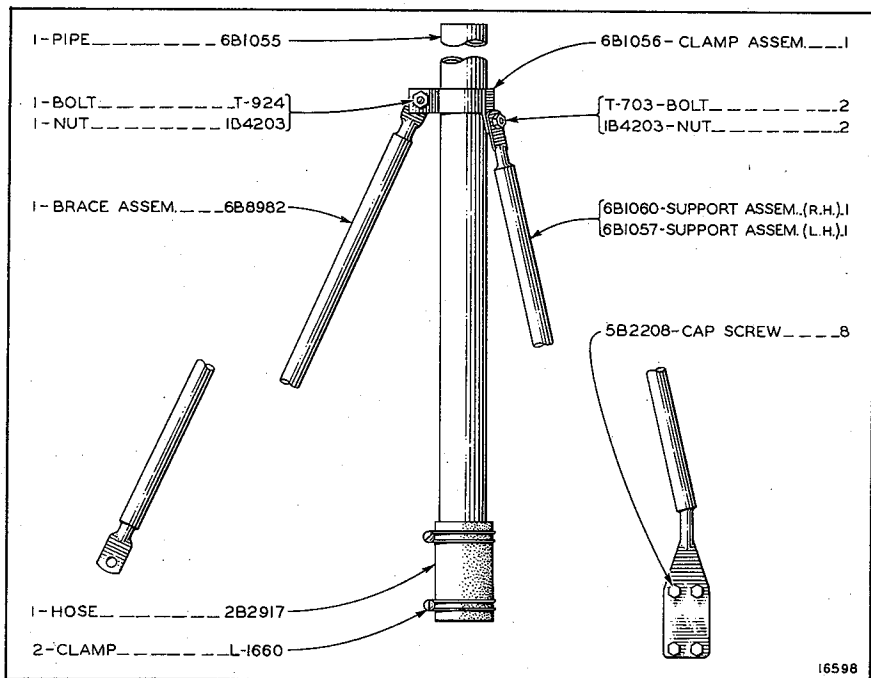


6B3719 AIR CLEANER INLET PIPE EXTENSION GROUP

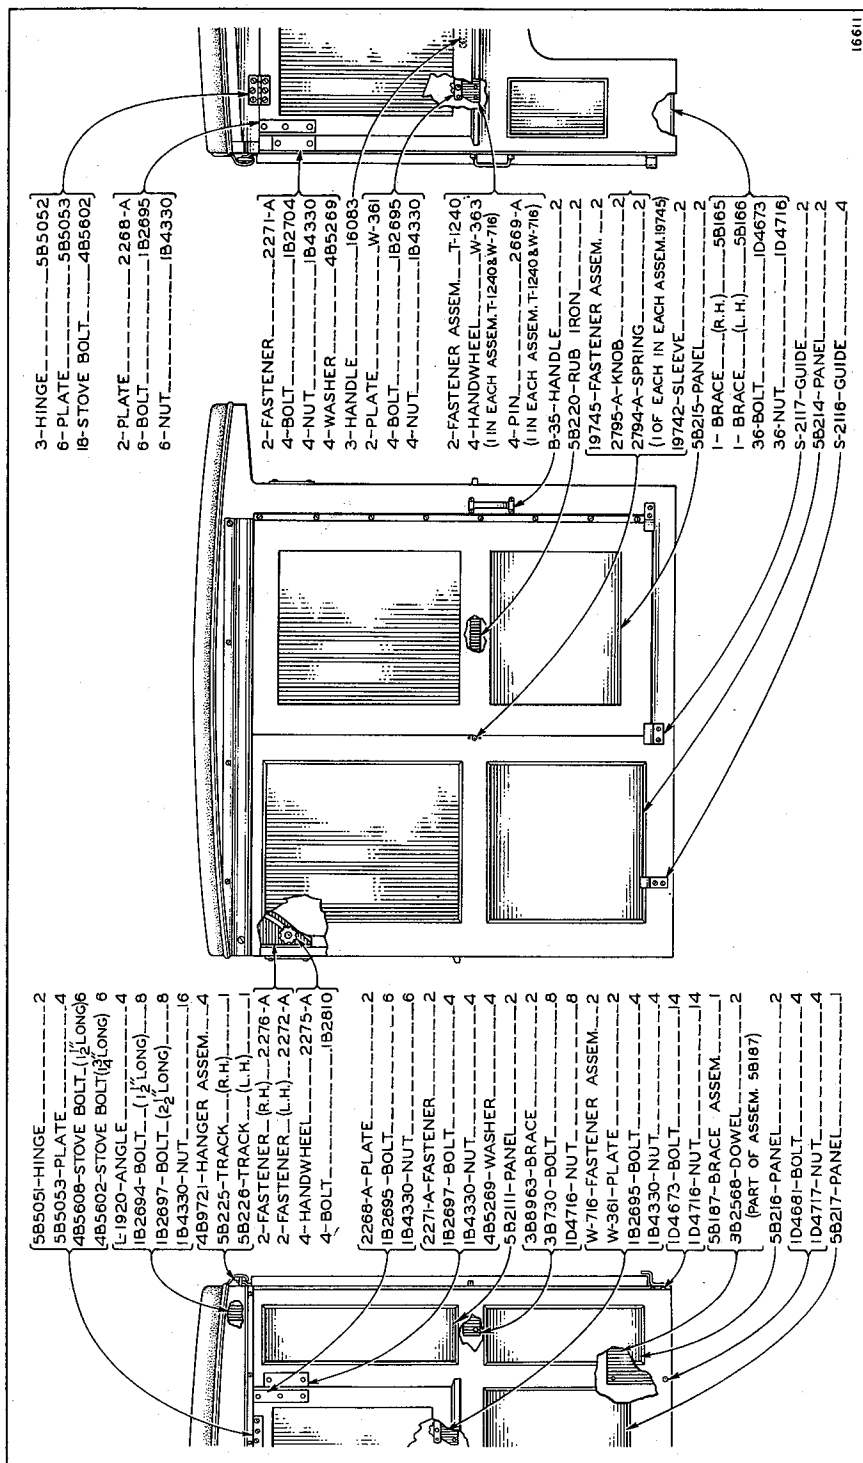

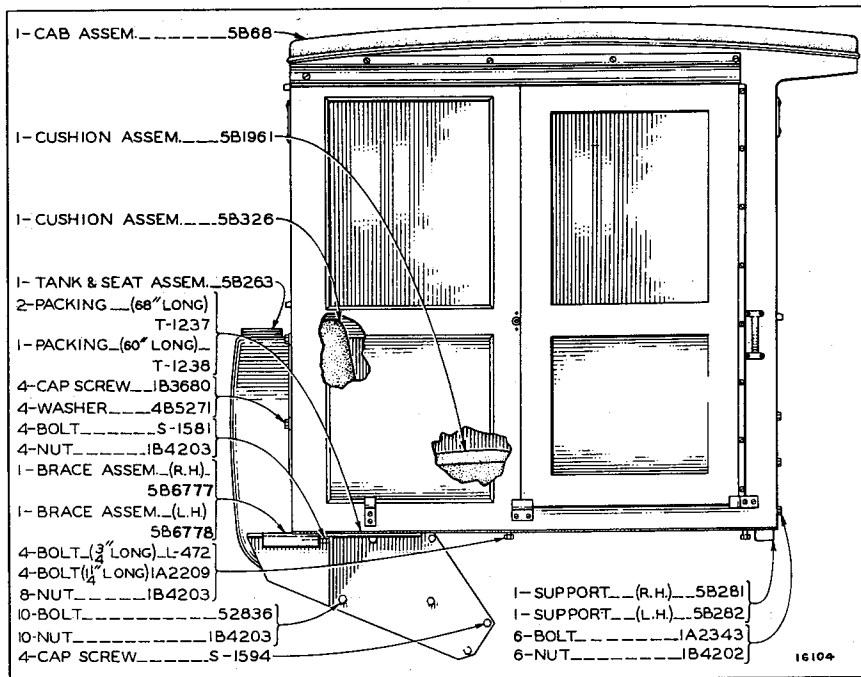

4B7954 CAB GROUP

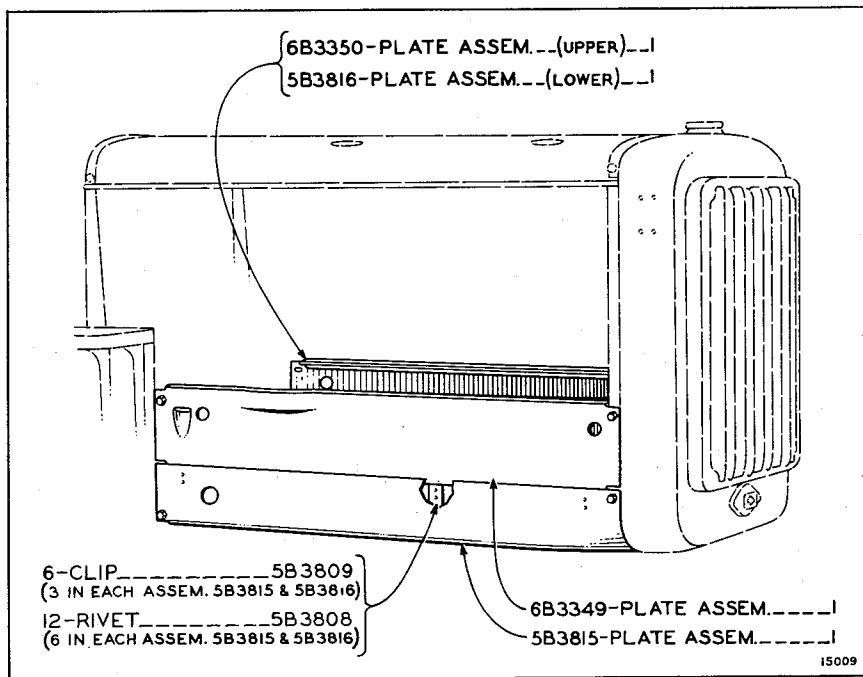


7B6106 HOOD SIDE PLATE GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

4B7336 Rear Seat Arrangement

Consists of:


1	Seat Group		Shown Below
1	Fuel System Group		Page 141-142
1	Air Cleaner Group		Page 142
1	Controls Group		" 143
1	Fuel Pump and Governor Control Group		" 144
1	Fender Group		" 145
1	Heat Indicator Group		" 146
1	Hood Group		" 146
1	Miscellaneous Group		" 147

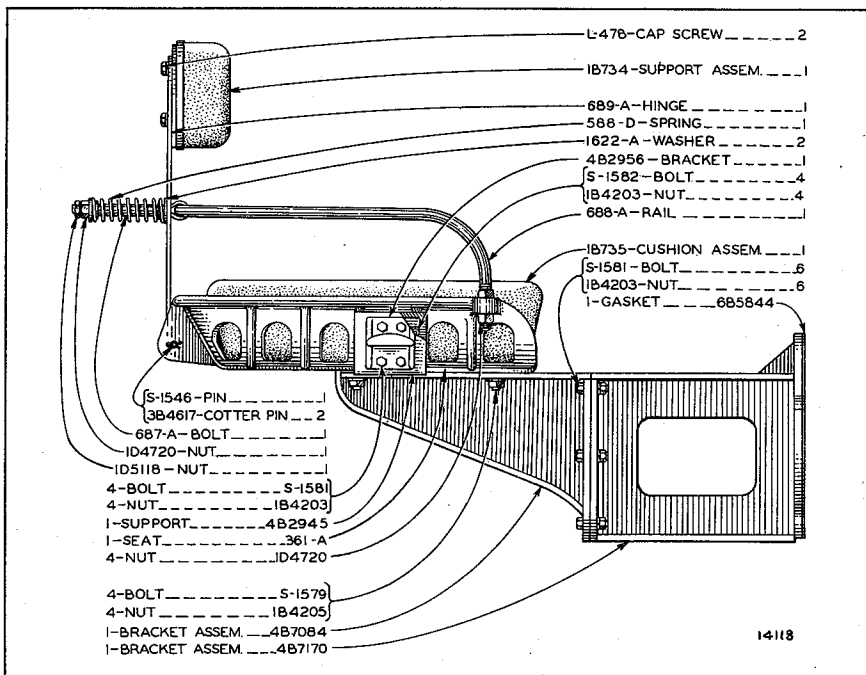

REAR SEAT

Part of 4B7336 Rear Seat Arrangement


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

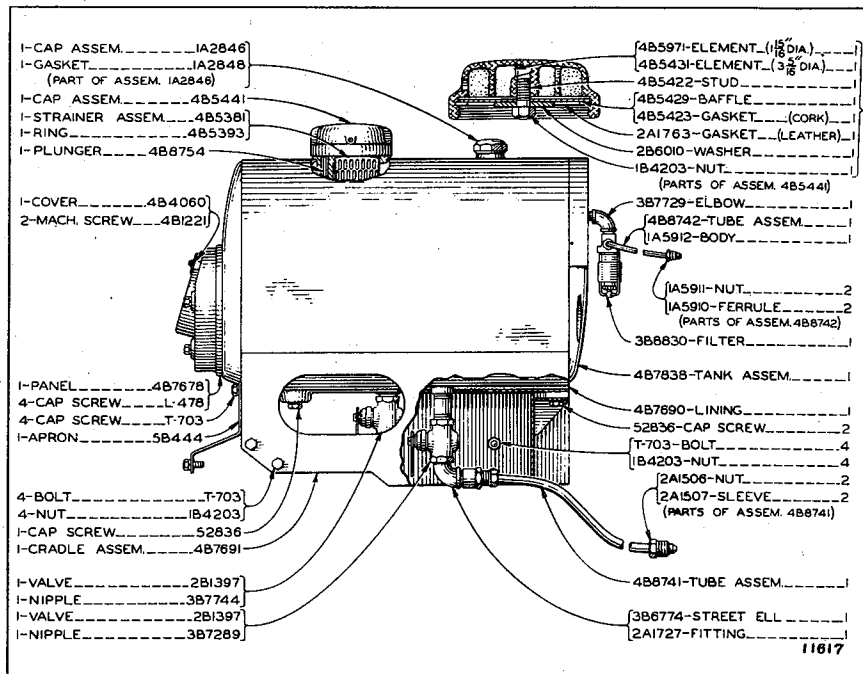

FUEL SYSTEM—First Type

Part of 4B7336 Rear Seat Arrangement

3B8830 Fuel Filter Assembly parts are shown on Page 80

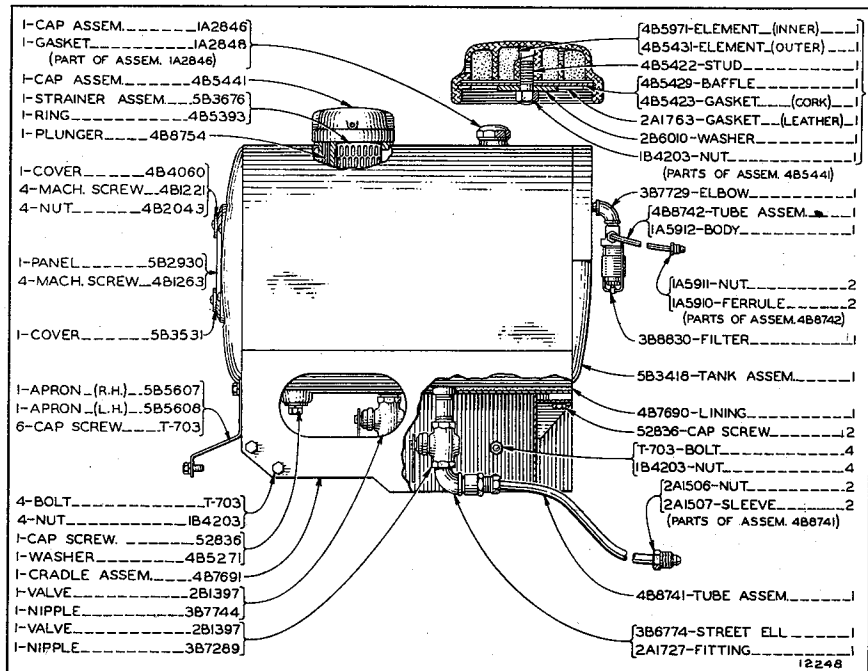


FUEL SYSTEM—Second Type

Part of 4B7336 Rear Seat Arrangement

3B8830 Fuel Filter Assembly parts are shown on Page 80


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

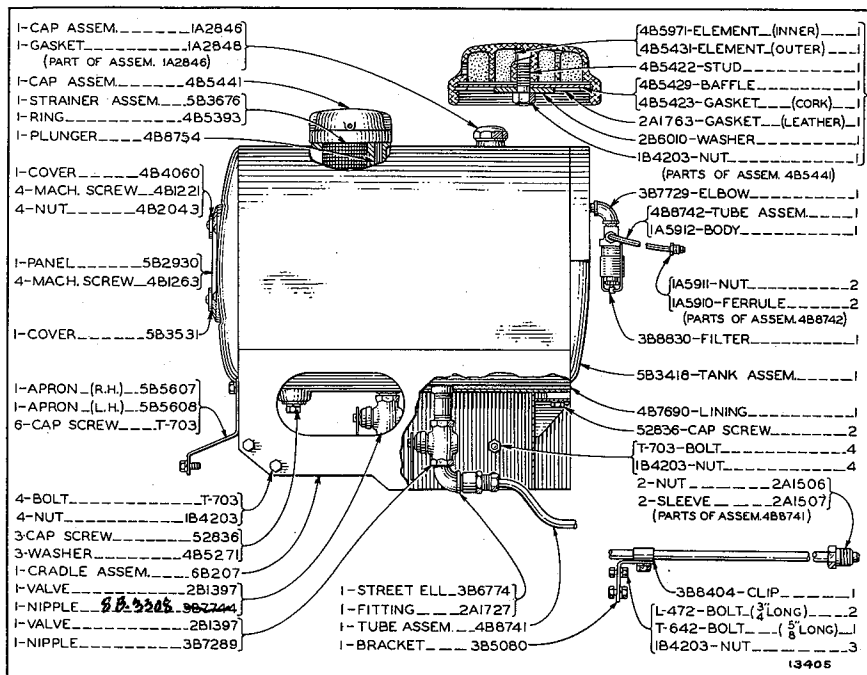

FUEL SYSTEM—Third Type

Part of 4B7336 Rear Seat Arrangement


3B8830 Fuel Filter Assembly parts are shown on Page 80

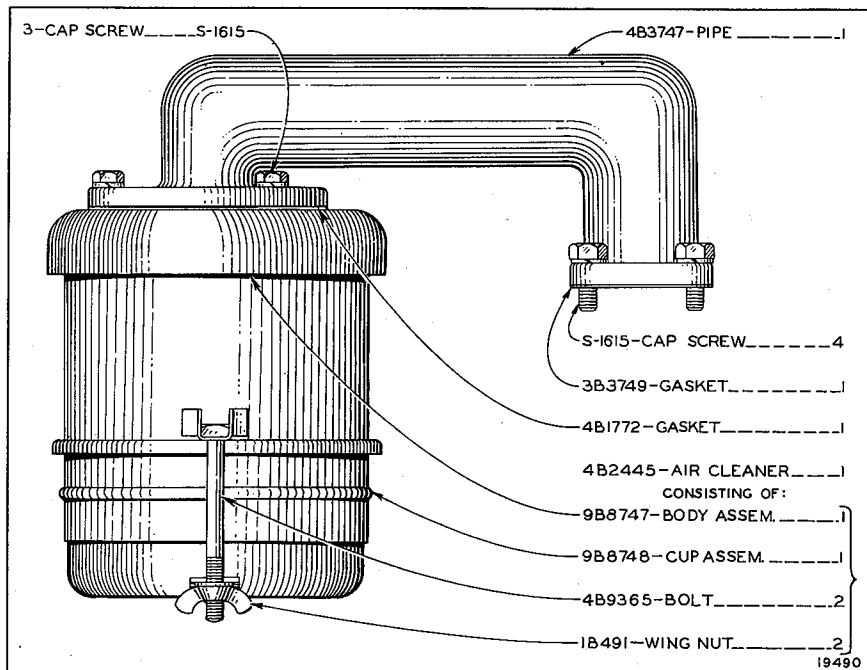

AIR CLEANER—Starting Engine

Part of 4B7336 Rear Seat Arrangement


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

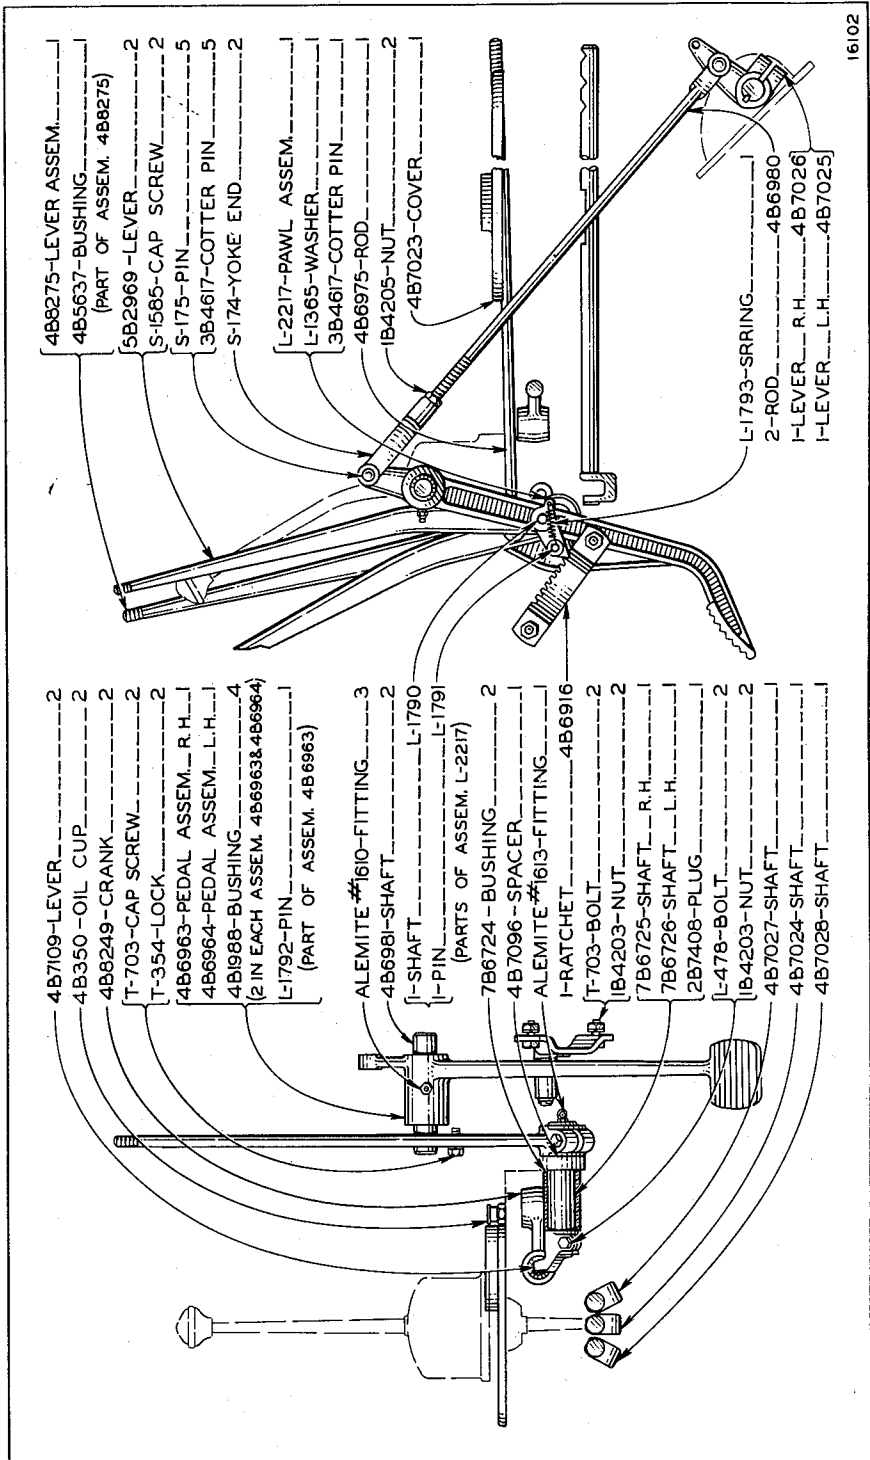


16102

CONTROLS

Part of 4B7336 Rear Seat Arrangement

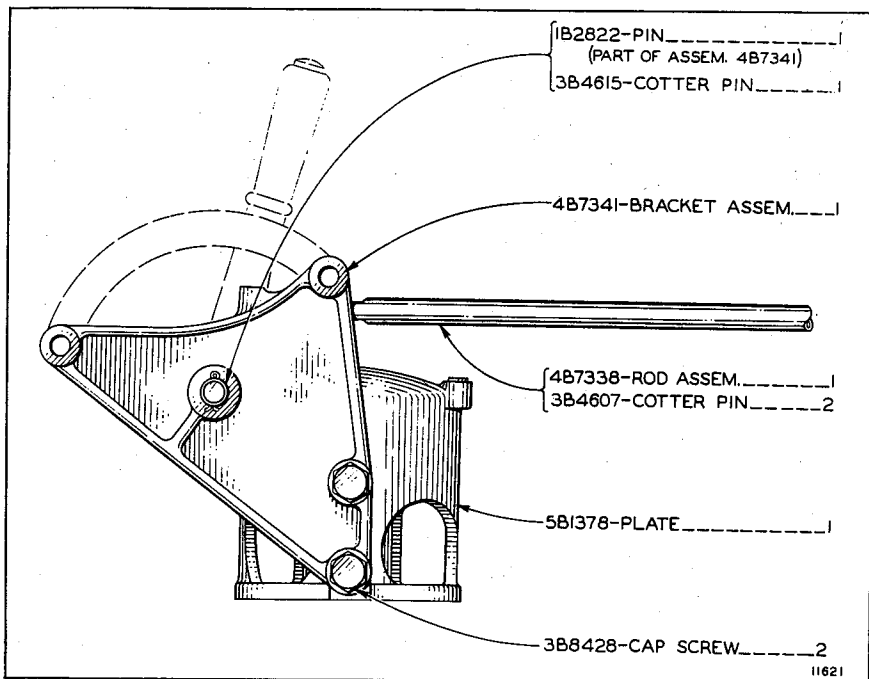


FUEL PUMP AND GOVERNOR CONTROL—First Type
Part of 4B7336 Rear Seat Arrangement

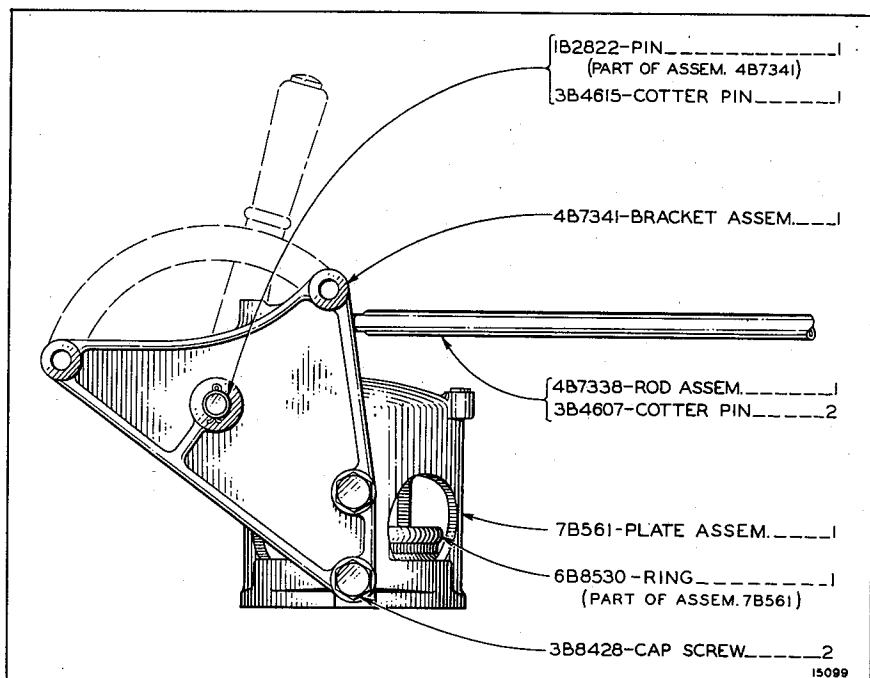


FUEL PUMP AND GOVERNOR CONTROL—Second Type
Part of 4B7336 Rear Seat Arrangement

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

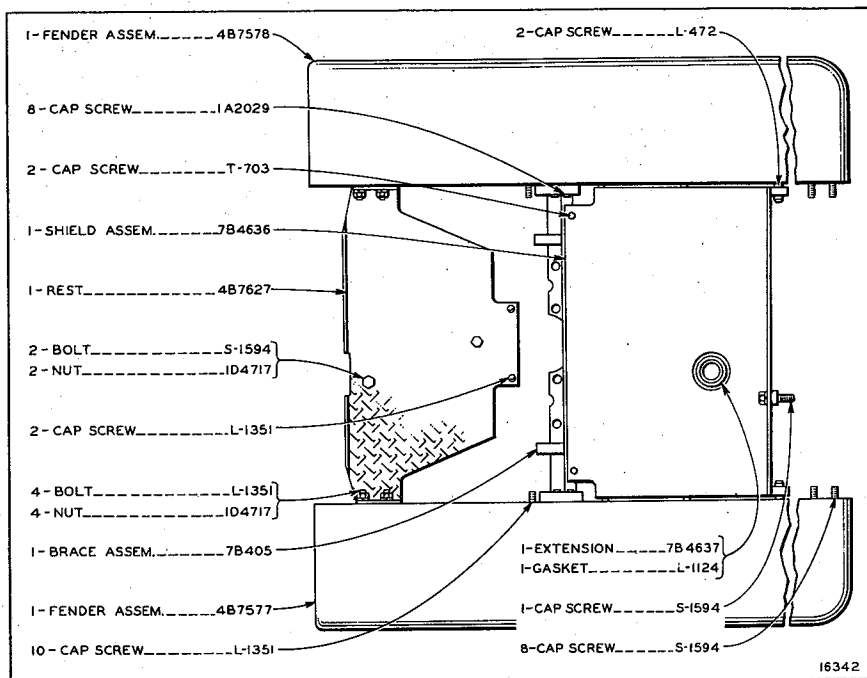

FENDERS—First Type


Part of 4B7336 Rear Seat Arrangement

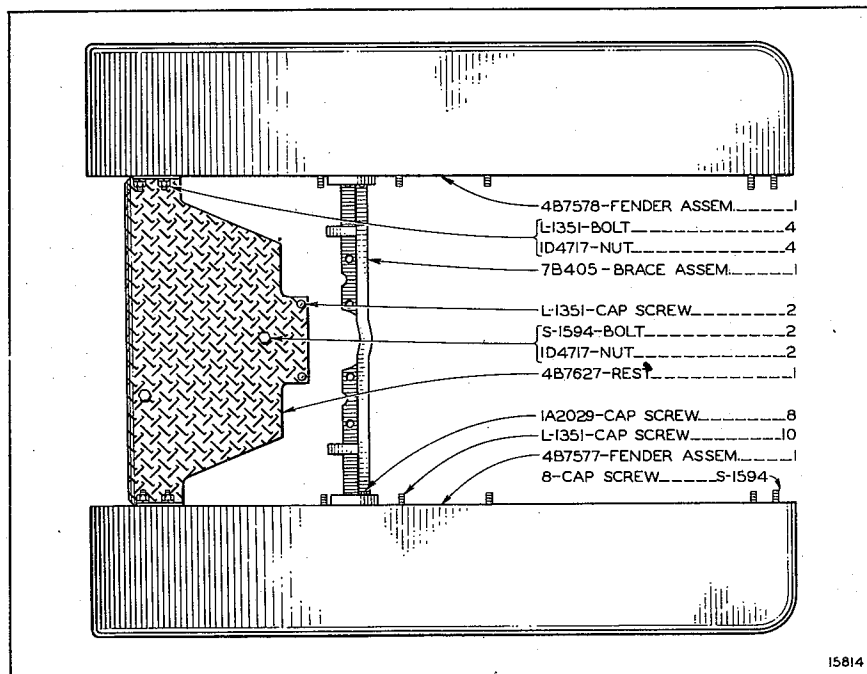


FENDERS—Second Type

Part of 4B7336 Rear Seat Arrangement

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

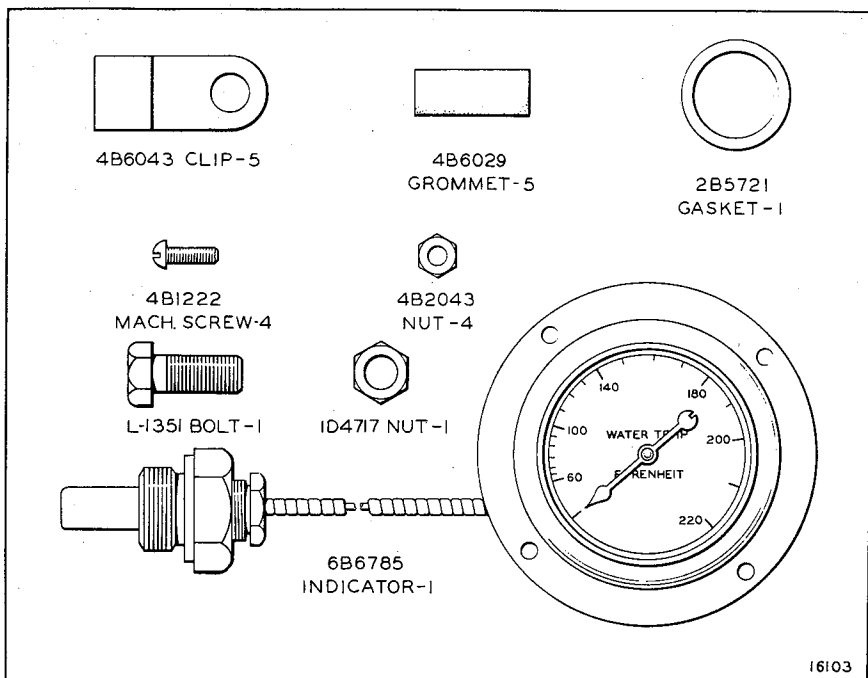
**HEAT INDICATOR**

Part of 4B7336 Rear Seat Arrangement

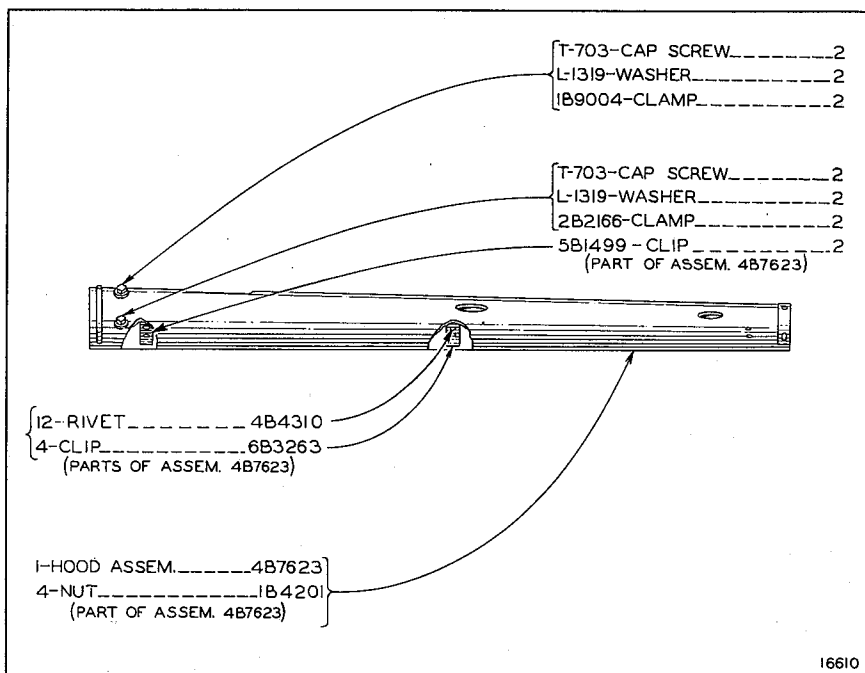**HOOD**

Part of 4B7336 Rear Seat Arrangement

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

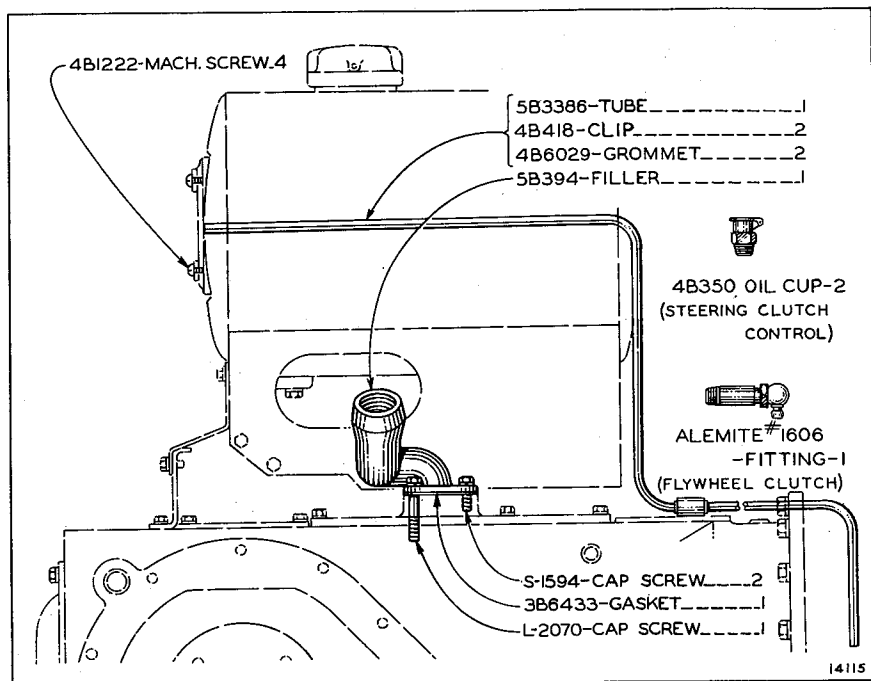


MISCELLANEOUS PARTS
Part of 4B7336 Rear Seat Arrangement

5B5050 Fender Mounted Tank Fuel System Arrangement


Consists of:

1	Fuel System Group	Page 148
1	Seat Group	" 148
1	Fender Group	" 149

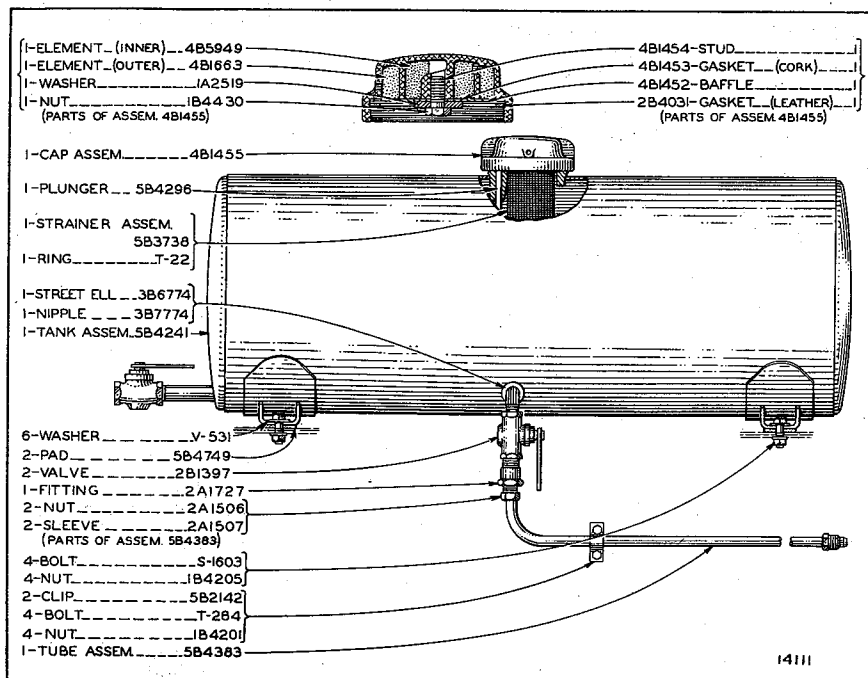

FUEL SYSTEM


Part of 5B5050 Fuel System Arrangement

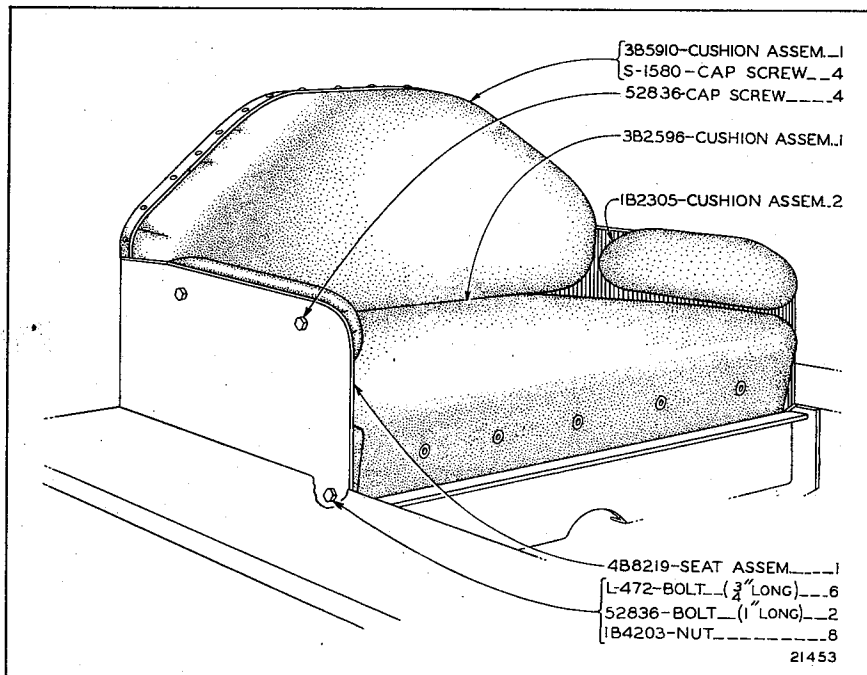

SEAT


Part of 5B5050 Fuel System Arrangement

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

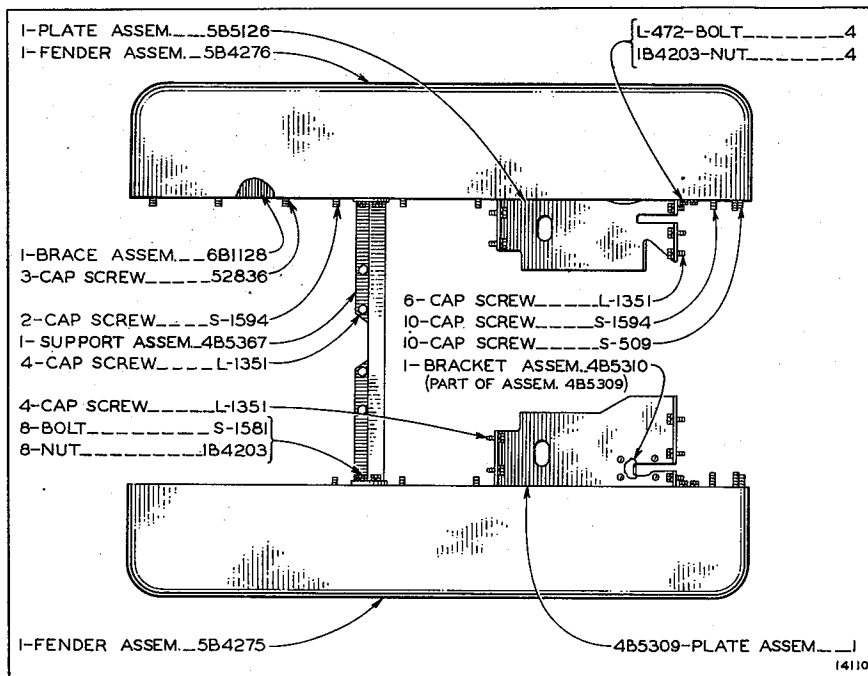

FENDERS—First Type


Part of 5B5050 Fuel System Arrangement

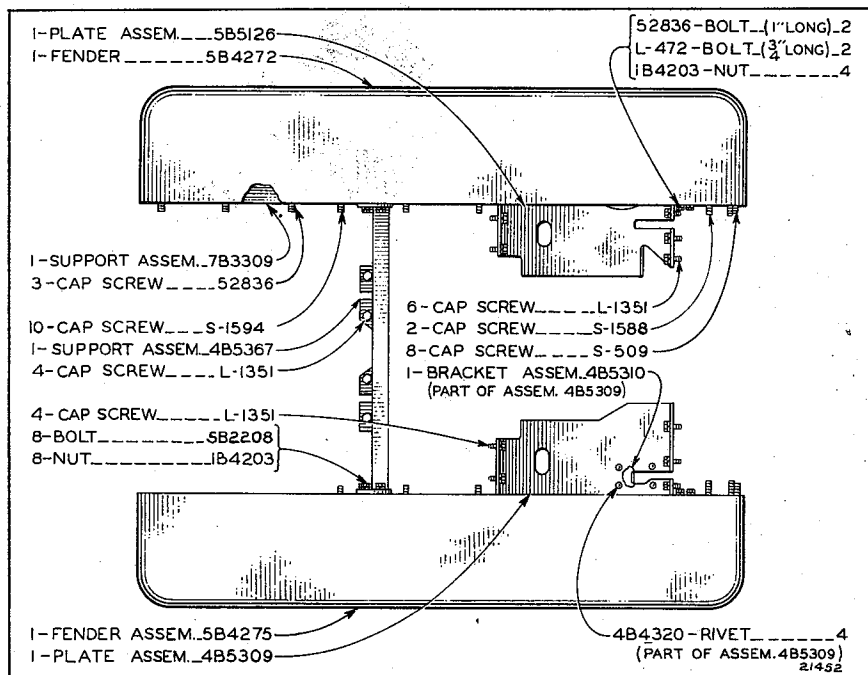

FENDERS—Second Type


Part of 5B5050 Fuel System Arrangement

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

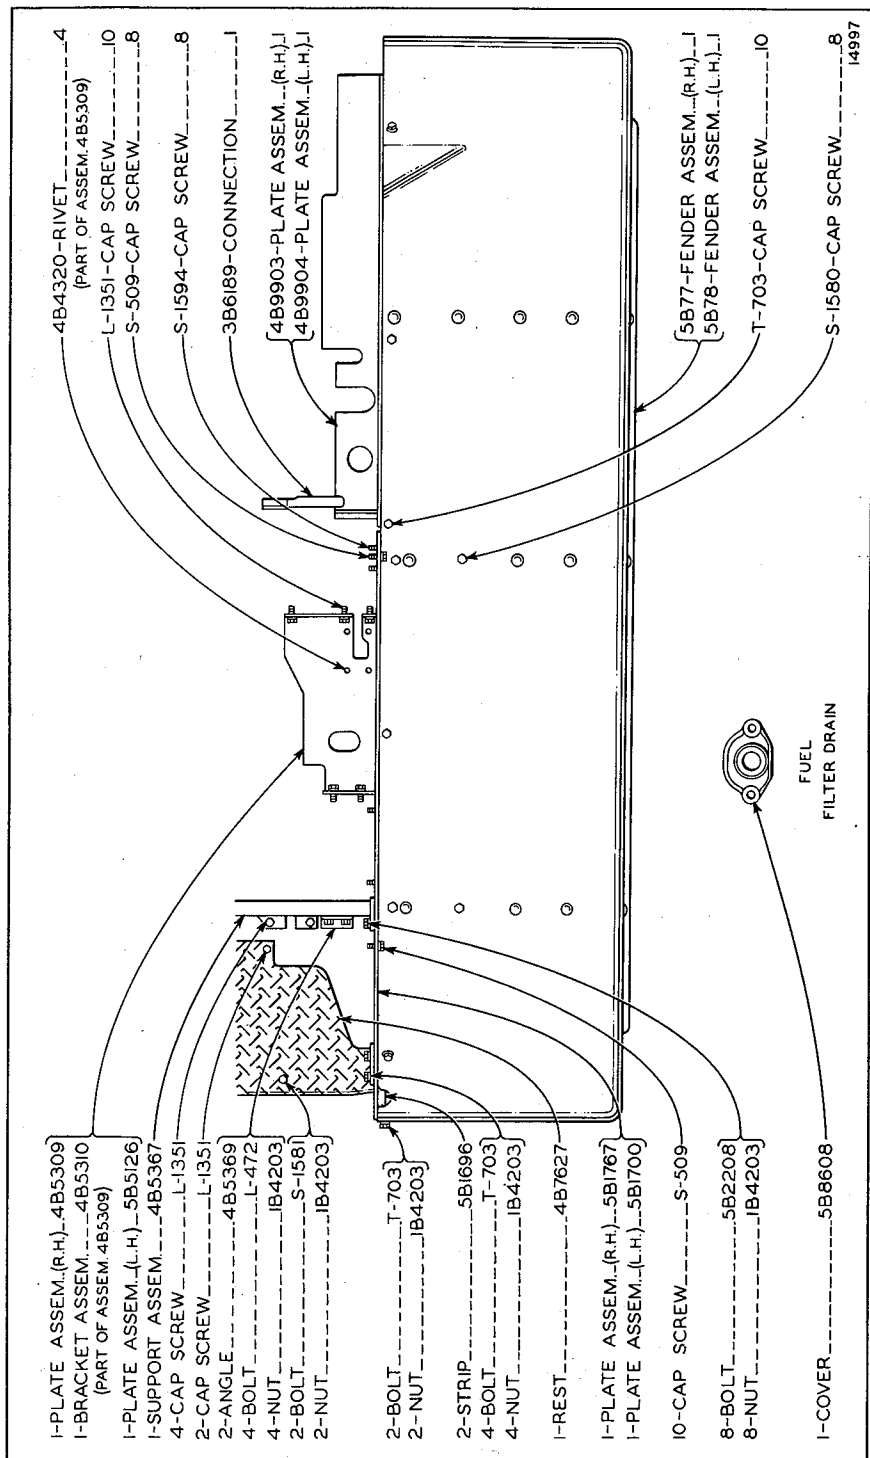


5B19 FENDER GROUP—Orchard Type


For use on Top Seat Tractors

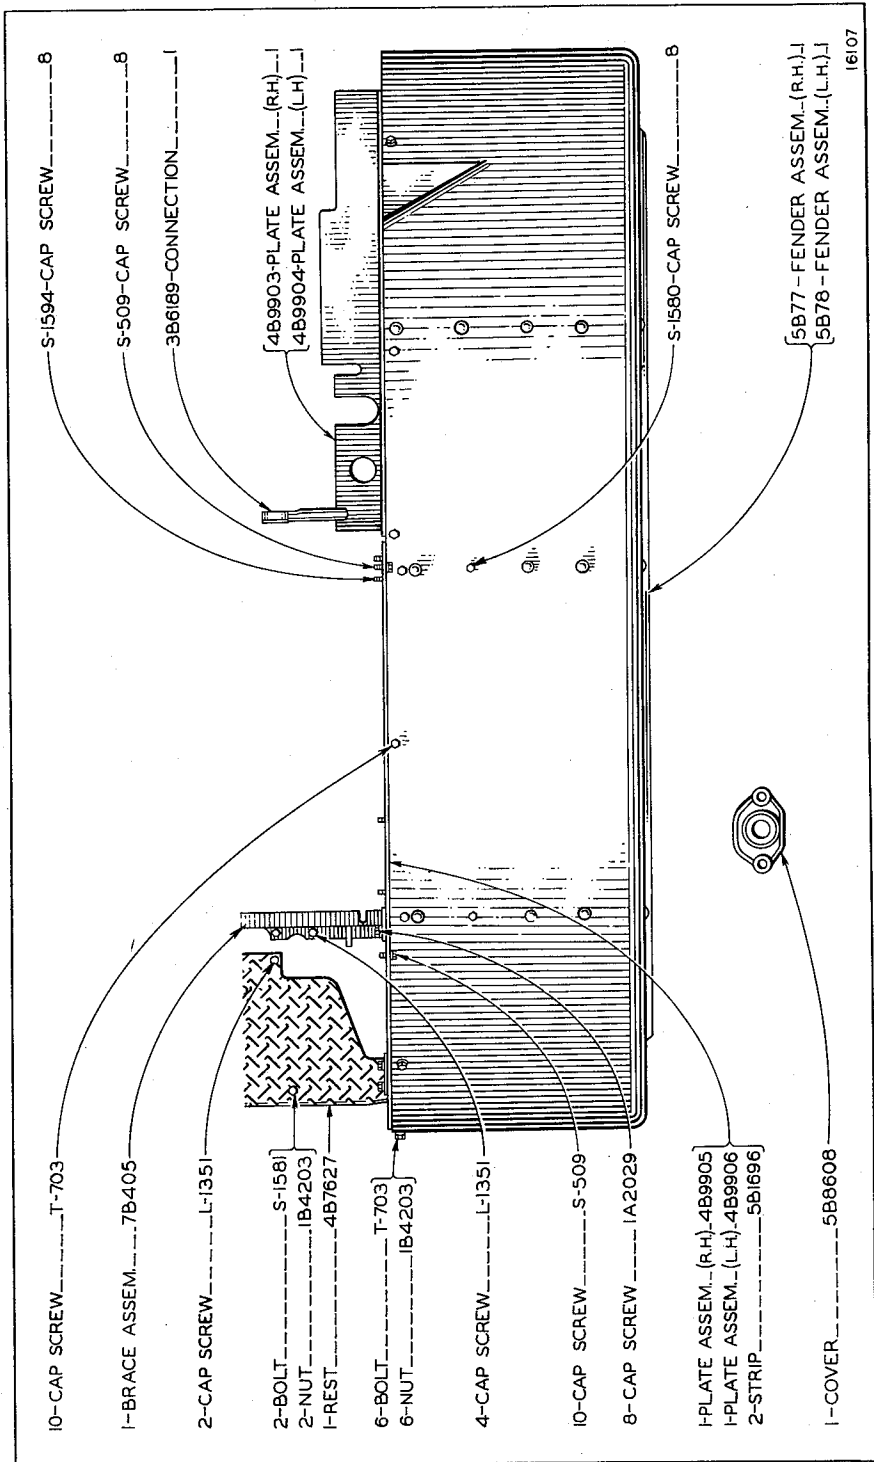

5820 FENDER GROUP—Orchard Type
For use on Rear Seat Tractors

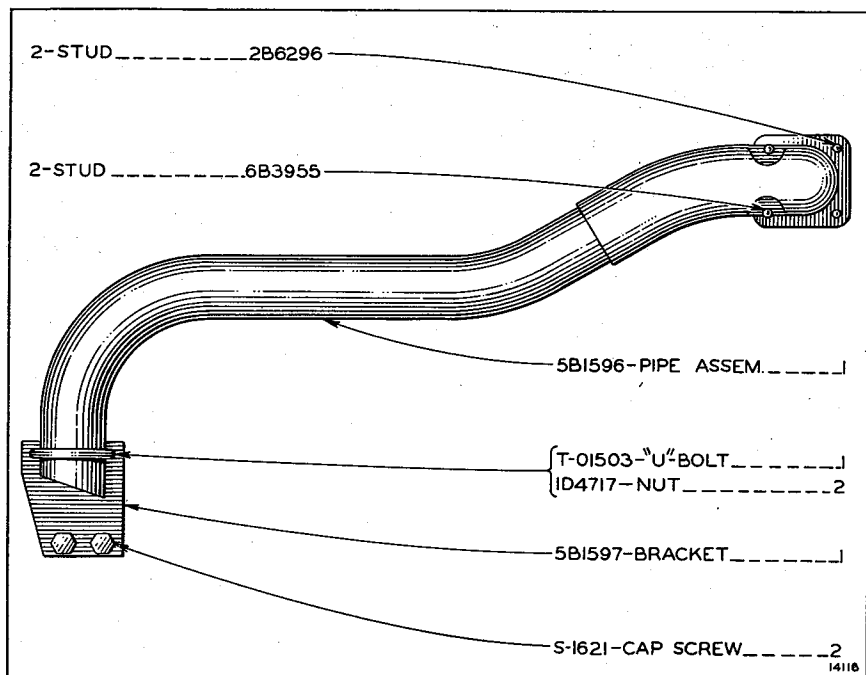


EXHAUST PIPE—Orchard Type

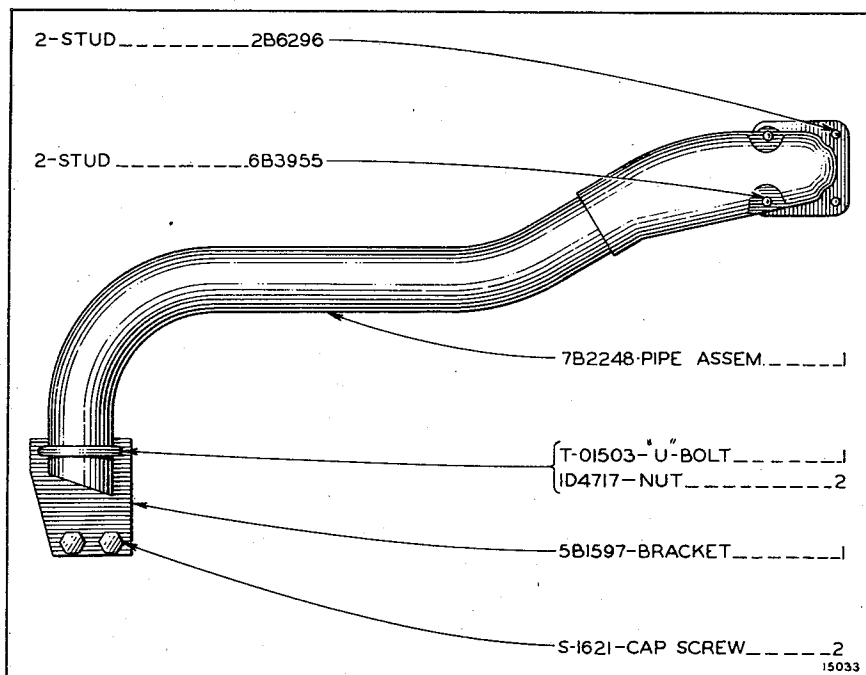


EXHAUST PIPE—Orchard Type

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

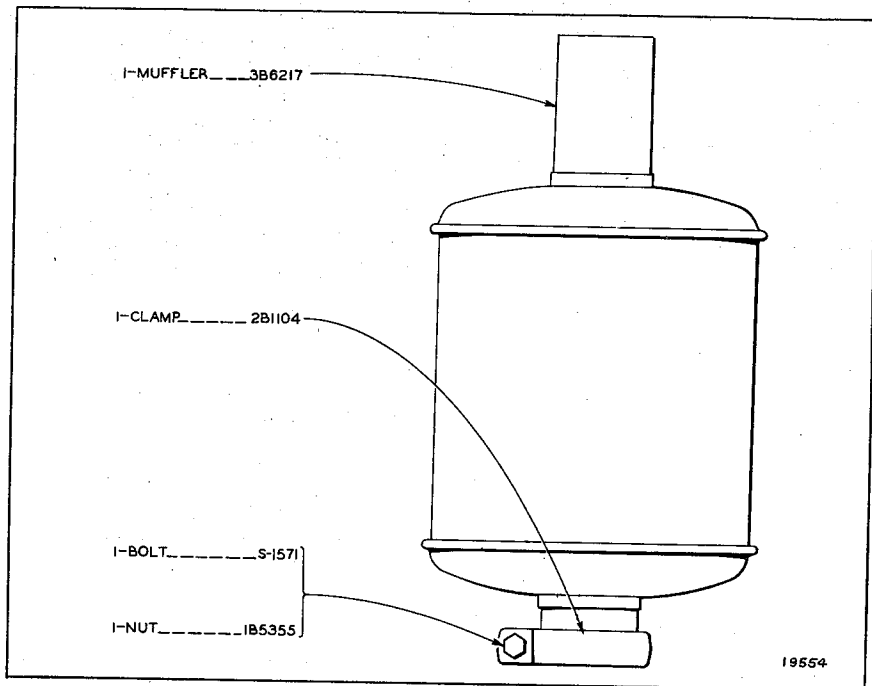


3B6232 MUFFLER GROUP

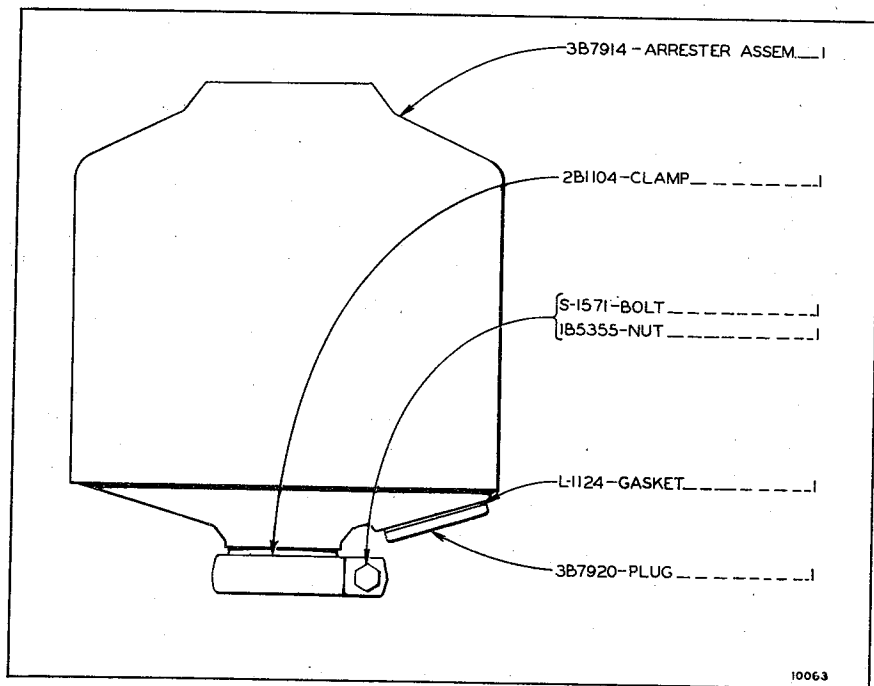


3B2655 SPARK ARRESTER GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

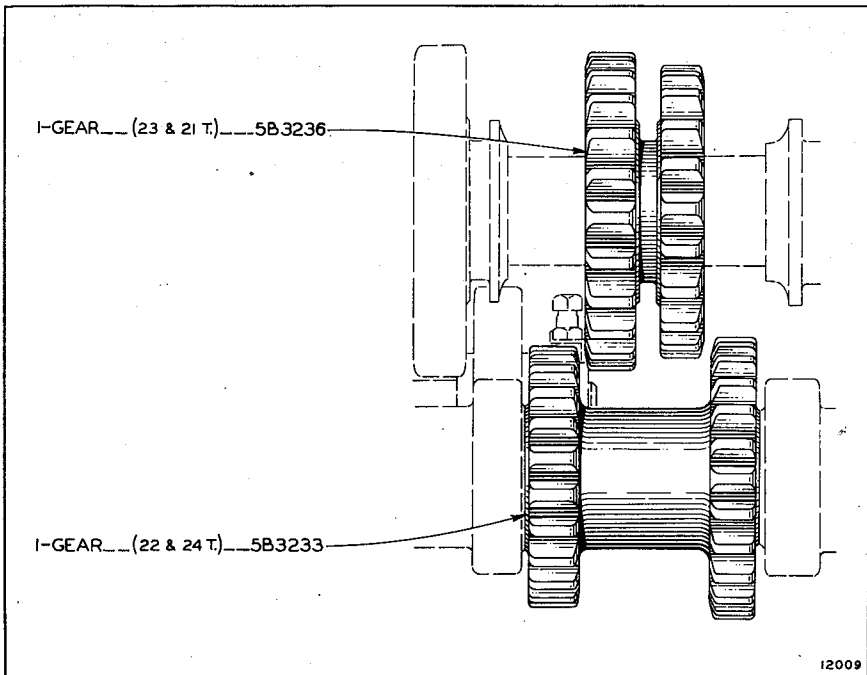

5B3235 SPECIAL THIRD AND FOURTH GEAR GROUP


This group provides the following speeds: Third—3.6 M.P.H. and Fourth—4.24 M.P.H.
Only separate parts serviced. When complete group is required order 5B5024.

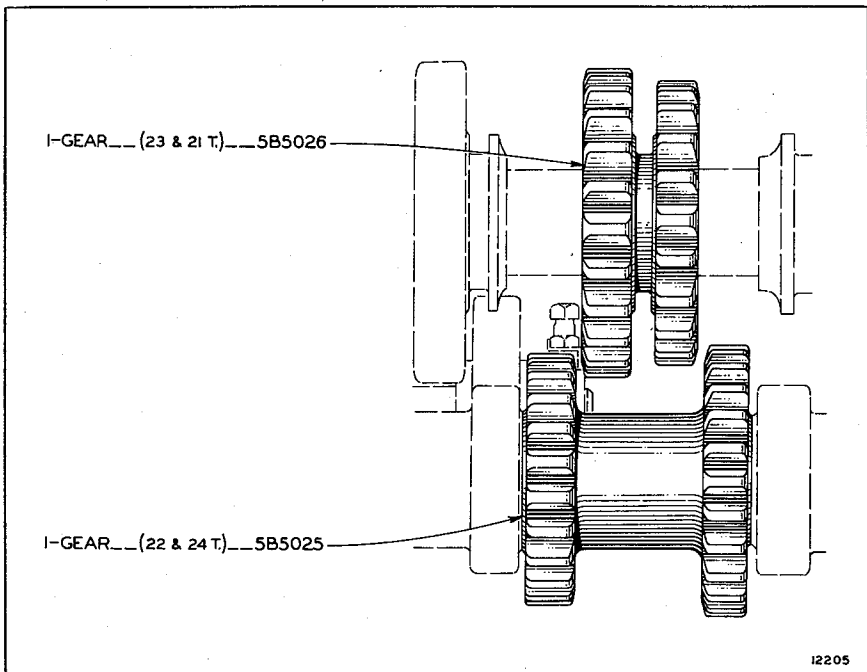


5B5024 SPECIAL THIRD AND FOURTH GEAR GROUP

This group provides the following speeds: Third—3.6 M.P.H. and Fourth—4.24 M.P.H.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

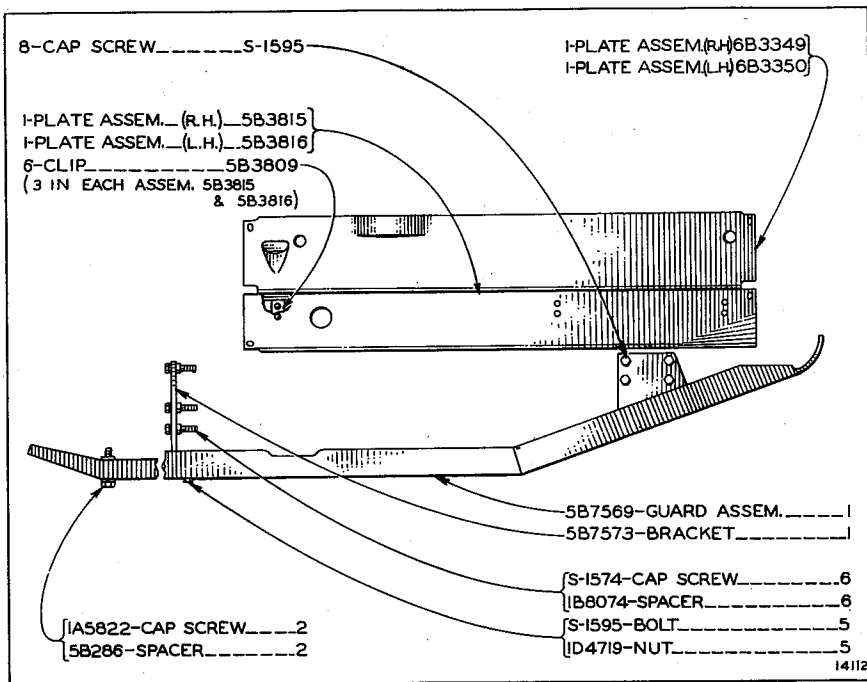
**5B3810 CRANKCASE GUARD**

Only separate parts serviced. When complete group is required order 8B7342

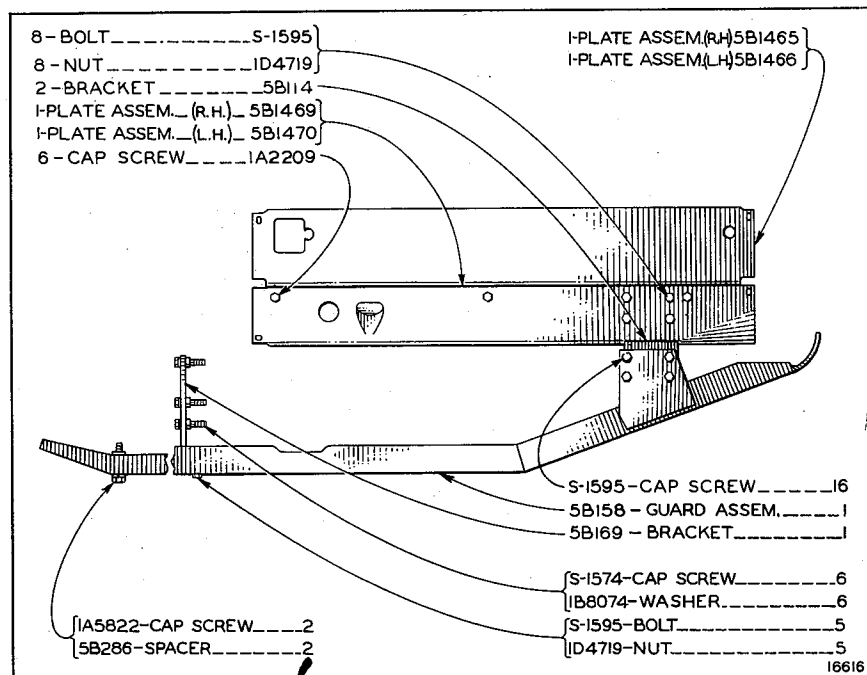
**4B7964 CRANKCASE GUARD**

Only separate parts serviced. When complete group is required order 8B7342

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

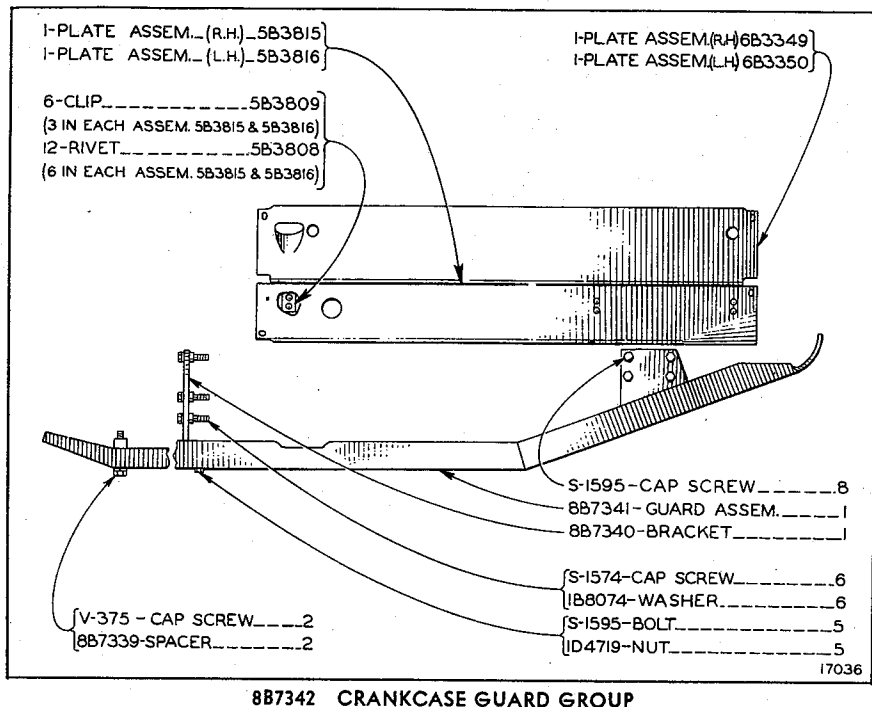


8B7342 CRANKCASE GUARD GROUP

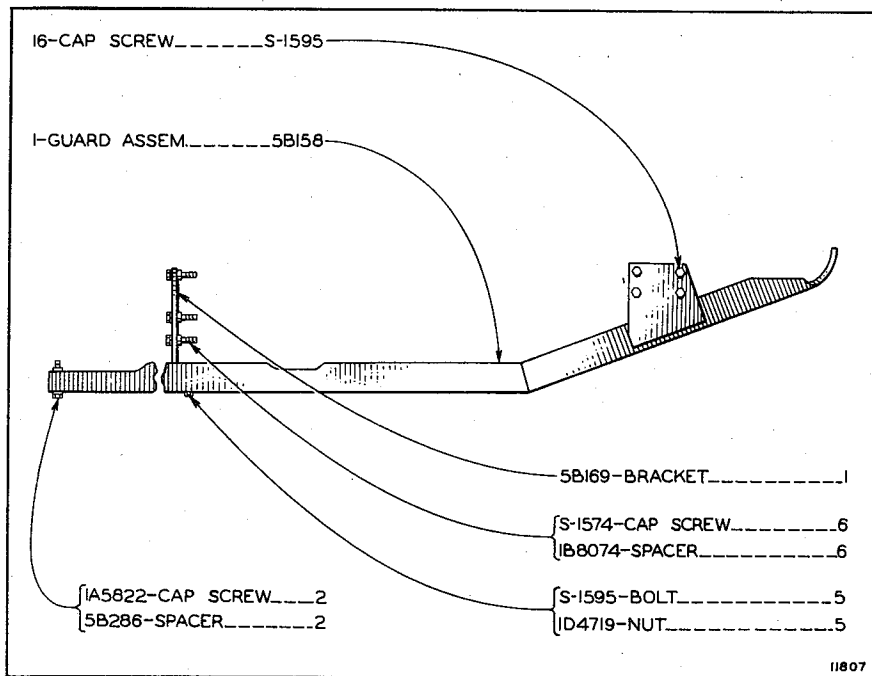

5B1570 CRANKCASE GUARD GROUP


For use with Front Bumper or Radiator Guard

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

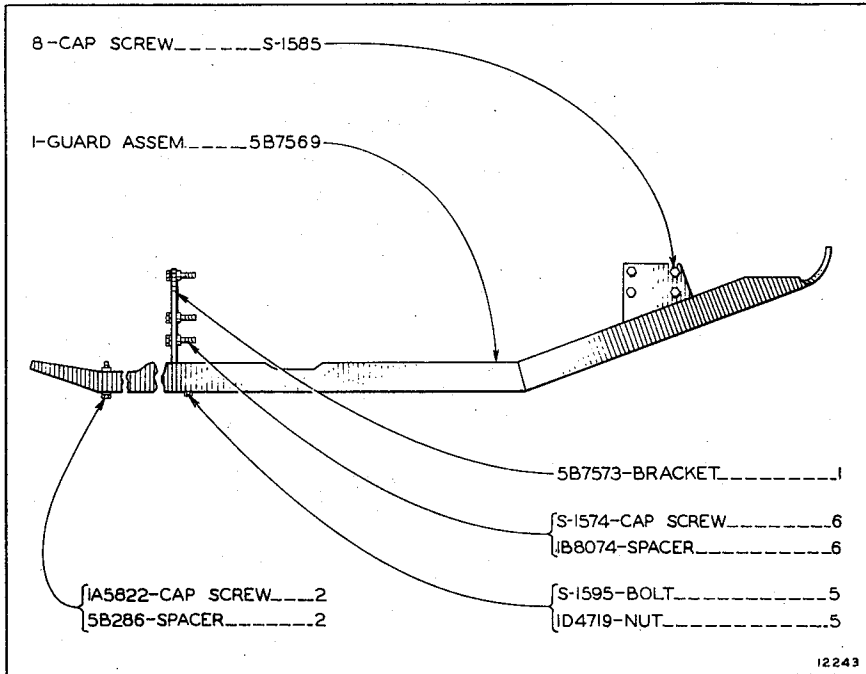**5B3825 CRANKCASE GUARD**


For use with Front Bumper or Radiator Guard

Only separate parts serviced. When complete group is required order 8B7343

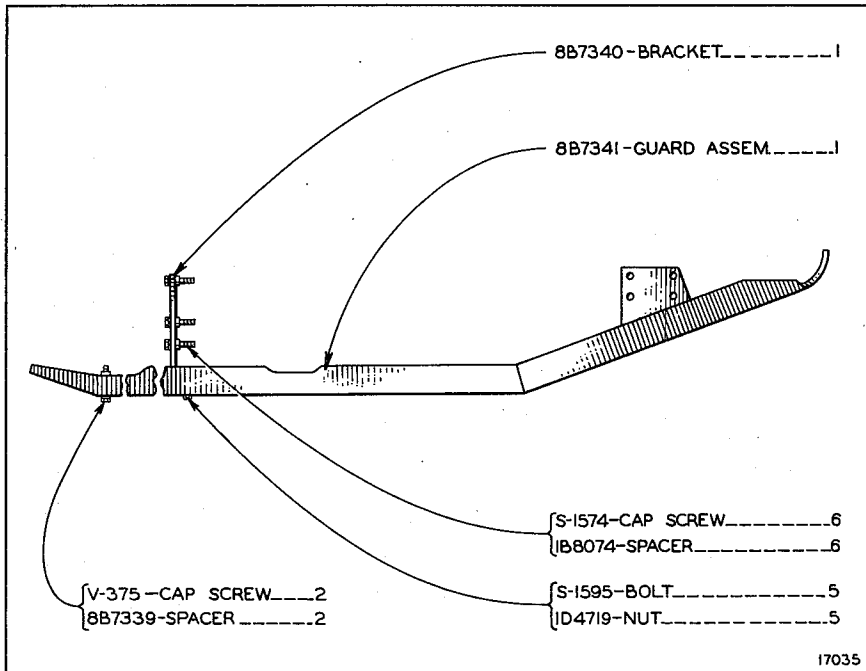**8B7343 CRANKCASE GUARD GROUP**


For use with Front Bumper or Radiator Guard

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

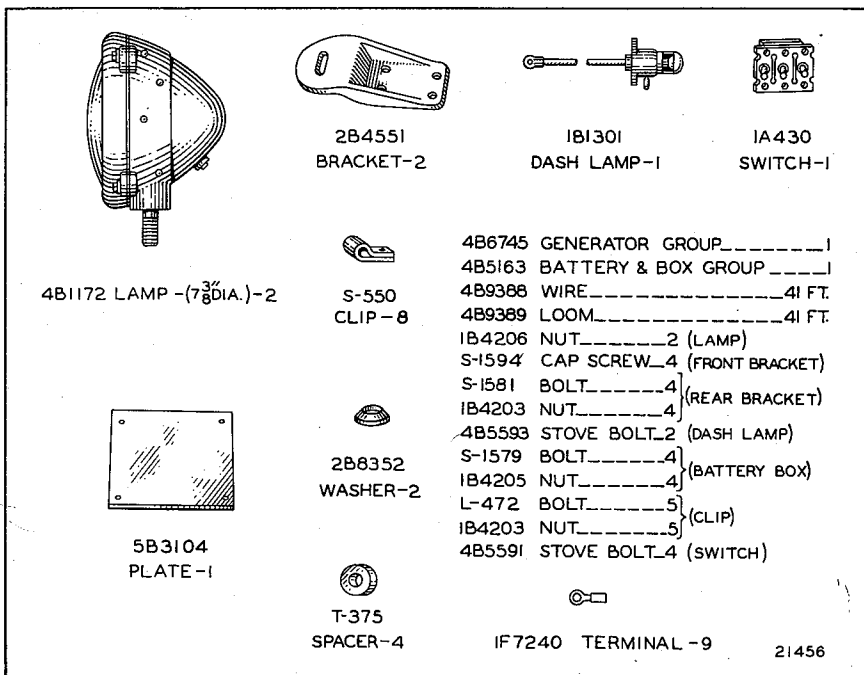**487974 LIGHTING SYSTEM GROUP—For use with Battery, without Cab**

4B6745 Generator Group is shown on Page 160.


4B5163 Battery and Box Group is shown on Page 162-163

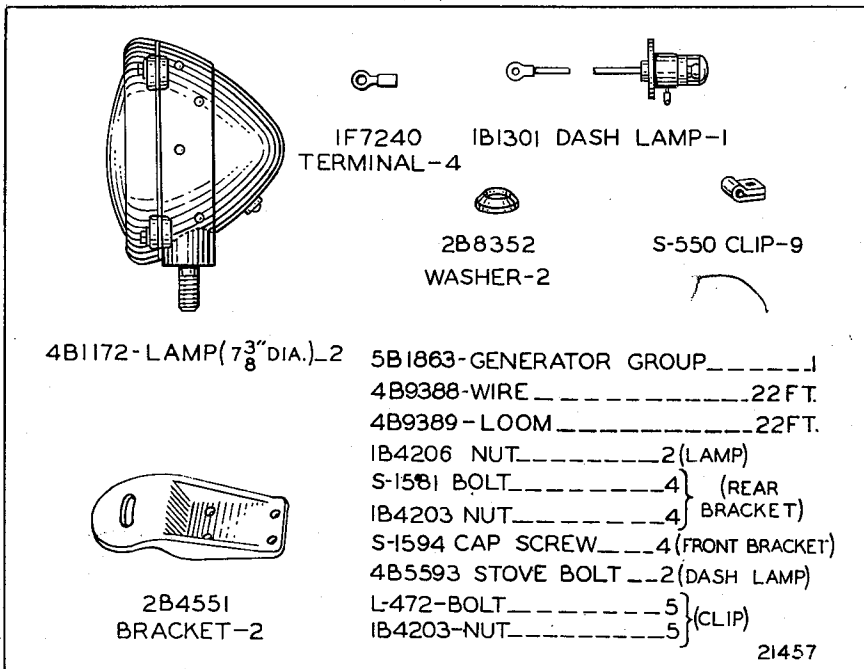**487975 LIGHTING SYSTEM GROUP—For use without Battery, without Cab**


5B1863 Generator Group is shown on Page 161

Before 159

3-15-47

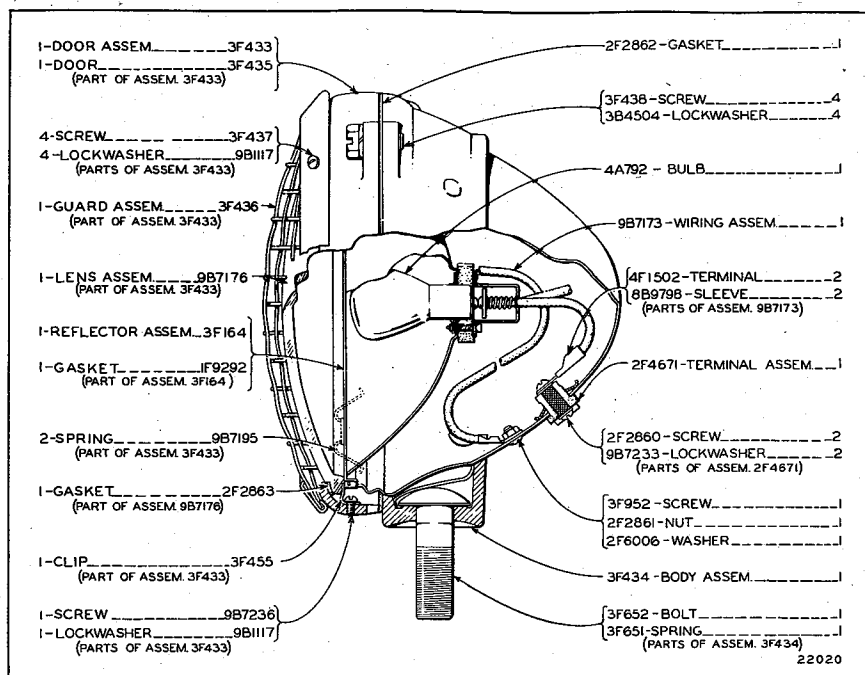

2F9300 HEAD LAMP

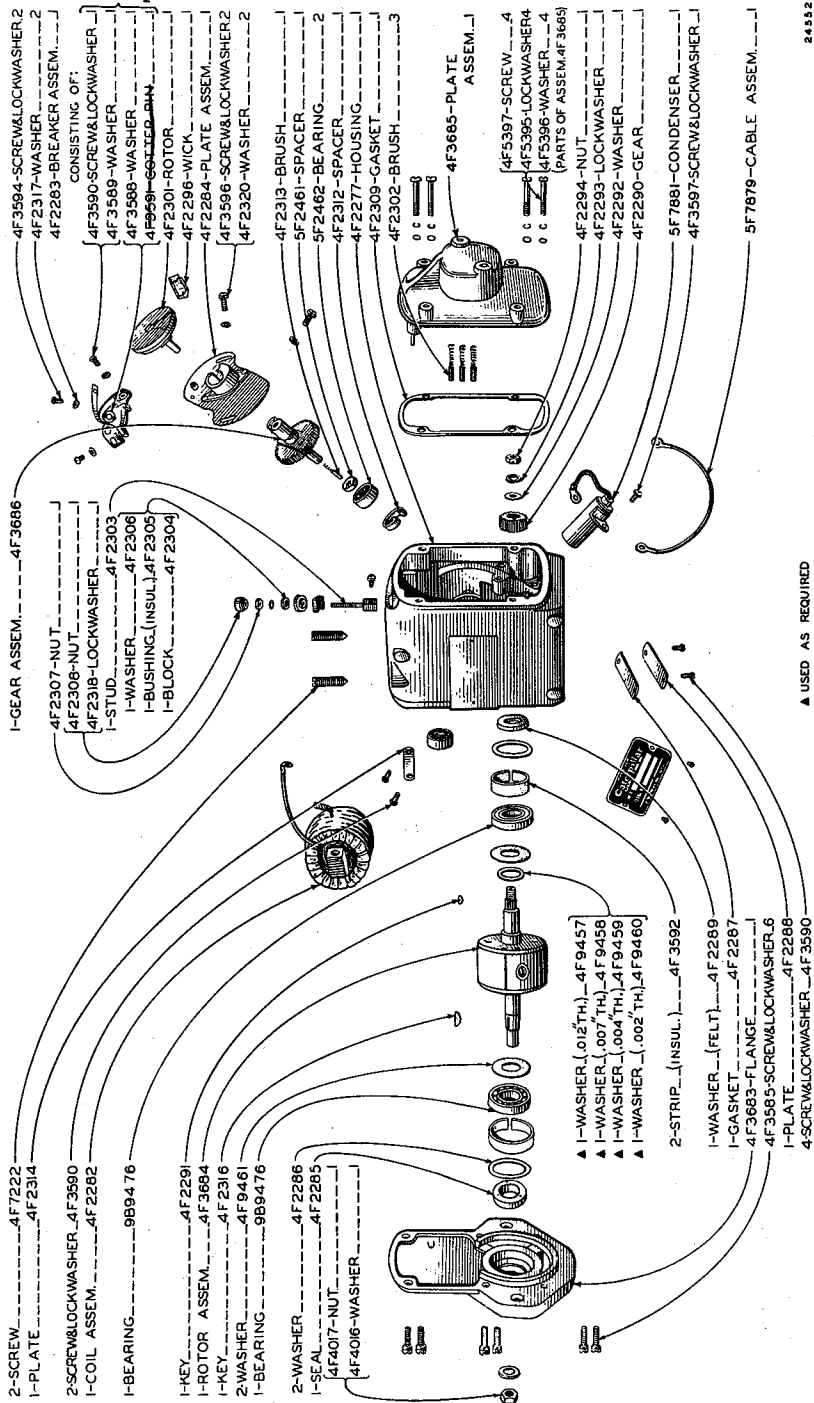4364 Spring
Ring

▲ USED AS REQUIRED

24352

5F7492 MAGNETO (Replaces 3F8572)



W-423 BRACKET-1



4B9232
CLIP - 8



3F7747
CONNECTOR - 3



1B3310
WASHER - 4



IF7240
TERMINAL-9



 
2B8352
WASHER - 2



T-375
SPACER-4



S-550
CLIP-6




2B6186 BRACKET-2

4B6745-GENERATOR GROUP-----1
 4B5163-BATTERY & BOX GROUP-----1
 4B9388-WIRE-----52 FT.
 4B9389-LOOM-----52 FT.


1B4206-NUT-----2	LAMP
3B4510-LOCKWASHER-----2	
ID4683-BOLT-($\frac{3}{8}$ " x 3")-----4	
ID4717-NUT-----4	
3B4506-LOCKWASHER-----4	LAMP BRACKET
2B9368-BOLT-($\frac{5}{16}$ " x 5 $\frac{1}{4}$ ")-----4	
ID4716-NUT-----4	
3B4505-LOCKWASHER-----4	
S-1584-BOLT-----4	BATTERY BOX
1B4205-NUT-($\frac{1}{2}$ " x $\frac{13}{16}$ ")-----4	
3B4508-LOCKWASHER-----4	
L-472-BOLT-($\frac{3}{8}$ " x 2")-----4	
1B4203-NUT-----4	CLIP
3B4506-LOCKWASHER-----4	
4B5591-STOVE BOLT-----4	SWITCH
4B5593-STOVE BOLT-----2	DASH LAMP
3B4501-LOCKWASHER-----2	



 
IA430 SWITCH-1



1B1301
DASH LAMP-1

 

2B9375
TAIL LAMP-1

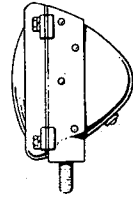

4B1172
LAMP - 2

21459

4B7972 LIGHTING SYSTEM GROUP—For use with Battery, with Cab

4B6745 Generator Group is shown on Page 160.

4B5163 Battery and Box Group is shown on Page 162-163




4B9232
CLIP - 13



S-550
CLIP - 2



 IF7240
TERMINAL- 4



2B6186 BRACKET-2



2B8352
WASHER - 2




3F7747
CONNECTOR - 4




W-423 BRACKET-1

5B1863-GENERATOR GROUP-----1
 3B9388-WIRE-----39 FT.
 3B9389-LOOM-----39 FT.


1B4206-NUT-----2	(LAMP)
3B4510-LOCKWASHER-----2	
ID4683-BOLT-($\frac{3}{8}$ " x 3")-----4	
ID4717-NUT-----4	
3B4506-LOCKWASHER-----4	(LAMP BRACKET)
2B9369-BOLT-($\frac{5}{16}$ " x 5 $\frac{3}{4}$ ")-----4	
ID4716-NUT-----4	
3B4505-LOCKWASHER-----4	
S-1581-BOLT-----2	(CLIP)
1B4203-NUT-----2	
3B4506-LOCKWASHER-----2	(DASH LAMP)
4B5593-STOVE BOLT-----2	
3B4501-LOCKWASHER-----2	

 

1B1301
DASH LAMP-1

 

2B9375
TAIL LAMP-1



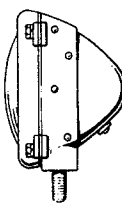


4B1172
LAMP - 2

21458

4B7973 LIGHTING SYSTEM GROUP—For use without Battery, with Cab

  5B1863 Generator Group is shown on Page 161

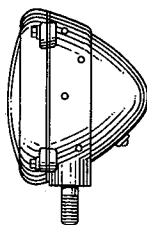4B1172 LAMP (7 $\frac{3}{8}$ " DIA.)-42B8352
WASHER-42B4551
BRACKET-4IF7240
TERMINAL-6S-550
CLIP-15IB1301
DASH LAMP-1

5B4248 GENERATOR GROUP_____1

4B9388 WIRE_____34 FT.


4B9389 LOOM_____34 FT.

S-1594 CAP SCREW____8 (FRONT LAMP
BRACKET)S-1581 BOLT____8 (REAR LAMP
BRACKET)
IB4203 NUT____8L-472 BOLT____5 (CLIP)
IB4203 NUT____5


4B5593 STOVE BOLT____2 (DASH LAMP)

IB4206 NUT____4 (LAMP)

21460

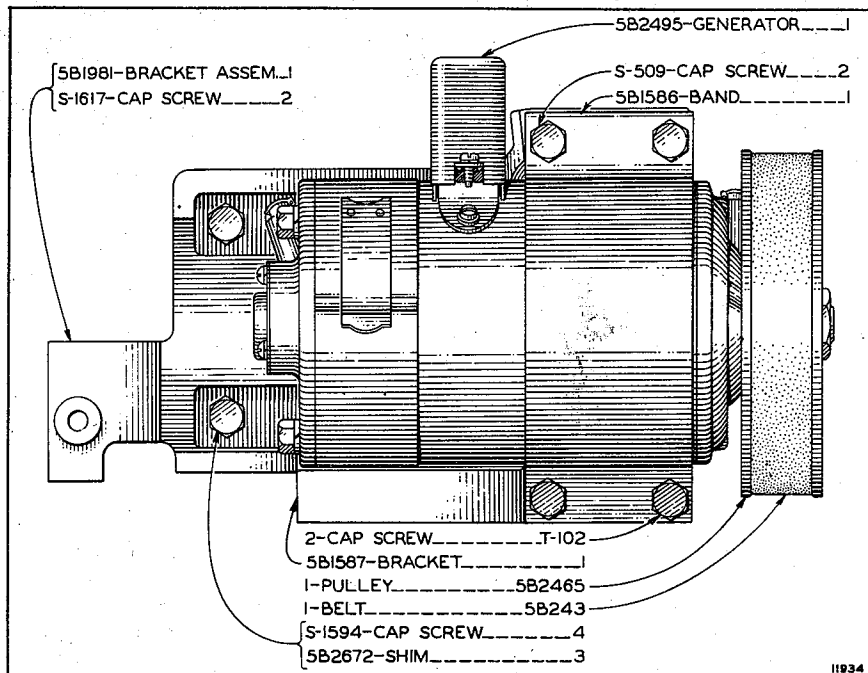
5B3947 LIGHTING SYSTEM GROUP4 Lights, 130 Watts—For use without Battery, without Cab
5B4248 Generator Group is shown on Page 1624B6745 GENERATOR GROUP—6 Volt, 75 Watt
For use with Battery

11934

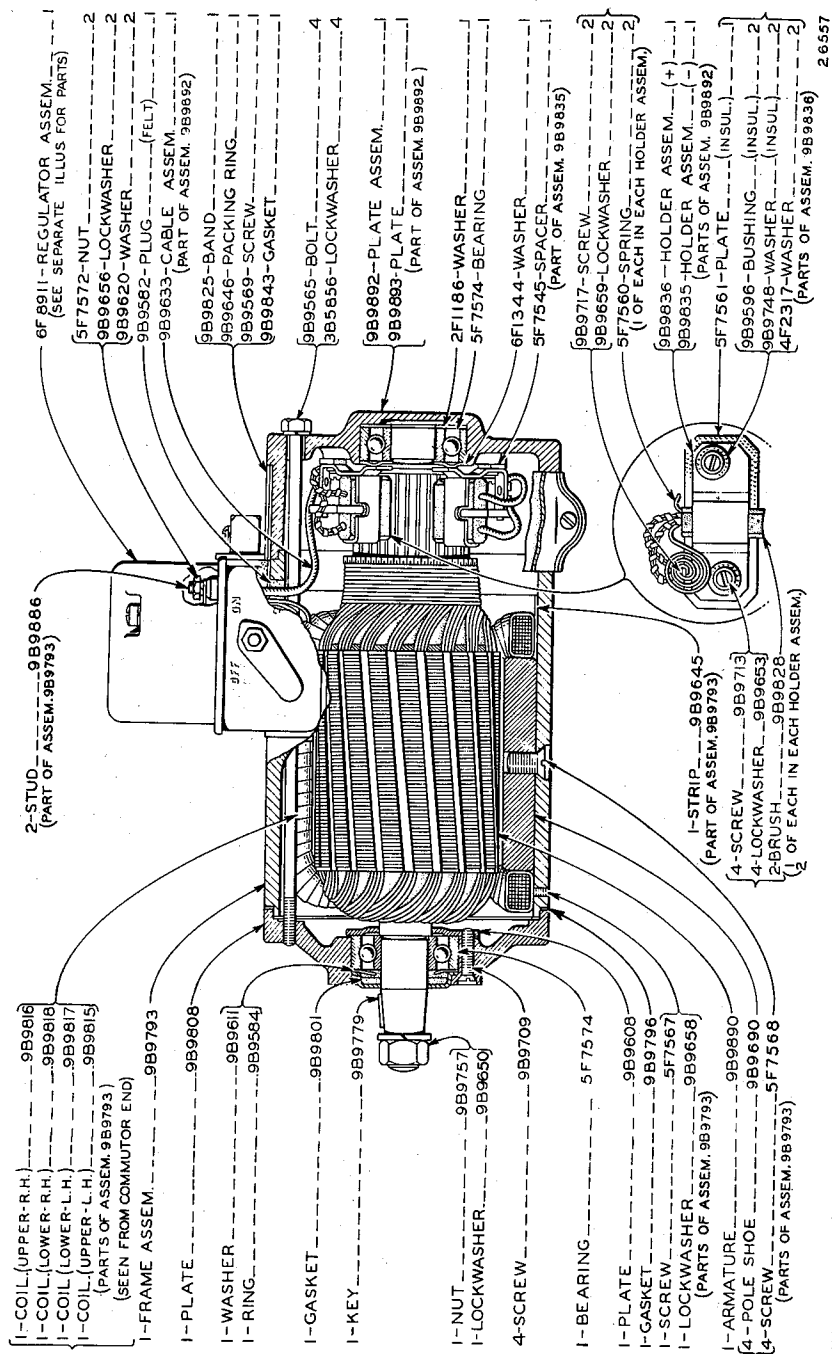


4F1321 GENERATOR

6F8911 Regulator Assembly parts are shown on reverse side of insert

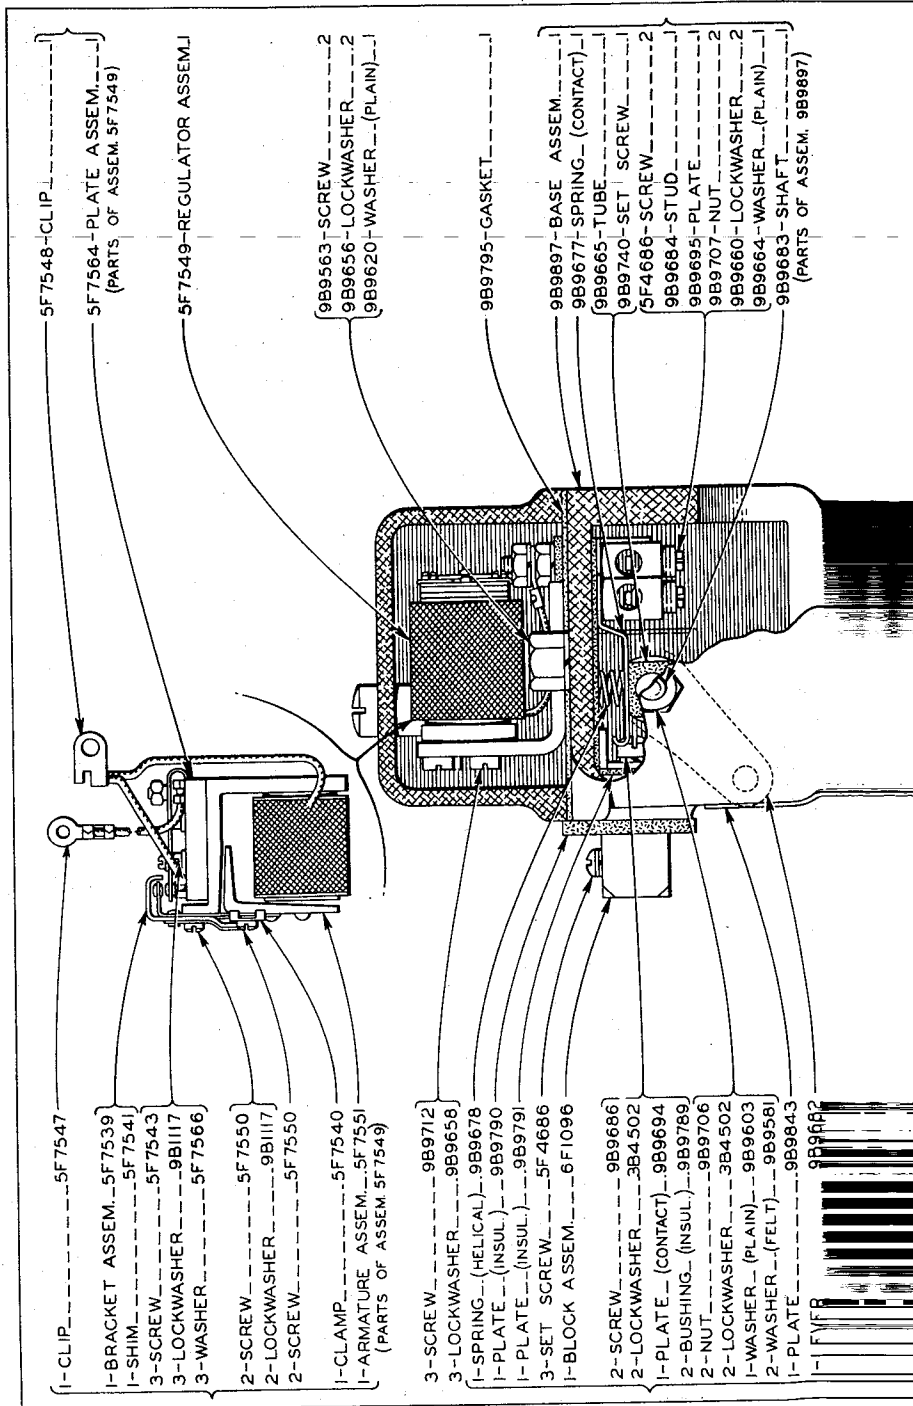

9B9689 REGULATOR ASSEMBLY
Part of 7B8347 Generator

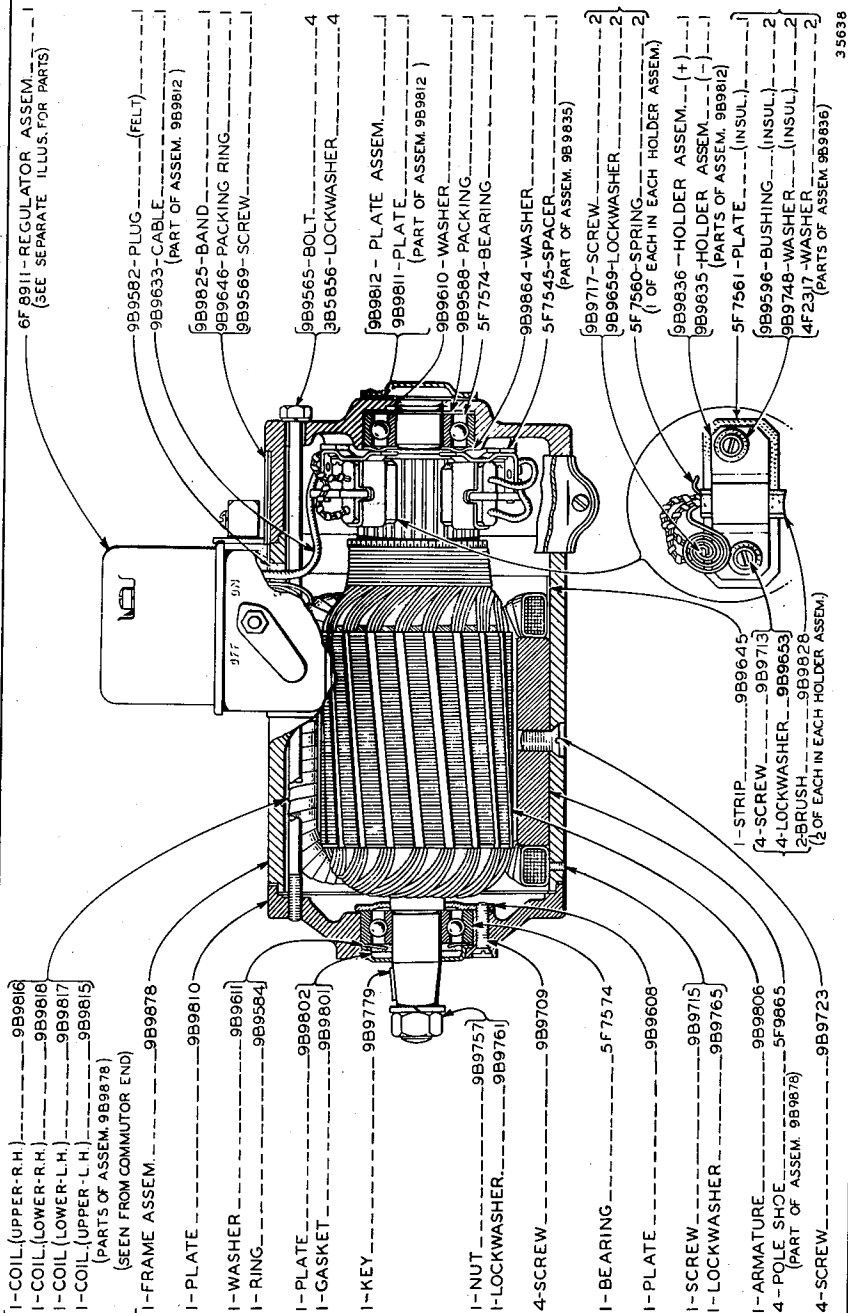
**5B4247 GENERATOR**

Part of 5B4248 Generator Group shown on Page 162

6F8911 Regulator Assembly parts are shown on insert

Only separate parts serviced. When complete Generator is required order 4F1321 shown on insert


INSERT BETWEEN PAGES 160 & 161 IN FORM 9202—PARTS CATALOG FOR D2 TRACTOR—50 INCH GAUGE

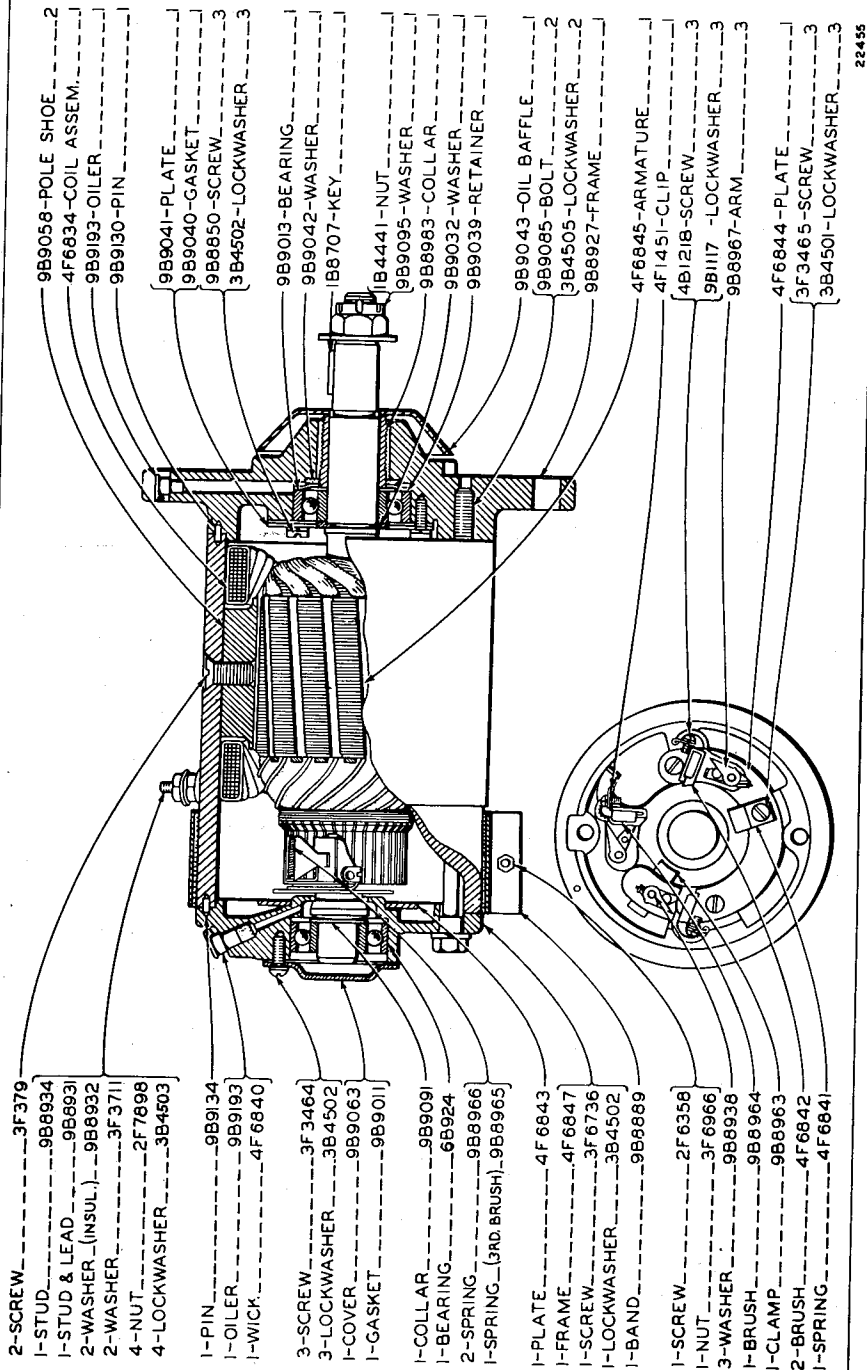

22455

4F89 GENERATOR

Only separate parts serviced. When complete Generator is required, order 9F4992 shown on reverse side of insert

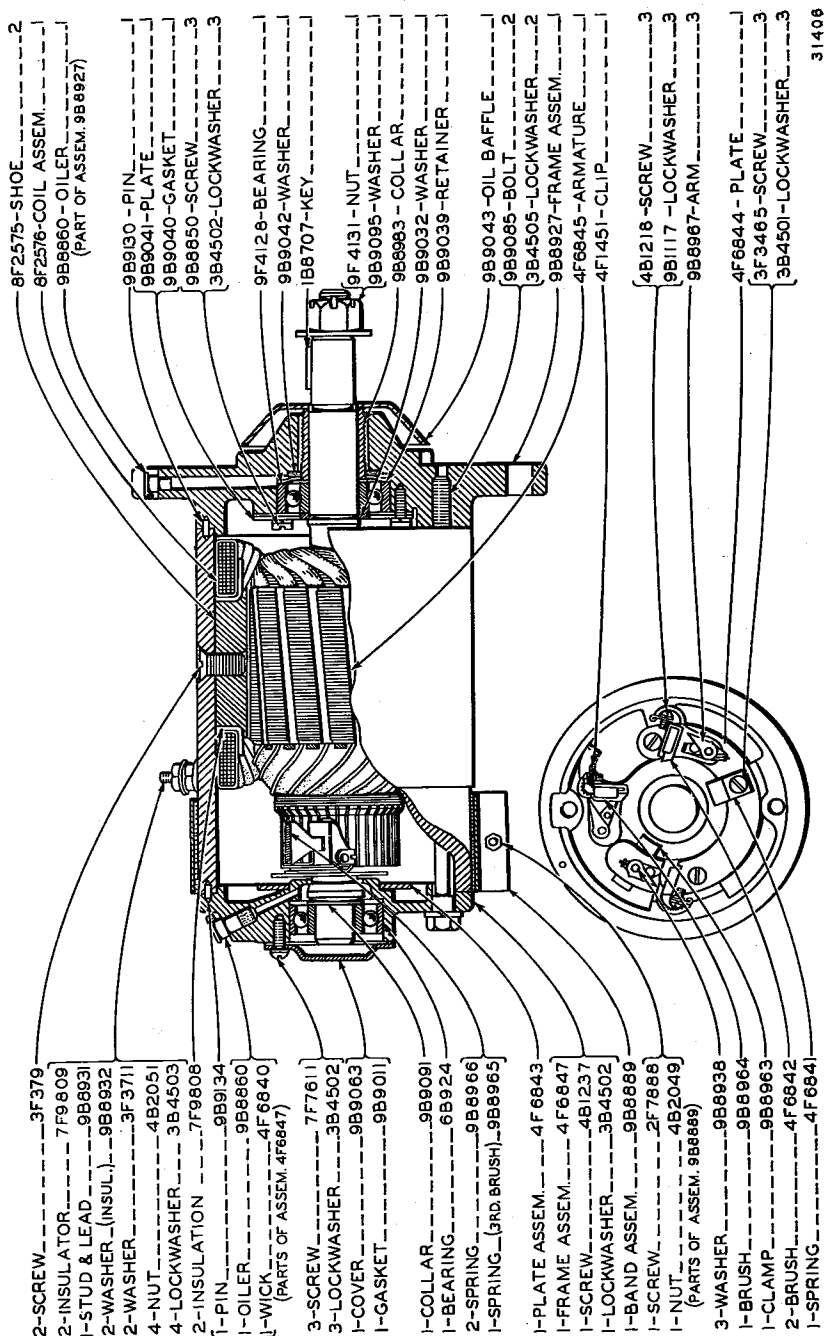

31406

9F4992 GENERATOR

2-MACH. SCREW_ _ _4B1237
2-NUT_ _ _ _ _4B2049

1-REGULATOR_ _ _8B7757
- OR -

1-REGULATOR_ _ _7F3946
(SEE SEPARATE ILLUS. FOR PARTS)

7FT. WIRE_ _ _ _ _6B2499
4-TERMINAL_ _ _ _ _6B2864

1-BRACKET_ _ _ _ _4F91

1-GENERATOR_ _ _ _ _4F89
- OR -
1-GENERATOR_ _ _ _ _9F4992
(SEE SEPARATE ILLUS. FOR PARTS)

32576

6F2246 GENERATOR GROUP—6 Volt (Field Changeover)

8B7757, 7F3946, 4F89 and 9F4992 parts are shown on insert

1-SCREW_ _ _ _ _9B8911

1-WASHER_ _ _ _ _9B8910

1-COVER_ _ _ _ _9B8912

1-GASKET_ _ _ _ _9B8995

3-SCREW_ _ _ _ _9B8916

3-CLAMP_ _ _ _ _2F5826

2-SCREW_ _ _ _ _5F3512

2-LOCKWASHER_ _ _5F3511

1-ARMATURE_ _ _ _ _2F5822
(RELAY)

1F69-CONTACTOR & SUPPORT
_ASSEM.1

2F5824-SCREW_ _ _ _ _2
1F75-LOCKWASHER_ _ _ _ _1
1F76-BUSHING_ _ _ _ _2
1F66-WASHER_ _ _ _ _2

2F5825-RESISTANCE_ _ _ _ _1

1F71-SPRING_ _ _ _ _2

1F68-ARMATURE
(VOLTAGE REGULATOR)
2F5823-SCREW_ _ _ _ _2
9B9225-LOCKWASHER_ _ _2
1F64-NUT_ _ _ _ _2


SIDE VIEW

TOP VIEW


24739

8B7757 REGULATOR

Only separate parts serviced. When complete Regulator is required, order 7F3946 shown on reverse side of insert

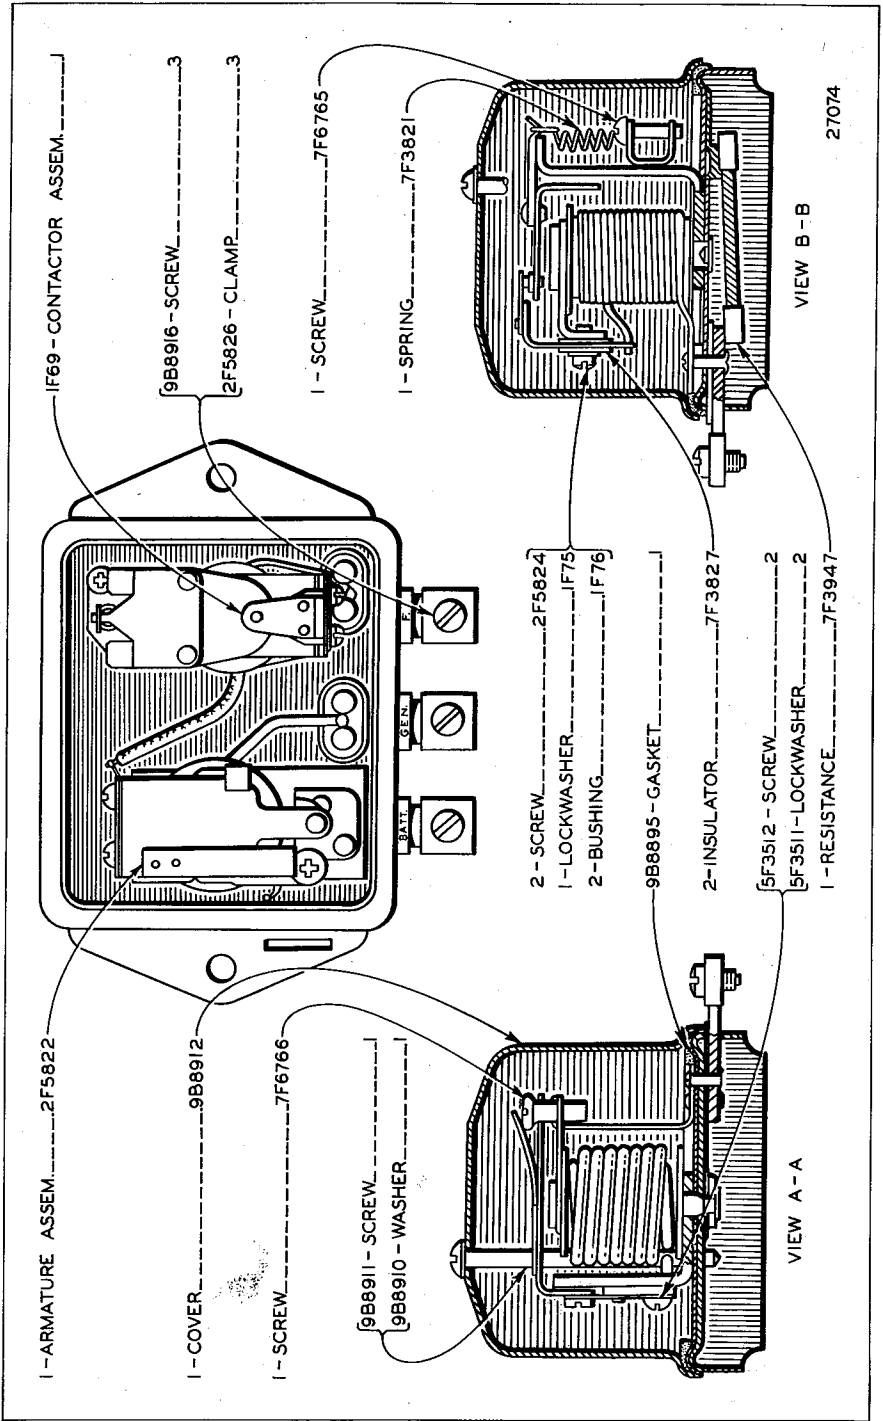


7F3946 REGULATOR

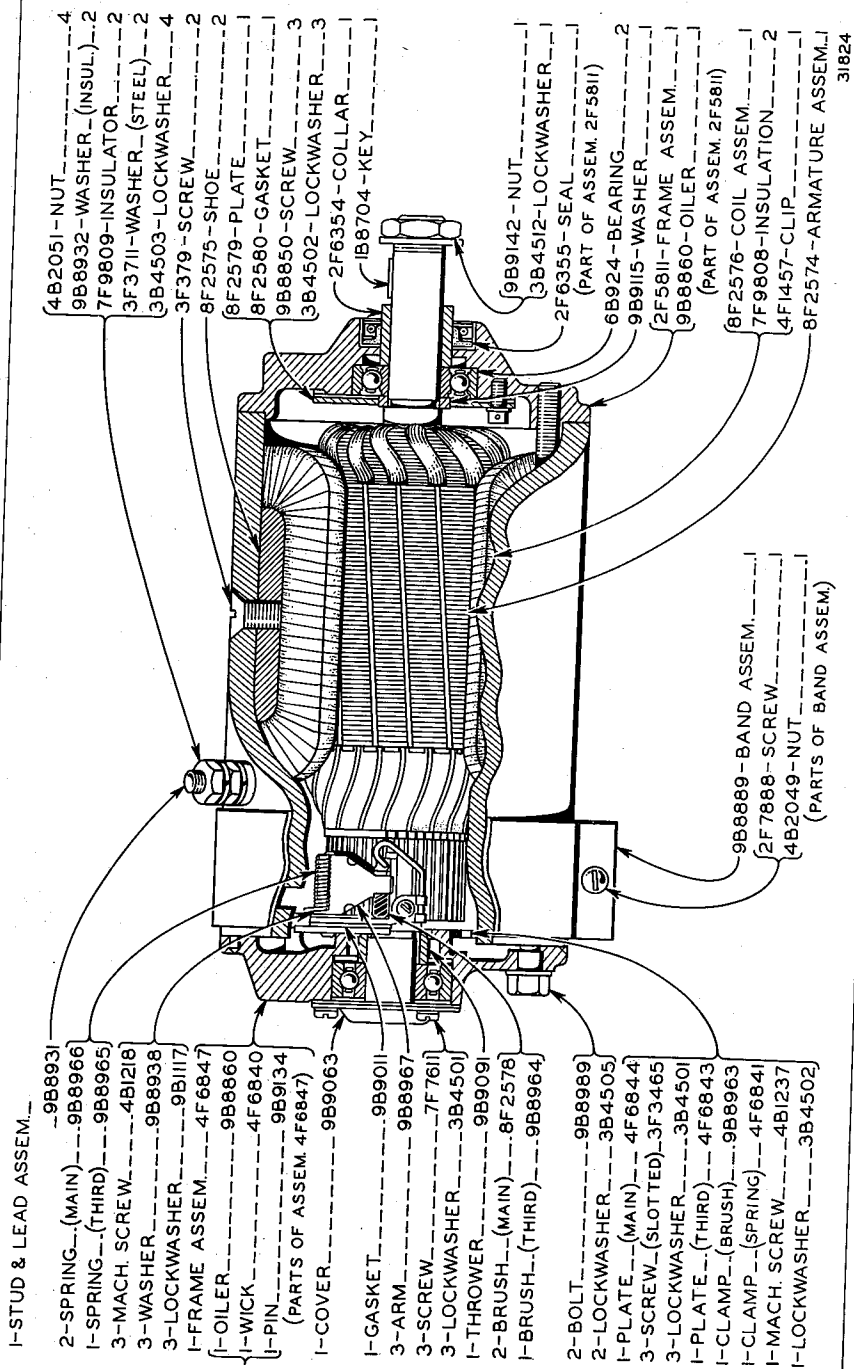


6F2428 GENERATOR

 Part of 4B6745 Generator Group shown on insert




PARTS CATALOG INSERT

INSERT BETWEEN PAGES 160 & 161 IN FORM 9202—PARTS CATALOG FOR D2 TRACTOR—50 INCH GAUGE

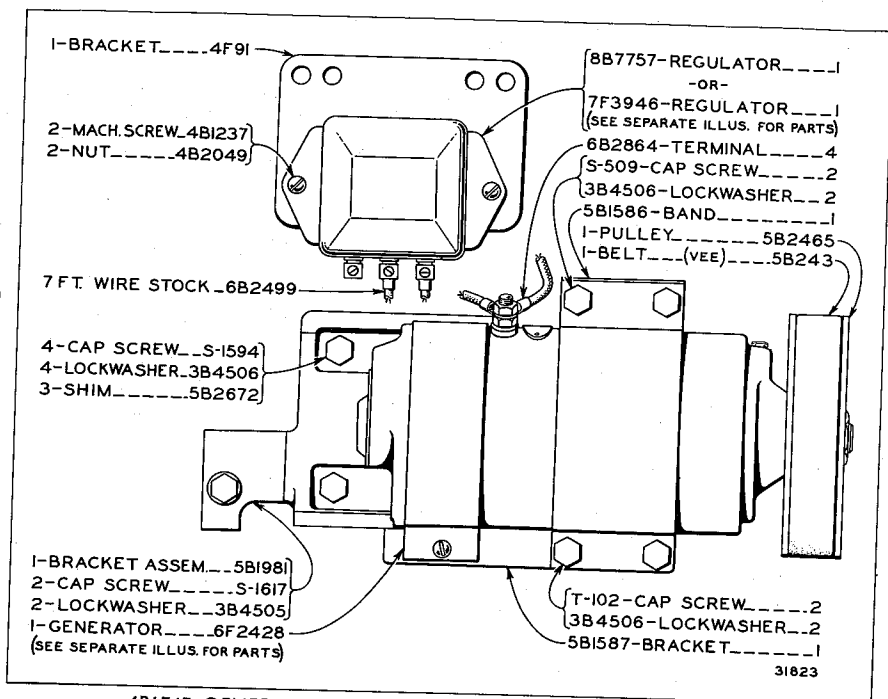

4B6745 GENERATOR GROUP—6 Volt, 90 Watt (Second Type)

For use with Battery. 8B7757, 7F3946 and 6F2428 parts are shown on insert

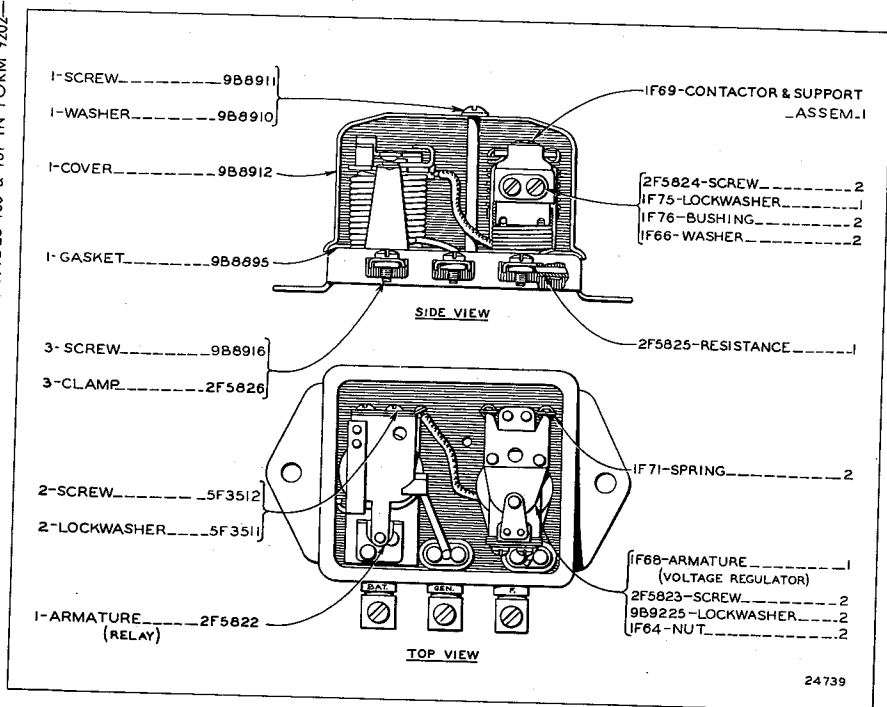

8B7757 REGULATOR

Part of 4B6745 Generator Group. Only separate parts serviced


When complete Regulator is required order 7F3946 shown on reverse side of insert

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

24739


Part of 4B6745 Generator Group shown on front side of insert

INSERT BETWEEN PAGES 160 & 161 IN FORM 9202—PARTS CATALOG FOR D2 TRACTOR—50 INCH GAUGE

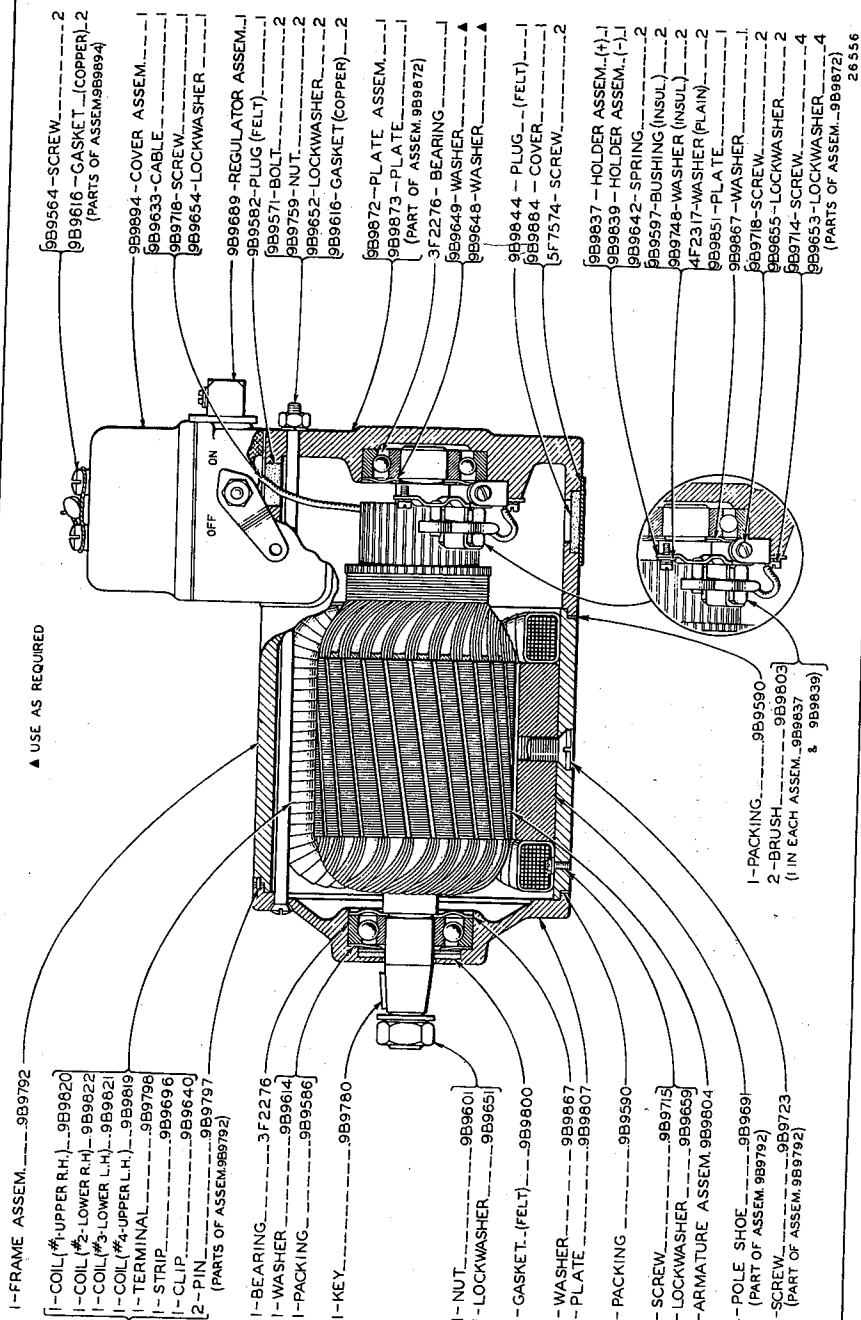

78347 GENERATOR

9B9689 Regulator Assembly parts are shown on reverse side of insert

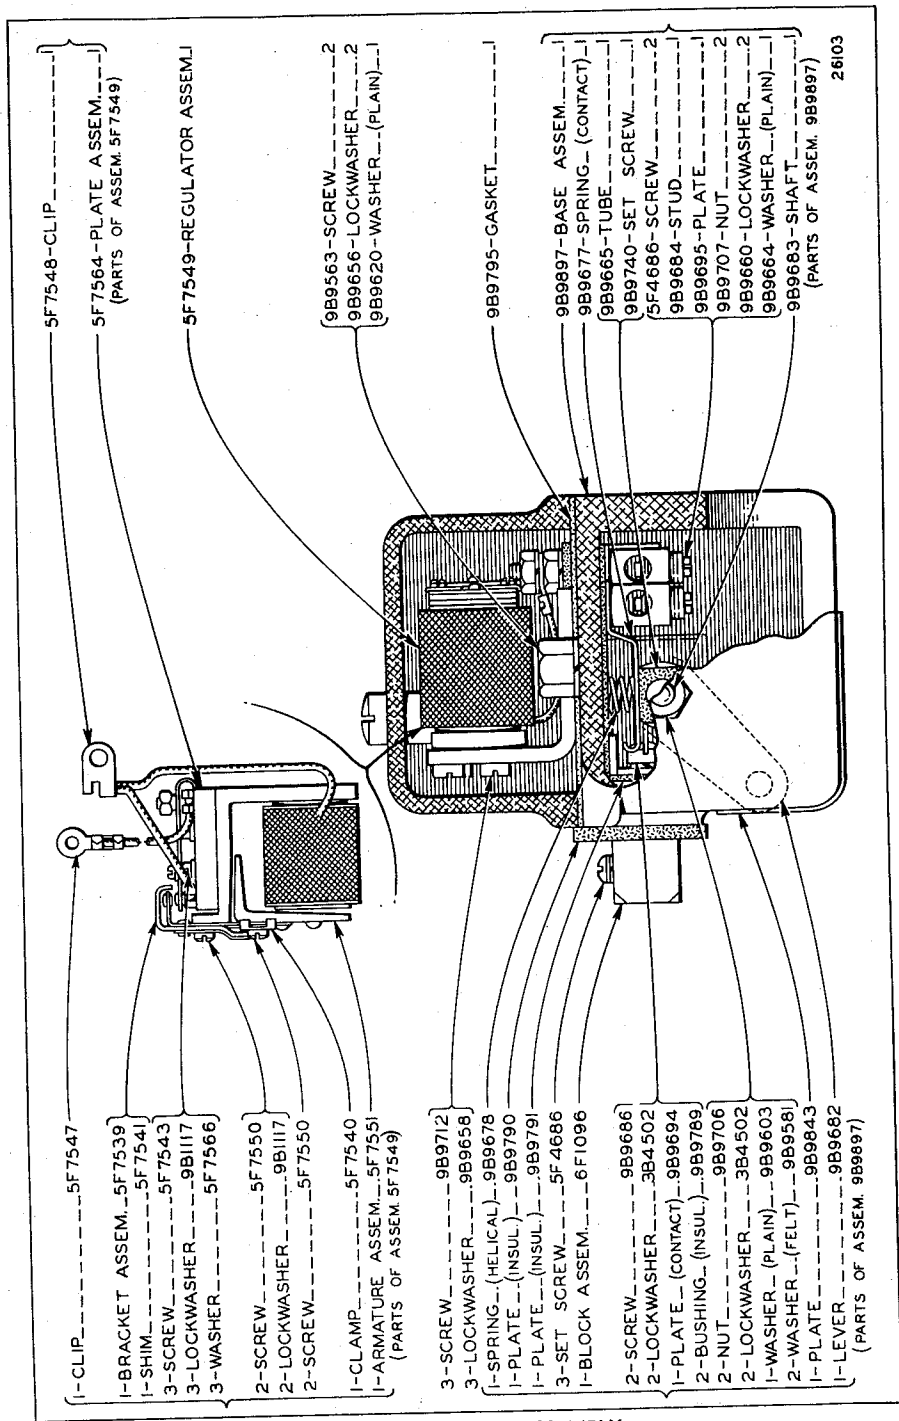


9B9689 REGULATOR ASSEMBLY

Part of 7B8347 Generator


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGES 160 & 161 IN FORM 9202—PARTS CATALOG FOR D2 TRACTOR—50 INCH GAUGE

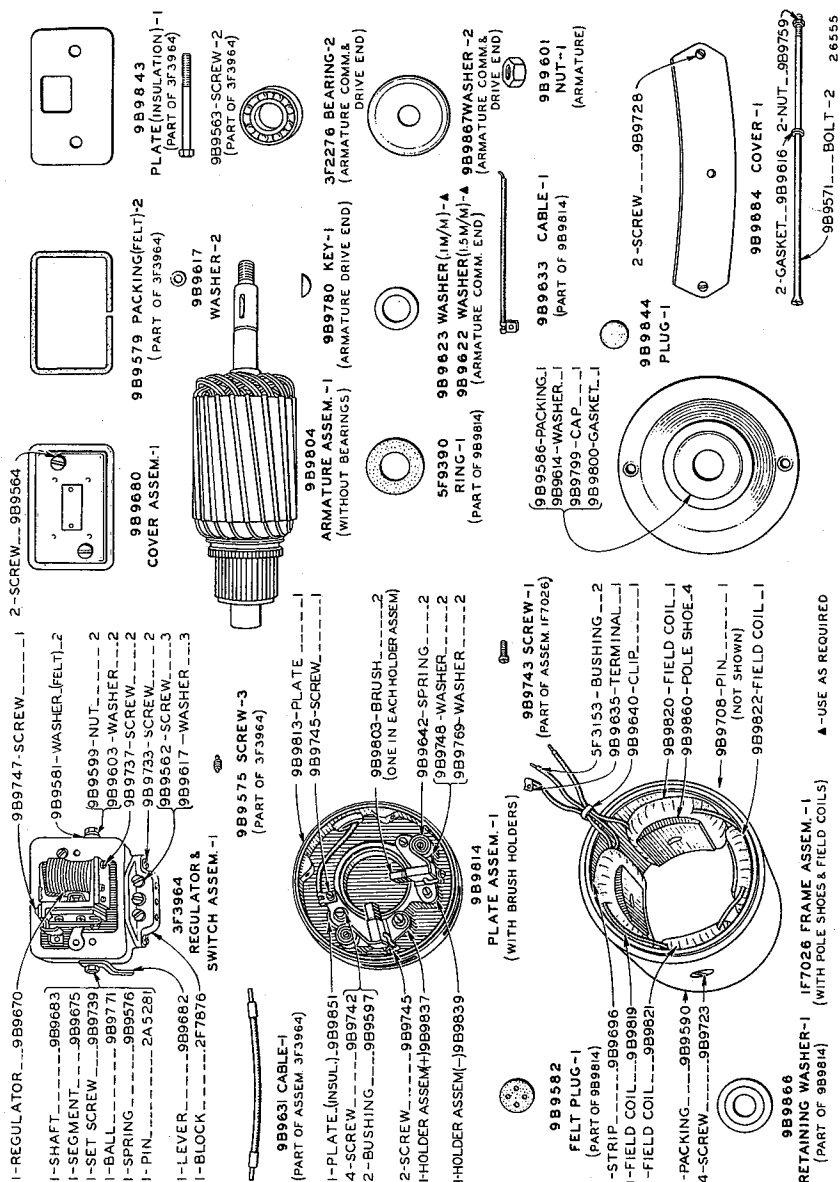

5B1922 GENERATOR


Part of Generator Groups shown on Page 161. Only separate parts serviced
When complete Generator is required order 7B8347 shown on insert

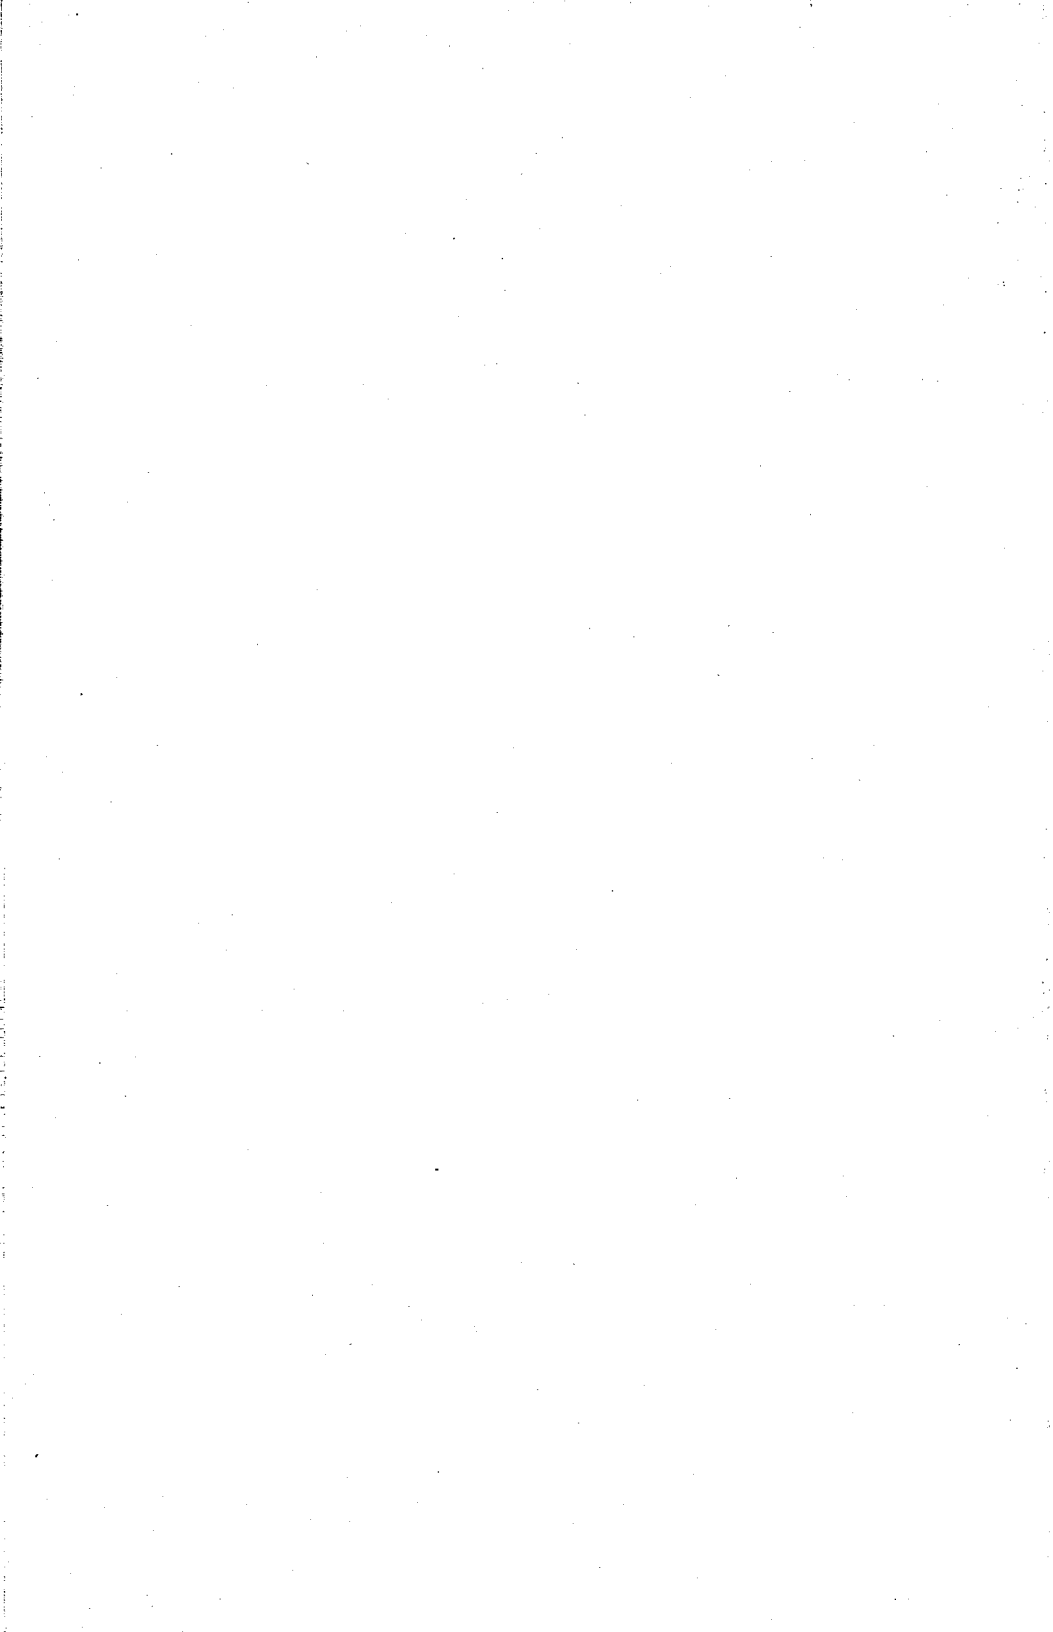

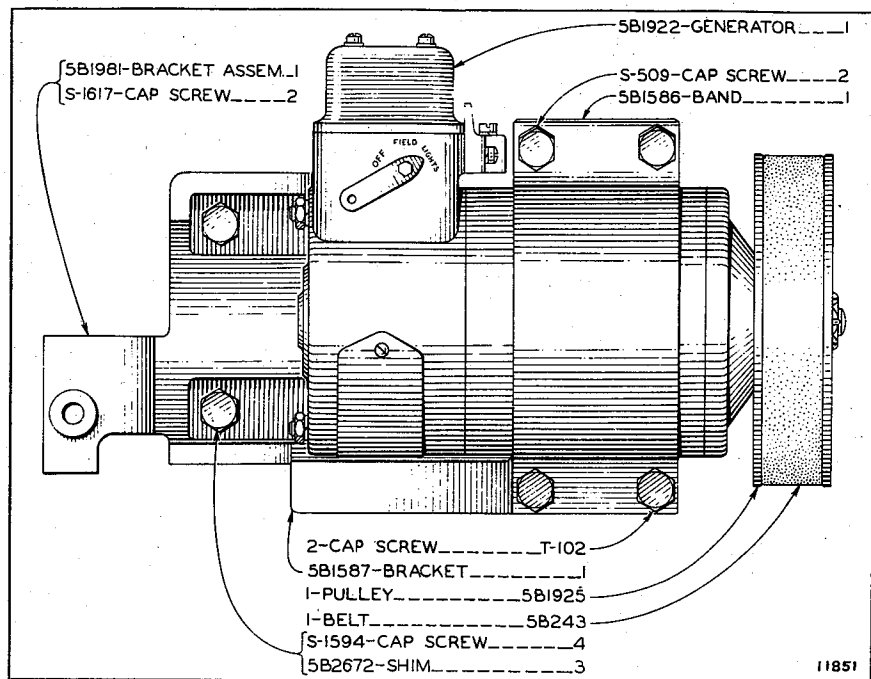**GENERATOR—6 Volt, 75 Watt**


For use without Battery

Only separate parts serviced. When complete group is required order 5B1863

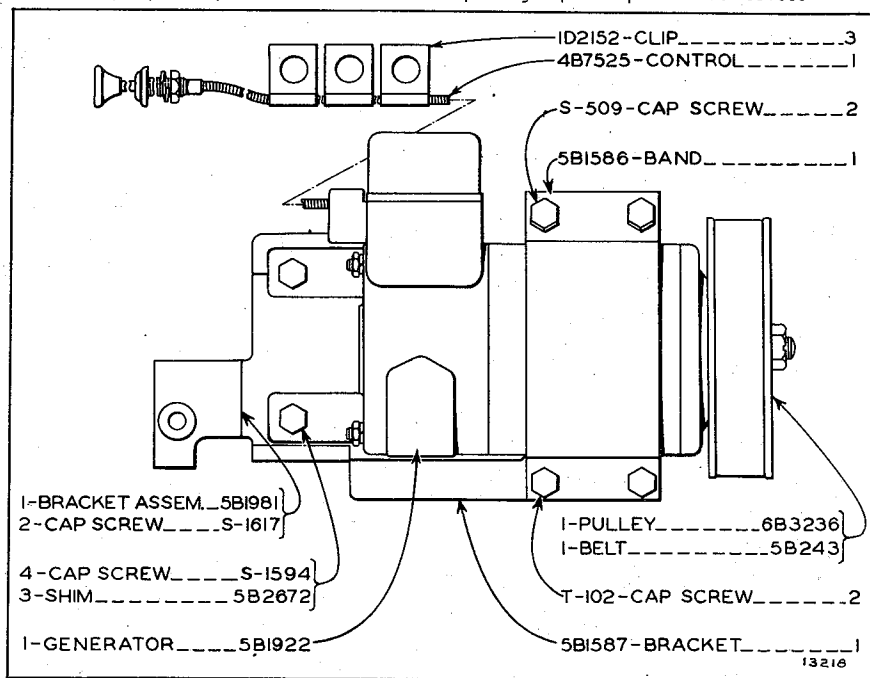
**5B1863 GENERATOR GROUP—6 Volt, 75 Watt**

For use without Battery

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

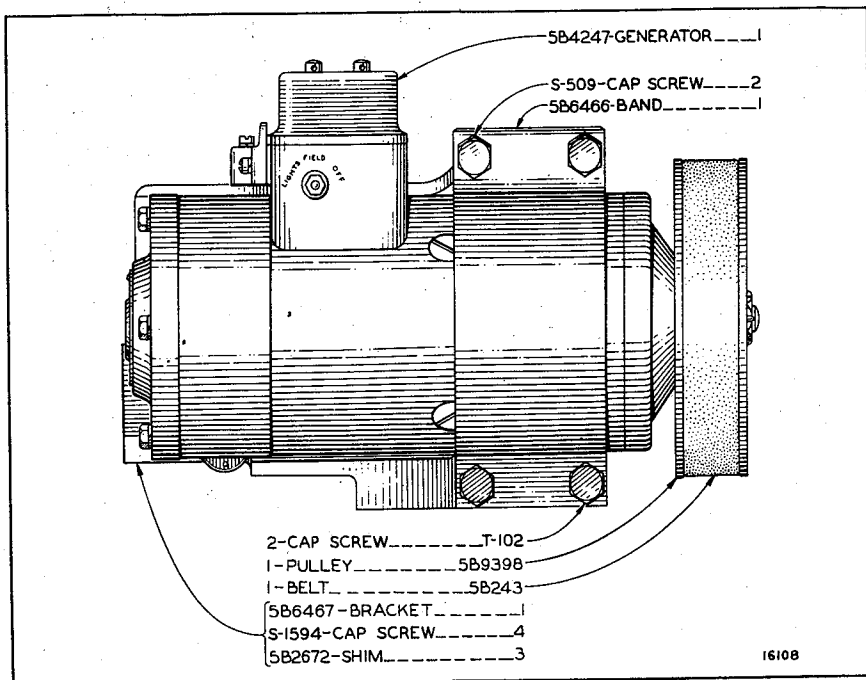


5B4248 GENERATOR GROUP—6 Volt, 130 Watt
For use without Battery

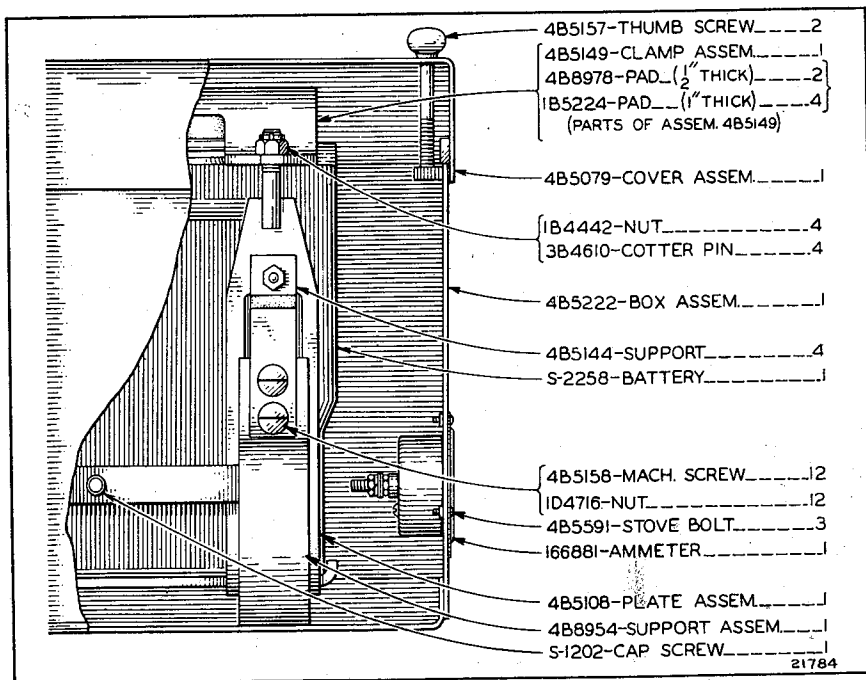


BATTERY AND BOX—6 Volt

Only separate parts serviced. When complete group is required order 4B5163

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

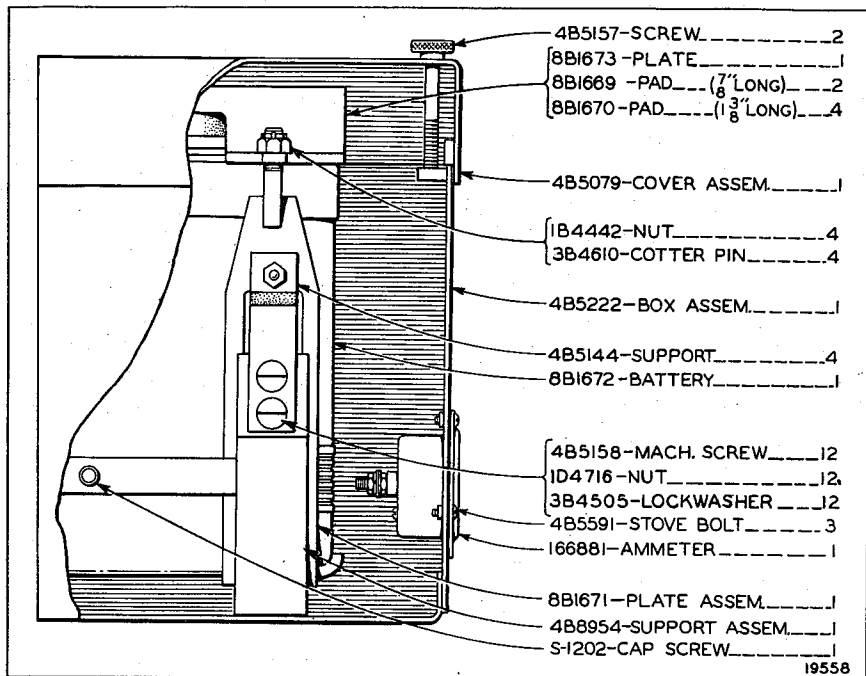


485163 BATTERY AND BOX GROUP—6 Volt

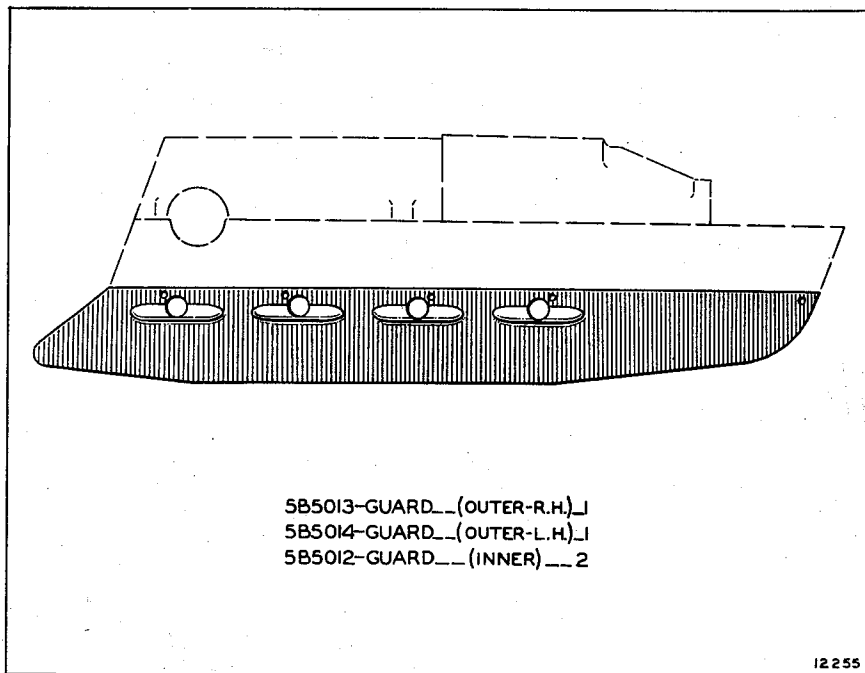

5B5011 TRACK ROLLER GUARD GROUP—Narrow


For use with Flat Shoes, Angle Shoes or Hook-on Grousers

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

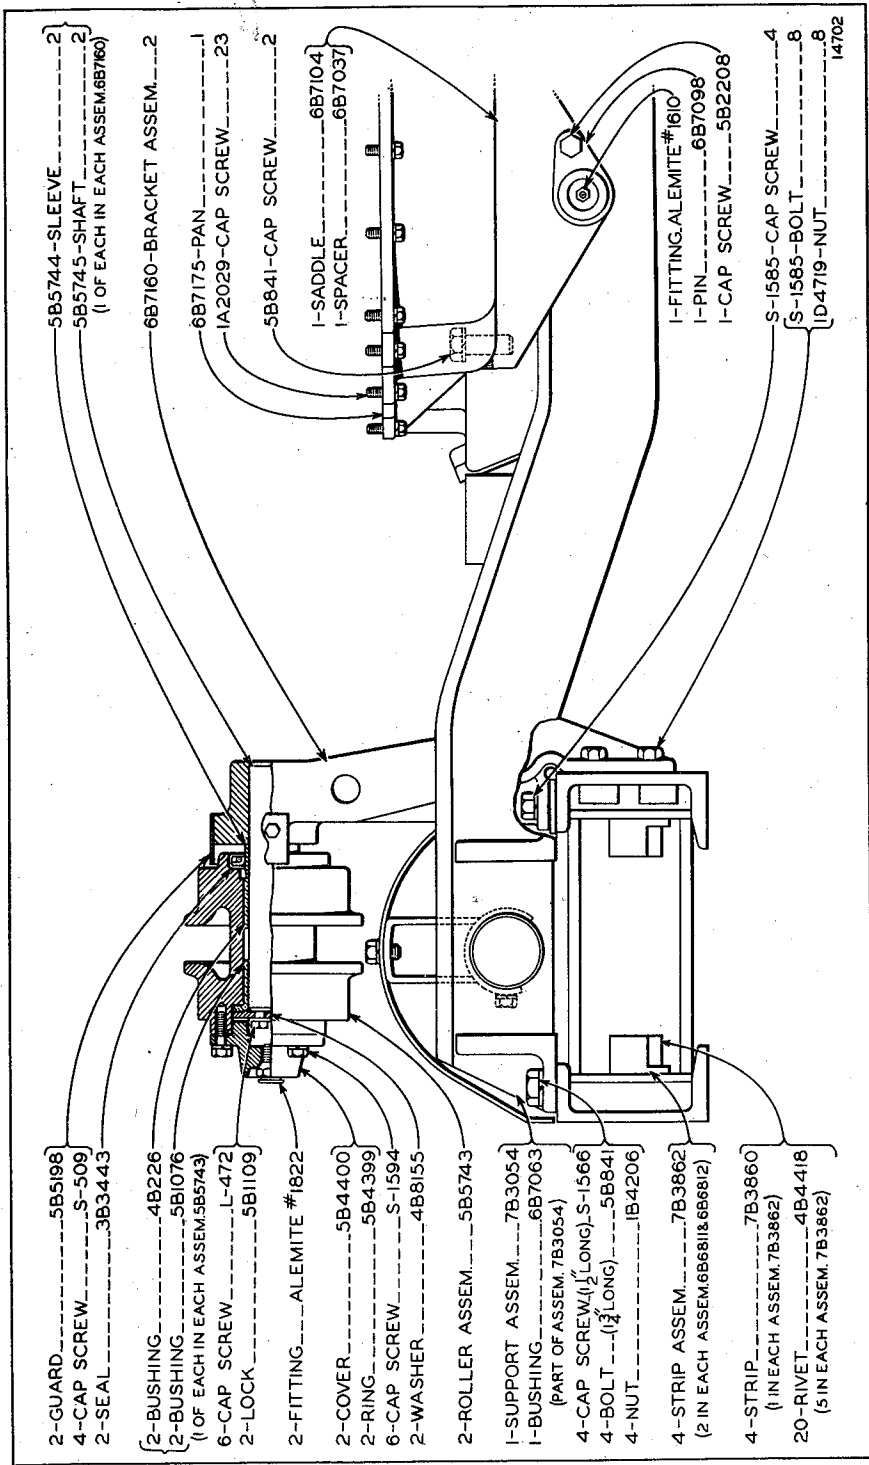

6B7295 FIVE ROLLER TRACK ROLLER FRAME GROUP (Non-Oscillating Type)—Front View


Must be used with 6B7240 shown on Page 169 and 35 link track shown on Page 170

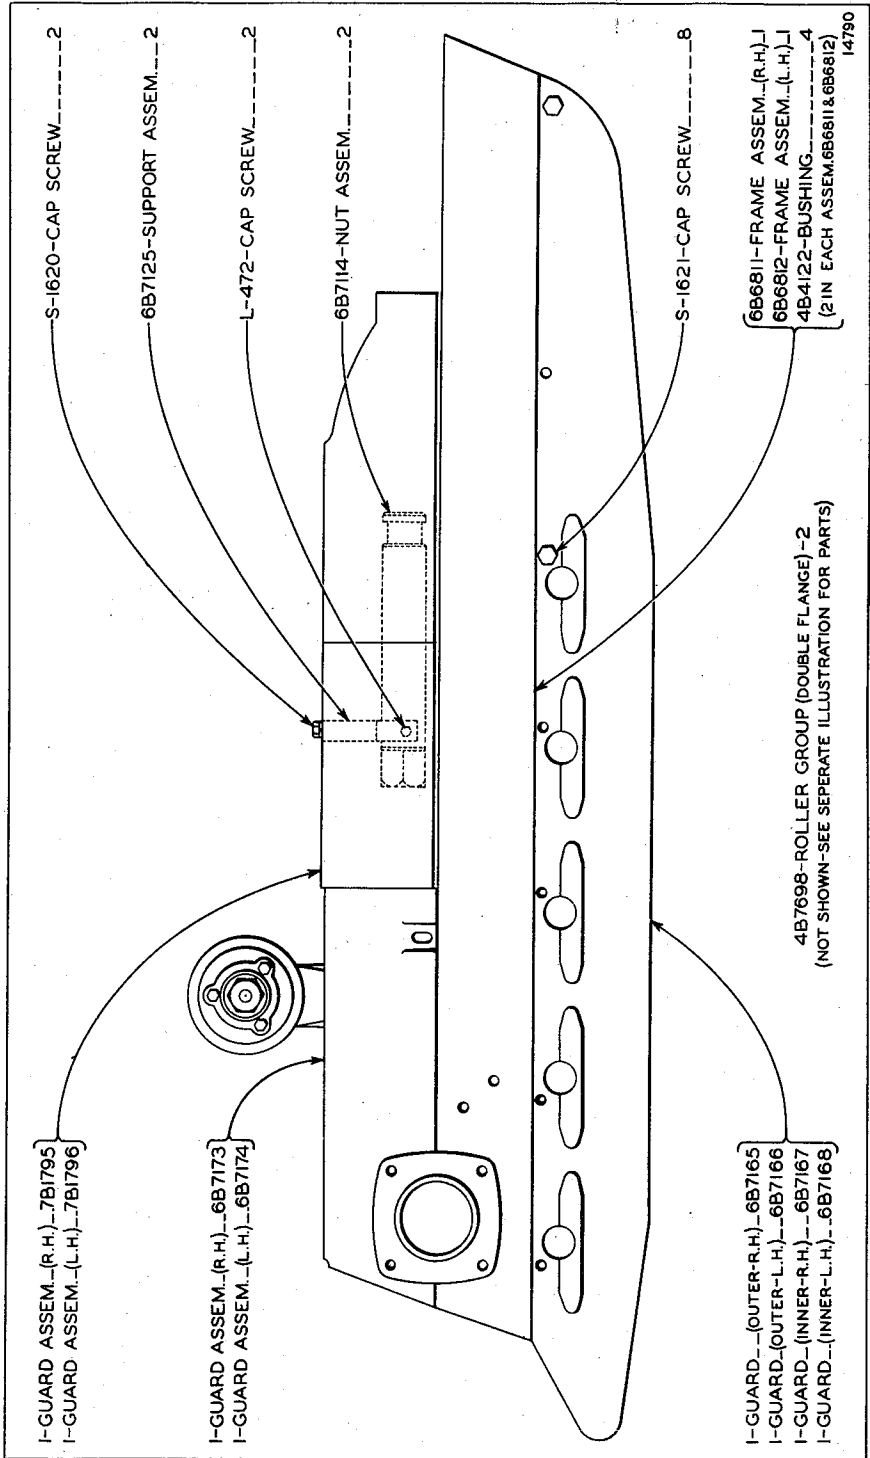


687295 FIVE ROLLER TRACK ROLLER FRAME GROUP (Non-Oscillating Type)—Side View

Must be used with 6B7240 shown on Page 169 and 35 link track shown on Page 170

4B7698 Double flange track roller parts are shown on Page 111

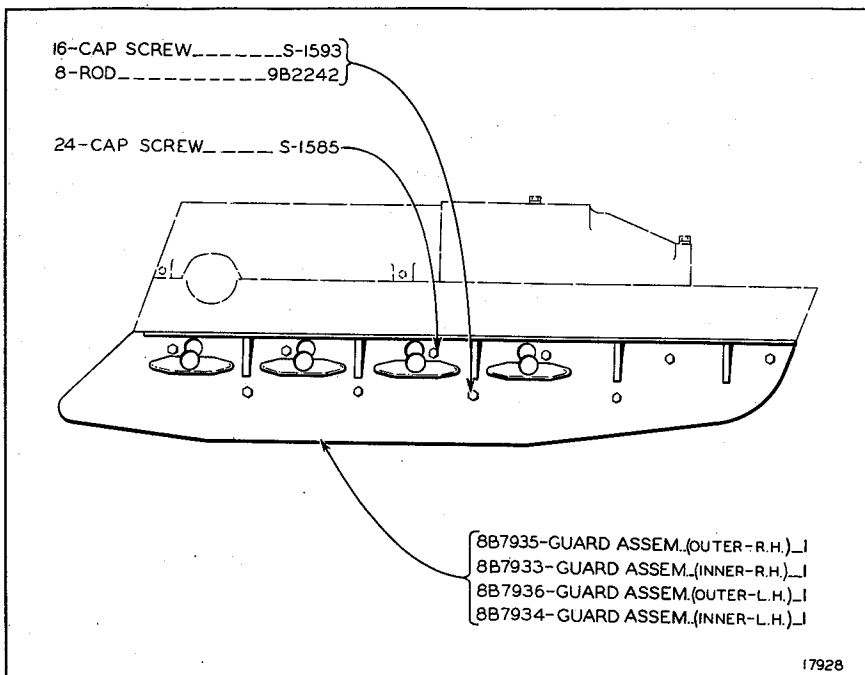


8B7939 TRACK ROLLER GUARD GROUP—Heavy Duty

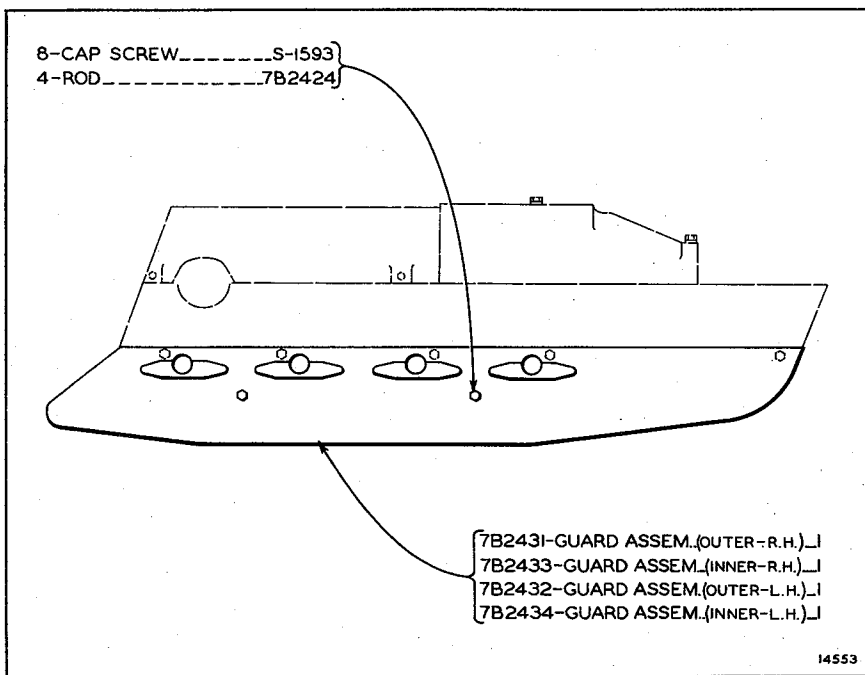

7B2436 TRACK ROLLER GUARD GROUP—Heavy Duty

PARTS CATALOG INSERT

- 1 - GUARD ASSEM. (OUTER R.H.) — 5F9989
- 1 - GUARD ASSEM. (INNER R.H.) — 5F9991
- 1 - GUARD ASSEM. (OUTER L.H.) — 5F9990
- 1 - GUARD ASSEM. (INNER L.H.) — 5F9992

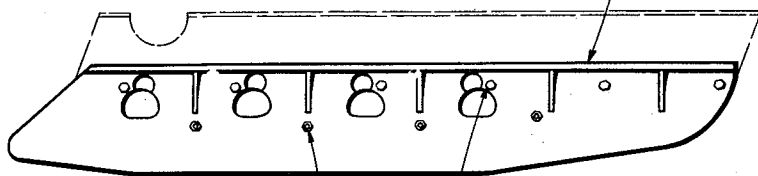


- 8 - BOLT ASSEM. — 3F7061
- 8 - NUT — 1B4432
- 8 - LOCKWASHER — 3B4508
- 8 - PIPE (11 1/2" LONG) — 2F26


- S-1585 - CAP SCREW — 24
- 3B4508 - LOCKWASHER — 24

24591

5F9984 TRACK ROLLER DIRT GUARD GROUP—Heavy Duty
For use with Standard Track Roller Frame
Replaces 8B7939 Track Roller Guard Group

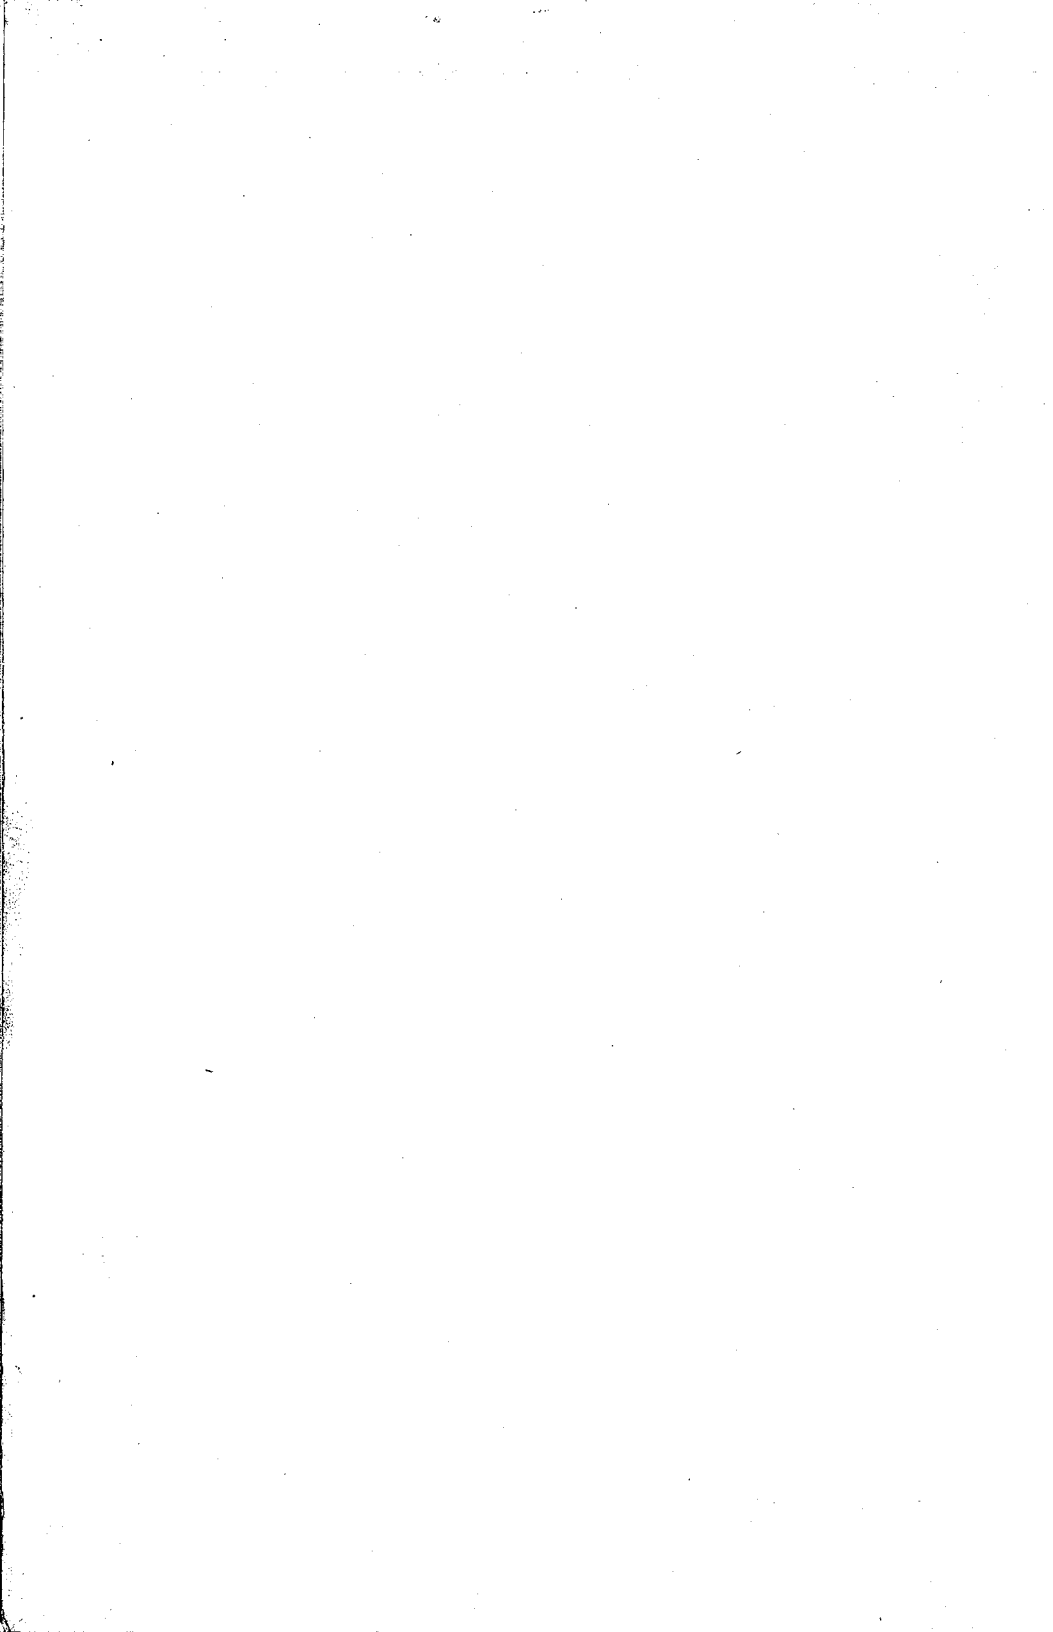

20-CAP SCREW -----S-1621
 20-LOCKWASHER -----3B4508

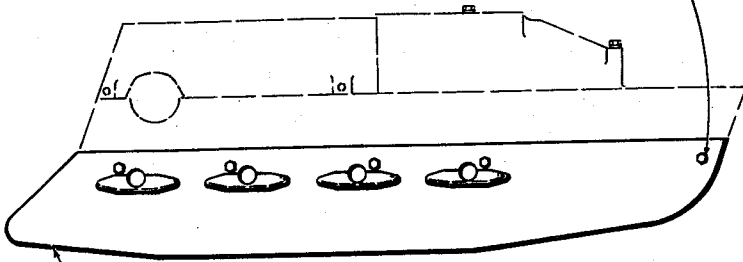

4B4089-GUARD (OUTER R.H.) -----
 4B4695-GUARD (INNER R.H.) -----
 4B4090-GUARD (OUTER L.H.) -----
 4B4696-GUARD (INNER L.H.) -----

23048

4F7238 TRACK ROLLER DIRT GUARD GROUP—Light Duty

31 LINK TRACK GROUPS

For use with 23½" O.D. Front Idler

12" Grouser Shoe Track Group

6B8518 Track Group (2 Req'd.)

Consists of:

- 1 6B8517 Track Link Assembly
- 31 2B4765 Shoe
- 124 2B5484 Bolt
- 124 2B5483 Nut
- 124 3B4507 Lockwasher

12" Grouser Shoe Track Group—Heat Treated

9B2766 Track Group (2 Req'd.)

Consists of:

- 1 6B8517 Track Link Assembly
- 31 2B8337 Shoe
- 124 2B5484 Bolt
- 124 2B5483 Nut
- 124 3B4507 Lockwasher

16" Grouser Shoe Track Group—Heat Treated

7B834 Track Group (2 Req'd.)

Consists of: ✓

- 1 6B8517 Track Link Assembly
- 31 1B1971 Shoe
- 124 2B5484 Bolt
- 124 2B5483 Nut
- 124 3B4507 Lockwasher

35 LINK TRACK GROUPS

For use with 23½" O.D. Front Idler and Five Roller Track Roller Frame

12" Grouser Shoe Track Group

6B7471 Track Group (2 Req'd.)

Consists of:

- 1 6B7253 Track Link Assembly
- 35 2B4765 Shoe
- 140 2B5484 Bolt
- 140 2B5483 Nut
- 140 3B4507 Lockwasher

12" Grouser Shoe Track Group—Heat Treated

7B5859 Track Group (2 Req'd.)

Consists of:

- 1 6B7253 Track Link Assembly
- 35 2B8337 Shoe
- 140 2B5484 Bolt
- 140 2B5483 Nut
- 140 3B4507 Lockwasher


12" Flat Shoe Track Group

7B5178 Track Group (2 Req'd.)

Consists of:


- 1 6B7253 Track Link Assembly
- 35 7B5177 Shoe
- 140 2B5484 Bolt
- 140 2B5483 Nut
- 140 3B4507 Lockwasher

L-1907 R.H. and L-1908 L.H. Dirt Grousers are available for use on 7B5177 Flat Shoe.
Track Link Assembly parts are shown with Standard Track.

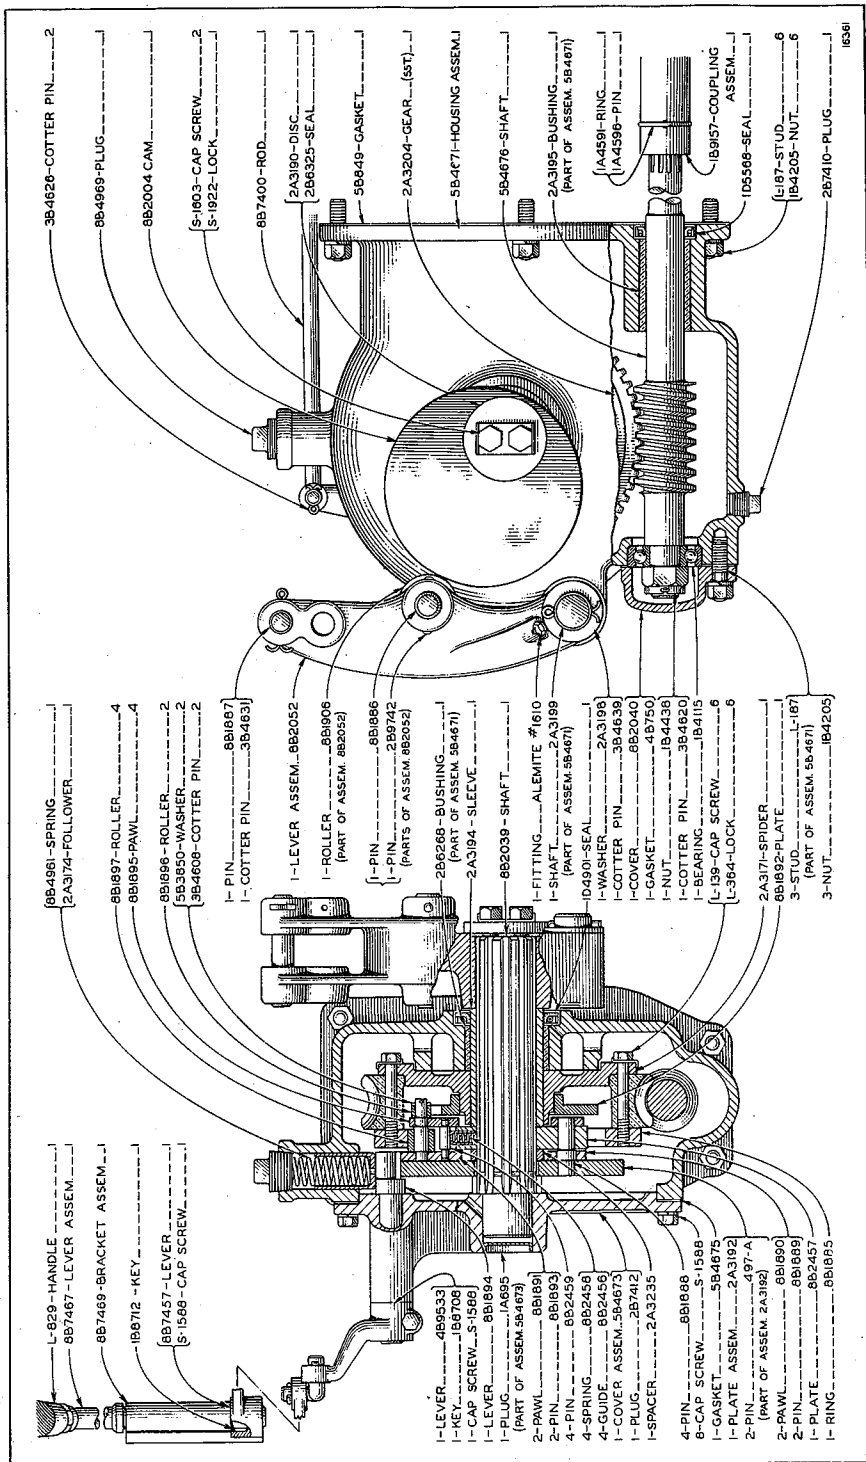


8B5990 POWER LIFT GROUP
For use with Fender Mounted Tank Fuel System


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

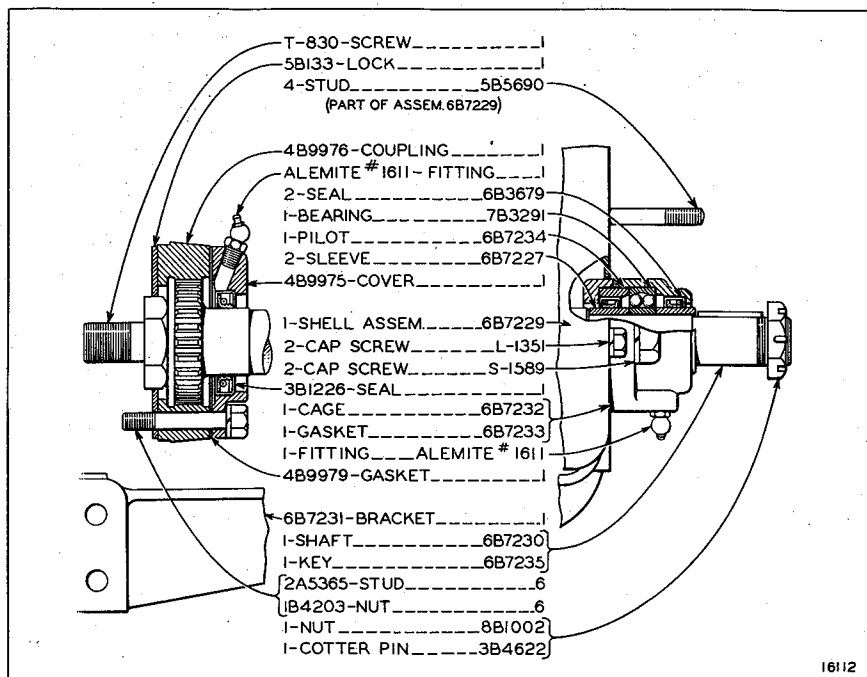

6B7236 FRONT POWER TAKE-OFF GROUP—1½" Pulley Hub

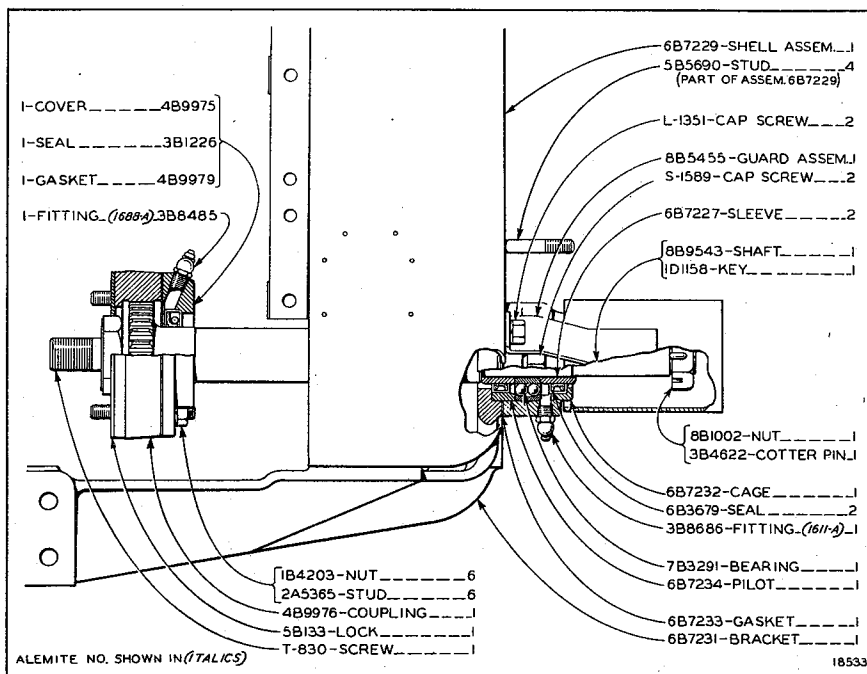


8B9544 FRONT POWER TAKE-OFF GROUP—2½" Pulley Hub

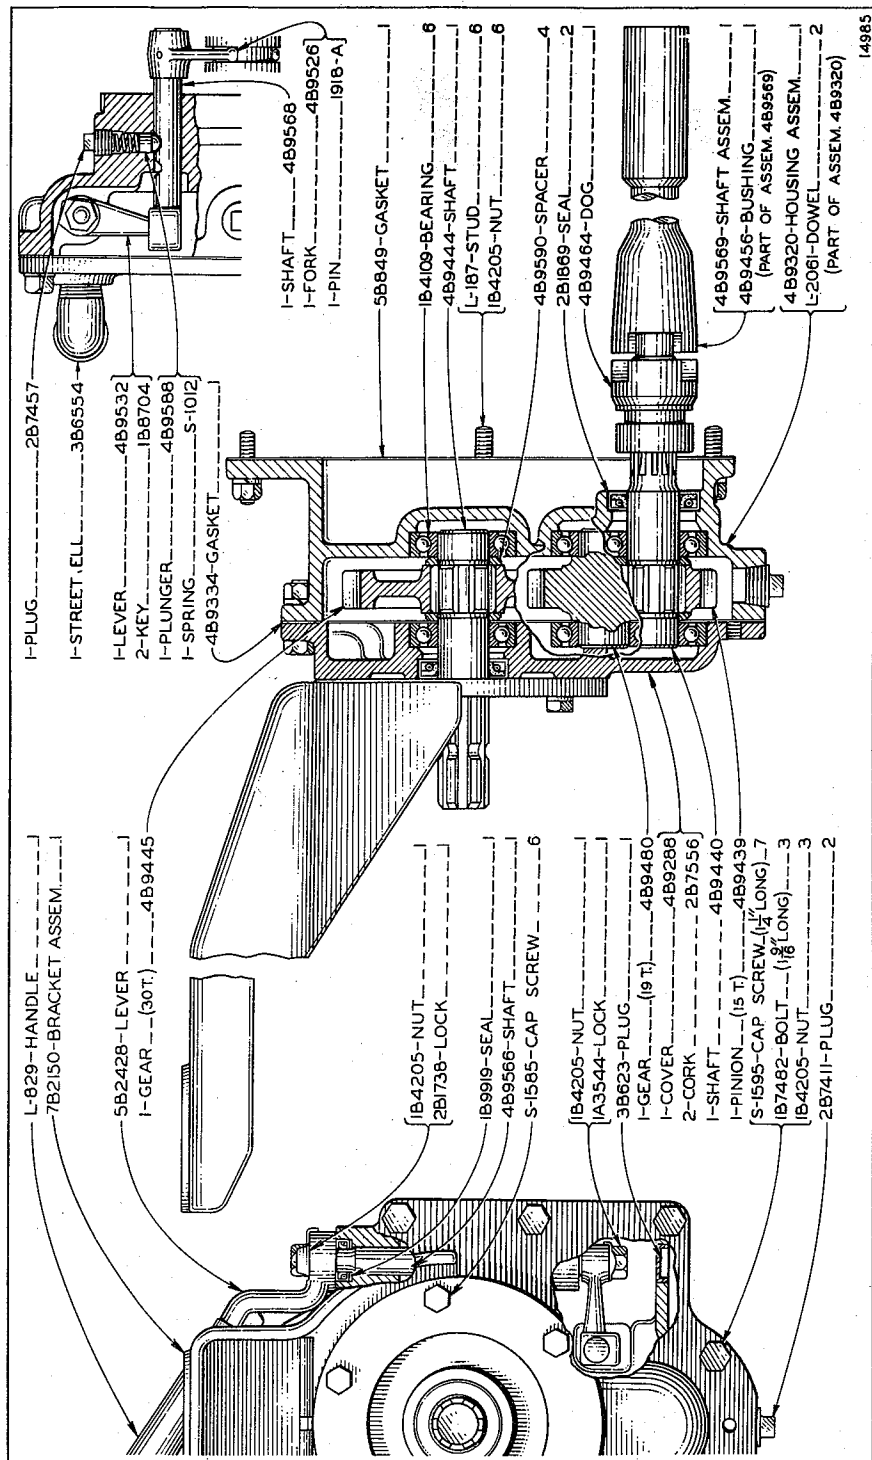

14985


4B7981 REAR POWER TAKE-OFF GROUP

For use on Rear Seat Tractors

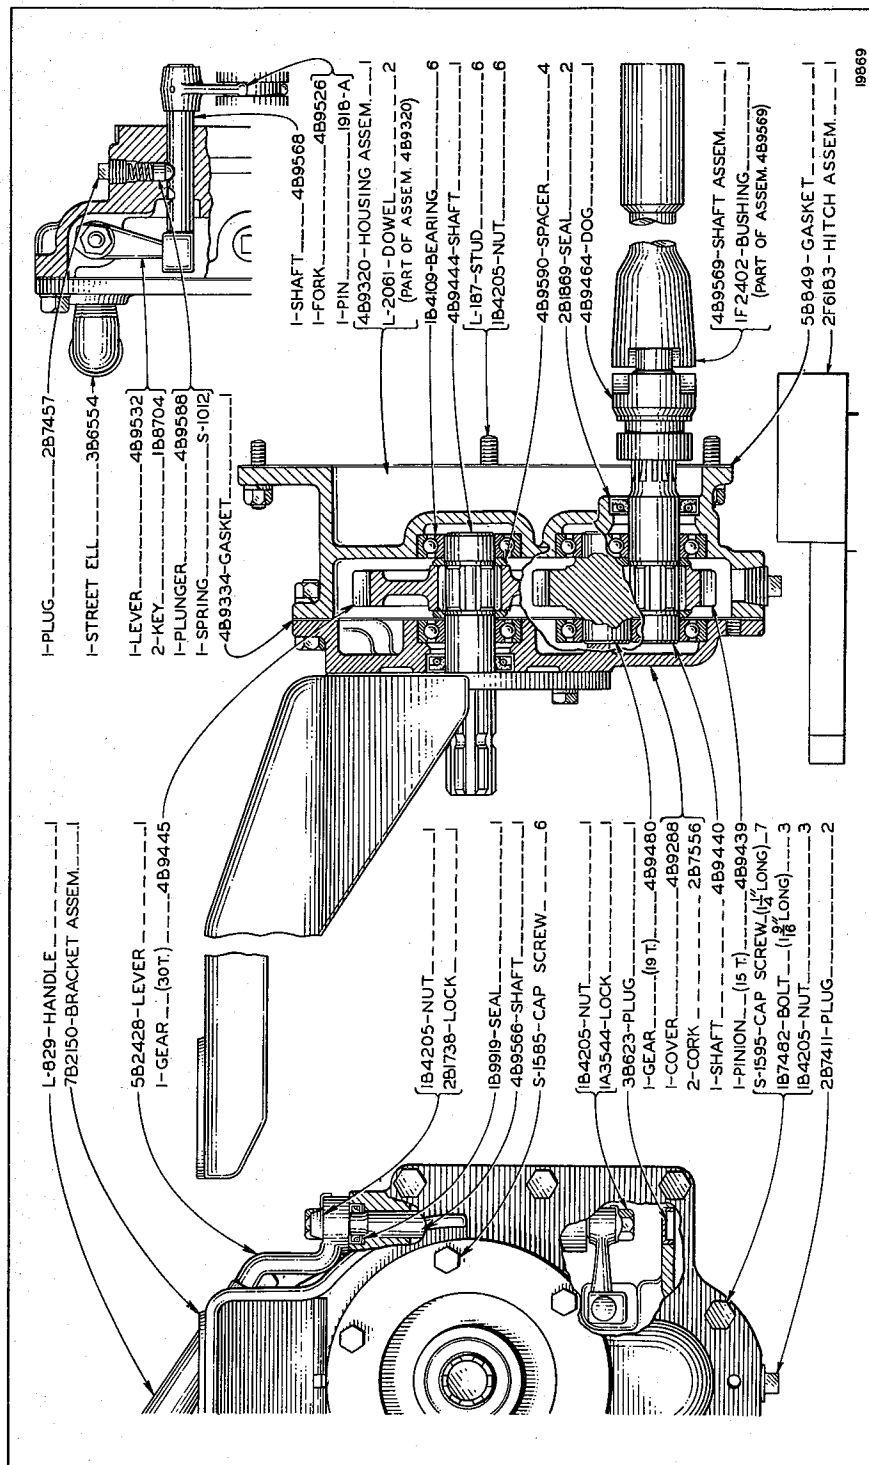


2F7980 REAR POWER TAKE-OFF GROUP

For use on Rear Seat Tractors

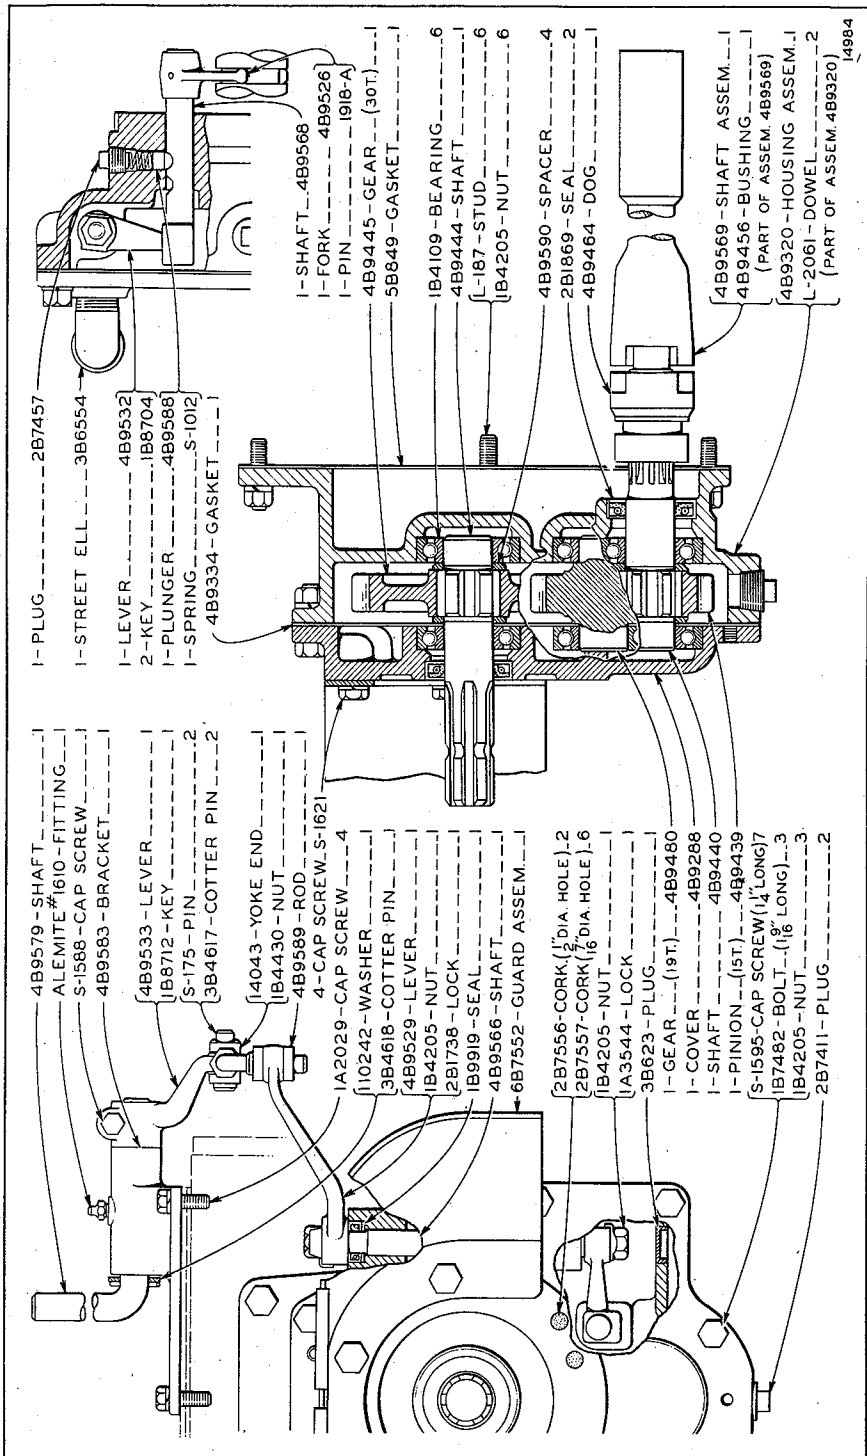


4B7980 REAR POWER TAKE-OFF GROUP

For use on Top Seat Tractors

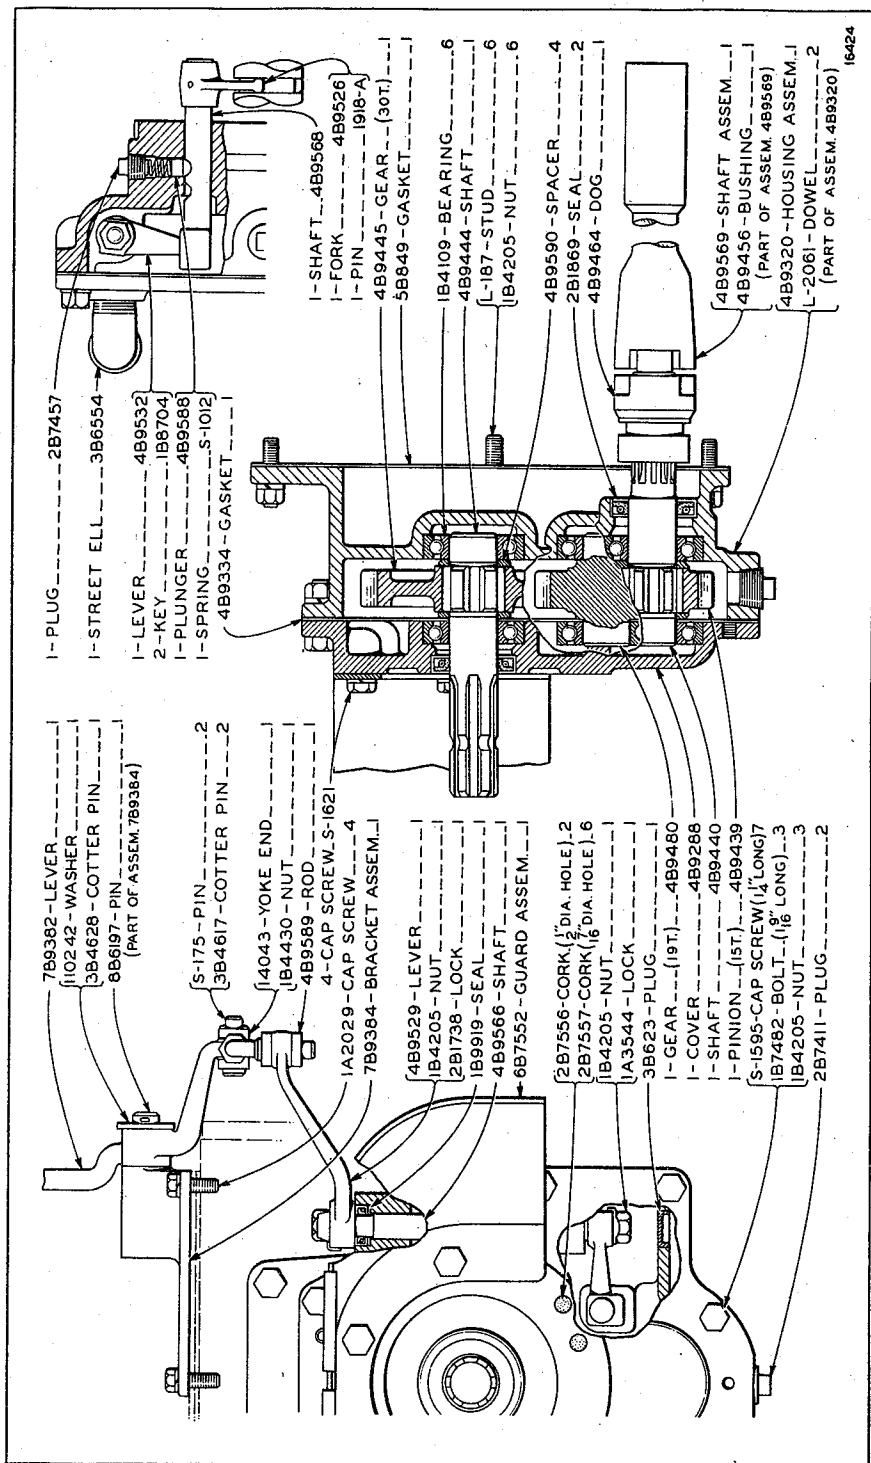**8B6199 REAR POWER TAKE-OFF GROUP**


For use on Top Seat Tractors

Only separate parts serviced. When complete group is required order 2F7981

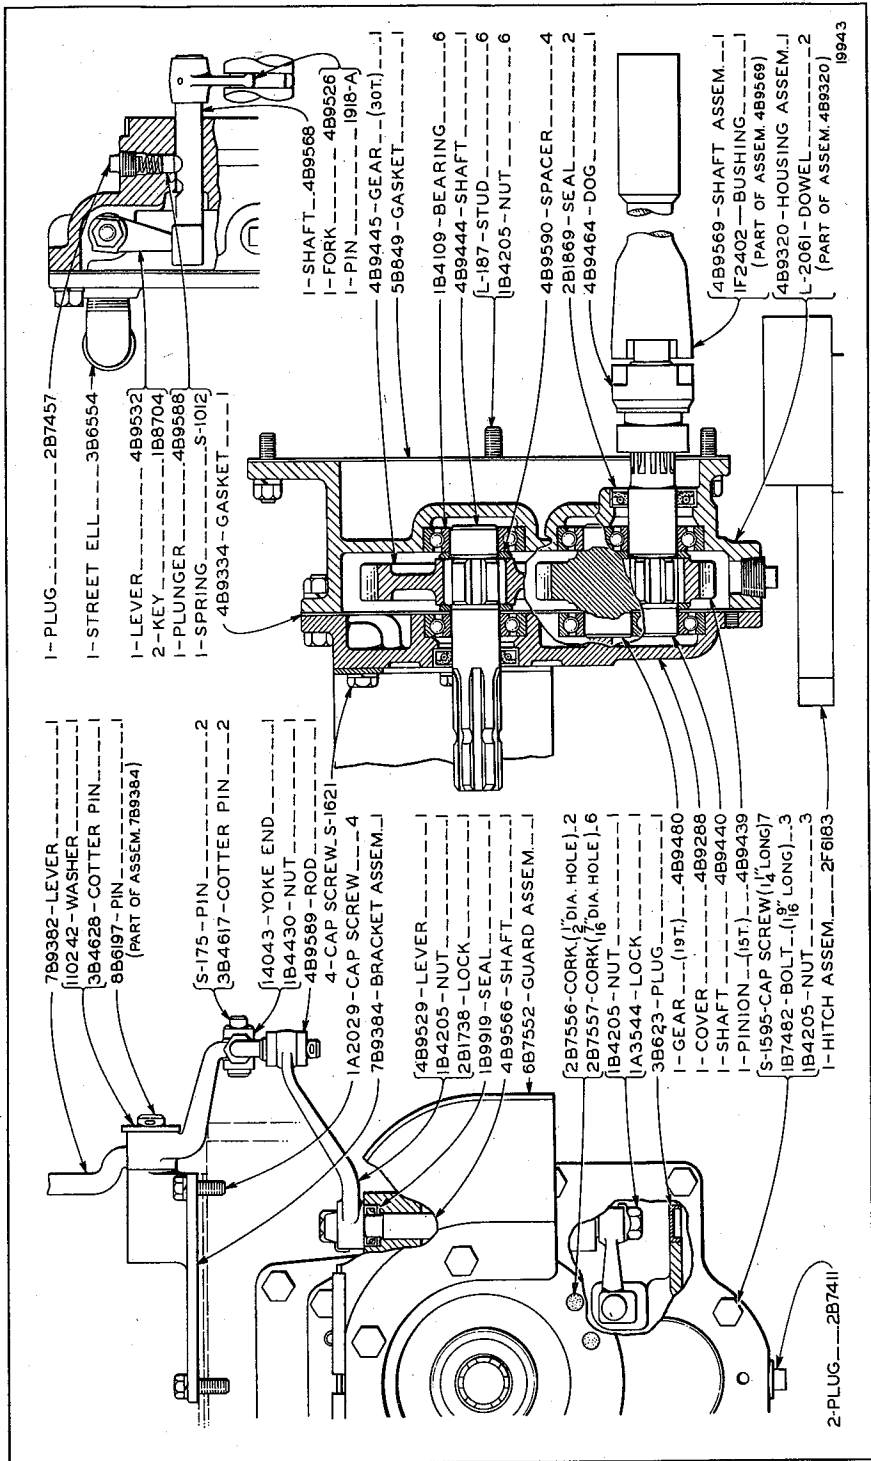


2F7981 REAR POWER TAKE-OFF GROUP

For use on Ten Seat Tractors

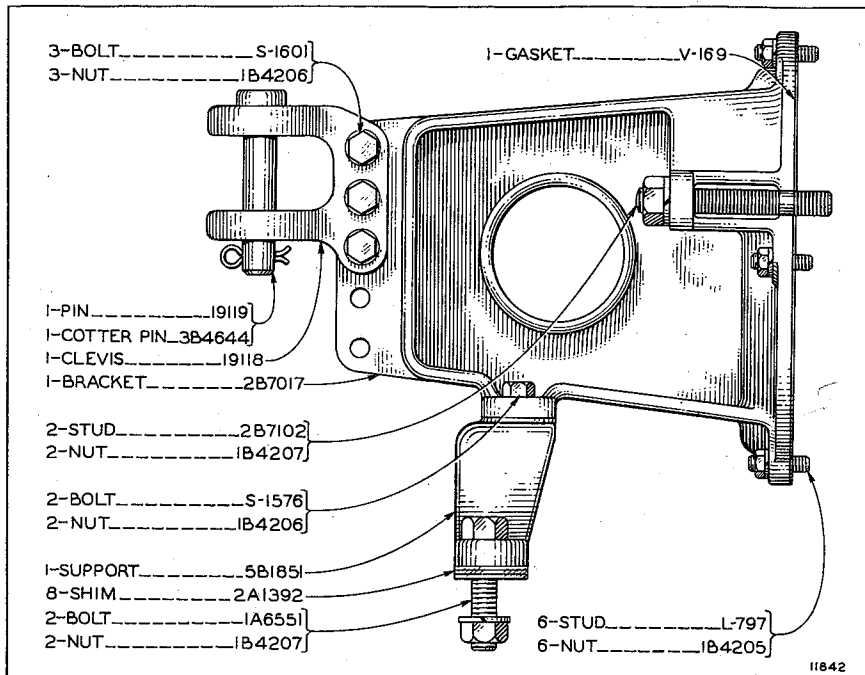

4B7960 HIGH DRAWBAR GROUP

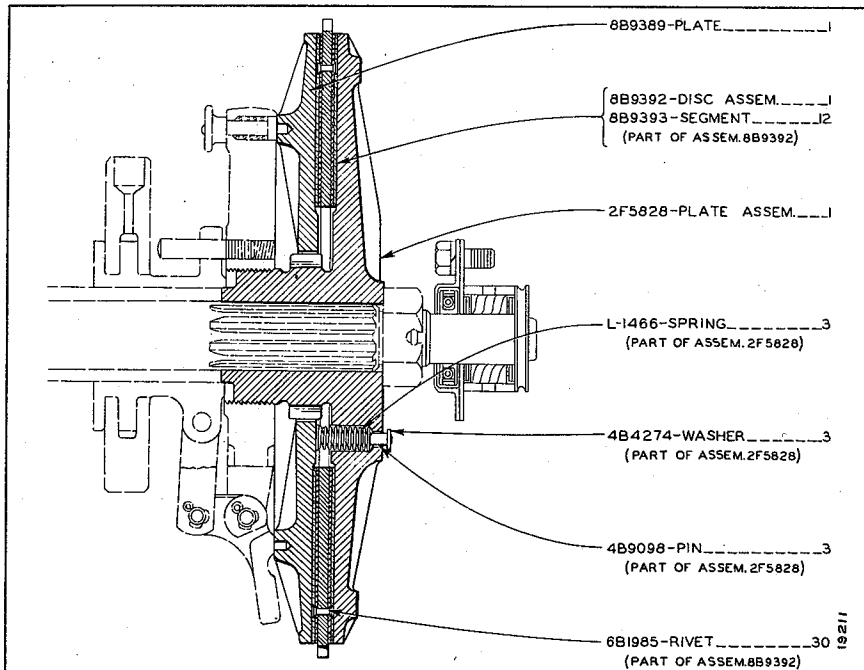

2F5827 FLYWHEEL CLUTCH DISC

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

5B483 Belt Pulley Drive Group-With Pulley (Replaced by 2F7991)

For use on Top Seat Tractors

Consists of:

I	4B7948	Belt Pulley Drive Group	Page 181
I	4B7980	Rear Power Take-off Group	" 176

8B6201 Belt Pulley Drive Group-With Pulley (Replaced by 2F7991)

For use on Top Seat Tractors

Consists of:

I	4B7948	Belt Pulley Drive Group	Page 181
I	8B6199	Rear Power Take-off Group	" 177

2F7991 Belt Pulley Drive Group-With Pulley

For use on Top Seat Tractors

Consists of:

I	4B7948	Belt Pulley Drive Group	Page 181
I	2F7981	Rear Power Take-off Group	" 178

5B484 Belt Pulley Drive Group-Without Pulley (Replaced by 2F7989)

For use on Top Seat Tractors

Consists of:

I	4B7949	Belt Pulley Drive Group	Page 181
I	4B7980	Rear Power Take-off Group	" 176

8B6203 Belt Pulley Drive Group-Without Pulley (Replaced by 2F7989)

For use on Top Seat Tractors

Consists of:


I	4B7949	Belt Pulley Drive Group	Page 181
I	8B6199	Rear Power Take-off Group	" 177

2F7989 Belt Pulley Drive Group-Without Pulley


For use on Top Seat Tractors

Consists of:


I	4B7949	Belt Pulley Drive Group	Page 181
I	2F7981	Rear Power Take-off Group	" 178

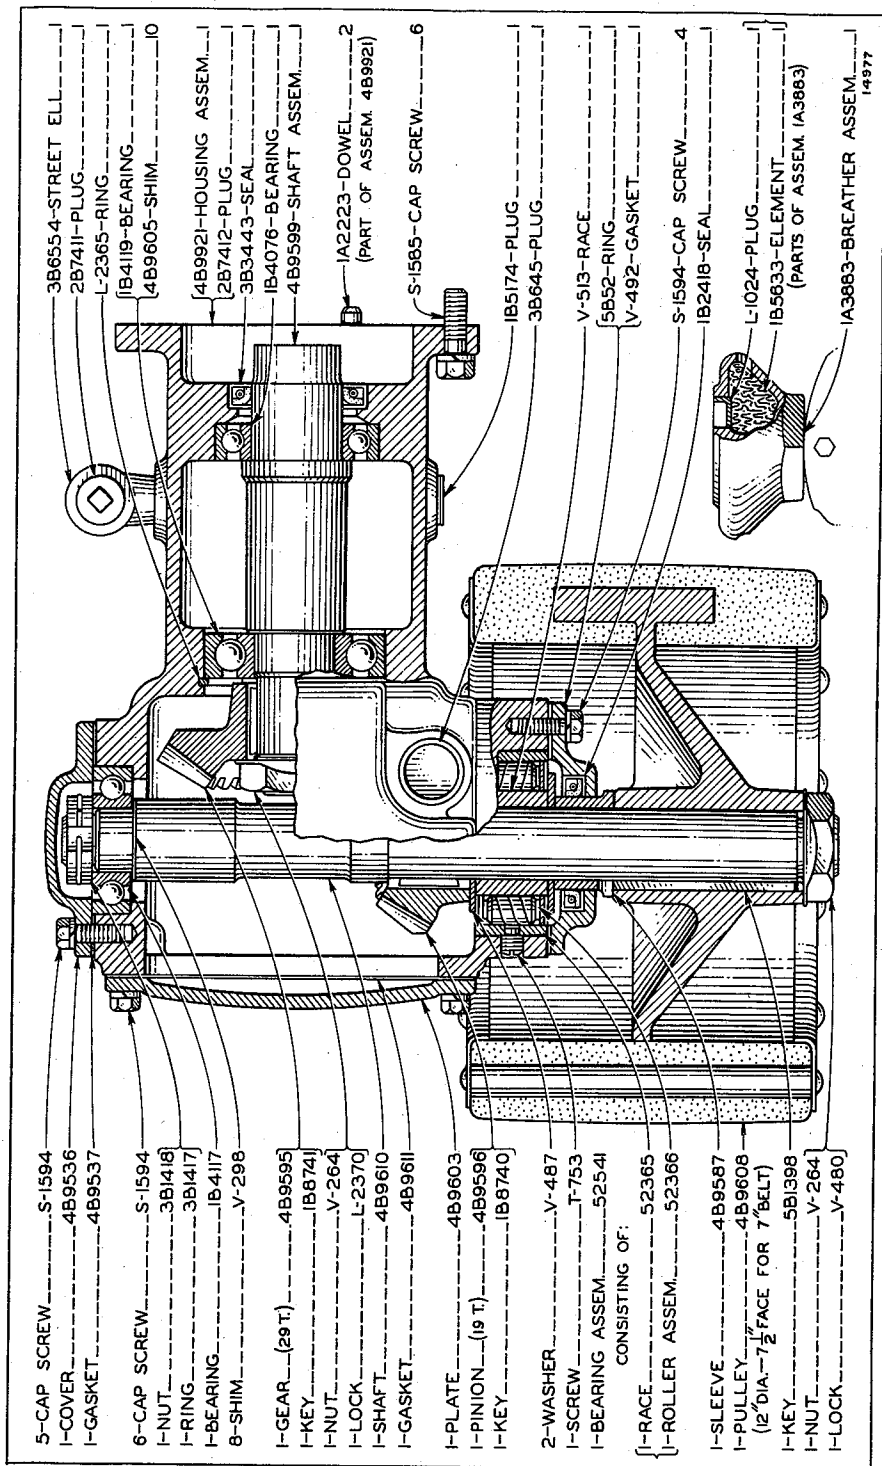


4B7948 BELT PULLEY DRIVE GROUP—With Pulley
 4B7949 BELT PULLEY DRIVE GROUP—Without Pulley

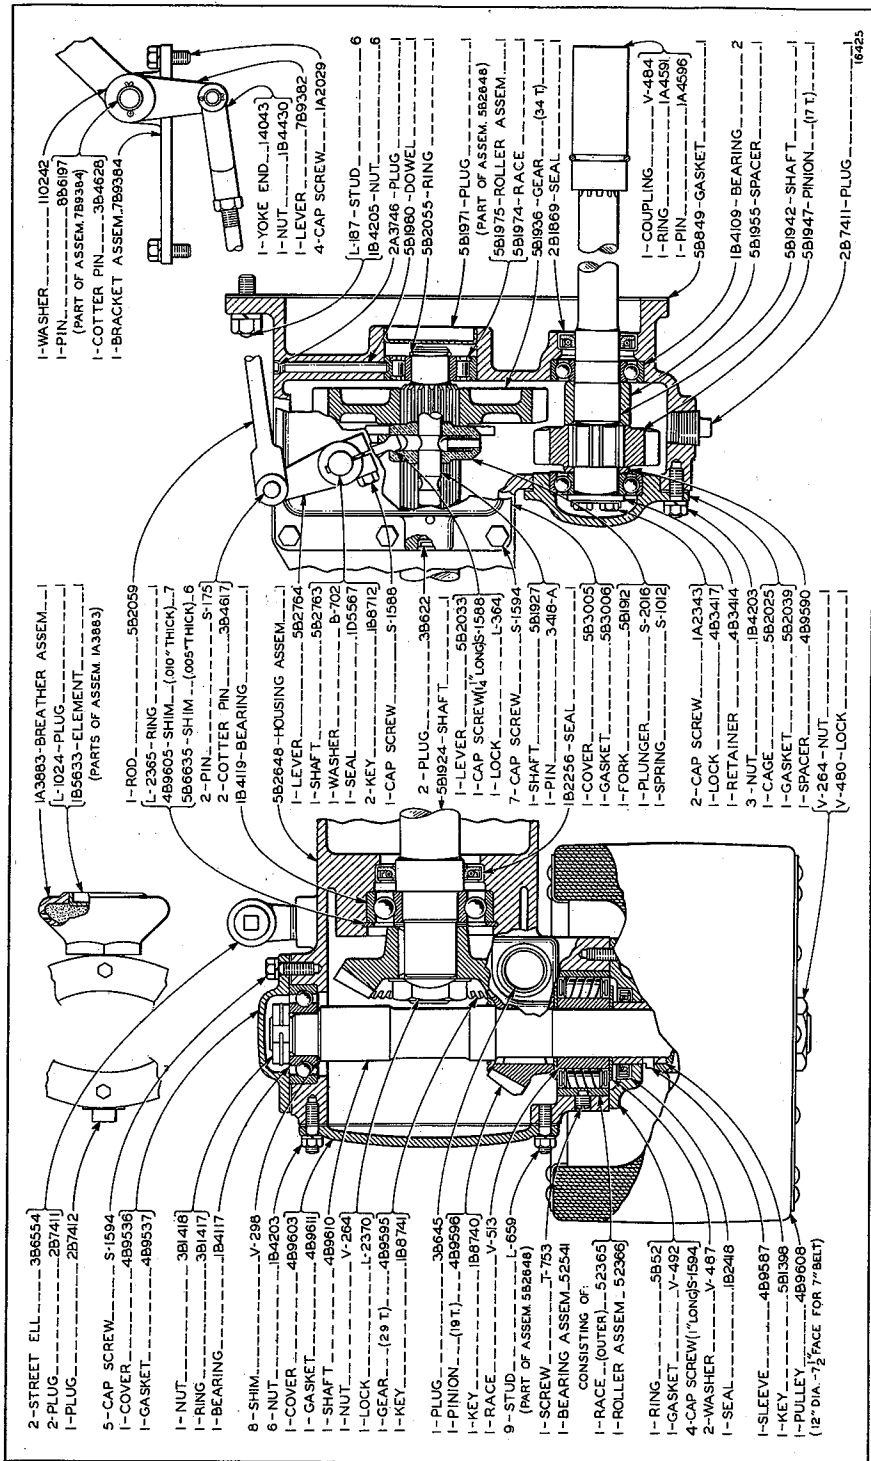

8B6200 BELT PULLEY DRIVE GROUP—With Pulley
 8B6202 BELT PULLEY DRIVE GROUP—Without Pulley

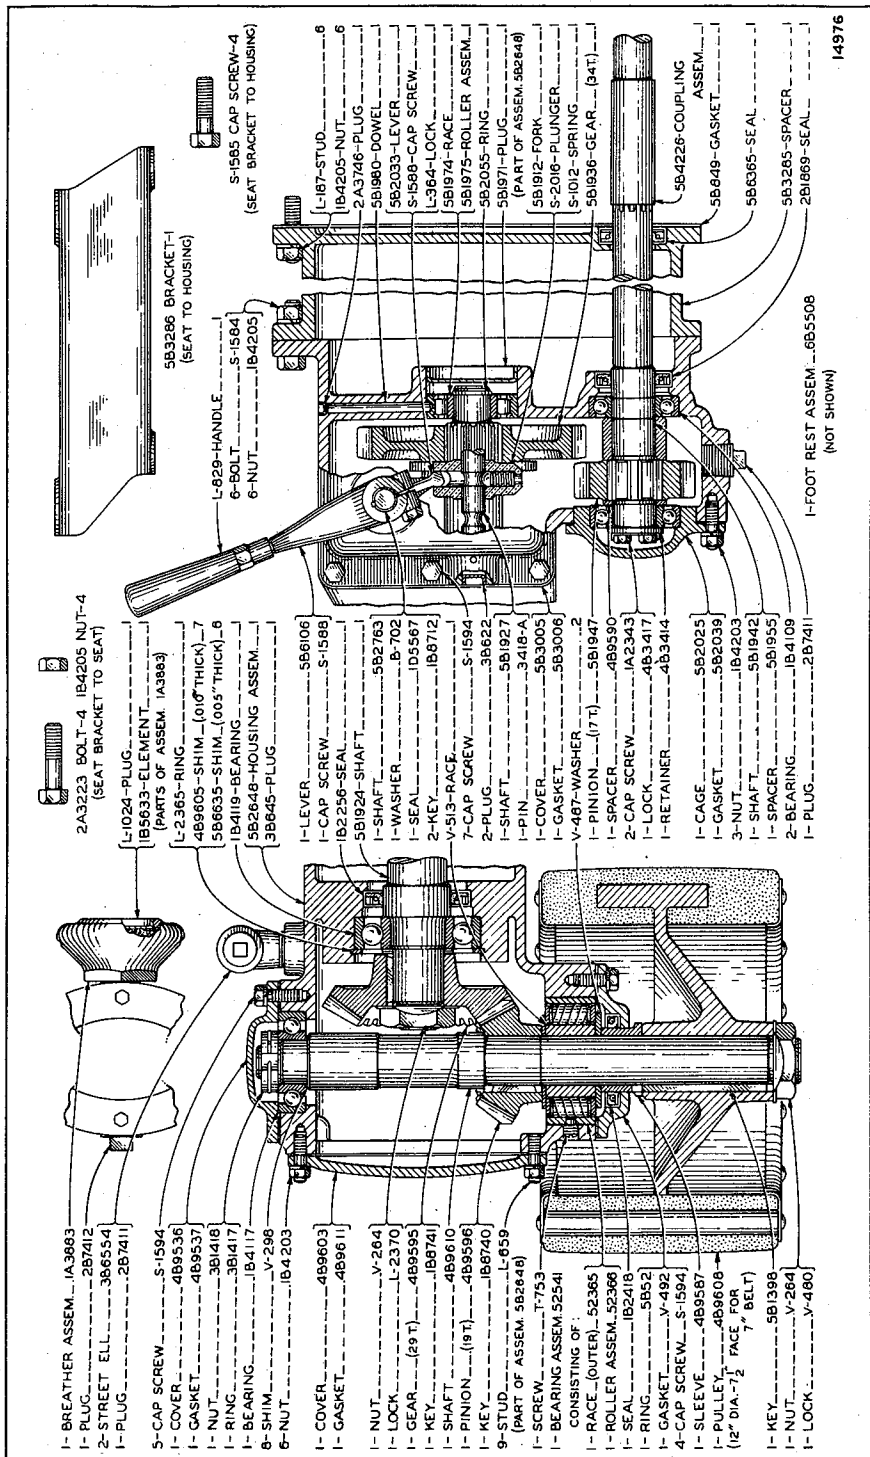


14976

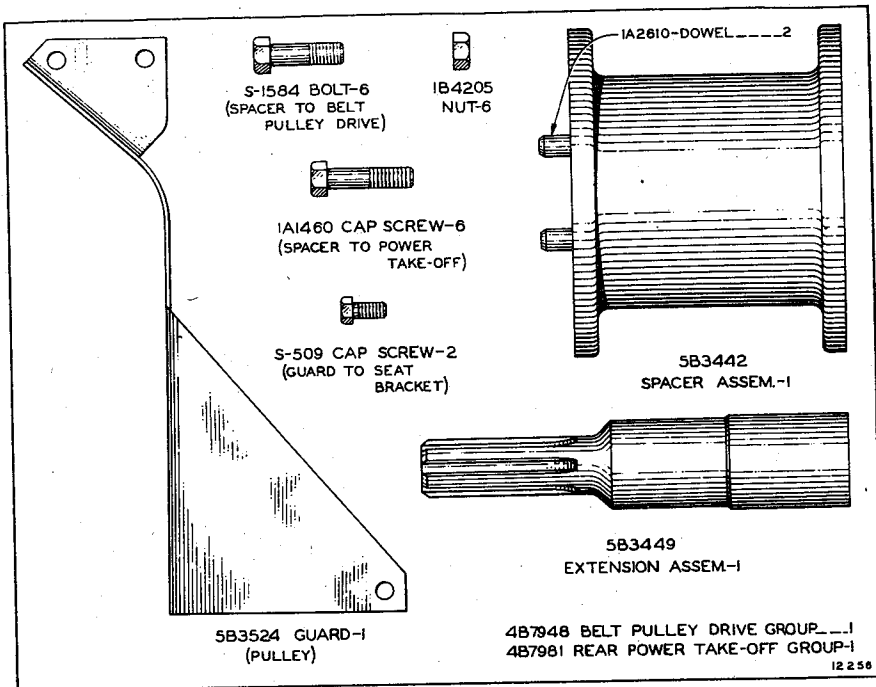

5B4932 BELT PULLEY DRIVE GROUP—Rear Seat Tractors


Only separate parts serviced. When complete group is required order 2F7992
4B7948 Drive Group shown on Page 181. 4B7981 Take-off Group shown on Page 174

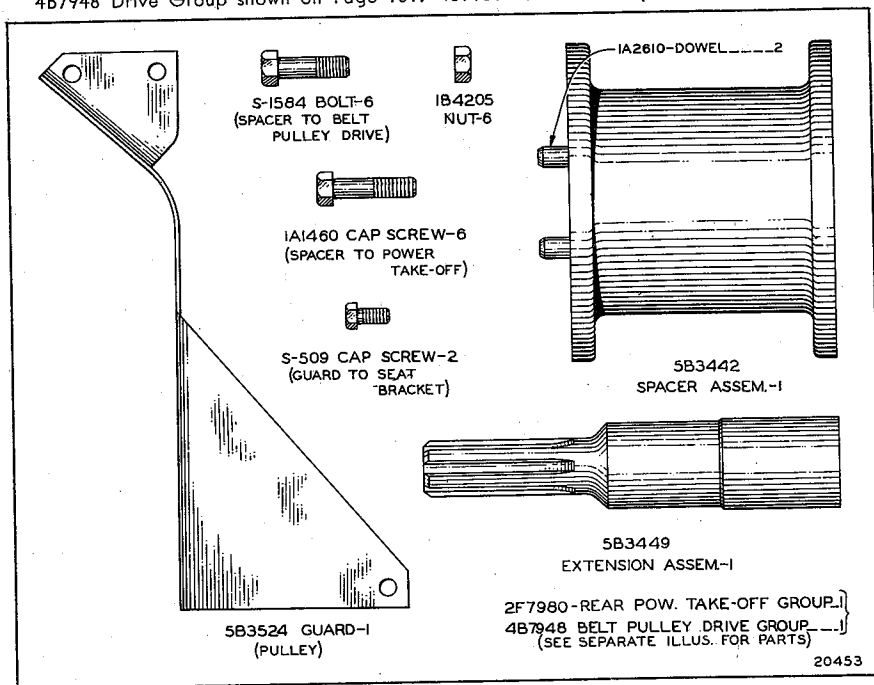

2F7992 BELT PULLEY DRIVE GROUP—Rear Seat Tractors

4B7948 Belt Pulley Drive Group is shown on Page 181
2F7980 Rear Power Take-off Group is shown on Page 175


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

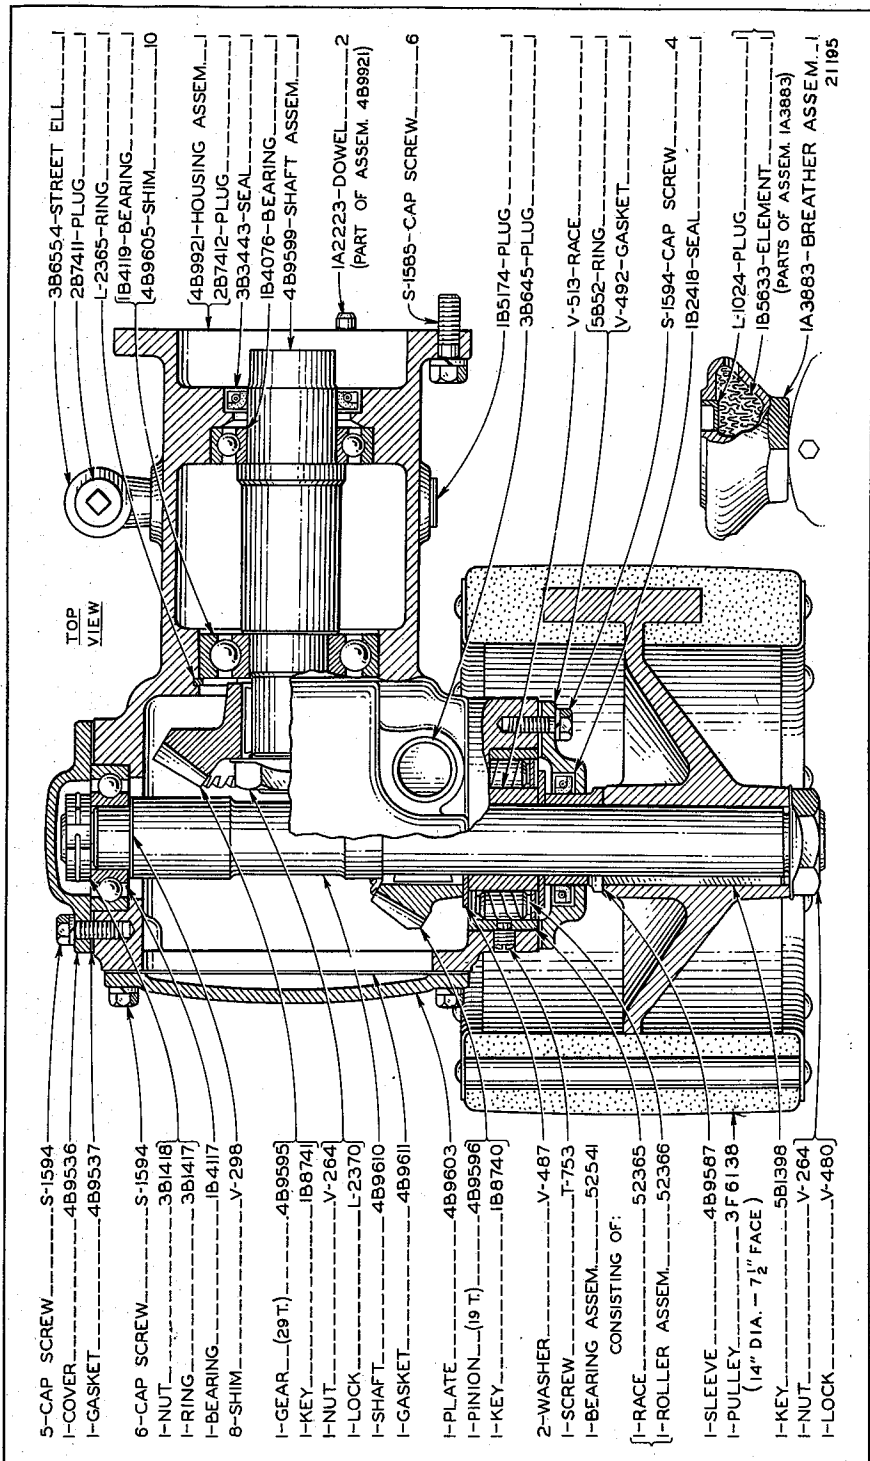

3F6267 BELT PULLEY DRIVE GROUP

For use with Fender Mounted Tank Fuel System

INSERT BETWEEN PAGES 186 & 187 IN FORM 9202—PARTS CATALOG FOR D2 TRACTOR—50 INCH GAUGE

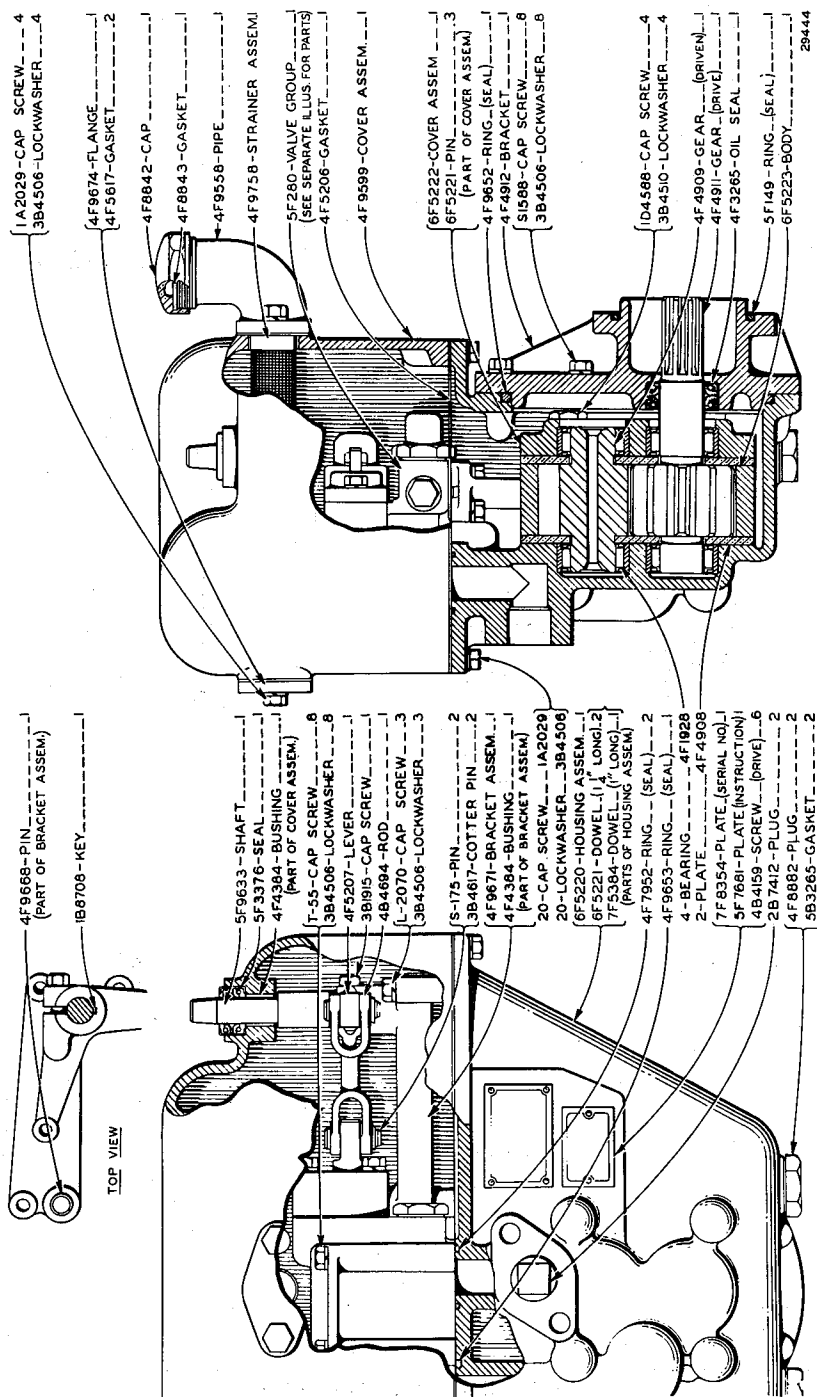


5F279 AGRICULTURAL HYDRAULIC CONTROL GROUP


Agricultural Hydraulic Control Serial No. 9V655 to 9V1025 inclusive and 6R1—Up

Part of 5F318 and 6F1466 Agricultural Hydraulic Control and Cylinder Arrangements. 5F280 Control Valve Group parts are shown on insert

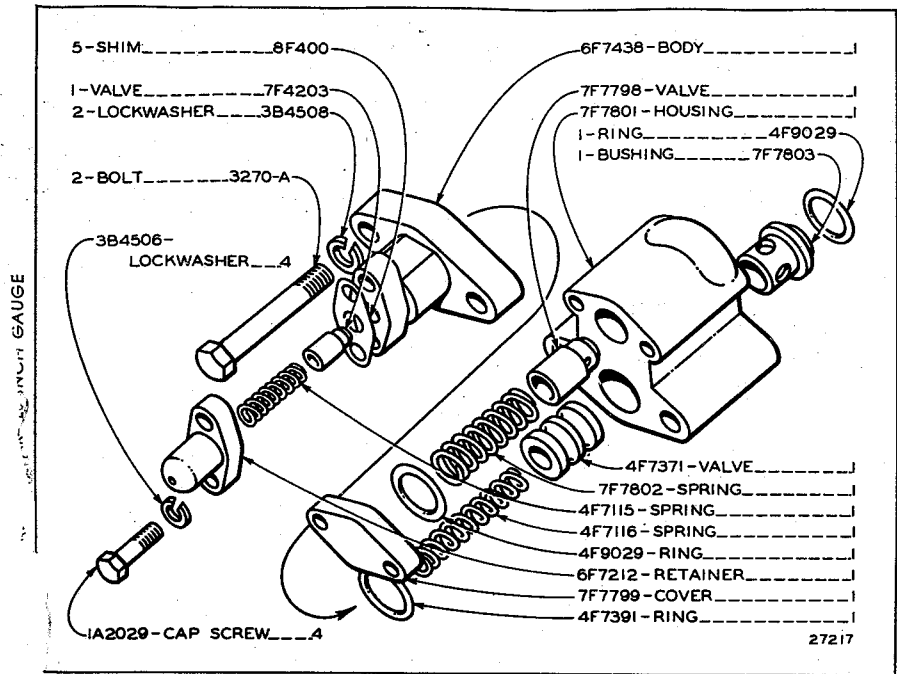


**6F7441 VALVE ASSEMBLY**

Part of 7F3983 Hydraulic Power Unit Group shown on insert

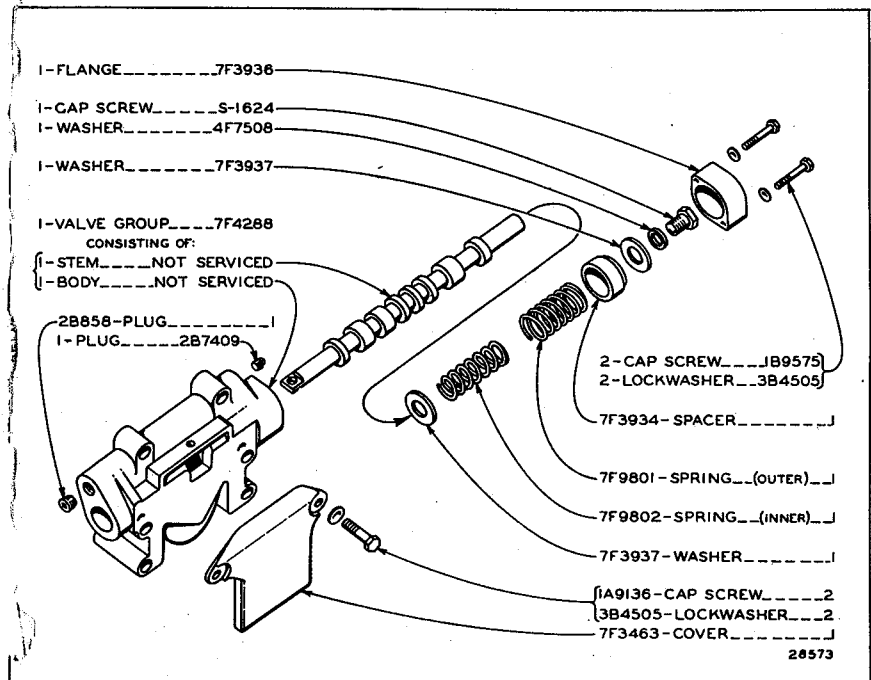**7F4307 VALVE GROUP**


Part of 7F3983 Hydraulic Power Unit Group shown on insert

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

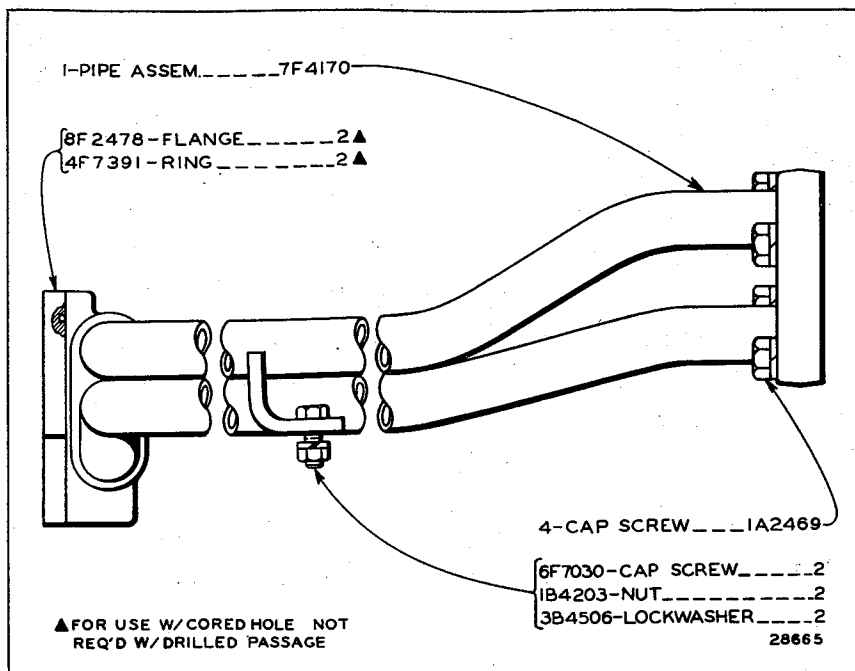


7F4263 HYDRAULIC LINES GROUP

Part of 7F5851 Hydraulic Control Arrangement listed on insert

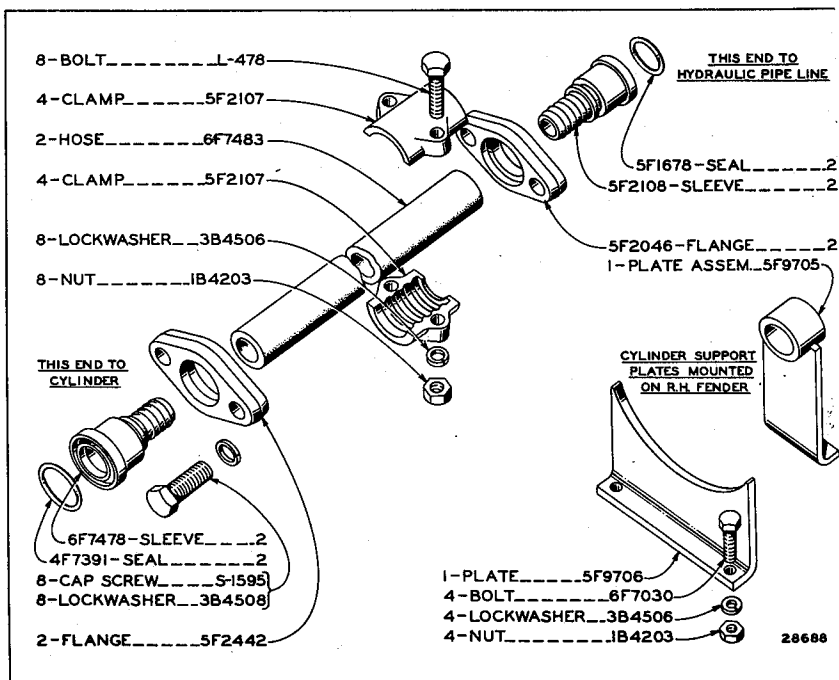


7F4706 HOSE AND FITTING GROUP


For use on Agricultural Hydraulic Power Unit and Cylinder

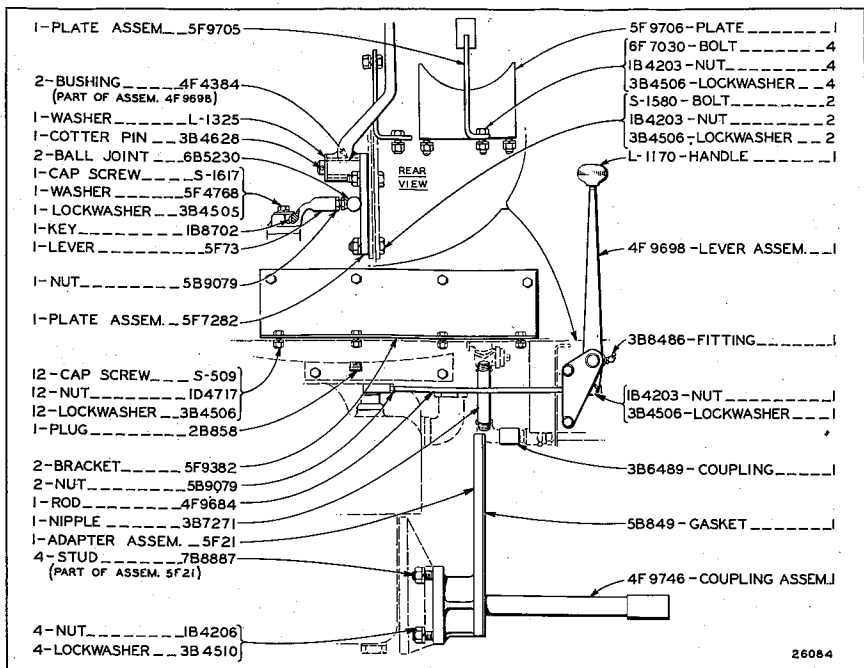

5F210 CONTROL AND MOUNTING GROUP—Second Type
 Effective with Agricultural Hydraulic Power Unit Serial No. 9V96
 Part of 5F318 and 6F1466 Agricultural Hydraulic Power Unit and Cylinder Arrangements.

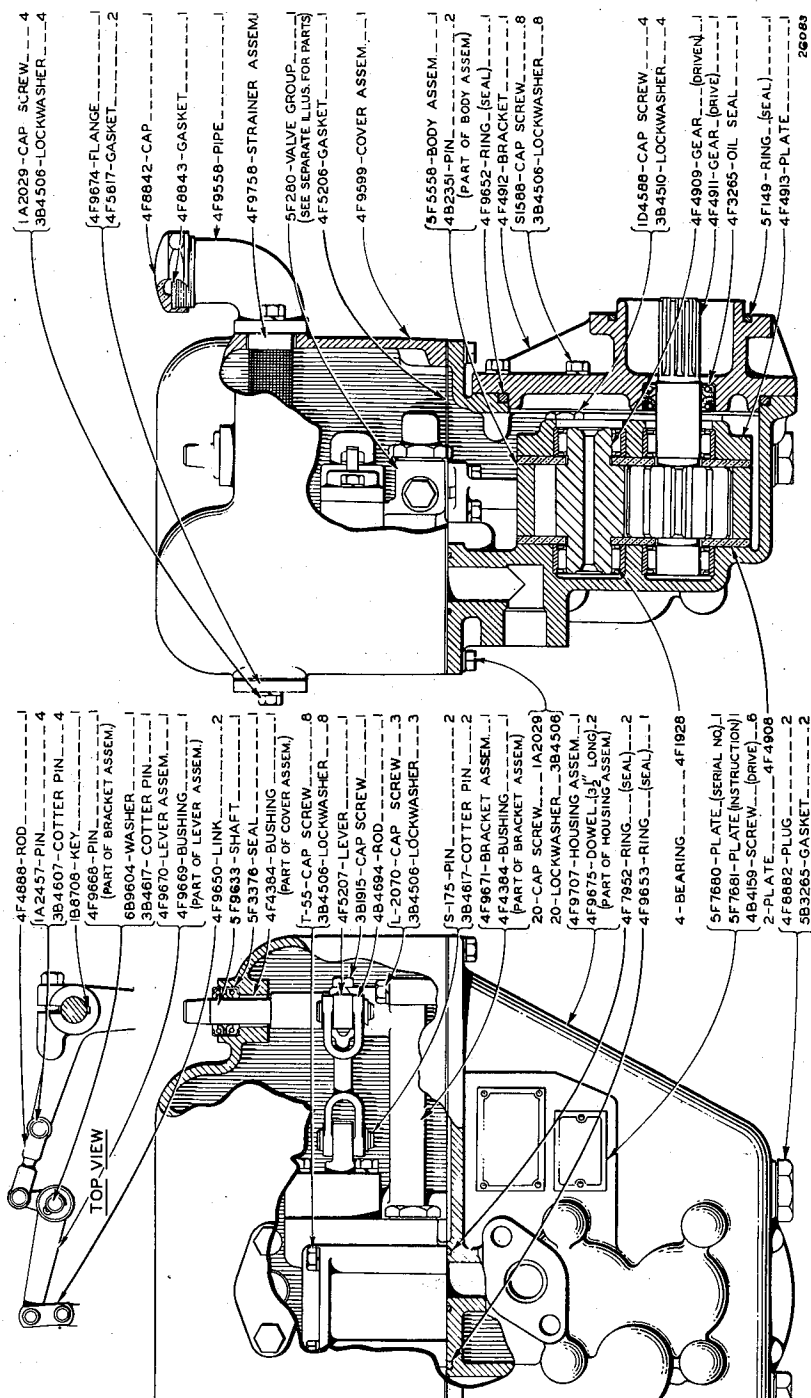

5F279 AGRICULTURAL HYDRAULIC POWER UNIT GROUP—Second Type
 Effective with Agricultural Hydraulic Power Unit Serial No. 9V96. Part of 5F318 and 6F1466 Agricultural Hydraulic Power Unit and Cylinder Arrangements. 5F280 Control Valve Group parts are shown on insert

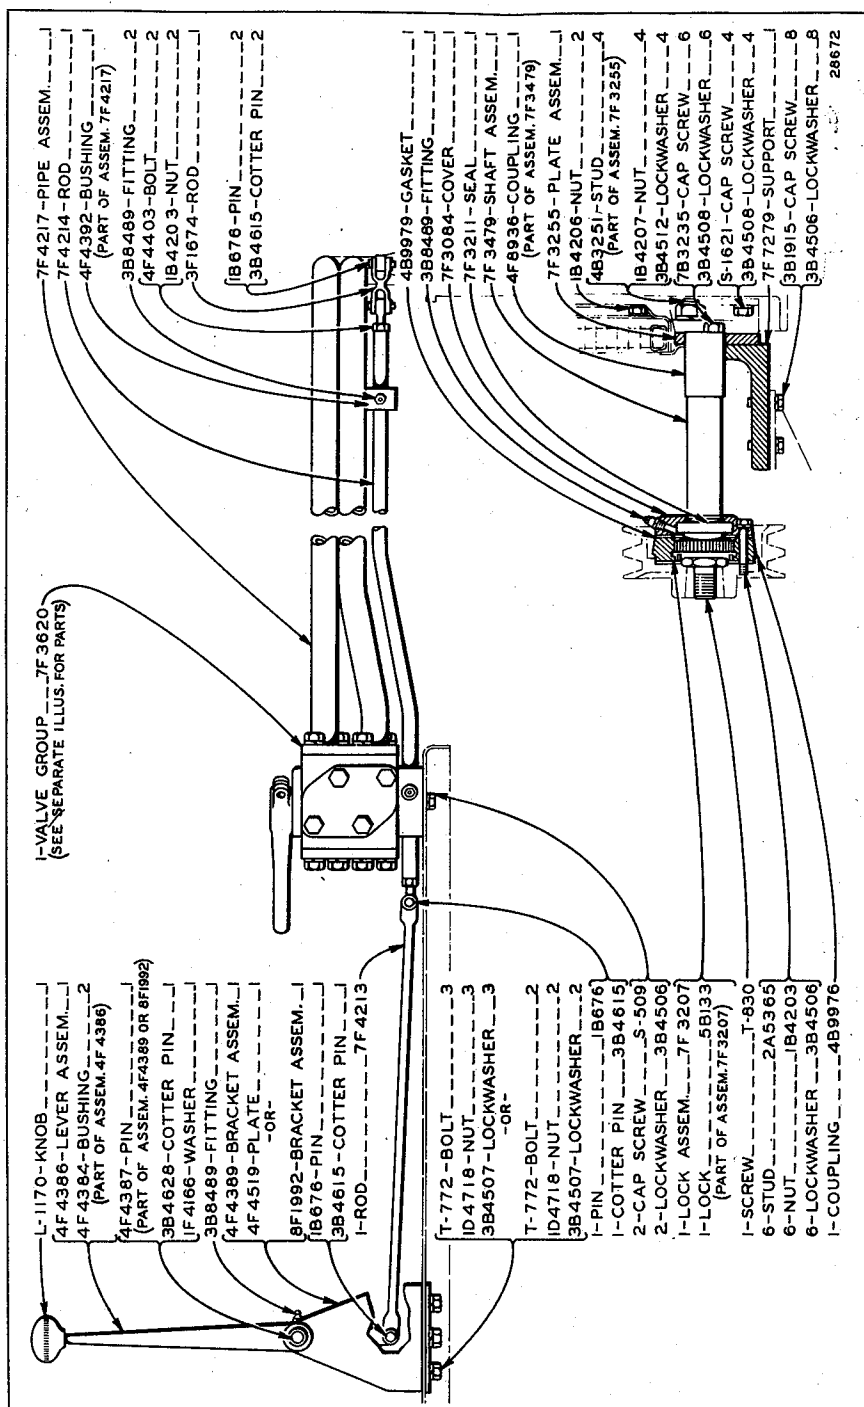

7F5186 MOUNTING GROUP

Part of 7F5851 Hydraulic Control Arrangement listed on insert
7F3620 Valve Group parts are shown on front side of insert


7F5851 Hydraulic Control Arrangement

25 Gallons per Minute—Single Valve


For use with One Implement

Consists of:

- I 7F3983 Hydraulic Power Unit Group.... Shown on insert
- I 7F4263 Hydraulic Lines Group..... Shown on insert
- I 7F5186 Mounting Group Shown on insert

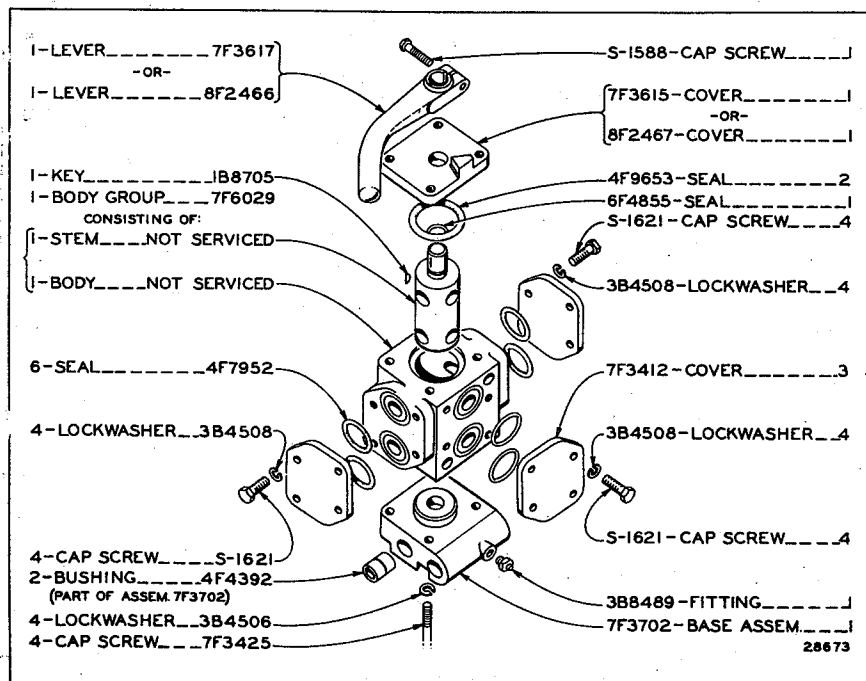
**7F3620 VALVE GROUP**

Part of 7F5186 Mounting Group shown on reverse side of insert

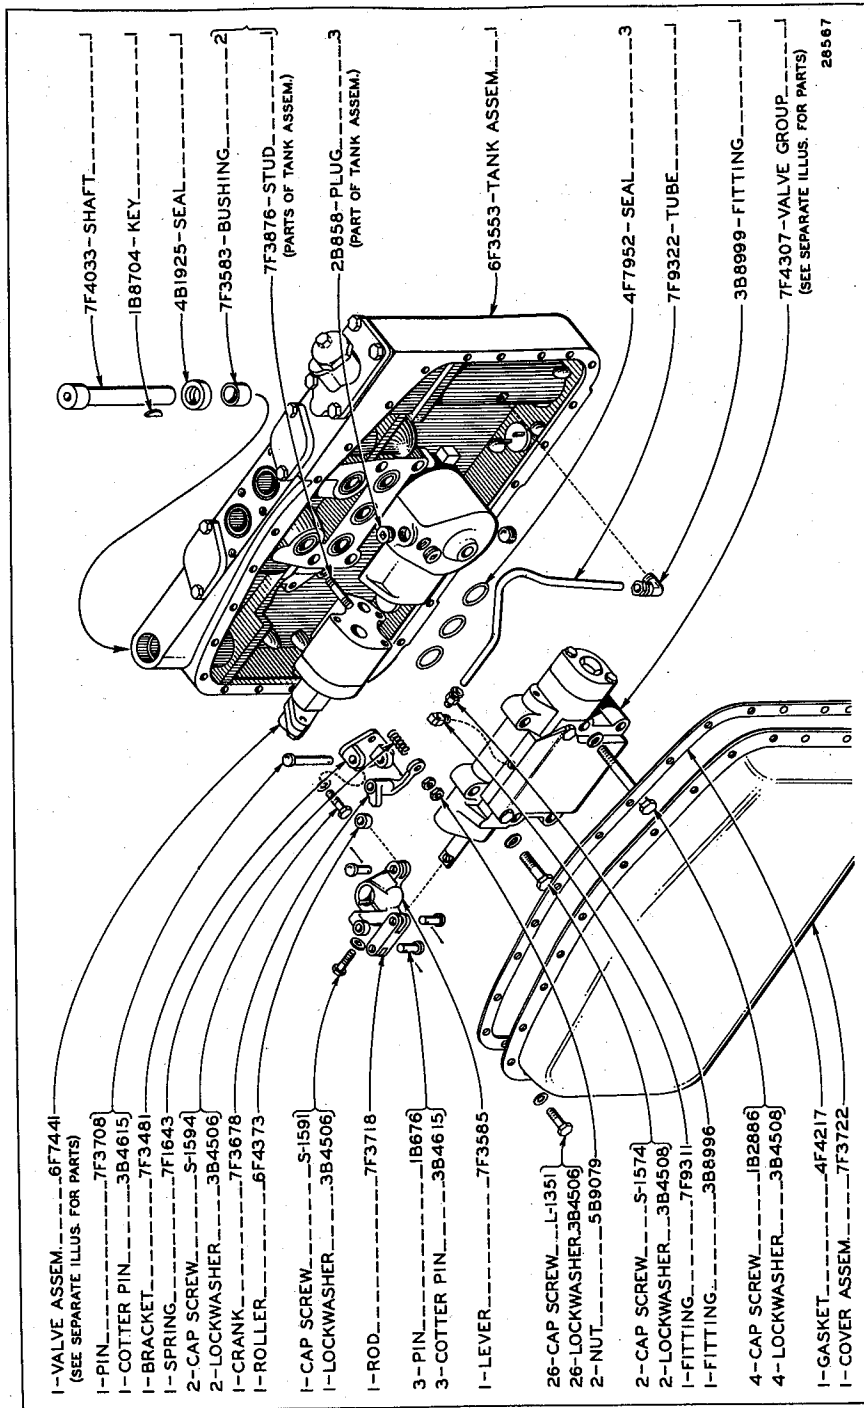


7F3983 HYDRAULIC POWER UNIT GROUP—Part Two

Hydraulic Power Unit Serial No. 9W1 to 9W363 inclusive
Part of 7F5851 Hydraulic Control Arrangement listed on insert
6F7441 and 7F4307 Valve parts are shown on insert

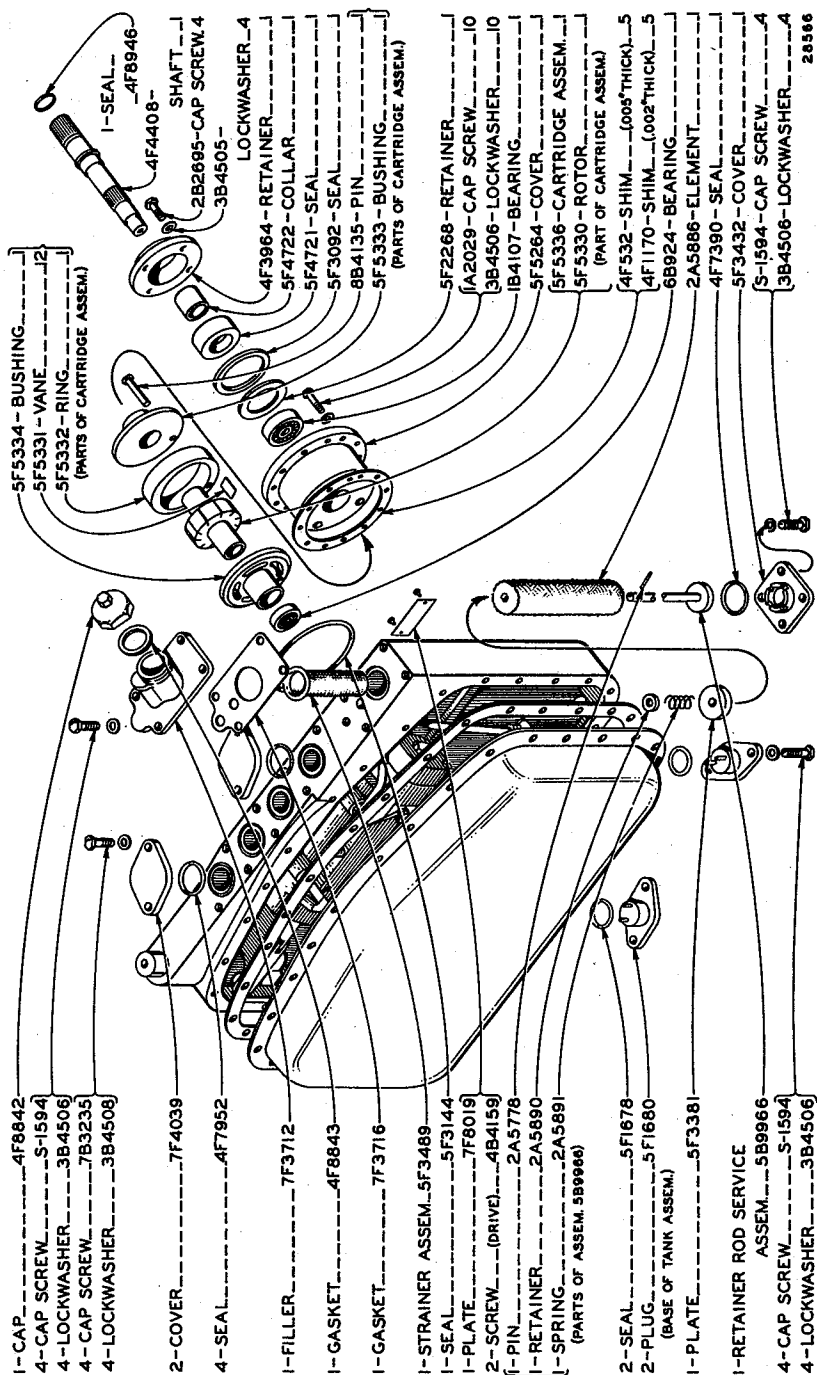


7F3983 HYDRAULIC POWER UNIT GROUP—Part One
 Hydraulic Power Unit Serial No. 9W1 to 9W363 inclusive
 Part of 7F5851 Hydraulic Control Arrangement listed on insert

INSERT BETWEEN PAGES 186 & 187 IN FORM 9202—PARTS CATALOG FOR D2 TRACTOR

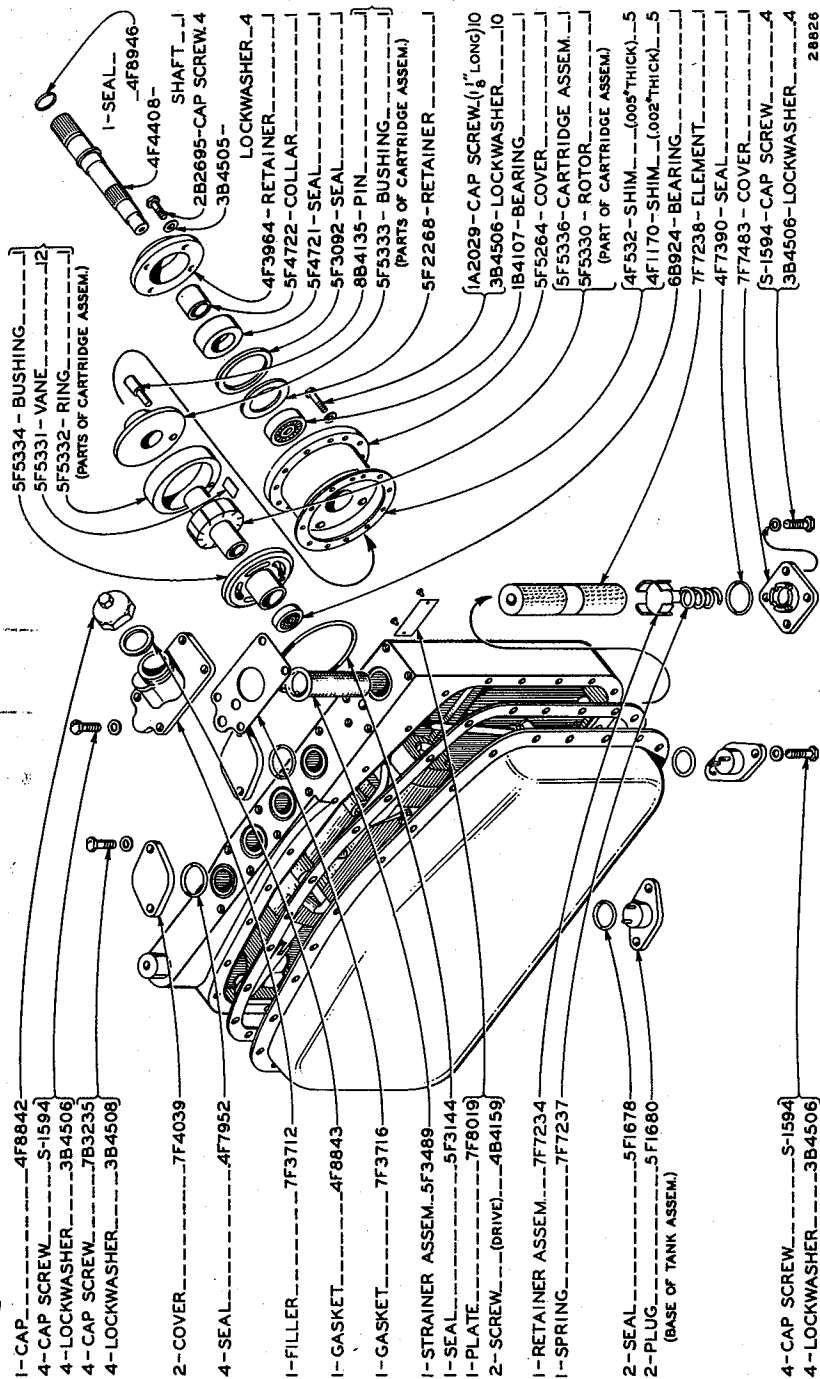

7F3983 HYDRAULIC POWER UNIT GROUP—Part One
Effective with Hydraulic Power Unit Serial No. 9W364
Part of 7F5851 Hydraulic Control Arrangement listed on insert

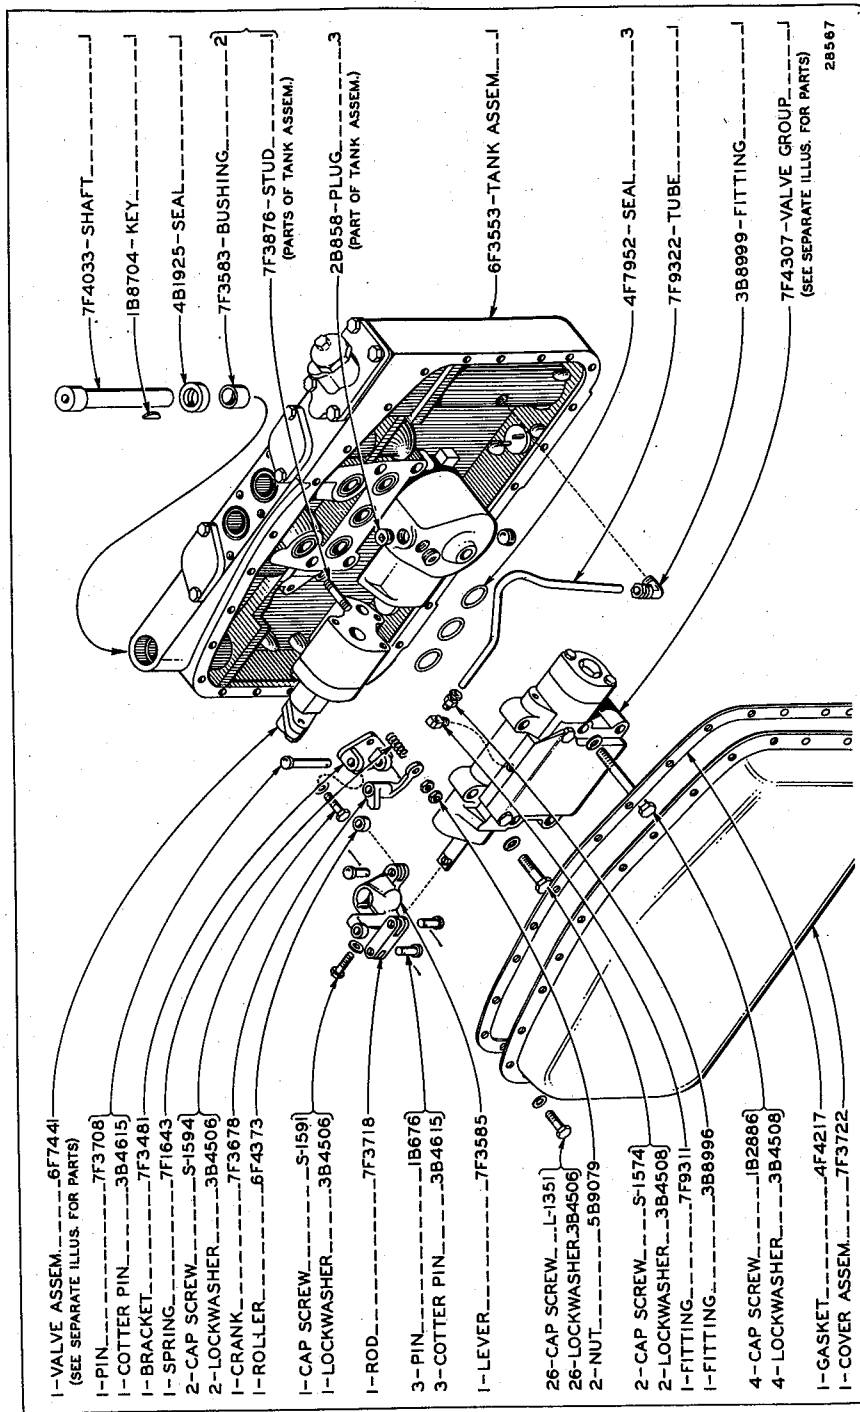


7F3983 HYDRAULIC POWER UNIT GROUP—Part Two

Effective with Hydraulic Power Unit Serial No. 9W364

Part of 7F5851 Hydraulic Control Arrangement listed on insert
6F7441 and 7F4307 Valve parts are shown on insert

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

Before 187
PARTS CATALOG INSERT

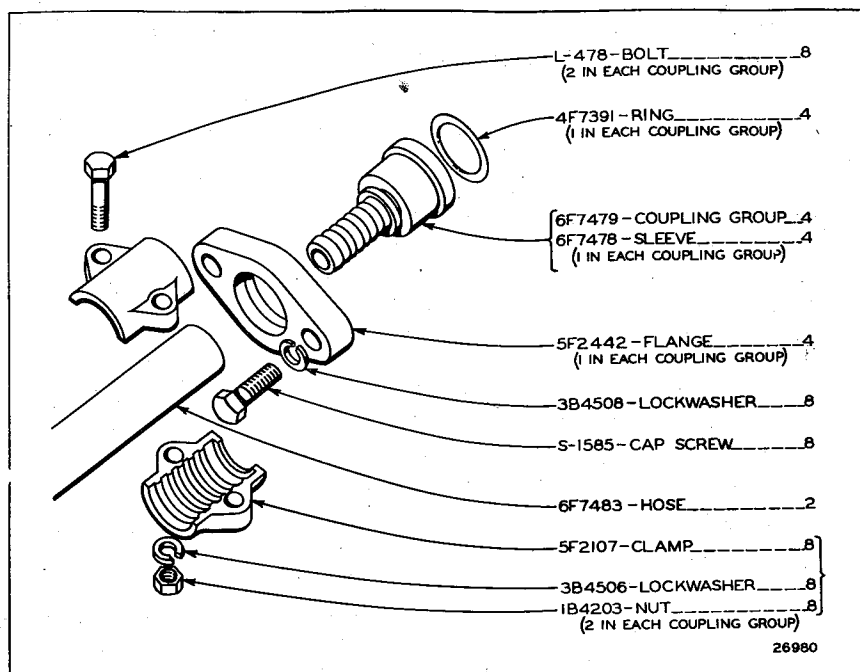

6F7481 HOSE AND FITTING GROUP

Part of 5F318 and 6F1466 Agricultural Hydraulic Power Unit and Cylinder Arrangements

5F318 Agricultural Hydraulic Power Unit and Cylinder Arrangement

I	5F210	Control and Mounting Group.....	Shown Below
I	5F279	Agricultural Hyd. Power Unit Group	Shown on Insert
I	4F6349	Hydraulic Cylinder Group (5" x 8")	Shown on Insert
I	5F7436	Hose and Fitting Group.....	Shown on Insert


Consists of:

- | | | | |
|---|--------|--|-----------------|
| I | 5F210 | Control and Mounting Group..... | Shown Below |
| I | 5F279 | Agricultural Hyd. Power
Unit Group | Shown on Insert |
| I | 4F6466 | Hydraulic Cylinder Group
(5" x 12") | Shown on Insert |
| I | 5F7436 | Hose and Fitting Group..... | Shown on Insert |

! 6F7481 Haze + Lifting Group --- Shown on Inset



Part of 5F318 and 6F1466 Agricultural Hydraulic Power Unit and Cylinder Arrangements

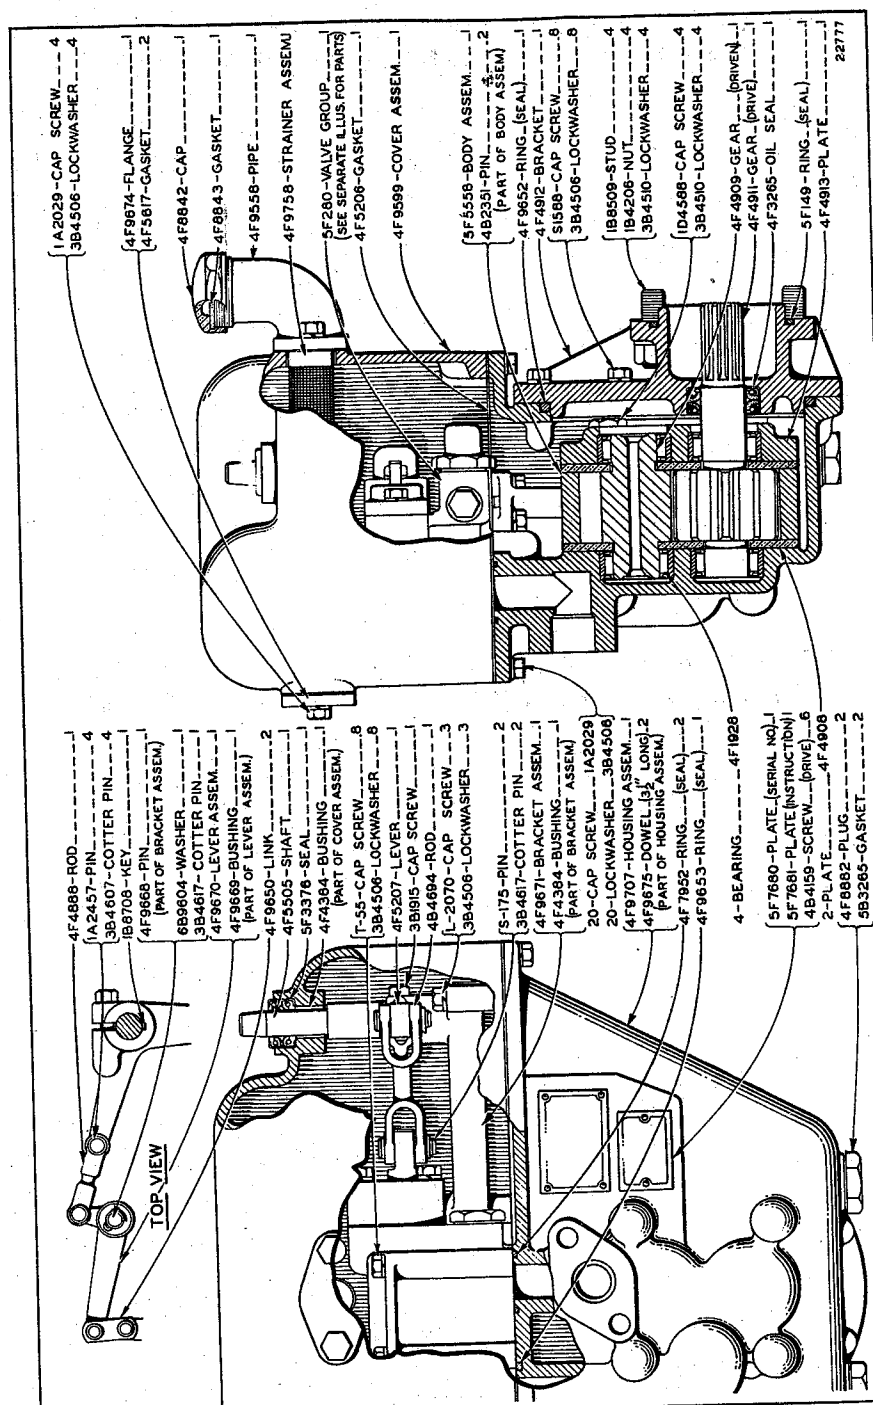


5F279 AGRICULTURAL HYDRAULIC POWER UNIT GROUP

Effective with Agricultural Hydraulic Power Unit Serial No. 9V1


Part of 5F318 and 6F1466 Agricultural Hydraulic Power Unit and Cylinder Arrangements

5F280 Control Valve Group parts are shown on insert

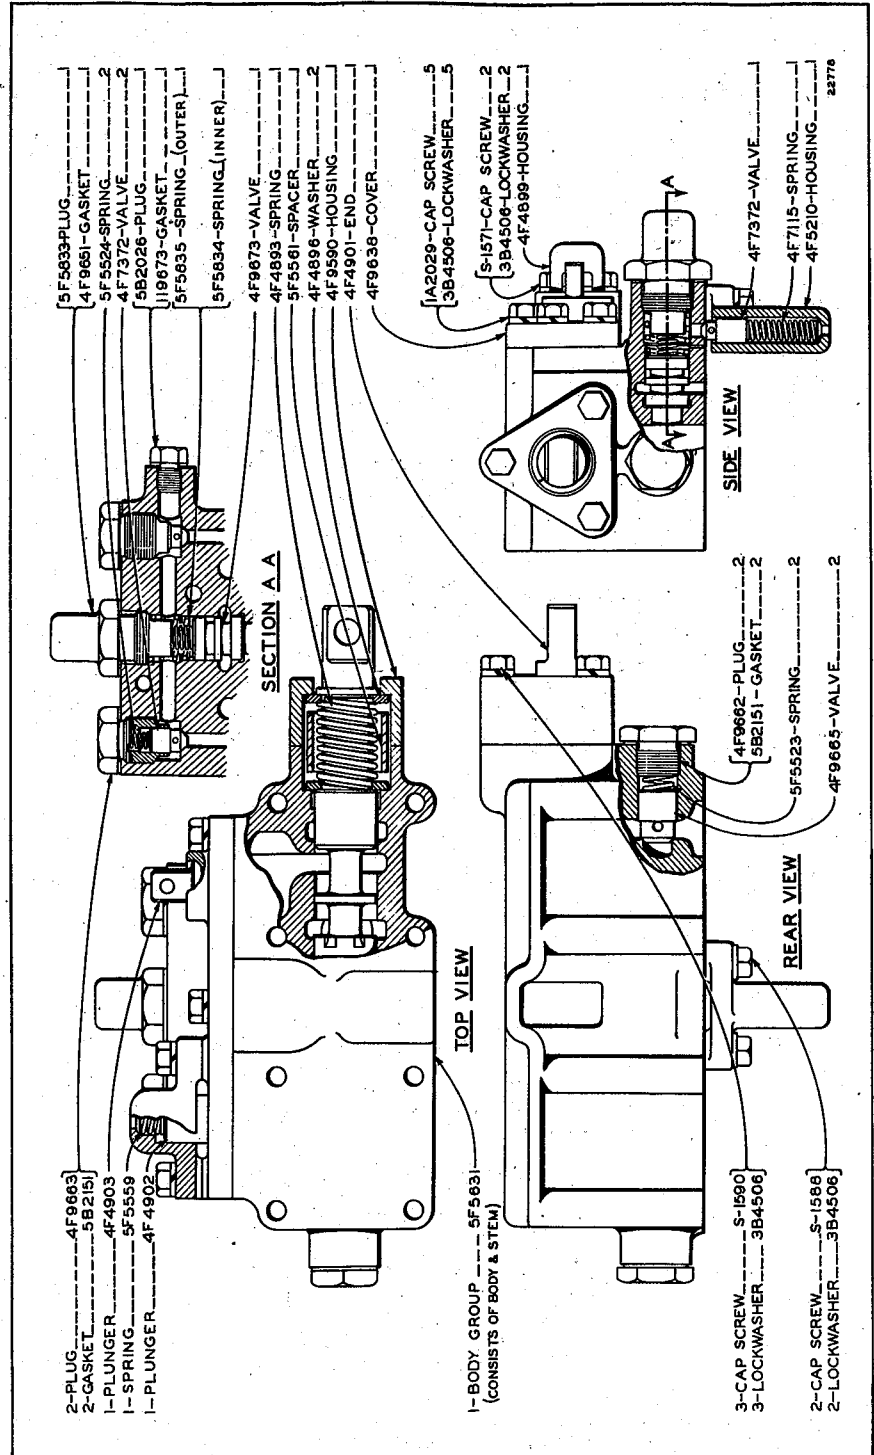

5F280 CONTROL VALVE GROUP
Part of 5F279 Agricultural Hydraulic Power Unit Group

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

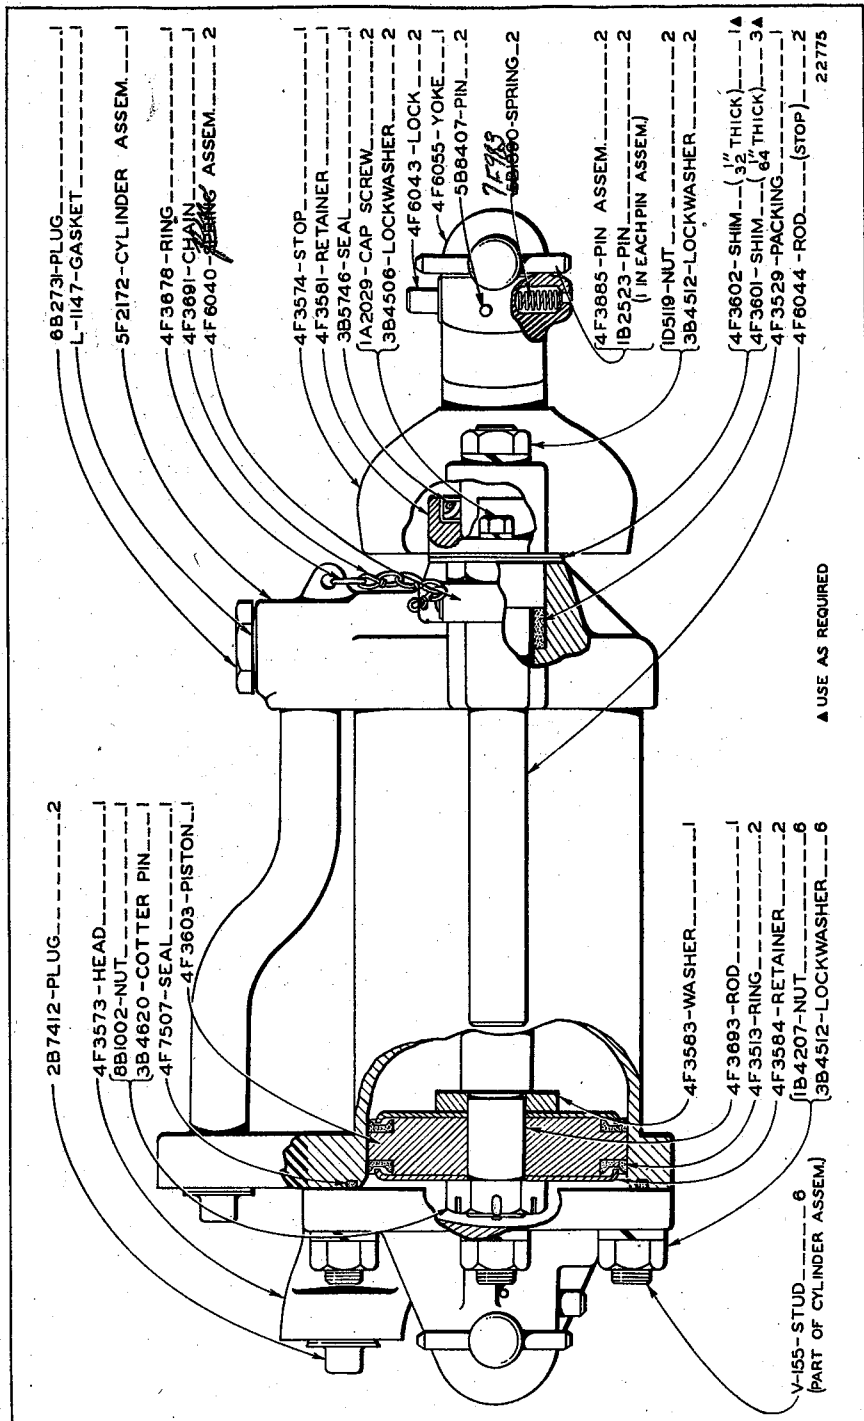


▲ USE AS REQUIRED

4F6349 HYDRAULIC CYLINDER GROUP—5" x 8"
Part of 5F318 Agricultural Hydraulic Power Unit and Cylinder Arrangement

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

IDENTIFY PARTS BY NUMBER AND NAME. PARTS LISTED IN THIS CATALOG ARE THE ONLY PARTS THAT WILL GIVE "CATERPILLAR" PERFORMANCE.

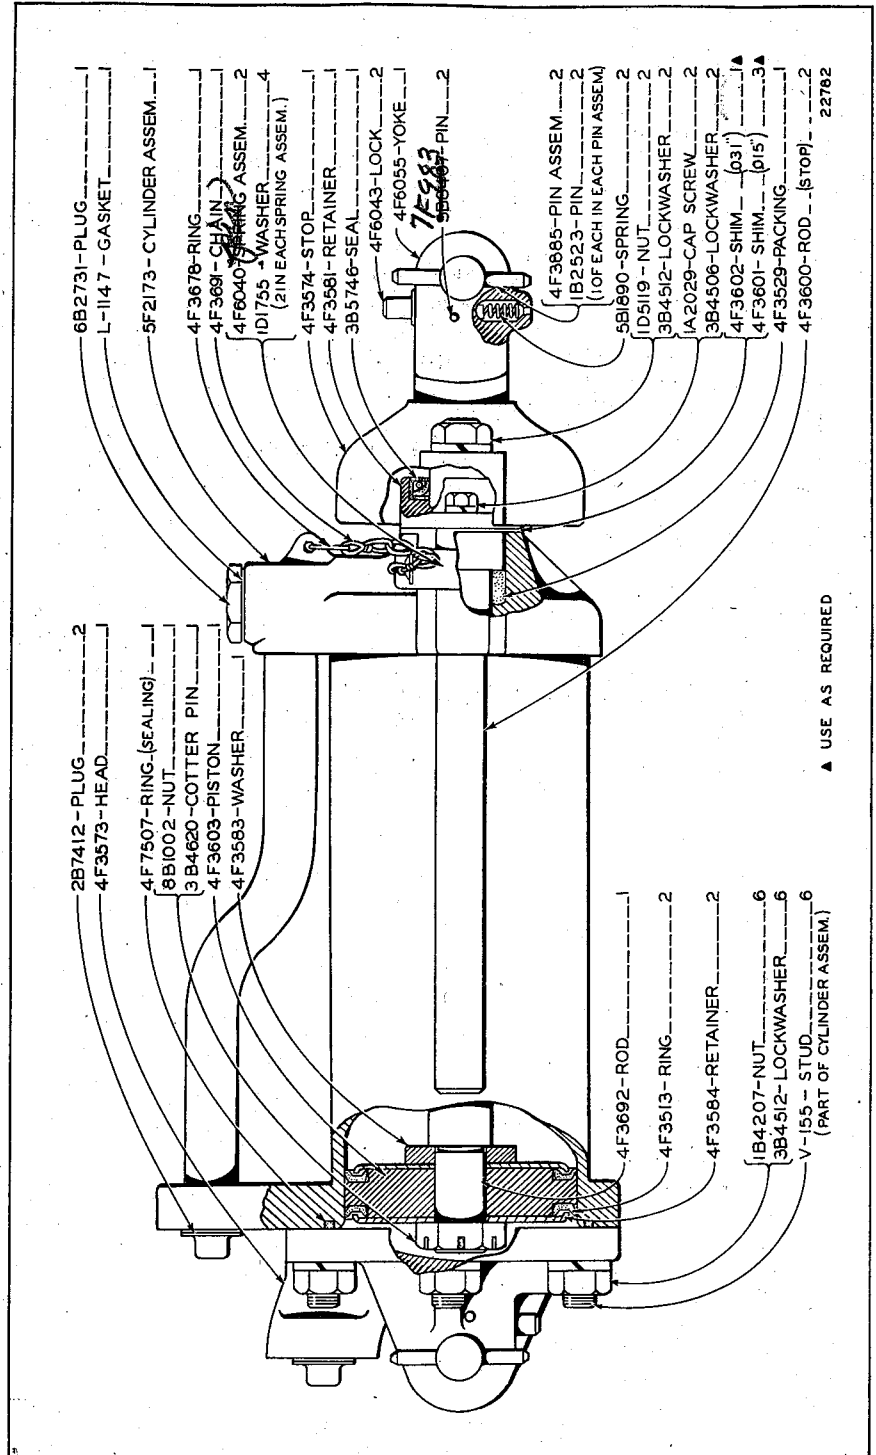

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

8-CAP SCREW...S-1585
 8-LOCKWASHER...3B4508

4-COUPLING GROUP 5F9333

EACH CONSISTING OF:

1-SLEEVE...5F2441

1-SEAL...4F7391
 (RUBBER)

2-BOLT...T-489

2-LOCKWASHER...3B4507

2-NUT...JB4204

2-CLAMP...5F2440

1-FLANGE...5F2442


2-HOSE (6FOOT) 5F7437

24780


5F7436 HOSE AND FITTING GROUP

Part of 5F318 and 6F1466 Agricultural Hydraulic Power Unit and Cylinder Arrangements

Only separate parts serviced. When complete group is required, order 6F7481 shown on insert.

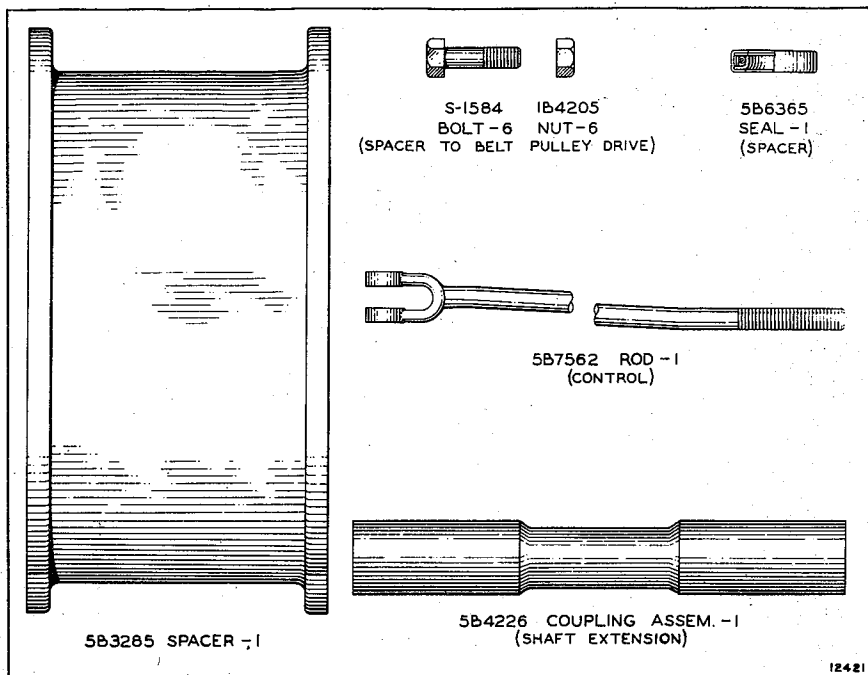
**5B7375 SPACER AND EXTENSION GROUP**

This group is required with 5B814 and 5B815 Belt Pulley Drive Groups when installing a Pulley larger than 12" in diameter

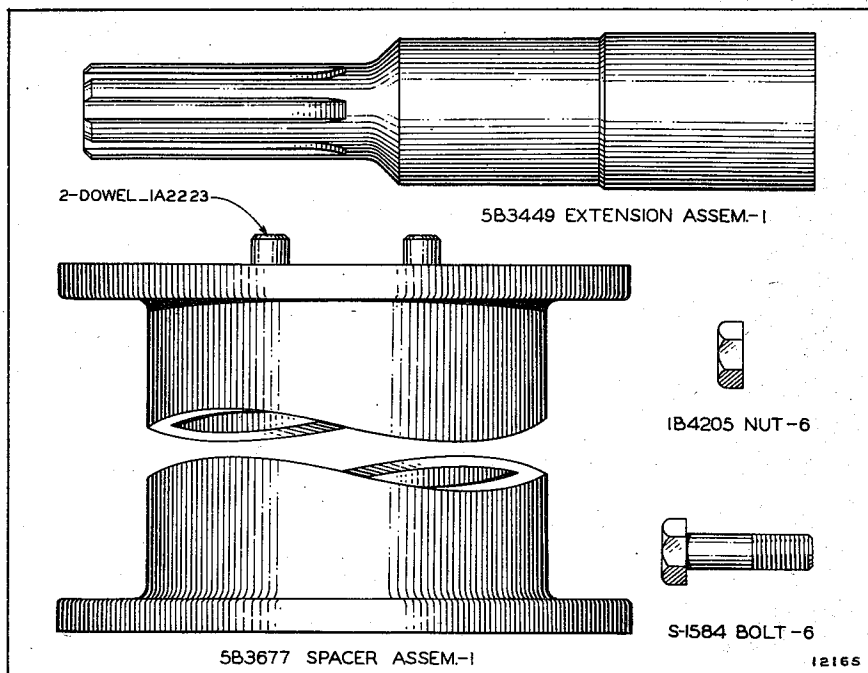
**5B4019 SPACER AND EXTENSION GROUP**

This group is required with 5B483 and 5B484 Belt Pulley Drive Groups when installing a Pulley larger than 12" in diameter

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

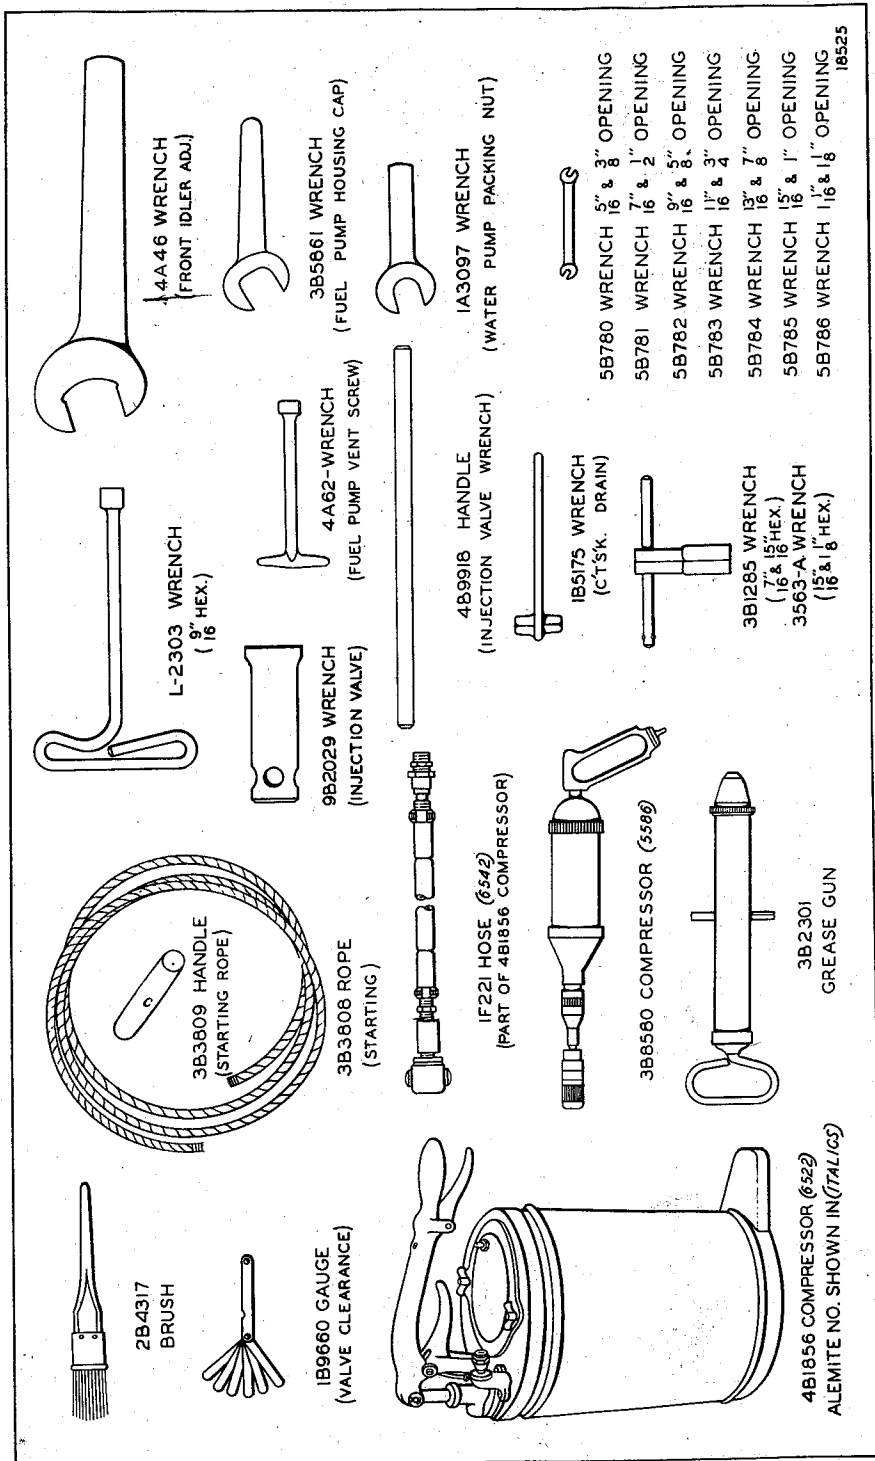


TOOLS

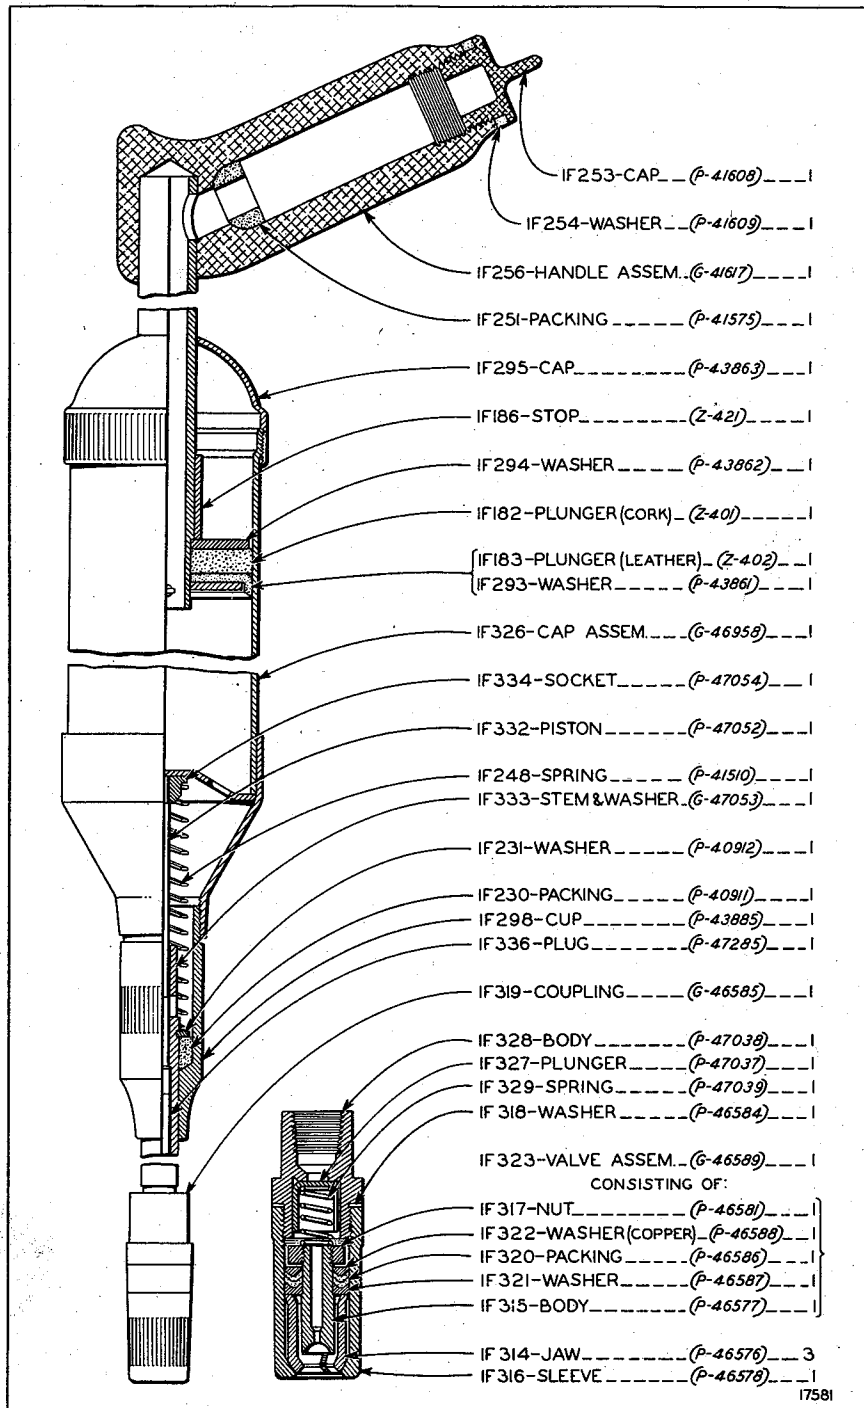
**3B8580 HYDRAULIC COMPRESSOR**

Numbers shown in (*italics*) are "Alemite" part numbers. (See Page 191)

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

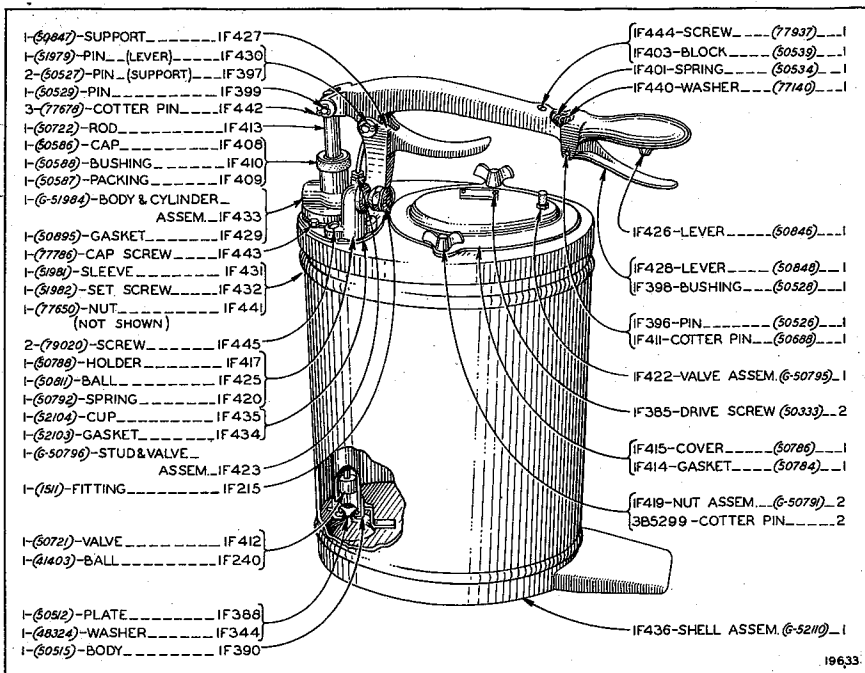
**481856 VOLUME COMPRESSOR**

Numbers shown in (italics) are "Alemite" part numbers. (See Page 191)

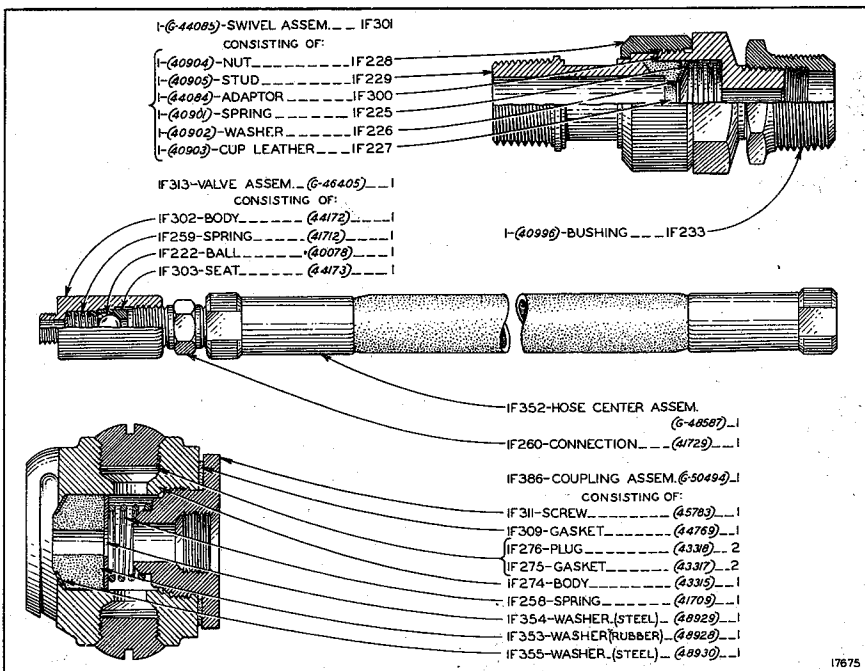**IF221 VOLUME COMPRESSOR HOSE**

Numbers shown in (italics) are "Alemite" part numbers. (See Page 191)

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

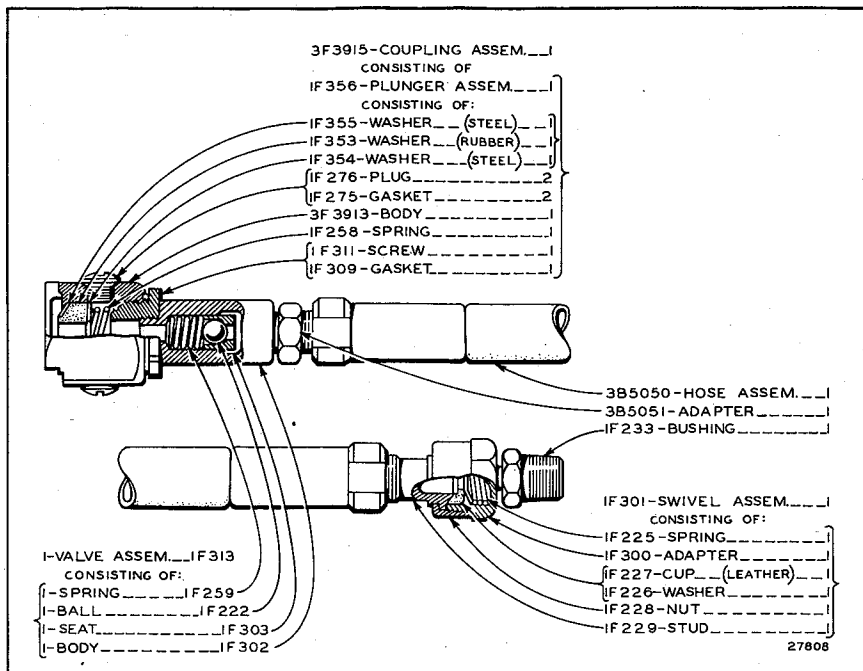**IF221 HOSE ASSEMBLY—First Type**

Part of 4B1856 Volume Compressor shown on Page 190

FRANCAIS

Ce catalogue des pièces contient des illustrations, numéro des pièces, noms et quantités requises de toutes les pièces fournis pour le service de la machine "Caterpillar" à laquelle se réfère.

Les machines et les attachements "Caterpillar" sont vendues et servies par une organisation mondiale de distributeurs et agents responsables avec des Départements de Pièces bien fournis et un personnel de techniciens expérimentés. Pour s'assurer d'une opération parfaite et continuée de votre équipement "Caterpillar", faite seulement usage de **Pièces Authentiques "CATERPILLAR"** lesquelles sont fabriquées conforme au même haut étalon de qualité, matériel et d'exécution que les pièces originales.

Il y a un Agent "Caterpillar" près de vous.

Comment Faire Une Commande de Pièces Correctement

Pour s'assurer de recevoir les pièces exactes et avec un minimum de délai, placez votre bons de commande avec l'Agent "Caterpillar" le plus proche, ne manquant pas de donner la quantité, le numéro et le nom de chaque article que l'on veut. Le numéro de la série de la machine pour laquelle les pièces sont intentionnées devraient toujours être indiqués. Cela est important!

Ne perdez pas de vue de fournir le nom correcte du destinataire, ainsi que l'adresse de la rue, la ville, la région et le pays auxquelles les pièces devront être expédiées et déclarez si l'expédition doit être faite par fret, express, par colis postal ou par d'autres moyens.

Réclamations

Les réclamations pour des erreurs ou manque dans le chargement des pièces commandés devraient être faites promptement.

Les responsabilités de l'expéditeur pour cassage, perte ou dommage cesse lorsque la marchandise est délivrée à la compagnie de transportation de laquelle on a obtenu un reçu indiquant que l'envoi a été accepté par eux en bonnes conditions.

Si quelque matériel montré dans un connaissance ou un reçu d'express est manquant, cassé ou autrement endommagé, n'acceptez pas l'envoi jusqu'à tant que l'agent du porteur reconnait le manqué ou le dommage sur la facture originale de fret. Cela devrait être toujours fait, autrement les compagnies de transportation ne considèrent pas une réclamation de perte ou dommage. Si l'agent ne fait pas une inspection, alors on devrait faire une réclamation sous serment par écrit qu'on l'avait avisé (un certain jour), et a manqué de le faire. Cette déclaration avec la facture originale du fret et le connaissance original (si disponible), fera valoir votre réclamation.

ITALIANO

Questo catalogo di pezzi contiene illustrazioni, nome, numero delle pezze di ricambio e le quantità necessarie alla manutenzione di tutte le macchine "Caterpillar" alle quali riferisce.

Le macchine e gli attacchi "Caterpillar" sono venduti e custoditi per tutto il mondo da un'organizzazione di distributori e rivenditori responsabili con Dipartimenti di pezzi ben provvisti ed operai addestrati alla fabbrica. Per assicurare il continuo funzionamento soddisfacente del fornimento "Caterpillar", usate soltanto **Pezze di Ricambio Genuine "CATERPILLAR"** le quali sono costruite secondo le stesse alte norme di qualità, materiale e mano d'opera come le pezze originali.

Vicino a voi c'è un Rivenditore "Caterpillar".

Modo Esatto per Ordinare Pezze

Per accertarvi di ricevere le pezze esatte col minimo ritardo, vogliate presentare le vostre ordinazioni al più vicino Rivenditore "Caterpillar", e non mancate di indicare la quantità, il numero delle pezze ed il nome di ciascun articolo che desiderate. Il numero di serie della macchina per la quale se ne desiderano pezze, deve essere sempre indicato. Questo è importante!

Non vi dimenticate di dare il nome corretto del destinatario, come pure la strada, città, provincia e regione a cui le pezze devono essere spedite, e indicate se la spedizione deve essere fatta a piccola o grande velocità, per pacco postale, o per qualche altro mezzo.

Reclami

Reclami per errori o mancanza di spedire tutte le pezze ordinate devono esser fatti immediatamente al ricevere la spedizione.

La responsabilità dello spedizioniere per rotture, perdite o danni cessa al momento che la merce è consegnata alla compagnia di trasporto, dalla quale una ricevuta è ottenuta indicando che la spedizione fu da loro accettata in buone condizioni.

Se qualsiasi parte del material indicato sulla polizza di carico è mancante, rotta o danneggiata, non accettate la spedizione finché l'agente della compagnia di trasporto confermi sulla fattura originale di trasporto la mancanza o il danno. Questo deve farsi sempre, altrimenti le compagnie di trasporto non accettano reclami per perdite o danni. Se l'agente non fa un'ispezione, allora si deve fare un attestato che egli fu notificato (indicando la data), ma che non la fece. Questo attestato con la fattura originale di trasporto e la polizza di carico originale (se ottenibile), sopporterà il vostro reclamo.

DEUTSCH

Der vorliegende Katalog von Ersatzteilen enthält die Abbildungen, Teil-Nummern, Namen und benötigten Quantitäten von allen Ersatzteilen für die "Caterpillar"-Maschine, auf die er sich bezieht.

Eine weltweite Organisation von verantwortlichen Verteilungsstellen und Händlern mit reichlichen Ersatzteil-Lagern und in unserer Fabrik ausgebildeten Fachleuten verkaufen "Caterpillar"-Maschinen und Zubehörteile und halten sie instand. Um die dauernde und befriedigende Arbeit Ihrer "Caterpillar" Ausrüstung sicherzustellen, verwenden Sie nur **Echte "CATERPILLAR" Teile**, die mit derselben hohen Norm von Qualität, Material und Sorgfalt angefertigt werden, wie die Originalteile.

Ein "Caterpillar"-Händler ist in Ihrer Nähe.

Wie man Ersatzteile richtig bestellt

Um sicherzustellen, dass man die richtigen Teile mit einem Minimum von Verzögerung erhält, gebe man die Order dem nächstgelegenen "Caterpillar"-Händler, und vergesse nicht, die Quantität, Teilnummer und Namen jedes gewünschten Teiles genau anzugeben. Die Serien-Nummer der Maschine, für welche die Teile bestimmt sind, sollte immer angegeben werden. Dies ist wichtig!

Man vergesse nicht, den korrekten Namen des Empfängers anzugeben, auch die Strassen-Adresse, Stadt, Kreis und Staat, wohin die Teile geschickt werden sollen; auch gebe man an, ob der Versand durch Fracht, Express, Paketpost oder sonstige gemacht werden soll.

Reklamationen

Reklamationen wegen Fehler oder unvollständigem-Versand von bestellten Teilen sollten sofort nach Erhalt der Sendung gemacht werden.

Die Verantwortlichkeit des Lieferanten für Bruch, Verlust oder Schaden endet mit der Ablieferung der Ware an die Transport-Gesellschaft, von der eine Quittung ausgestellt wird, welche als Beweis dafür gilt, dass die Sendung von ihr in gutem Zustand angenommen wurde.

Wenn ein Teil des auf dem Frachtbrief oder der Express-Quittung aufgeführten Materials fehlt, zerbrochen oder sonst beschädigt ist, nehme man die Sendung nicht an, ohne dass der Agent der Transport-Gesellschaft solchen Mangel oder Schaden auf dem originalen Frachtbrief bestätigt. Dies muss immer getan werden, da die Transport-Gesellschaften sonst Reklamationen auf Schadenersatz nicht annehmen. Wenn der Agent eine Inspektion icht vornimmt, dann sollte ein beglaubigte Bescheinigung ausgestellt werden, dass er (an einem bestimmten Tage) benachrichtigt worden war, es aber nicht getan hat. Eine solche Bescheinigung zusammen mit dem originalen Frachtbrief und (wenn verfügbar) dem originalen Ladeschein wird Ihre Reklamation unterstützen.

ESPAÑOL

Este Catálogo de Piezas contiene ilustraciones, los números y nombres de las piezas y las cantidades requeridas de todas las piezas abastecidas para la máquina "Caterpillar" a que se refiere.

Las máquinas y accesorios "Caterpillar" se venden y son abastecidos por una organización mundial de distribuidores y agentes responsables que cuentan con un Departamento de Piezas bien surtido y con mecánicos bien preparados en la fábrica. Para asegurar el continuo funcionamiento satisfactorio de su equipo "Caterpillar", use solamente Piezas Genuinas "CATERPILLAR" que son manufacturadas de acuerdo con el mismo patron de alta calidad, material y mano de obra que las piezas originales. Cerca de Ud. hay un Agente "Caterpillar".

Cómo Pedir las Piezas Correctamente

Para tener seguridad de recibir las piezas correctas con la menor demora, háganse los pedidos al Agente "Caterpillar" más cercano no olvidándose de indicar la cantidad, el número y nombre de cada pieza que se necesita. Siempre debe darse el número de serie de la máquina para la cual se necesitan las piezas. Esto es importante!

No hay que olvidar dar el nombre correcto del consignatario y su dirección completa, calle, número, ciudad, estado o provincia y el país al cual las piezas deben ser embarcadas. Indíquese si el embarque ha de hacerse por flete, por expreso, por correo o por otra vía.

Reclamos

Los reclamos por errores o por no haber embarcado todas las piezas pedidas deben hacerse en seguida al recibirse el embarque.

La responsabilidad del embarcador en cuanto a roturas, pérdidas o perjuicios, cesa al entregarse la mercancía a la compañía de transportes de quien se obtiene un recibo que indica que el embarque fué aceptado en buena condición.

Si cualquier parte del material indicado en el conocimiento de embarque o en el recibo de la compañía de expreso no es recibida, o está rota o perjudicada de cualquier modo, el embarque no debe ser aceptado antes de que el agente de la compañía de transportes reconozca la deficiencia o el perjuicio en la cuenta original de gastos de flete. Esto debe hacerse siempre pues, de lo contrario, las compañías de transportes no aceptarán el reclamo de la pérdida o del perjuicio. Si el agente no hace una inspección, entonces debe prepararse una declaración por escrito de que fué notificado (en cierta fecha) y que dejó de hacer la inspección. Esa declaración, con la cuenta original de gastos de flete y el conocimiento original de embarque (si está disponible), soportarán el reclamo adecuadamente.

PORTUGUES

ESTE CATALOGO DE PEÇAS contem ilustrações, os nomes, os números das peças e as quantidades requeridas de todas as peças fornecidas para a máquina "Caterpillar" á qual este catálogo faz referência.

As máquinas e acessórios "Caterpillar" são vendidos e servidos por uma organização mundial de distribuidores e agentes responsáveis que têm Departamentos de Peças bem sortidos e mecânicos preparados na fábrica. Para ter segurança de que o seu equipamento "Caterpillar" possa continuar dando serviço satisfactorio, usem-se somente Peças Genuínas "CATERPILLAR" que são manufacturadas de acordo com os mesmos altos padrões de qualidade, material e mão de obra que as peças originais.

Há um Agente "Caterpillar" cerca do Senhor.

Como Encomendar Peças Correctamente

Para ter segurança de receber as peças correctas com a menor demora possível, queiram fazer as encomendas com o Agente "Caterpillar" mais cercano, tendo a segurança de indicar a quantidade, nome, e o número de cada peça desejada. Sempre deve dar-se o número de série da máquina para a qual as peças em questão são encomendadas. Isto é importante!

Tenga-se segurança de dar o nome correcto do consignatário e também o endereço completo, rua, cidade, provincia ou estado e país ao qual as peças devem ser embarcadas, e indique-se se o embarque deve ser despachado por carga, por expreso, por correio ou por outros meios.

Reclamos

Os reclamos por erros ou por não haver despachado todas as peças encomendadas devem ser feitos prontamente ao recebimento do embarque.

A responsabilidade do embarcador por roturas, perdas ou prejuízos termina com a entrega da mercadoria á companhia de transportes da qual um recibo é obtido indicando que o embarque foi aceitado pela companhia em boa condição.

Se qualquer parte do material mencionado no conhecimento de embarque ou no recibo da companhia de expreso não é recibida ou chega rota ou prejudicada de algum modo o embarque não deve ser aceitado antes de que o agente da firma transportadora reconheça a rotura ou deficiência na conta original de despesas de frete. Isto sempre deve ser feito pois, de outro modo, as companhias transportadoras não aceitarão um reclamo por perdas ou prejuízos. Se o agente não faz uma inspeção, então deve preparar-se um certificado no sentido de que éle foi notificado (em certa data), porém não fez tal inspeção. Este certificado, com a conta original de frete e com o conhecimento original de embarque (se está disponível) suportará o seu reclamo.

MEMORANDA

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

MEMORANDA

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

MEMORANDA

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

MEMORANDA

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

MEMORANDA

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

MEMORANDA

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

MEMORANDA

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS