

FORM 8885
REPLACES
FORM 7922

D6 TRACTOR 74 INCH GAUGE

F. N.

PARTS *Catalog*

SERIAL NUMBERS
4R1 TO 4R3633
INCLUSIVE

CATERPILLAR TRACTOR CO.



D6 TRACTOR

74 INCH GAUGE

HOW TO ORDER PARTS

Please be sure to furnish the quantity, part number and name of each part wanted. It is also important to give the serial number of the machine for which the parts are intended. It is suggested that you write the serial number of your machine in this space so that it will be readily available when you need it.

**THIS PARTS CATALOG FOR
MACHINE SERIAL NUMBER**

4R.....

To insure prompt delivery, please don't overlook furnishing the correct name of the consignee, also the street address, town, county and state to which the parts are to be shipped, and indicate whether shipment is to be made by freight, express, parcel post or by other means.

WHERE TO ORDER PARTS

Caterpillar dealers maintain over 400 stores in the United States, and similar establishments are located strategically in nearly all countries throughout the world. These organizations are backed by the extensive facilities and resources of Caterpillar Tractor Co.

Dealer personnel are factory trained in the stocking and issuing of parts, and large stocks are constantly maintained to insure prompt service. Contact your nearest Caterpillar dealer to make sure that he has your name and address, the correct serial number of your machine, and an accurate list of accessories and attachments. This record will facilitate the issuance of parts when you need them in a hurry.

WHAT THE CATERPILLAR DEALER CAN DO FOR YOU

Caterpillar dealers are in the business of making it economical and profitable for you to own and operate Caterpillar machinery. They are in constant touch with the factory for new developments in repair and maintenance methods, operating procedures, and parts requirements. Their parts stocks are active and up-to-date, including all parts normally required to protect your investment in Caterpillar machinery.

Nearly all Caterpillar dealers offer 24-hour emergency service. For quick reference, write the name and address of the local dealer on your desk pad or the front of your phone book.

ONLY CATERPILLAR PARTS GIVE CATERPILLAR PERFORMANCE

The same quality and craftsmanship that has made Caterpillar products famous throughout the world is built into all Caterpillar replacement parts.

FRANÇAIS

REDACTION DES COMMANDES DE PIÈCES. Pour chaque pièce, indiquer la quantité, le numéro et la désignation. Le numéro de série de la machine à laquelle les pièces sont destinées est également indispensable. Nous vous conseillons d'inscrire le numéro de série de votre machine à la première page de ce catalogue, dans l'espace réservé à cet effet, de façon à le trouver facilement en toutes circonstances.

Pour obtenir une livraison rapide, nous vous prions d'indiquer très exactement le nom du destinataire et son adresse complète: rue, numéro, ville, département, en stipulant, par exemple: petite ou grande vitesse, colis postal, ou tout autre mode d'expédition.

PASSATION DES COMMANDES. Le réseau des Distributeurs Caterpillar couvre le monde entier avec ateliers et dépôts dans la plupart des grands centres. Toute cette organisation repose, en outre, sur l'expérience et les moyens techniques de la Caterpillar Tractor Co.

Les Distributeurs Caterpillar disposent d'un personnel formé à l'usine, parfaitement au courant de tous les problèmes que soulèvent le stockage et la distribution de pièces de rechange. On trouve toujours chez eux un assortiment complet de pièces, ce qui leur permet de servir rapidement les usagers. Mettez-vous en rapport avec le Distributeur Caterpillar le plus proche, assurez-vous qu'il connaît votre nom et votre adresse, le numéro de série de votre machine et les accessoires qui l'équipent. Ces renseignements lui seront utiles, surtout pour les dépannages urgents.

DISTRIBUTEURS CATERPILLAR. Les Distributeurs Caterpillar sont au service de l'usager pour lui faciliter la parfaite utilisation de son matériel. Par leurs rapports constants avec l'usine, ils sont toujours au courant des toutes dernières méthodes de réparation, d'entretien, d'emploi du matériel et de remplacement des pièces. Ils veillent, en particulier, à ce que leur stock de pièces réponde par sa composition aux besoins éventuels de tous les propriétaires de matériel Caterpillar, quel que soit l'âge de leur machine, pour réduire au strict minimum les arrêts toujours très coûteux.

Presque tous nos Distributeurs ont une permanence de jour et de nuit pour les appels urgents. Afin d'éviter toute perte de temps, ayez toujours à portée de la main le nom et l'adresse de votre Distributeur Caterpillar.

RIEN NE SAURAIT SE SUBSTITUER A LA PIÈCE AUTHENTIQUE CATERPILLAR. La qualité et la construction soignée qui ont fait la réputation mondiale du matériel Caterpillar se retrouvent dans toutes les pièces d'origine.

ITALIANO

MODO DI ORDINARE LE PARTI DI RICAMBIO. Vi preghiamo di indicare con precisione la quantità, il numero e la denominazione di ogni parte richiesta. È altresì importante precisare il numero di serie della macchina sulla quale dovrà essere montata la parte. Vi consigliamo di scrivere il numero di serie della Vostra macchina nello spazio predisposto a questo scopo nella prima pagina di questo catalogo parti.

Per assicurare la pronta consegna, Vi preghiamo di non mancare di fornire il nome del destinatario, correttamente scritto, come pure l'indirizzo, cioè la strada, la città, la provincia e lo stato dove le parti dovranno essere spedite, indicando se la spedizione dovrà essere effettuata per ferrovia, per mare, per espresso, per pacco postale o per altro mezzo.

DOVE SI ORDINANO LE PARTI. I vari Distributori CATERPILLAR hanno organizzato oltre 400 depositi di parti di ricambio negli Stati Uniti e simili depositi si trovano convenientemente situati in quasi tutti i paesi del mondo. Questi depositi usufruiscono del vantaggio delle adeguate facilitazioni e delle forti risorse della CATERPILLAR TRACTOR CO. Il personale dei Distributori viene istruito dalla fabbrica per il mantenimento degli assortimenti e per la consegna delle parti. Vasti depositi vengono continuamente riforniti per assicurare la pronta consegna. MetteteVi in comunicazione con il Distributore CATERPILLAR più vicino a Voi ed assicurate Vi che egli abbia il Vostro nome e indirizzo, l'esatto numero di serie della Vostra macchina ed una larga disponibilità di accessori vari. In questa maniera faciliterete la consegna delle parti quando ne avrete urgente necessità.

CIO CHE PUÒ FARE PER VOI IL DISTRIBUTORE CATERPILLAR. I Distributori CATERPILLAR hanno principalmente lo scopo di rendere economico e vantaggioso per Voi il possesso e l'uso dei macchinari CATERPILLAR. Essi sono costantemente in comunicazione con la fabbrica e perciò al corrente dei miglioramenti introdotti nei sistemi di riparazione, di manutenzione e di impiego delle macchine, nonché nella richiesta di parti di ricambio.

I loro assortimenti sono efficienti e continuamente aggiornati. Essi comprendono tutti i pezzi che normalmente sono richiesti per garantire il capitale da Voi impiegato in macchinari CATERPILLAR.

Quasi tutti i Distributori CATERPILLAR offrono giorno e notte servizio per casi urgenti.

Per rapidità di riferimento, segnate il nome e l'indirizzo del Vostro rivenditore locale sulla rubrica della Vostra scrivania o nella testata della vostra guida telefonica.

SOLTANTO LE PARTI CATERPILLAR GARANTISCONO LA FAMA DELLA MARCA CATERPILLAR. Le parti di ricambio CATERPILLAR vengono costruite con i materiali e con i sistemi di lavorazione che hanno resi famosi in tutto il mondo i prodotti CATERPILLAR.

DEUTSCH

WIE MAN ERSATZTEILE BESTELLT. Bitte übersehen Sie nicht, bei jedem Ersatzteilposten die Anzahl, Nummer und Bezeichnung genau anzugeben. Ebenso wichtig ist es, die Seriennummer der Maschine aufzuführen, auf die die Teile passen sollen. Wir möchten Ihnen empfehlen, diese Seriennummer in dem dafür vorgesehenen Rechteck auf der ersten Seite dieses Katalogs einzutragen, damit sie stets schnell zu finden ist.

Um alle Zeitverluste bei der Lieferung zu vermeiden, ist es ratsam, den vollen Namen, sowie den Staat, das Land, die Stadt, die Straße und die Hausnummer des jeweiligen Empfängers genau anzugeben, wobei am besten auch die Verschiffungsart (Fracht, Eilgut, Postpaket, usw.) ausdrücklich vorzuschreiben ist.

WO MAN ERSATZTEILE BESTELLT. In fast allen Ländern der Welt bestehen Caterpillar-Vertretungen. Diese Firmen stehen in enger Führung mit der Hauptfabrik, bei der sie in vielen Fragen Rat und weitgehende Unterstützung finden.

Zwecks prompter Belieferung der Kundschaft aus ihrem gut eingerichteten Ersatzteillagern verfügen diese Vertretungen über ein zahlreiches Personal, das in der Fabrik Schulung im Lager und Ausfolgen von Ersatzteilen erhalten hat. Es liegt in Ihrem Interesse, sich zu vergewissern, daß Ihre Anschrift, die Seriennummer und eine vollständige Beschreibung Ihrer Maschine, einschließlich allem Zubehör und Zusatzaufgeräten bei Ihrer zuständigen Vertretung vorliegen, so daß Rückfragen sich erübrigen, falls dringende Bestellungen beschleunigt bearbeitet werden müssen.

AUFGABE DER CATERPILLAR-VERTRETUNG. Es ist die Aufgabe der Caterpillar-Vertretung, dafür zu sorgen, daß es für Sie vorteilhaft und einträglich ist, unser Gerät zu erwerben und damit zu arbeiten. Durch Ihre Verbindung mit den Zentrale kennt sie stets die neuesten Methoden, solche Maschinen zu benutzen, instand zu halten und zu reparieren, sowie die Einzelteile, die dazu erforderlich sind. Ihr modernes Lager entspricht dem vorausberechneten Bedarf Ihrer Kundschaft, wobei besonderer Nachdruck auf die Teile gelegt wird, die sich erfahrungsgemäß schneller abnutzen. So ist sie in der Lage, diese Produktionsmittel in arbeitsfähigem Zustand zu erhalten und das in ihnen investierte Kapital vor Verlusten zu bewahren.

Bei fast allen Caterpillar-Vertretungen besteht ein Notdienst, Tag und Nacht. Um die Anschrift und Telefonnummer der nächsten Zweigstelle an der Hand zu haben, empfiehlt es sich, sie vorn auf Ihrem Adress-oder Telefonbuch zu vermerken.

WIR WARREN VOR NACHAHMUNGEN. Die Qualität und Werkarbeit, die den Weltruf der Caterpillar-Geräte begründet haben, findet man nur bei unseren Original-Ersatzteilen.

ESPAÑOL

CÓMO PEDIR PIEZAS DE REPUESTO. Es necesario indicar la cantidad, el número y el nombre de las piezas que se deseen. Es también importante dar el número de serie de la máquina para la cual se desean las piezas. Se sugiere que usted anote este número de serie de su máquina en el espacio que se ha dejado en la primera página, de manera que lo tenga siempre a mano cuando lo necesite.

Para que el despacho se efectúe con prontitud, es necesario que se dé el nombre correcto del consignatario, así como la dirección, además de los nombres de la provincia, y departamento o estado a que han de enviarse las piezas. Asimismo, debe especificarse el medio a utilizarse, si debe ser hecho como carga, o por expreso, paquete postal o en otra forma.

DONDE PEDIR LAS PIEZAS. Hay más de 400 establecimientos de los Distribuidores CATERPILLAR en los Estados Unidos, y en casi todo el mundo existen otros, similares, estratégicamente ubicados. Estas organizaciones están respaldadas por las extensas facilidades y recursos de Caterpillar Tractor Co.

El personal de los Distribuidores ha recibido su entrenamiento en la fábrica, en el almacenamiento y despacho de partes. Mantienen, además, grandes existencias de partes para asegurar un servicio rápido. Póngase en contacto con su Distribuidor CATERPILLAR para asegurarse de que tiene su nombre y dirección, el número de serie correcto de su máquina y una lista exacta de partes y accesorios. Este registro facilitará el despacho de partes cuando usted las necesite con urgencia.

LO QUE EL DISTRIBUIDOR CATERPILLAR PUEDE HACER POR USTED. Los Distribuidores tienen como objetivo el hacer económico y provechoso para usted poseer y trabajar maquinaria CATERPILLAR. Ellos están en contacto permanente con la fábrica para tener los últimos adelantos en los métodos de reparación y mantenimiento, procedimientos de trabajo y requerimientos de partes. Sus existencias de partes tienen gran movimiento y están siempre al día, incluyendo todas las partes normalmente requeridas para proteger su inversión en maquinaria CATERPILLAR.

Casi todos los Distribuidores ofrecen servicio de emergencia de día y de noche. Para referencia rápida, escriba el nombre y dirección de su Distribuidor local en la carpeta de su escritorio o en la tapa de su libro de teléfono.

SOLO LAS PIEZAS CATERPILLAR DAN EL RESULTADO APETECIDO. Todas las piezas CATERPILLAR han sido fabricadas según el patrón de alta calidad y mano de obra que ha hecho famosos los productos CATERPILLAR.

PORTUGUÉS

CÓMO FAZER OS PEDIDOS DE PEÇAS. Ponha no pedido a quantidade, o número e o nome de cada peça desejada. É também preciso pôr-se o número de série da máquina para a qual a peça se destina. Escreva o número de série da sua máquina no espaço para o mesmo reservado na página No. 1, para tê-lo à mão quando o precisar.

Para garantir pronta remessa não deixe de pôr o nome correto do consignatário bem como da rua, cidade, estado e país para onde as peças devem ser despachadas, indicando se o despacho deve ser feito como carga regular, encomenda postal via marítima ou aérea (regular ou expressa) ou qualquer outro modo.

PARA ONDE DIRIGIR OS PEDIDOS DE PEÇAS. Os distribuidores "Caterpillar" mantêm mais de 400 estabelecimentos comerciais nos Estados Unidos e em localizações estratégicamente espalhadas por quase todos os países do mundo. Tódas essas organizações contam com o apoio e a cooperação de Caterpillar Tractor Co.

Os distribuidores mantêm, sempre, grande estoque de peças para servir os clientes com presteza. E seu pessoal, treinado na fábrica, sabe como lidar com peças. Comunique-se com o distribuidor "Caterpillar" mais próximo para se certificar se ele tem o seu nome e endereço, o exato número de série de sua máquina e uma lista de seus equipamentos e acessórios. O registro desses dados facilitará a remessa de peças quando as pedir com urgência.

O QUE O DISTRIBUIDOR "CATERPILLAR" PODE FAZER PARA LHE SERVIR. Nossos distribuidores têm interesse em tornar econômica e lucrativa a posse e o uso de nossas máquinas. Mantendo constante contato com a fábrica, estão sempre bem informados sobre os métodos mais modernos empregados para manobrá-las, conservá-las e repará-las, bem como sobre tudo que se refere a peças de substituição. Têm em estoque peças para qualquer máquina existente no território a seu cargo e em quantidade suficiente para evitar que as máquinas fiquem paradas.

Quase todos os distribuidores "Caterpillar" têm serviço mecânico de emergência aberto dia e noite. Para uma rápida referência, escreva o nome e o endereço do seu distribuidor no bloco de notas de sua escrivaninha ou na sua lista de telefone.

PEÇAS "CATERPILLAR" SÃO AS ÚNICAS RECOMENDÁVEIS. As peças "Caterpillar" são feitas conforme o padrão de alta qualidade e a técnica de fabricação que tornaram os produtos "Caterpillar" famosos em todo o mundo.

INDEX

Diesel Engine

Name	Page	Name	Page
Accessory Idler Gear	12	Gauge—Fuel Pressure	44
Accessory Shaft	13	Gauge—Oil Pressure	44
Air Cleaner	31	Governor	14
Breather	30	Guard—Radiator	10
Camshaft	18	Heat Indicator	44
Connecting Rod	19	Hour Meter	41
Control—Compression Release	22	Manifolds	31
Control—Fuel Pump	40	Oil Cooler	44
Control—Governor	40	Oil Filler	30
Crank—Hand	10	Oil Lines	42
Crankshaft	20	Piston	19
Crankshaft Bearings	22	Pump—Fuel Transfer	33
Cylinder Block & Covers	23	Pump—Oil	43
Cylinder Head	28	Pump—Water	11
Fan	11	Radiator	8
Filter—Fuel	34	Valve Mechanism	28
Filter—Oil	43	Water Lines	12
Fuel Injection System	36		

Starting Engine


Air Cleaner	52	Cylinder Head	50
Breather	52	Filter—Fuel	55
Camshaft	48	Fuel System	54
Carburetor	53	Governor	47
Clutch	58	Ignition System	55
Clutch Housing	60	Magneto	56
Connecting Rod	49	Piston	49
Control—Carburetor & Choke	54	Pump—Water	46
Control—Starter Pinion	59	Starter Pinion	58
Crankshaft	48	Valve Mechanism	50
Cylinder Block	50	Water Lines	46

Clutch, Transmission and Chassis

Name	Page	Name	Page
Brakes	102	Guards—Track Roller Frame . . .	114
Clutch—Flywheel	68	Hood & Dash	64
Clutch—Steering	80	Idler—Front	106
Clutch Enclosure—Flywheel	72	Platform	65
Control—Flywheel Clutch	74	Roller—Track	110
Control—Gear Shift	74	Roller—Track Carrier	112
Control—Steering Clutch	81	Seat Cushions	62
Cont. Mech.—Strg. Cl. Hyd.	82	Seat Frame	63
Drawbar	73	Spring—Equalizer	103
Engine Support	62	Tool Box	115
Fenders	65	Tools	159
Final Drive	90	Track	108
Frame—Track Roller (Std.)	113	Transfers	158
Fuel Lines	63	Transmission	84
Fuel Tank	63	Transmission Case & Covers	88

Attachments

Air Cleaner Pipe Extension	119	Guards—Tr. Roller Frame— H. D.	143
Battery & Box	148	Hood	126
Belt Pulley Drive	154	Hood & Support	158
Bumper—Front	120	Hook—Front Pull	124
Bumper—Push	120	Idler—Front (Large)	140
Cab	133	Lighting System	145
Canopy	129	Manifold Air Heater	130
Clutch—Fly—Field Changeover	128	Muffler	123
Curtains—Canopy	129	Power Take-off—Front	156
Cushion—Wide Seat	134	Power Take-off—Rear	151
Fan—Blower	118	Roller—Track Carrier	139
Frame—Track Roller—Non-osc.	136	Shutter—Radiator	122
Generator	148	Spark Arrester	123
Governor Bearing—Field Repl.	127	Starter—Electric—St. Eng.	143
Guard—Brush	125	Track—40 & 45 Link	142
Guard—Crankcase	125	Trans. Bearing—Field Repl.	128
Guard—Fan	119		
Guard—Radiator	121		

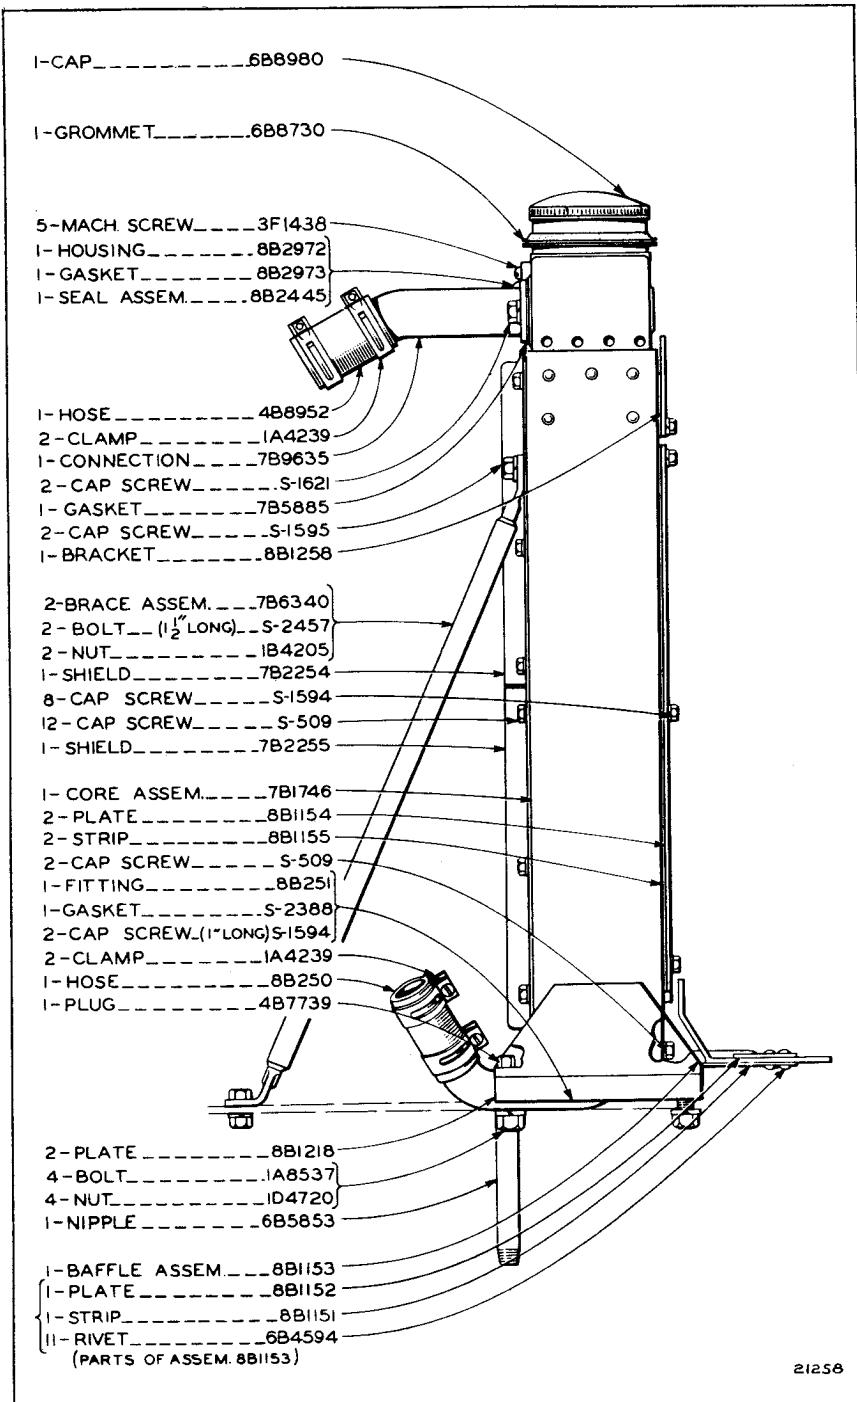

21258


RADIATOR

Serial No. 4R1 to 4R281 Inclusive

Only separate parts serviced. When complete group is required order 7B6341

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGE 8 & 9 IN FORM 8885-D6 TRACTOR

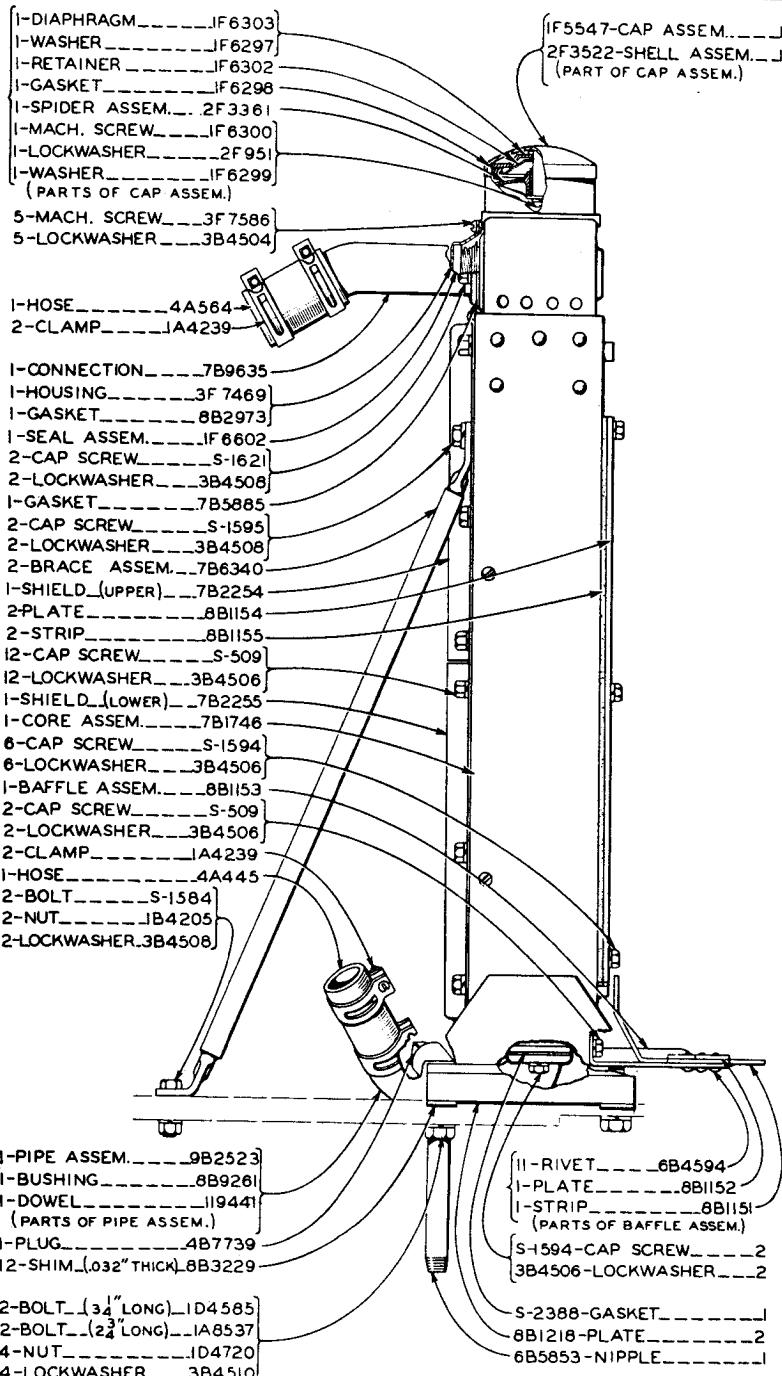

RADIATOR


Effective with Serial No. 4R2582

21005

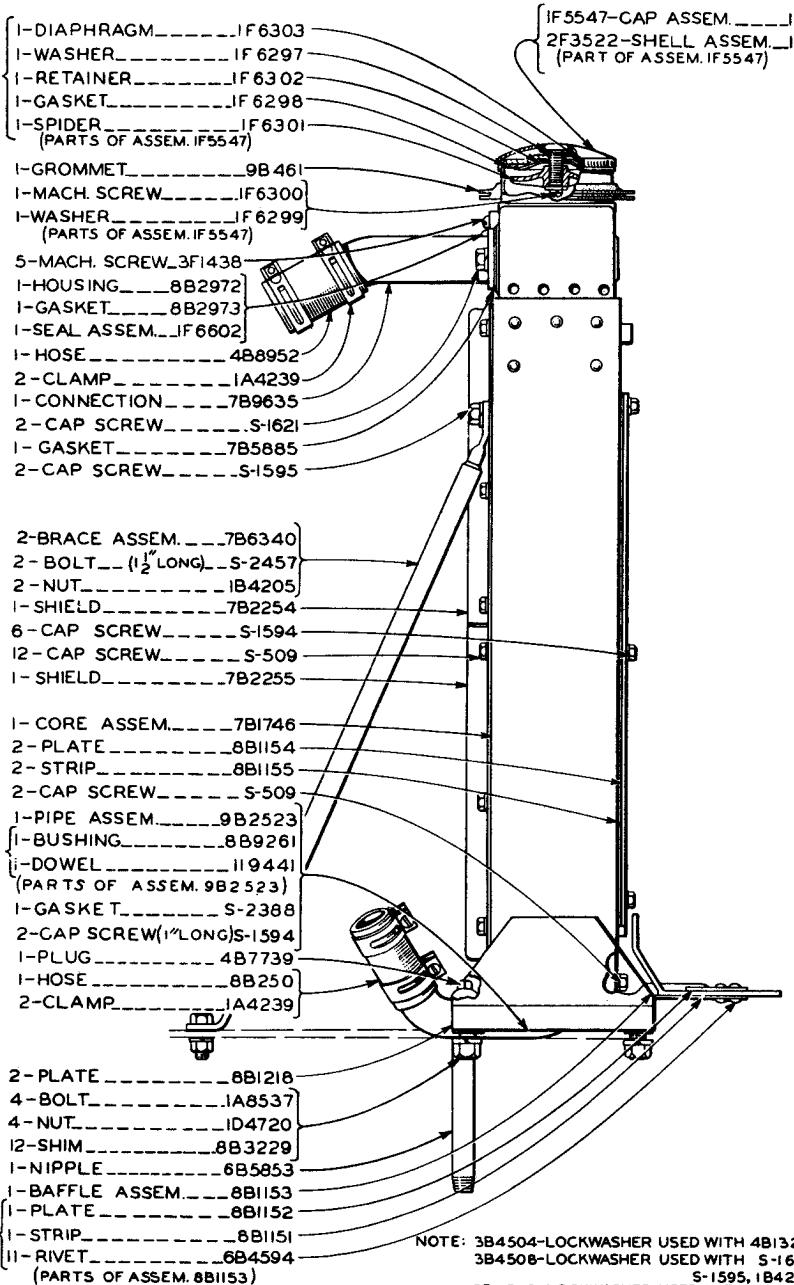

7B6341 RADIATOR GROUP
Serial No. 4R282 to 4R2581 inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

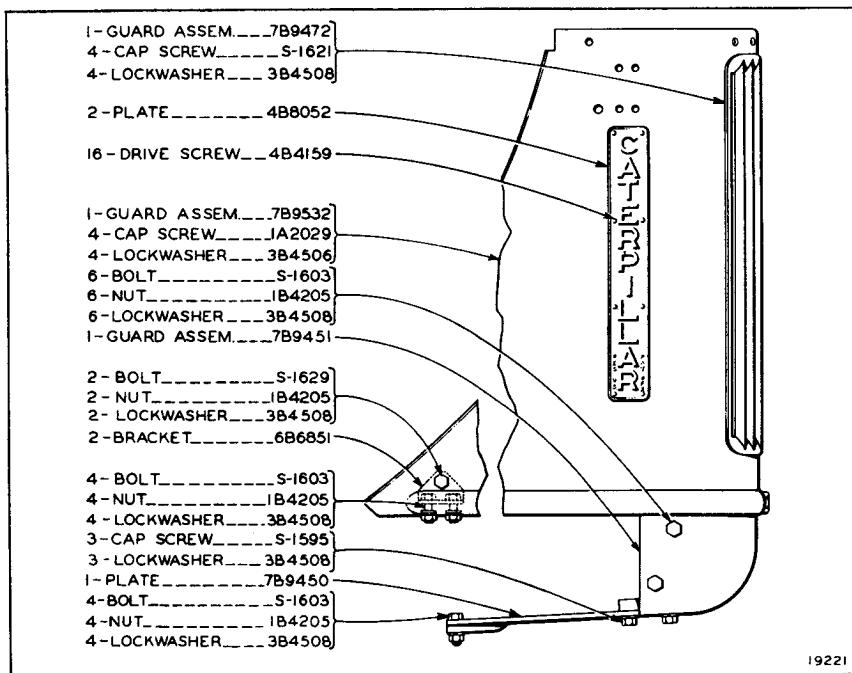

19221

RADIATOR GUARD

Serial No. 4R1 to 4R955 inclusive
Refer also to Page 158 for special parts

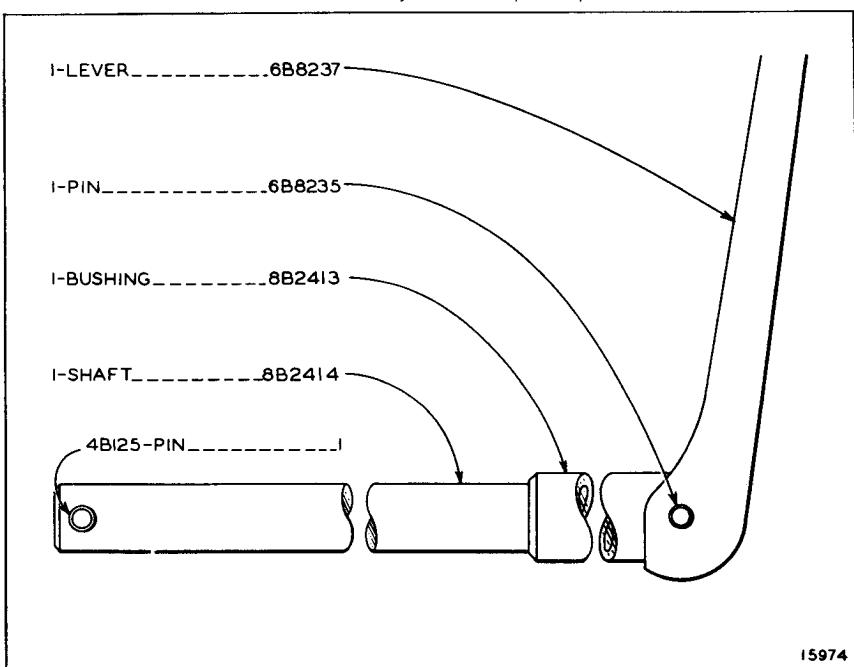


15974

HAND CRANK

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGES 10 & 11 IN FORM 8865
—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

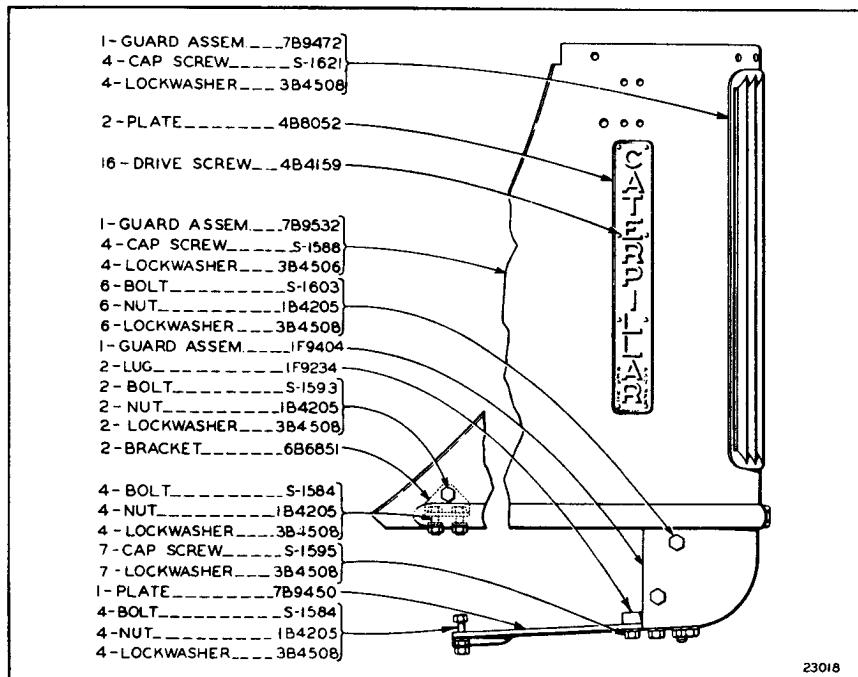

23018


RADIATOR GUARD
Effective with Serial No. 4R956


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

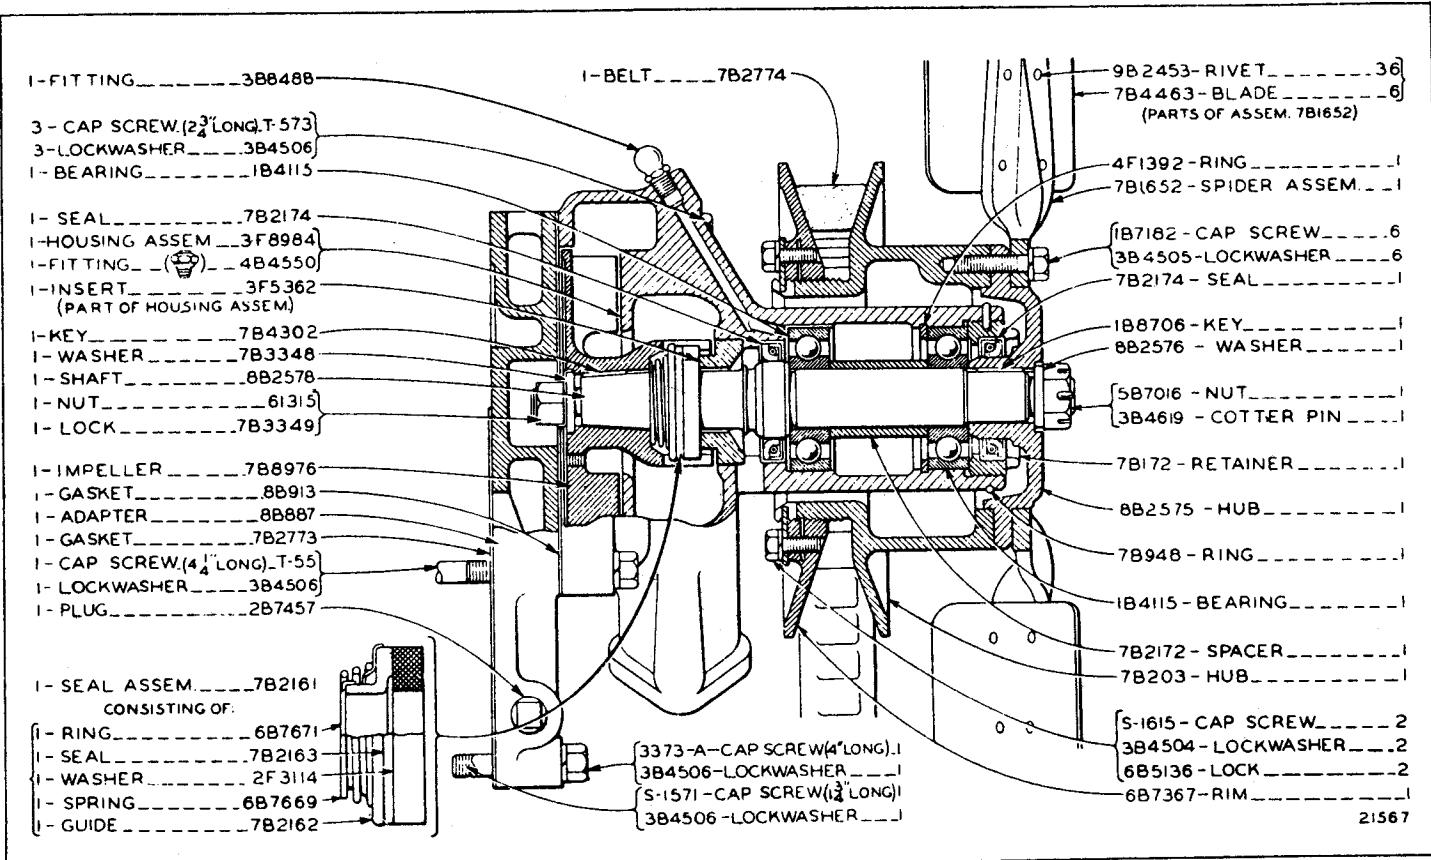


FAN AND WATER PUMP
 Effective with Serial No. 4R2387
 Refer also to Page 118 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

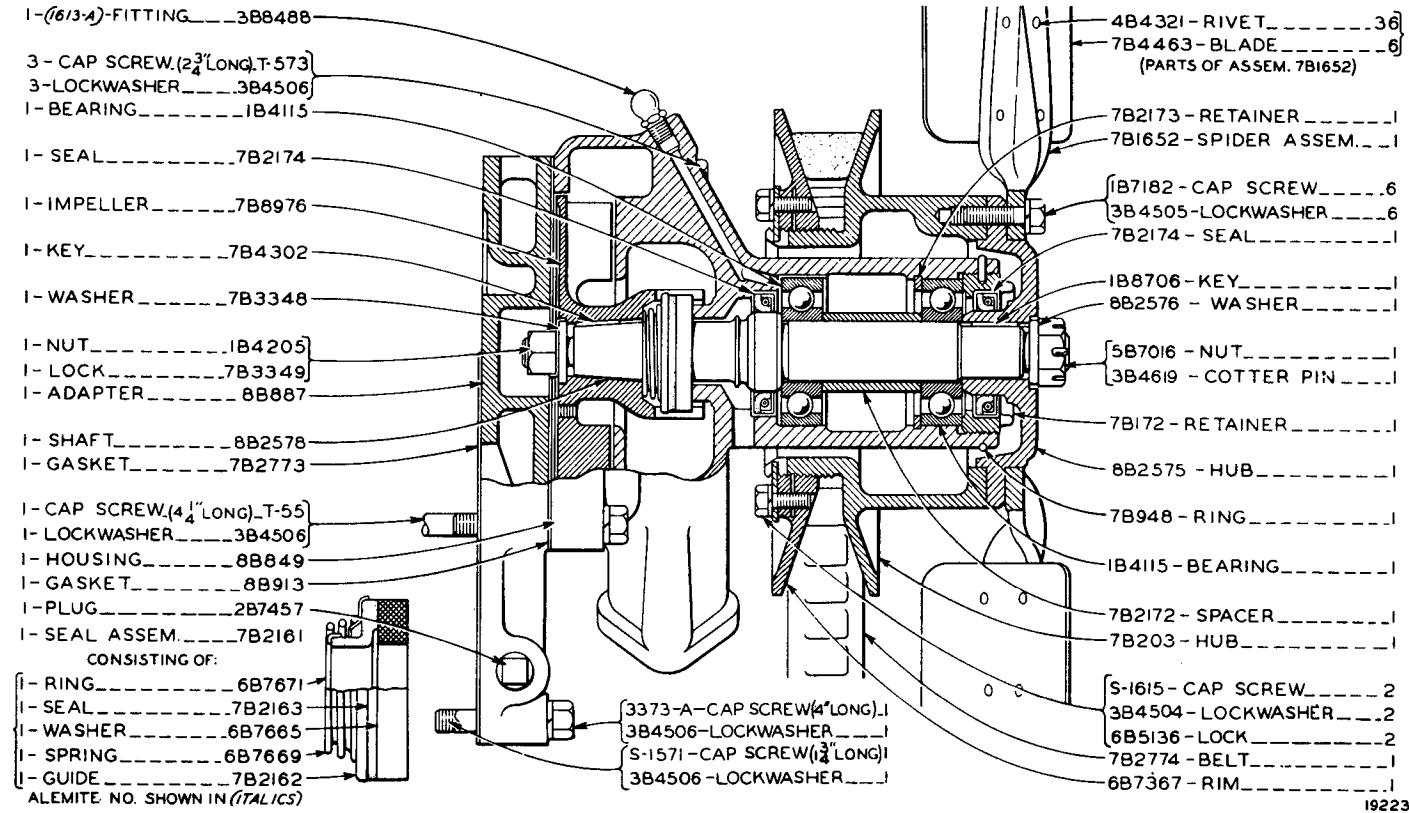

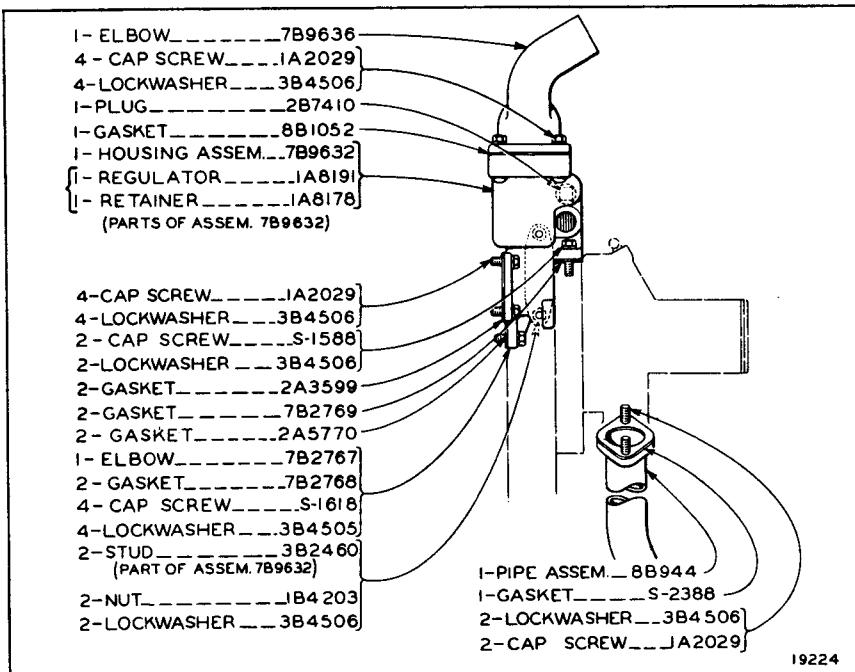


WATER LINES

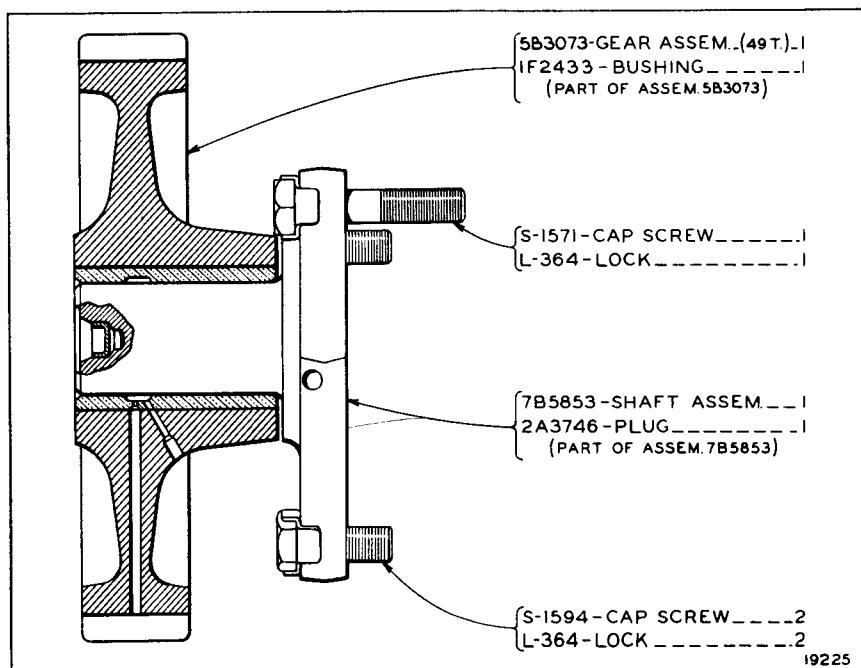


ACCESSORY IDLER GEAR

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

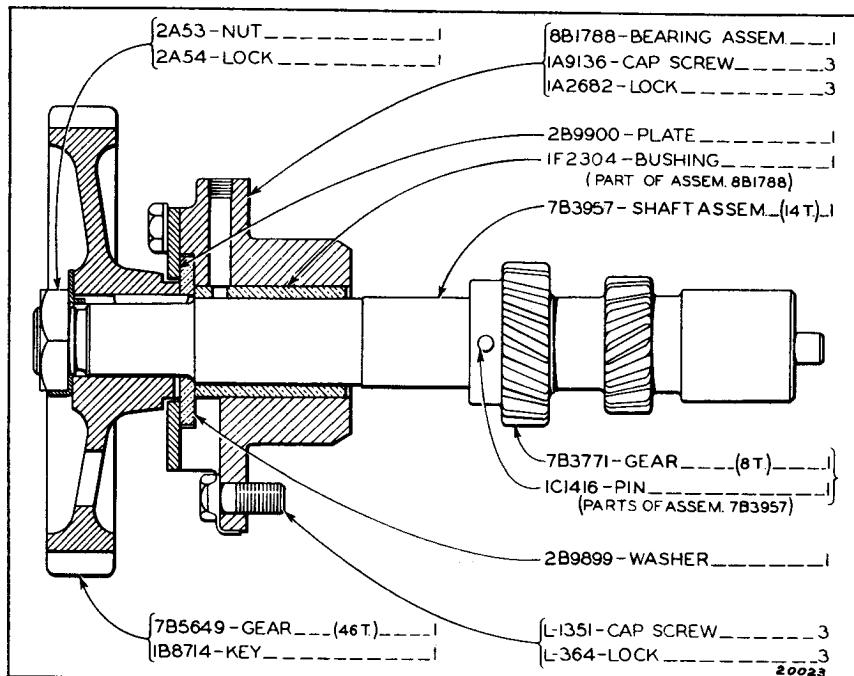


ACCESSORY SHAFT
Serial No. 4R1 to 4R475 Inclusive

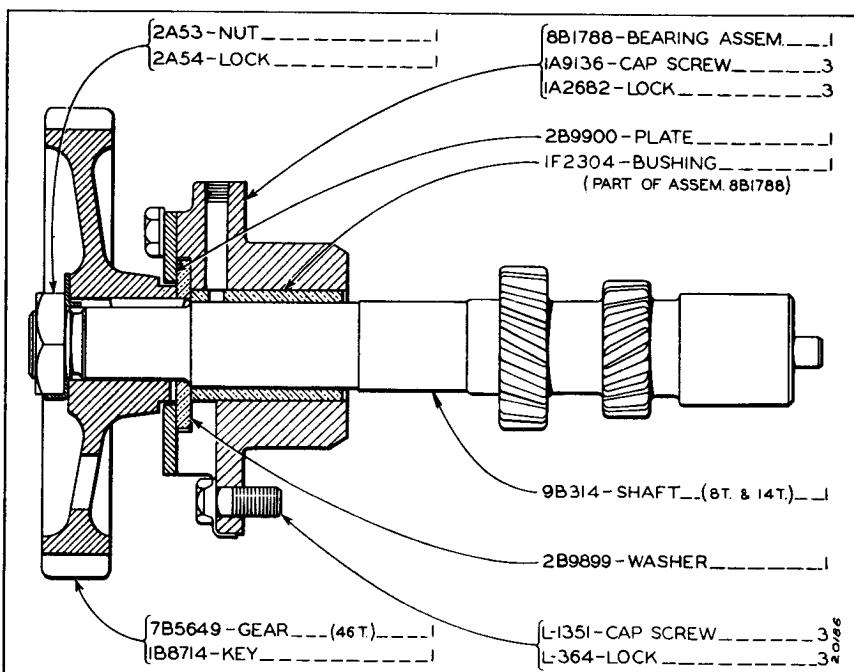

ACCESSORY SHAFT
Effective with Serial No. 4R476

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

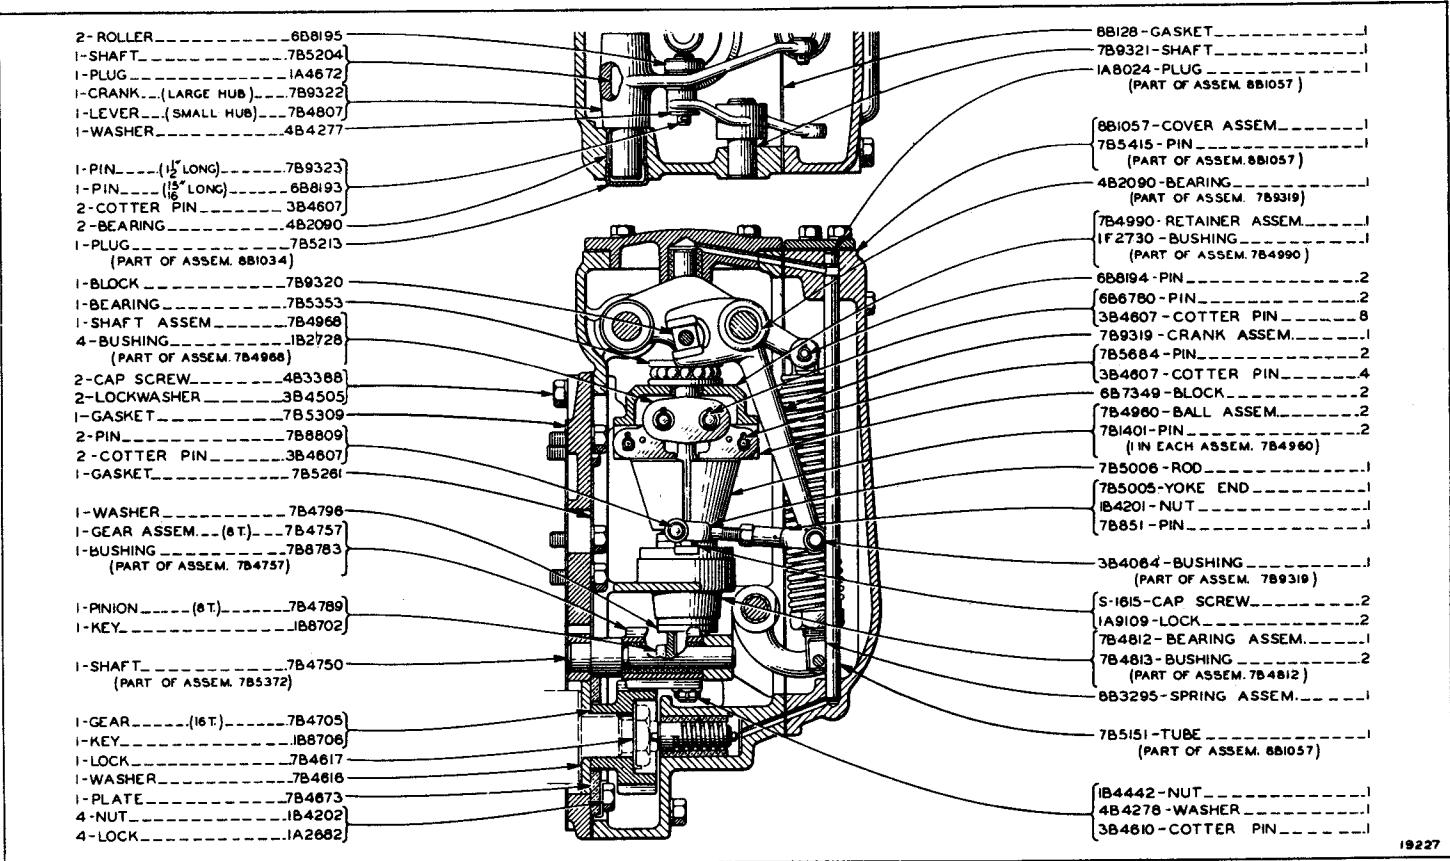

GOVERNOR

Serial No. 4R1 to 4R813 Inclusive
Refer also to Page 127 for special parts


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

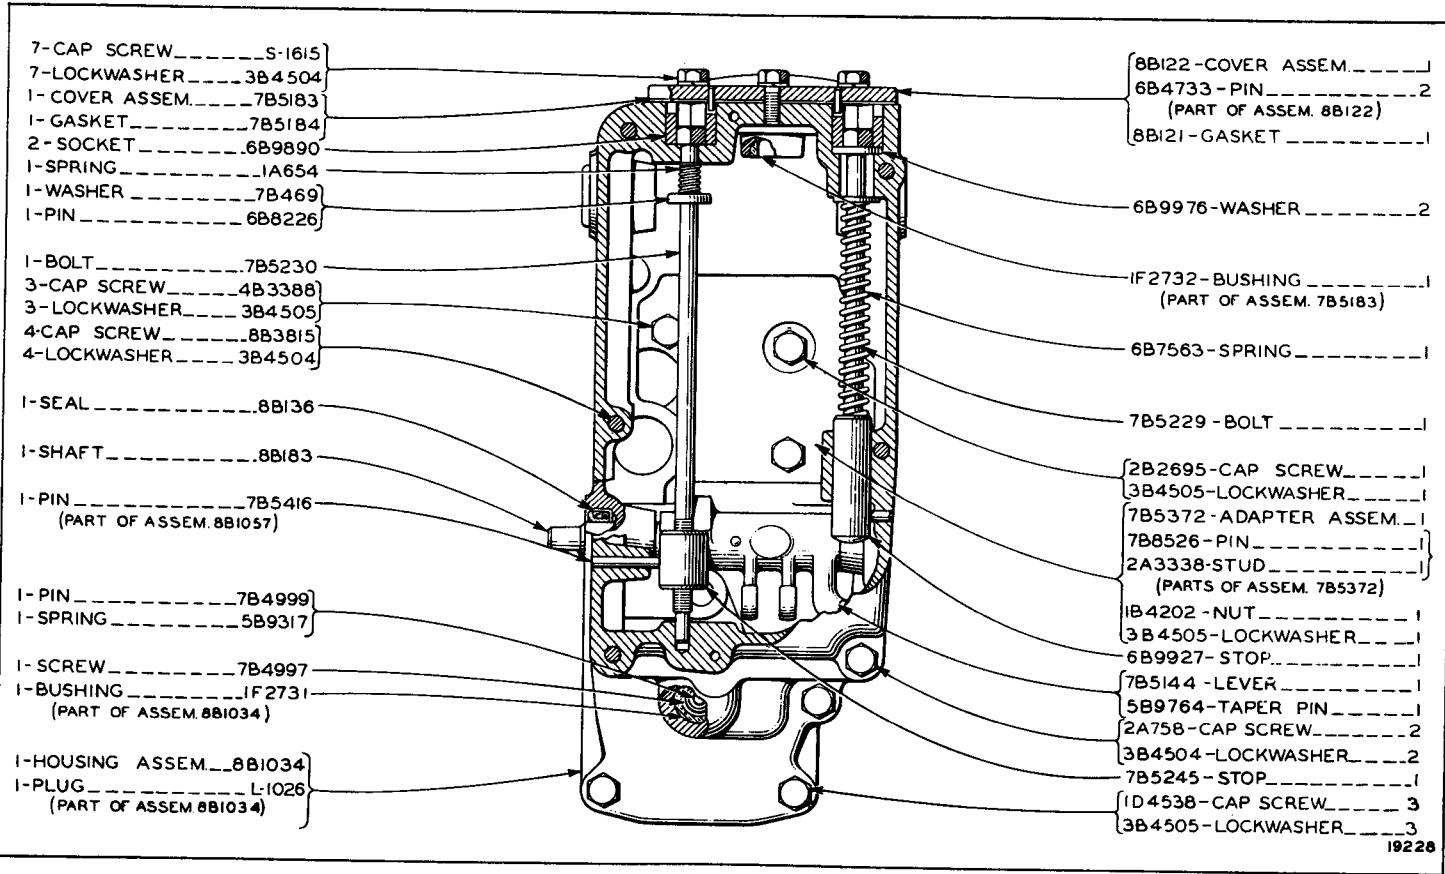

GOVERNOR

Serial No. 4R1 to 4R813 Inclusive
Refer also to Page 127 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

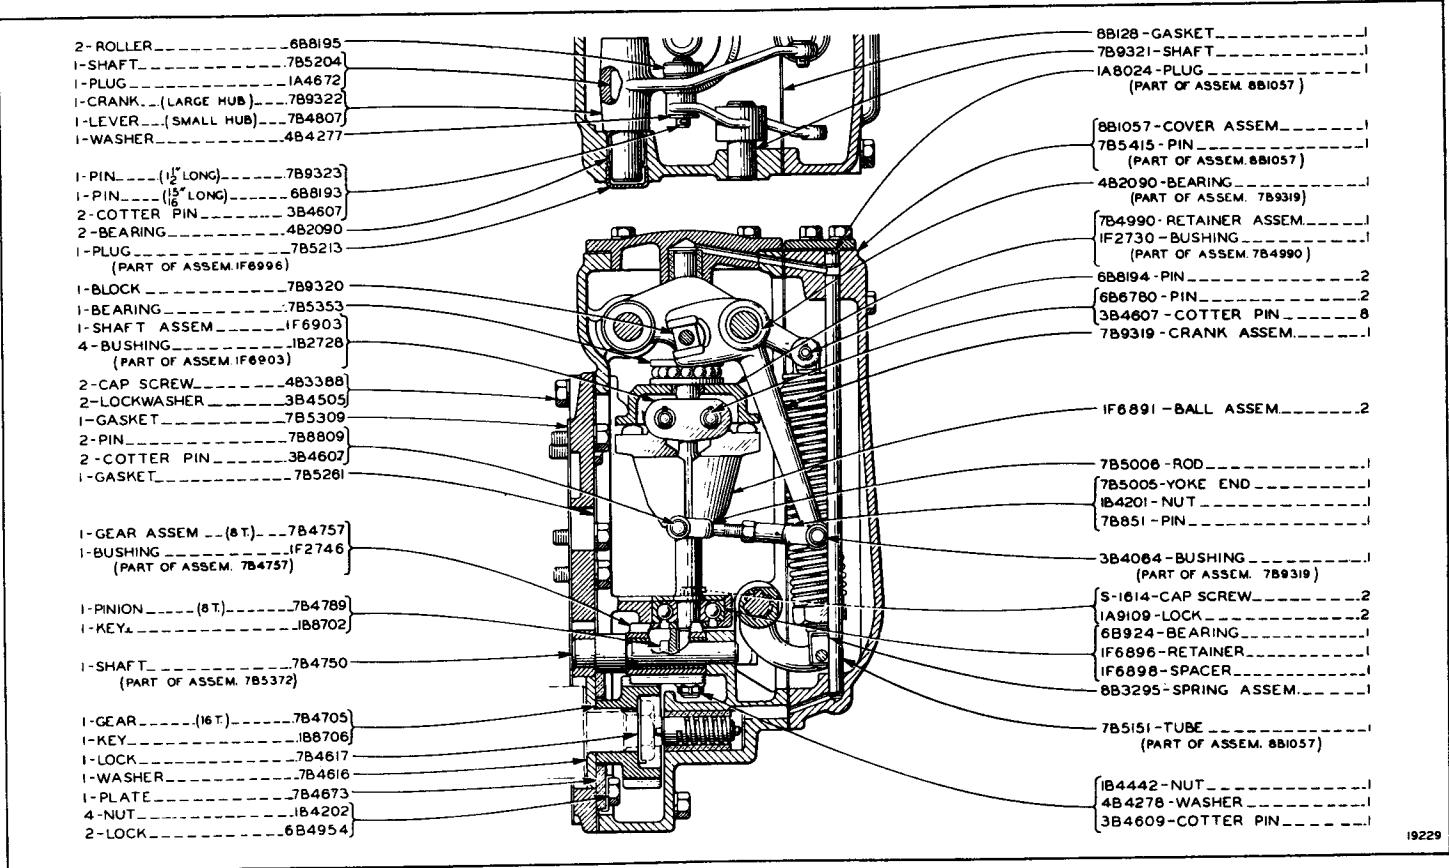


GOVERNOR
Serial No. 4R814 to 4R2773 inclusive


INSERT BETWEEN PAGE 16 & 17 IN FORM 8885—D6 TRACTOR (74 Inch Gauge)

7-22-46

16A

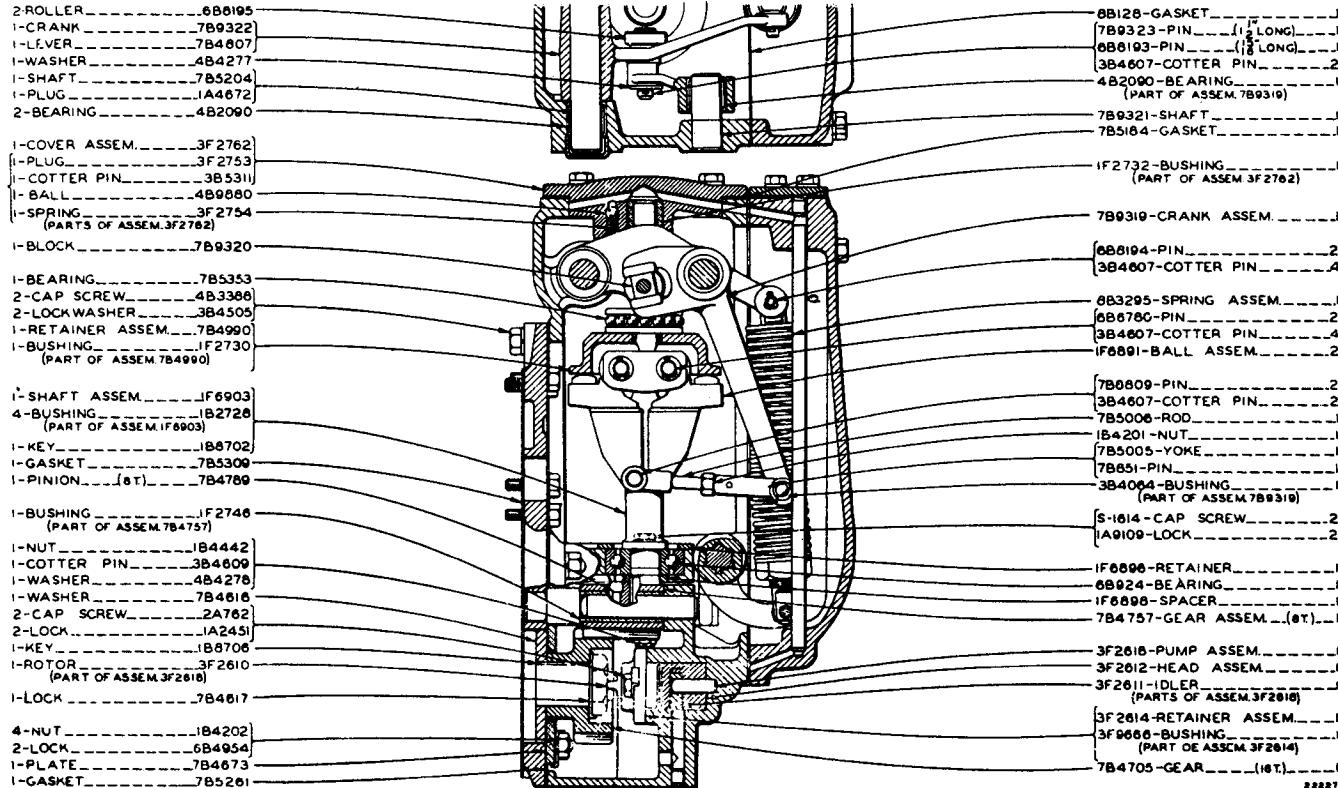


GOVERNOR
Effective with Serial No. 4R2774

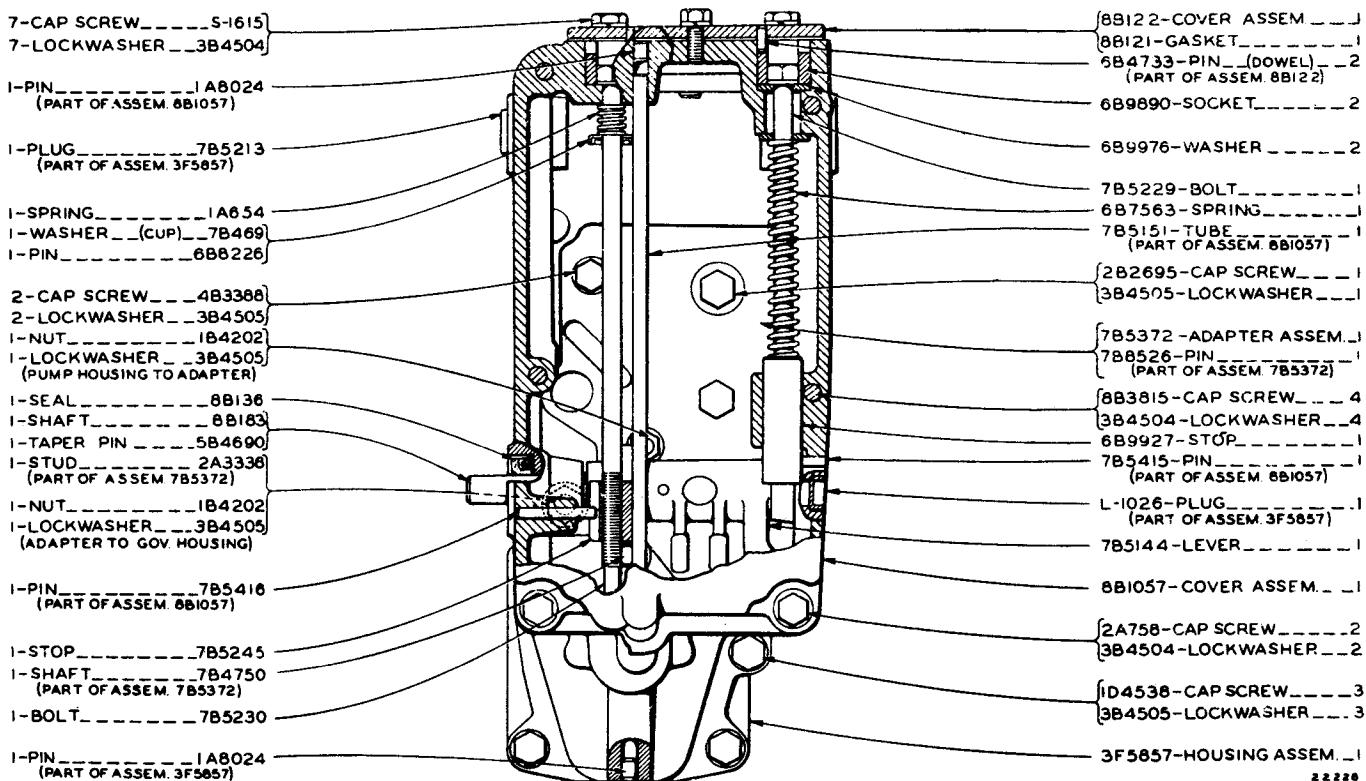


Effective with Serial No. 4R2774
GOVERNOR

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

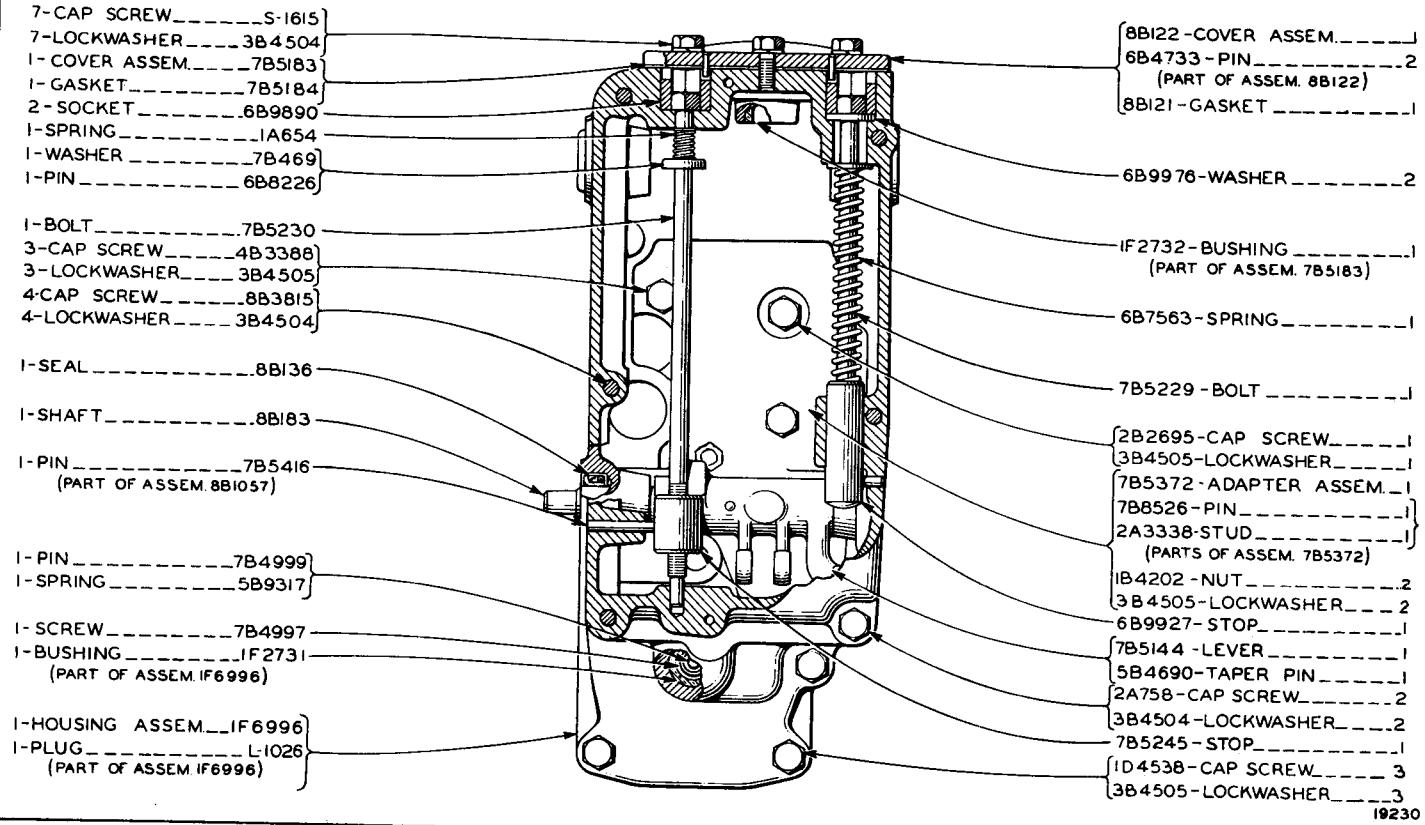


GOVERNOR

Serial No. 4R814 to 4R2773 inclusive

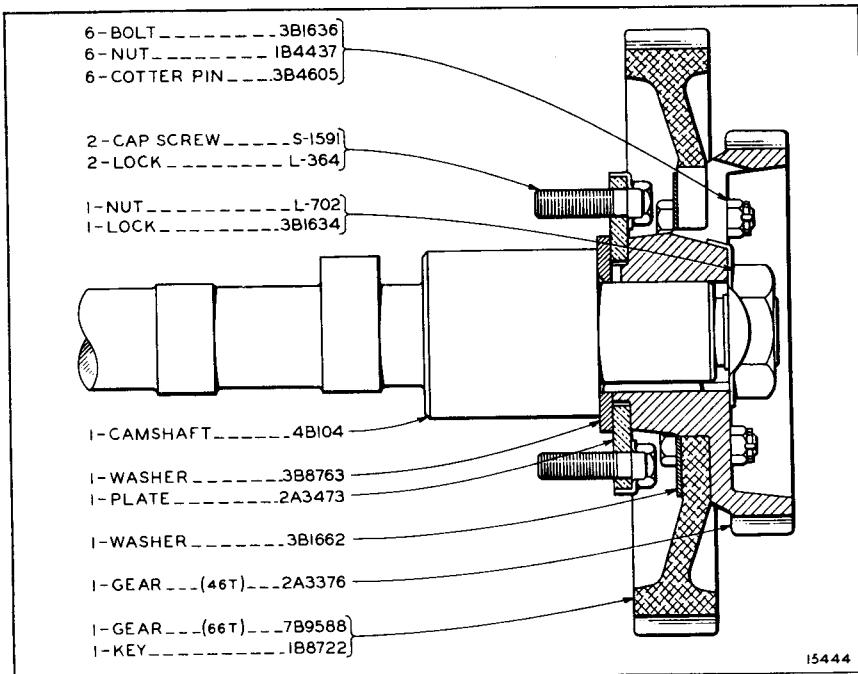


CAMSHAFT
 Serial No. 4R1 to 4R239 Inclusive

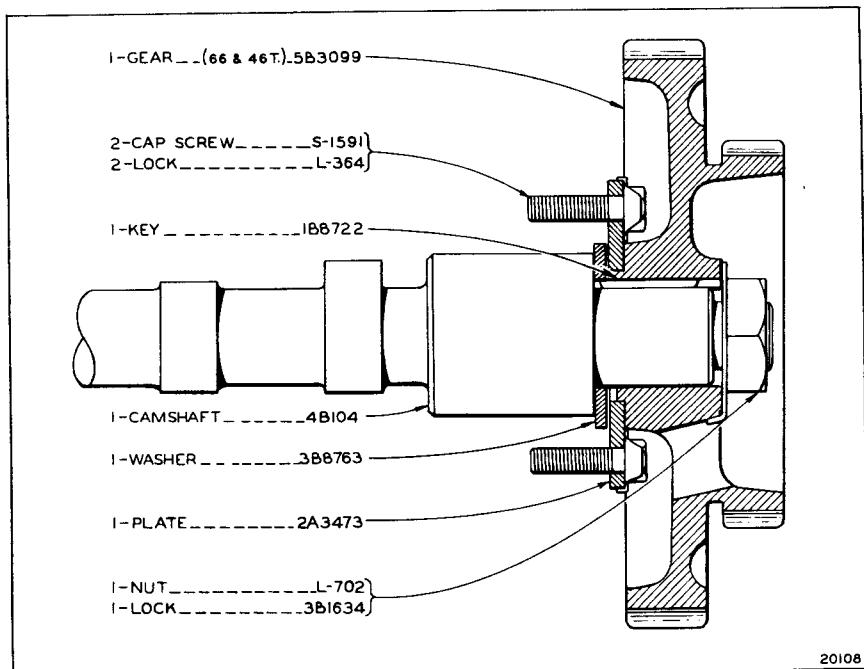


CAMSHAFT
 Effective with Serial No. 4R240

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

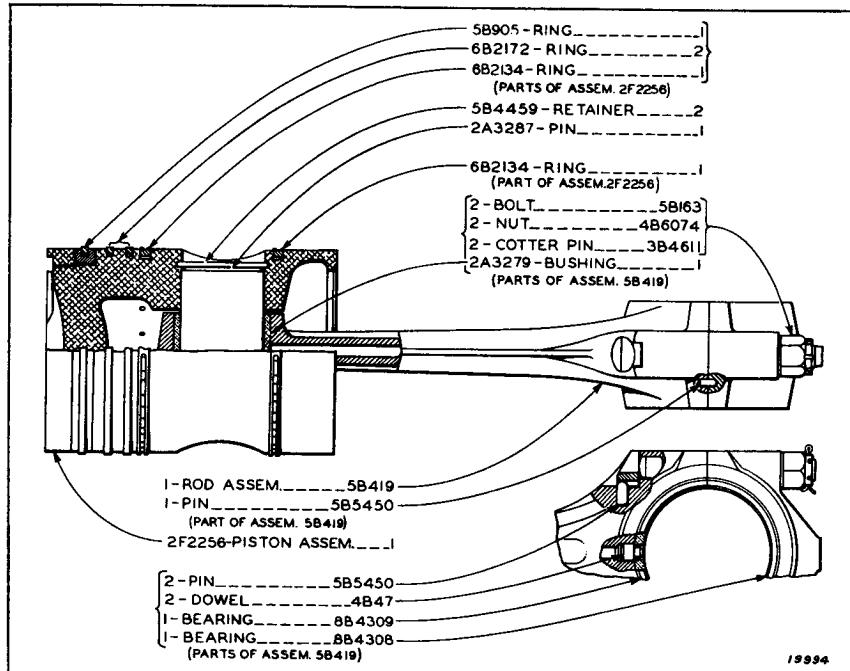


CONNECTING ROD AND PISTON (6 Groups Req'd.)

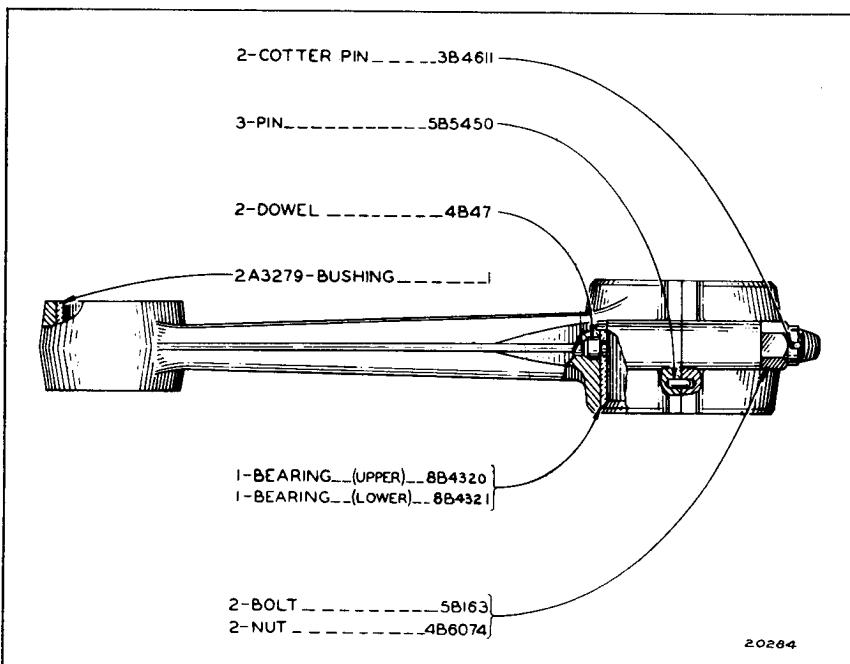5B2058 CONNECTING ROD ASSEMBLY
For use with .030 Undersize Crankshaft

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

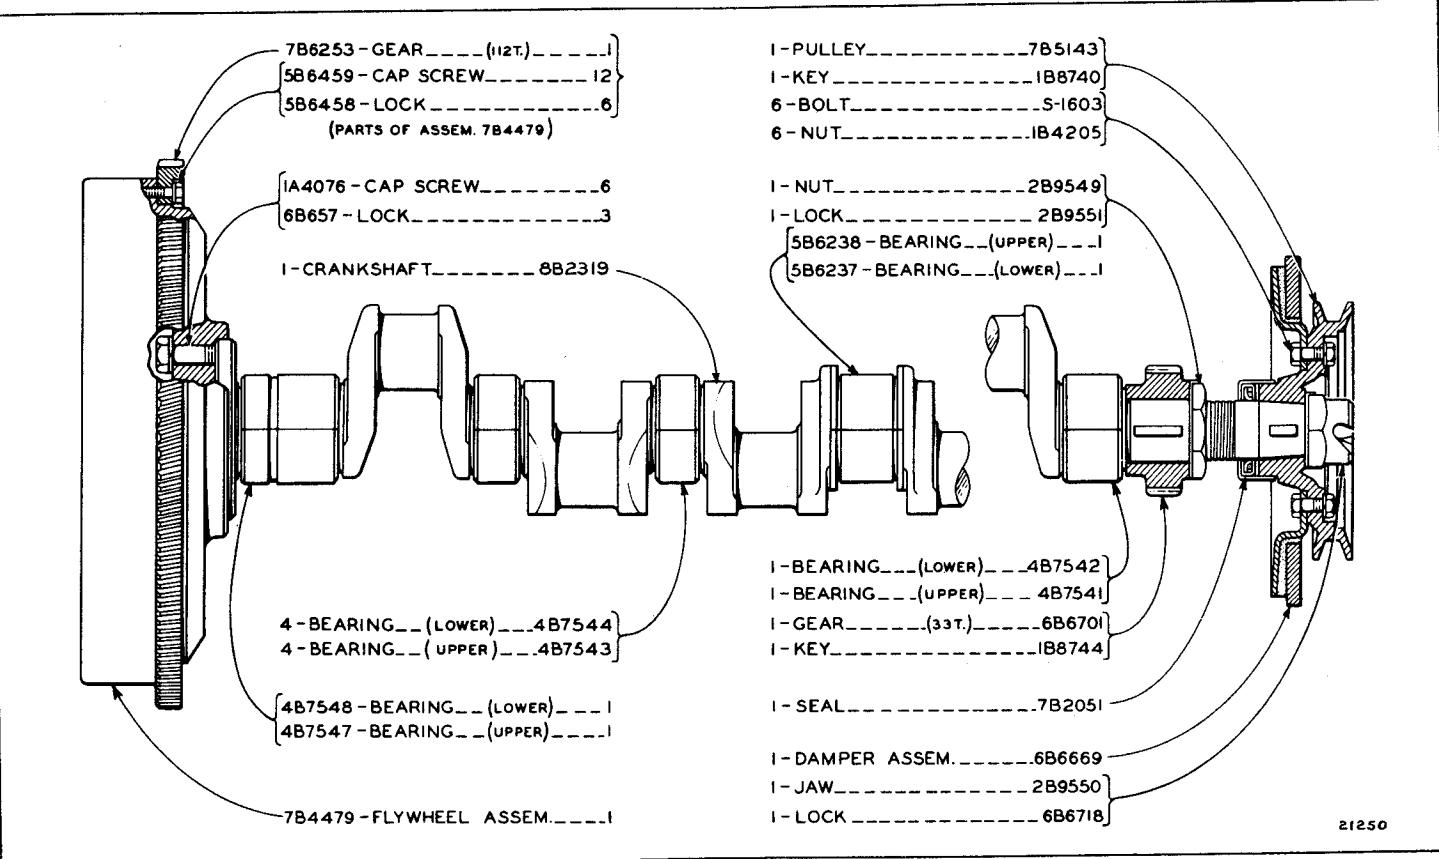


CRANKSHAFT
Serial No. 4R1 to 4R116 Inclusive

21250

INSERT BETWEEN PAGE 20 & 21 IN FORM 8885—D6 TRACTOR (74 Inch Gauge)

10-15-45

20A

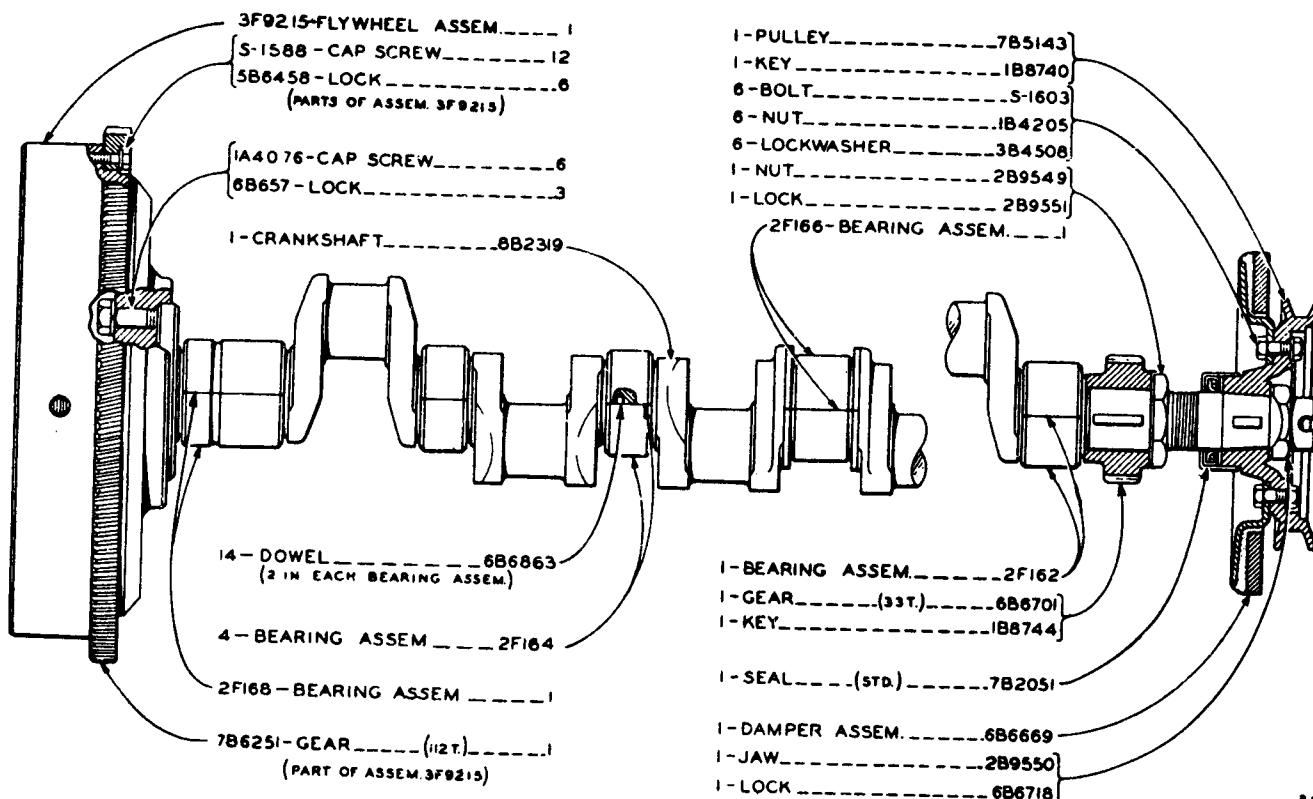


21743

CRANKSHAFT
 Effective with Serial No. 4R2342




3B4504
LOCKWASHER - 6

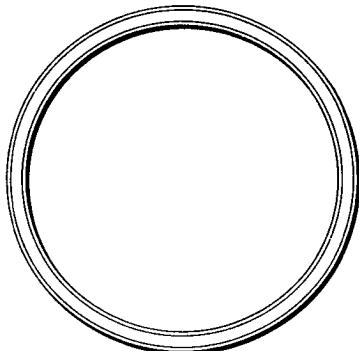

SF 5978 COVER - I



S-1614
CAP SCREW - 6

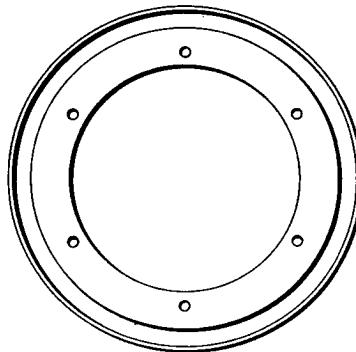


SF 5977 THROWER - I

33173

6F5606 REAR MAIN BEARING DIRT SLINGER GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

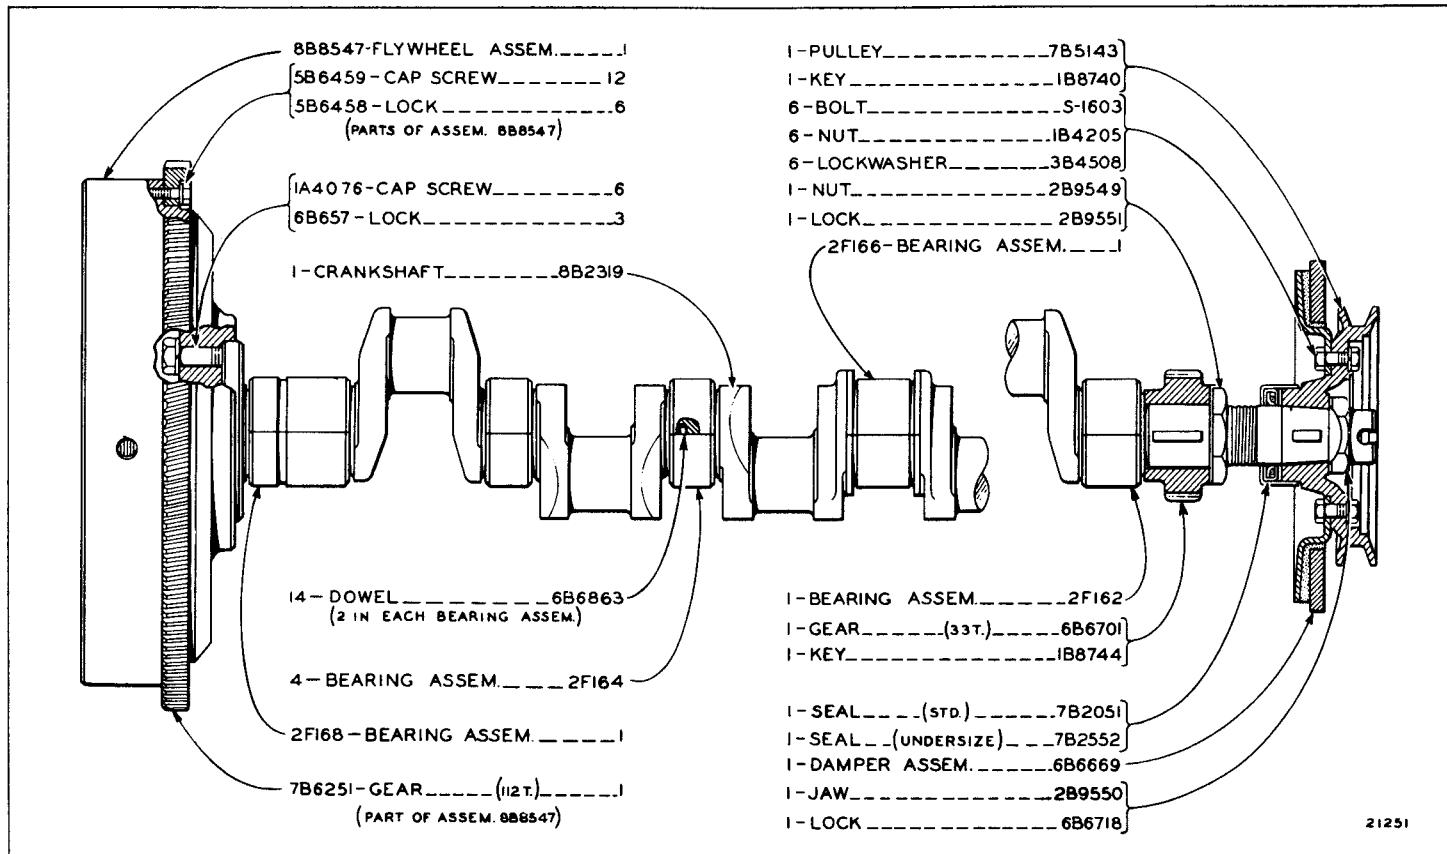

CRANKSHAFT
Serial No. 4R117 to 4R2342 inclusive

3P6841

2F173 Crankshaft Bearing Group

For use with Standard Crankshaft


Consists of:

Complete set of Bearings as shown with Standard Crankshaft
on Page 20 & 21.**2F71 Crankshaft Bearing Group**

For use with .030 Undersize Crankshaft

Consists of:

- 1 2F62 Bearing Assem.-Front
- 4 2F64 Bearing Assem.-Intermediate
- 1 2F66 Bearing Assem.-Center
- 1 2F68 Bearing Assem.-Rear

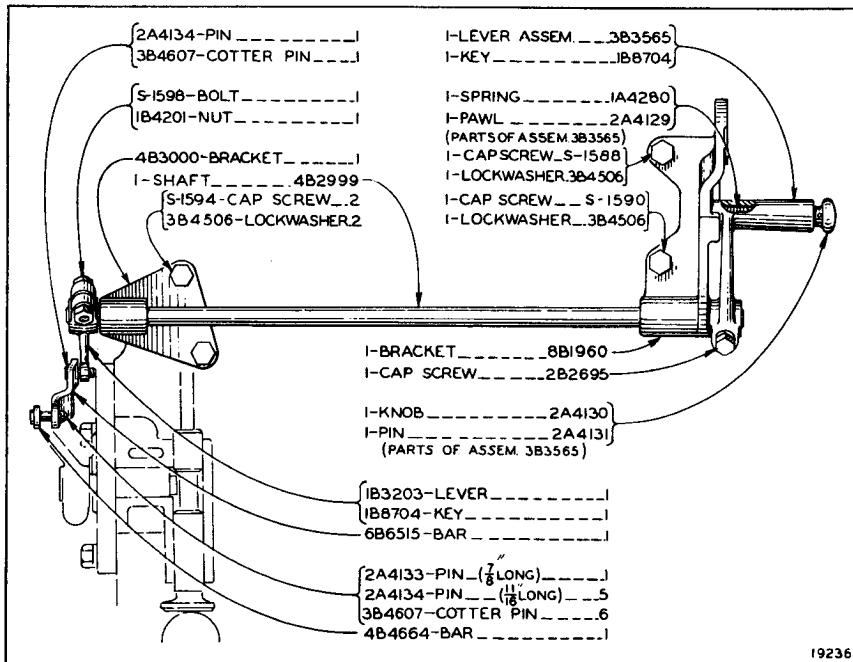


19236

COMPRESSION RELEASE CONTROL


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

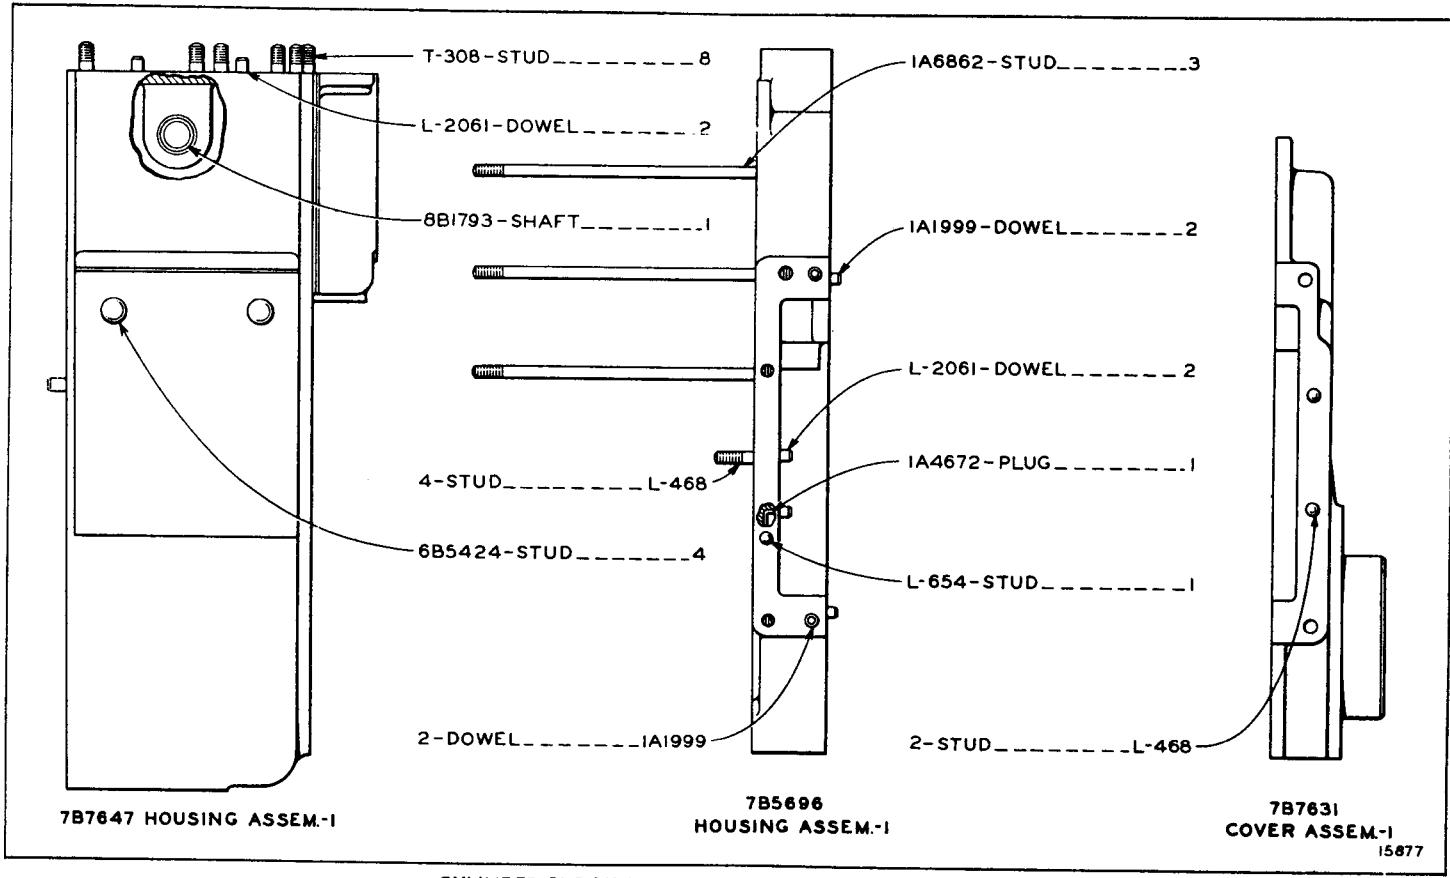

CYLINDER BLOCK HOUSING AND COVER ASSEMBLIES


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

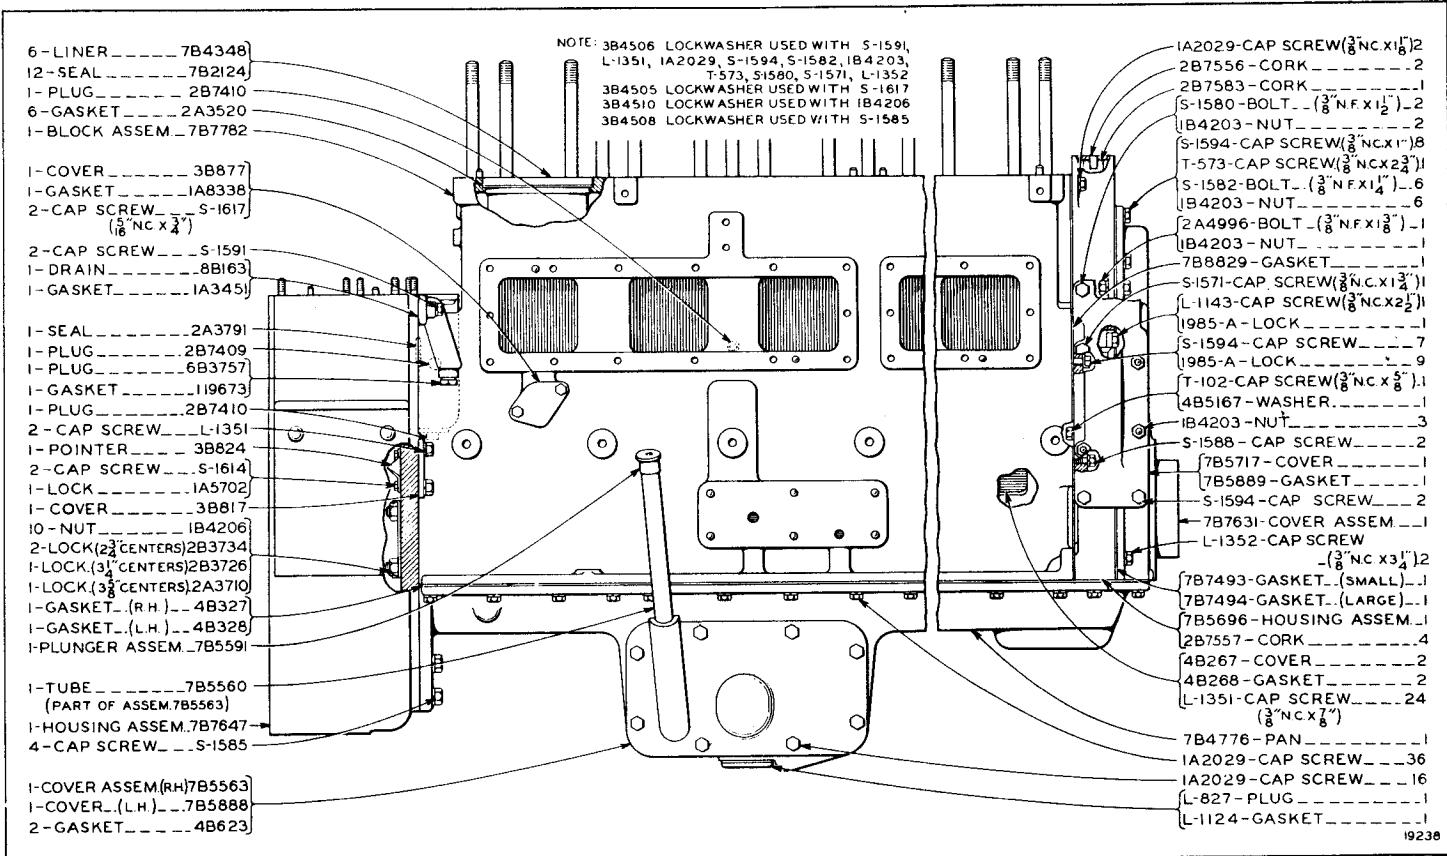

19238


CYLINDER BLOCK AND COVERS
Serial No. 4R1 to 4R1219 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

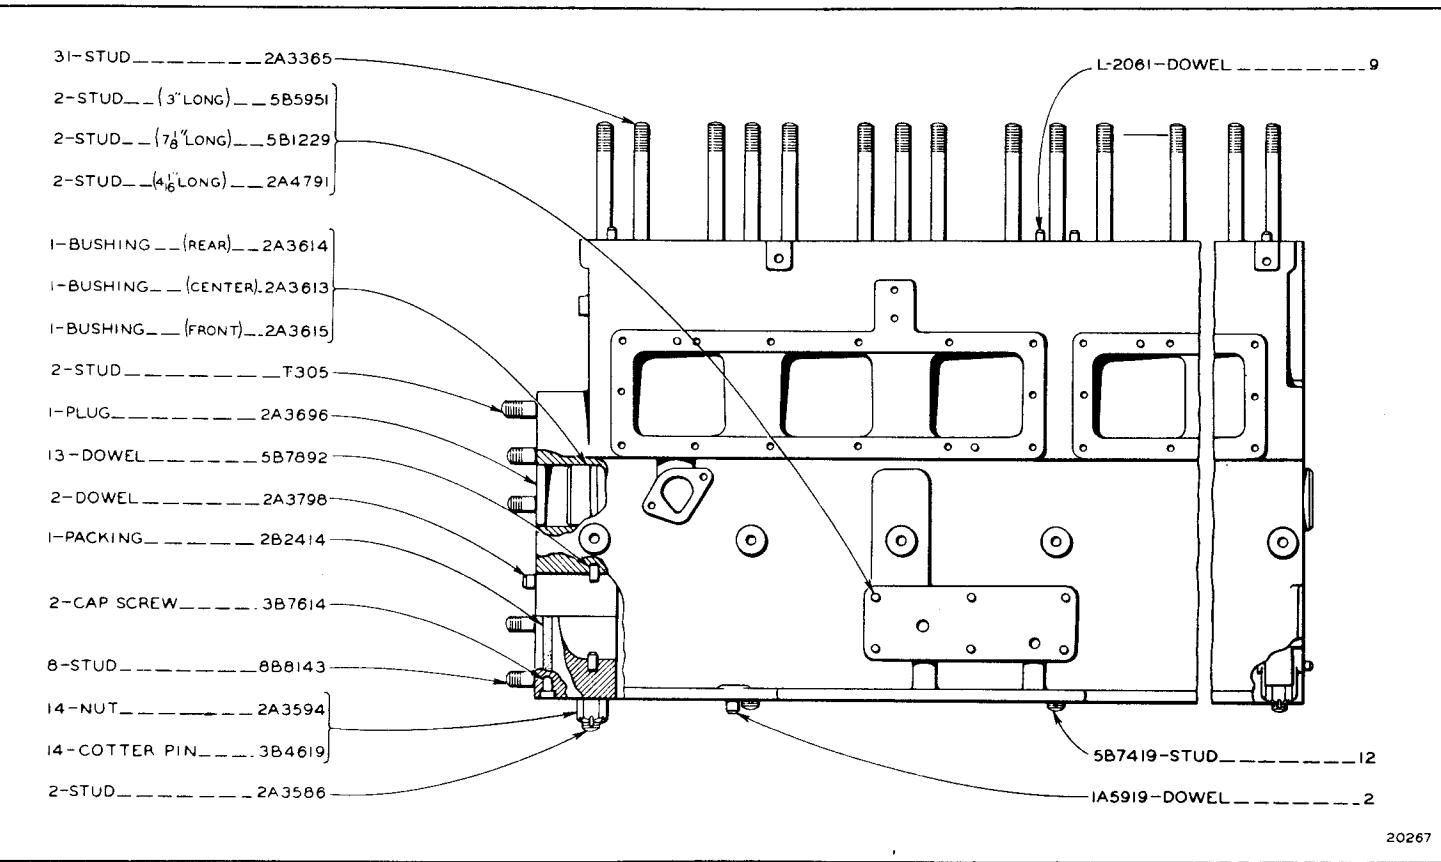


7B7782 CYLINDER BLOCK ASSEMBLY
Serial No. 4R1 to 4R1219 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

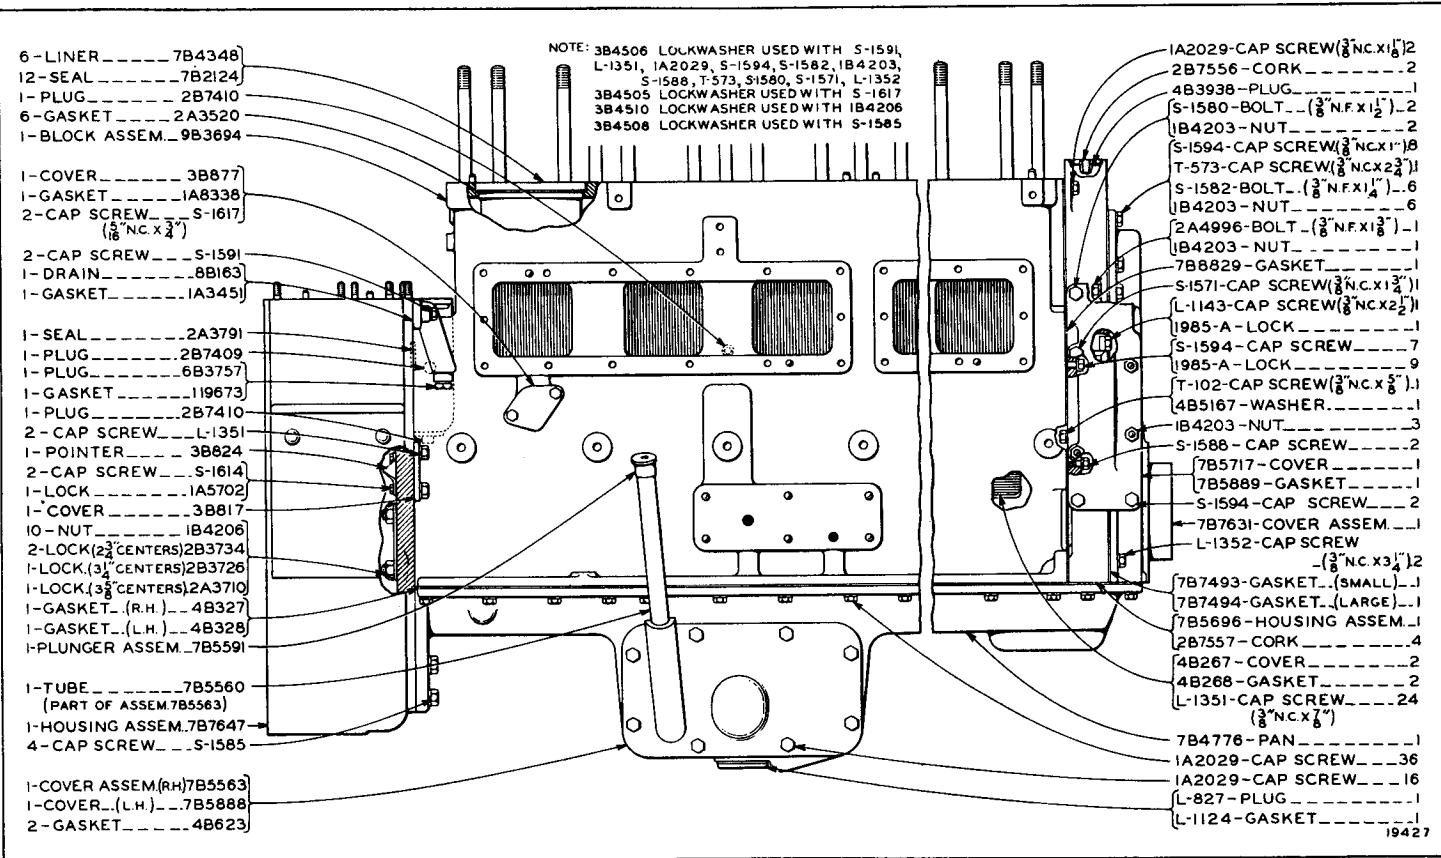


CYLINDER BLOCK AND COVERS
Effective with Serial No. 4R1220

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

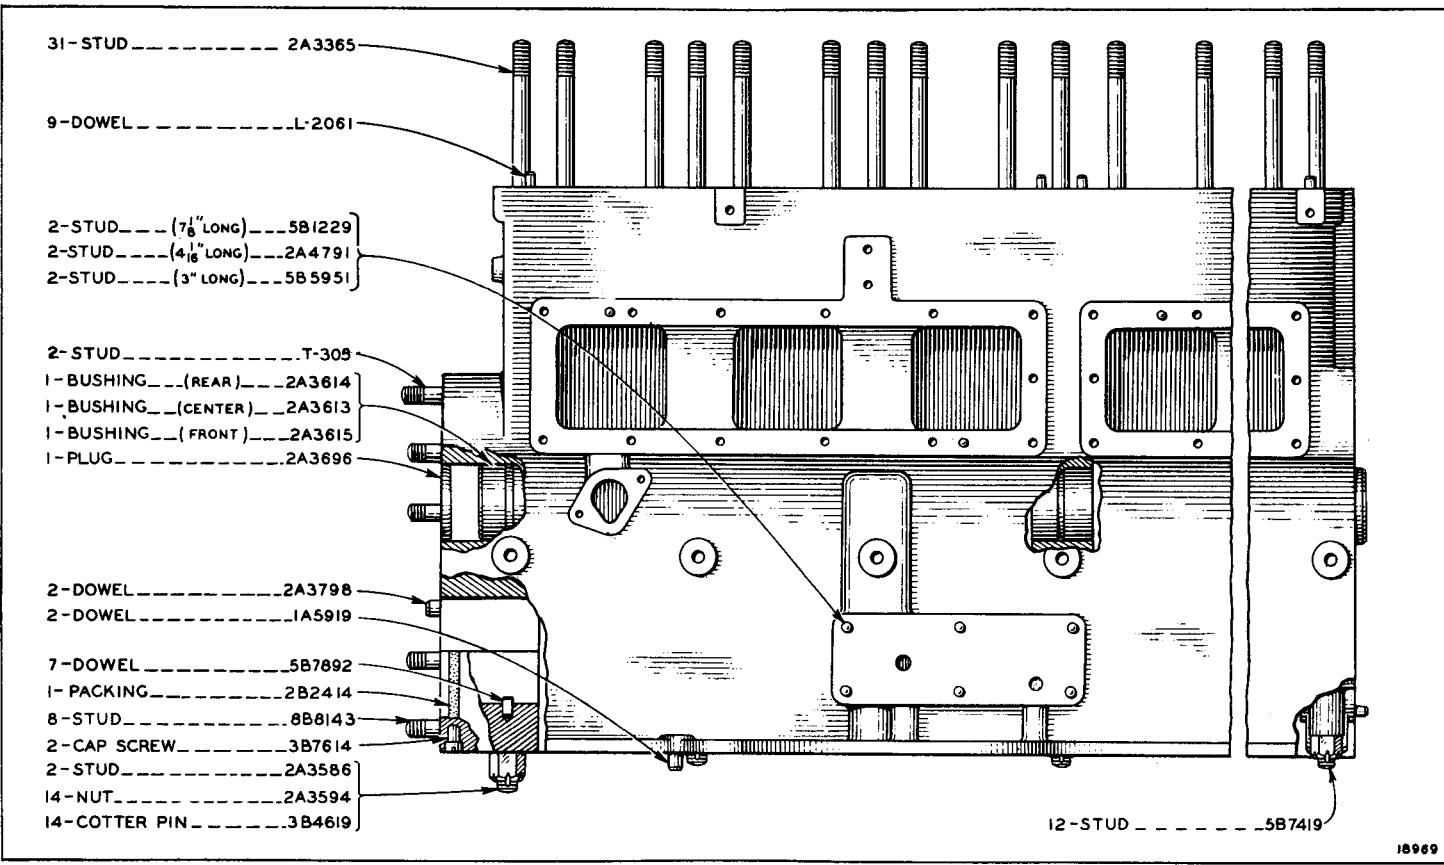


9B3694 CYLINDER BLOCK ASSEMBLY
Effective with Serial No. 4R1220

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

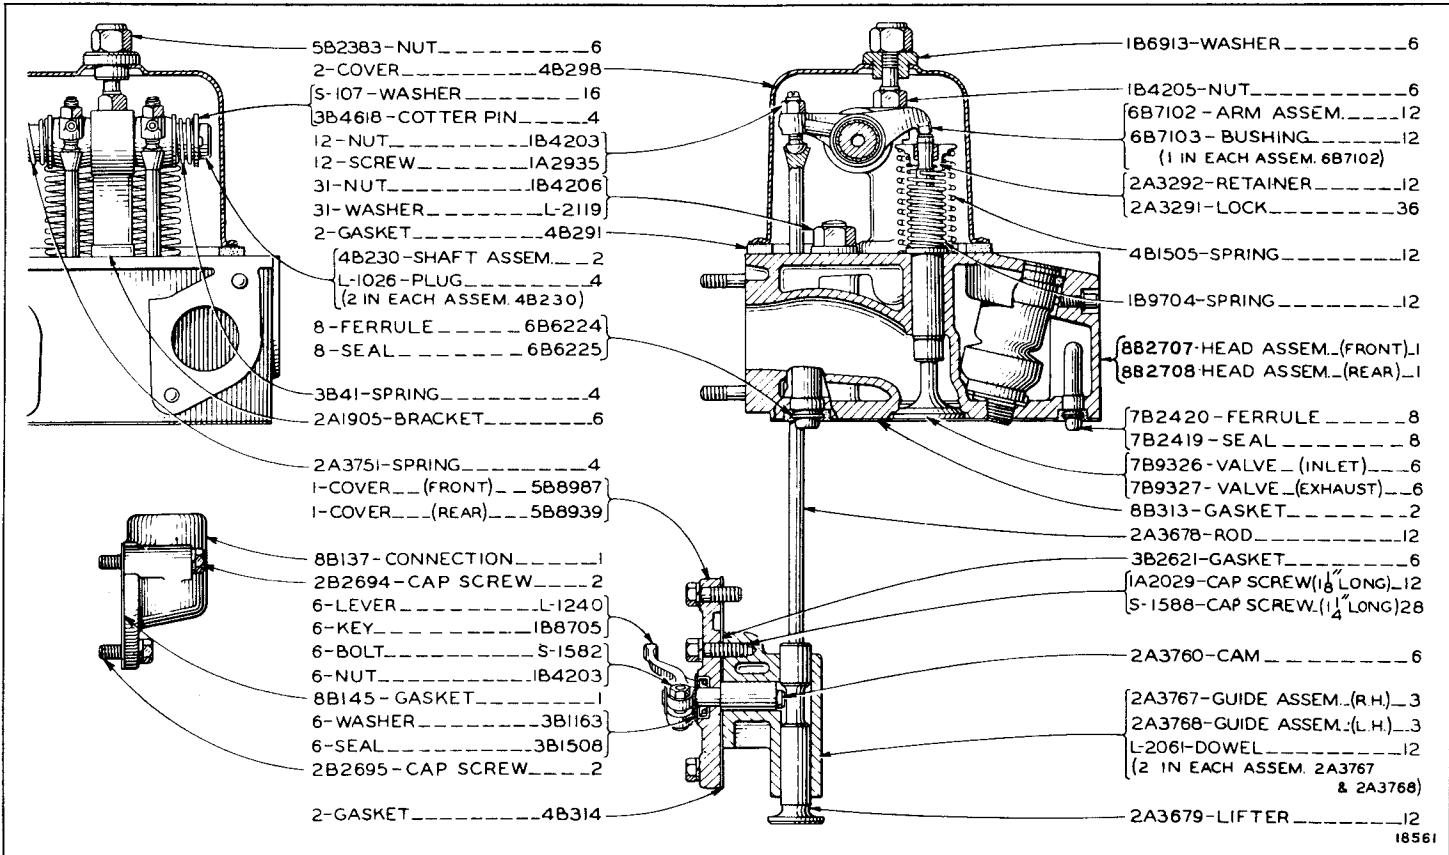

CYLINDER HEAD AND VALVE MECHANISM
Serial No. 4R1 to 4R565 Inclusive

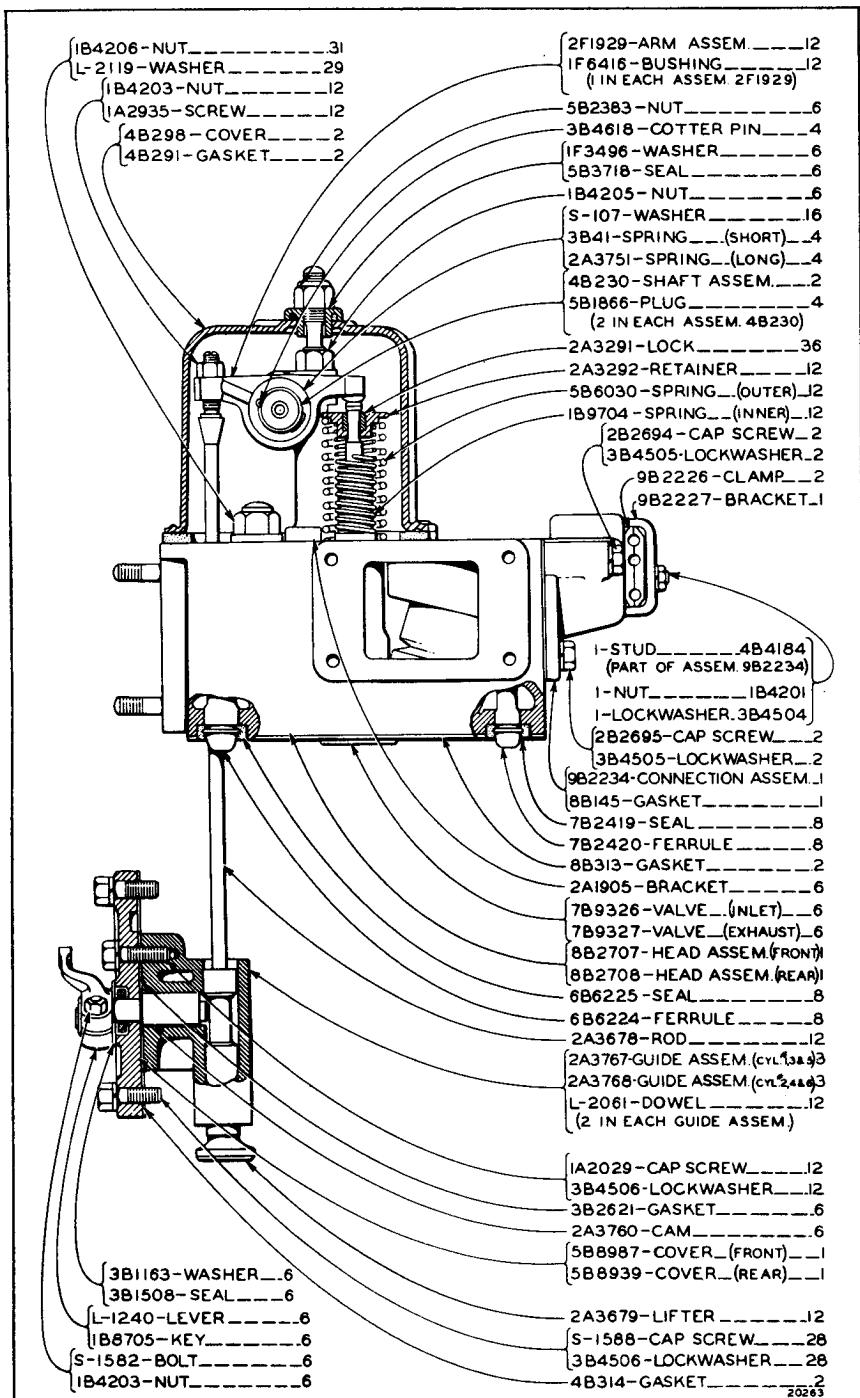


CYLINDER HEAD AND VALVE MECHANISM


Effective with Serial No. 4R566

2023

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

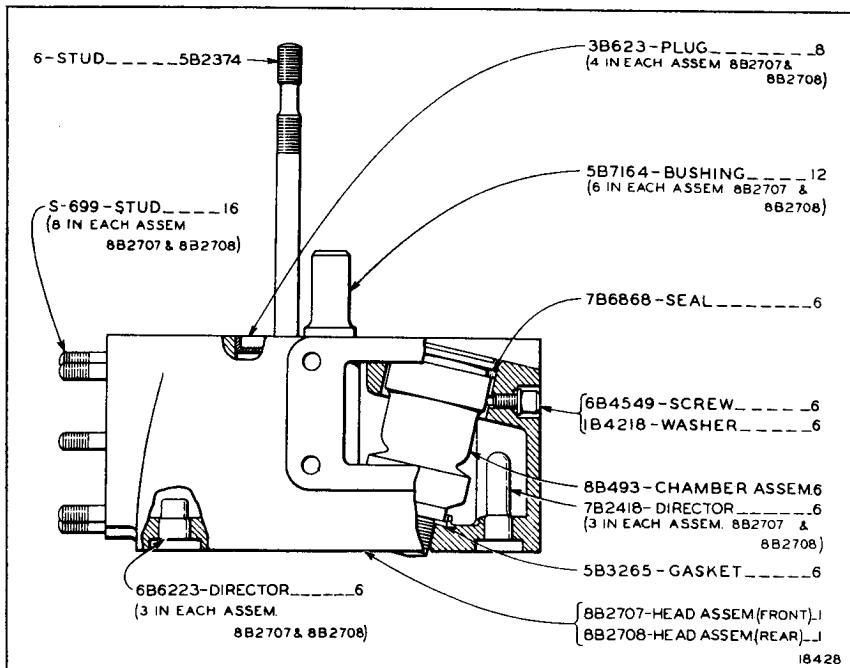

CYLINDER HEAD AND VALVE MECHANISM ASSEMBLIES

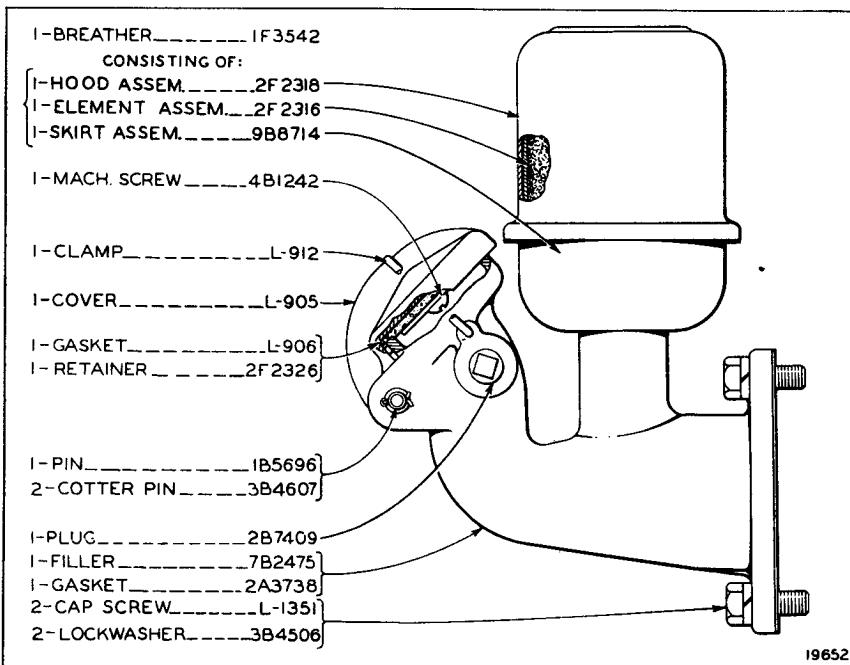


19652

BREATHER AND OIL FILLER

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGES 30 & 31 IN FORM 8885—
PARTS CATALOG FOR DE TRACTOR—74 Inch Gauge

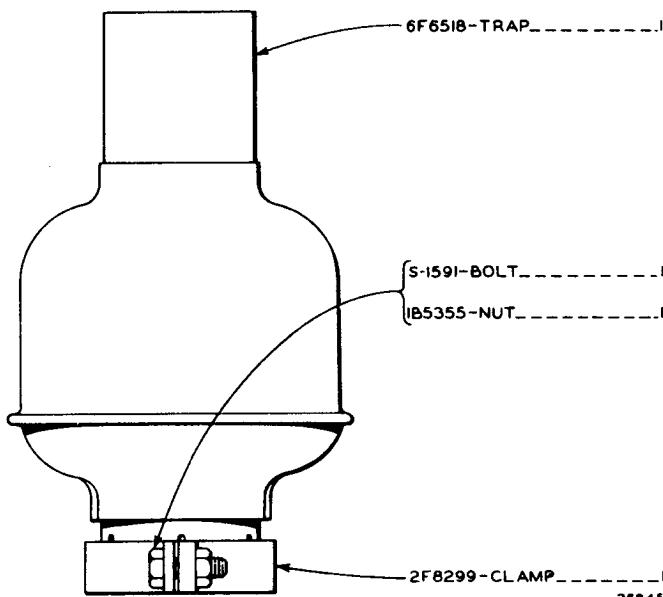


6F6521 EXHAUST RAIN TRAP GROUP

Only separate parts serviced

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

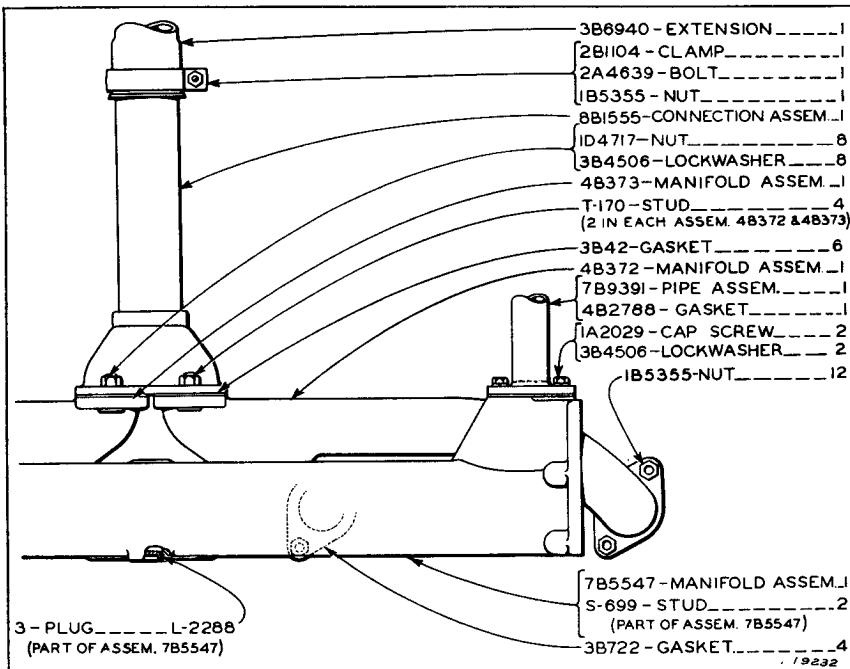


MANIFOLDS

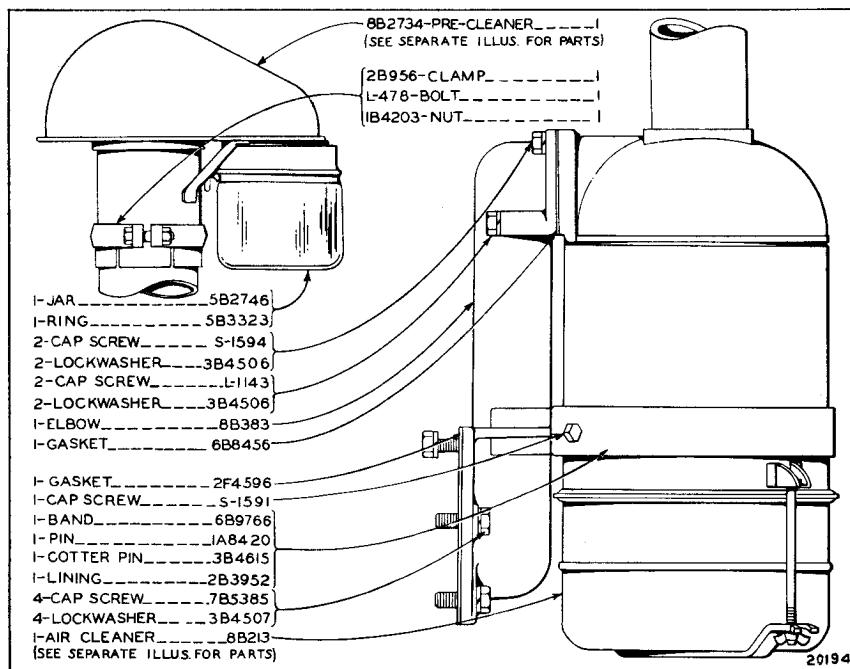


AIR CLEANER

Refer also to Page 119 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

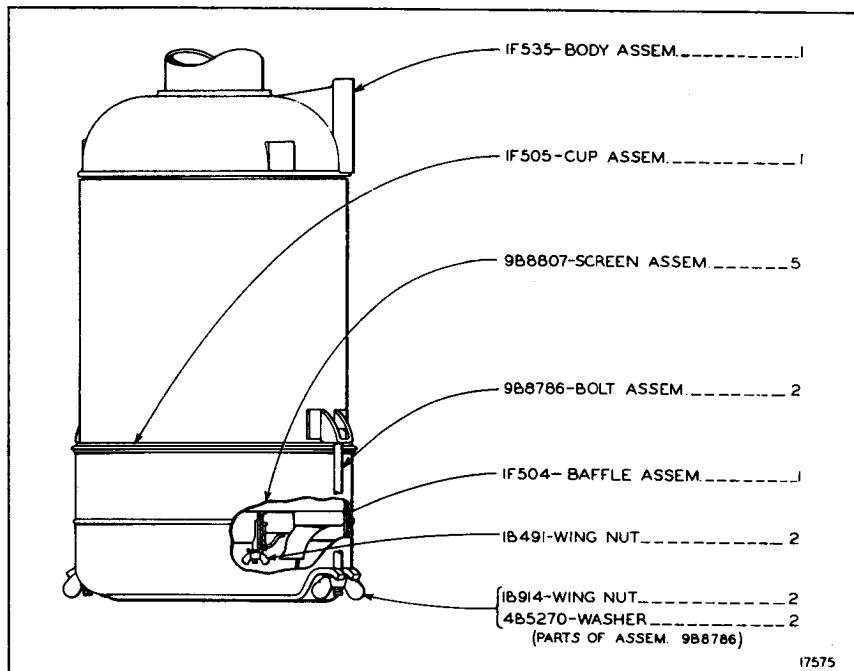


8B213 AIR CLEANER

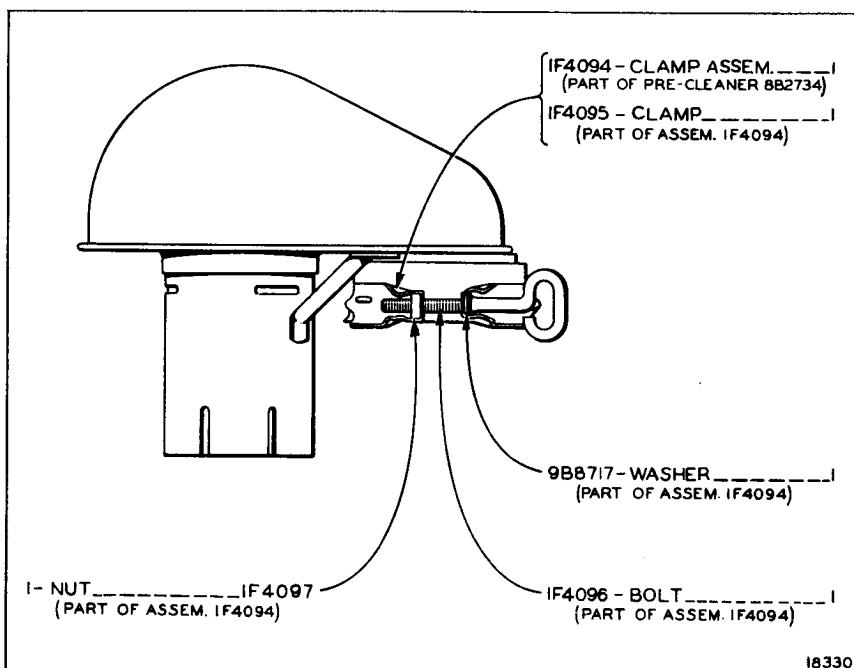

8B2734 PRE-CLEANER


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

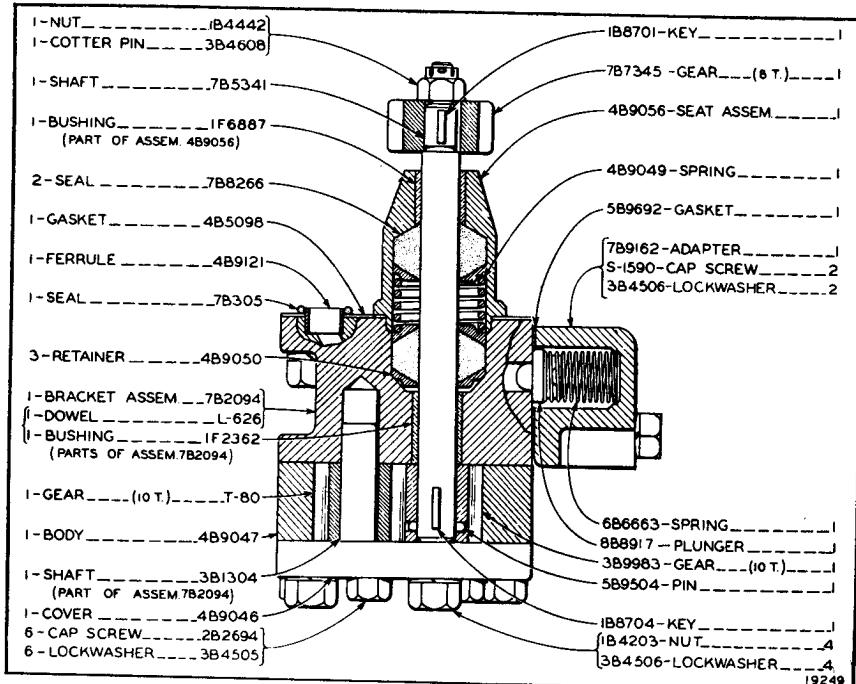

7B3762 FUEL TRANSFER PUMP GROUP

Serial No. 4R1 to 4R725 inclusive


Only separate parts serviced. When complete group is required, order 1-IF1532 and 1-IF1559 Plug

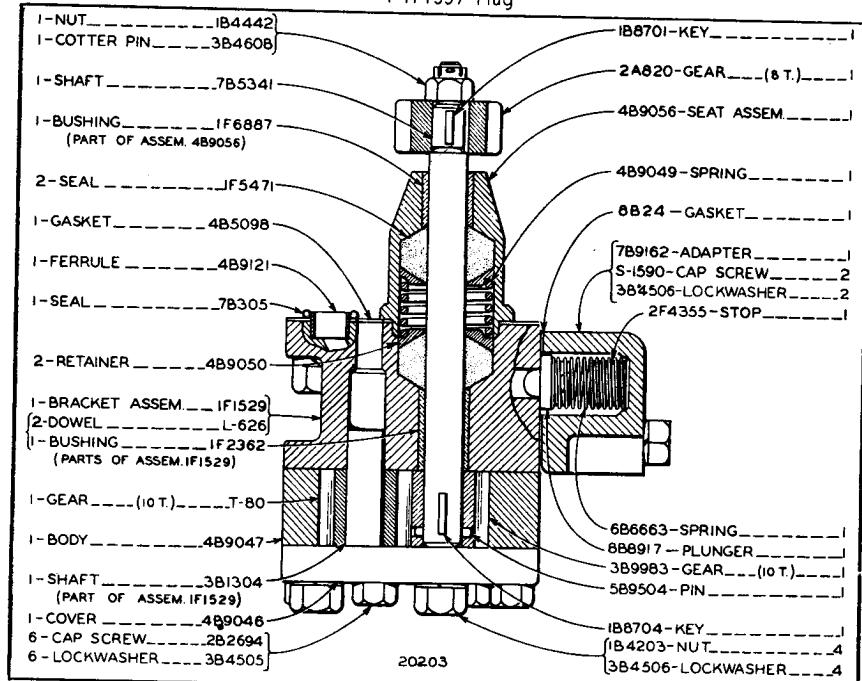

IF1532 FUEL TRANSFER PUMP GROUP


Effective with Serial No. 4R726

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

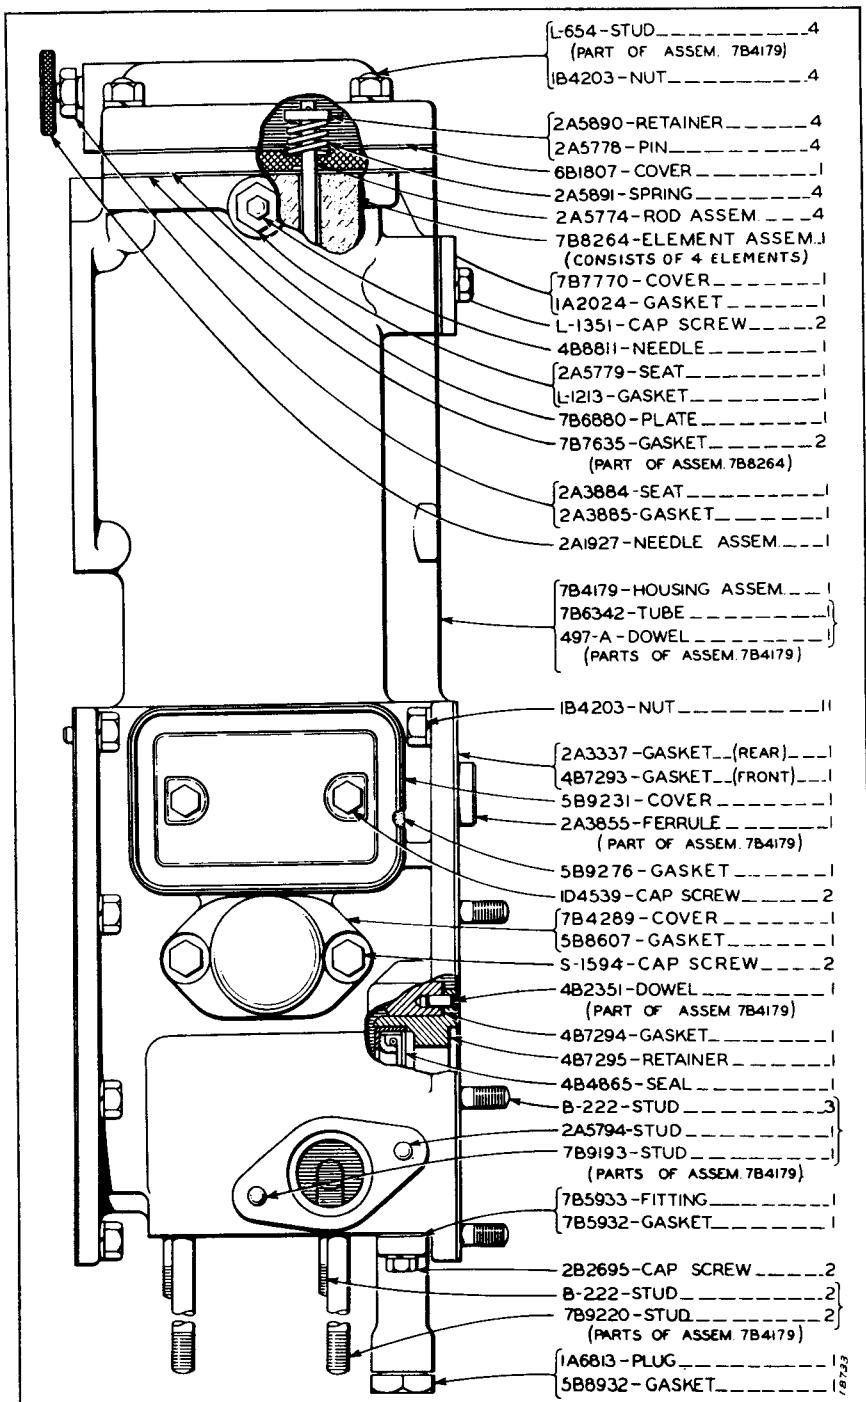

FUEL FILTER
Serial No. 4R1 and 4R2

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

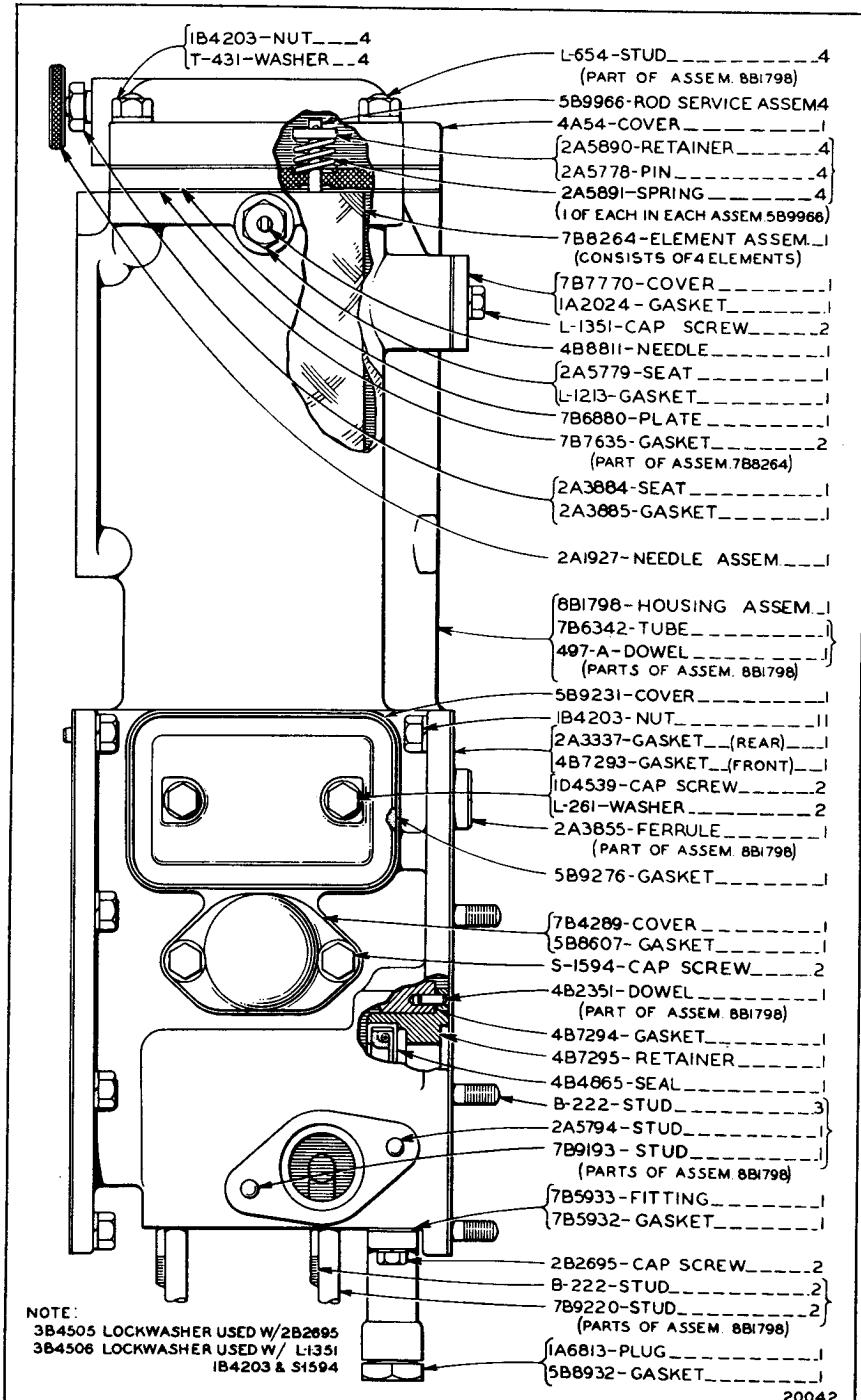


20042

FUEL FILTER
Effective with Serial No. 4R3


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

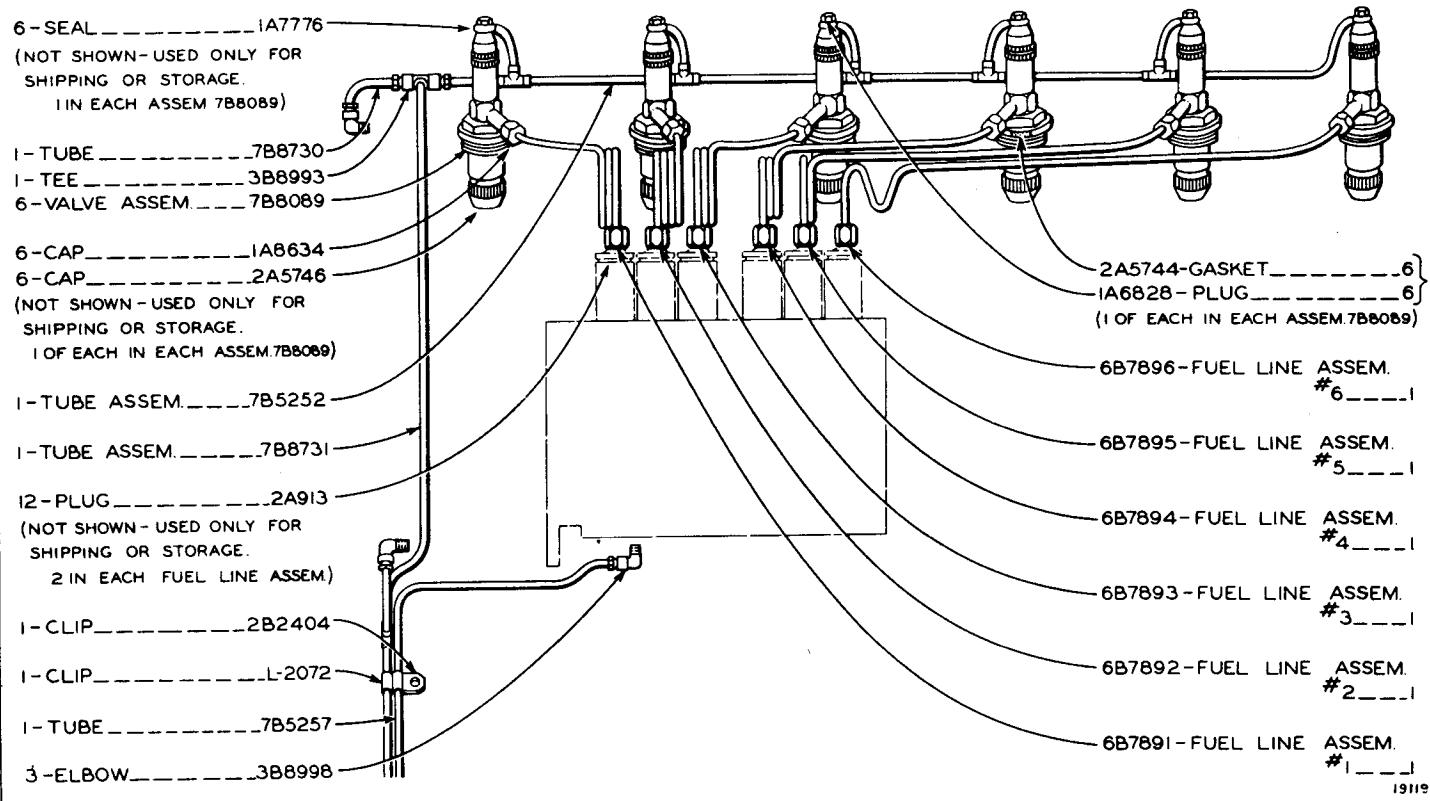


FUEL INJECTION VALVES AND LINES
Serial No. 4R1 to 4R725 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

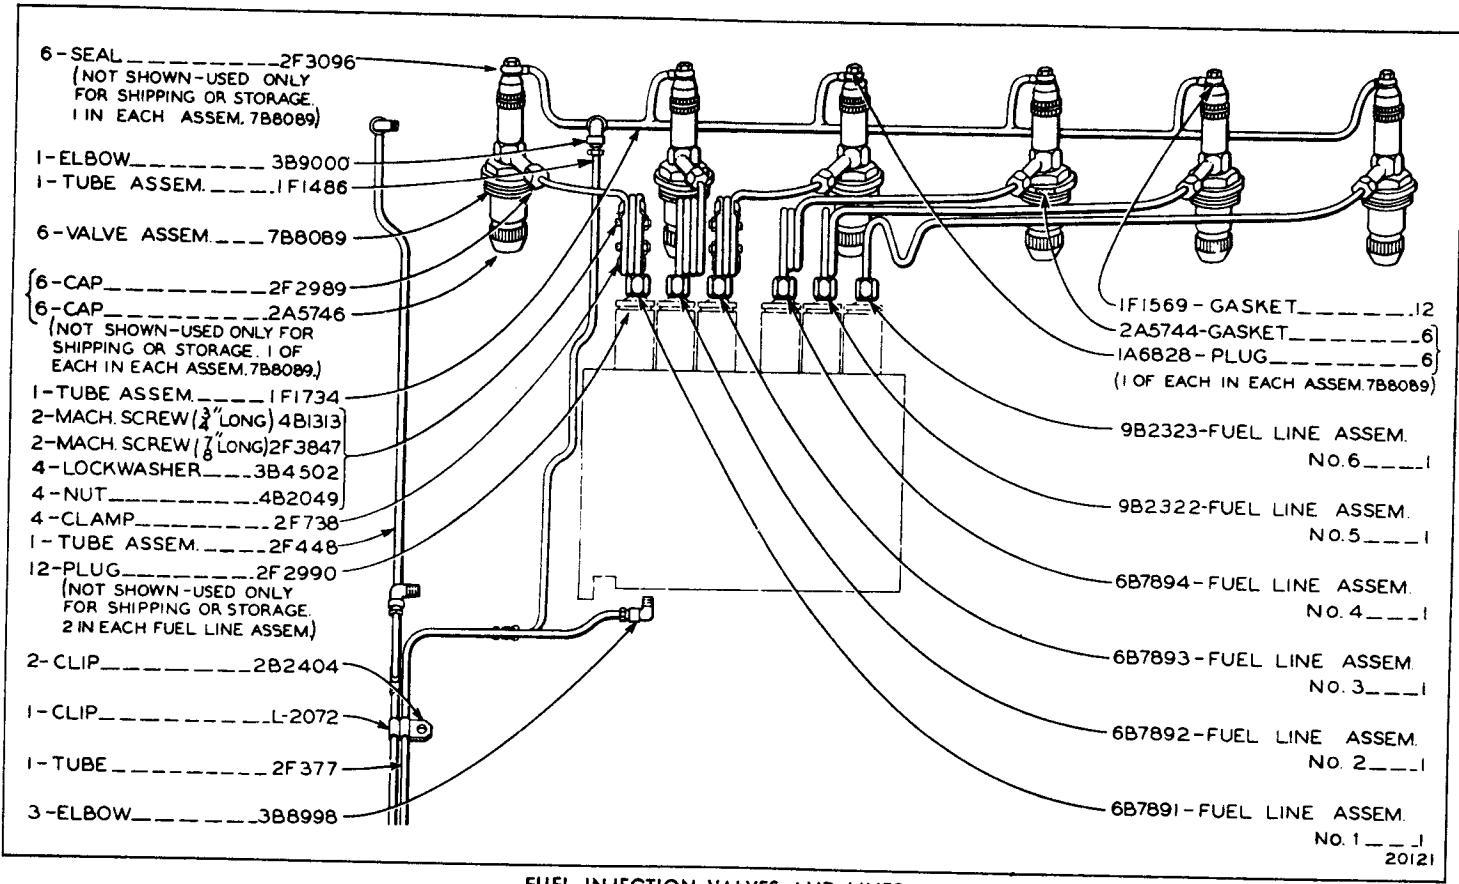

FUEL INJECTION VALVES AND LINES
 Serial No. 4R726 to 4R1630 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

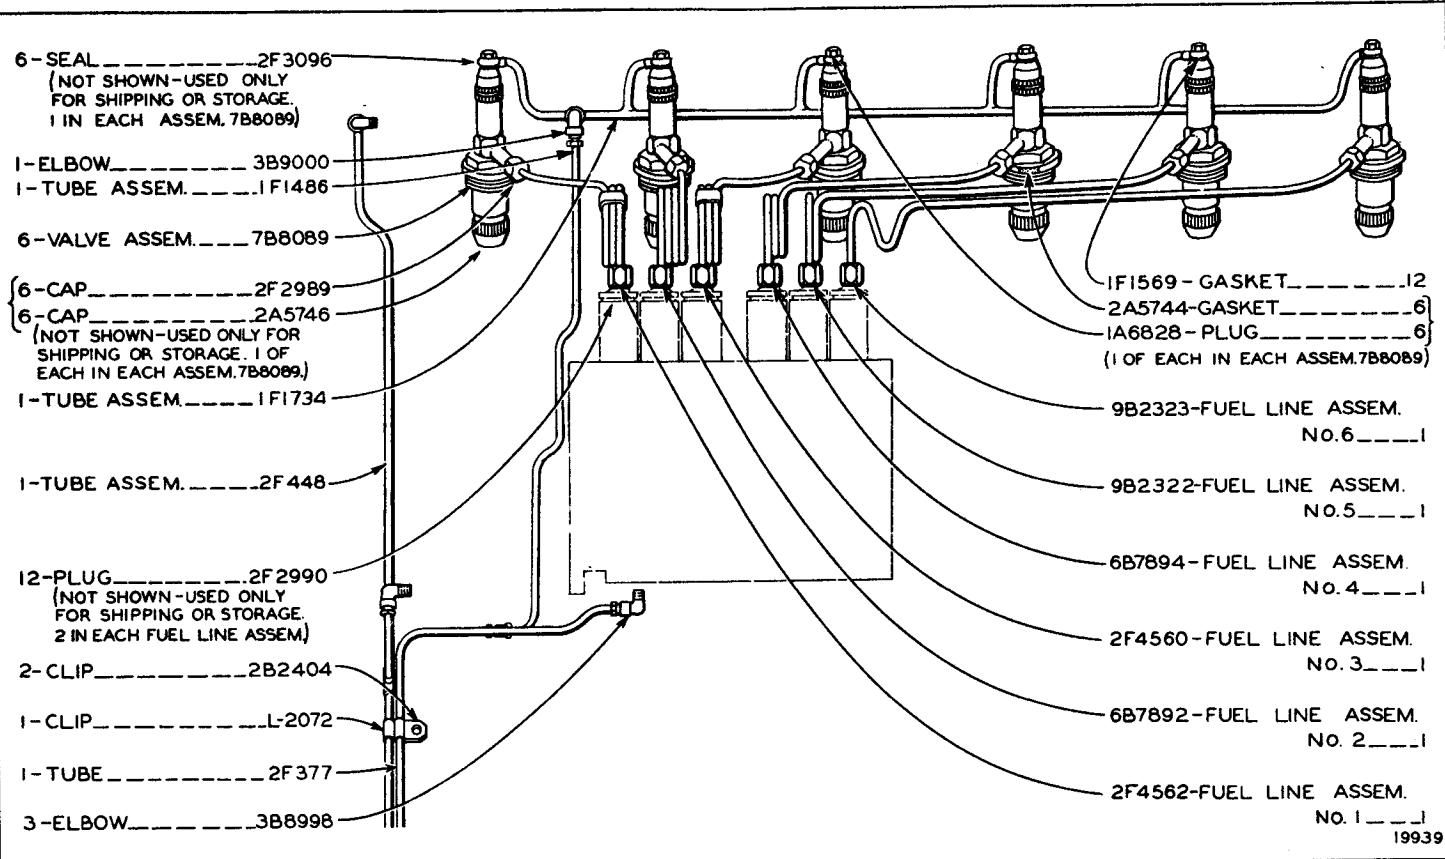

FUEL INJECTION VALVES AND LINES
Effective with Serial No. 4R1631

INSERT BETWEEN PAGES 38 & 39 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

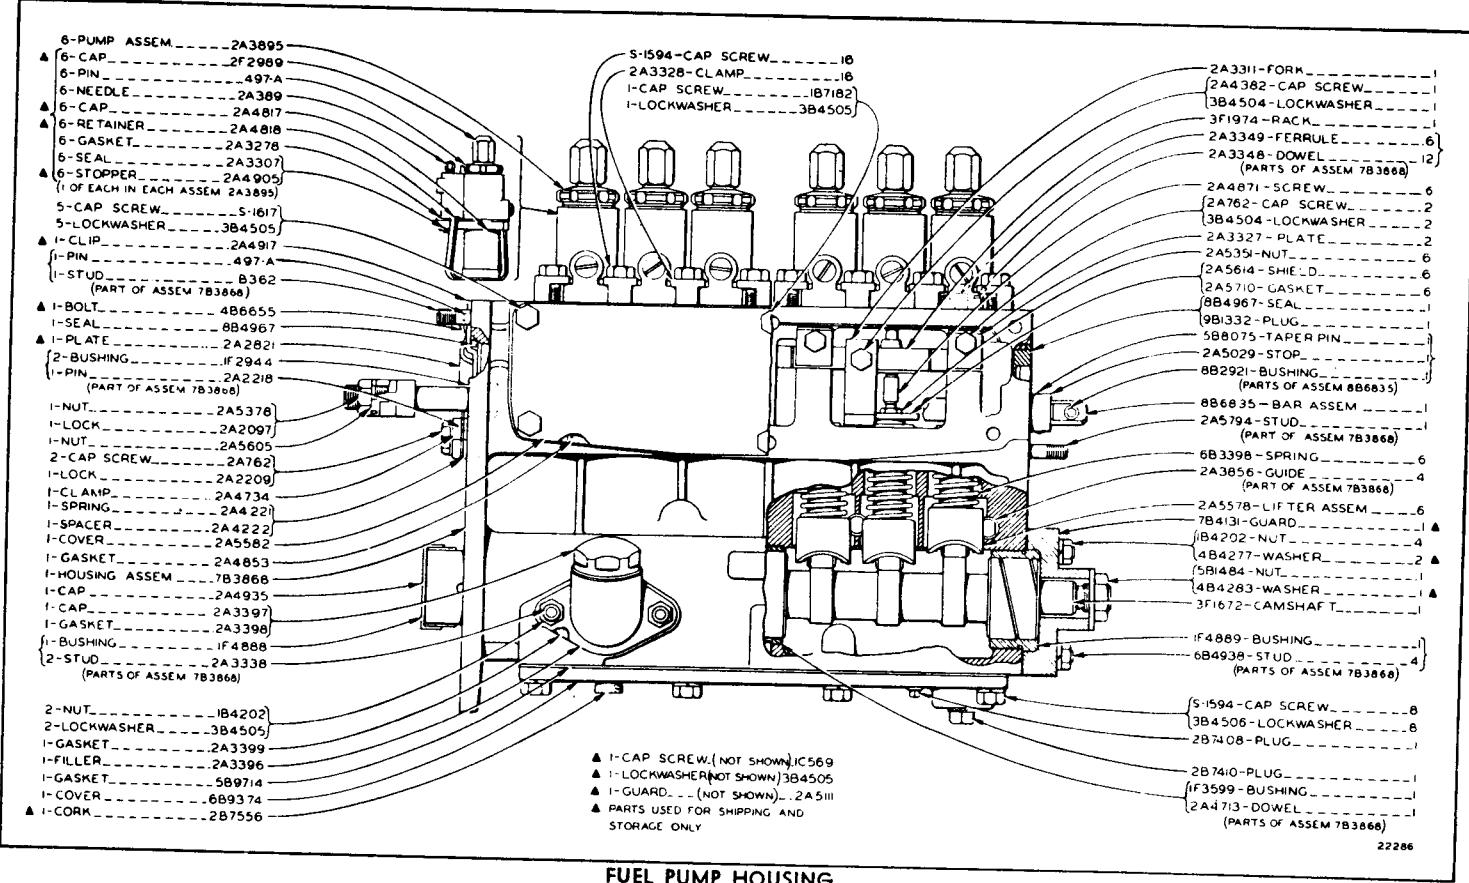



FUEL PUMP HOUSING

Effective with Fuel Pump Housing Service Assembly Serial No. 32P262

Note: 8B3359 Fuel Pump Housing Service Assembly consists of parts shown plus: 2A5367 Guard—2, 4B4278 Washer—8, 2A4716 Cap—6, 2A3307 Seal—6, 1A2029 Cap Screw—8, and minus: 2A3895 Pump Assembly—6, S-1594 Cap Screw—16, and 2A3328 Clamp—16.


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

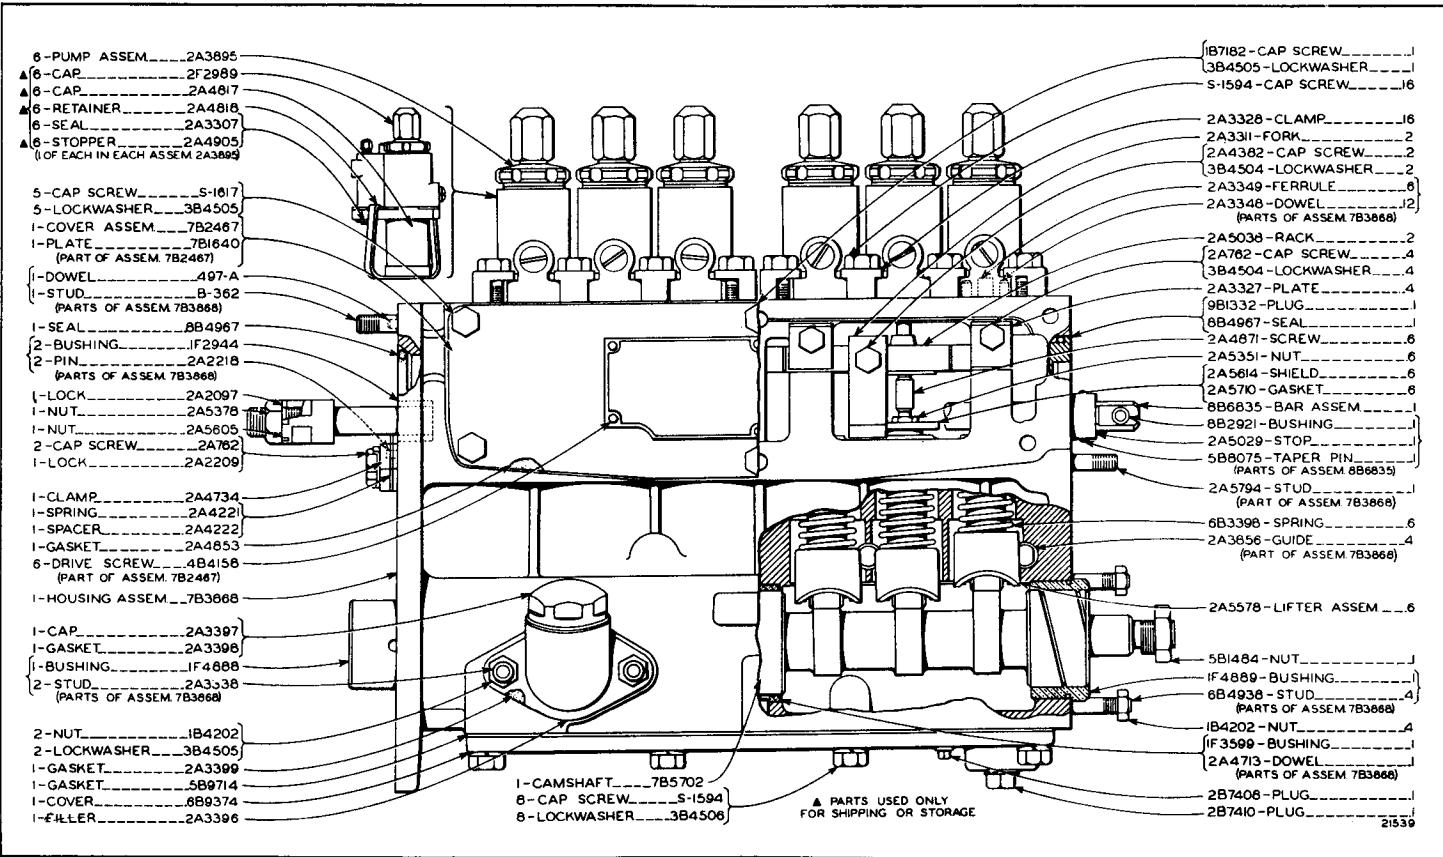

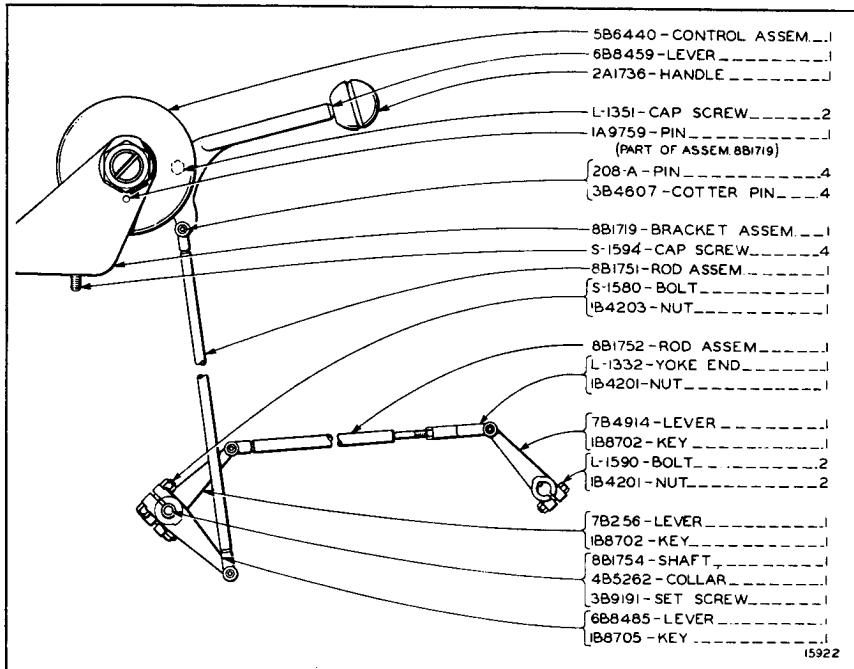

FUEL PUMP AND GOVERNOR CONTROL


Serial No. 4R1 to 4R548 Inclusive

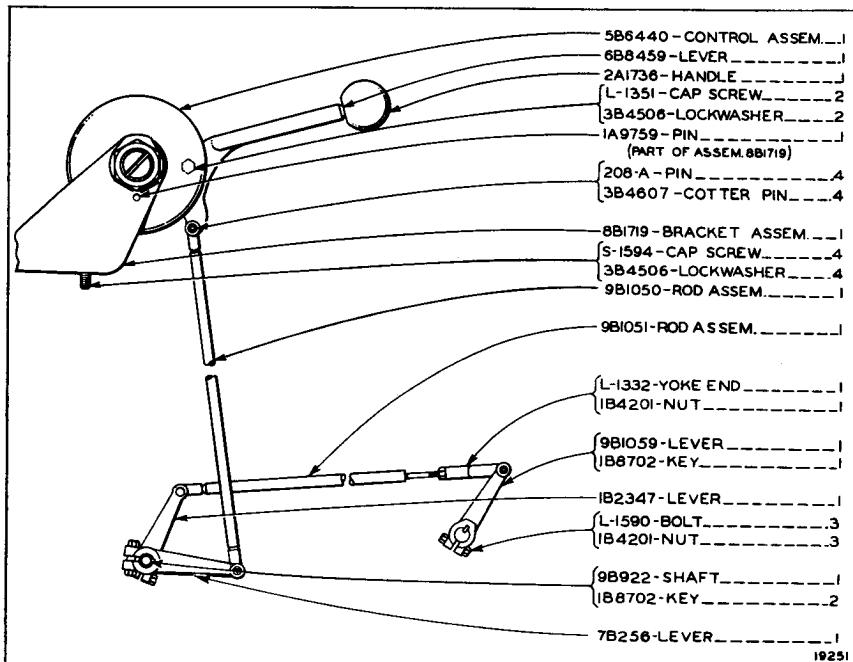


FUEL PUMP AND GOVERNOR CONTROL

Effective with Serial No. 4R549

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

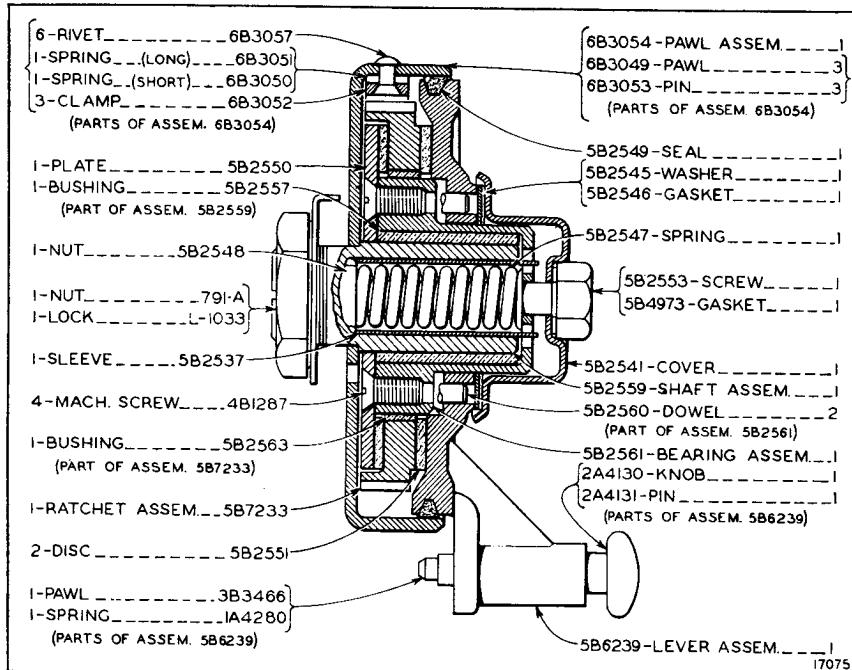


586440 CONTROL ASSEMBLY

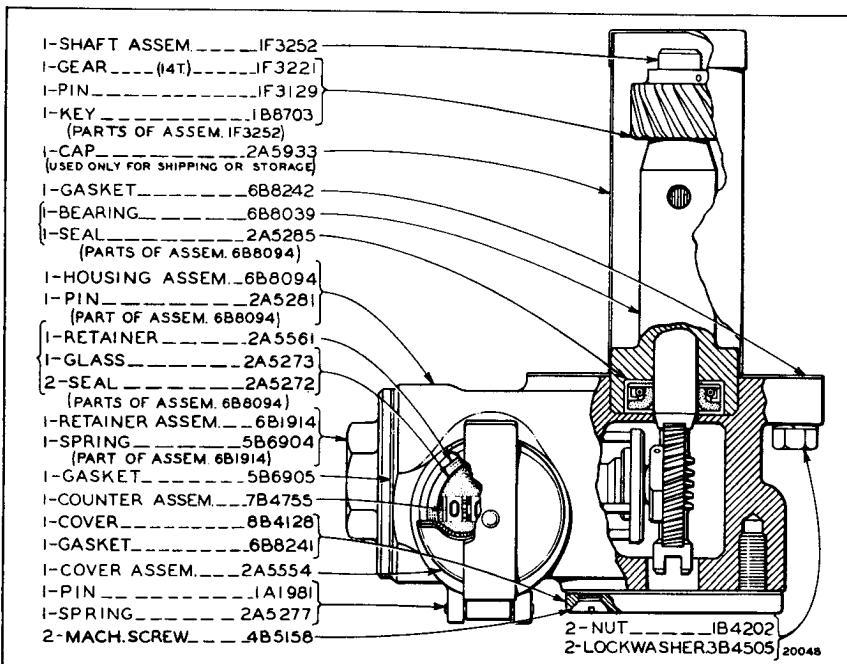


7B4876 HOUR METER GROUP


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

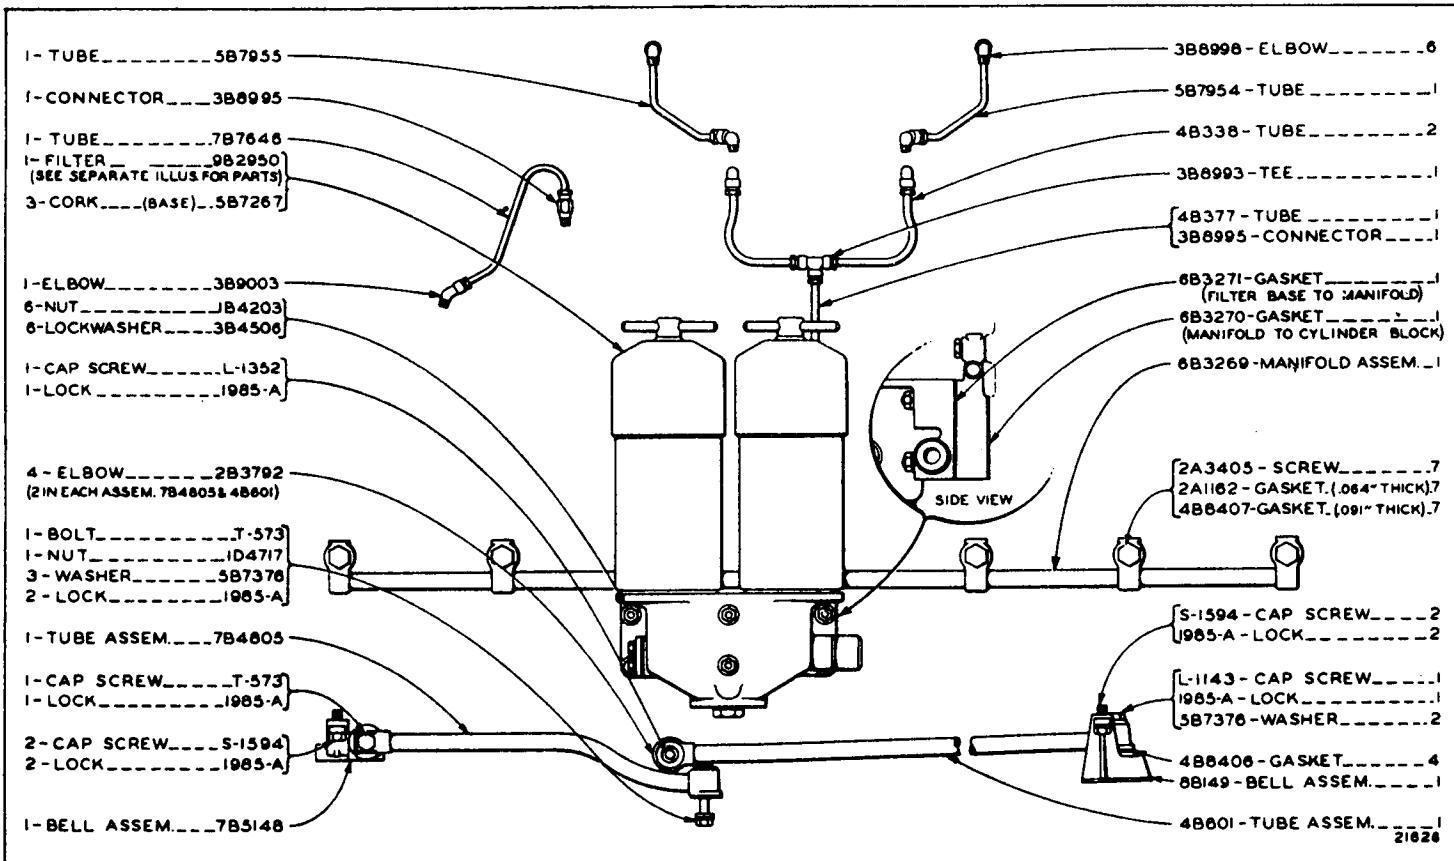

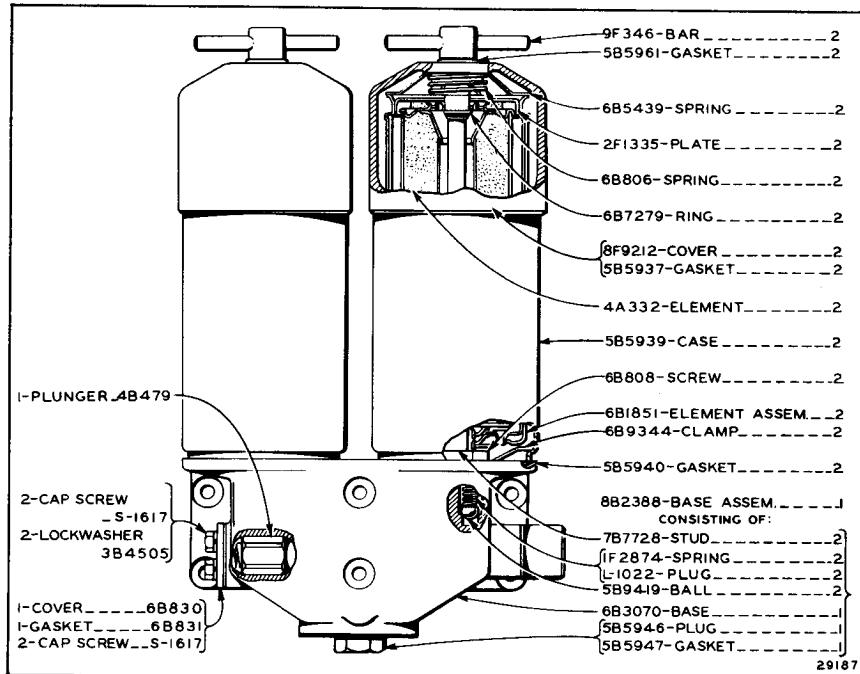


9B2950 OIL FILTER

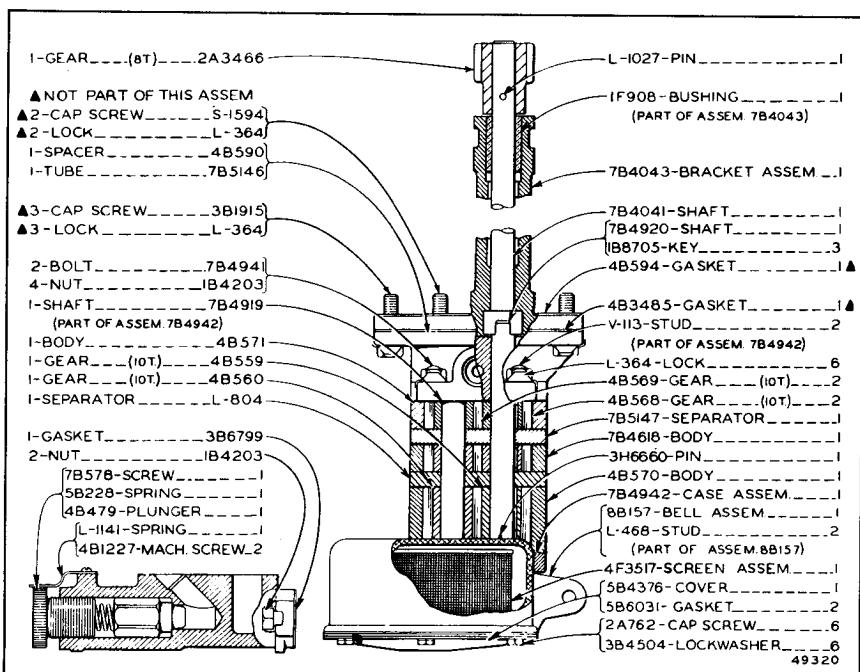


2H7721 OIL PUMP ASSEMBLY

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

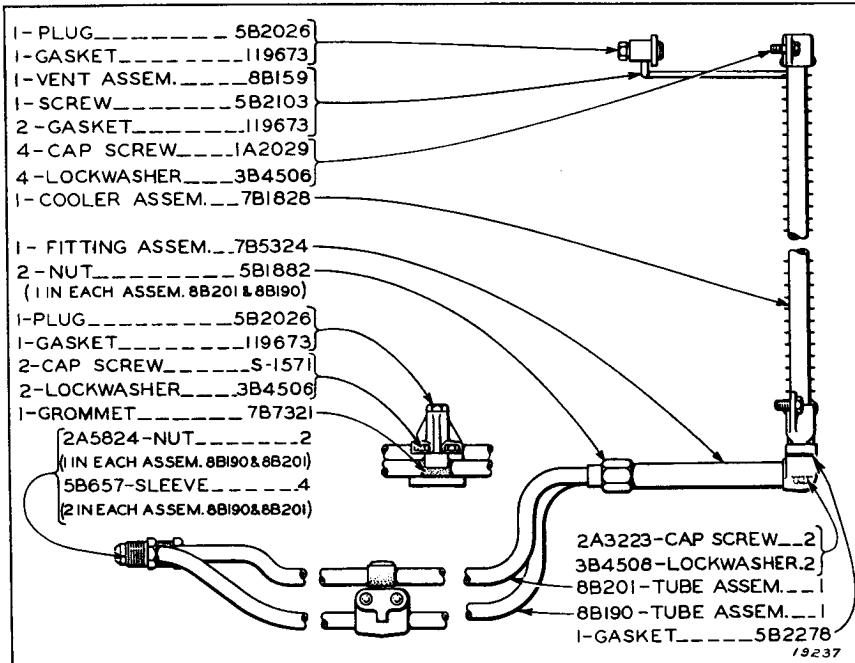


OIL COOLER

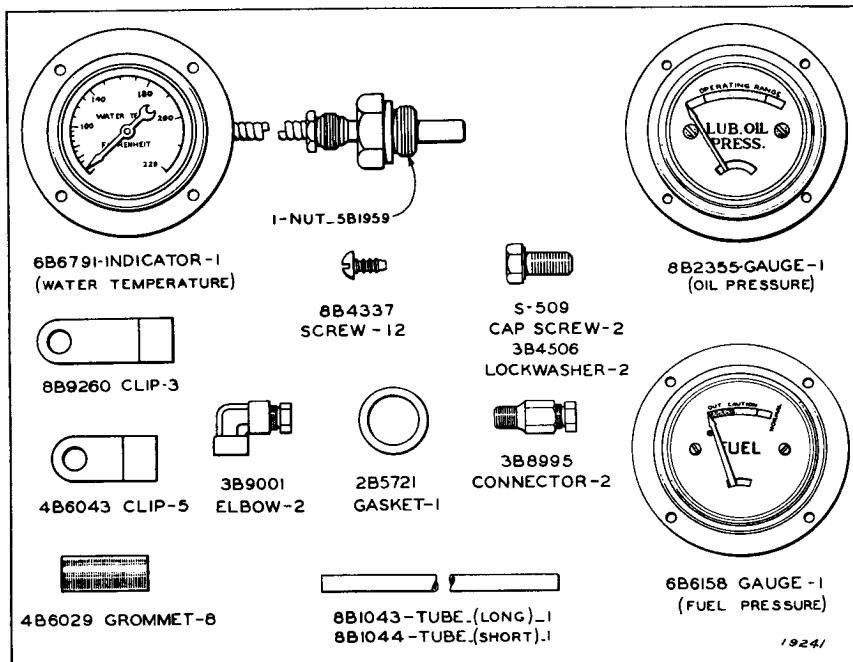


OIL GAUGE, FUEL GAUGE AND HEAT INDICATOR

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

Starting Engine

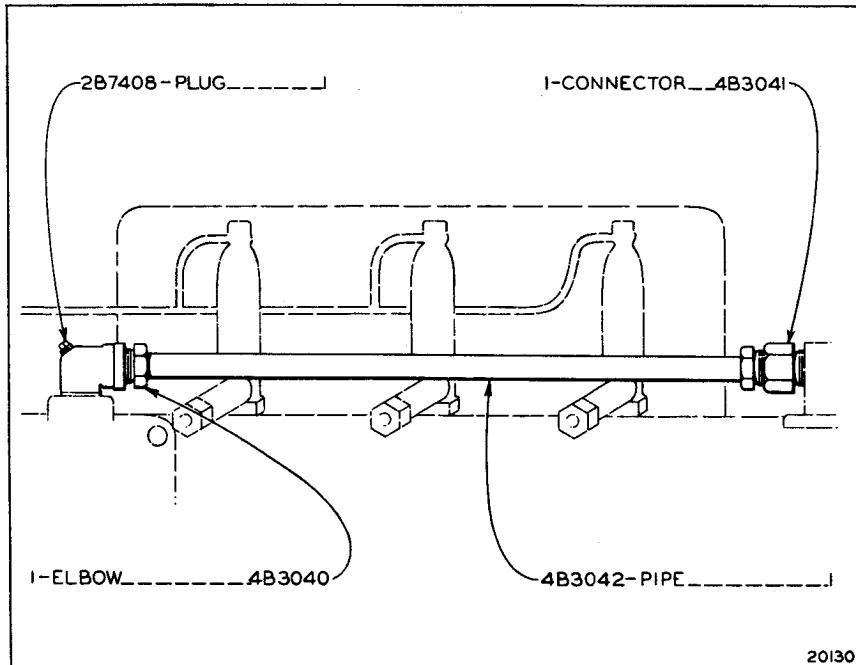

WATER LINE

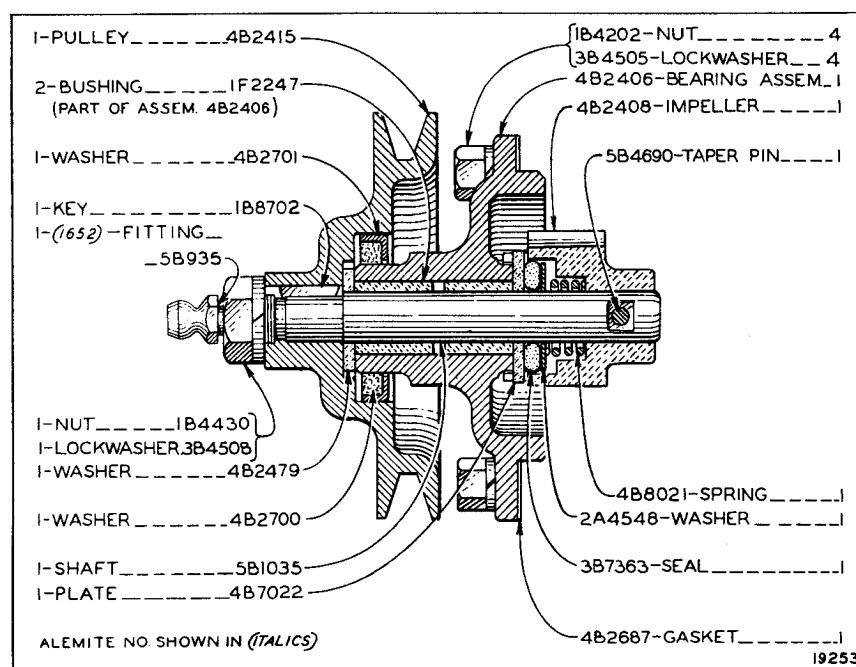

WATER PUMP
Serial No. 4R1 to 4R3434 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

I-SHAFT ASSEM. 5F3709

CONSISTING OF:

I-TAPER PIN 5B4690

I-SHAFT 5B1035

I-IMPELLER 4F535

I-SEAL ASSEM. 4F593


CONSISTING OF:

I-SEAL 5F4339

I-WASHER 5F4338


4-LOCKWASHER 3B4505

4-NUT 1B4202

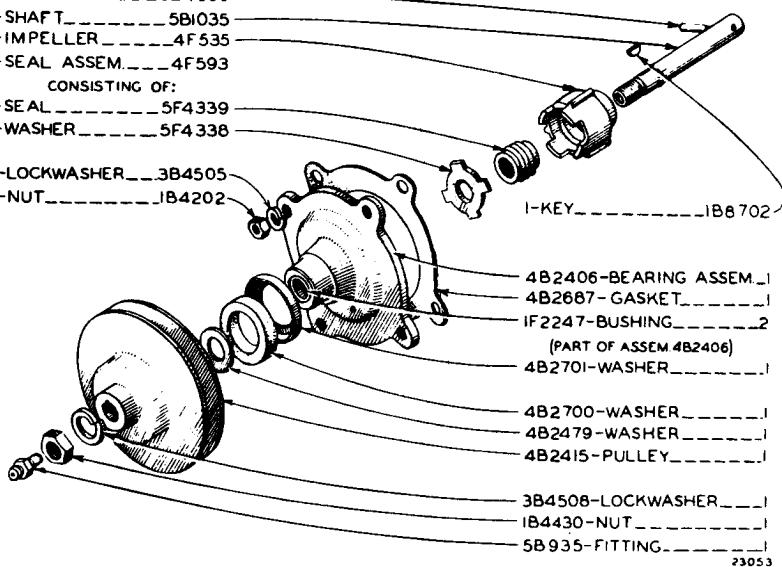


WATER PUMP
Effective with Serial No. 4R3435

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

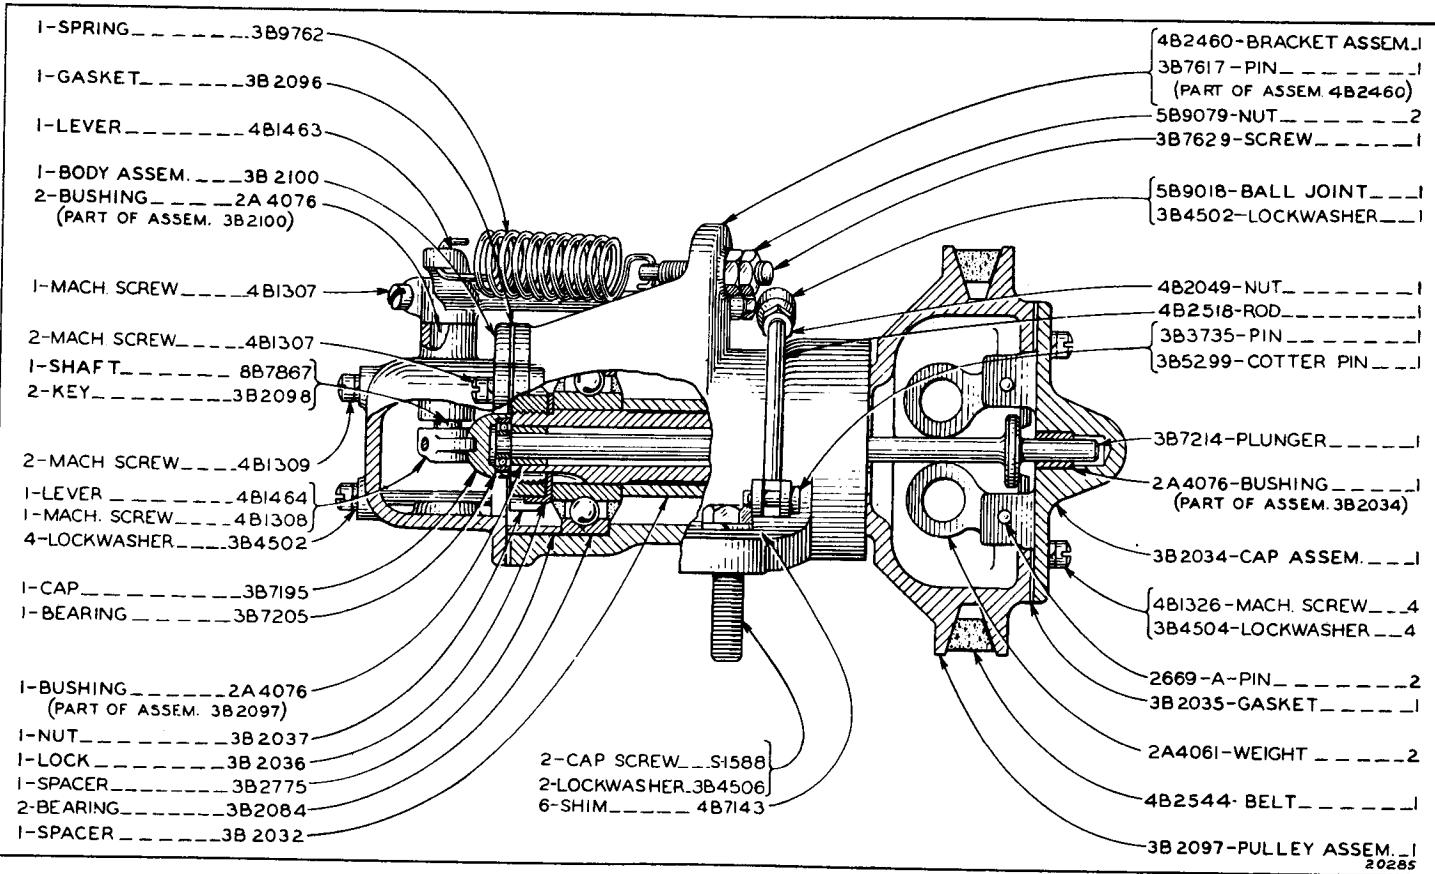


GOVERNOR

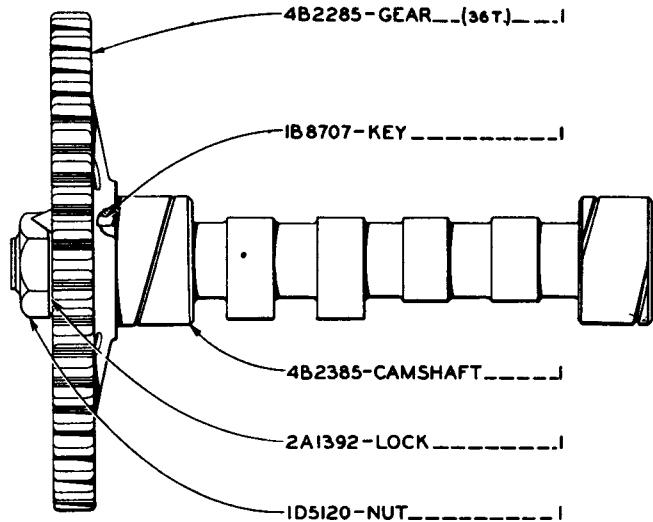

20134


CAMSHAFT

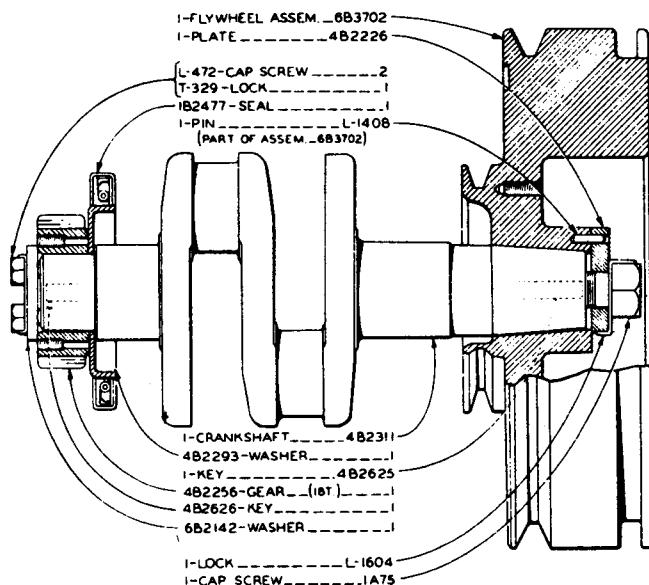


24022

CRANKSHAFT

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

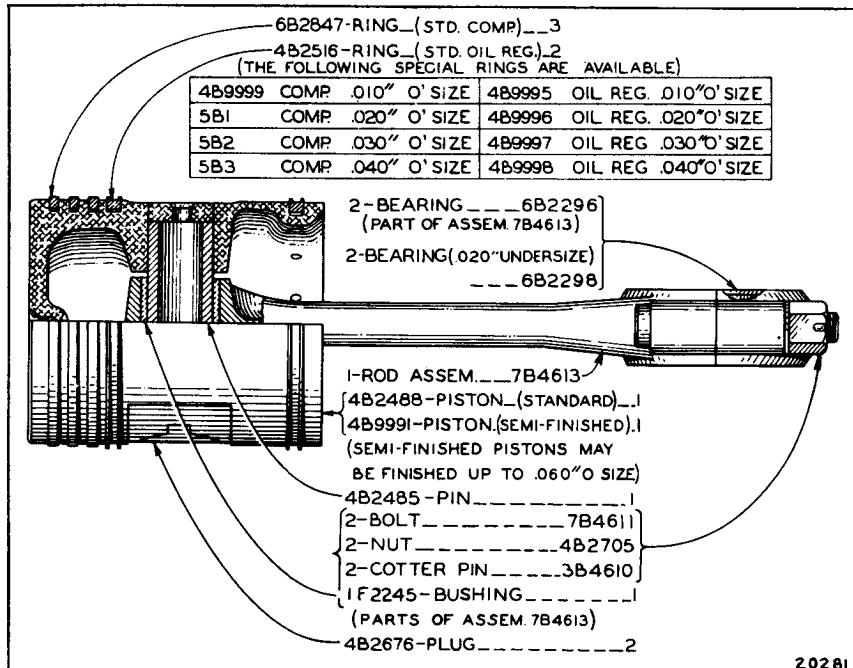


CONNECTING ROD AND PISTON (2 Groups Req'd.)
 Serial No. 4R1 to 4R1576 Inclusive

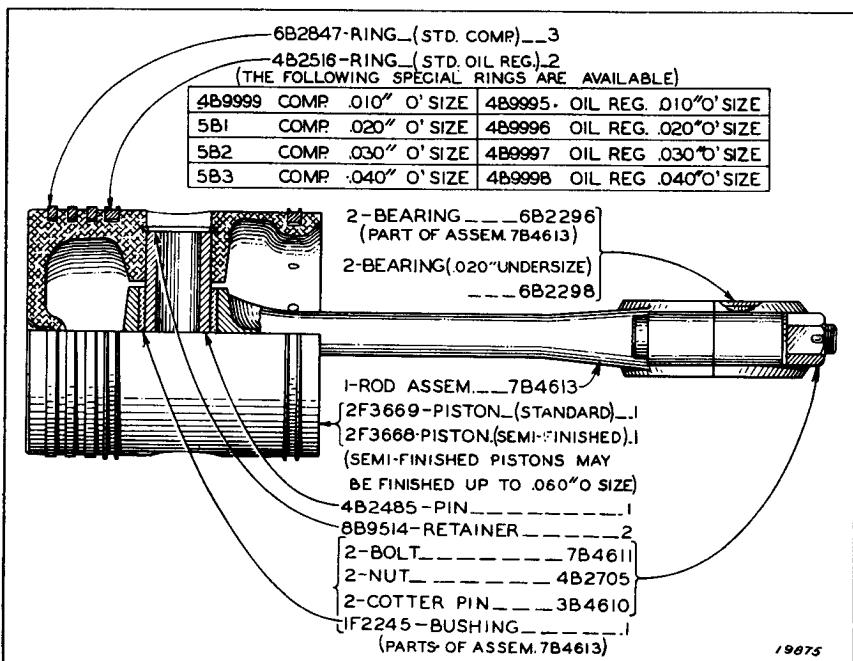

CONNECTING ROD AND PISTON (2 Groups Req'd.)
 Effective with Serial No. 4R1577


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

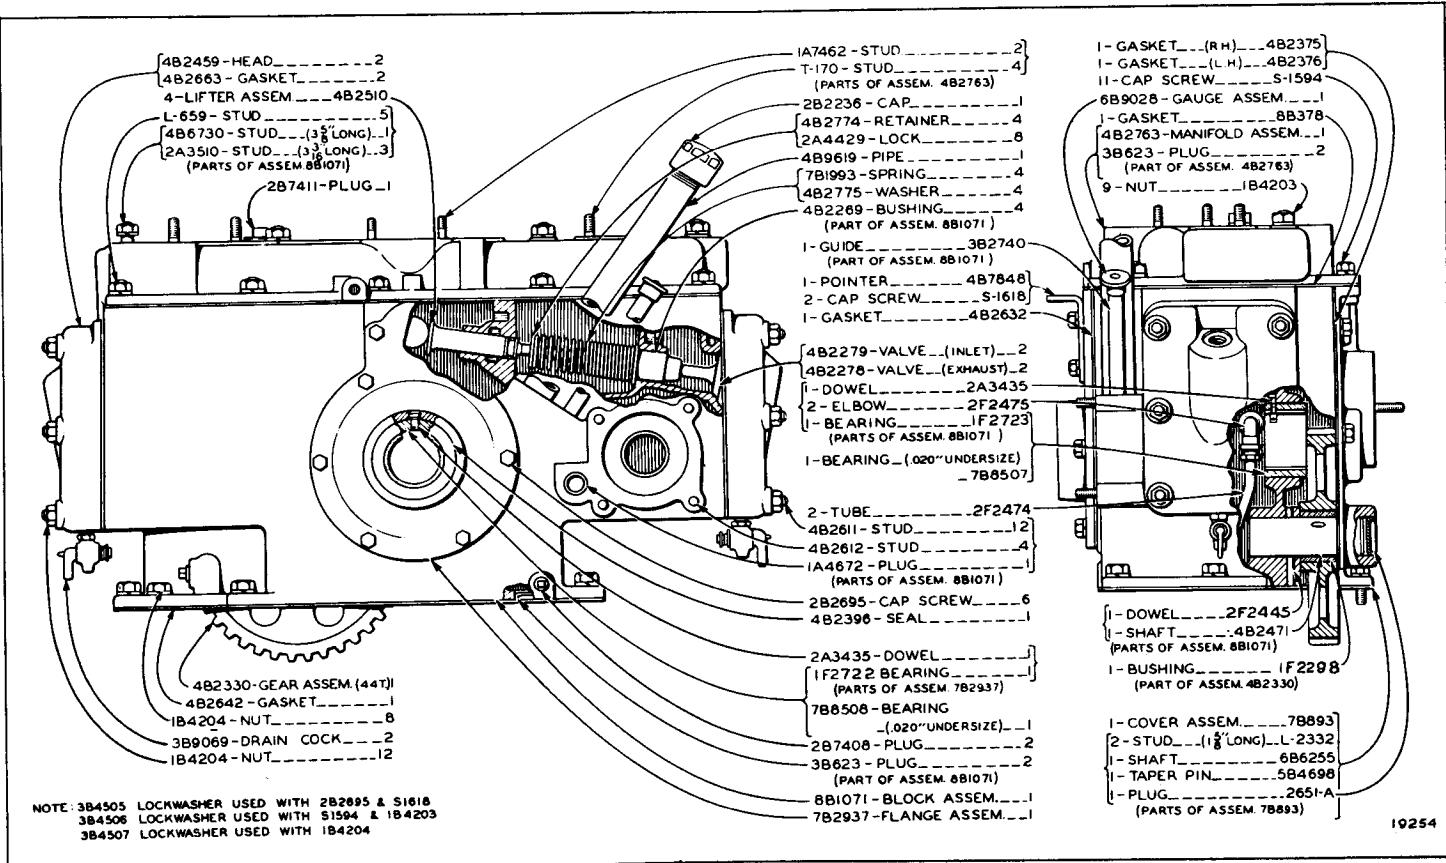

CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM
Serial No. 4R1 to 4R912 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

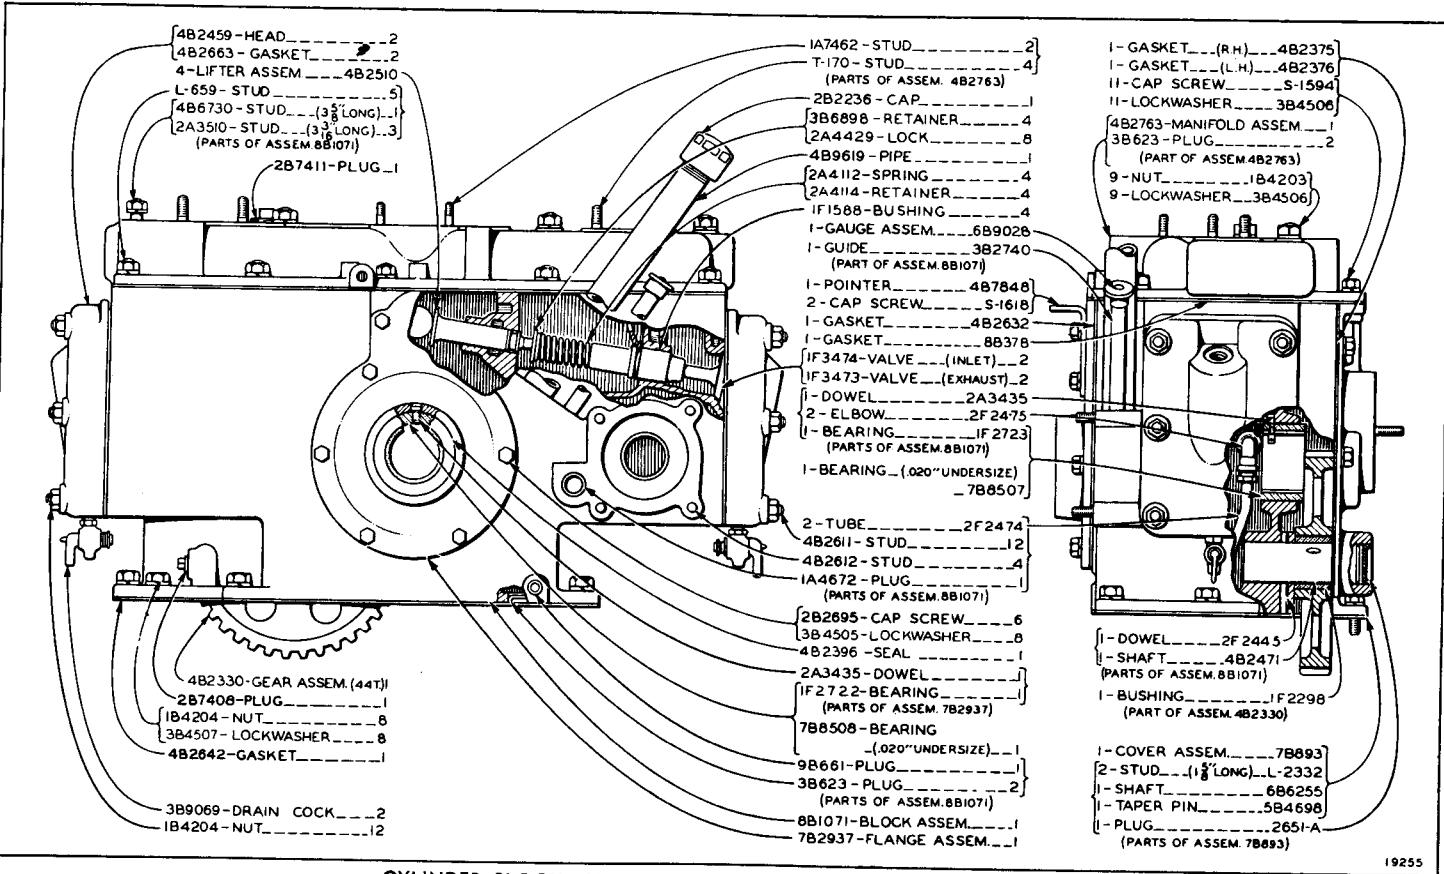

CYLINDER BLOCK, CYLINDER HEAD AND VALVE MECHANISM
Effective with Serial No. 4R913


19255

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

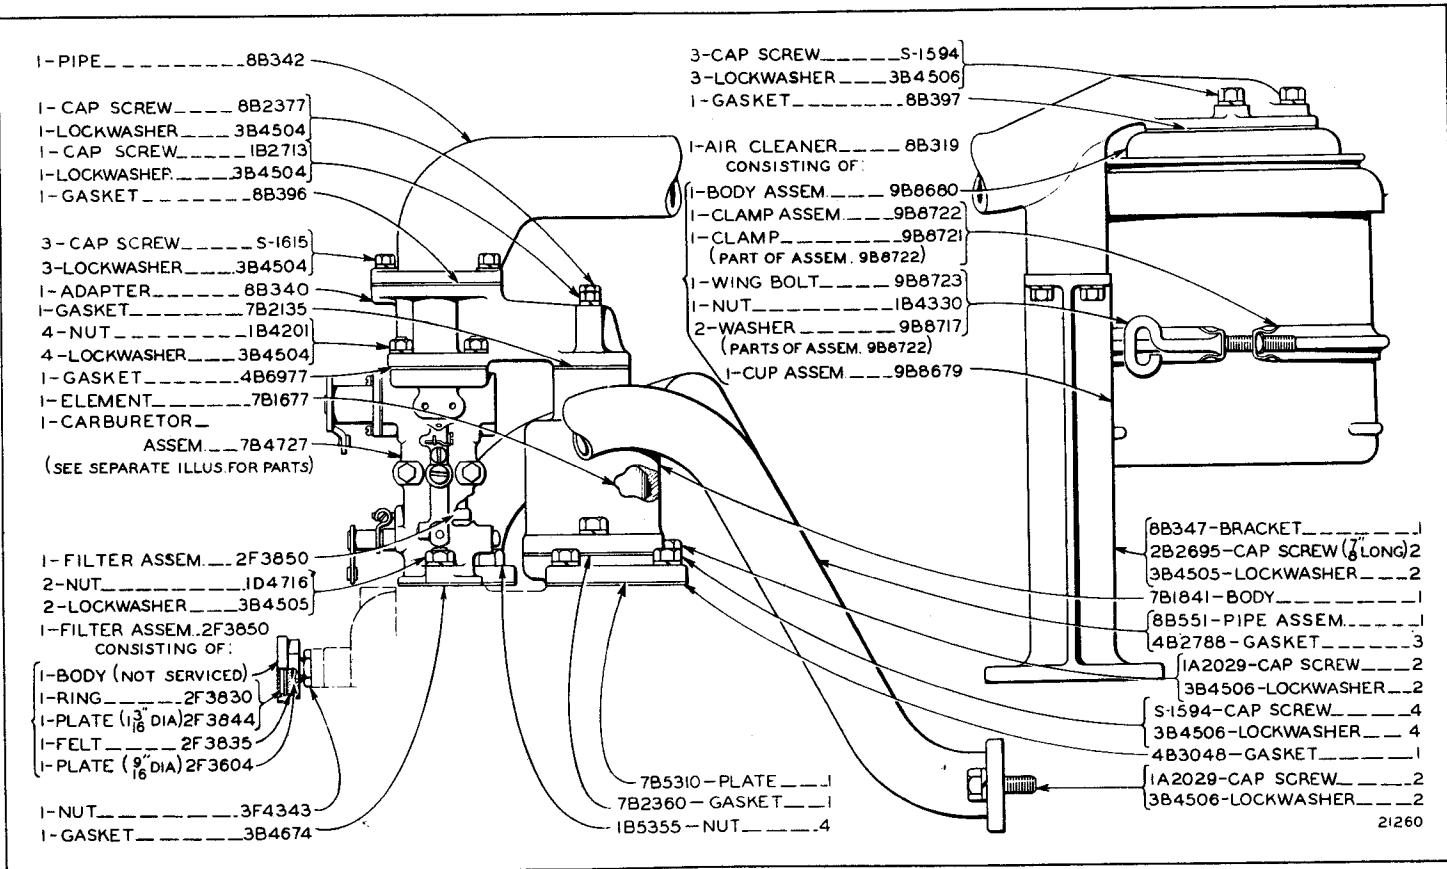


AIR CLEANER, BREATHER AND CARBURETOR

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

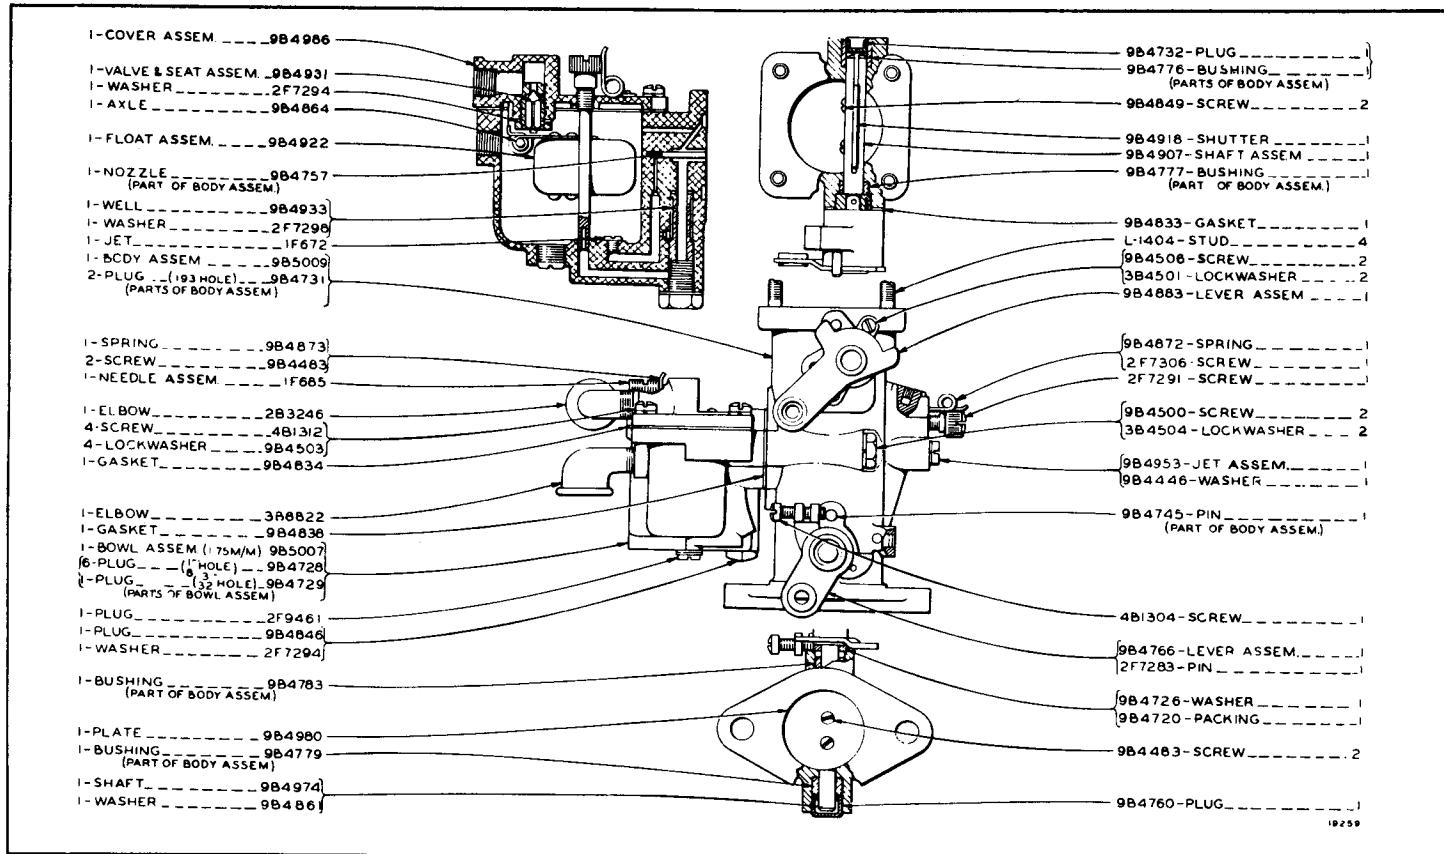


7B4727 CARBURETOR

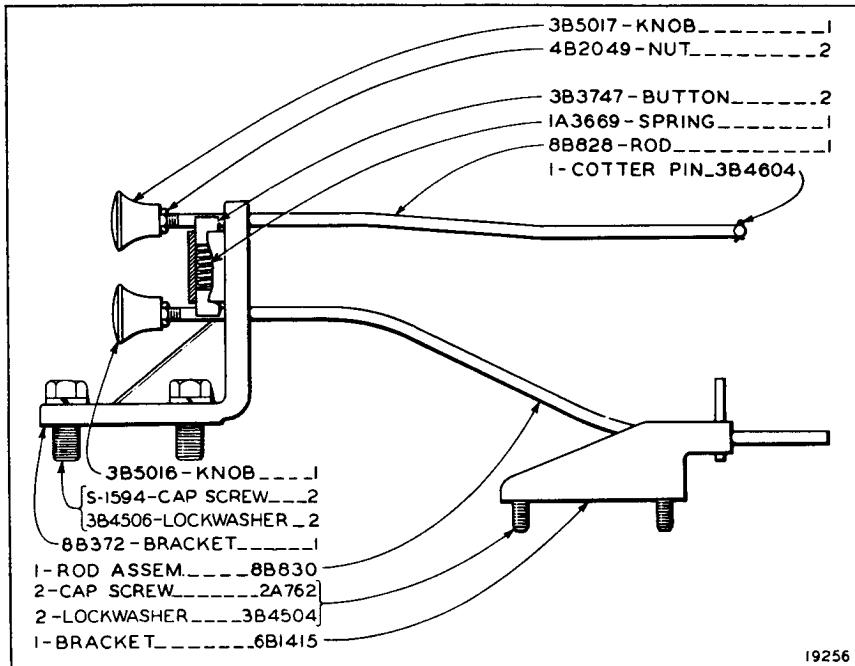

19256


CARBURETOR AND CHOKE CONTROL

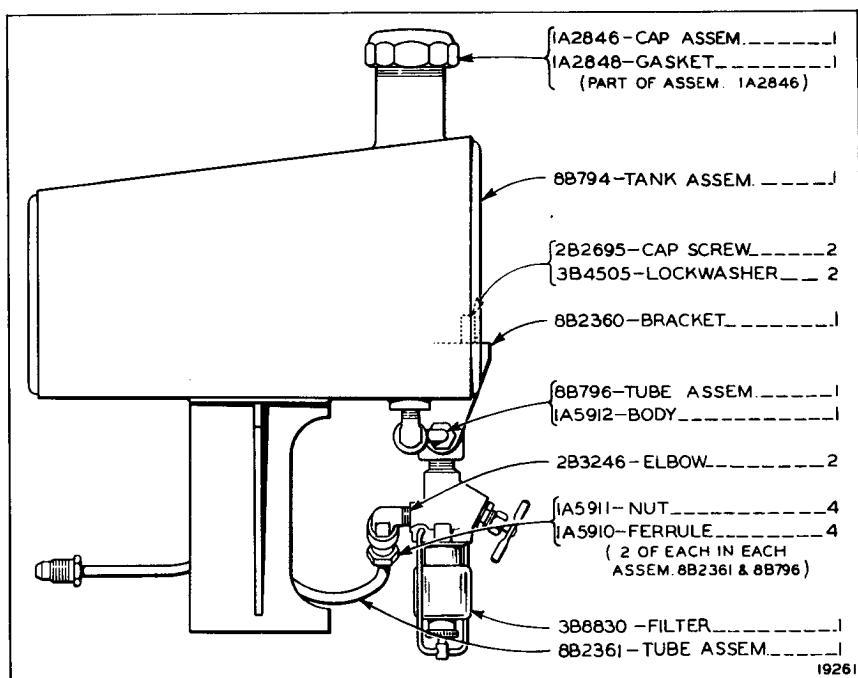

19261

FUEL SYSTEM

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

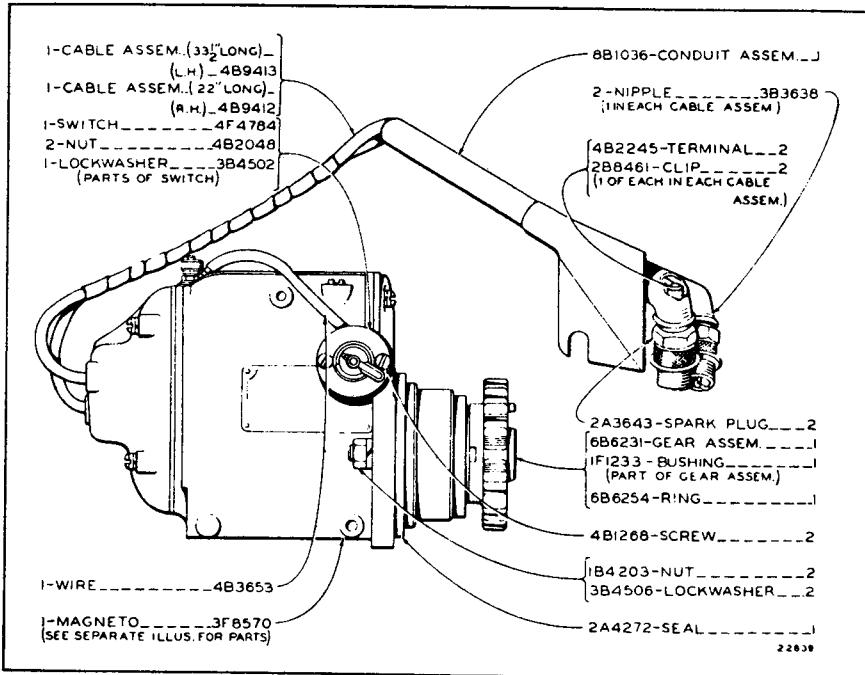


INSERT BETWEEN PAGE 54 & 55 IN FORM 8885—D6 TRACTOR (74" Gauge)

IGNITION SYSTEM

Effective with Serial No. 4R3281

3F8570 Magneto shown on reverse side of insert


See Notice of Improved Parts No. 124

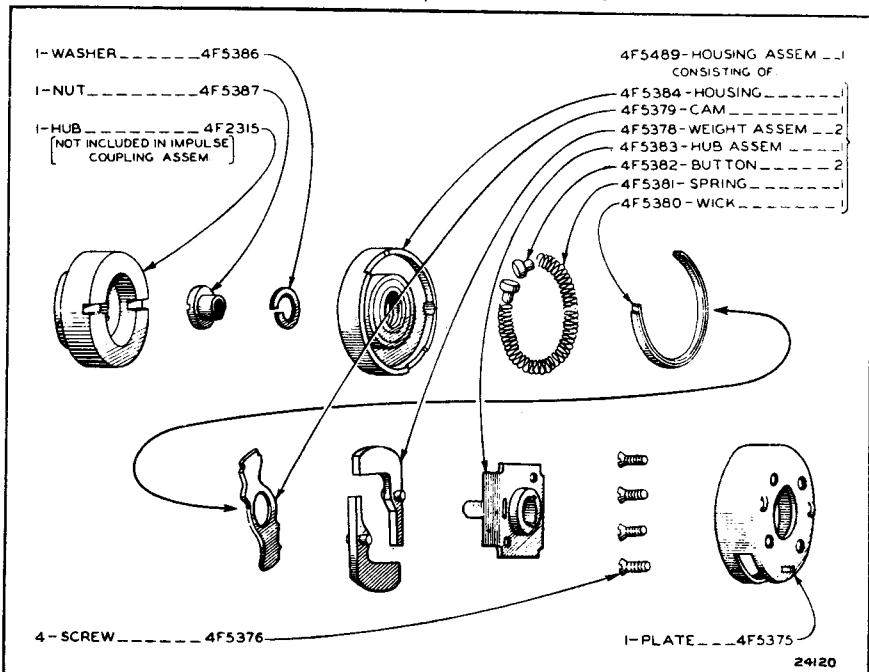

4F4218 IMPULSE COUPLING ASSEMBLY
Part of 3F8570 Magneto shown on insert


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

3F8570 MAGNETO

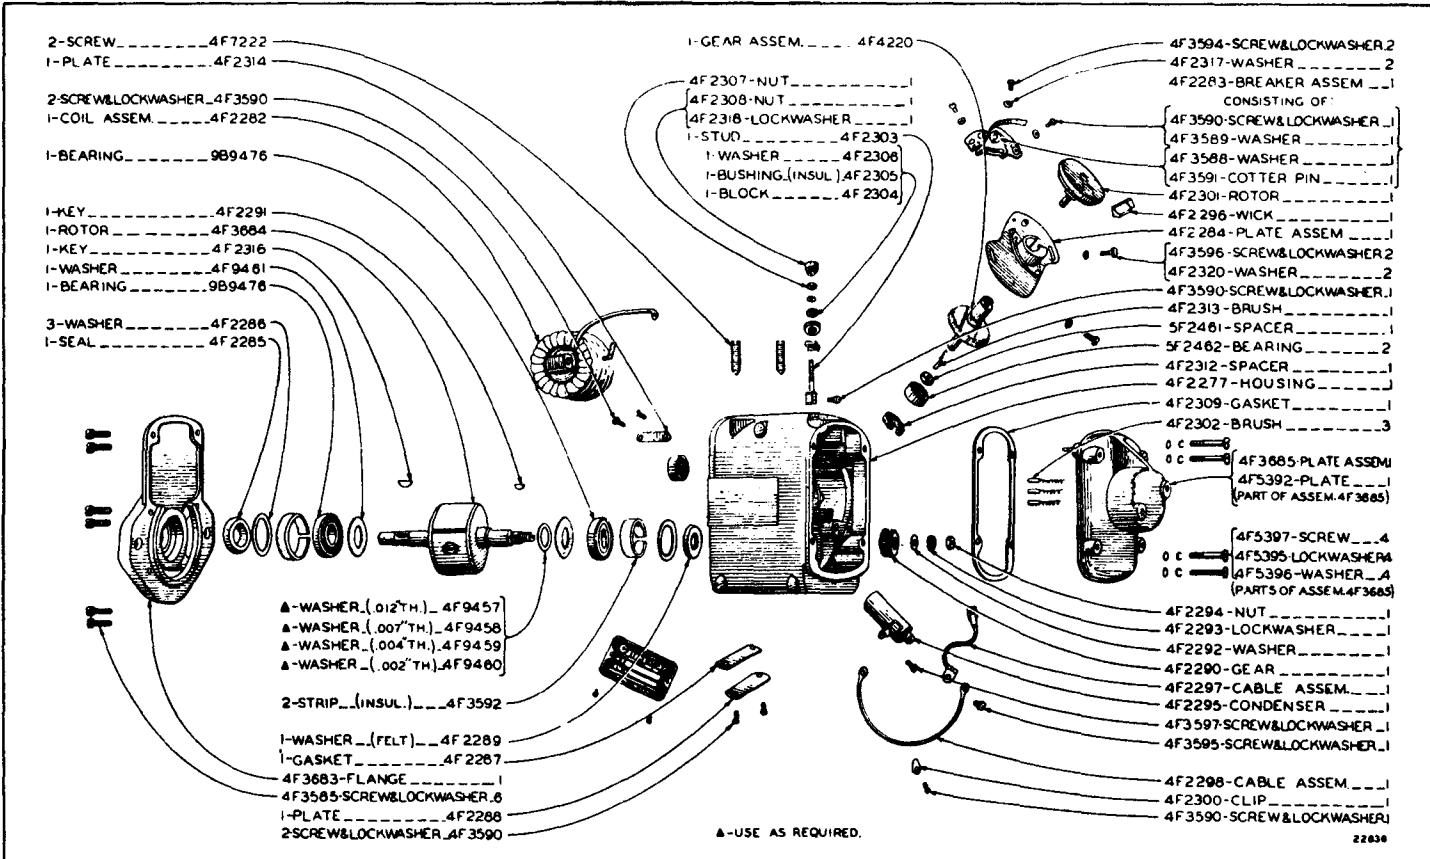

INSERT BETWEEN PAGES 54 & 55 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

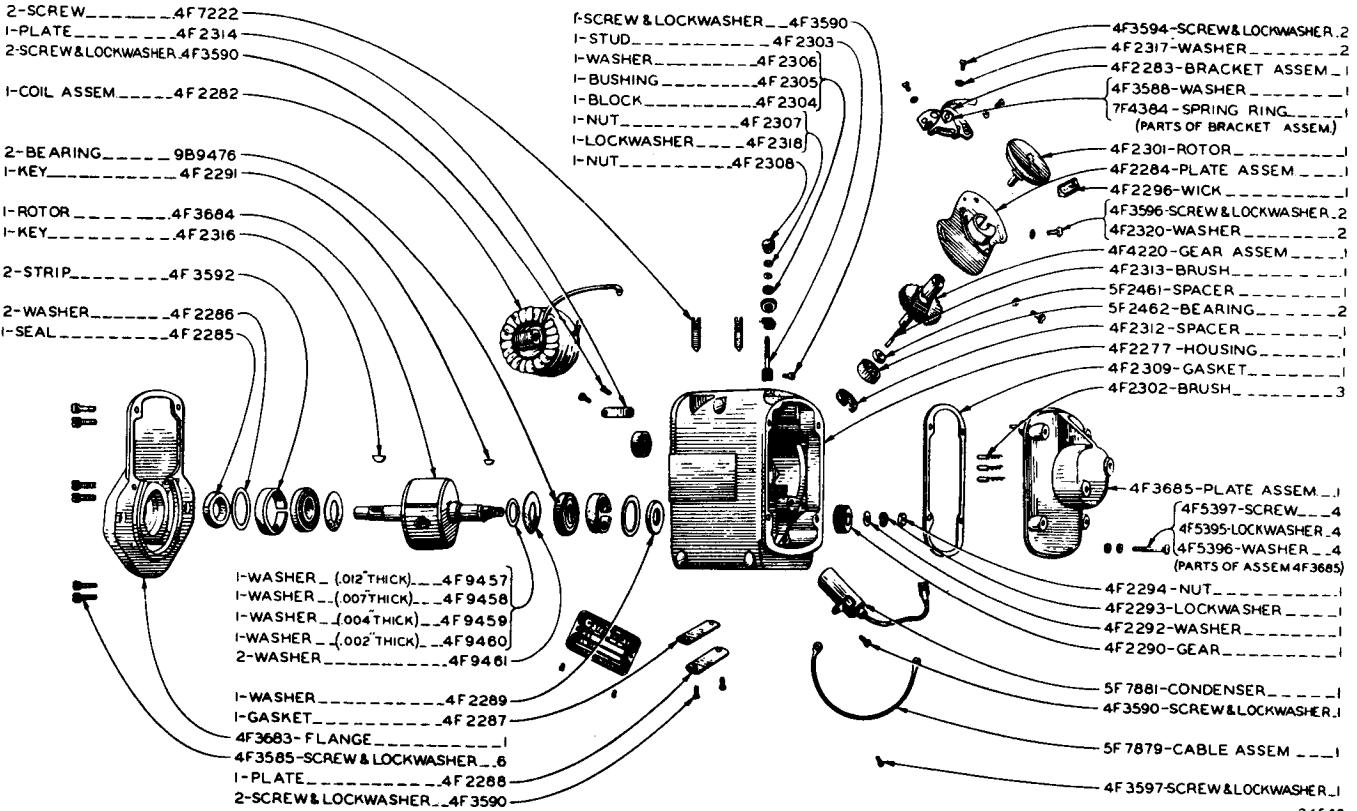

5F7490 MAGNETO (Replaces 3F8570)
4F4218 Impulse Coupling Assembly parts are shown on insert

24548


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

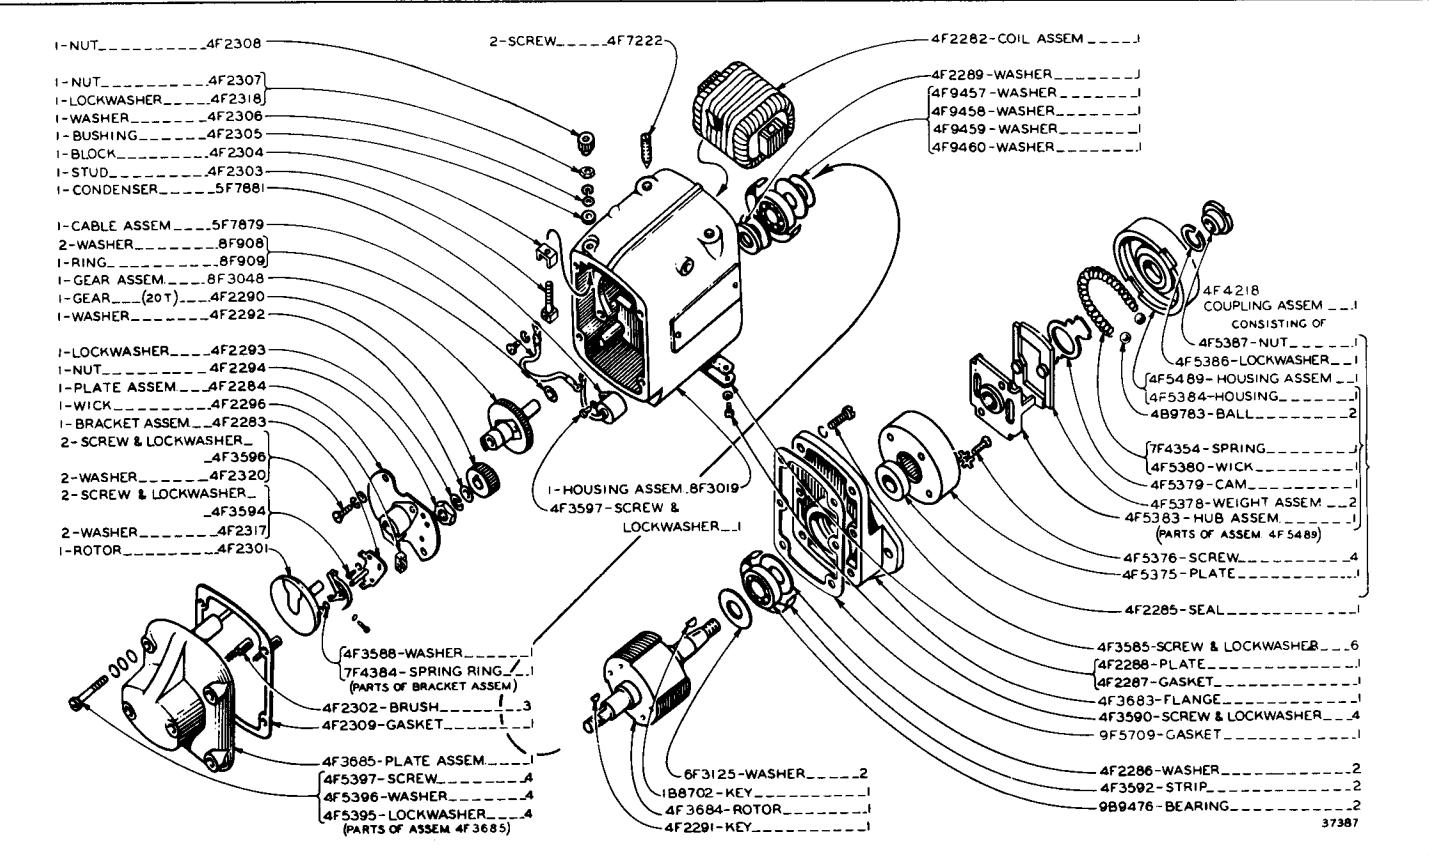


7F9930 MAGNETO (Replaces 5F7490)

2
2
2

37387

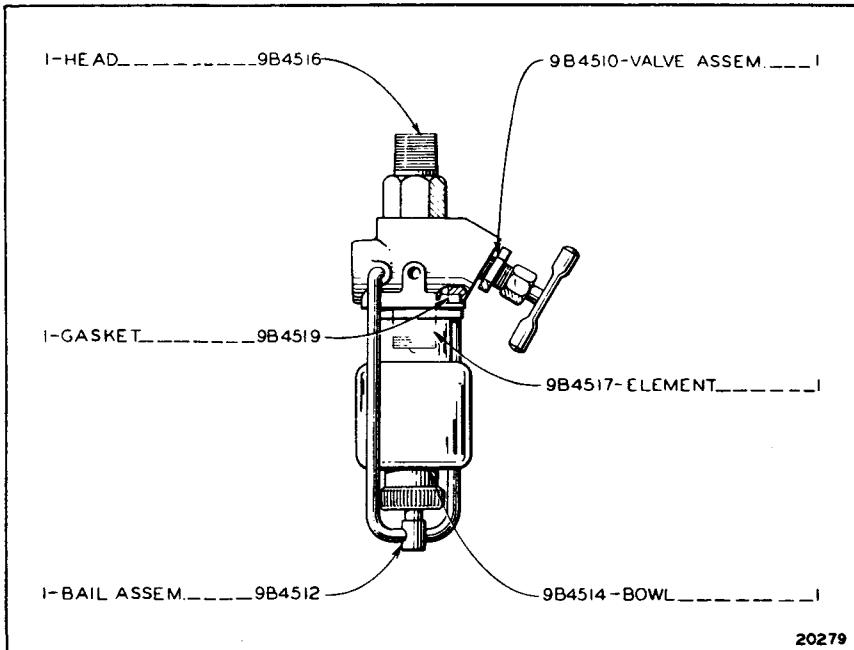


3B8830 FUEL FILTER

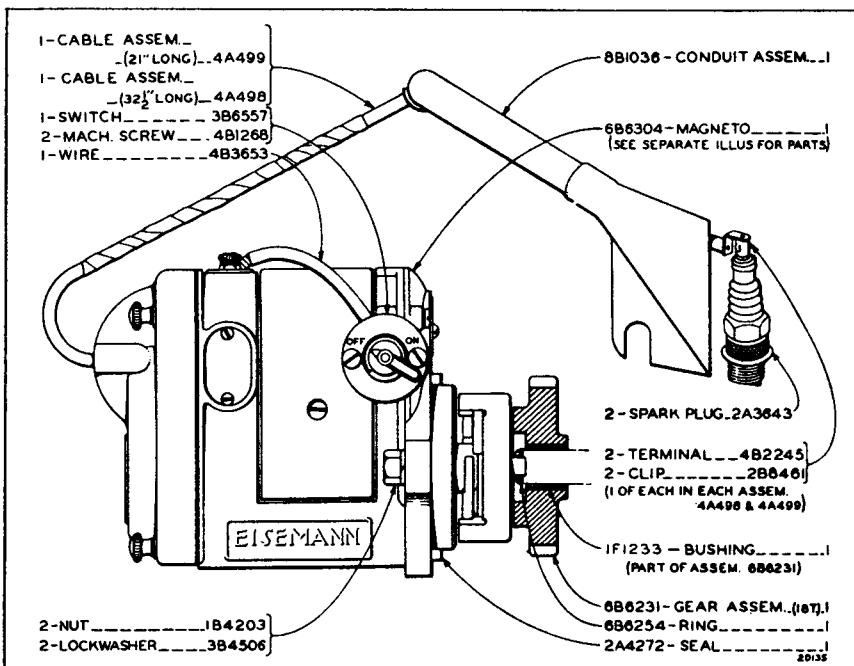

IGNITION SYSTEM

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

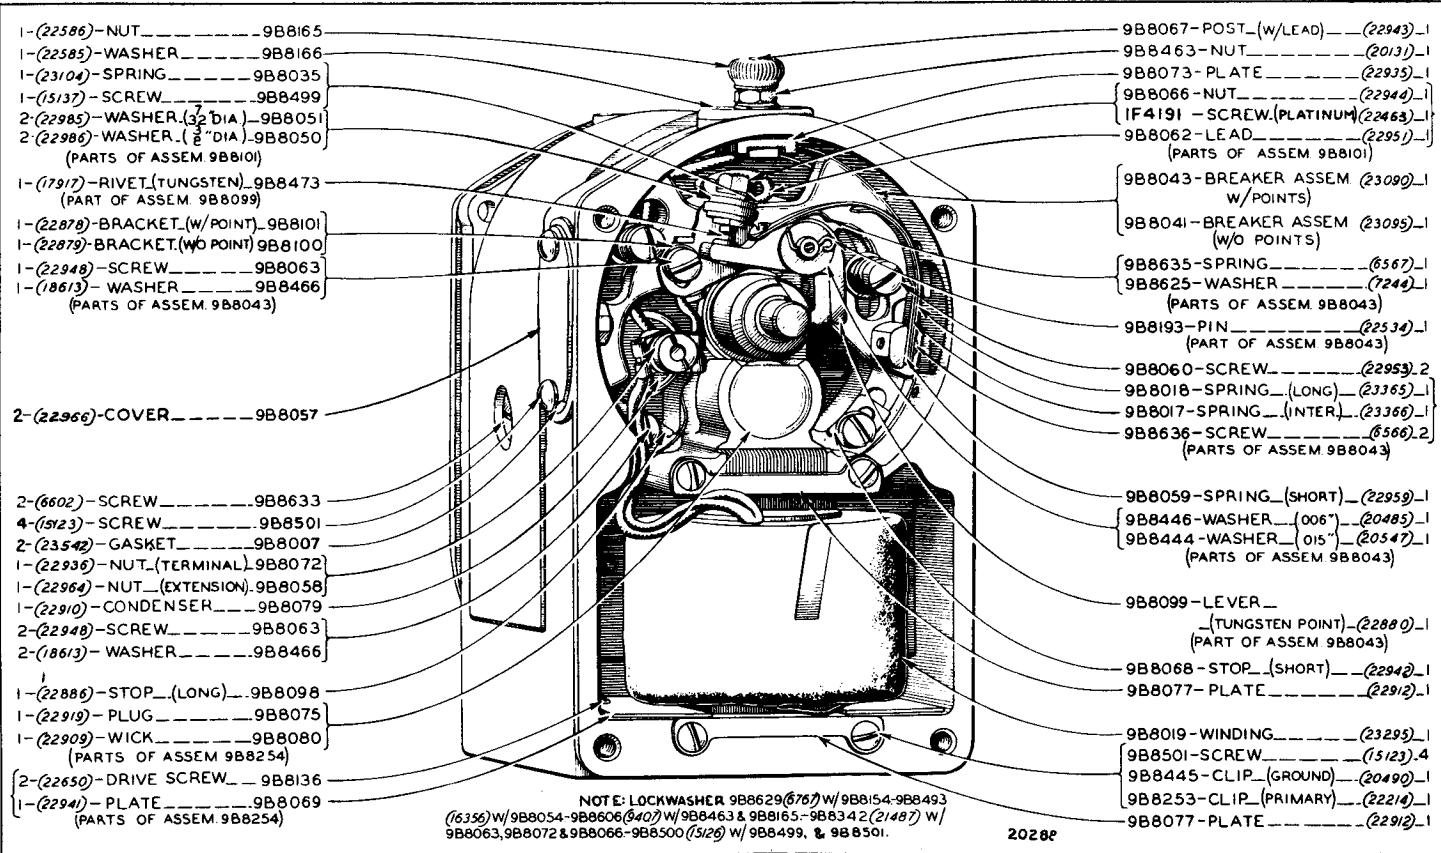


2028e

6B6304 MAGNETO (Model RC-2H)

PRINTED
IN U.S.A.


4S6469 MAGNETO ASSEMBLY—Field Installation

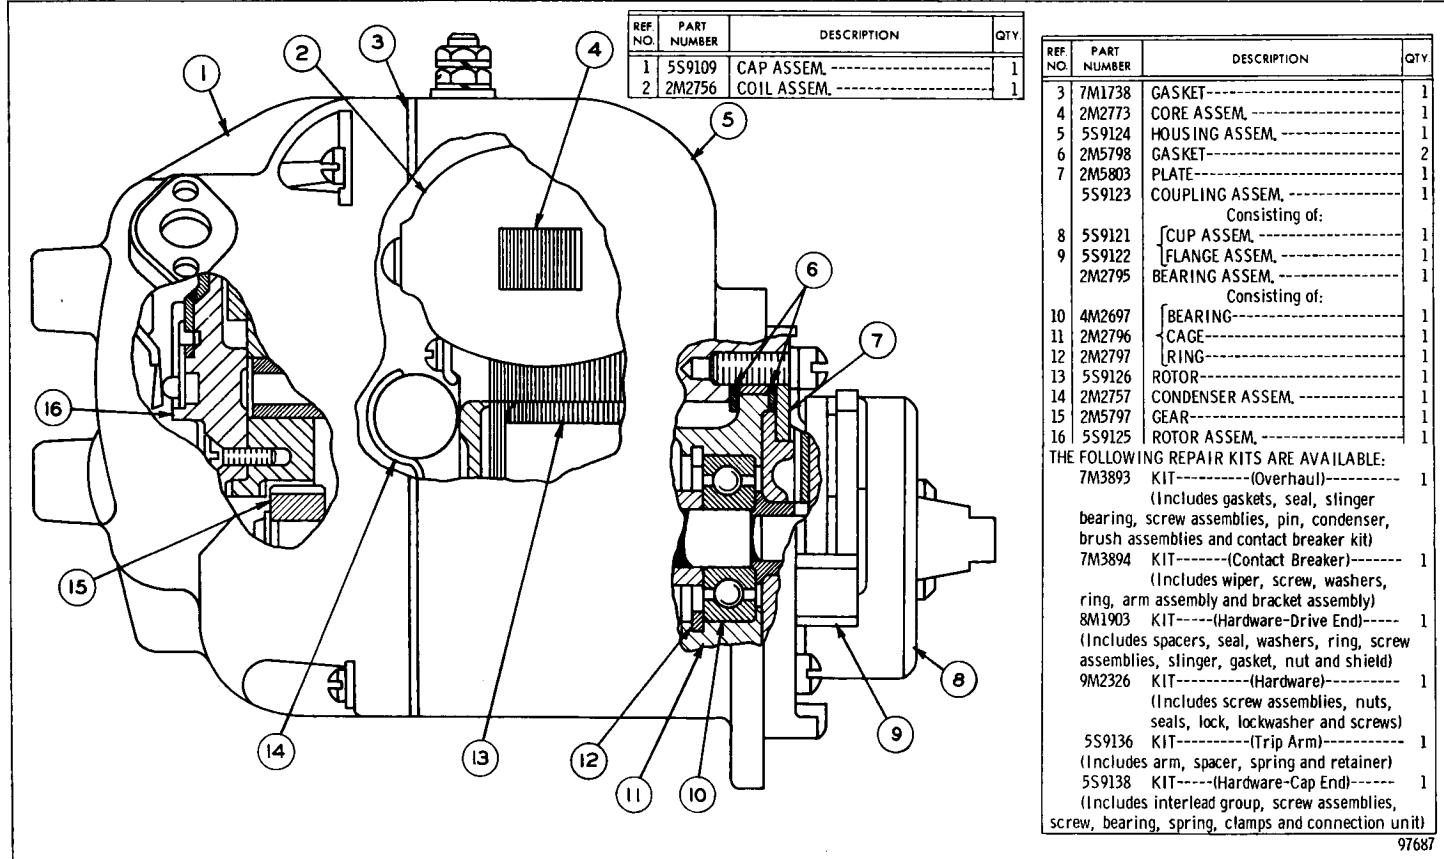


STARTING ENGINE

57

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

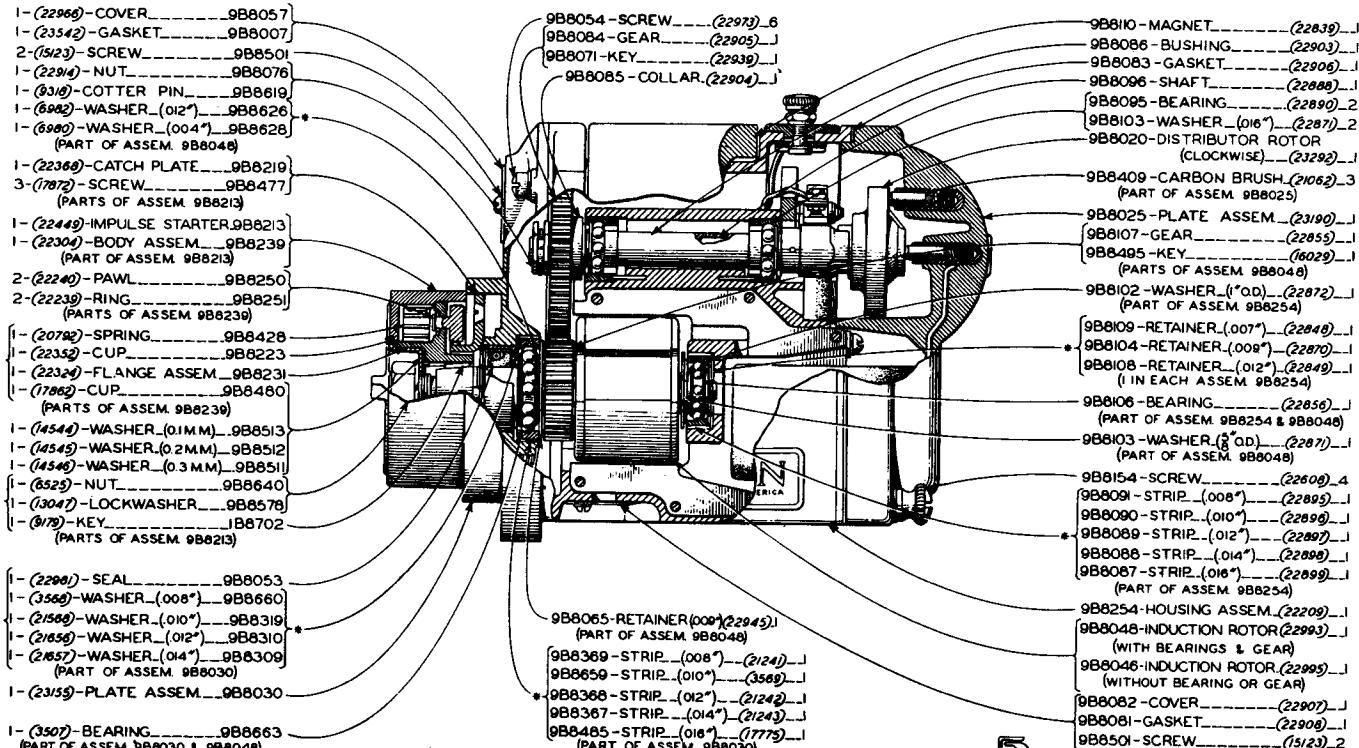


686304 MAGNETO (Model RC-2H)

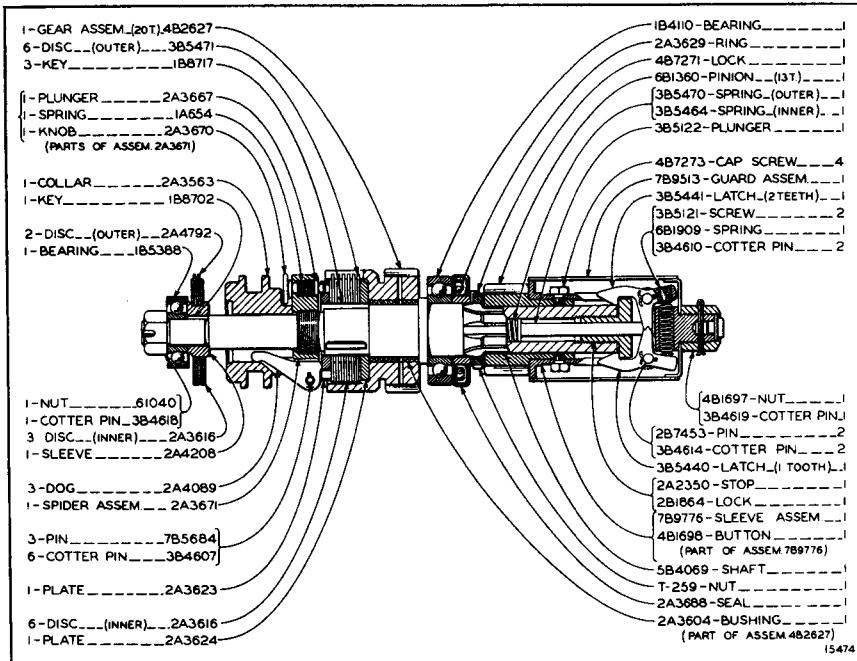

CLUTCH AND STARTER PINION


Serial No. 4R1 to 4R548 Inclusive

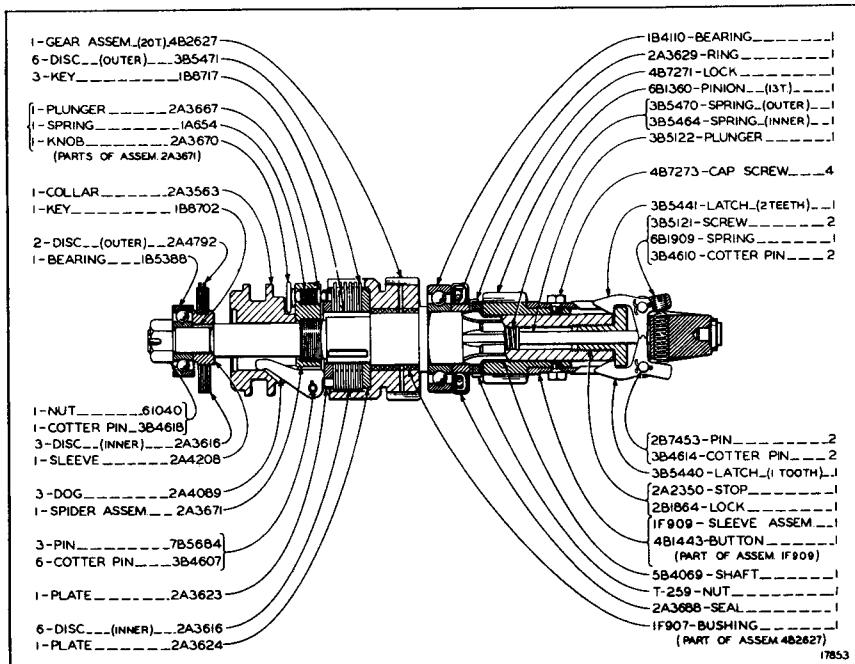


CLUTCH AND STARTER PINION

Effective with Serial No. 4R549

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

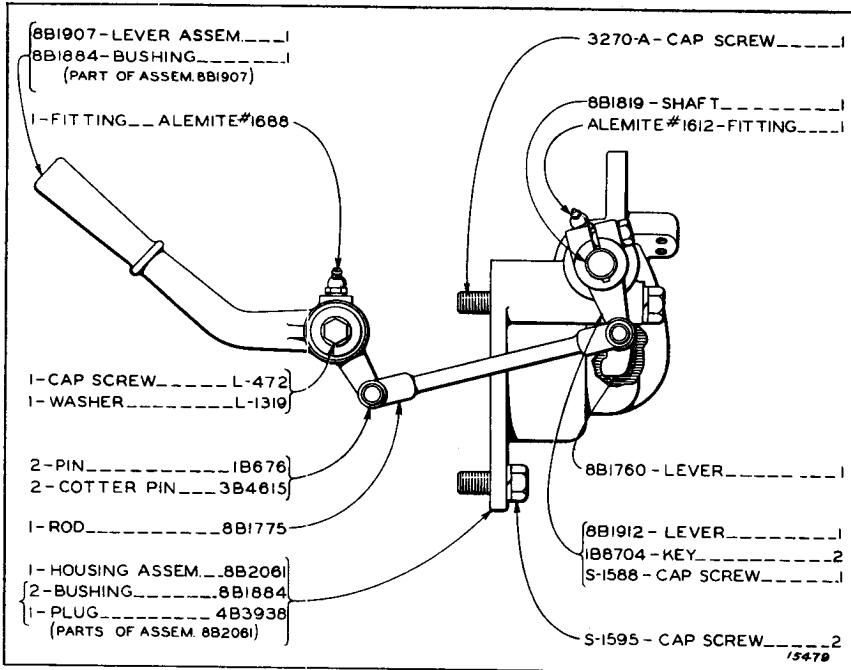


STARTER PINION CONTROL
Serial No. 4R1 to 4R548 Inclusive

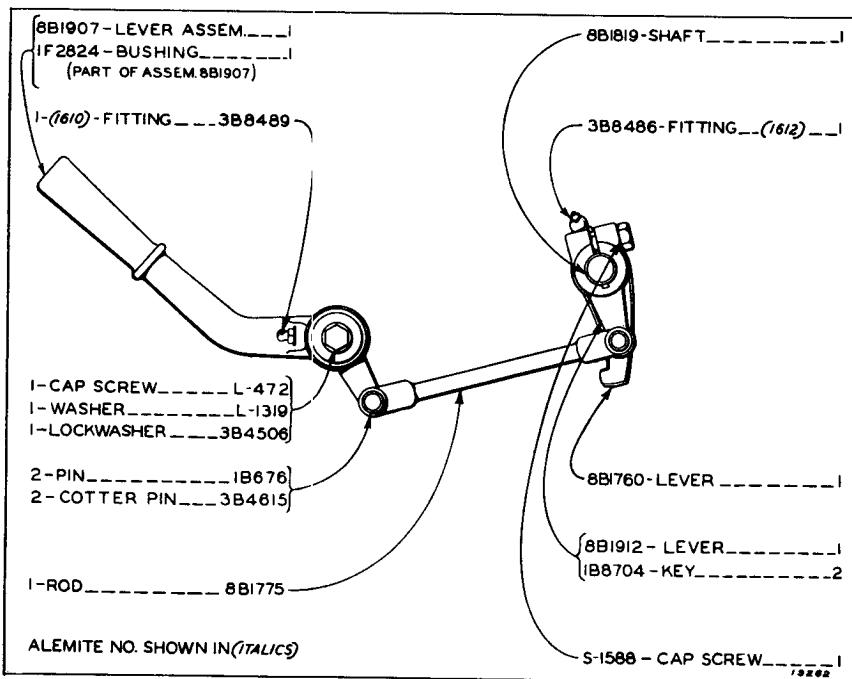

STARTER PINION CONTROL
Effective with Serial No. 4R549

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

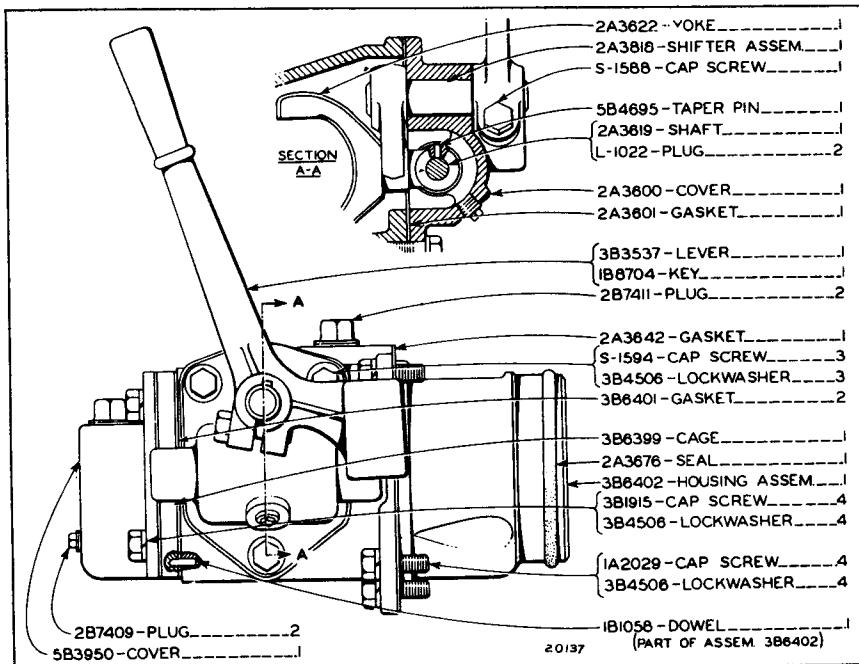


CLUTCH HOUSING


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

Clutch, Transmission and Chassis



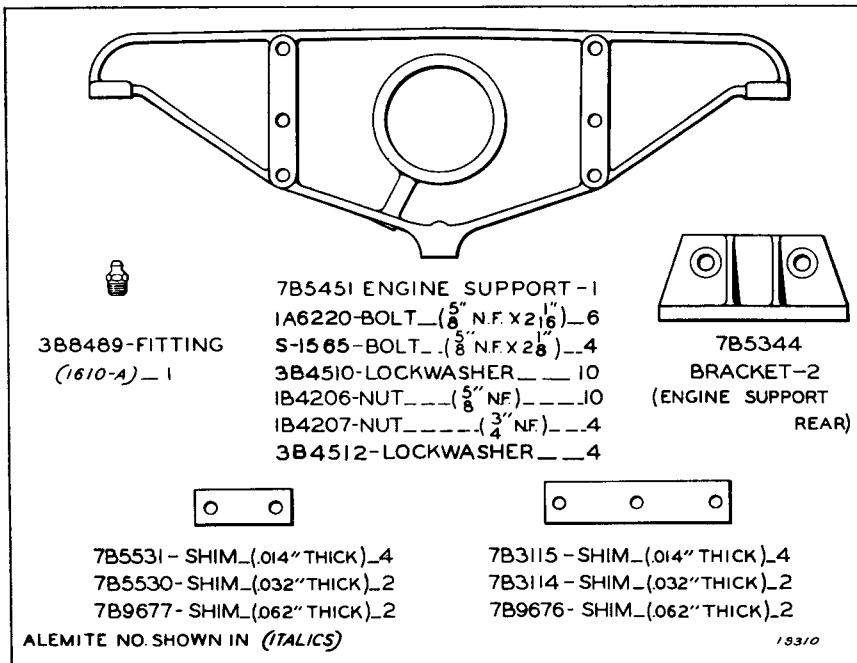

ENGINE SUPPORT

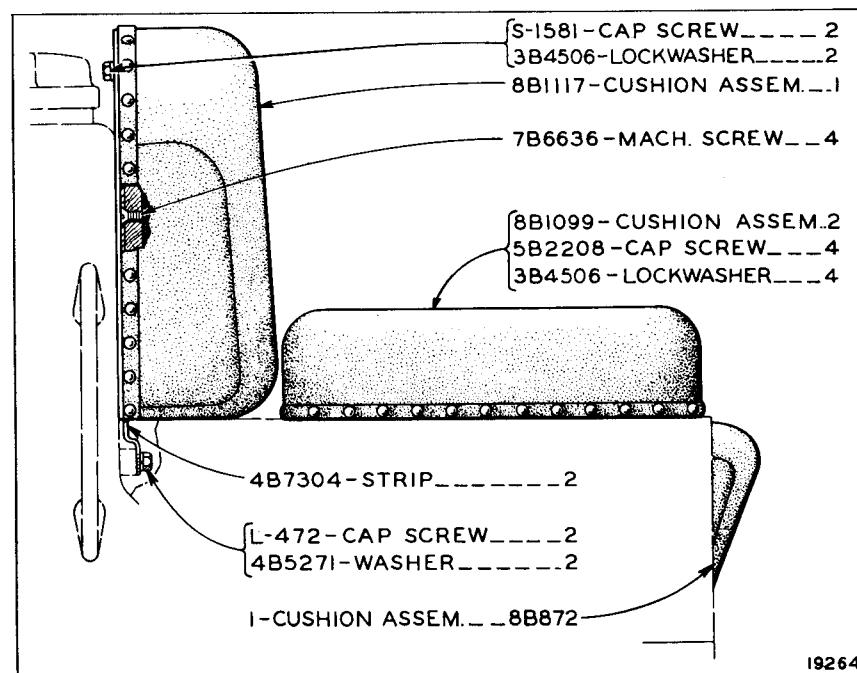


SEAT CUSHIONS

Refer also to Page 134 for special parts


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

INSERT BETWEEN PAGE 62 & 63 IN FORM 8885
—D6 TRACTOR (74 Inch Gauge)

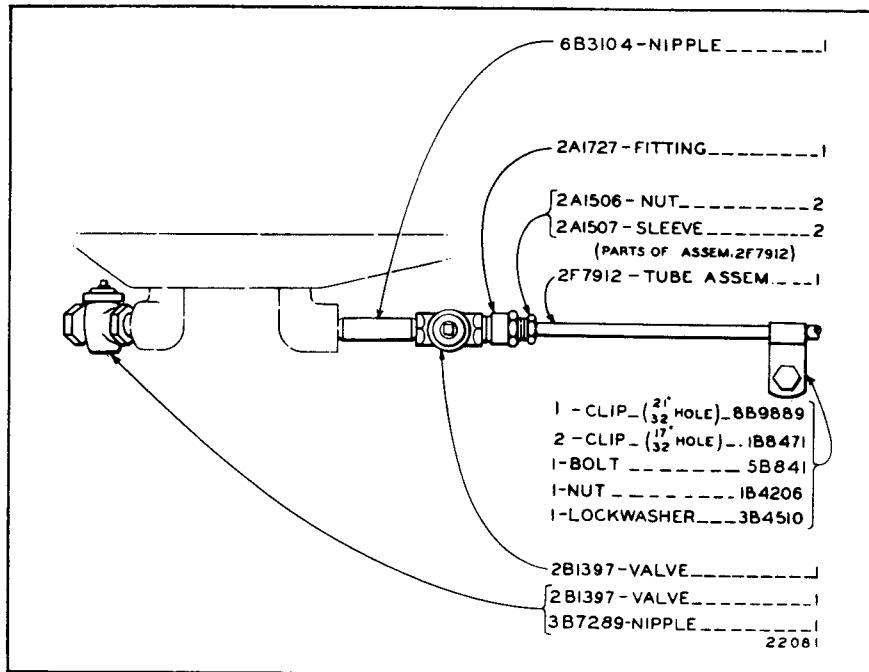


FUEL LINES
Effective with Serial No. 4R2409


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

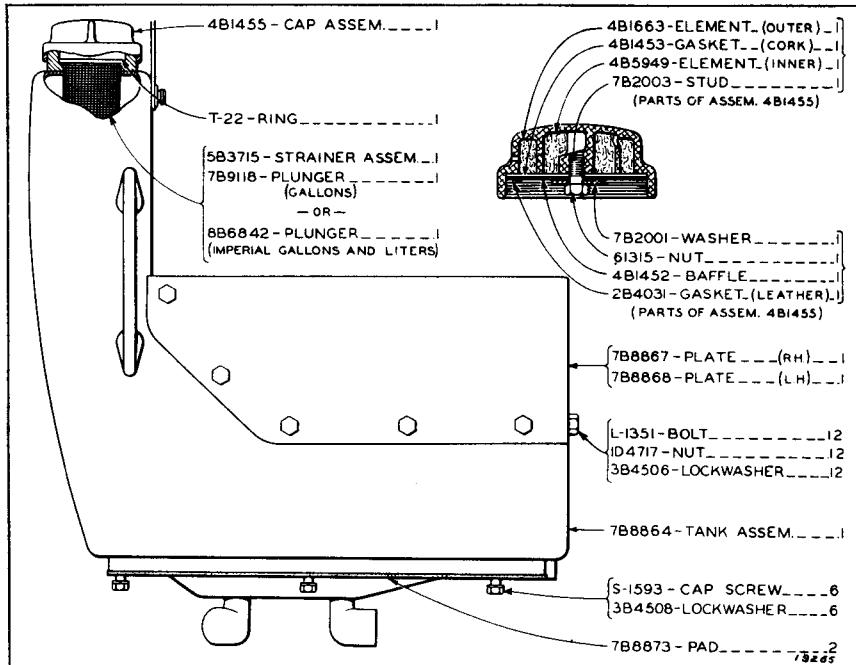


FUEL TANK AND SEAT FRAME

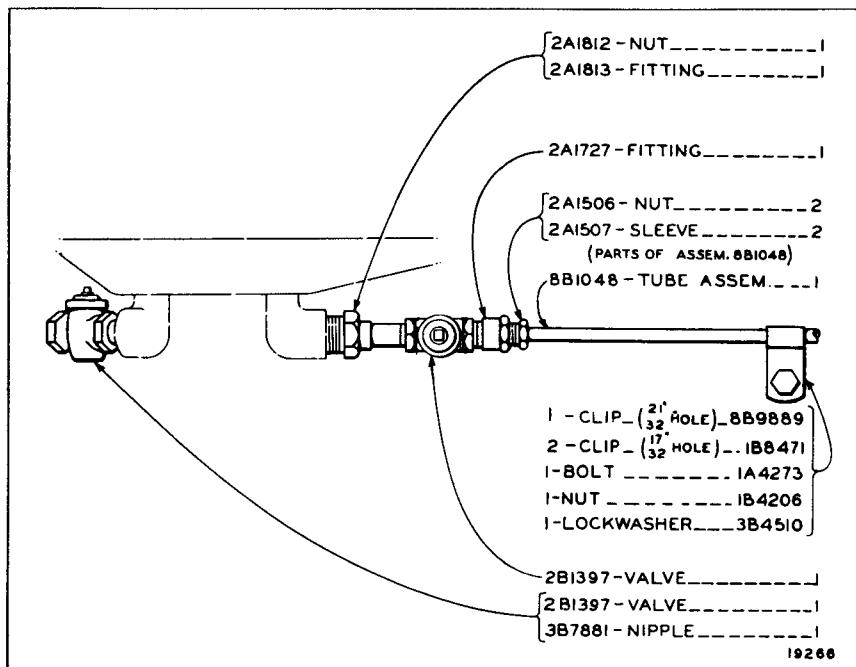FUEL LINES
Serial No. 4R1 to 4R2408 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

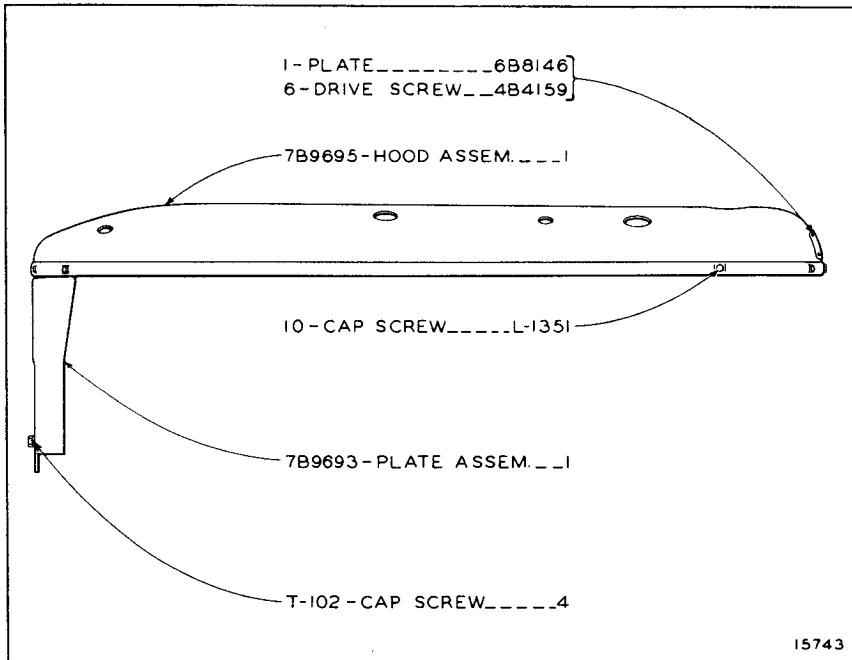**HOOD AND DASH**


Serial No. 4R1 to 4R281 Inclusive
Refer also to Pages 126 or 127 for special parts

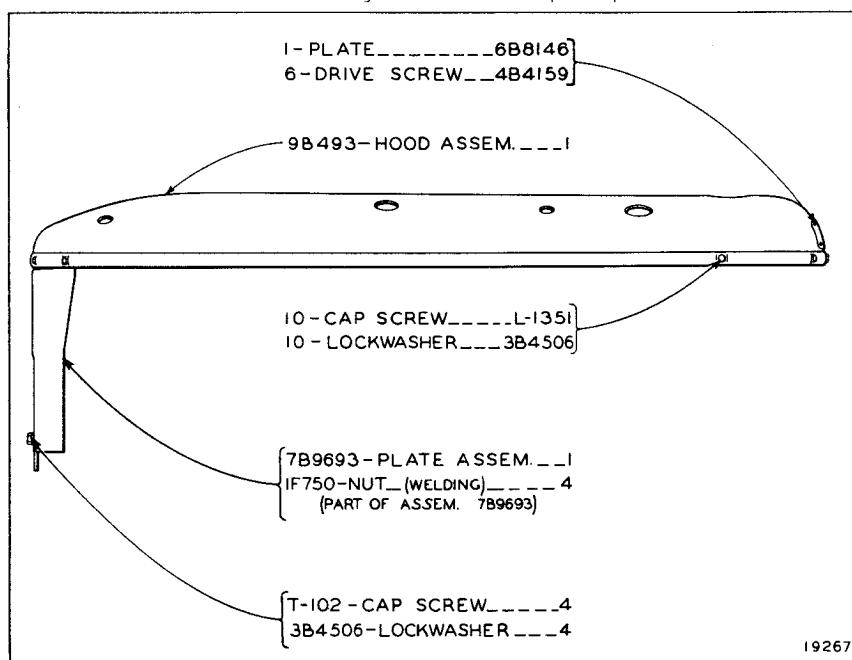**HOOD AND DASH**

Serial No. 4R282 to 4R3021 inclusive
Refer also to Pages 126, 127 and 158 for special parts


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

INSERT BETWEEN PAGES 64 & 65 IN FORM 8885
—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

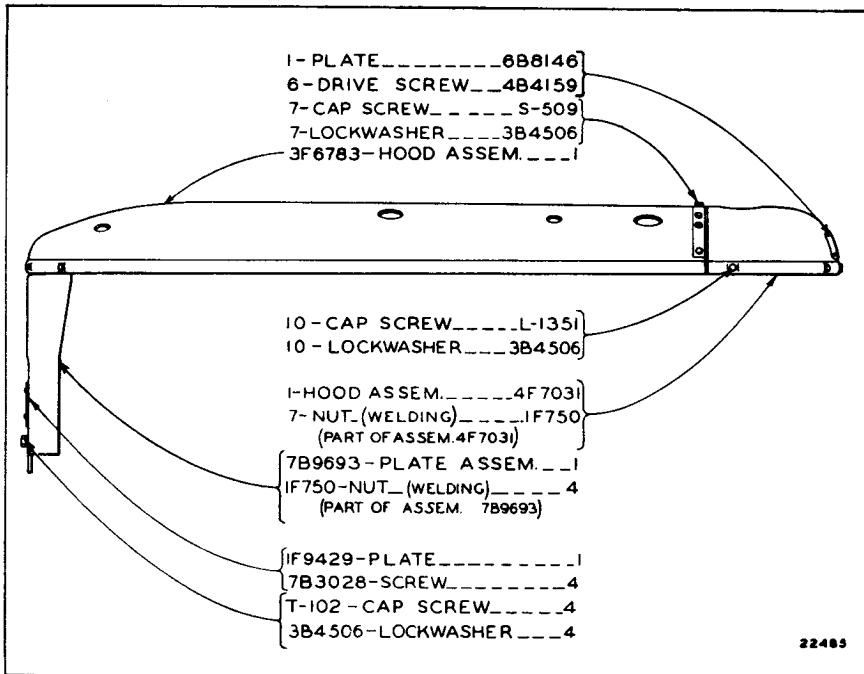


HOOD AND DASH
Effective with Serial No. 4R3022
See Notice of Improved Parts No. 115

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

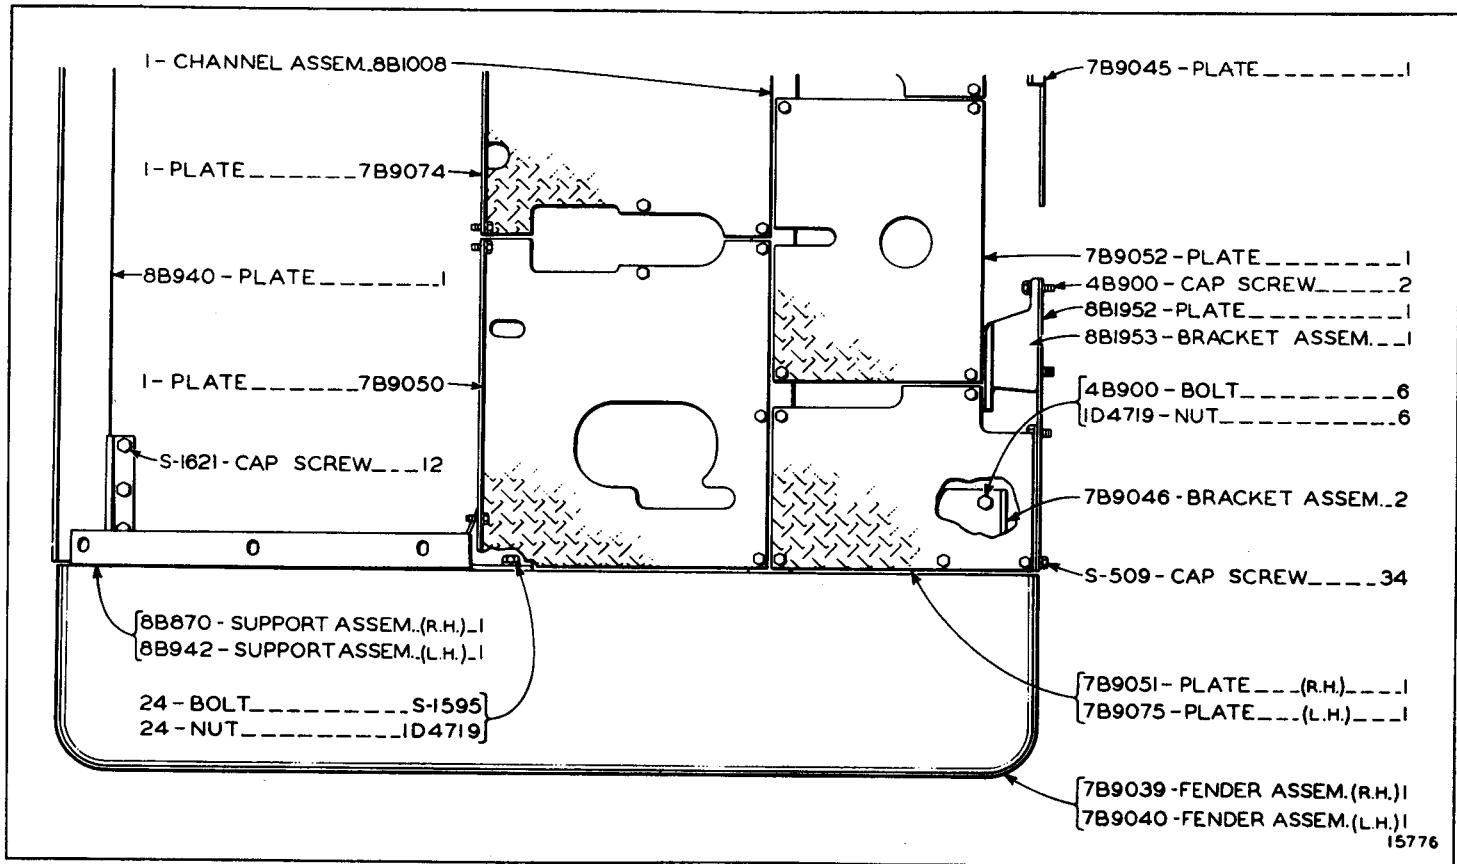


FENDERS AND PLATFORM
Serial No. 4R1 to 4R396 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

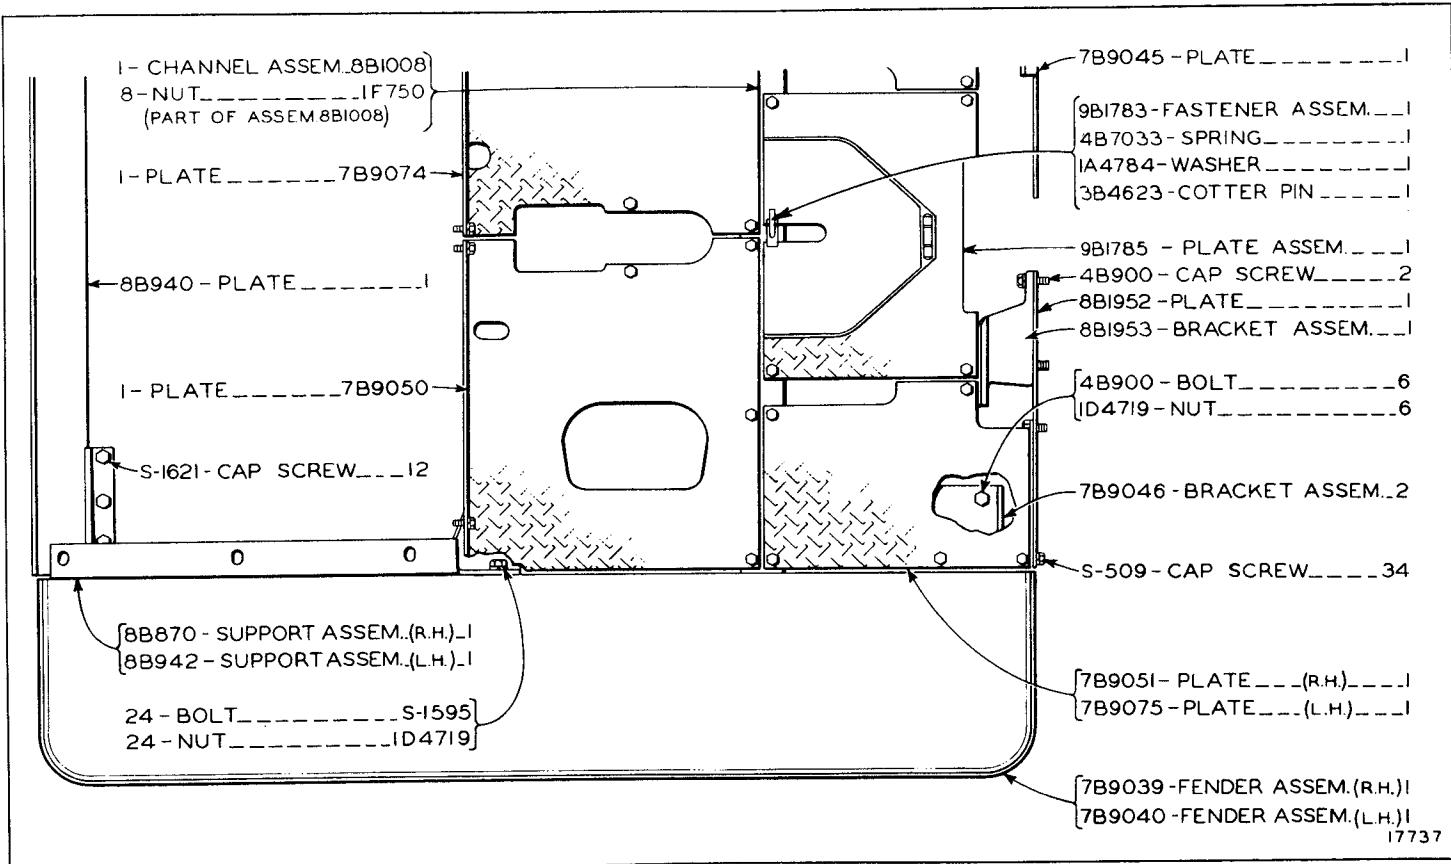


FENDERS AND PLATFORM
Serial No. 4R397 to 4R548 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

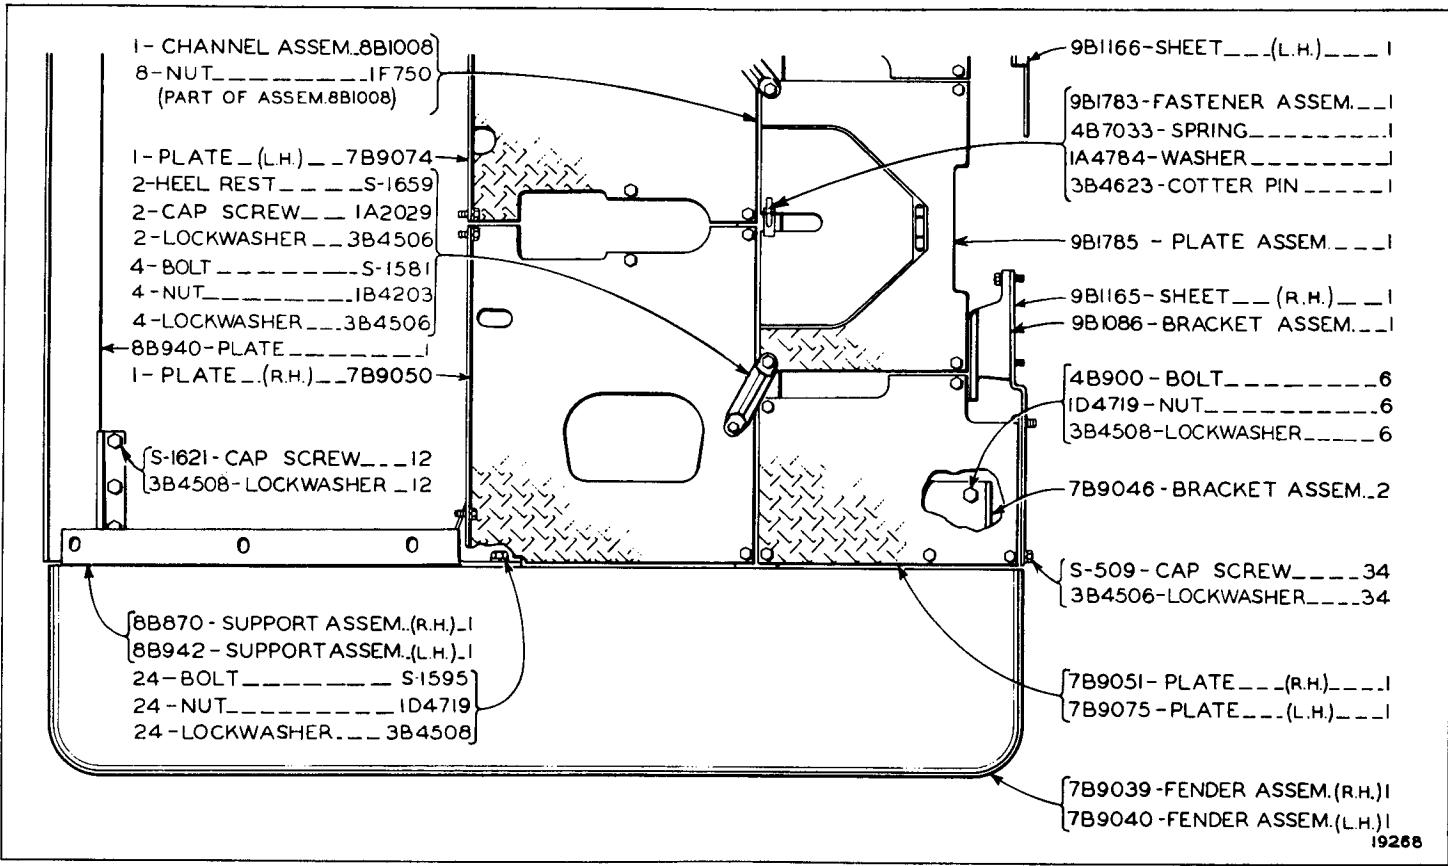


FENDERS AND PLATFORM
Effective with Serial No. 4R549


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

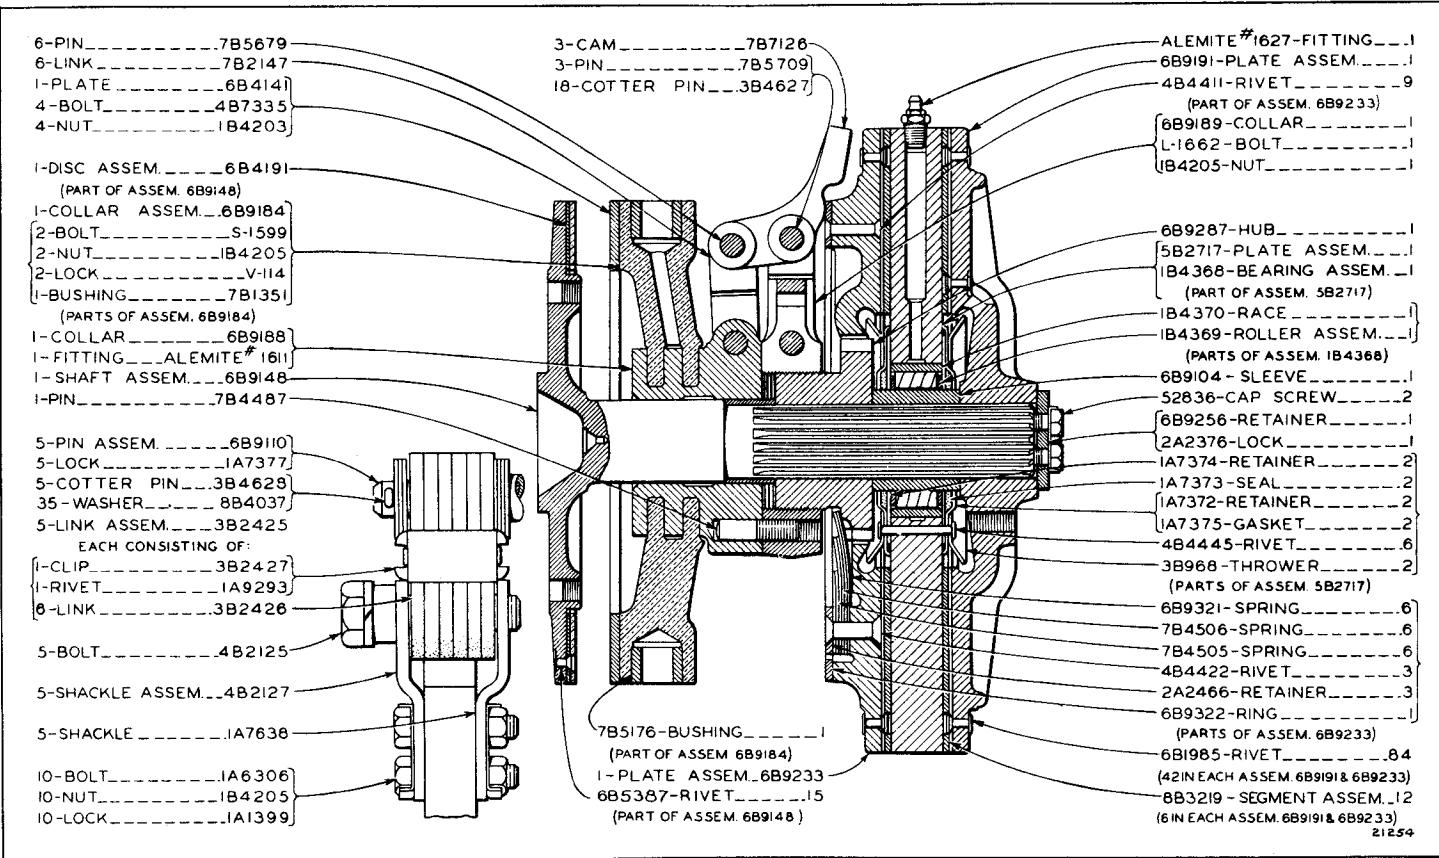

INSERT BETWEEN PAGES 68 & 69 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

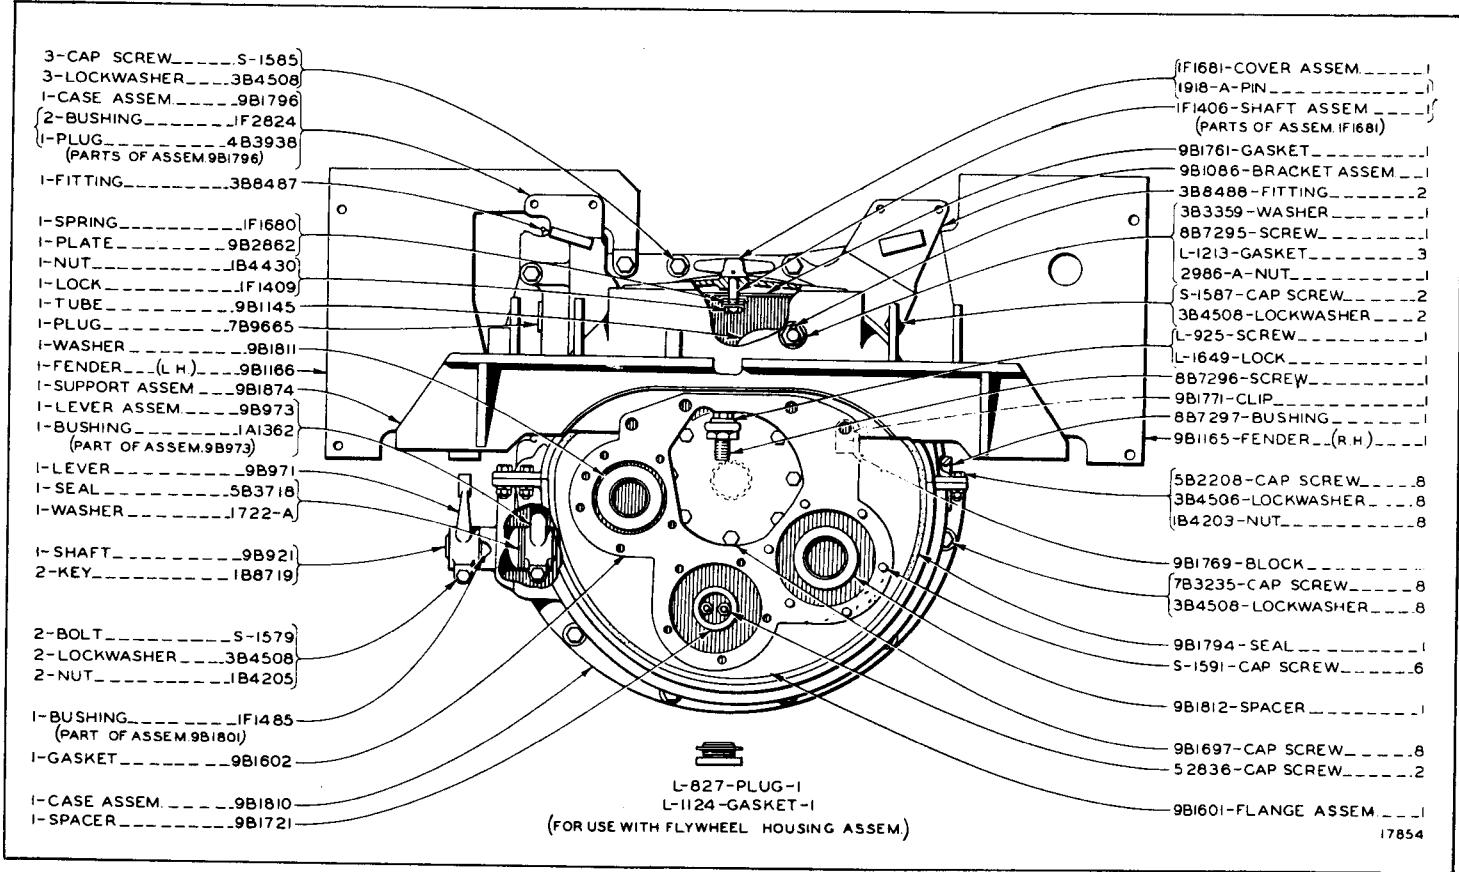

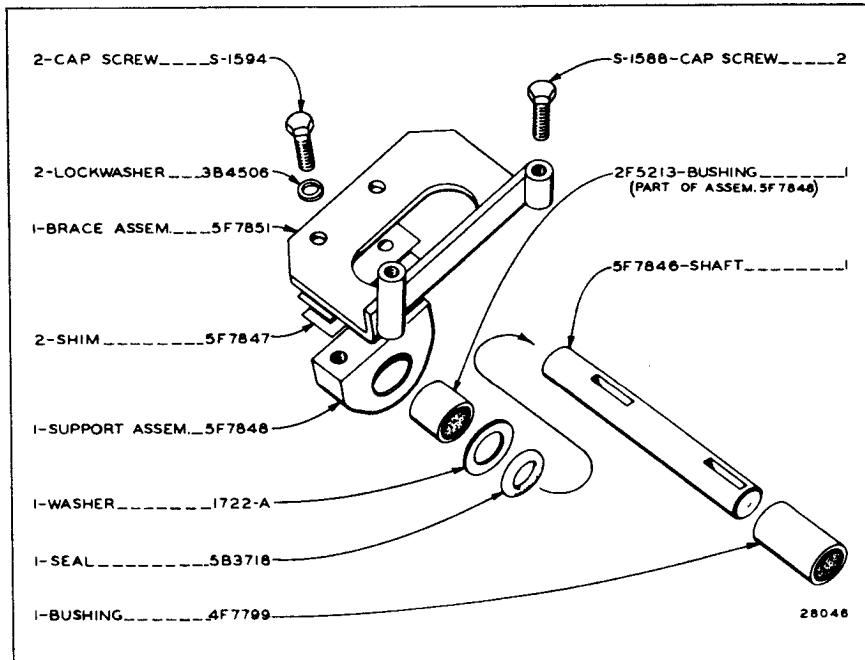


6F1493 FLYWHEEL CLUTCH SHAFT OUTBOARD BEARING AND
BUSHING GROUP—Field Changeover
Effective with Serial No. 4R549

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGES 68 & 69 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

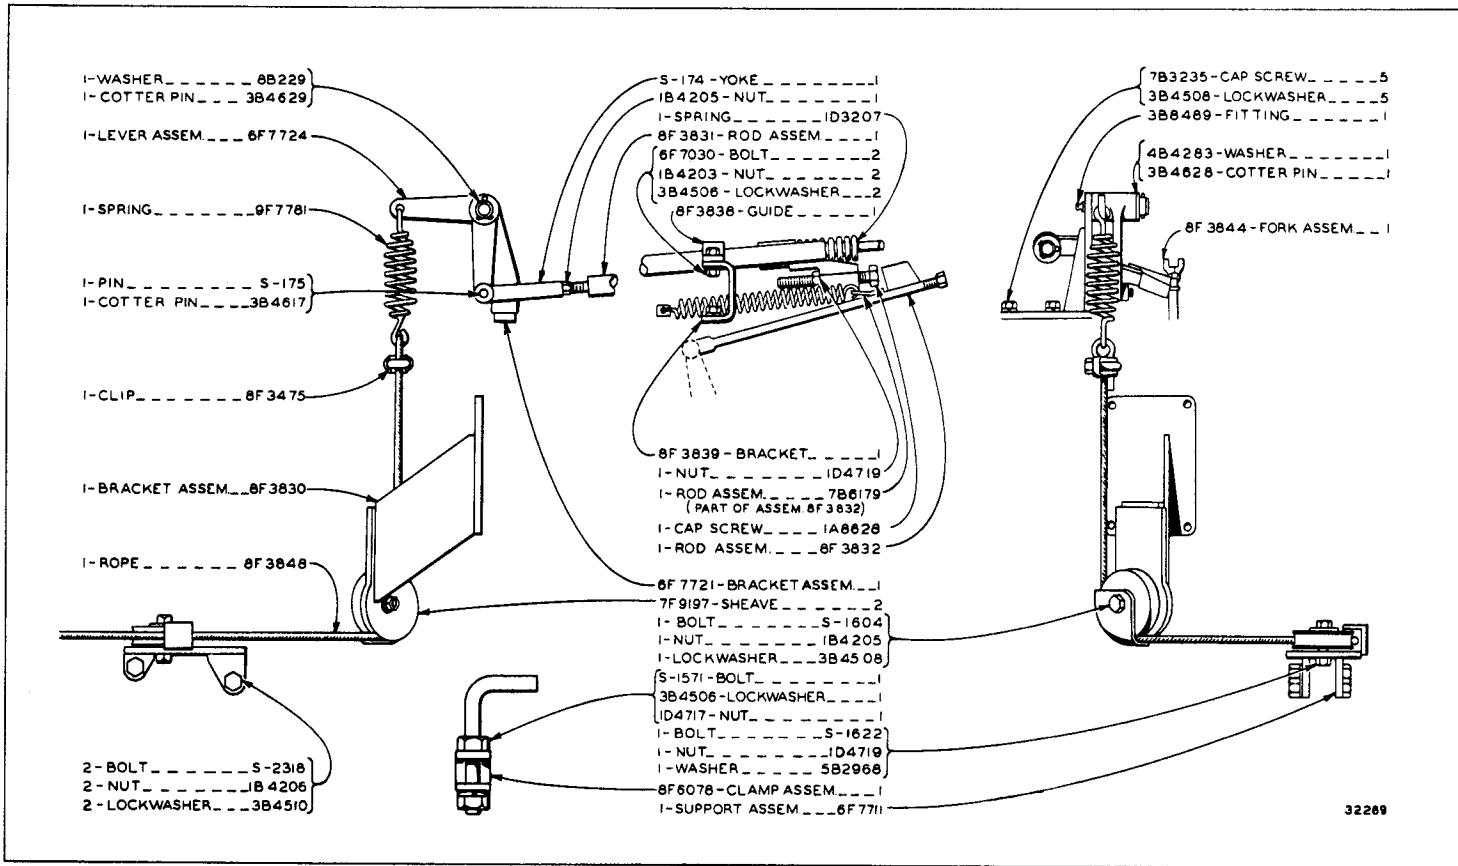

8F6076 FLYWHEEL CLUTCH KICK-OUT GROUP
For use with Trailing Agricultural Implements


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

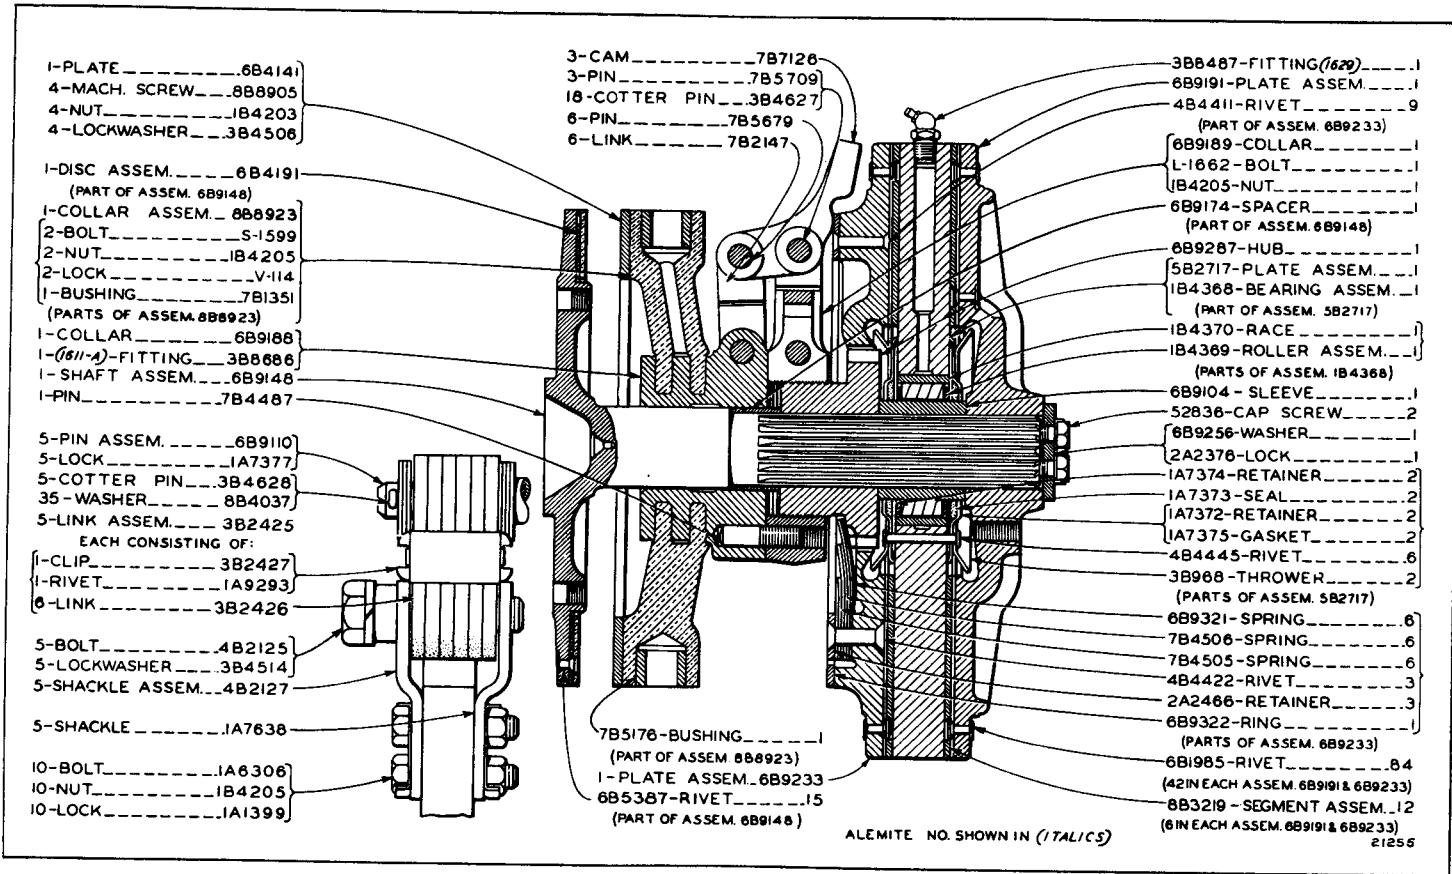

FLYWHEEL CLUTCH


Serial No. 4R52 to 4R929 Inclusive
Refer also to Page 128 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

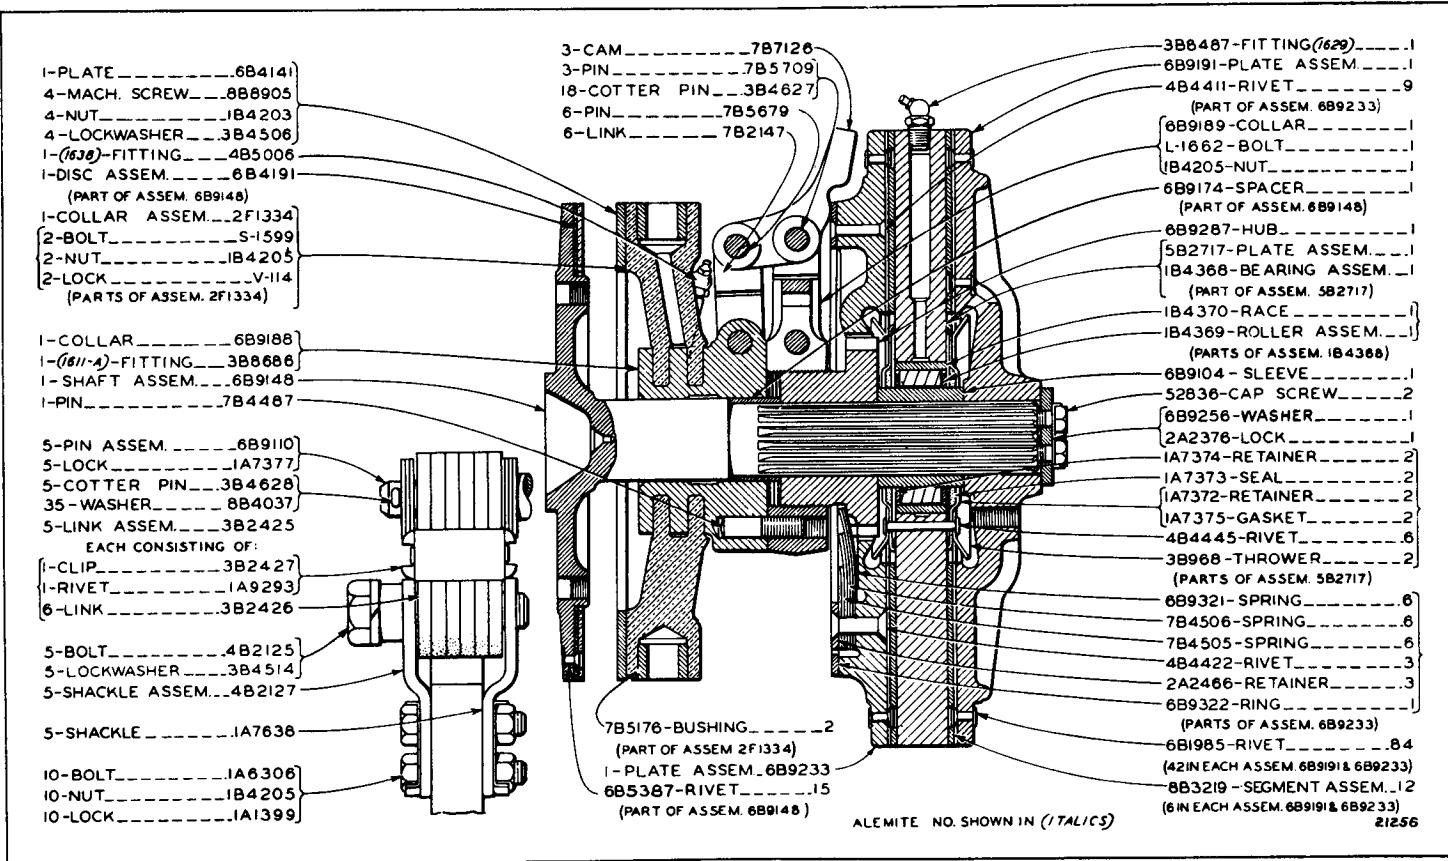


FLYWHEEL CLUTCH
 Serial No. 4R930 to 4R1188 Inclusive
 Refer also to Page 128 for special parts

INSERT BETWEEN PAGE 70 & 71 IN FORM 8885 D6 TRACTOR (74 Inch Gauge)

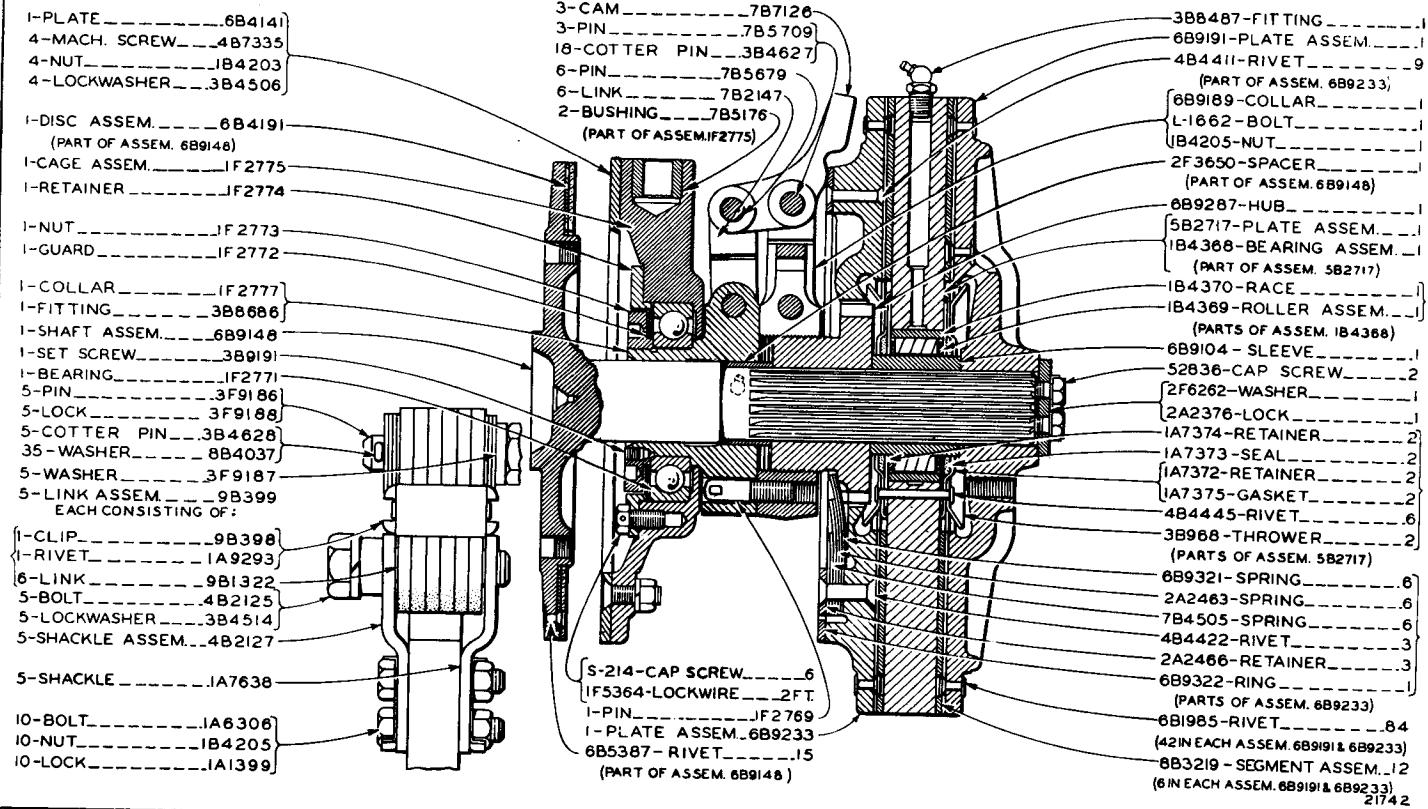


FLYWHEEL CLUTCH
 Serial No. 4R2342 to 4R3118 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

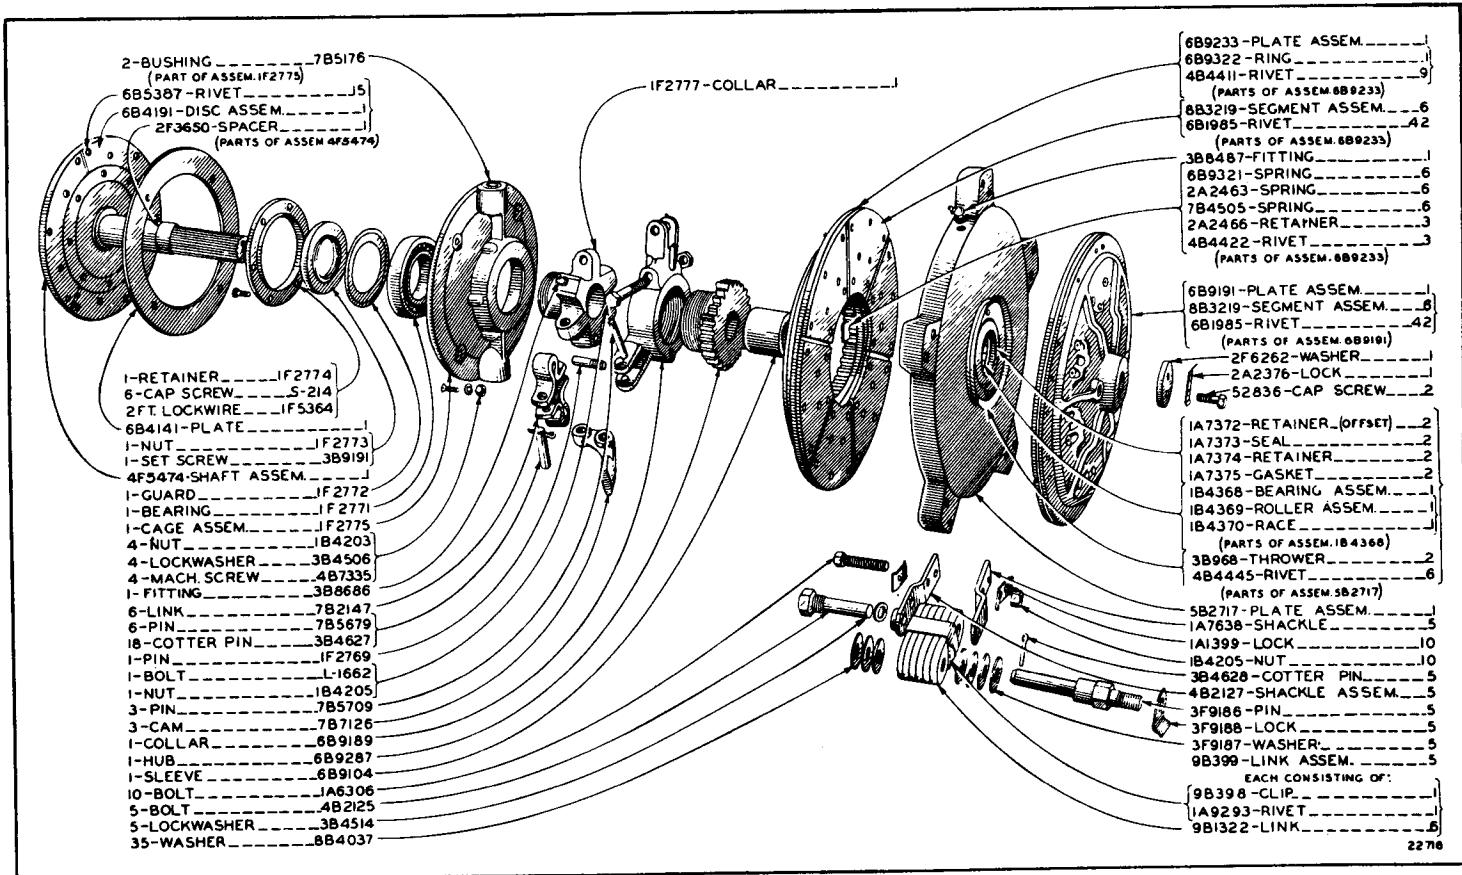


FLYWHEEL CLUTCH
Effective with Serial No. 4R3119


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

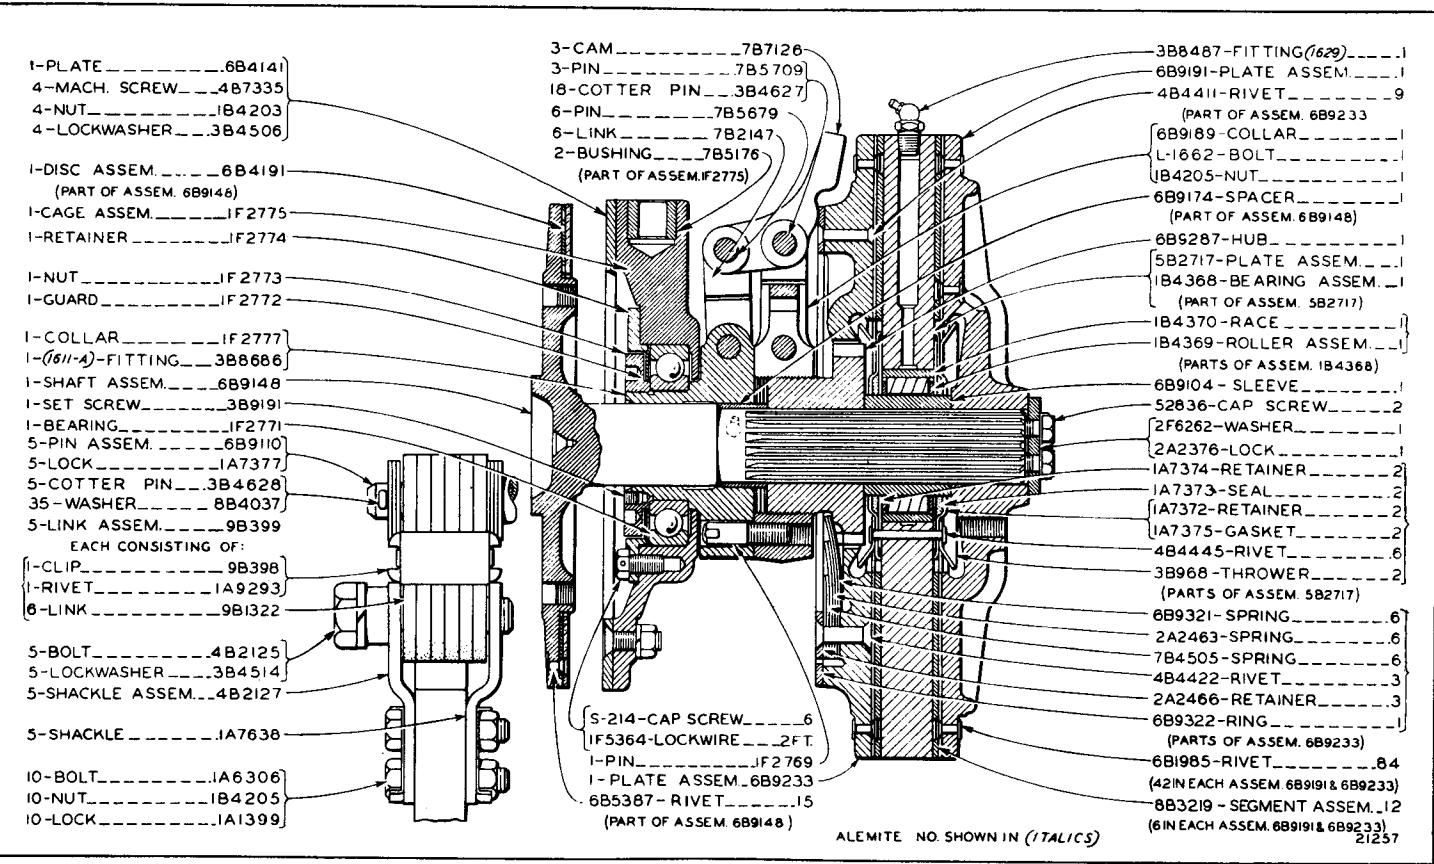

FLYWHEEL CLUTCH
Serial No. 4R1189 to 4R2341 inclusive

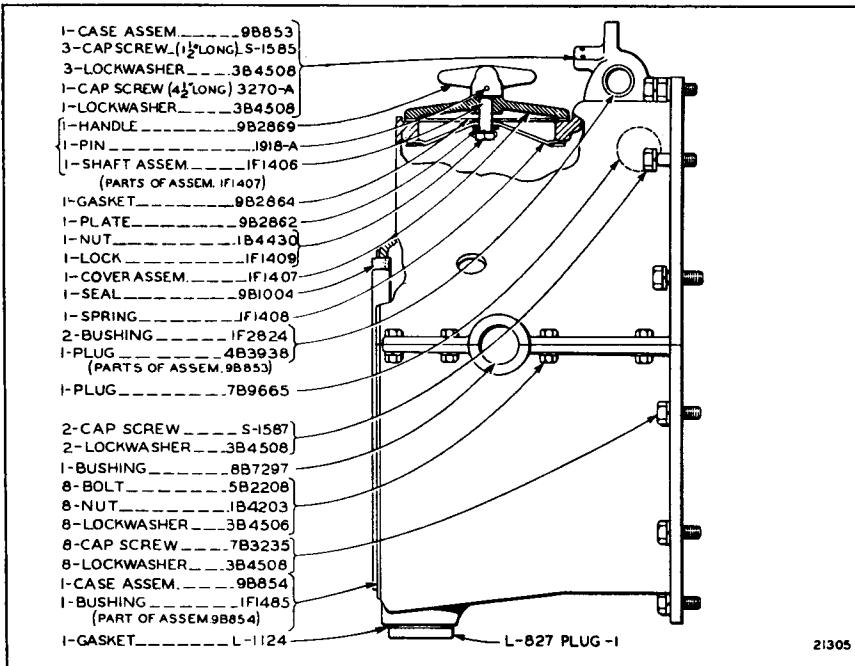


FLYWHEEL CLUTCH ENCLOSURE
 Serial No. 4R549 to 4R833 Inclusive

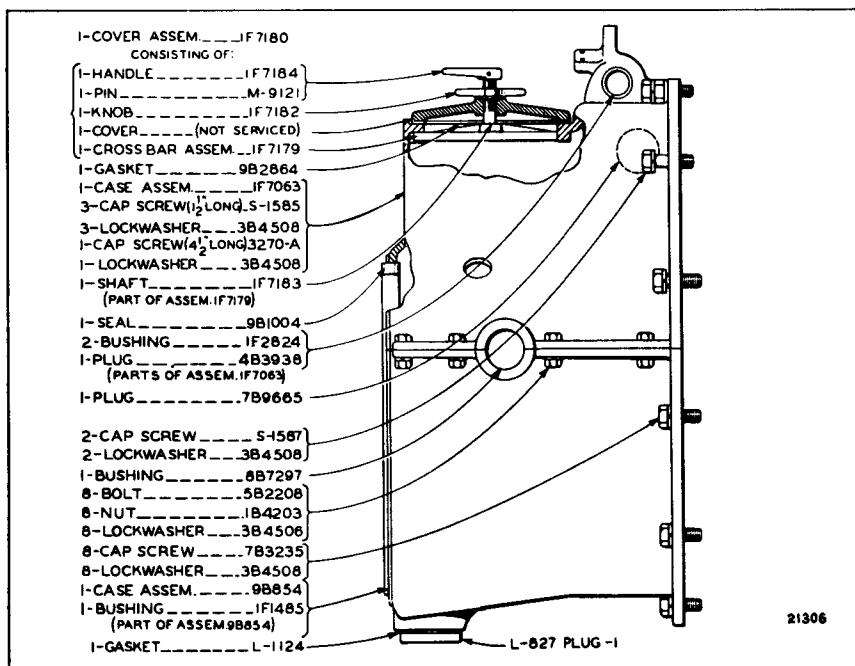


FLYWHEEL CLUTCH ENCLOSURE
 Serial No. 4R834 to 4R929 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

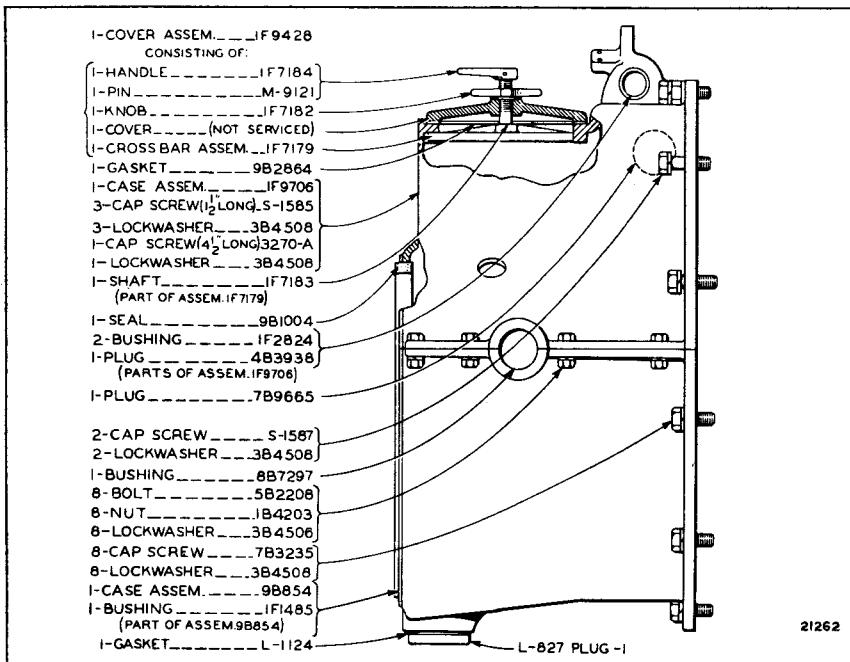

FLYWHEEL CLUTCH ENCLOSURE


Effective with Serial No. 4R930

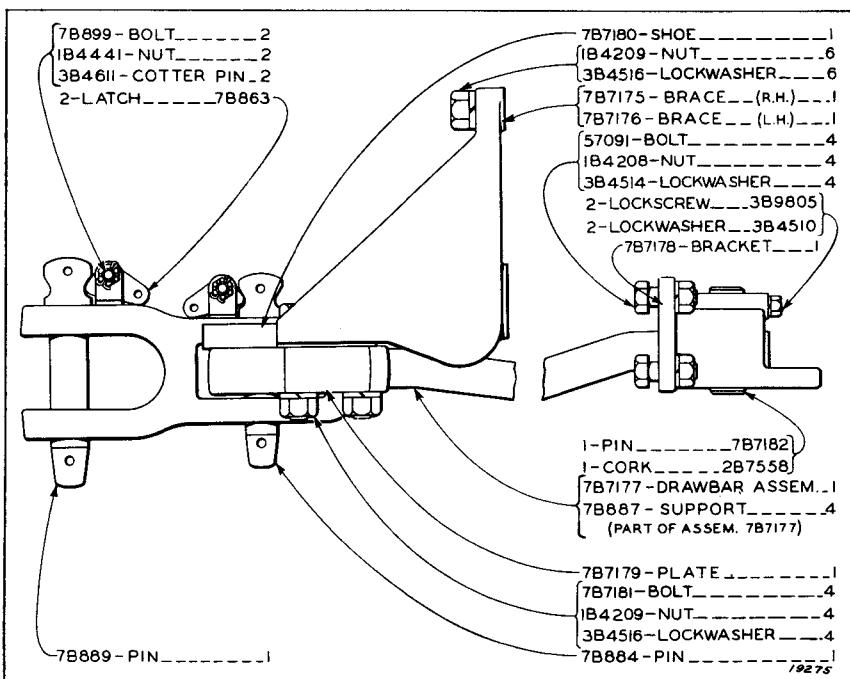

DRAWBAR


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

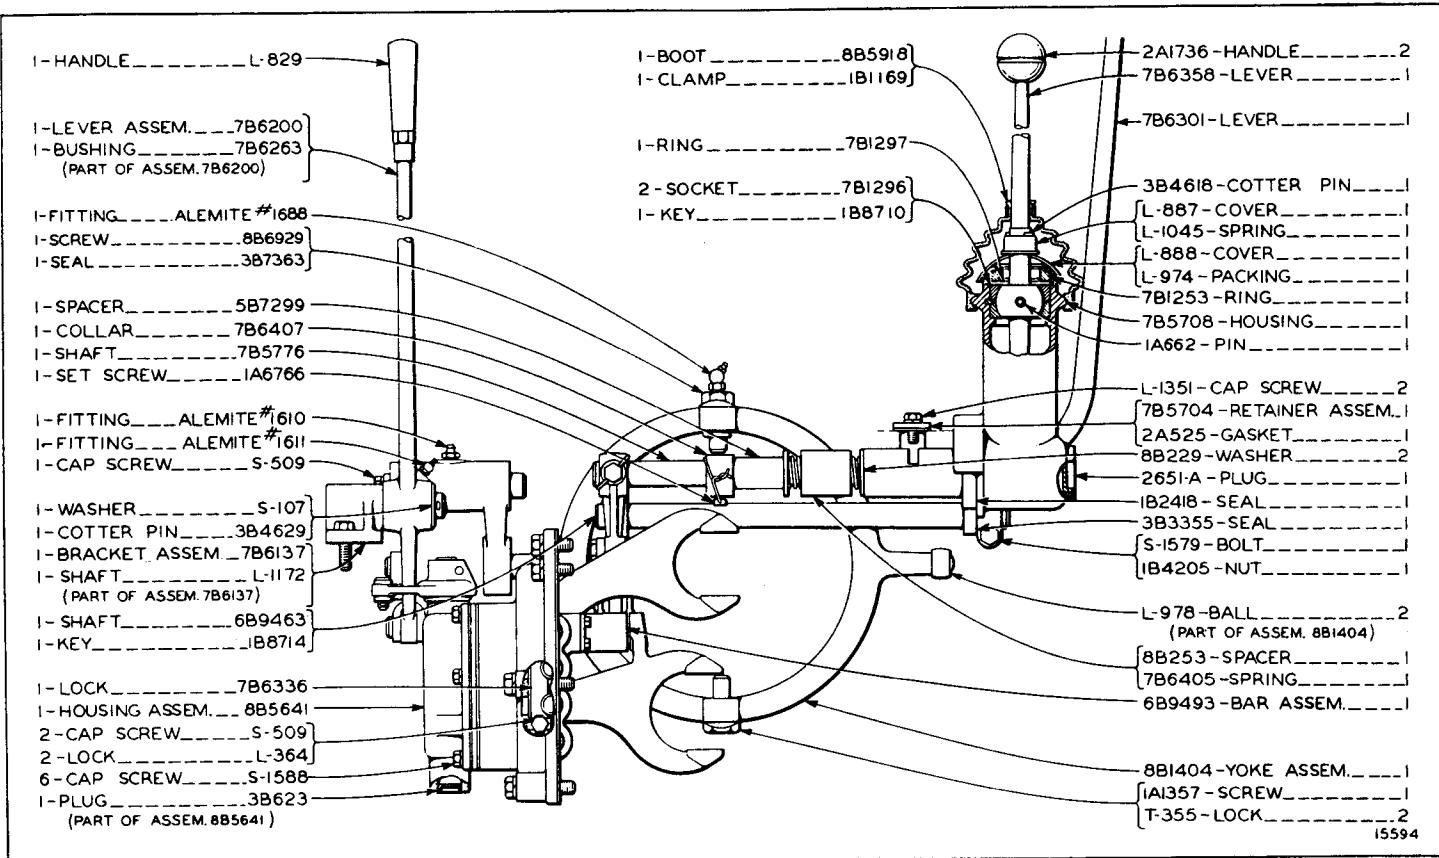

GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL
Serial No. 4R1 to 4R548 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

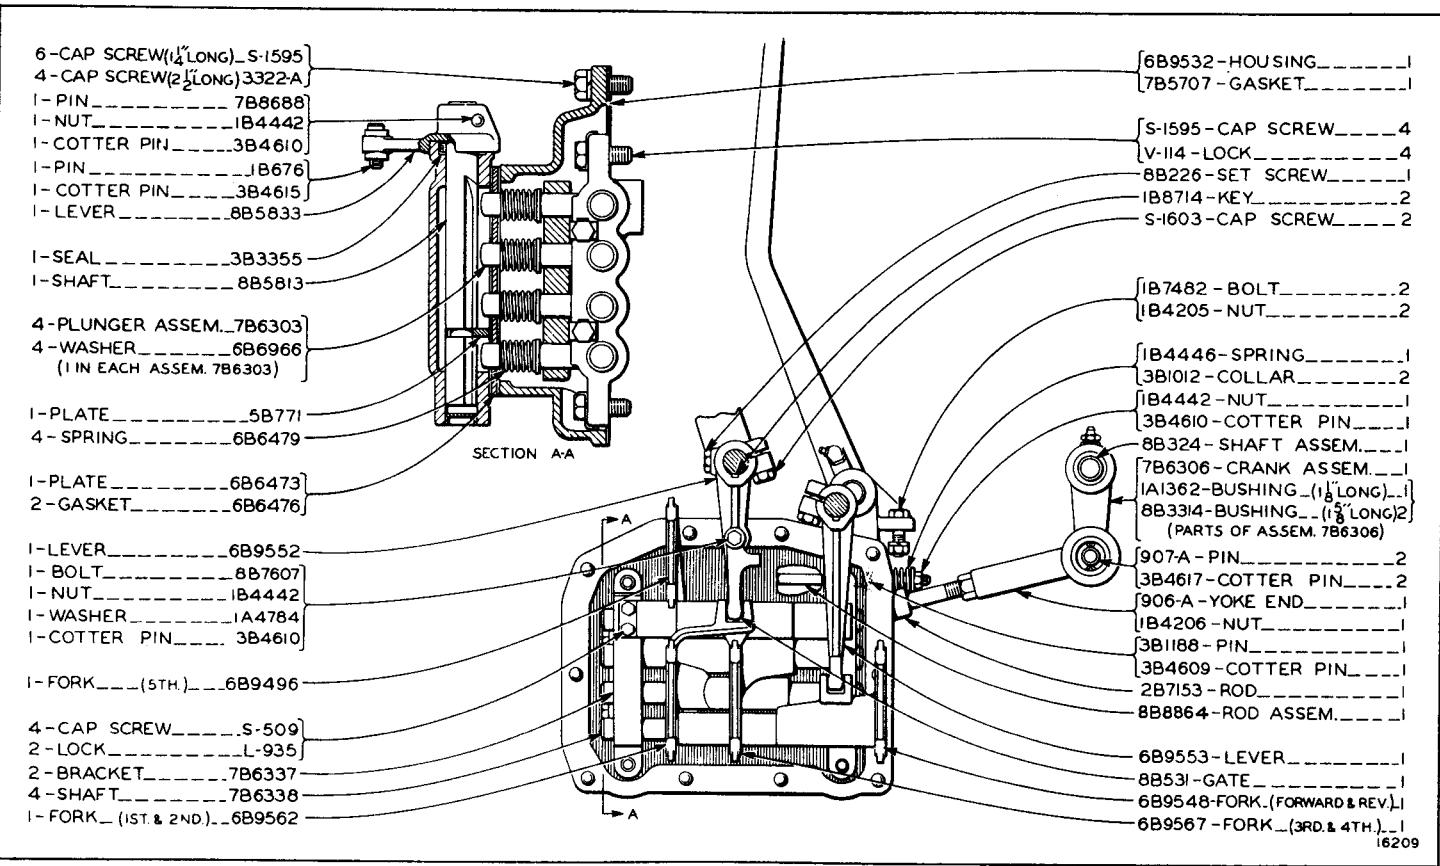

GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL

Serial No. 4R1 to 4R548 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

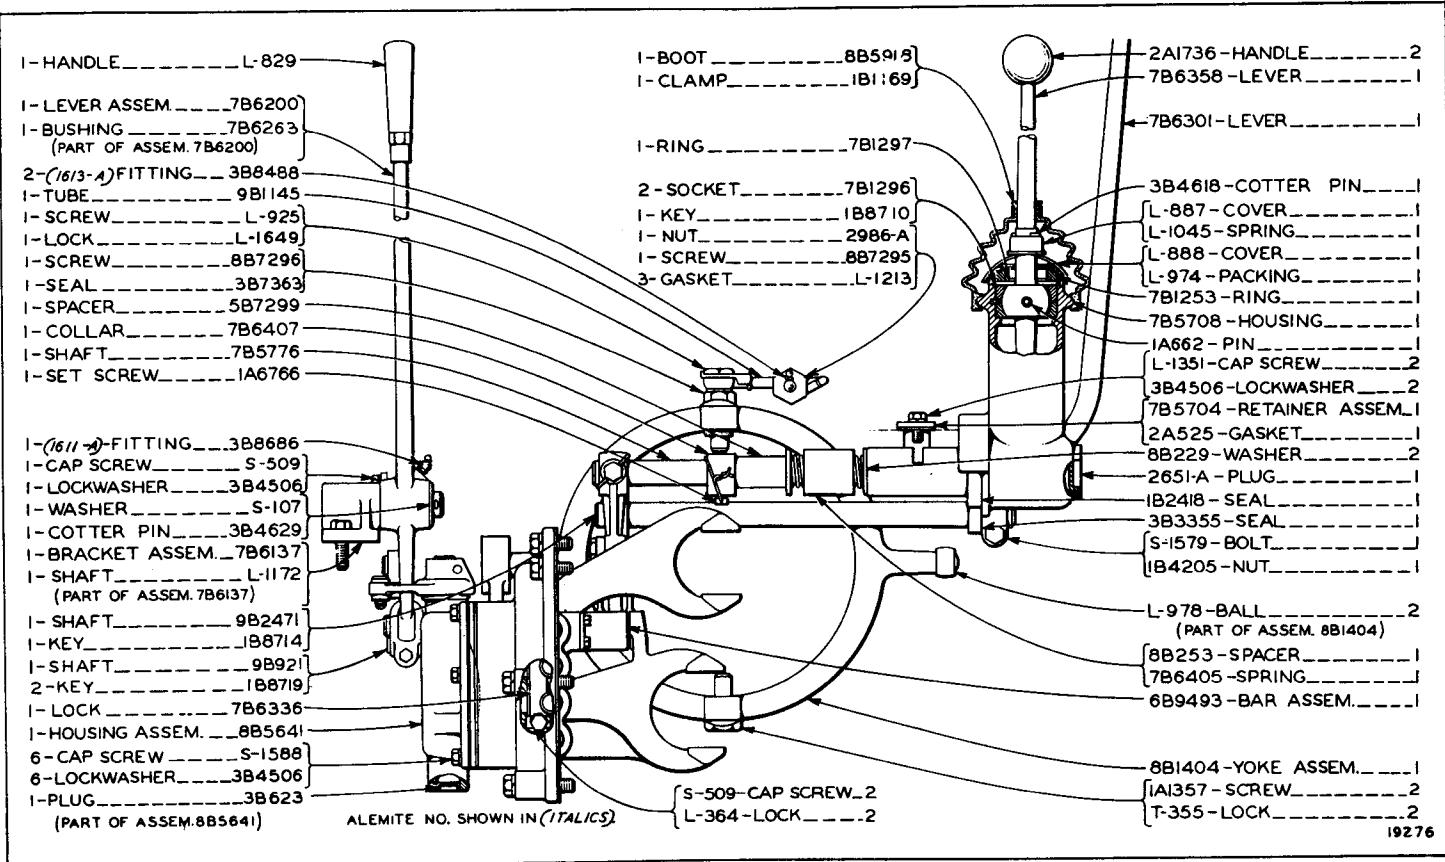

GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL
Serial No. 4R549 to 4R929 Inclusive

19276


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

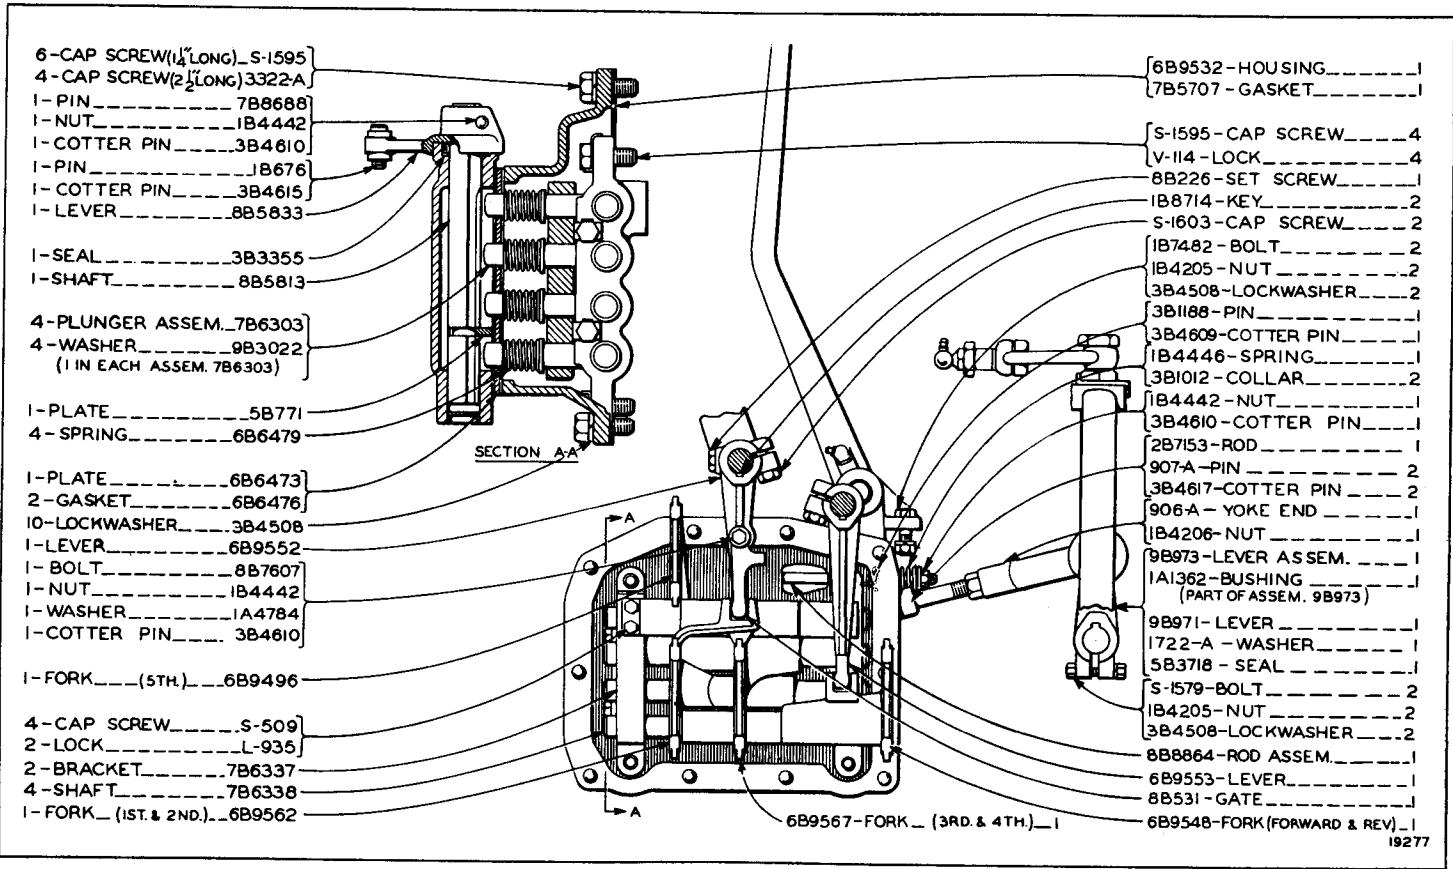

GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL


Serial No. 4R549 to 4R929 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

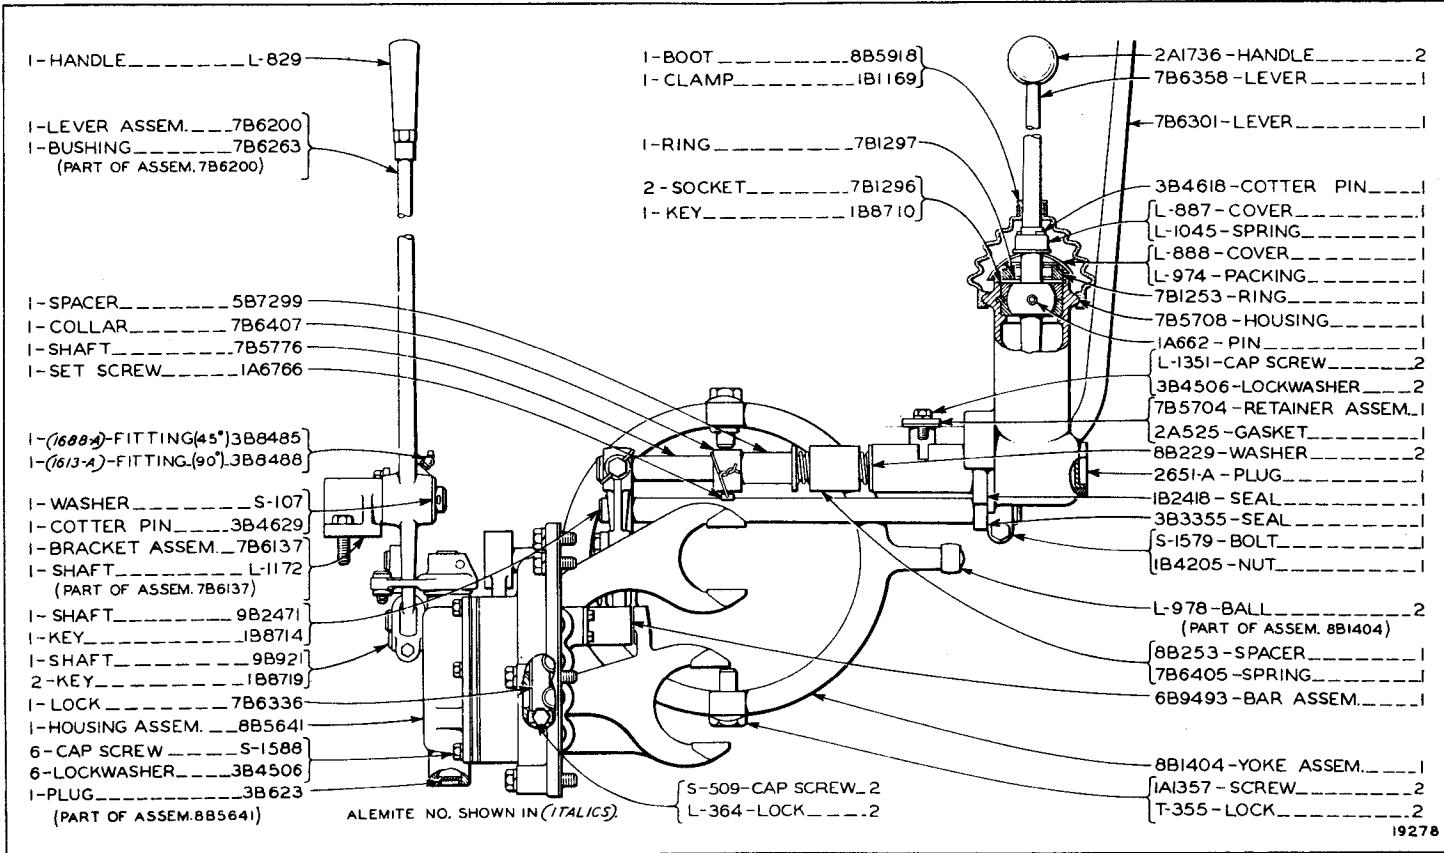


GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL
Effective with Serial No. 4R930

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

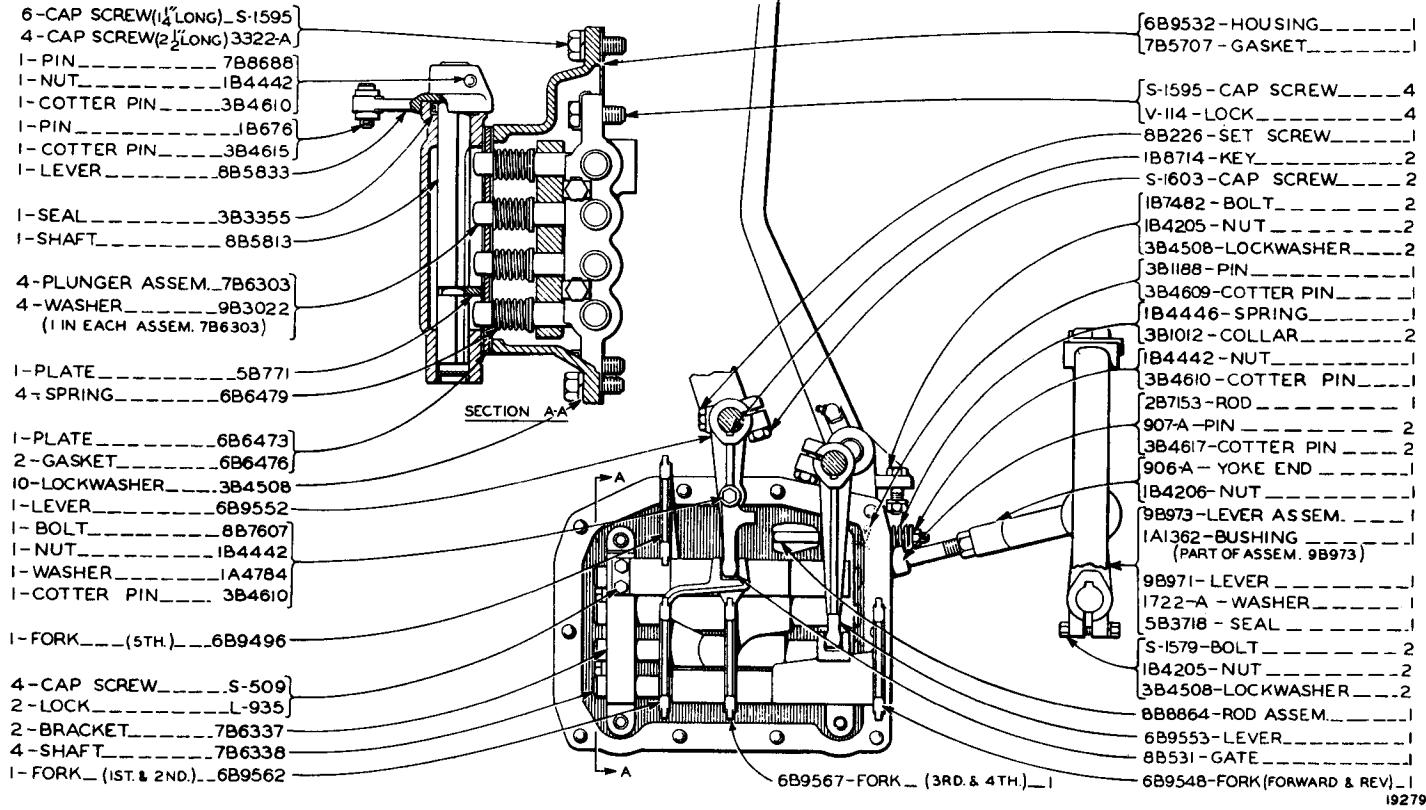


GEAR SHIFT AND FLYWHEEL CLUTCH CONTROL
Effective with Serial No. 4R930


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

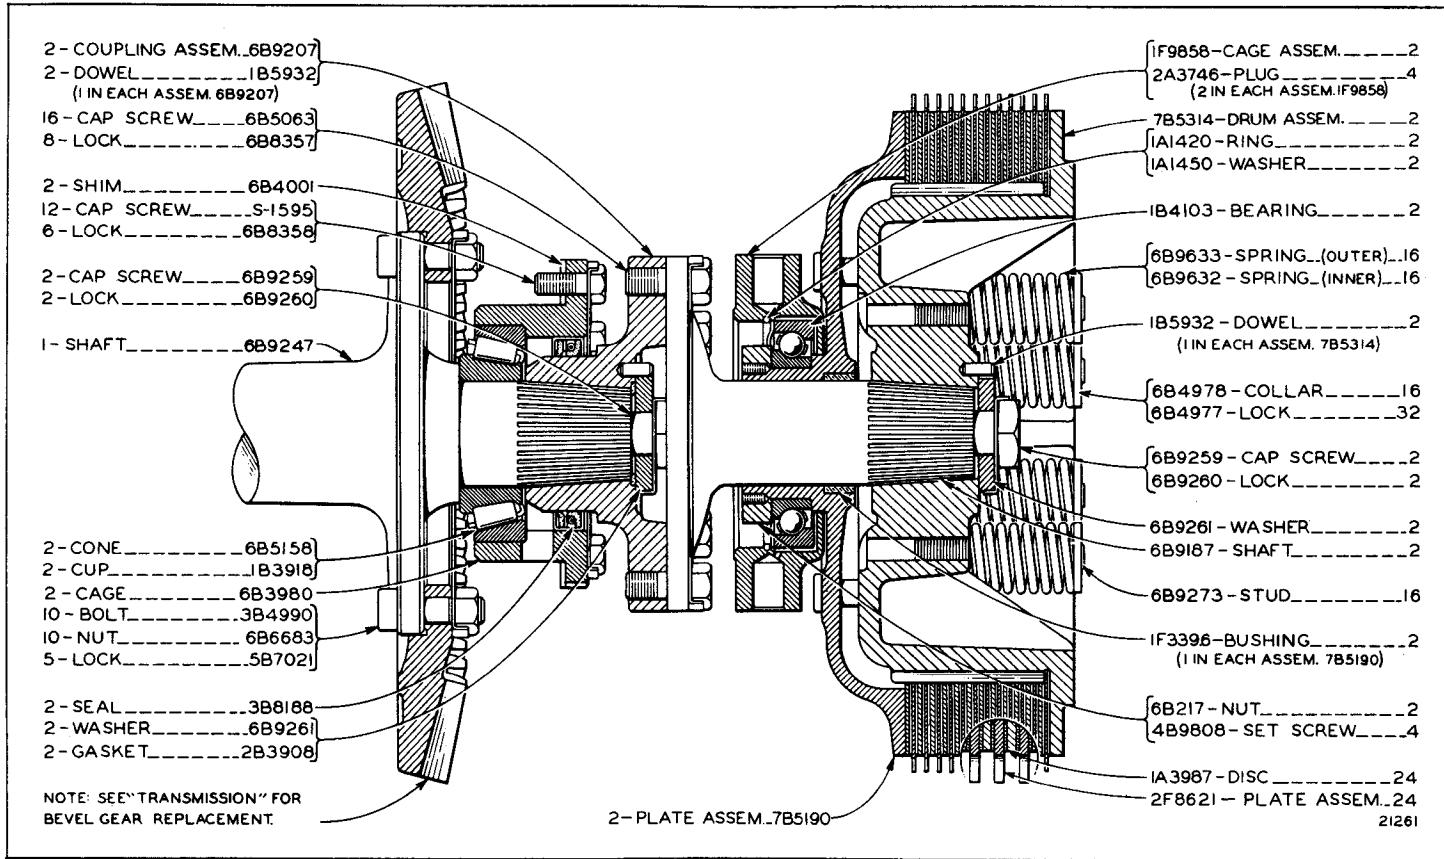

STEERING CLUTCH

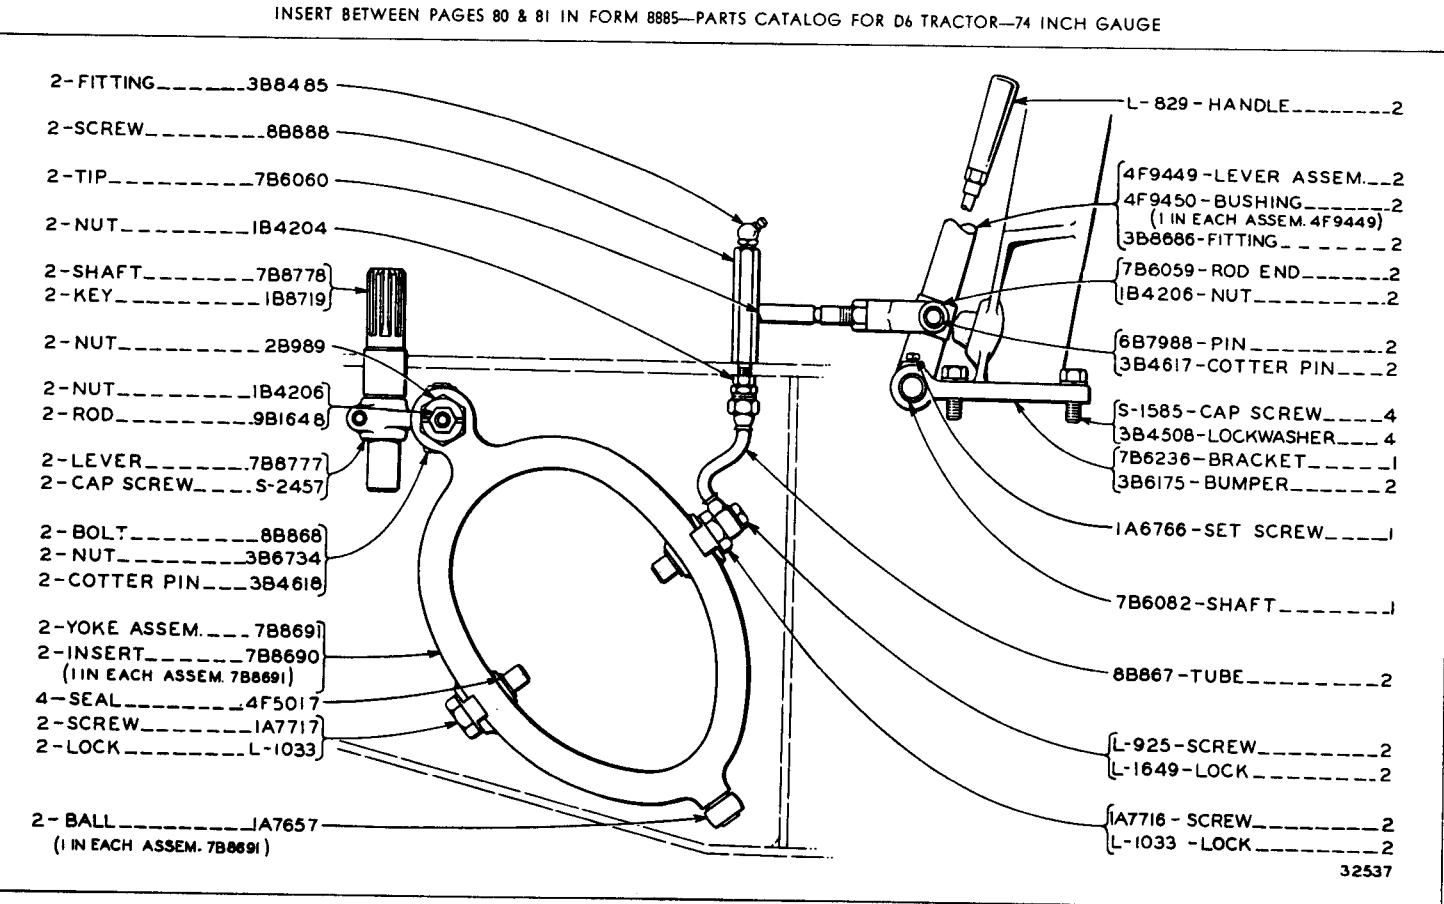


STEERING CLUTCH CONTROL—Field Replacement

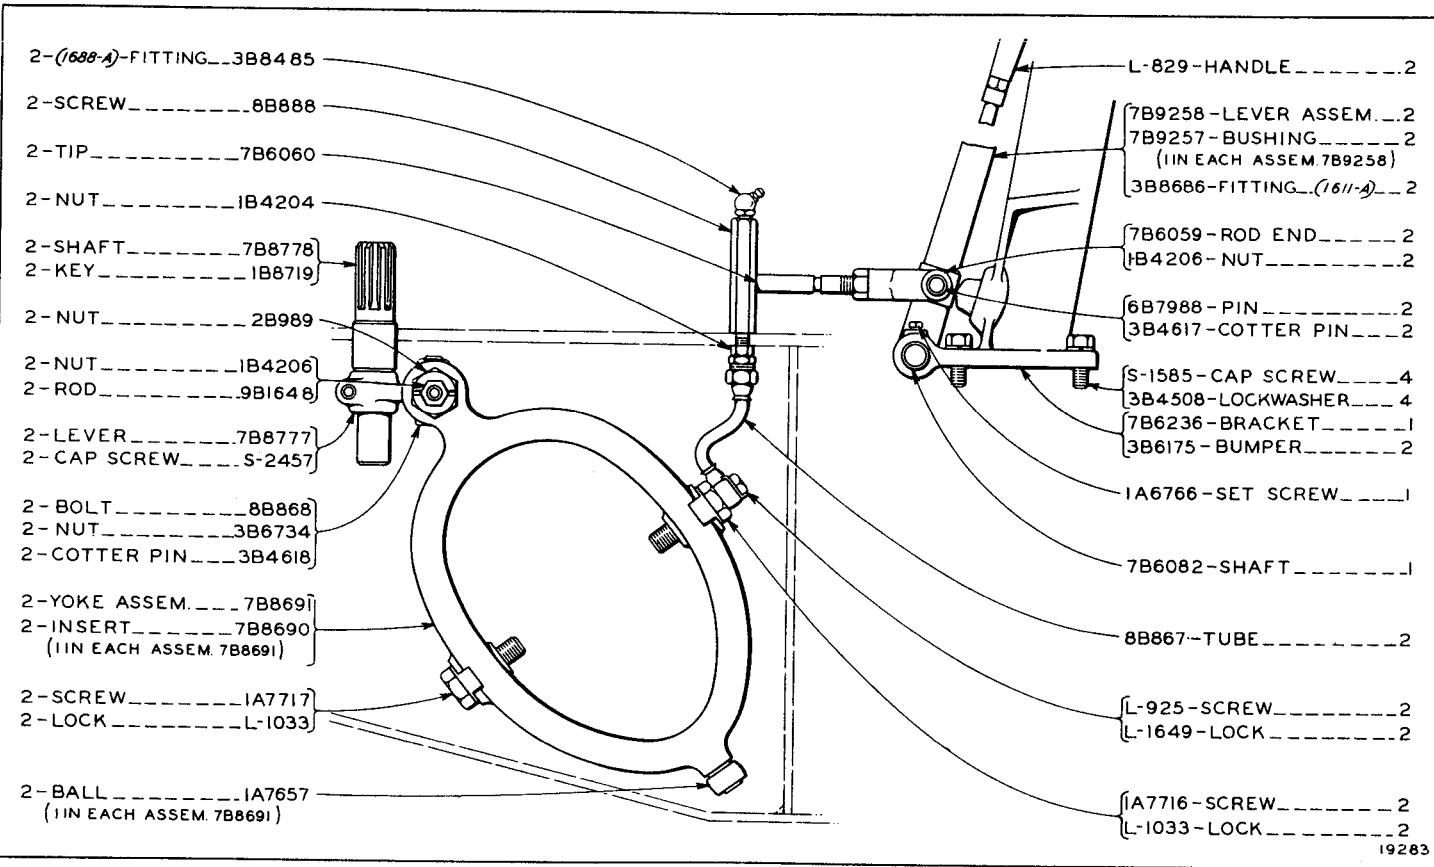

STEERING CLUTCH CONTROL


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

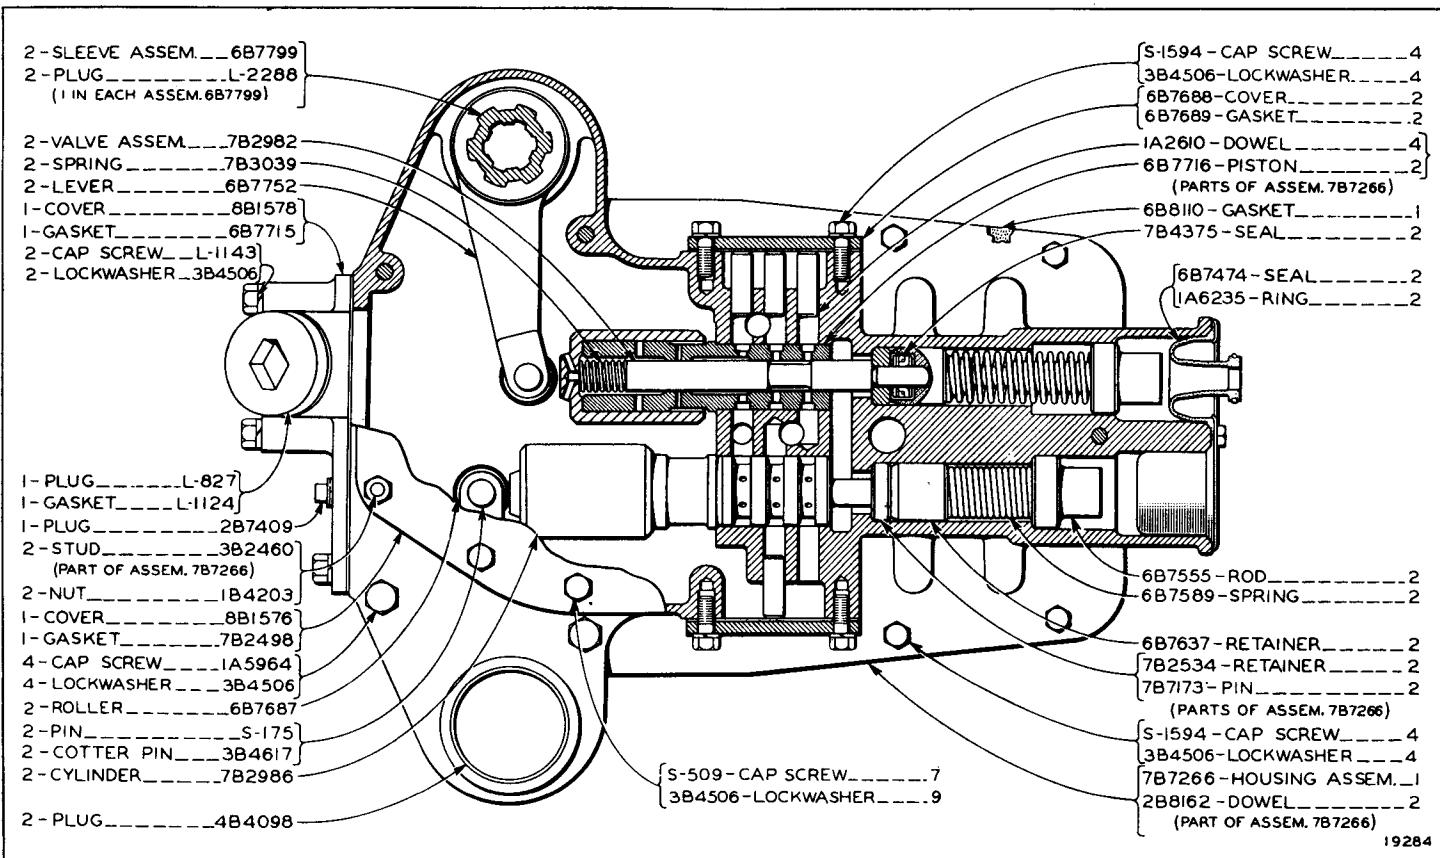

STEERING CLUTCH HYDRAULIC CONTROL MECHANISM


19284

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

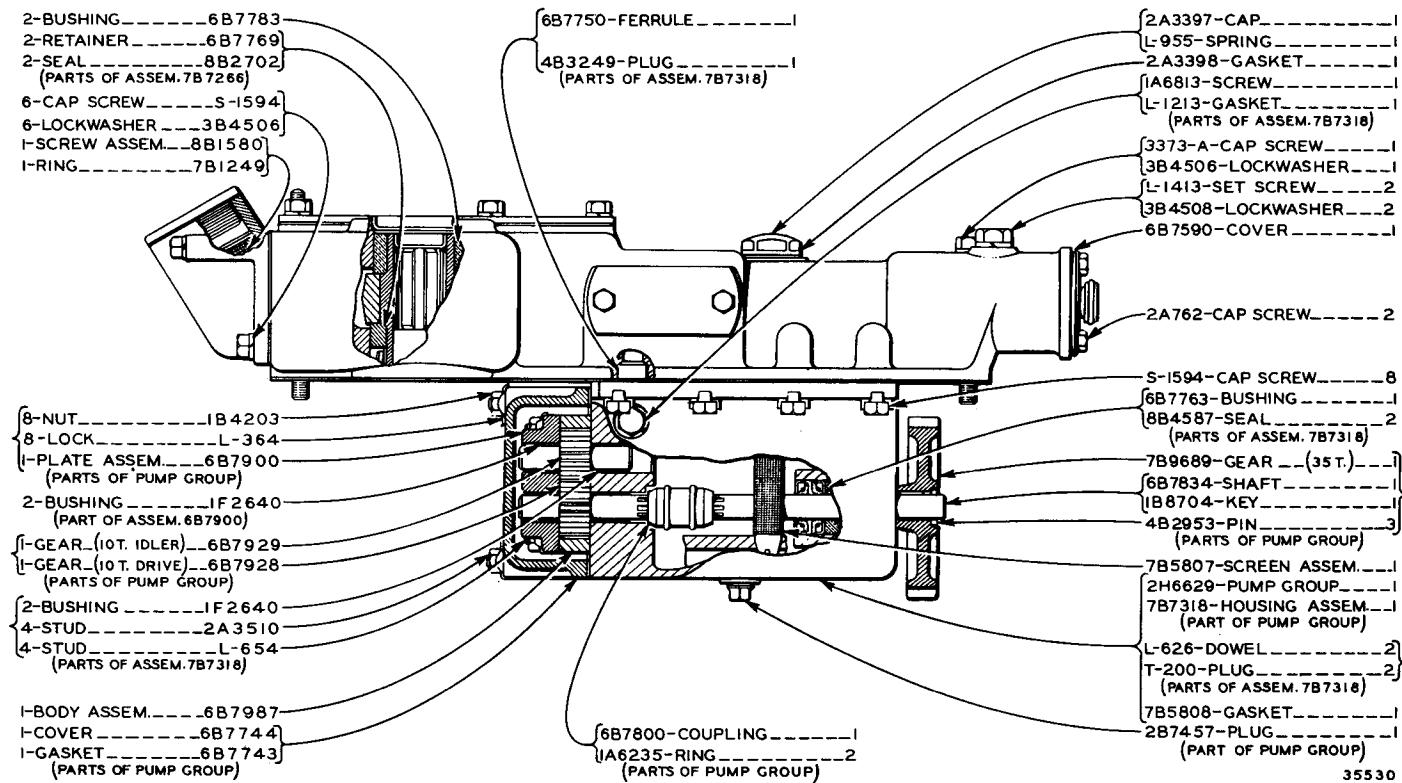

STEERING CLUTCH HYDRAULIC CONTROL MECHANISM


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

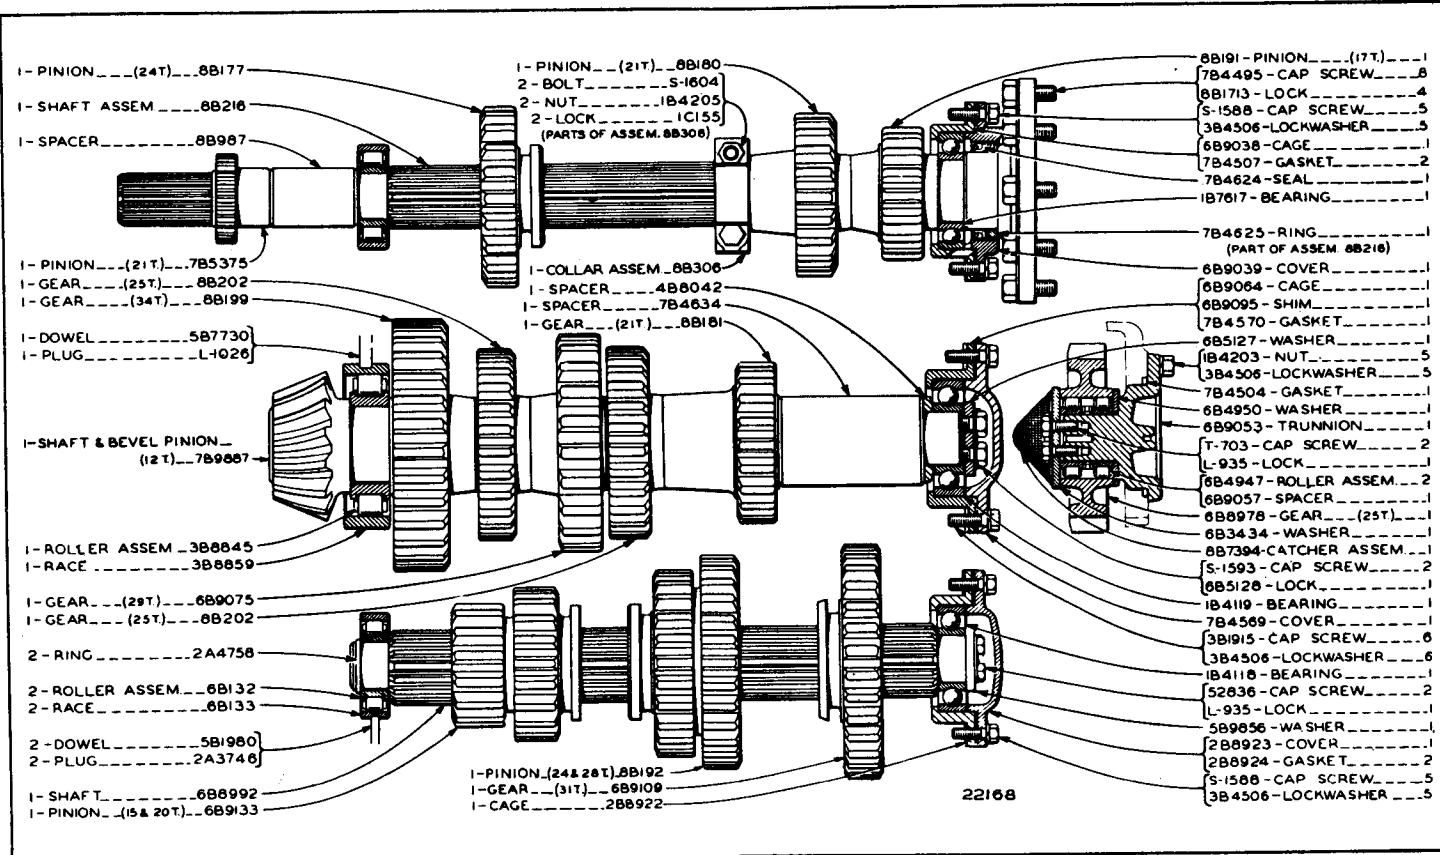

7B8428 TRANSMISSION GROUP (First Type) — Serial No. 4R1 to 4R1749 Inclusive
 Provides following speeds: (Forward) 1st—1.4, 2nd—2.3, 3rd—3.2, 4th—4.4 and
 5th—5.8 M. P. H. (Reverse) 1st—1.8, 2nd—2.8, 3rd—3.9 and 4th—5.4 M. P. H.

INSERT BETWEEN PAGES 84 & 85 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74" GAUGE


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

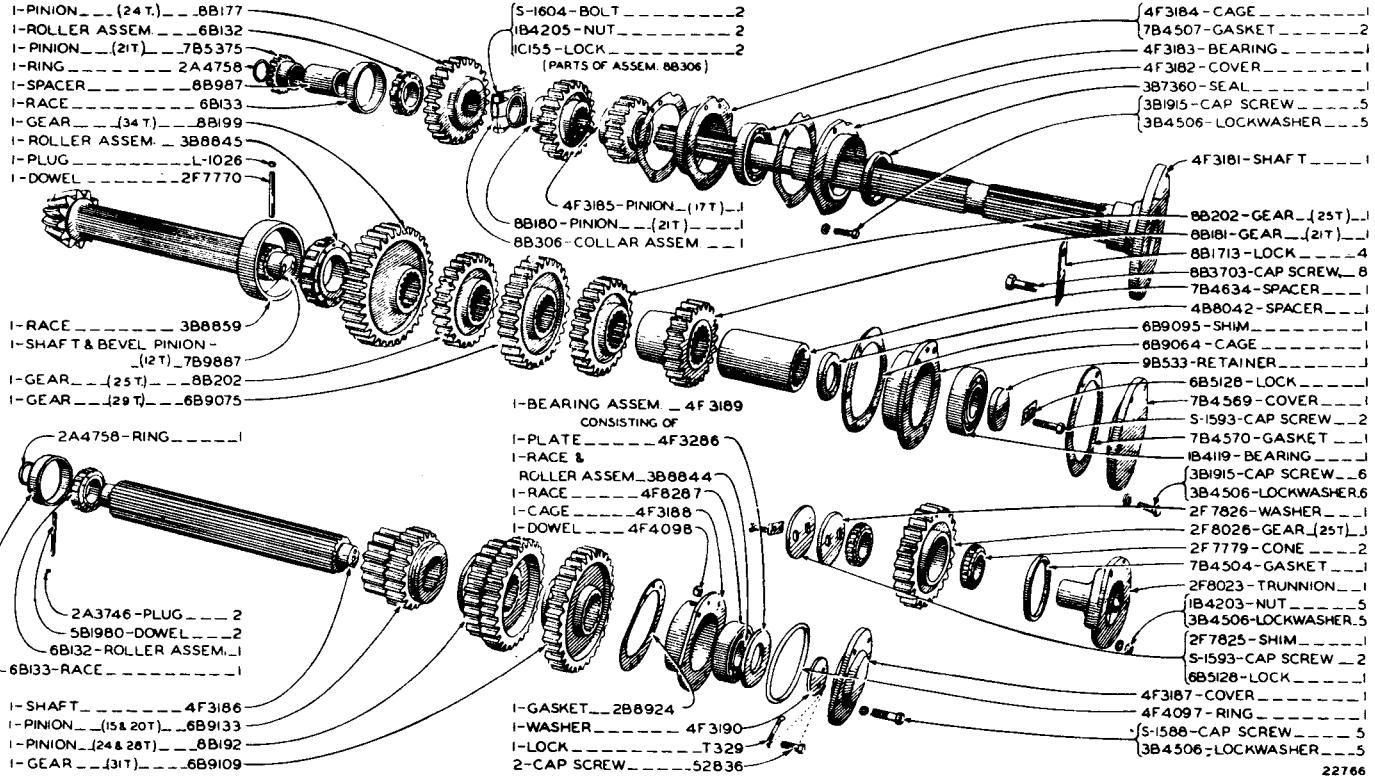


22766

7B8428 TRANSMISSION GROUP (Third Type)—Effective with Serial No. 4R3068

Provides following speeds: (Forward) 1st—1.4, 2nd—2.3, 3rd—3.2, 4th—4.4 and 5th—5.8 M.P.H. (Reverse) 1st—1.8, 2nd—2.8, 3rd—3.9 and 4th—5.4 M.P.H.

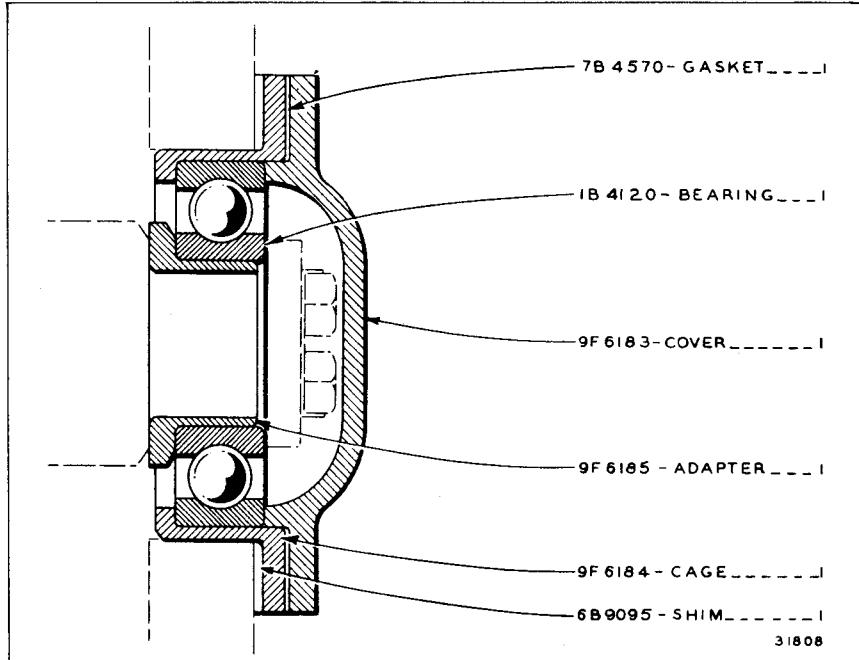

9F7430 PINION BEARING GROUP—Field Changeover

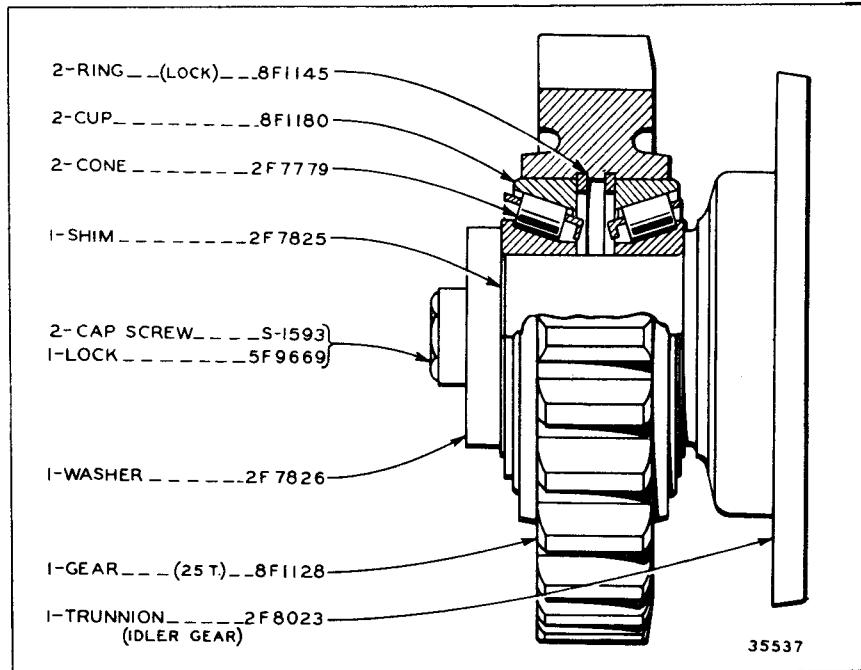


TRANSMISSION IDLER GEAR AND TRUNNION—Field Replacement

Serial No. 4R1 to 4R1749 inclusive

For field replacement of 6B8978 Idler Gear and 6B9053 Trunnion

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

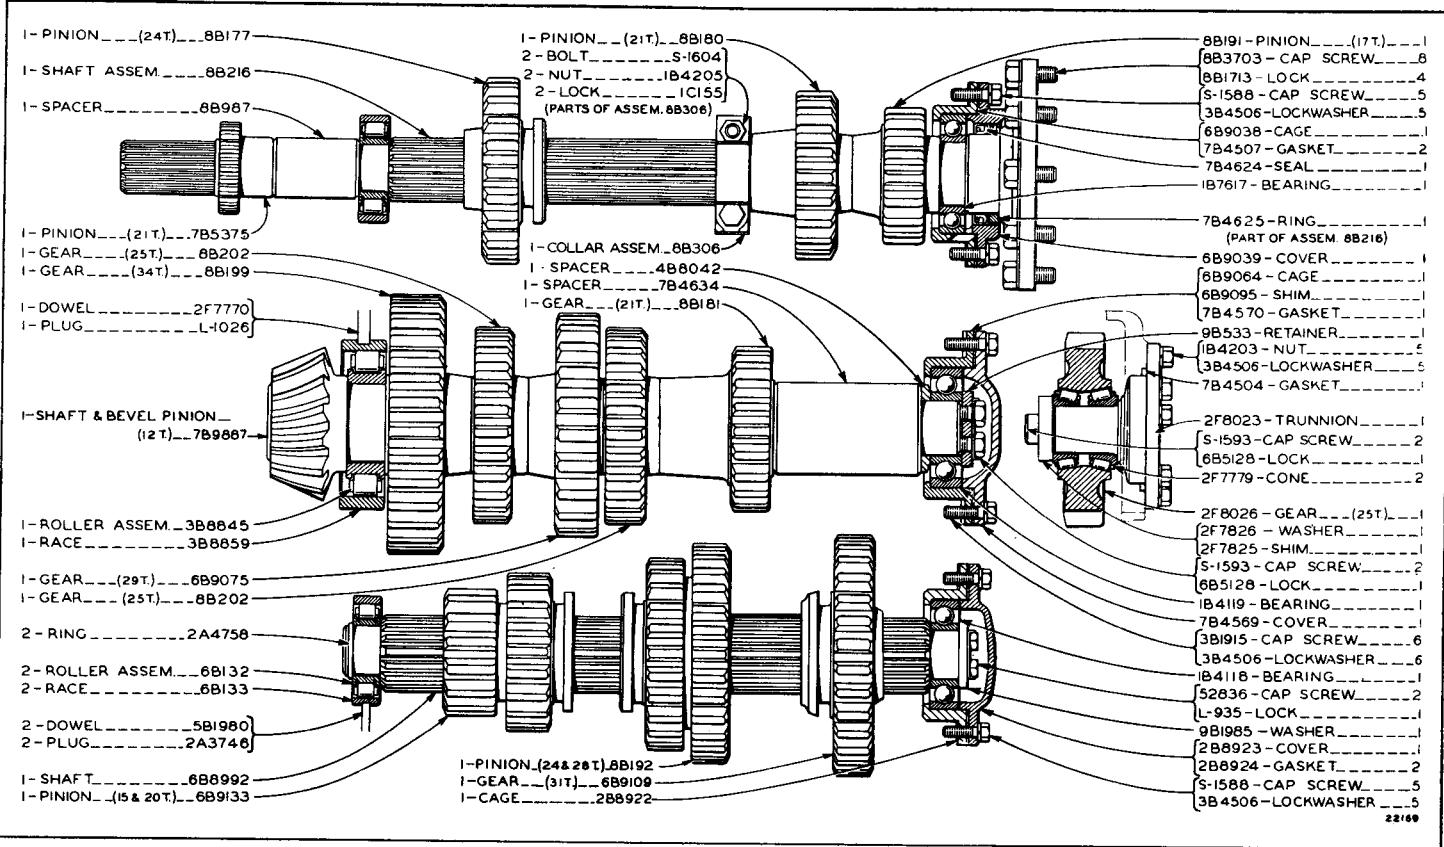


7B8428 TRANSMISSION GROUP (Second Type)

Serial No. 4R1750 to 4R3067 inclusive

Provides following speeds: (Forward) 1st—1.4, 2nd—2.3, 3rd—3.2, 4th—4.4, and 5th—5.8, M.P.H.
(Reverse) 1st—1.8, 2nd—2.8, 3rd—3.9, and 4th—5.4, M.P.H.


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

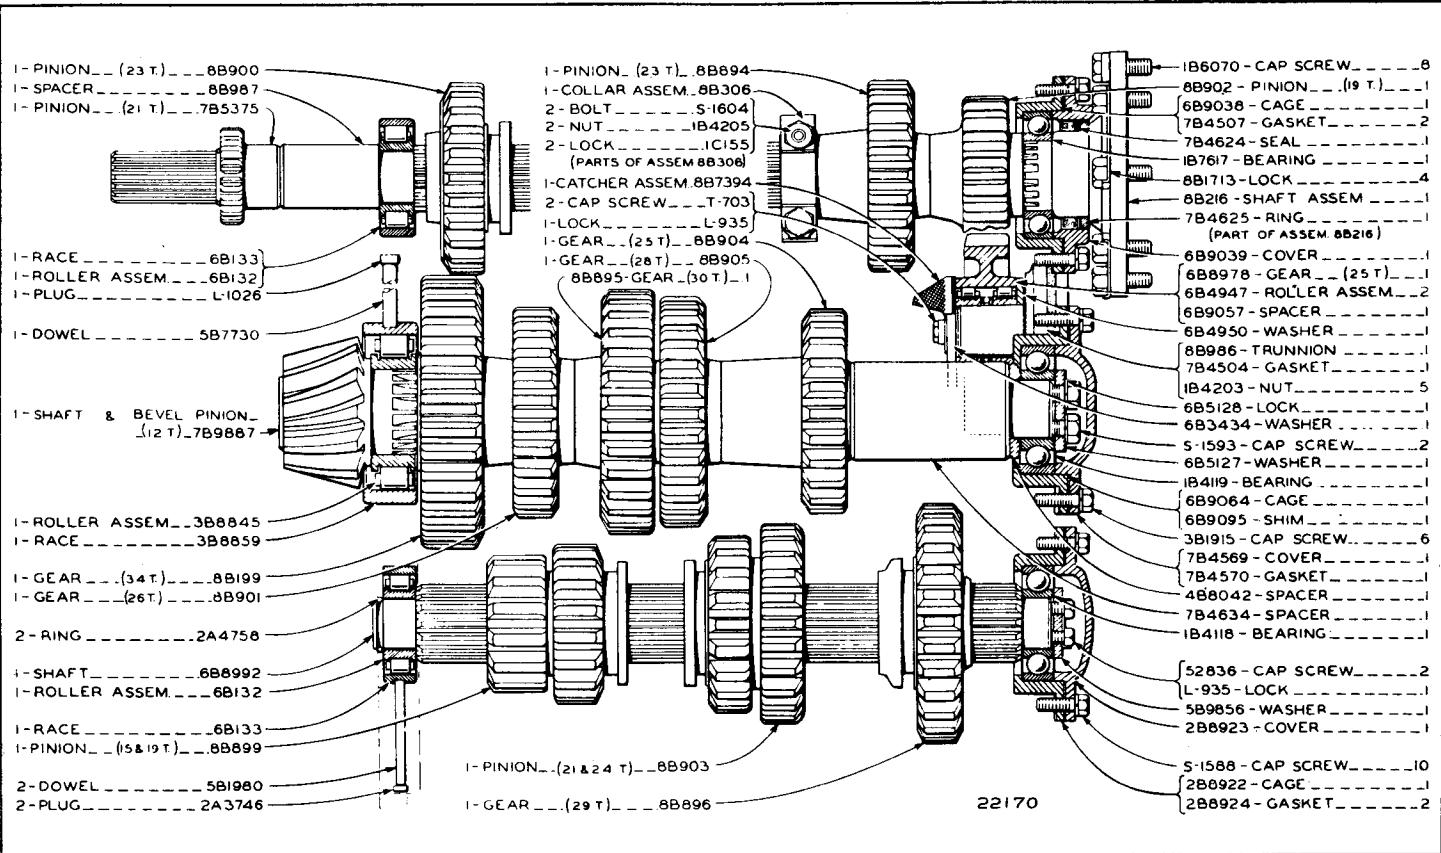

88898 TRANSMISSION GROUP (First Type)—Serial No. 4R1 to 4R1749 Inclusive
Provides following speeds: (Forward) 1st—1.7, 2nd—2.5, 3rd—3.0, 4th—3.7 and
5th—5.3 M. P. H. (Reverse) 1st—2.1, 2nd—3.0, 3rd—3.6 and 4th—4.6 M. P. H.


INSERT BETWEEN PAGES 86 & 87 IN FORM 8895--PARTS CATALOG FOR D6 TRACTOR--74" GAUGE

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

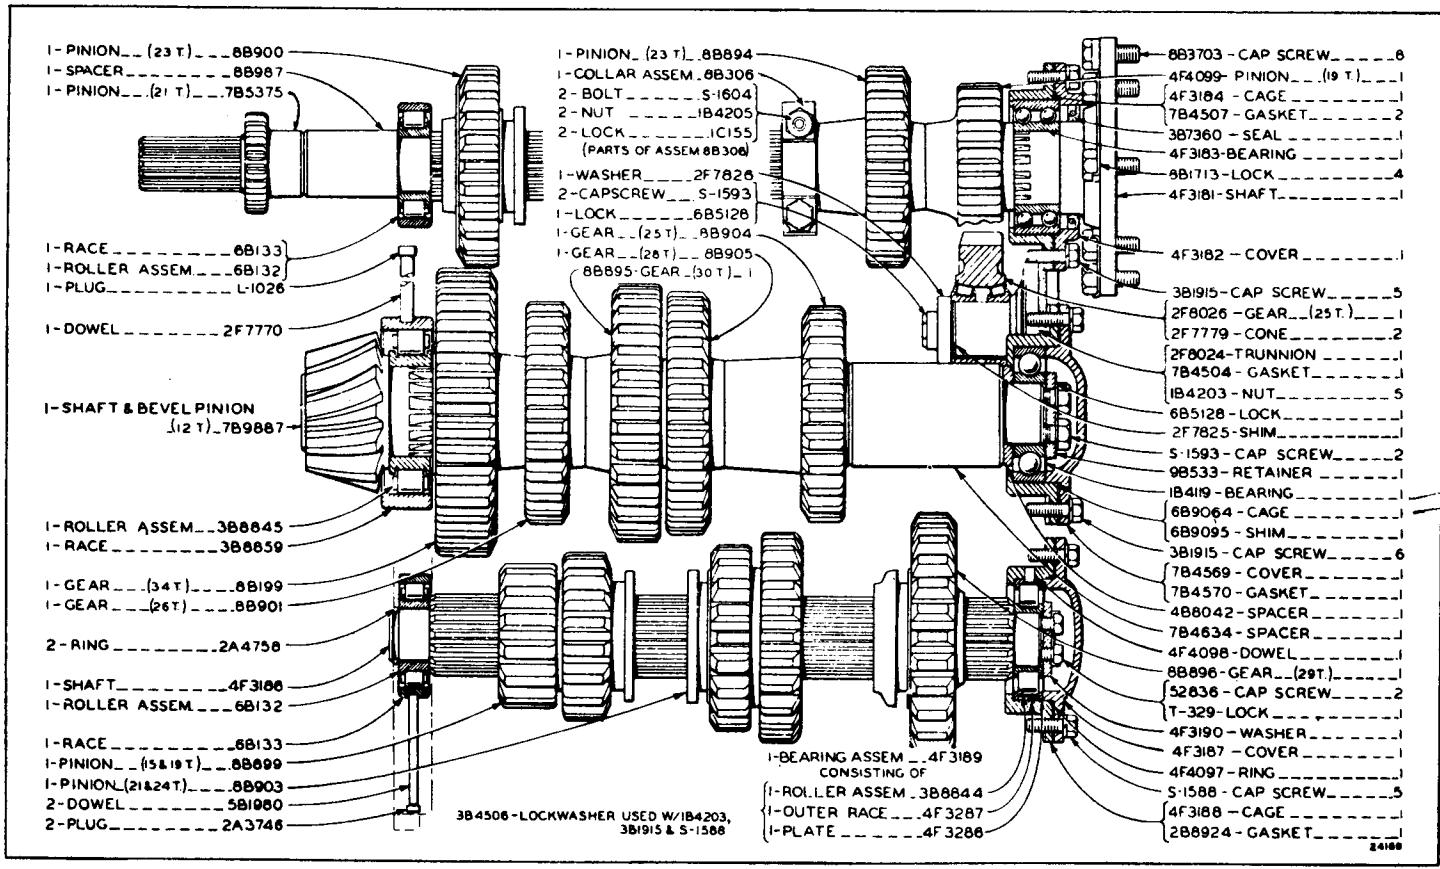

8B898 TRANSMISSION GROUP (Third Type)—Effective with Serial No. 4R3068


Provides following speeds: (Forward) 1st—1.7, 2nd—2.5, 3rd—3.0, 4th—3.7 and 5th—5.3 M.P.H. (Reverse) 1st—2.1, 2nd—3.0, 3rd—3.6 and 4th—4.6 M.P.H.

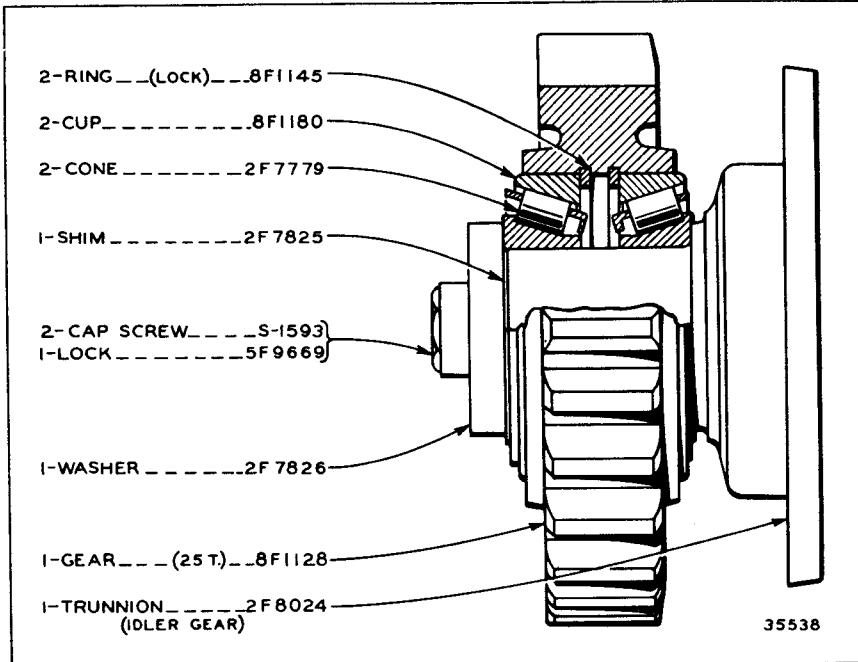**TRANSMISSION IDLER GEAR AND TRUNNION—Field Replacement**


Serial No. 4R1 to 4R1749 inclusive

For field replacement of 6B8978 Idler Gear and 8B986 Trunnion

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

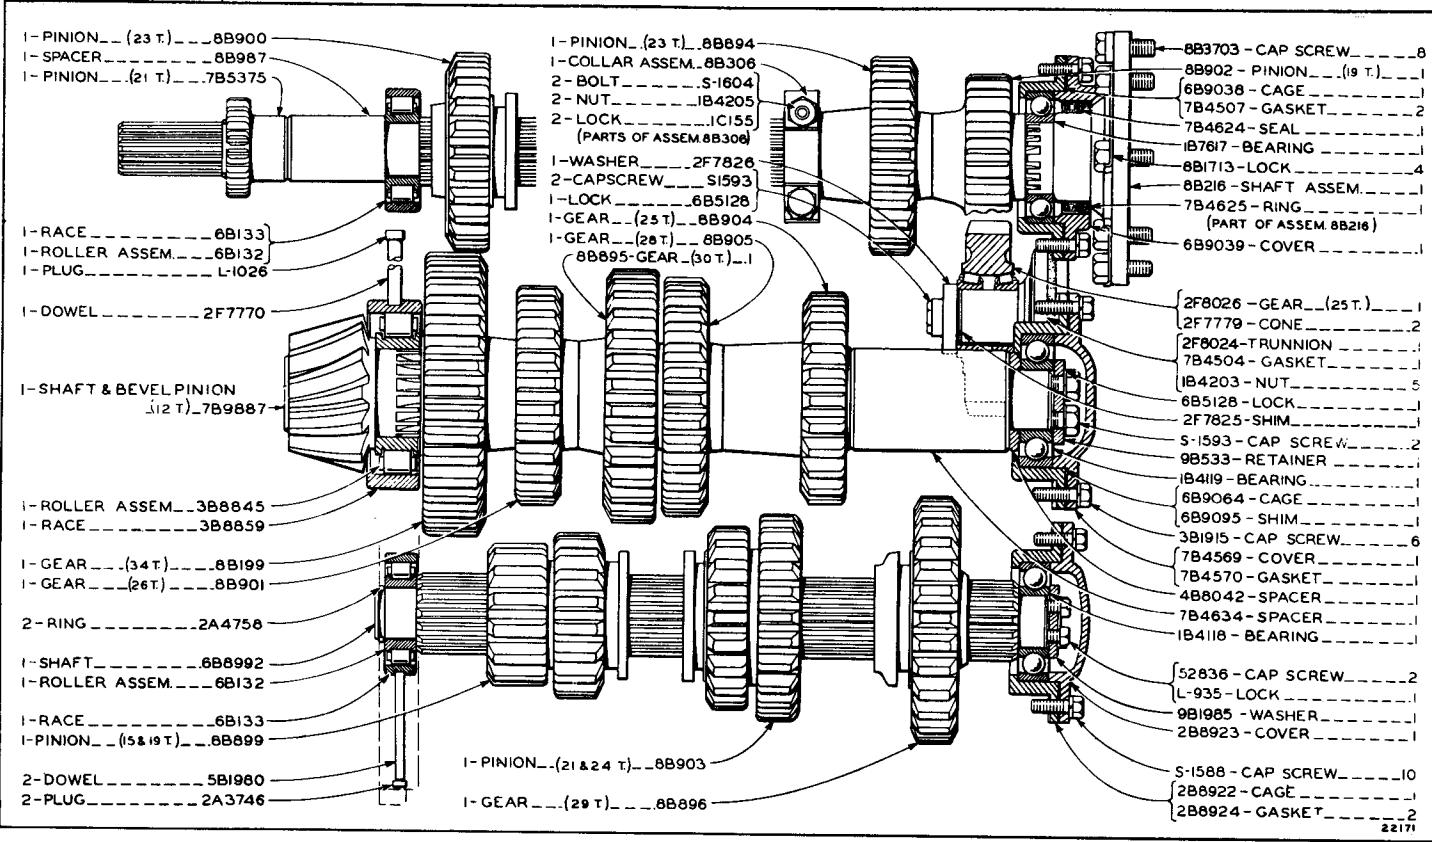


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

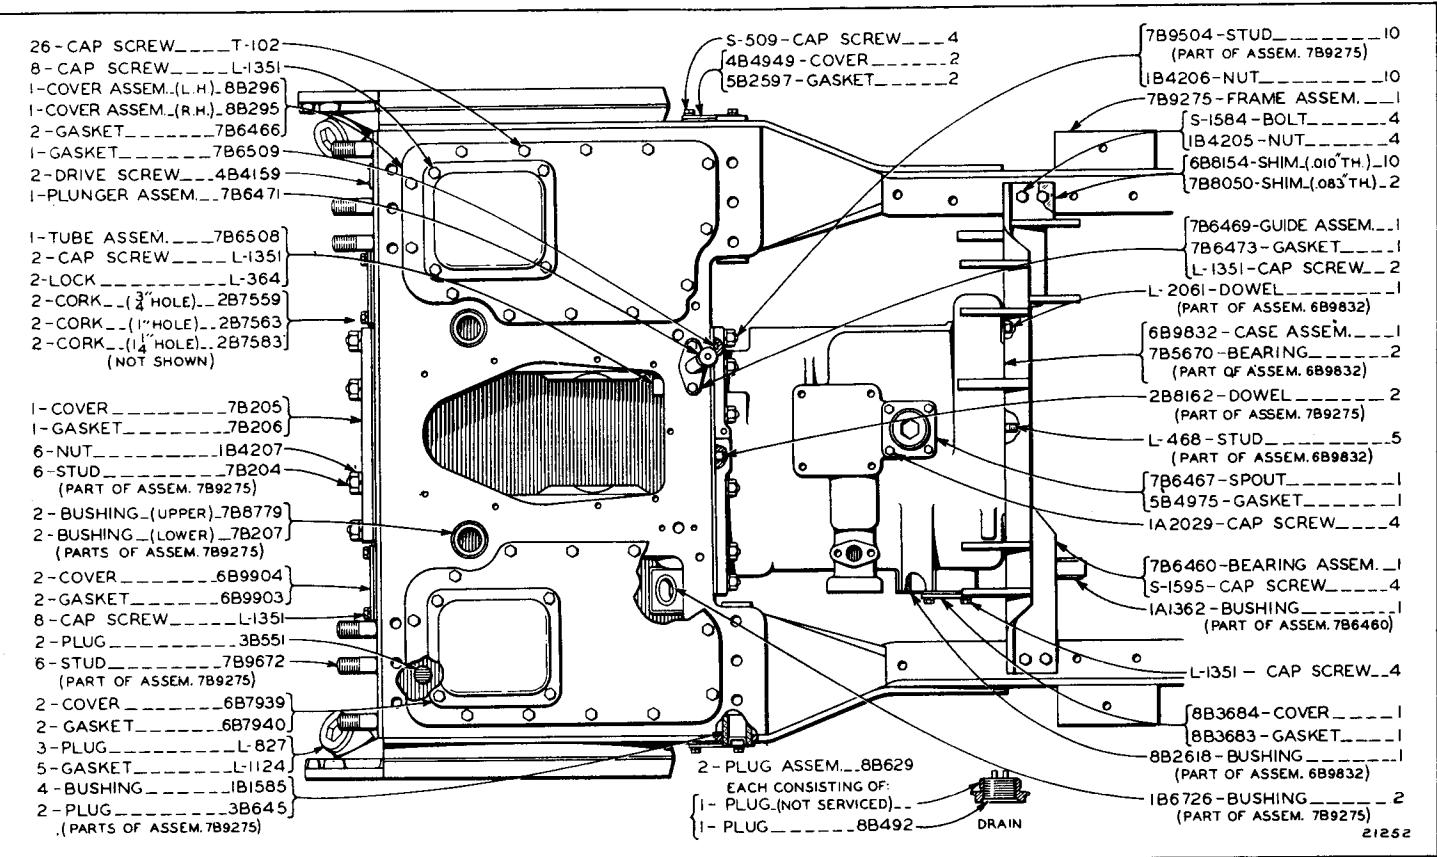


TRANSMISSION CASE AND COVERS
Serial No. 4R1 to 4R548 Inclusive

INSERT BETWEEN PAGE 88 & 89 IN FORM 8885--D6 TRACTOR (74 Inch Gauge)

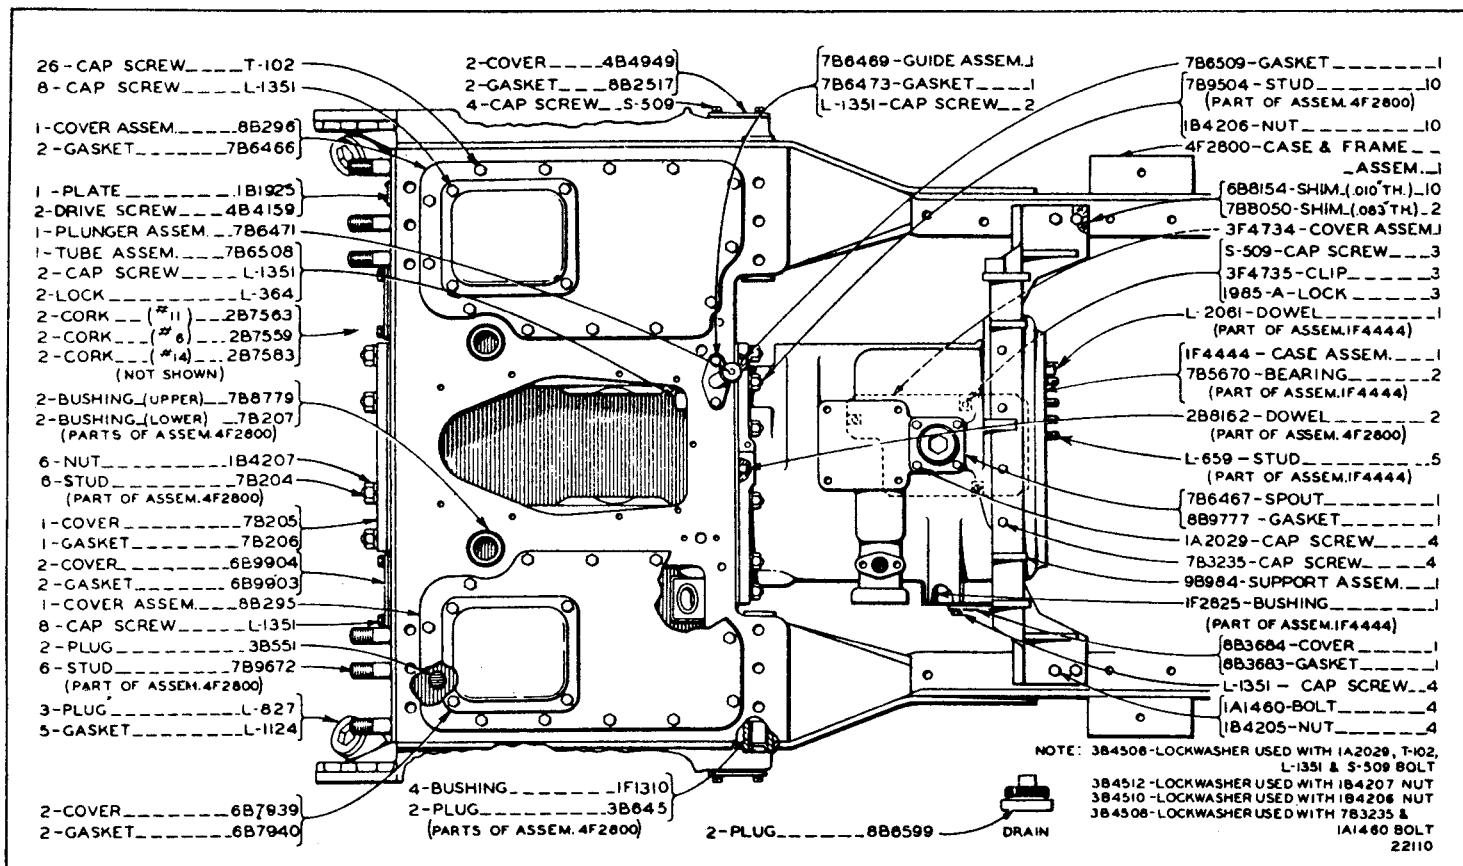


TRANSMISSION CASE AND COVERS
Effective with Serial No. 4R2353

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

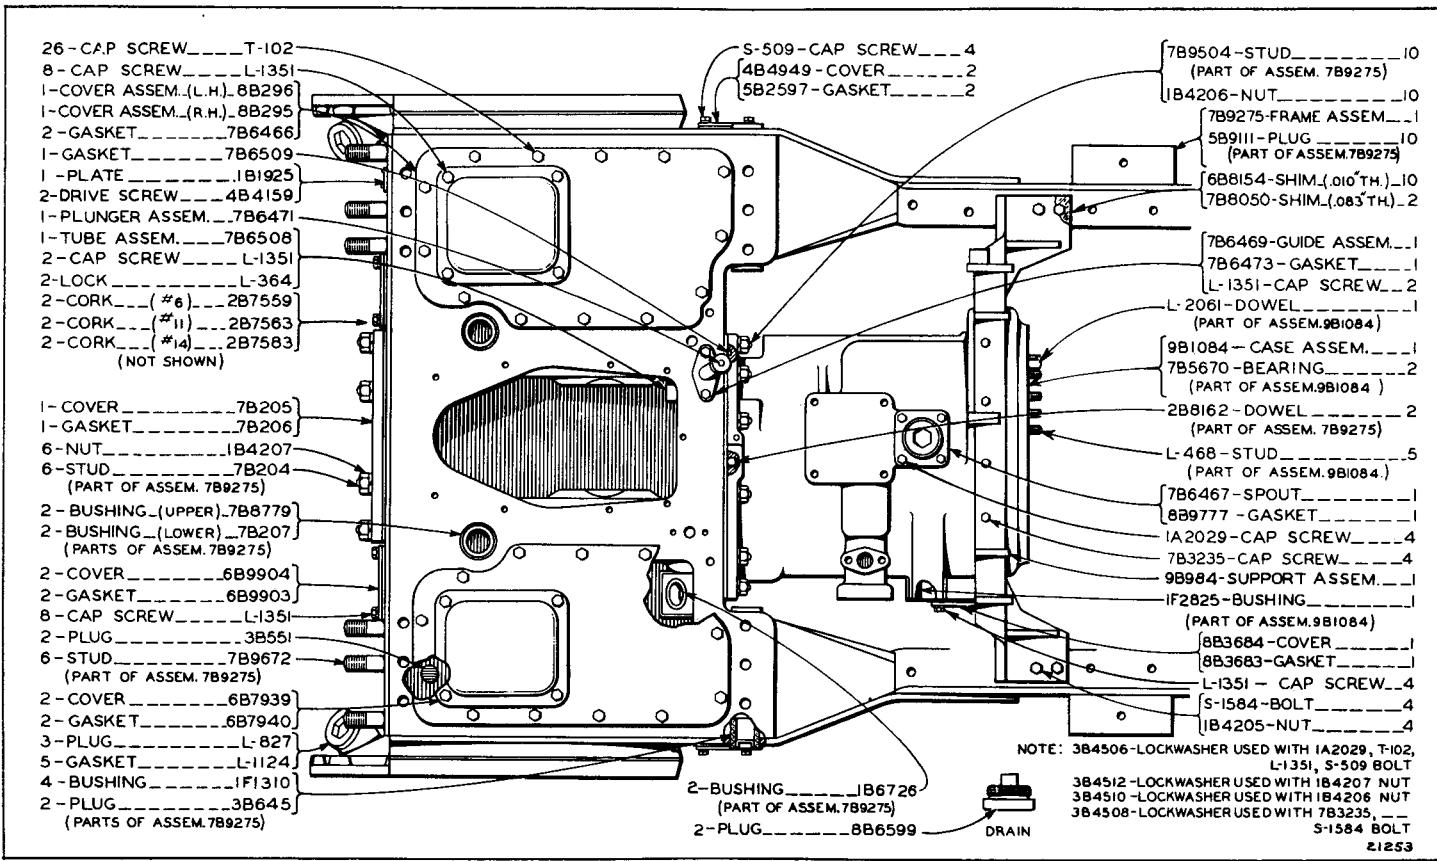

TRANSMISSION CASE AND COVERS
Serial No. 4R549 to 4R2352 inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

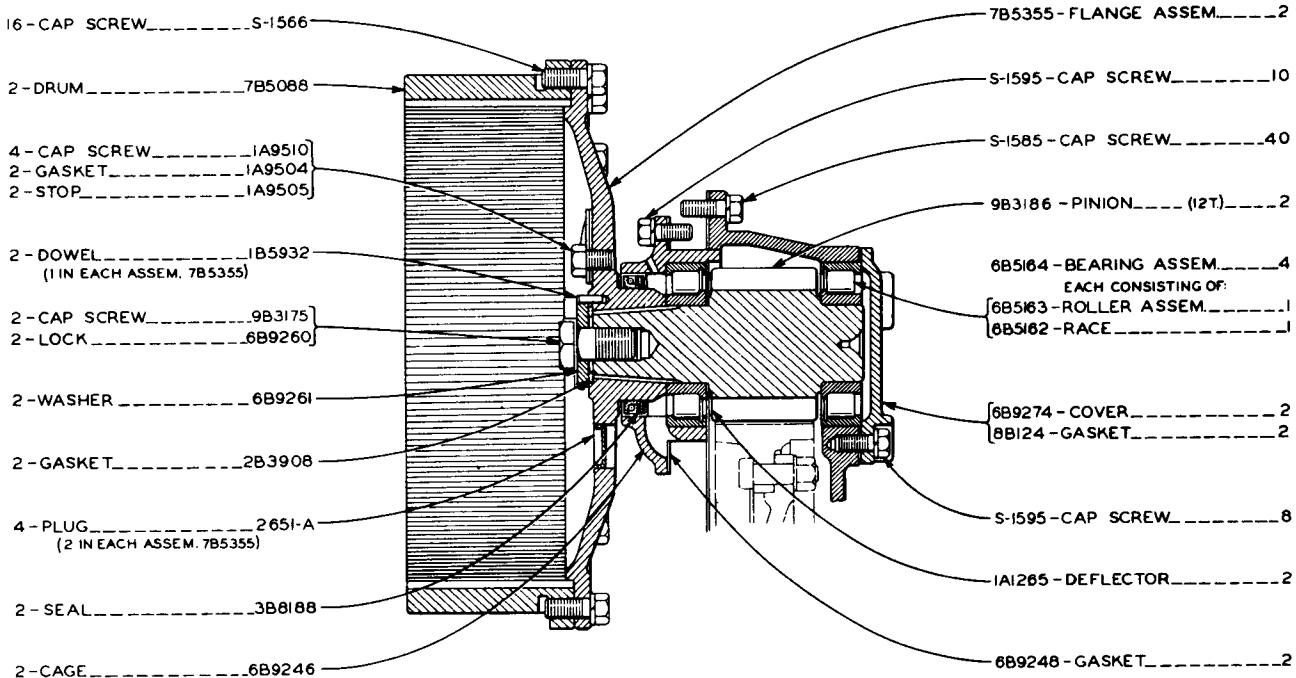

18122


FINAL DRIVE
Serial No. 4R1 to 4R600 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

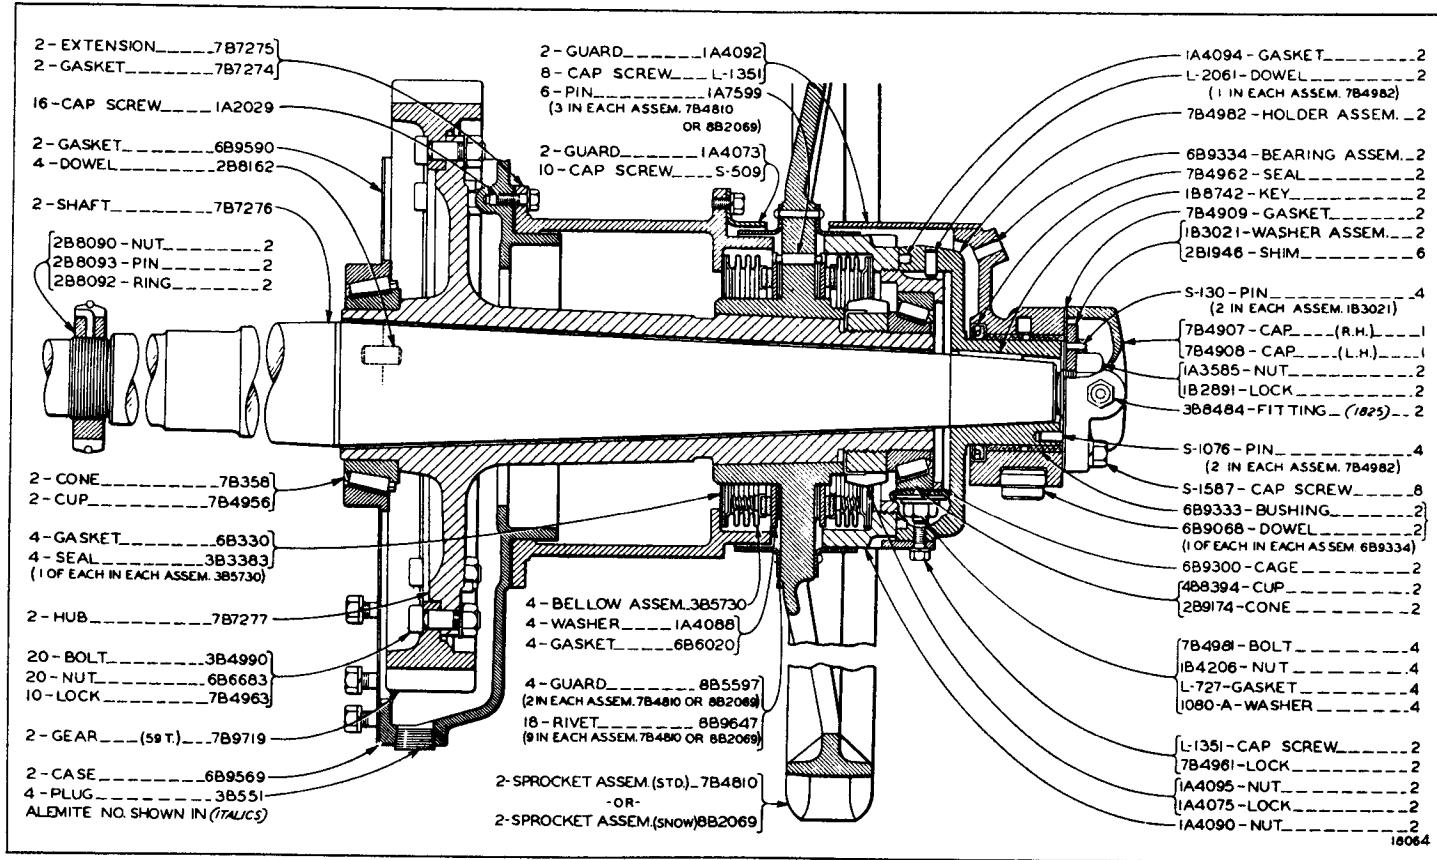

FINAL DRIVE
Serial No. 4R1 to 4R600 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

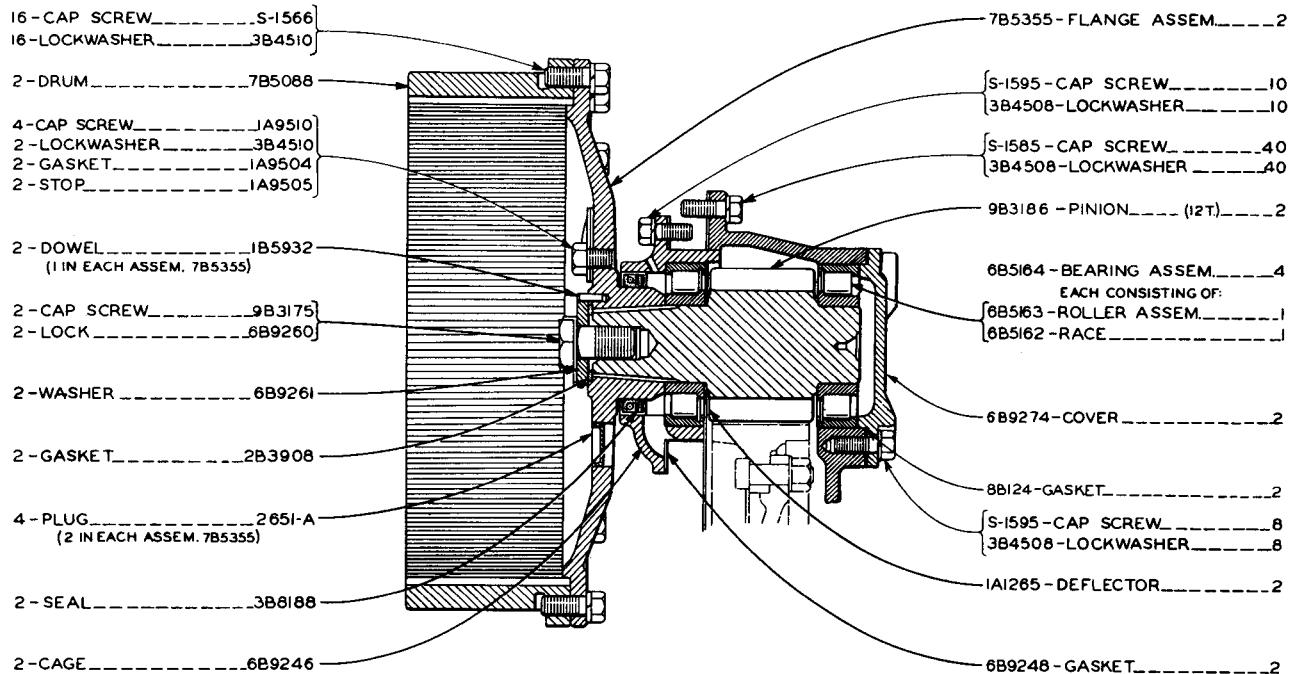

19485

FINAL DRIVE
Serial No. 4R601 to 4R771 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

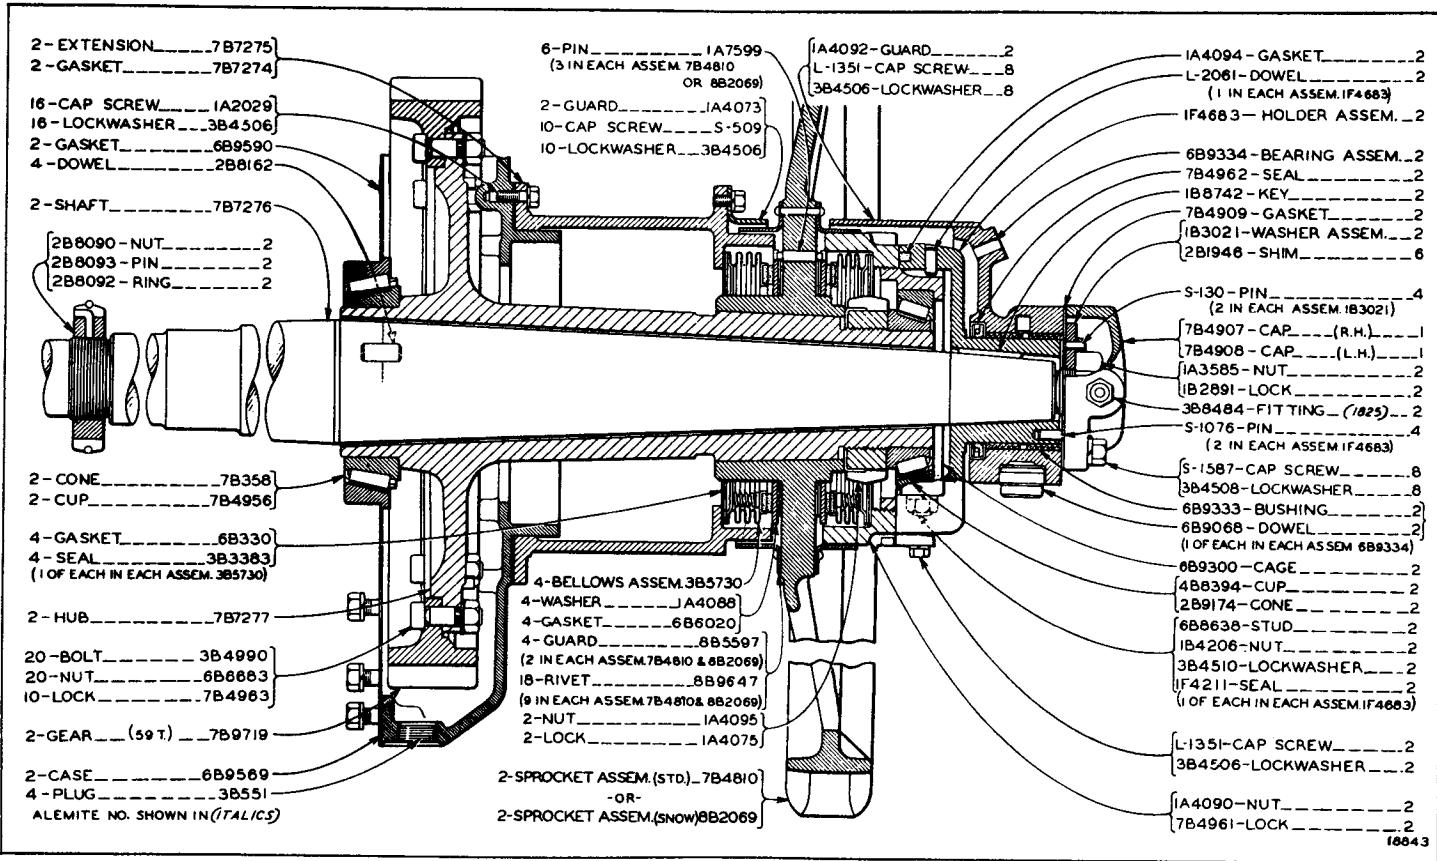

FINAL DRIVE

Serial No. 4R601 to 4R639 Inclusive and 4R738 to 4R771 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

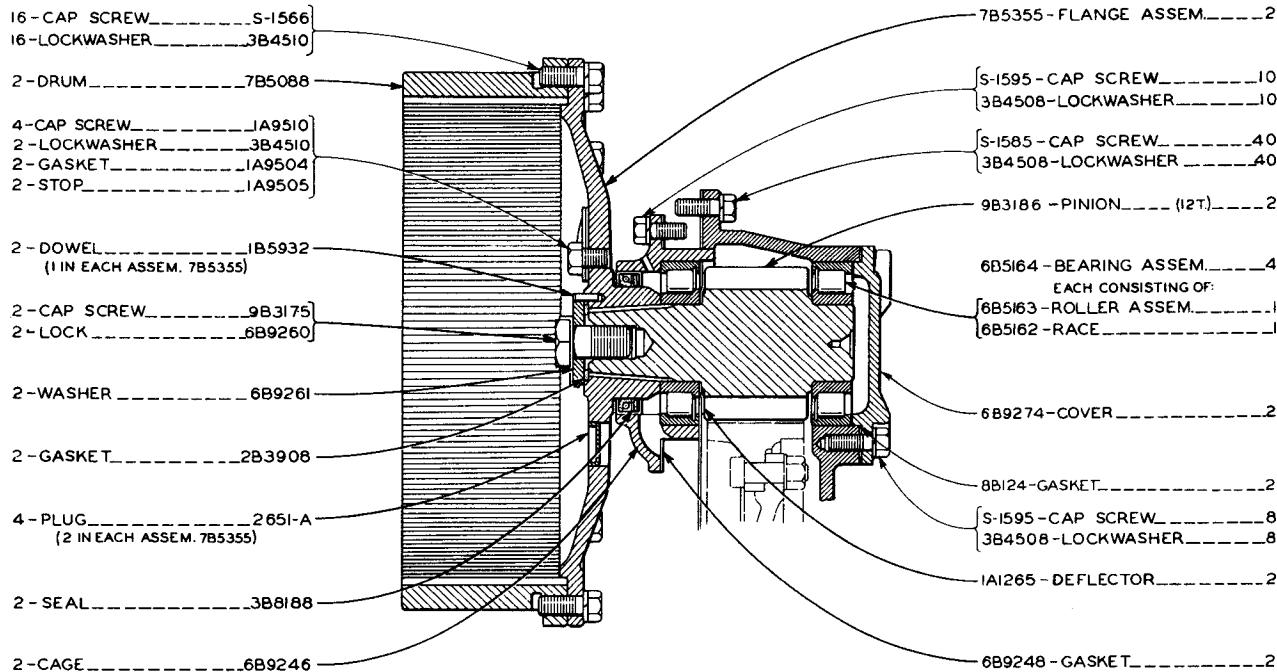

19485


FINAL DRIVE
Serial No. 4R640 to 4R737 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

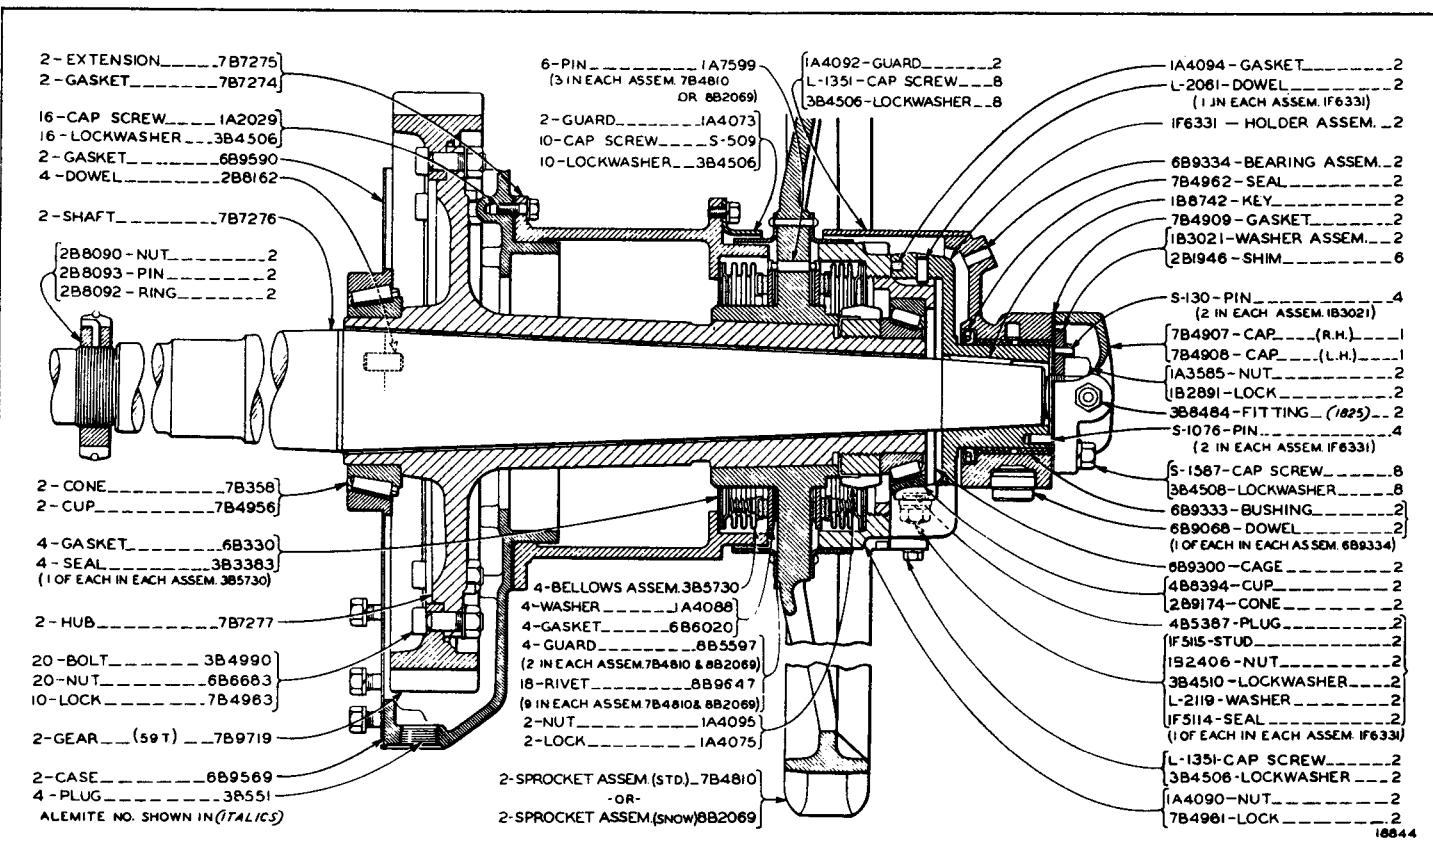

FINAL DRIVE
Serial No. 4R640 to 4R737 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

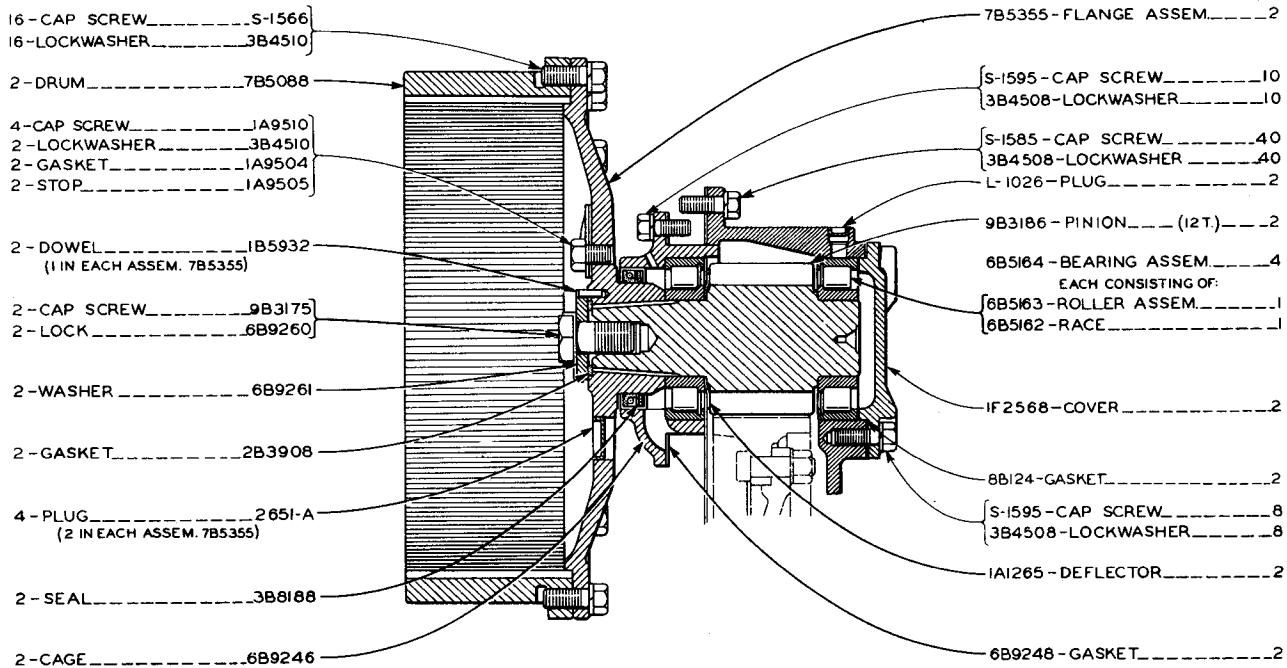


21307

FINAL DRIVE
Serial No. 4R772 to 4R1003 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

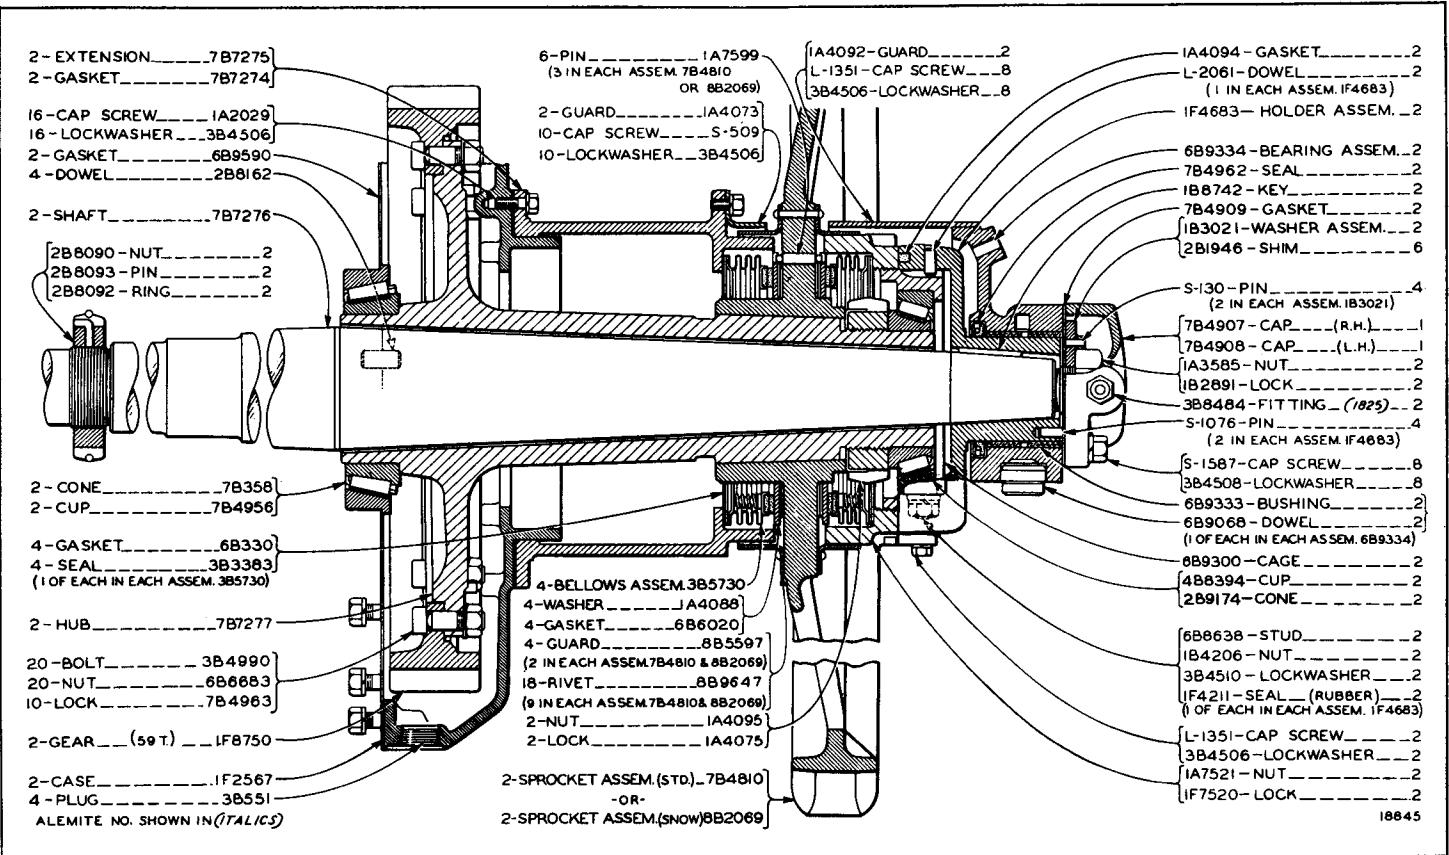


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

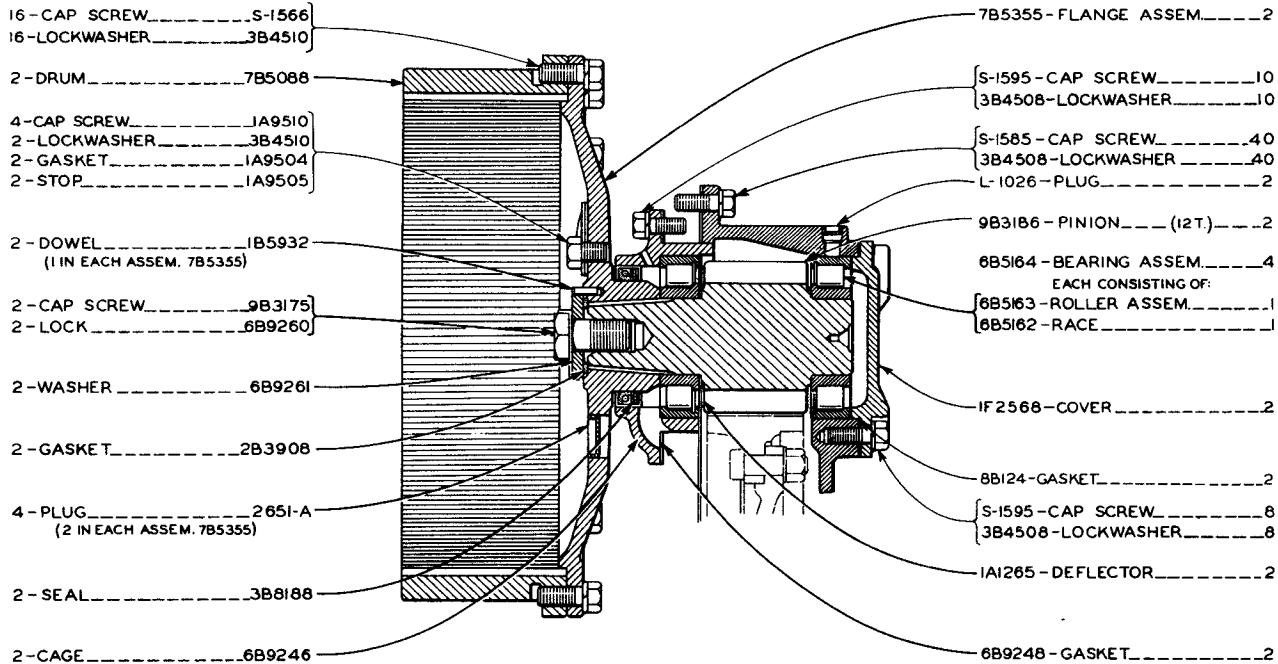


21307

FINAL DRIVE
Serial No. 4R1004 to 4R2265 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

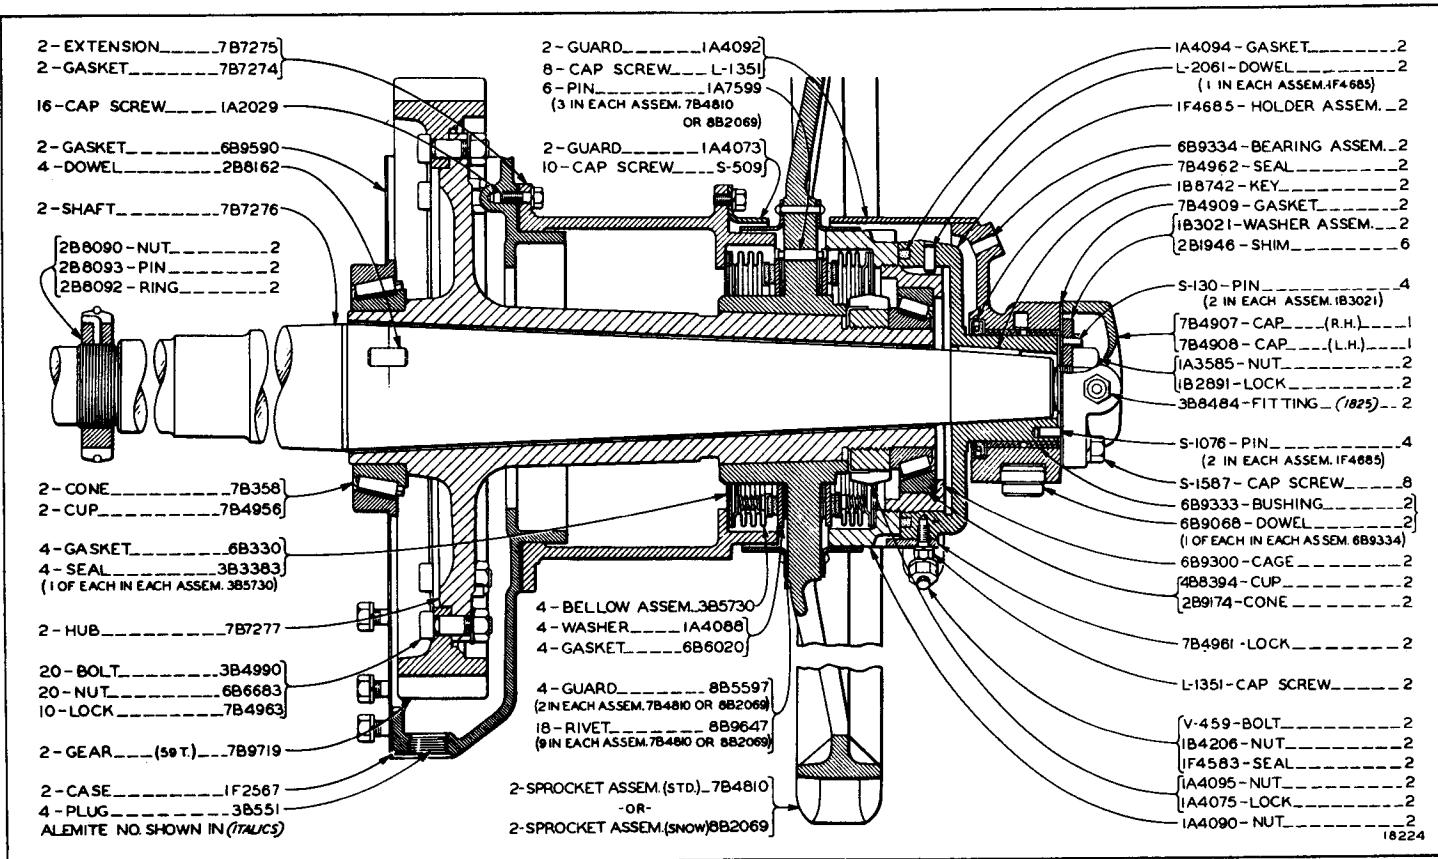


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

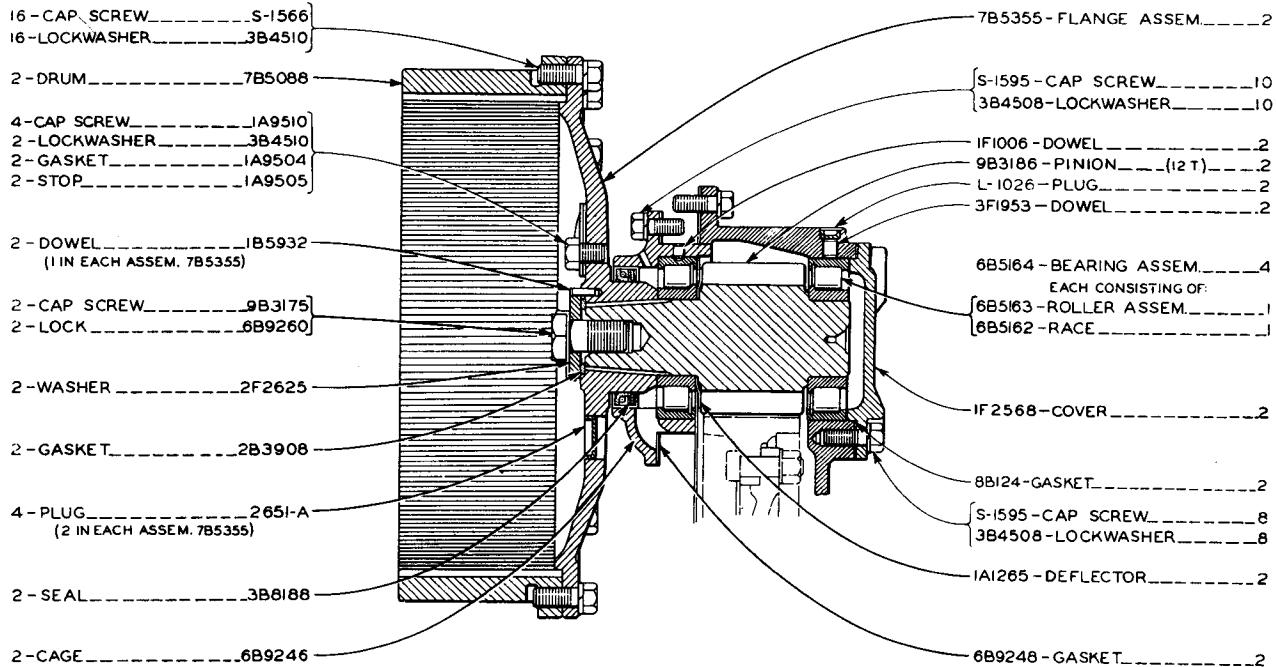

21400

FINAL DRIVE
Effective with Serial No. 4R2266


INSERT BETWEEN PAGE 100 & 101 IN FORM 8885—D6 TRACTOR (74" Gauge)

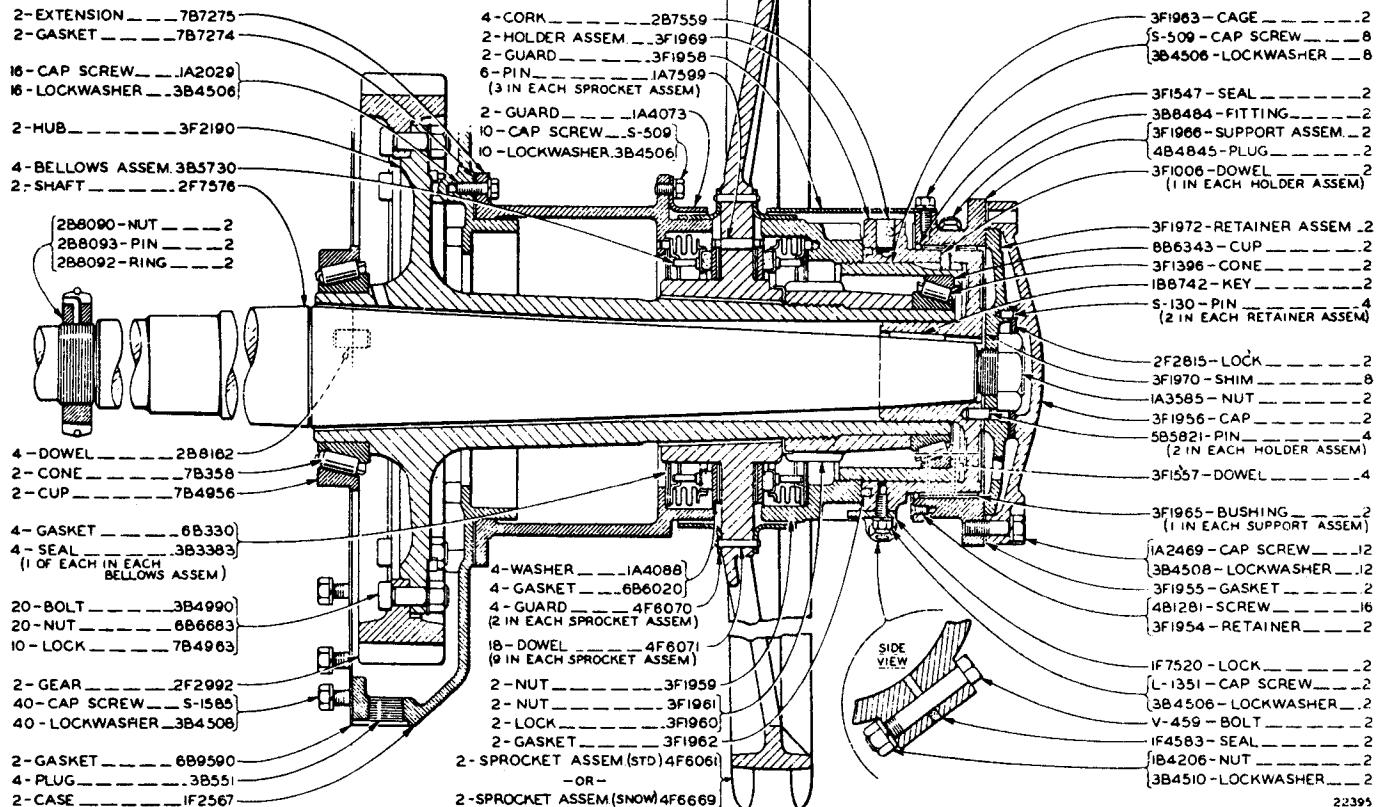

22395


FINAL DRIVE
Effective with Serial No. 4R3006

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

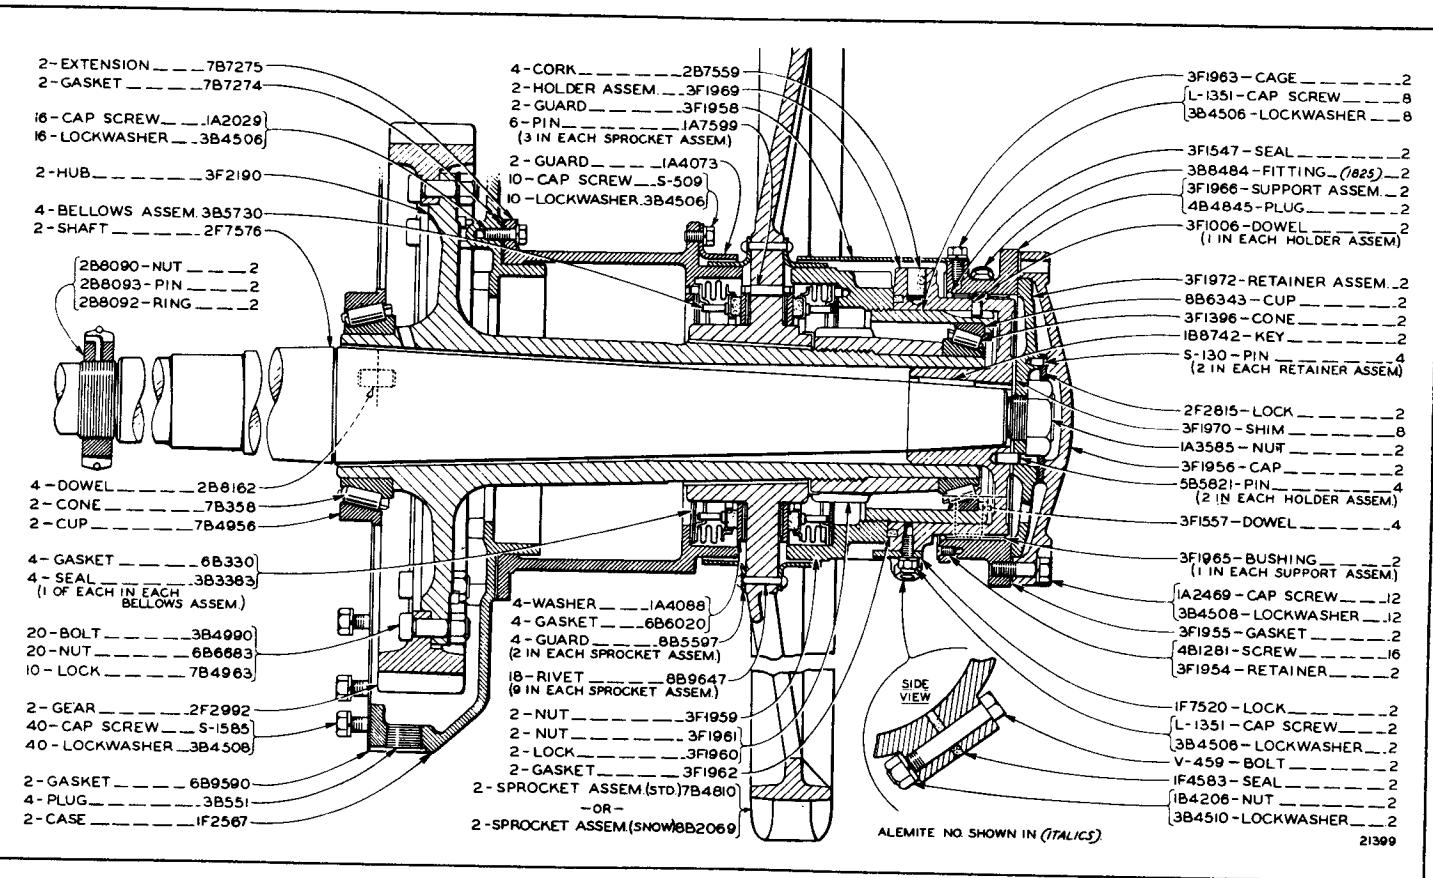


FINAL DRIVE
Serial No. 4R2266 to 4R3005 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

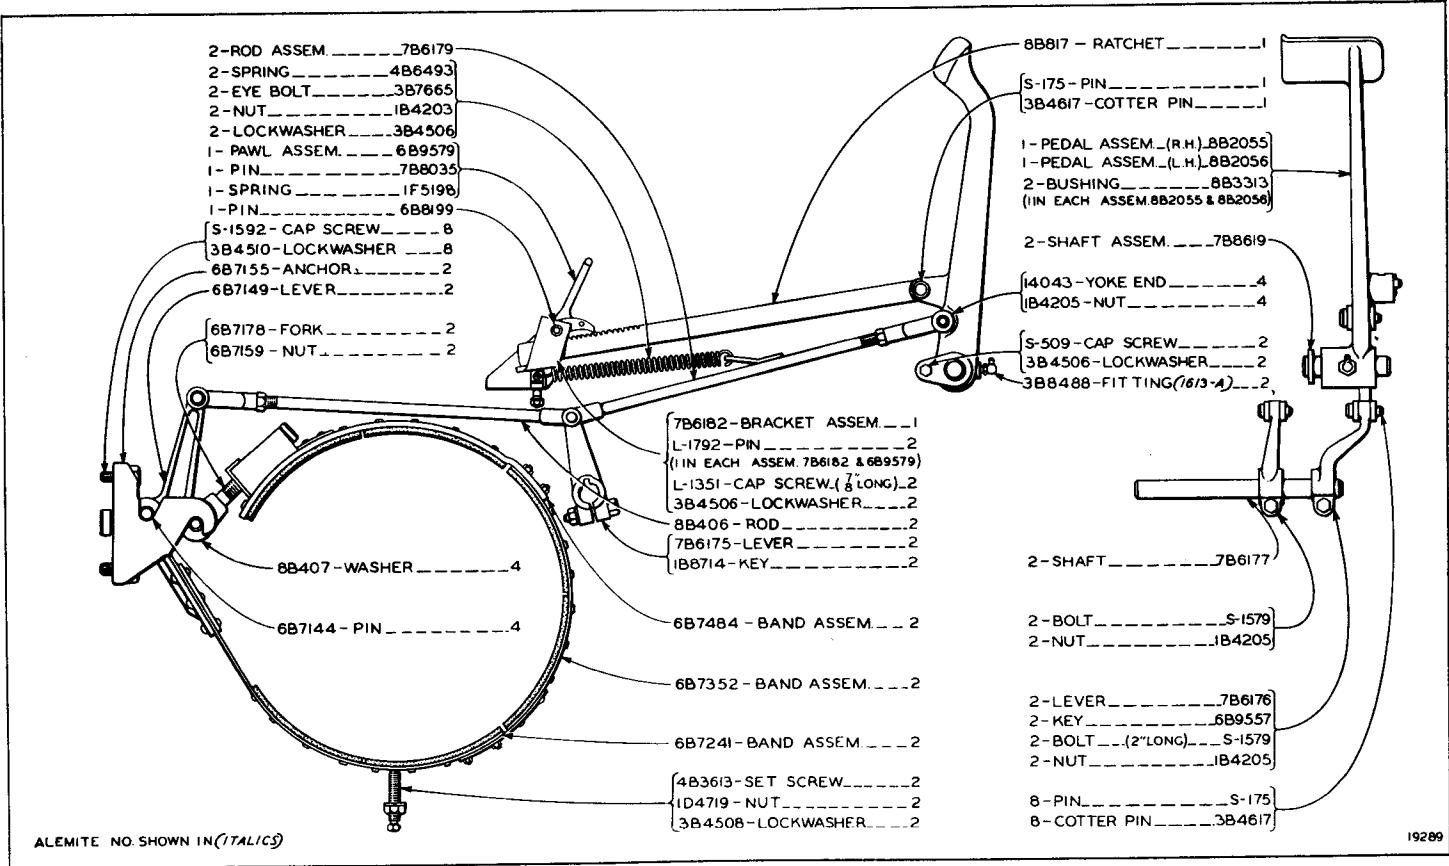


BRAKES

19289

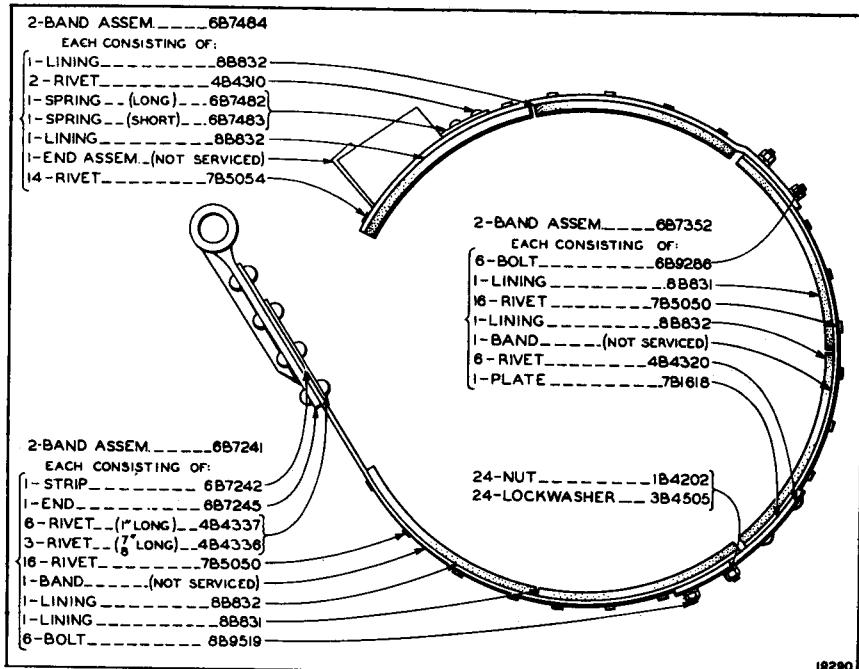


BRAKE BAND ASSEMBLIES

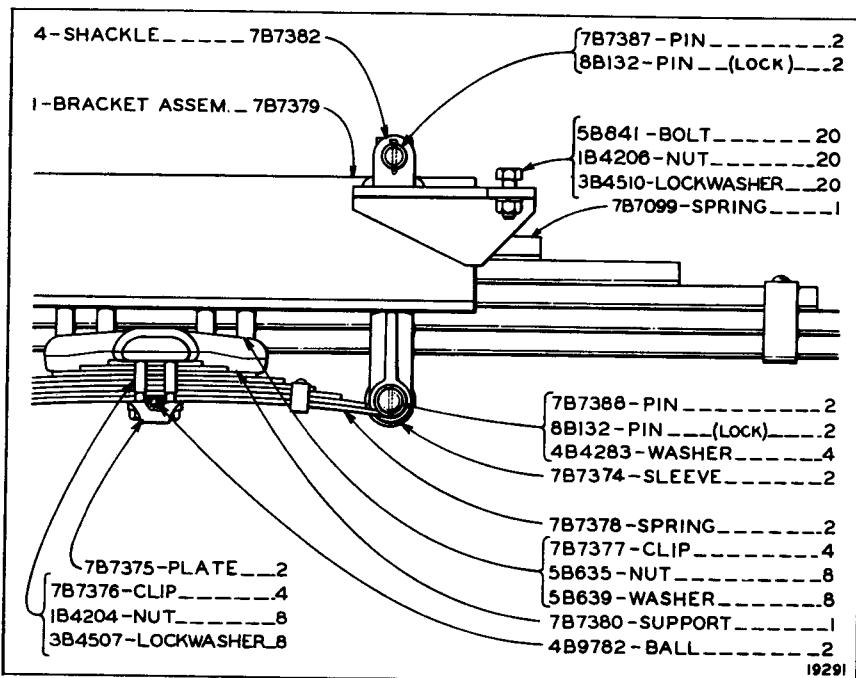


EQUALIZER SPRING
 Serial No. 4R1 to 4R1386 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

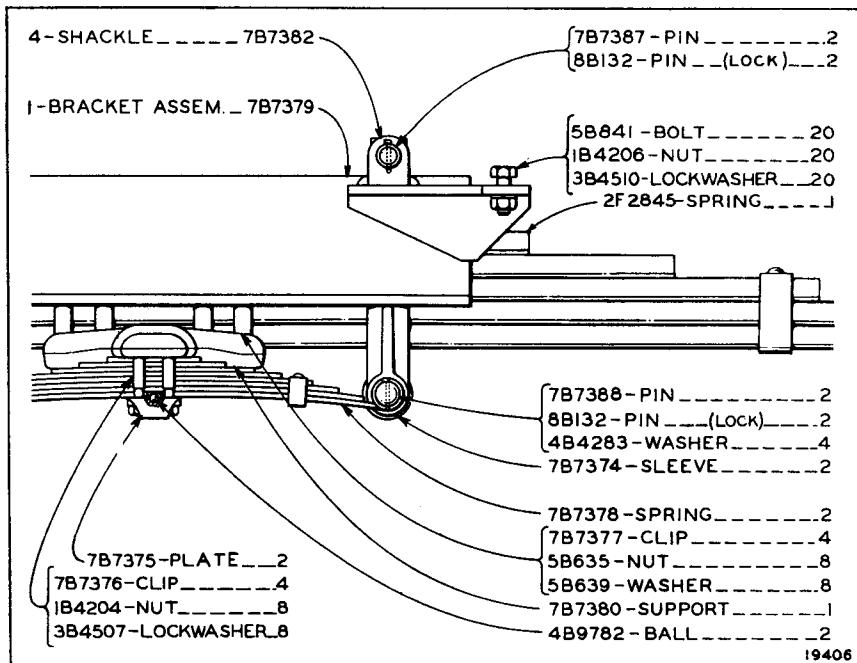


EQUALIZER SPRING
Effective with Serial No. 4R1387

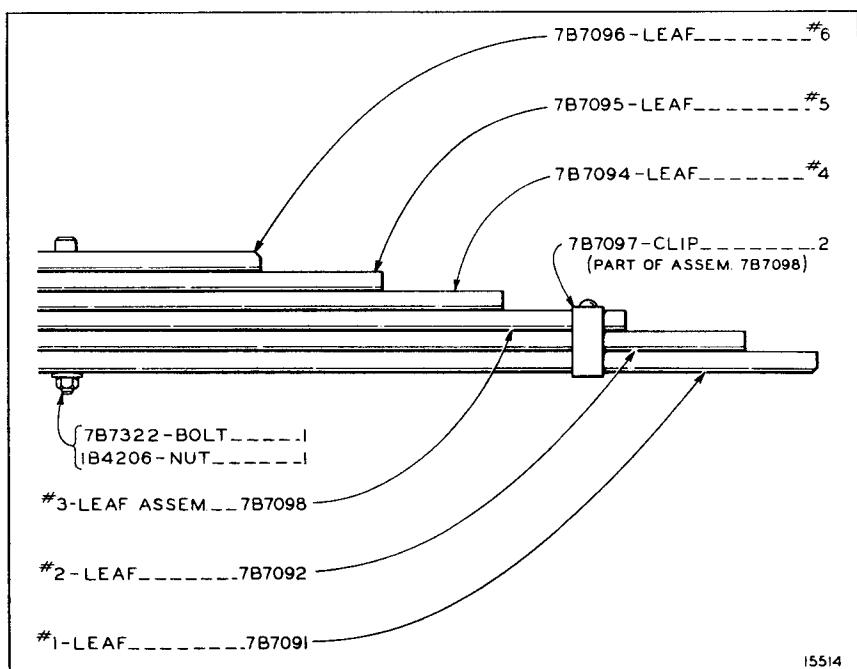

7B7099 SPRING
Serial No. 4R1 to 4R1386 Inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

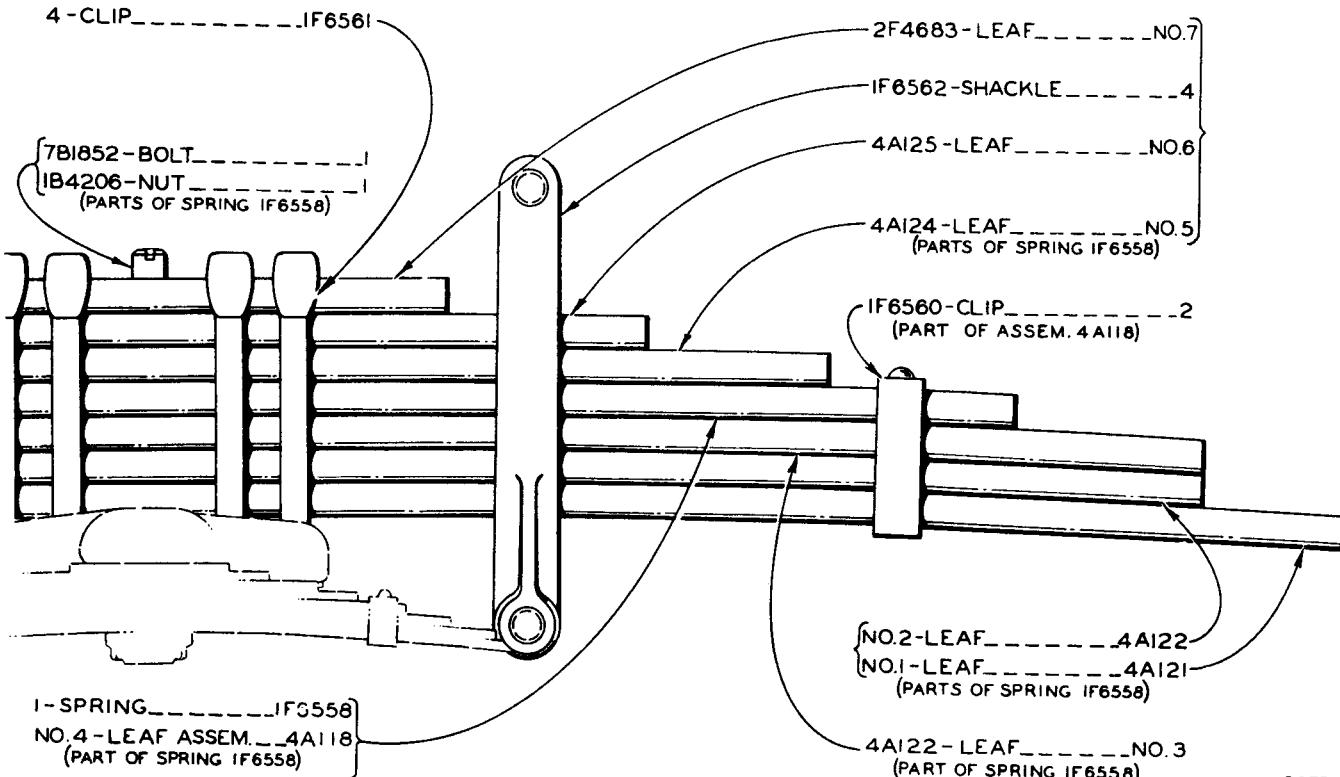


30770

5F4200 EQUALIZER SPRING GROUP—Heavy Duty
For use on Tractors equipped with Bulldozer or other front-mounted equipment

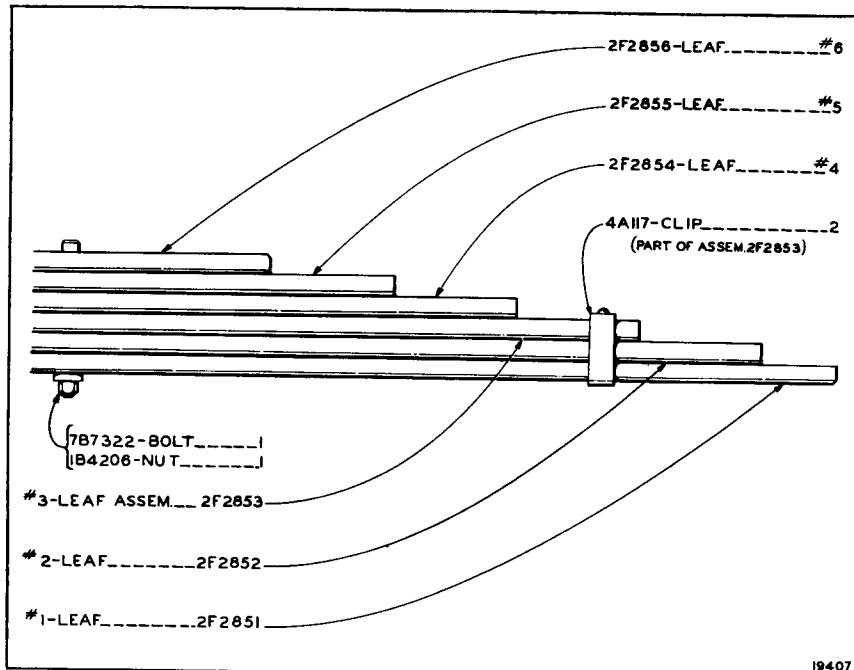


2F2845 SPRING
Effective with Serial No. 4R1387

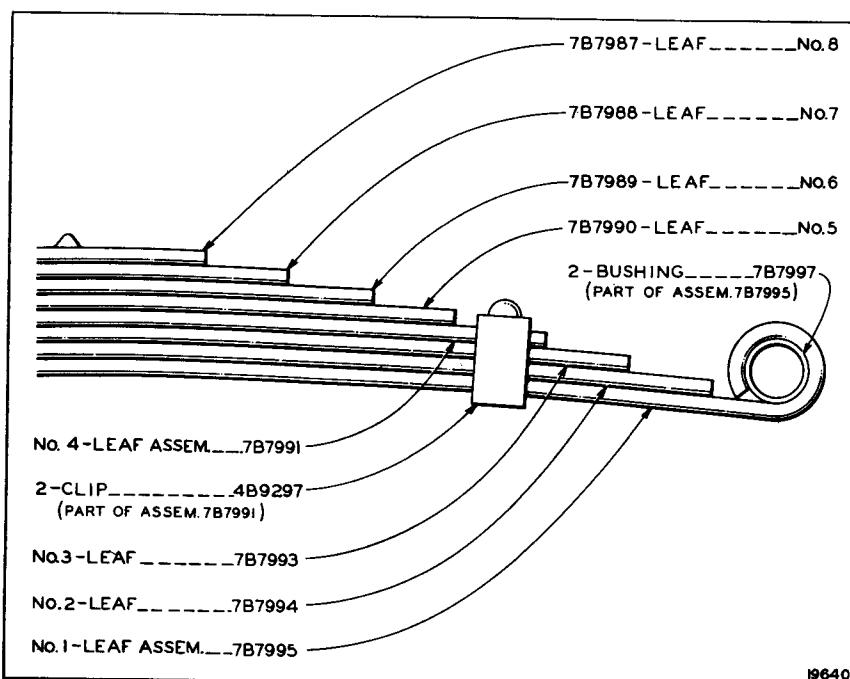

7B7378 SPRING

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

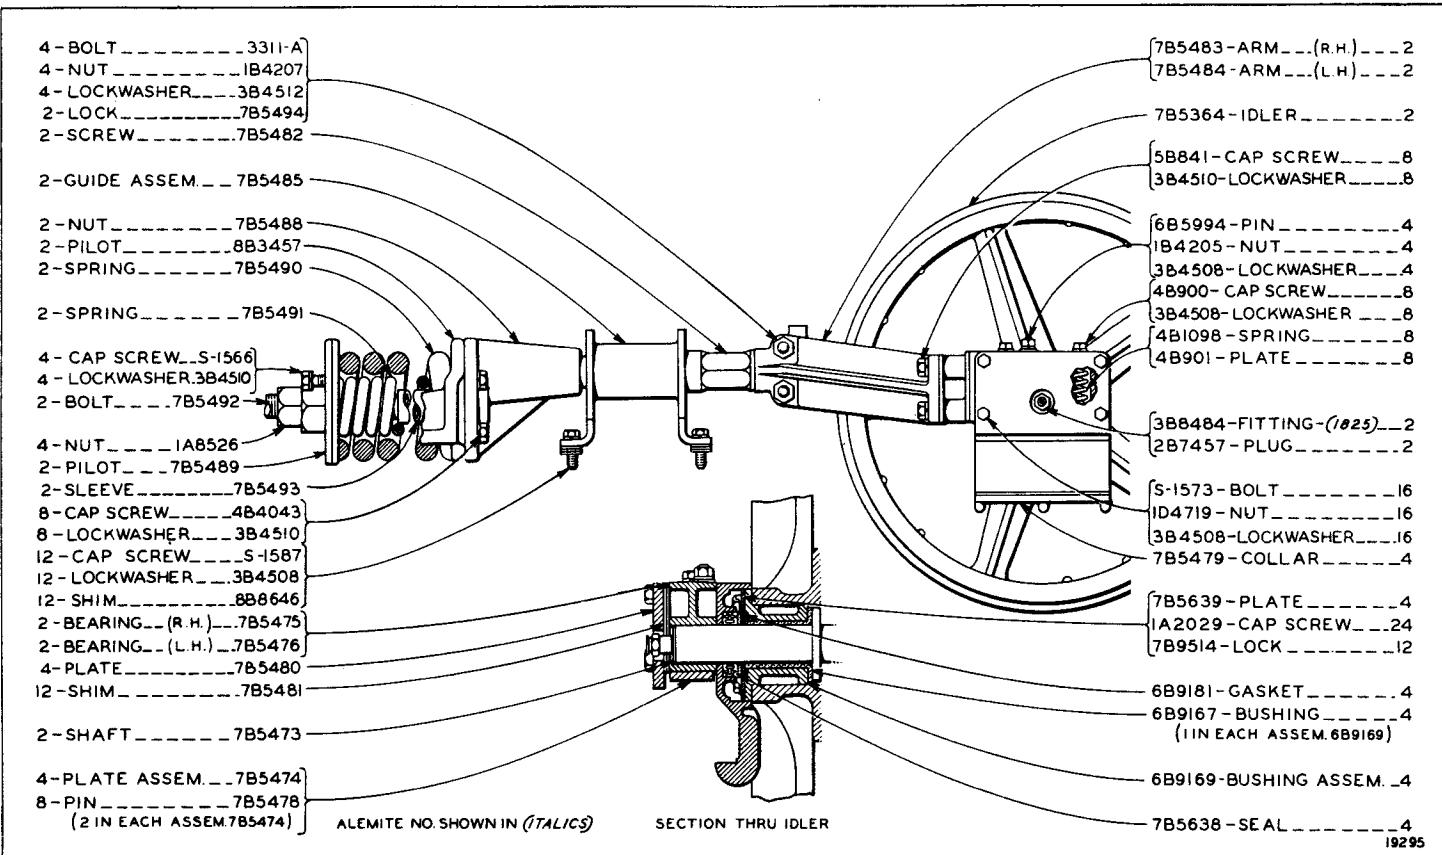


FRONT IDLER


Serial No. 4R1 to 4R1250 Inclusive
Refer also to Page 141 for special parts

INSERT BETWEEN PAGES 106 & 107 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

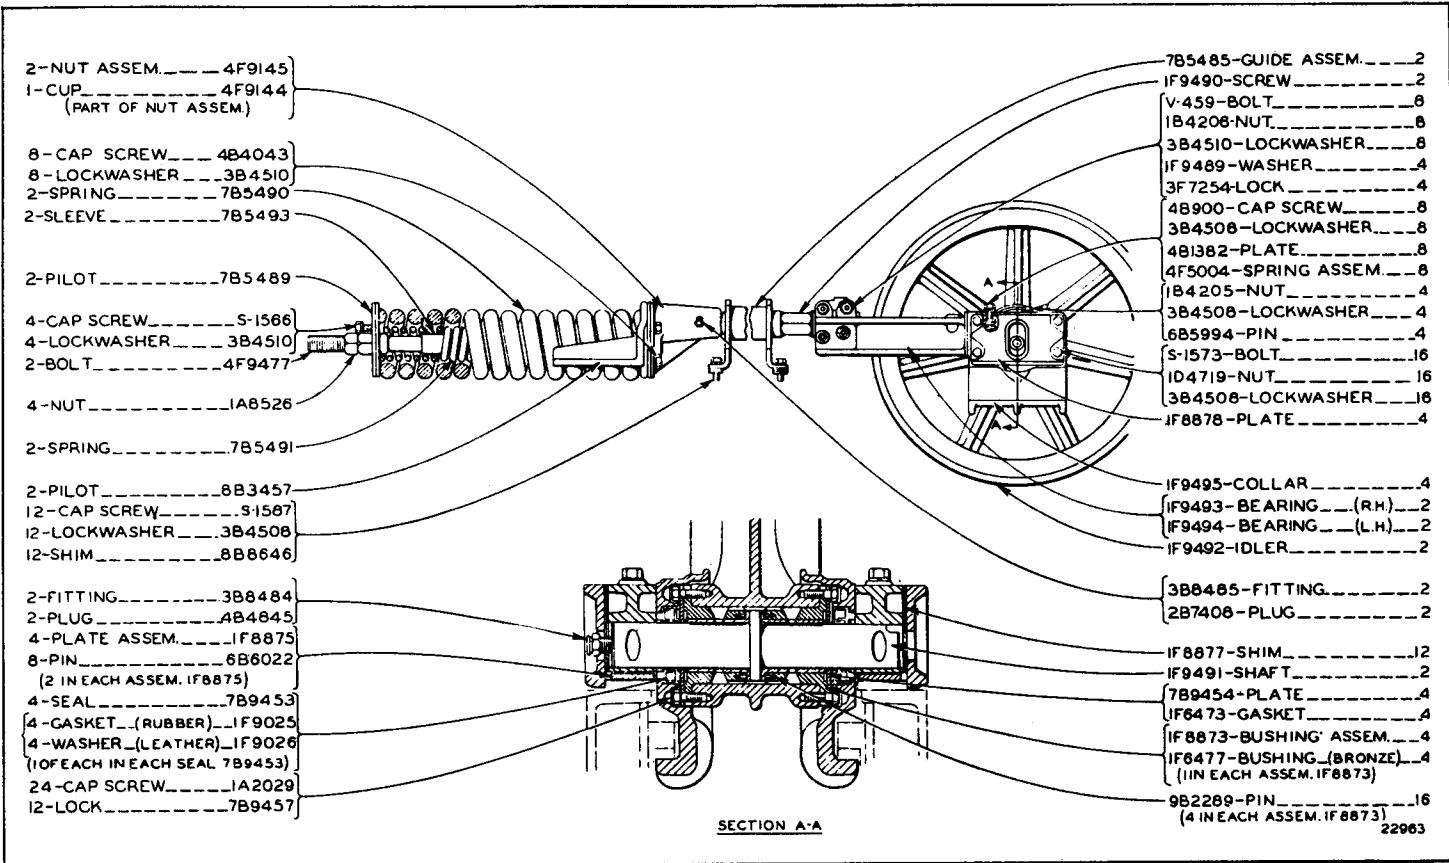


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

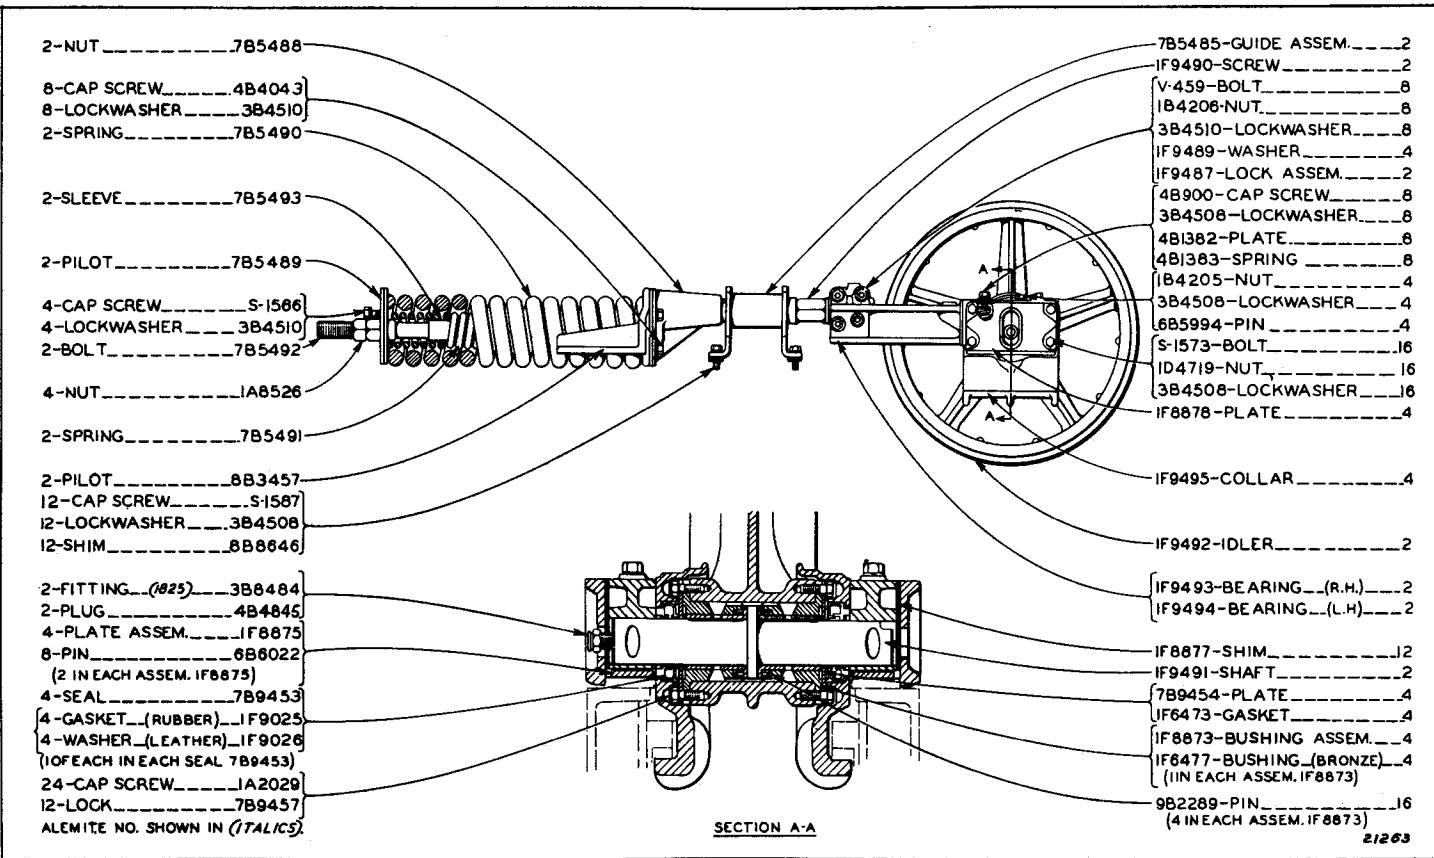

FRONT IDLER

Serial No. 4R1251 to 4R3406 inclusive
Refer also to Page 141 for special parts

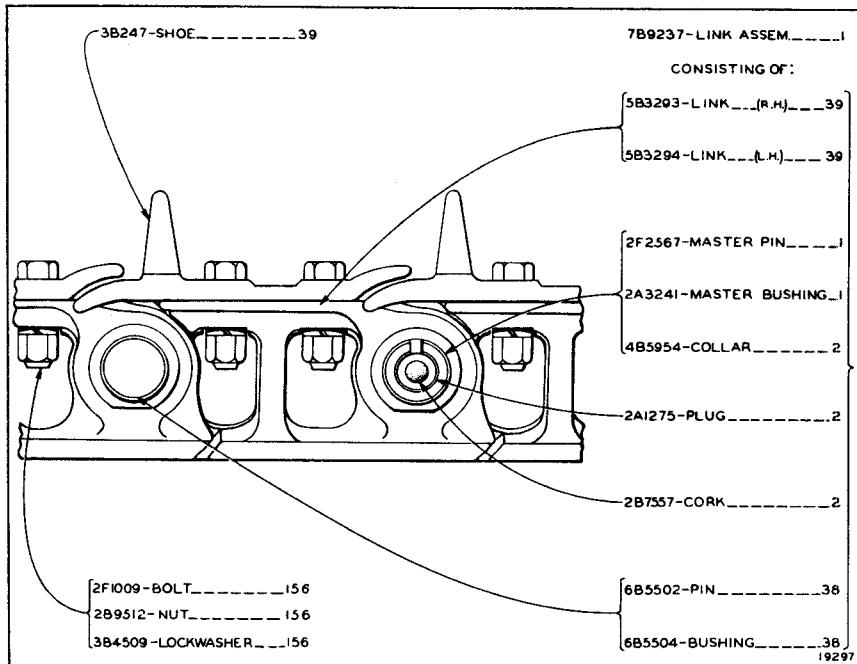

TRACK LINK ASSEMBLY (2 Assemblies Req'd.)
8B755 Track Pin and Bushing Group consists of complete
set of Pins and Bushings for one Track

Name	Complete Track Group (hardware included) 2 Req'd. per Tractor	Shoe (39 Req'd. For One Track)
16" Grouser Shoe	881383	3B248
16" Skeleton Shoe	881382	2B7448
16" Flat Shoe	881381	2B7314
16" Semi-Skeleton Snow Shoe H.T. (2" Grouser)	881379	3B2957 (S.S. - 19 Req'd.) 3B2958 (D.S. - 20 Req'd.)
16" Semi-Skeleton Snow Shoe H.T. (3" Grouser)	881380	6B7194 (S.S. - 19 Req'd.) 6B7193 (D.S. - 20 Req'd.)
18" Grouser Shoe H.T.	881384	3B247
20" Grouser Shoe H.T.	881385	3B254
24" Grouser Shoe H.T.	881386	3B249

2F1009 Track Shoe Bolt - 156 Req'd. for One Track

2B9512 Nut (Used with 2F1009)

 
3B4509 Lockwasher (Used with 2F1009)

H.T. - Heat Treated S.S. - Single Spike D.S. - Double Spike


21310



DIRT GROUSER




GROUSER SHOE

 

ICE GROUSER





STREET PLATE

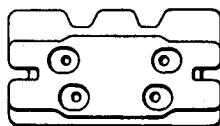


FLAT SHOE



  ICE & DIRT GROUSER

SEMI-SKELETON SNOW SHOE
(SINGLE SPIKE)

 SKELETON SHOE

SEMI-SKELETON SNOW SHOE
(DOUBLE SPIKE)

14734

TRACK SHOES, GROUSERS AND STREET PLATES

Name	Group Numbers (Hardware Included)		Grouser or Street Plate			
	Full Set	Half Set	Part Number	Full Set Quantity	Half Set Quantity	For Use On Track Shoes
Ice & Dirt Grouser	883203	883204	4B5395	78	40	3B247, 3B248, 3B249, 3B254, 3B2957, 3B2958, 6B7193, 6B7194
Street Plate	883145	883146	3B325	78	40	
Ice Grouser	883198	883199	2B7437 R.H. 2B7438 L.H.	39	20	2B7314 & 2B7448
Dirt Grouser	883201	883202	2B7357 R.H. 2B7358 L.H.	39	20	2B7314

2A3223 Bolt - 2 Req'd. for each Grouser 4B5395
S-1603 Bolt - 2 Req'd. for each Street Plate 3B325

1B4205 Nut (Used with 2A3223 & S-1603)

3B4508 Lockwasher (Used with 2A3223 & S-1603)

S-1844 Bolt - 1 Req'd. for each Grouser 2B7357, 2B7358, 2B7437 & 2B7438


1B4331 Nut (Used with S-1844)

15057 Washer (Used with S-1844)


3B4512 Lockwasher (Used with S-1844)

21311

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

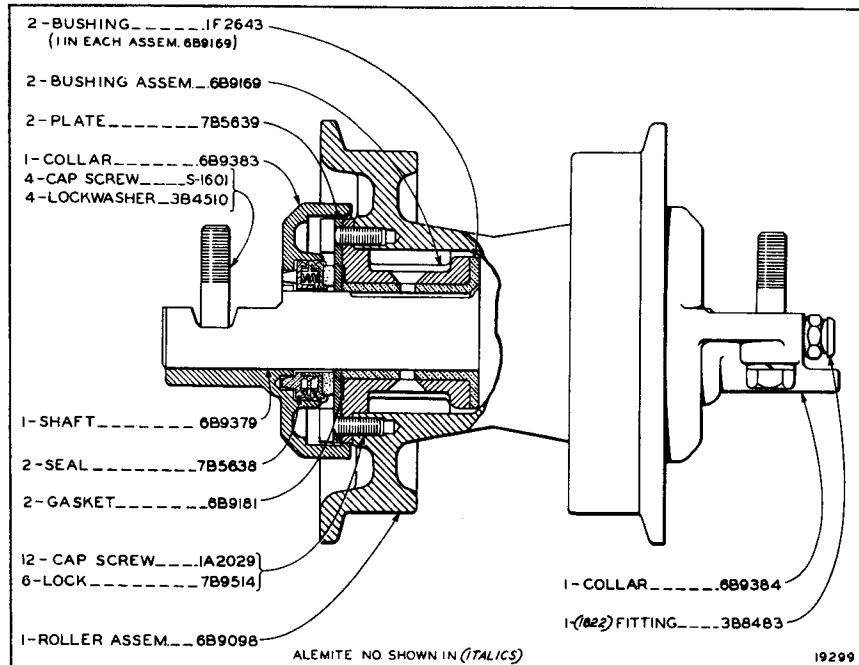



TRACK ROLLER—Single Flange (4 Groups Req'd.)
Serial No. 4R1 to 4R1252 Inclusive

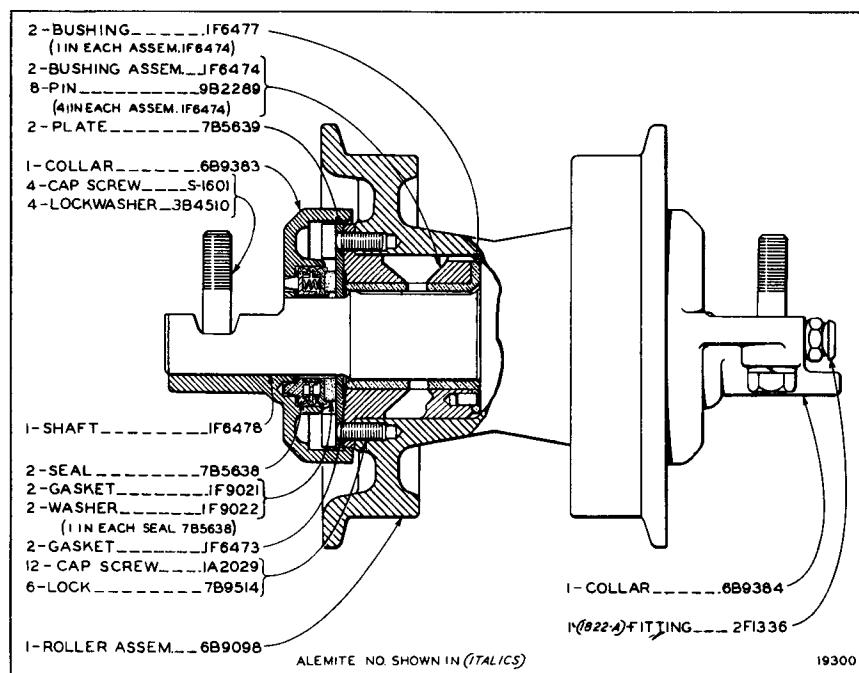


TRACK ROLLER—Single Flange (4 Groups Req'd.)
Serial No. 4R1253 to 4R2645 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGE 110 & 111 IN FORM 8885
D6 TRACTOR (74 Inch Gauge)

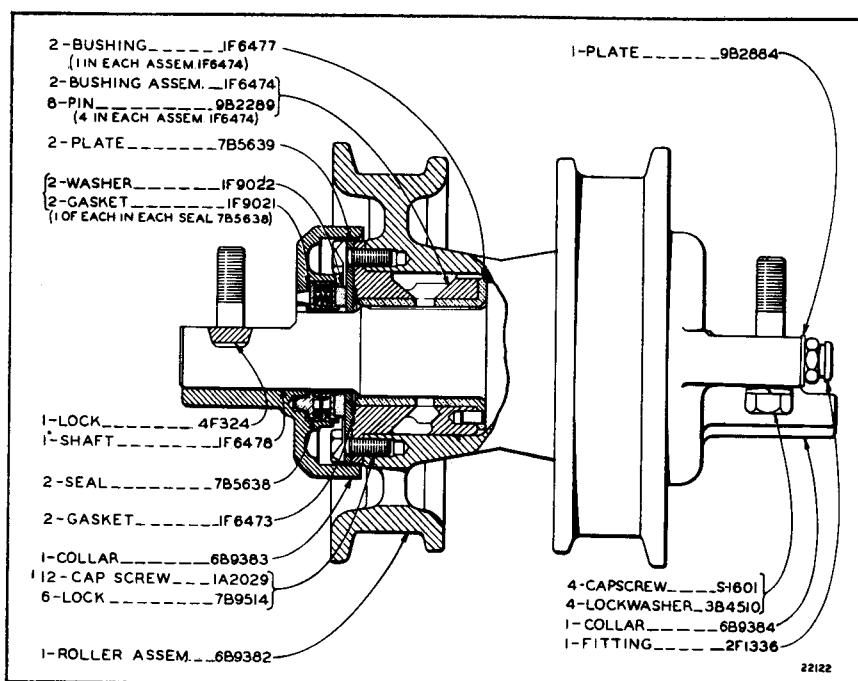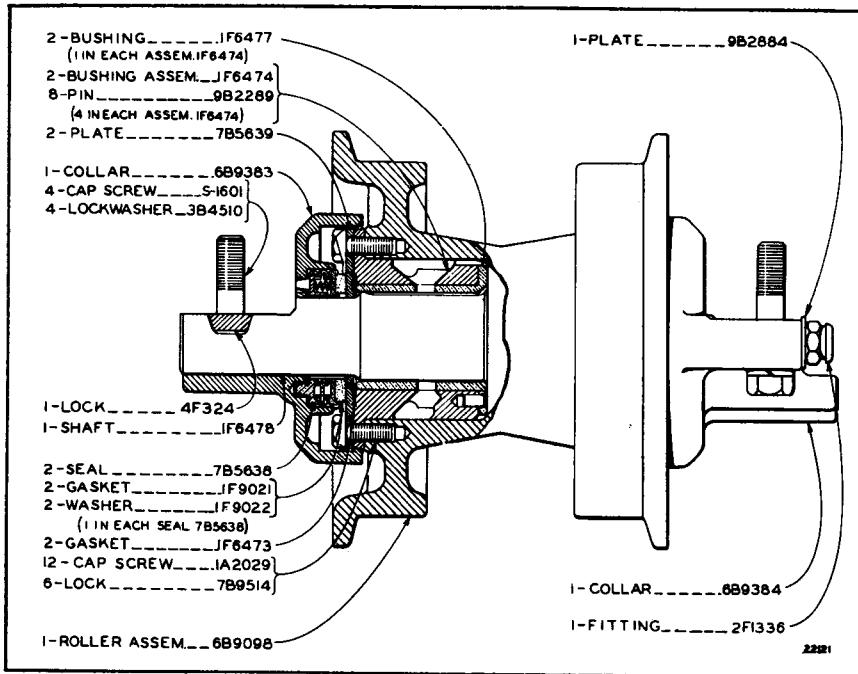

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

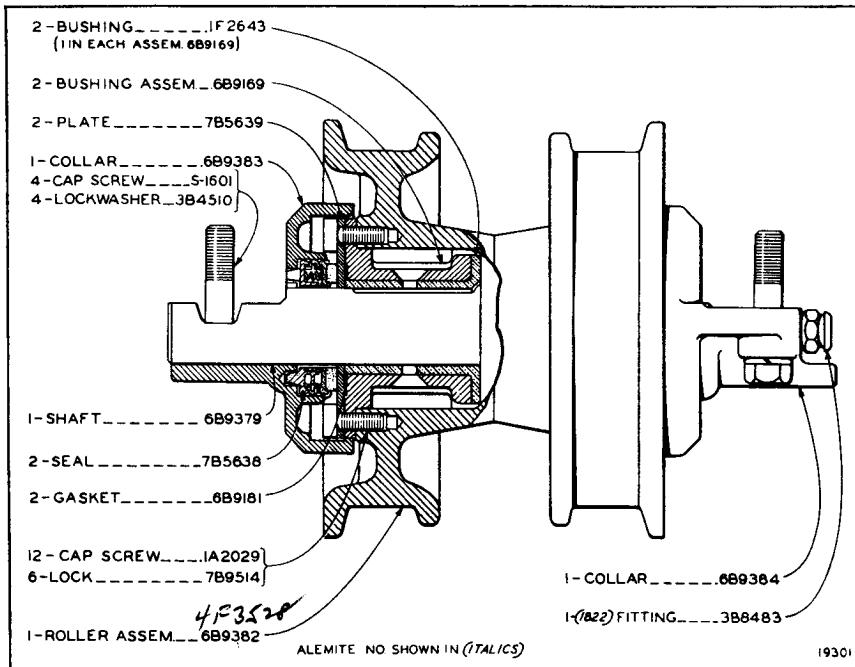


TRACK ROLLER—Double Flange (8 Groups Req'd.)
 Serial No. 4R1 to 4R1252 Inclusive

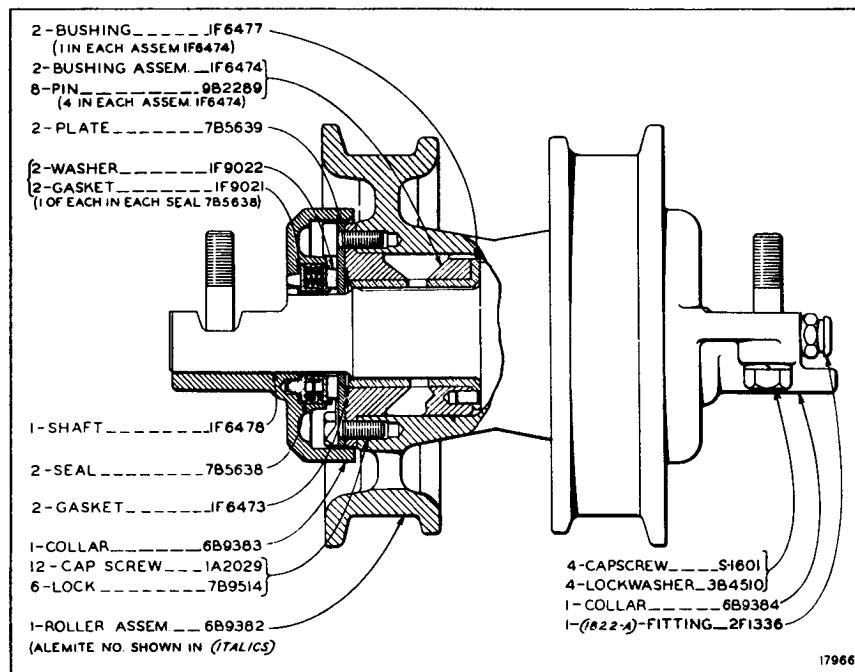

TRACK ROLLER—Double Flange (8 Groups Req'd.)
 Serial No. 4R1253 to 4R2645 inclusive


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

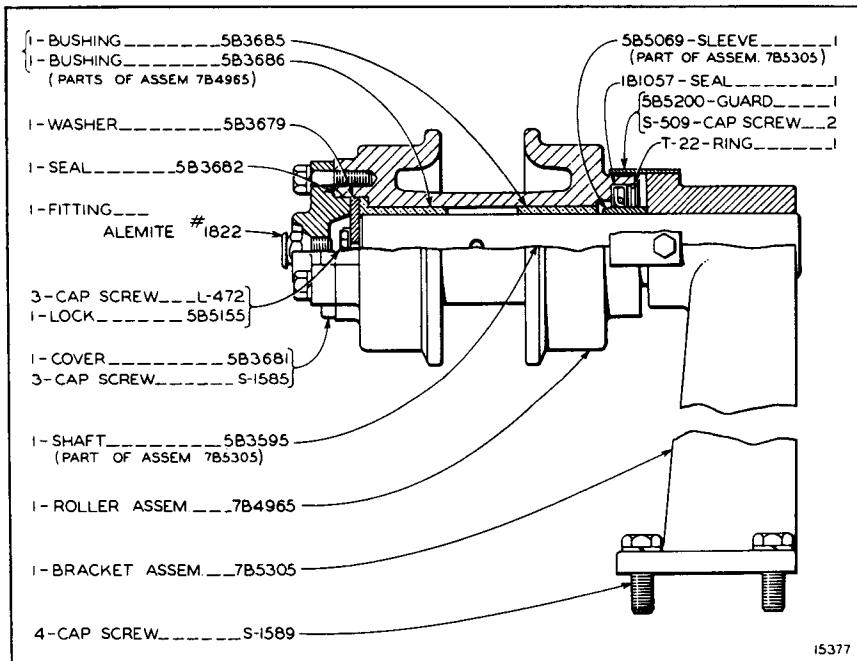

TRACK CARRIER ROLLER (4 Groups Req'd.)

Serial No. 4R1 to 4R550 Inclusive

Refer also to Page 139 for special parts

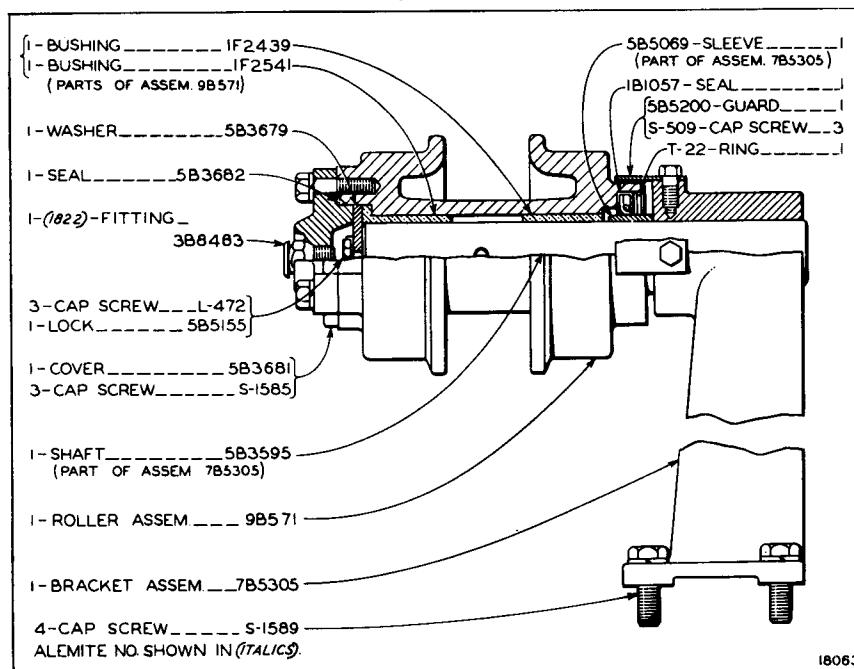


TRACK CARRIER ROLLER (4 Groups Req'd.)

Effective with Serial No. 4R551

Refer also to Pages 139 and 140 for special parts


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

INSERT BETWEEN PAGES 112 & 113 IN FORM 8885-
PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

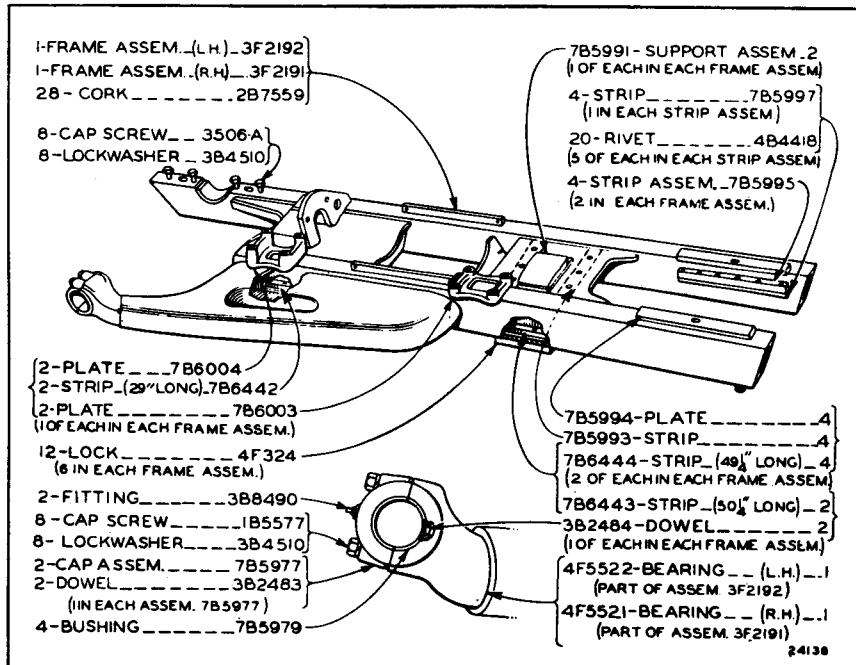

TRACK ROLLER FRAME
Effective with Serial No. 4R3416


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

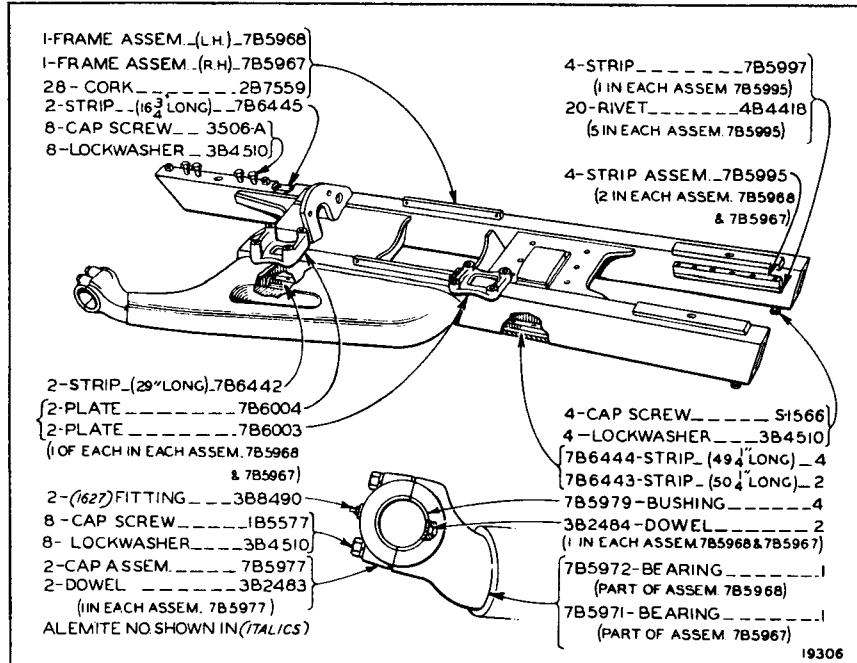

19306

TRACK ROLLER FRAME

Serial No. 4R1 to 4R2265 Inclusive
Refer also to Page 136 for special parts

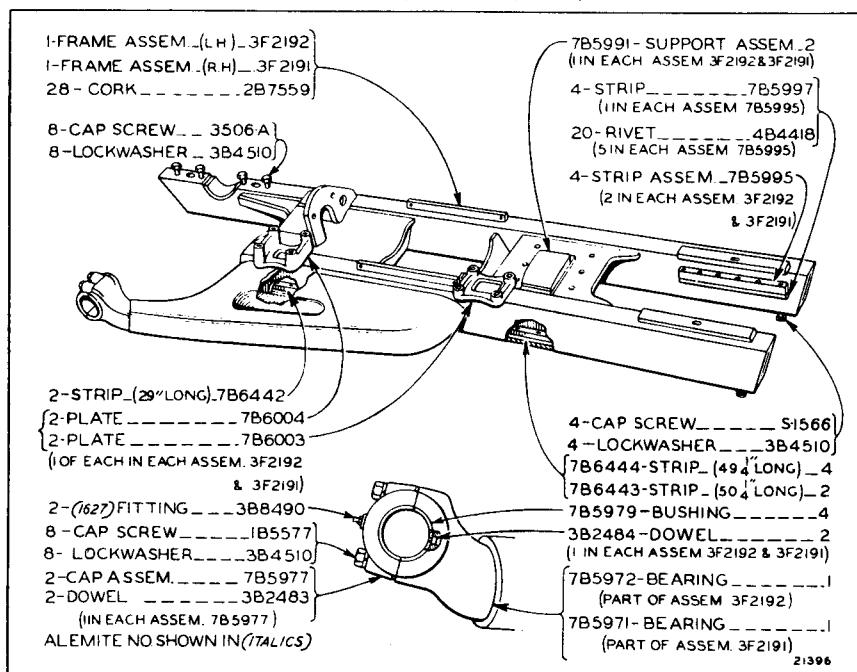


21396

TRACK ROLLER FRAME


Serial No. 4R2266 to 4R3415 inclusive
Refer also to Pages 137 or 138 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

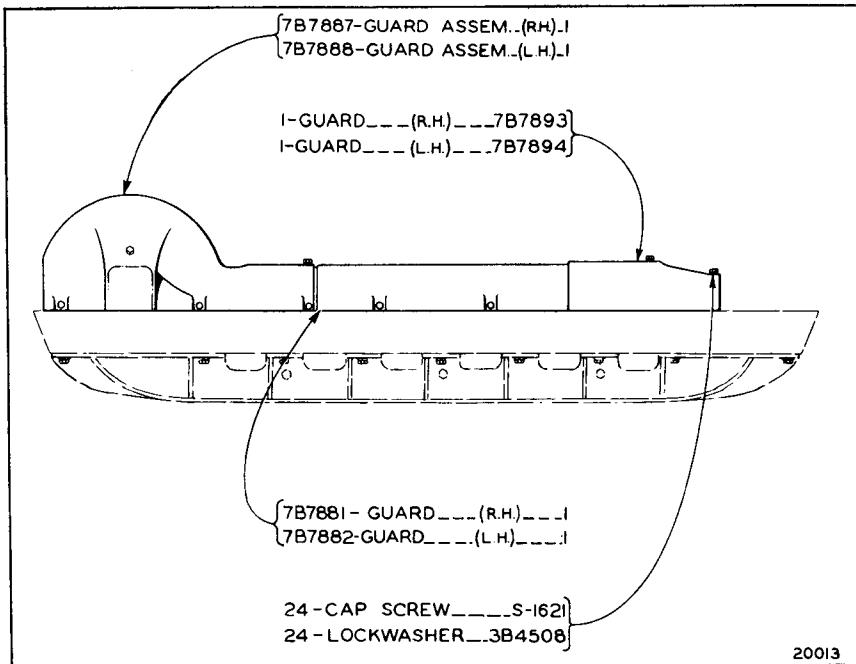**TRACK ROLLER FRAME GUARDS**

Serial No. 4R1 to 4R2265 Inclusive


Refer also to Pages 136 and 143 for special parts

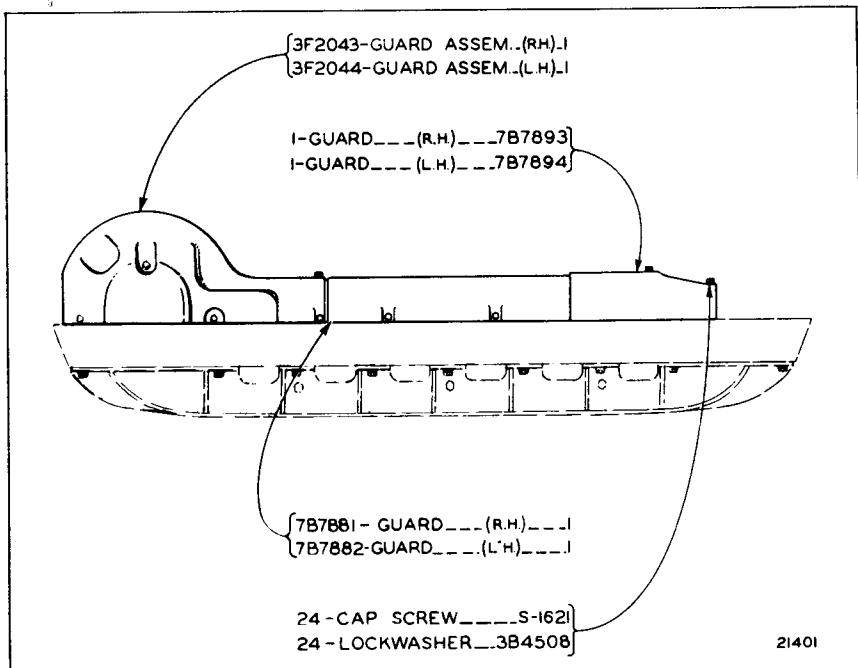**TRACK ROLLER FRAME GUARDS**

Effective with Serial No. 4R2266

Refer also to Pages 137, 138 and 143 for special parts

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

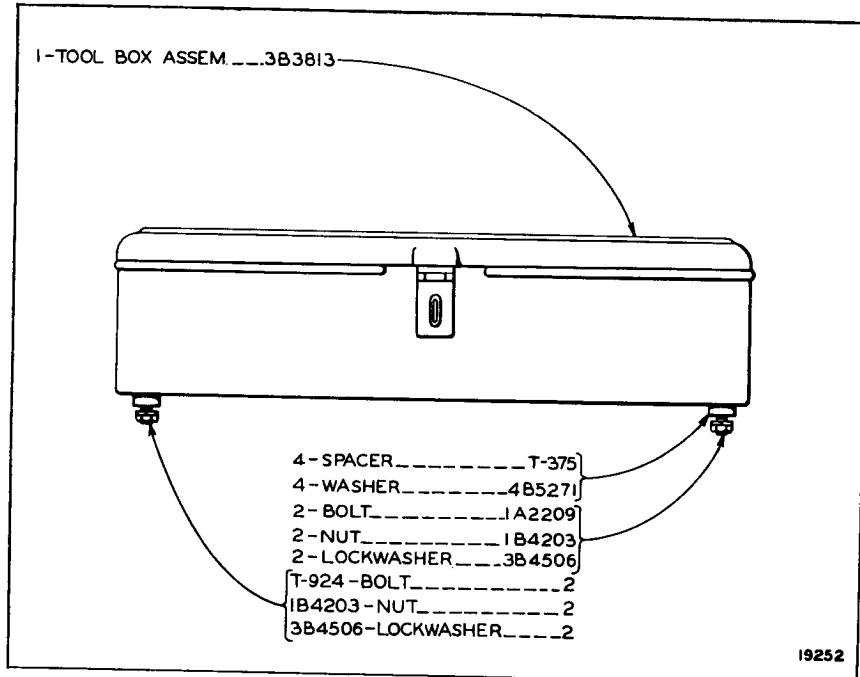

TOOL BOX


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

Attachments


3F5008 Blower Fan Arrangement
For use with Traxcavator

Consists of:


- 1 8B4192 Blower Fan Group Shown Below
1 3F7063 Fan Guard Group. Page 119

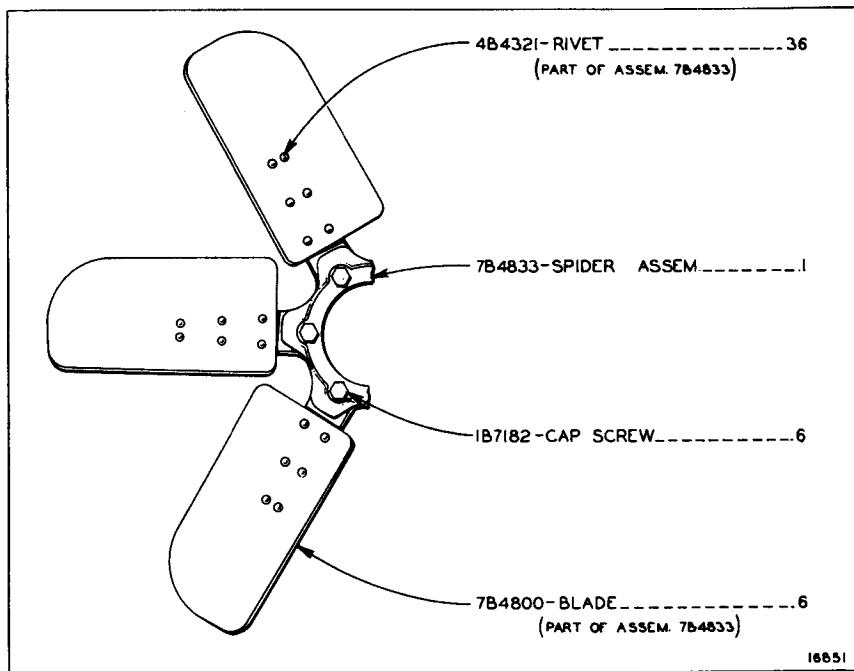

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

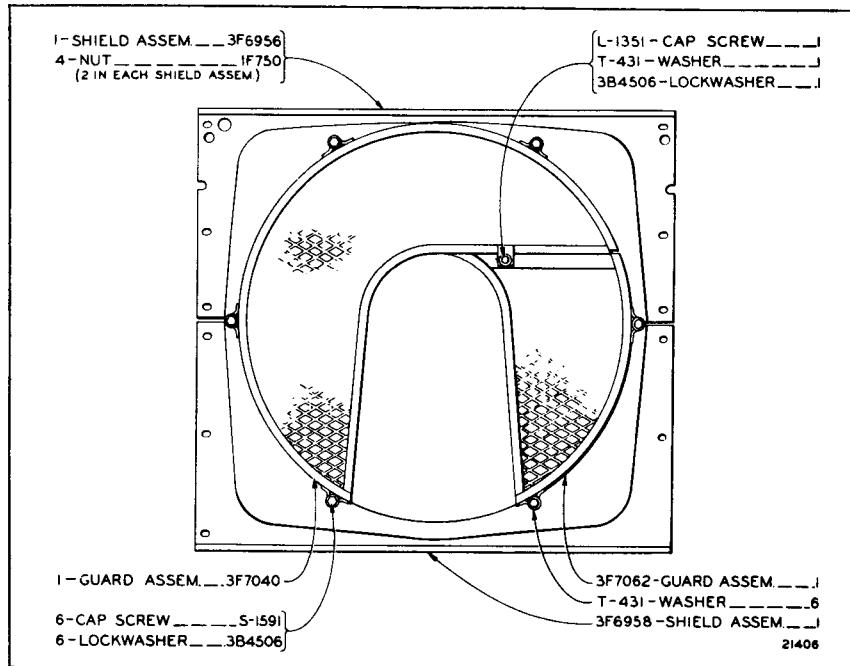


3F7063 FAN GUARD GROUP

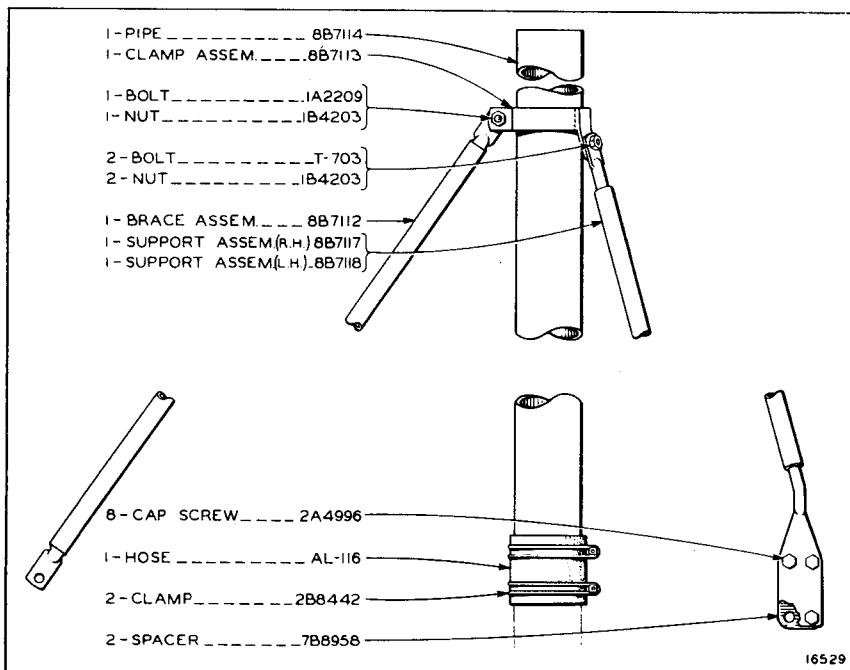


8B7119 AIR CLEANER INLET PIPE EXTENSION GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

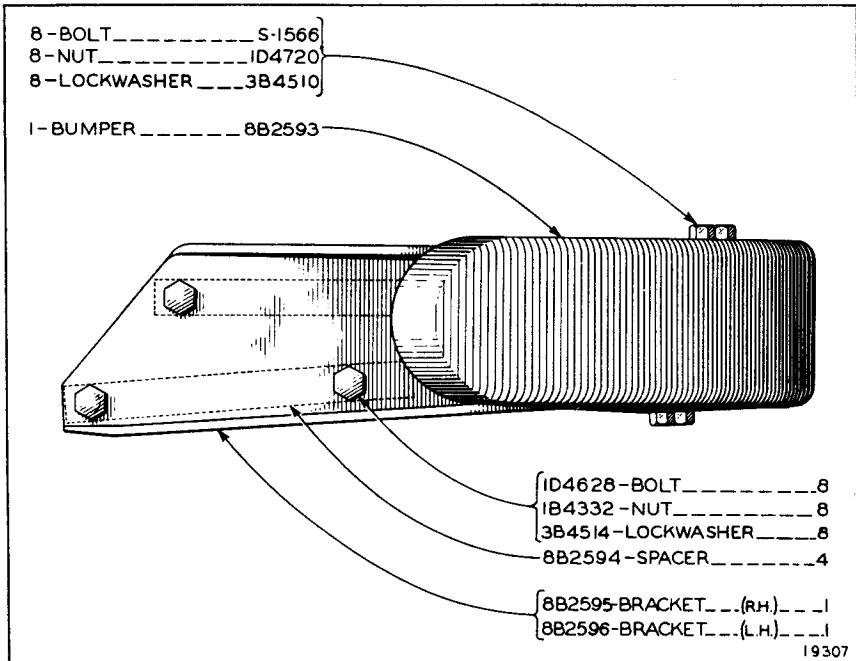


8B2601 FRONT BUMPER GROUP

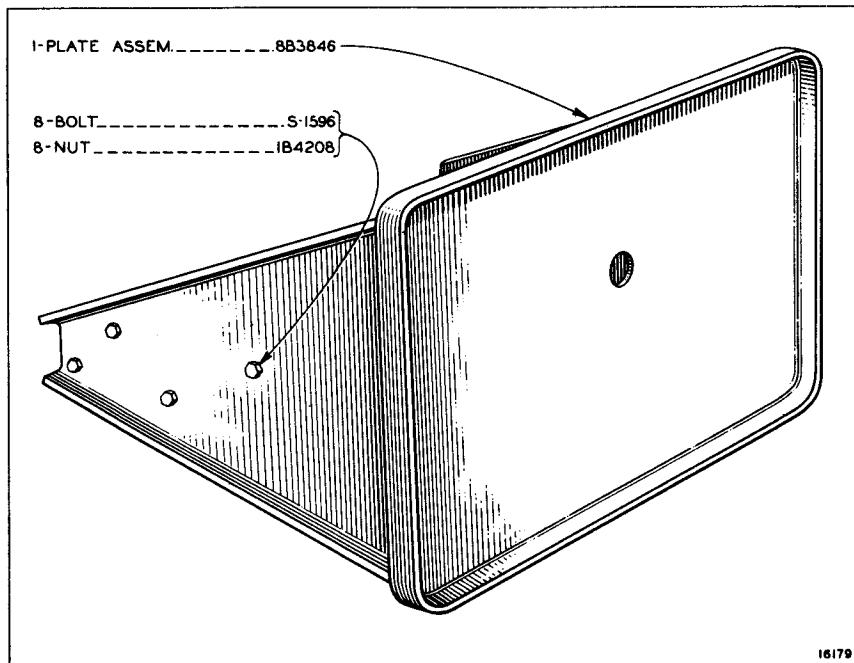


8B3847 PUSH BUMPER GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

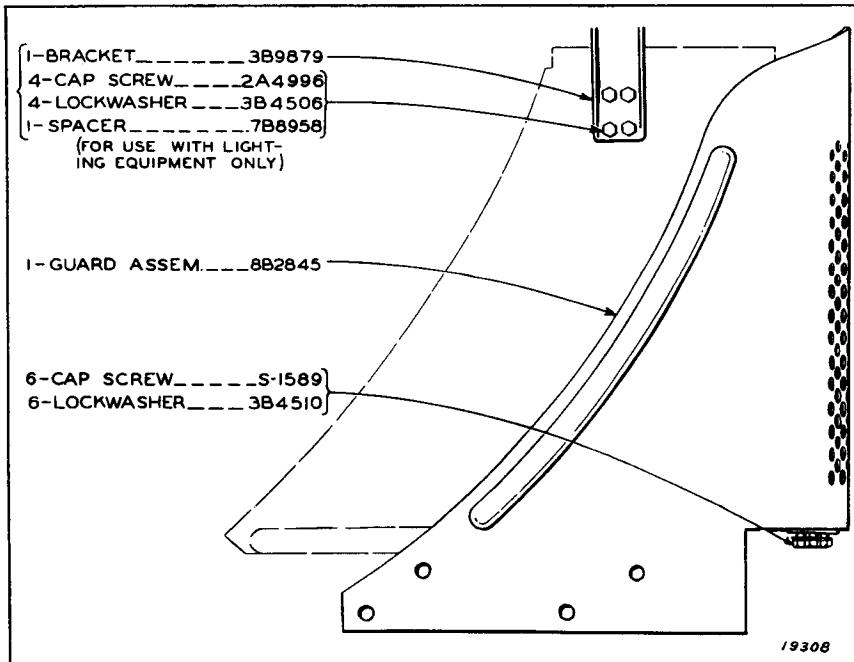

8B2846 RADIATOR GUARD GROUP


For use with Front Bumper

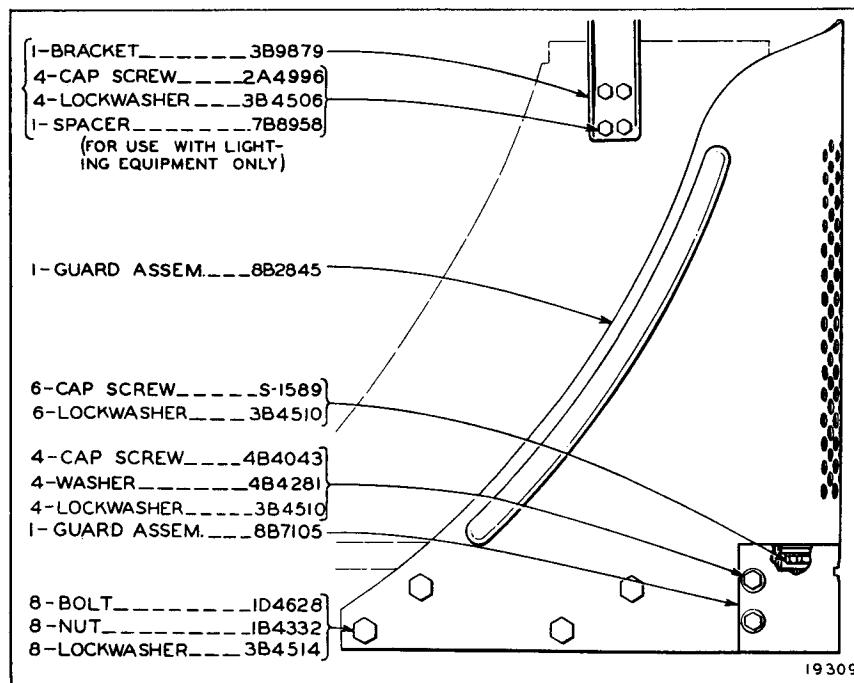


8B7106 RADIATOR GUARD GROUP

For use without Front Bumper


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

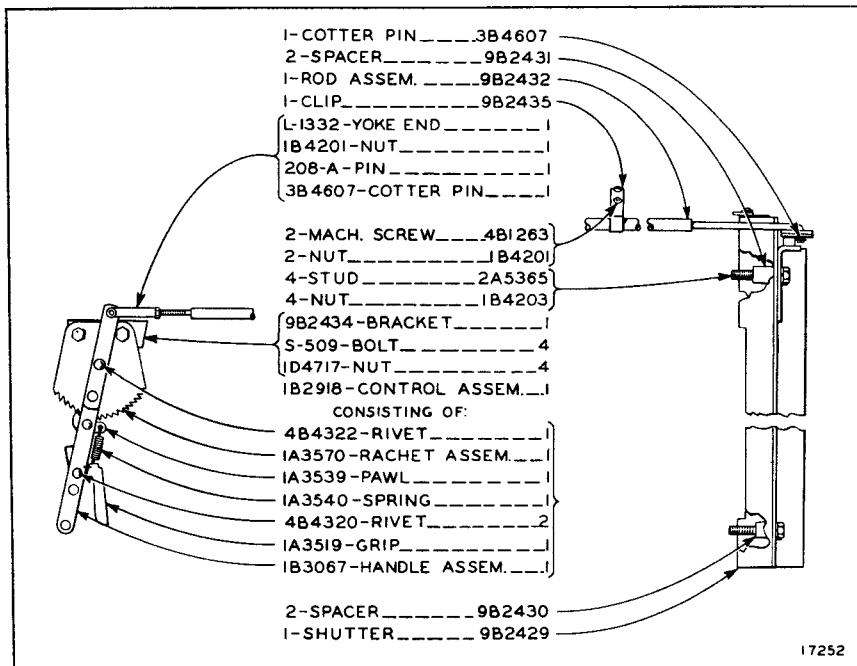


9B2428 RADIATOR SHUTTER GROUP

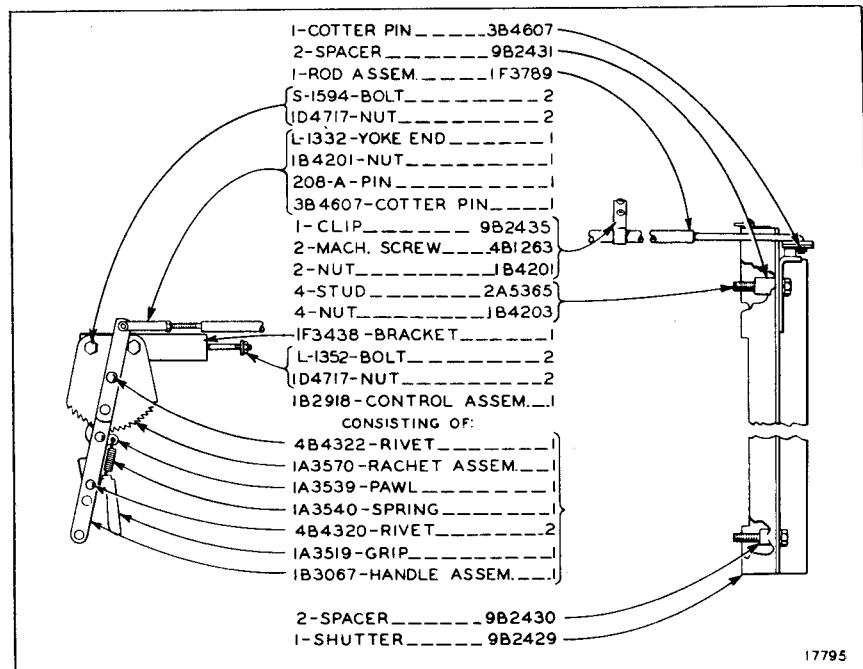IF3790 RADIATOR SHUTTER GROUP
For use with Cab

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

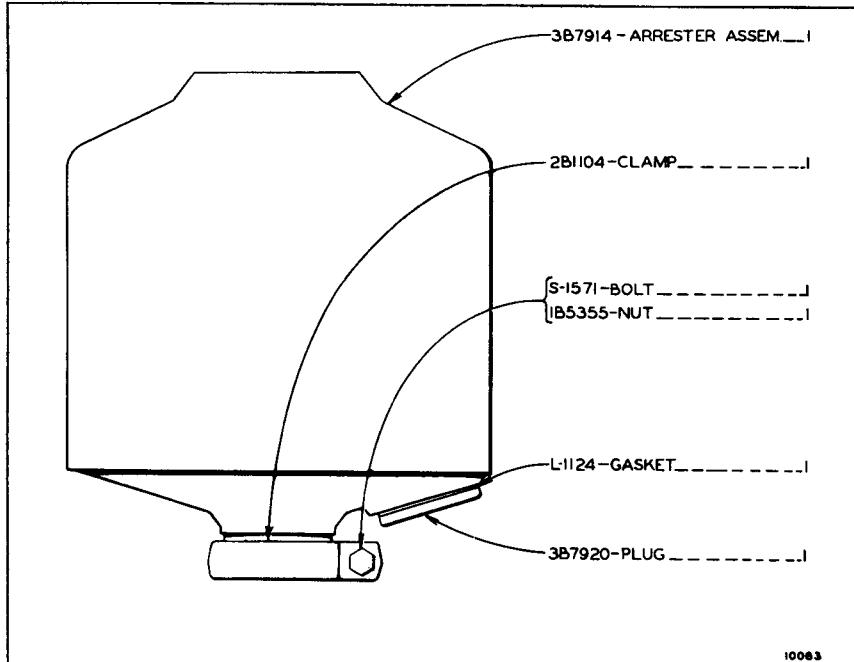

3B2655 SPARK ARRESTER GROUP

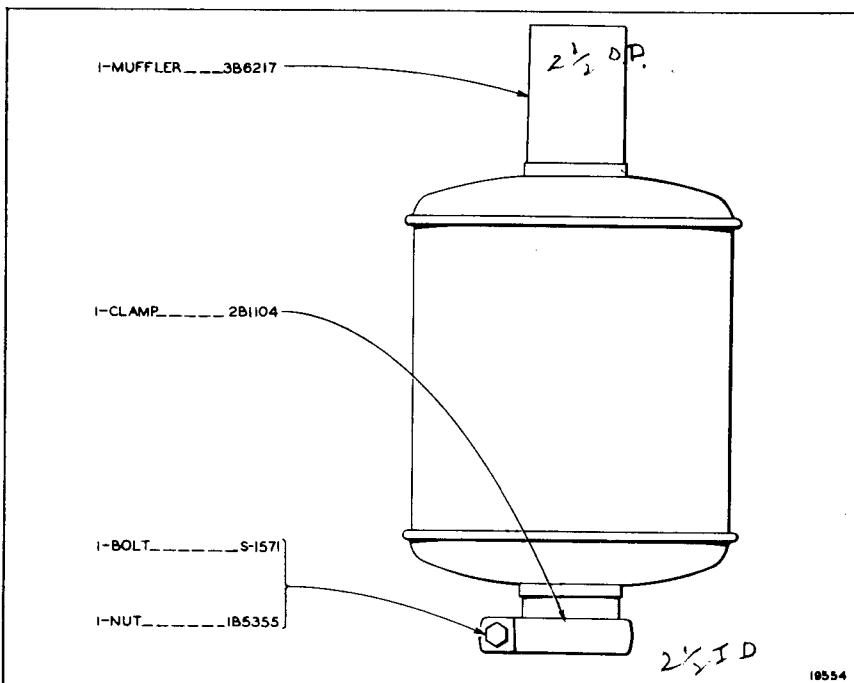


3B6232 MUFFLER GROUP

201Q

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


6-BOLT ----- T-856
 6-NUT ----- IB4207
 6-LOCKWASHER ----- 3B4512

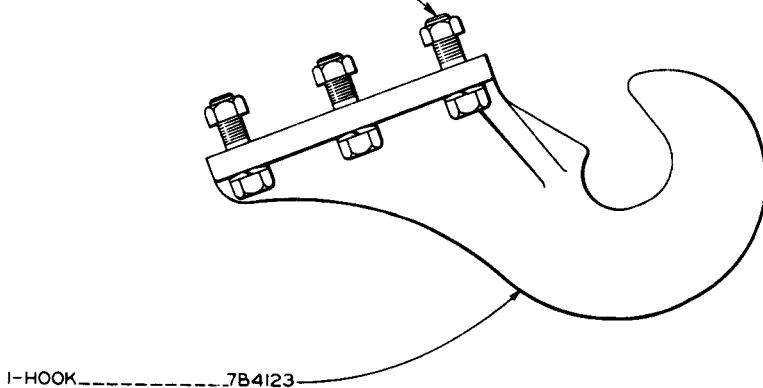

19311

7B4464 FRONT PULL HOOK GROUP
 For use with Crankcase Guard

S-1585-BOLT ----- 6
 ID4719 - NUT ----- 6
 3B7283 - NIPPLE ----- 1
 3B6487 - COUPLING ----- 1
 8B3320 - BRACKET ASSEM ----- 1

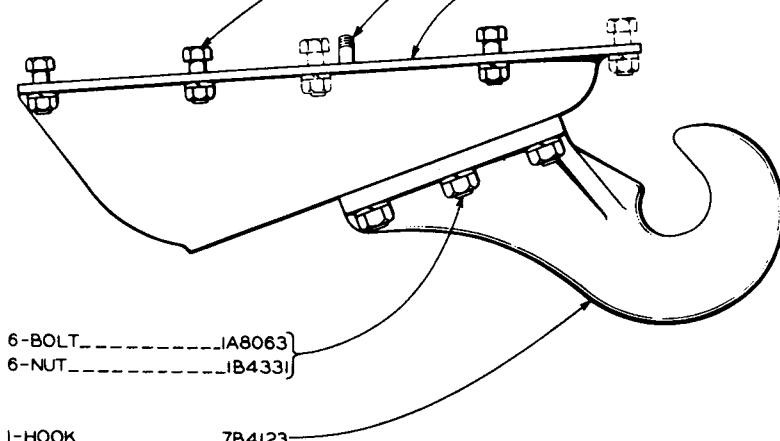


16116


8B3321 FRONT PULL HOOK GROUP
 For use without Crankcase Guard

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

INSERT BETWEEN PAGES 124 & 125 IN FORM 8885—PARTS CATALOG FOR
D6 TRACTOR—74" GAUGE

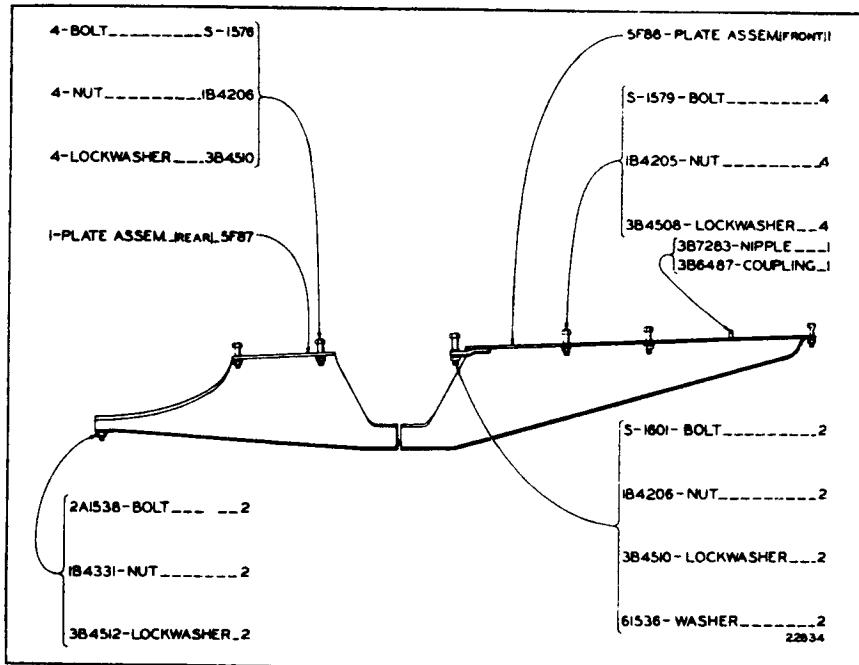


5F88 CRANKCASE GUARD GROUP

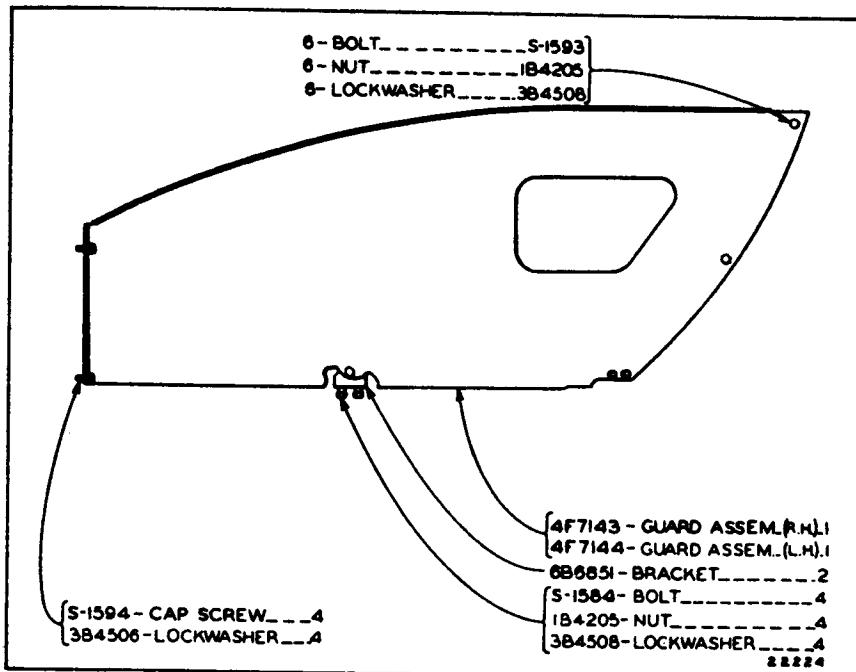


4F7139 BRUSH GUARD GROUP

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

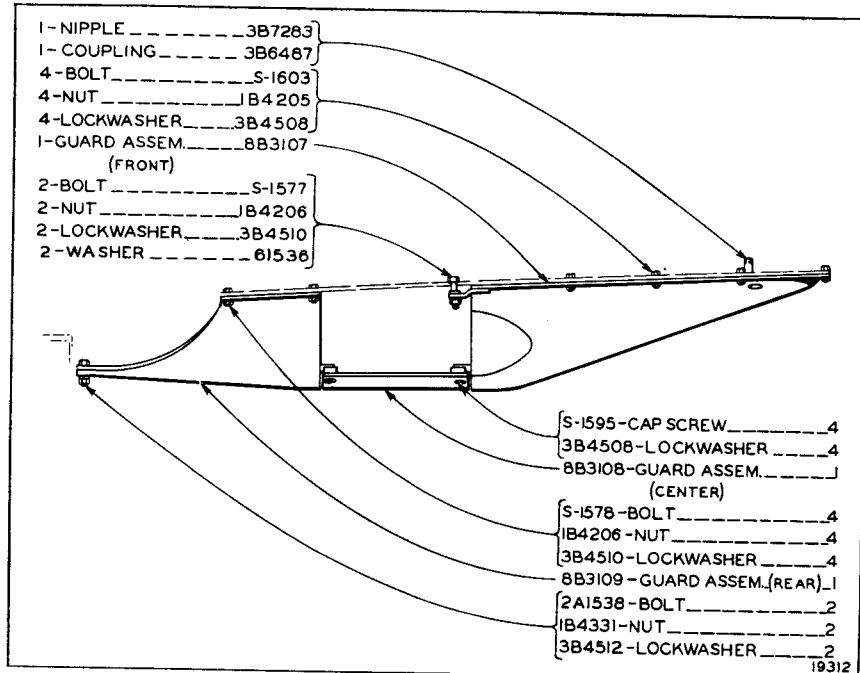


8B3100 CRANKCASE GUARD GROUP

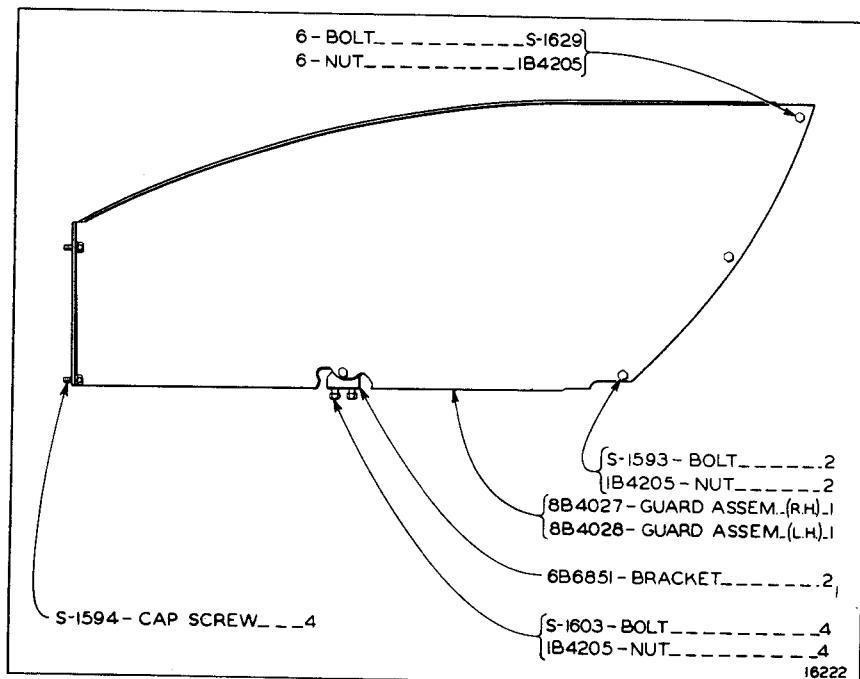


8B4029 BRUSH GUARD GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

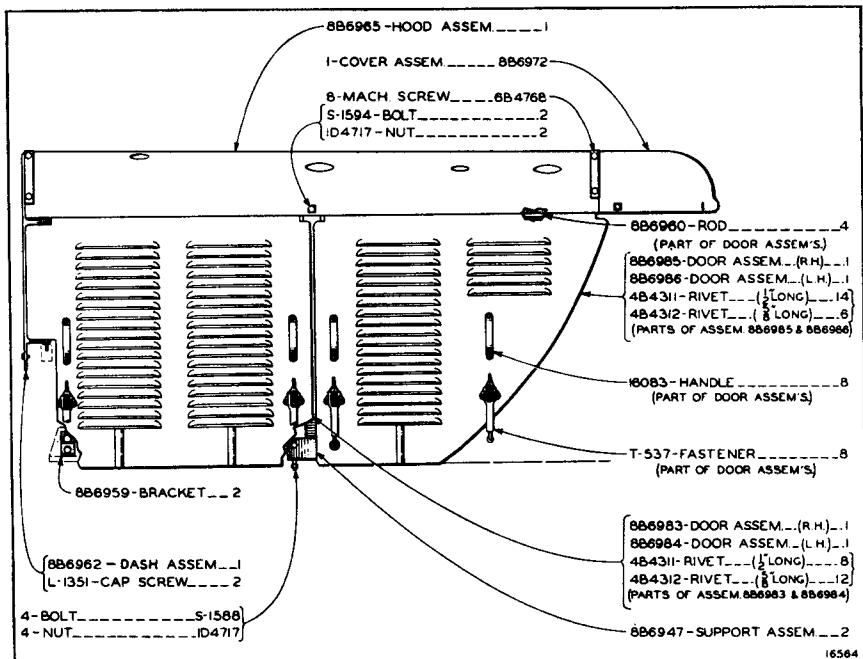


8B6980 HOOD GROUP

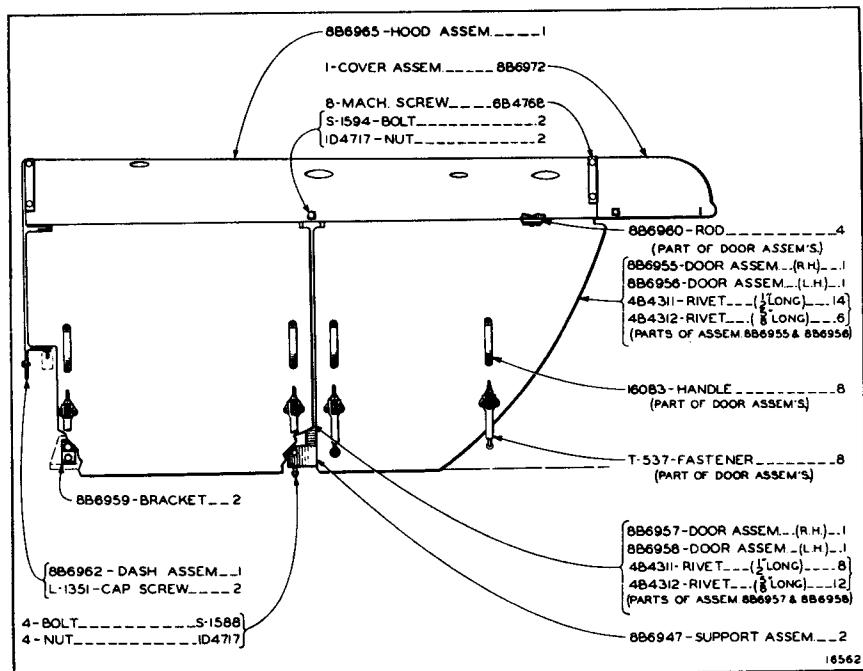


8B6950 WINTER HOOD GROUP


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

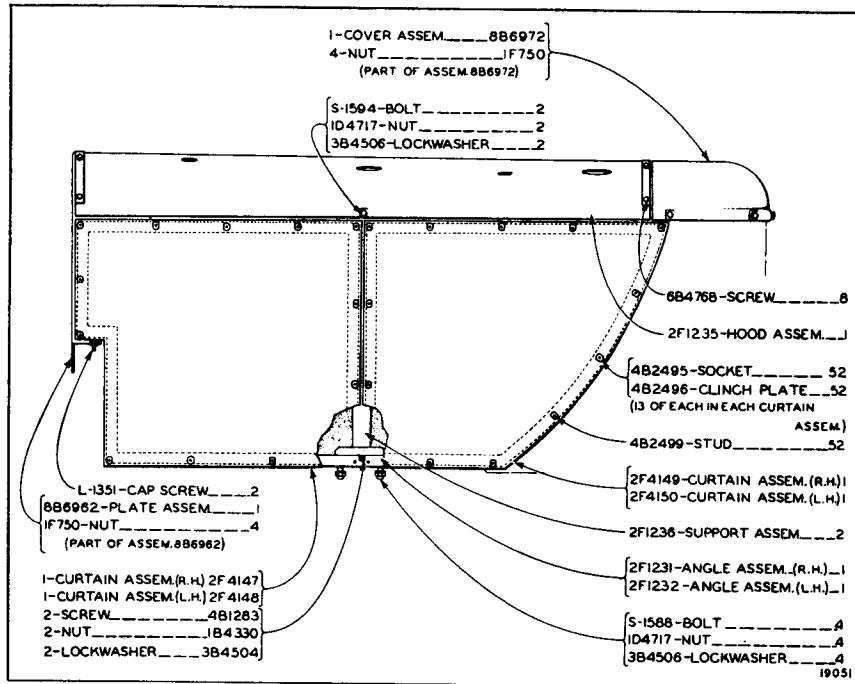


2F4138 HOOD GROUP—With Side Curtains

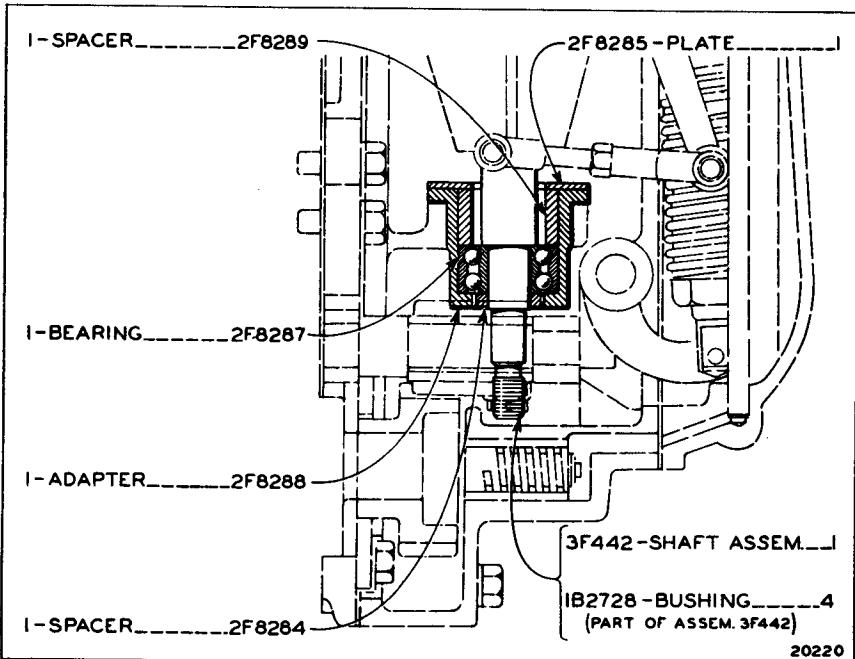2F8290 GOVERNOR BEARING GROUP—Field Replacement
Serial No. 4R1 to 4R813 Inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

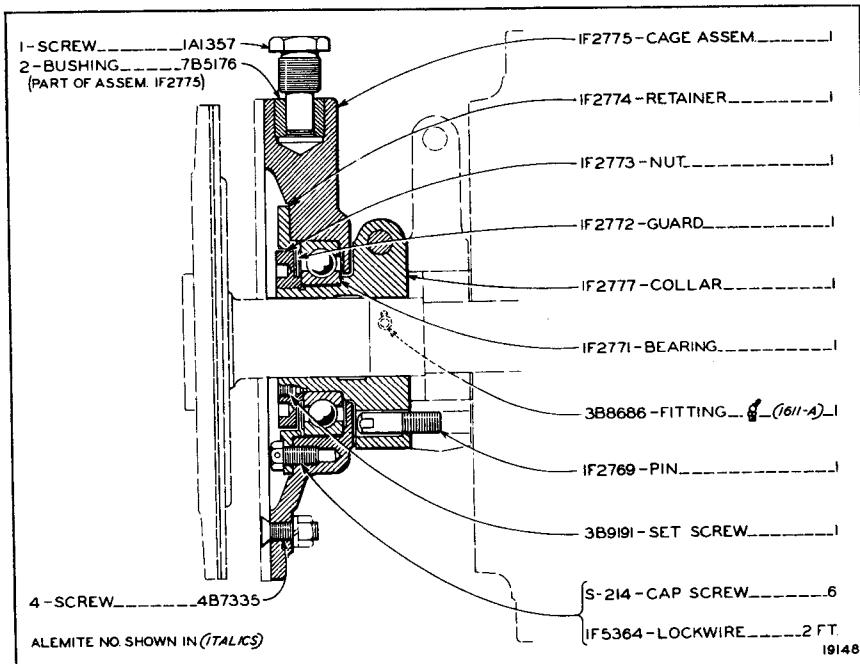


IF9707 FLYWHEEL CLUTCH GROUP—Field Changeover
 Serial No. 4R1 to 4R1188 Inclusive

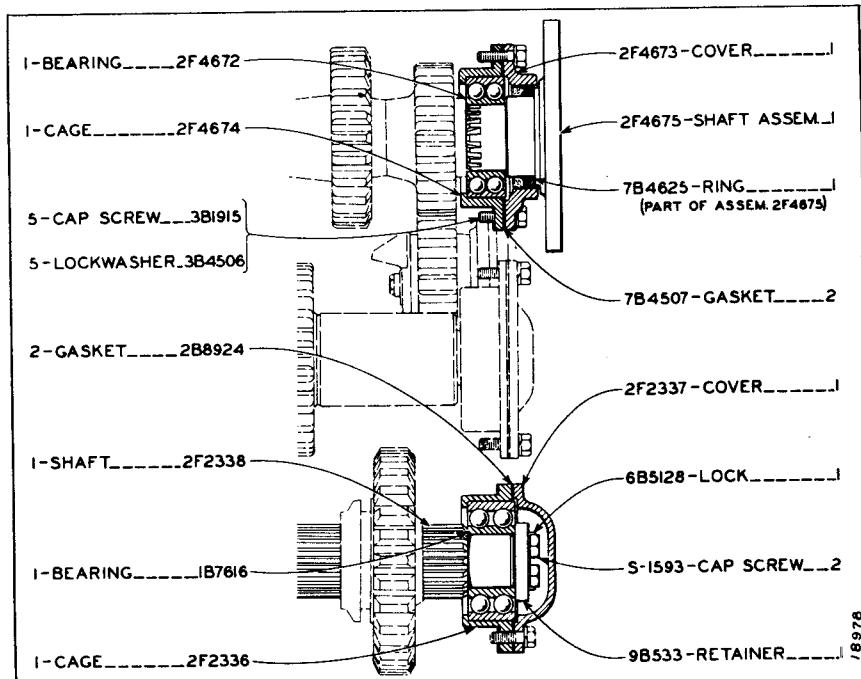

2F4654 TRANSMISSION BEARING GROUP—Field Replacement


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

INSERT BETWEEN PAGES 128 & 129 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

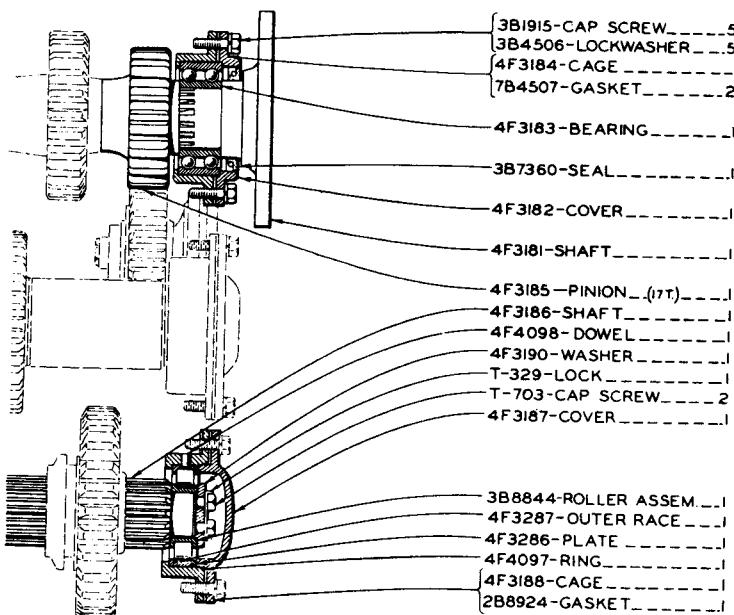

24190


4F4007 TRANSMISSION BEARING GROUP—Field Replacement
For use with 7B8428 Transmission Group

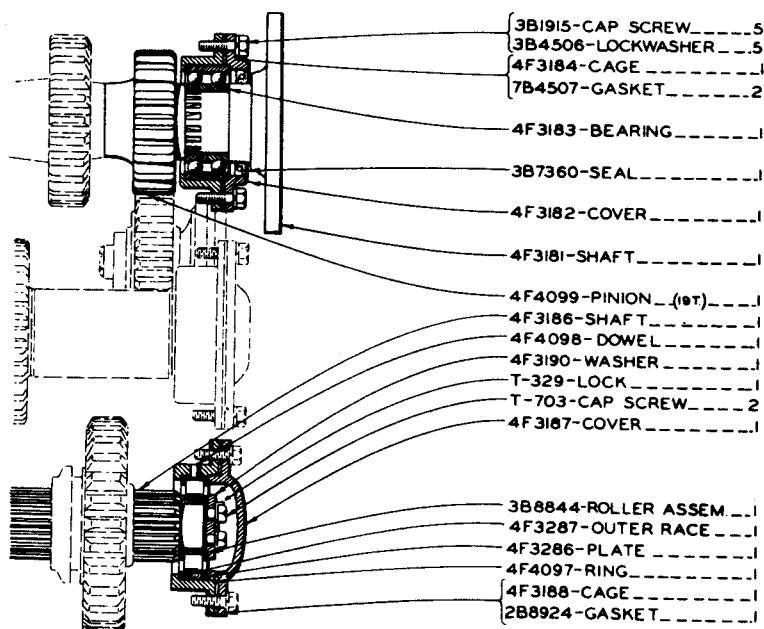

24191

4F4164 TRANSMISSION BEARING GROUP—Field Replacement
For use with 8B898 Transmission Group


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

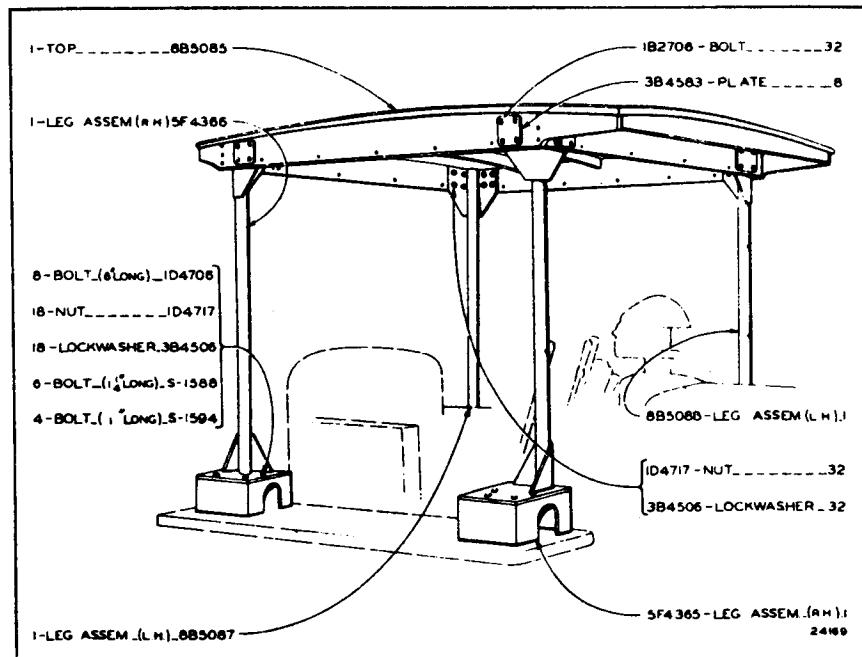**SF4364 CANOPY GROUP**

For use with Bulldozer

42

4-52

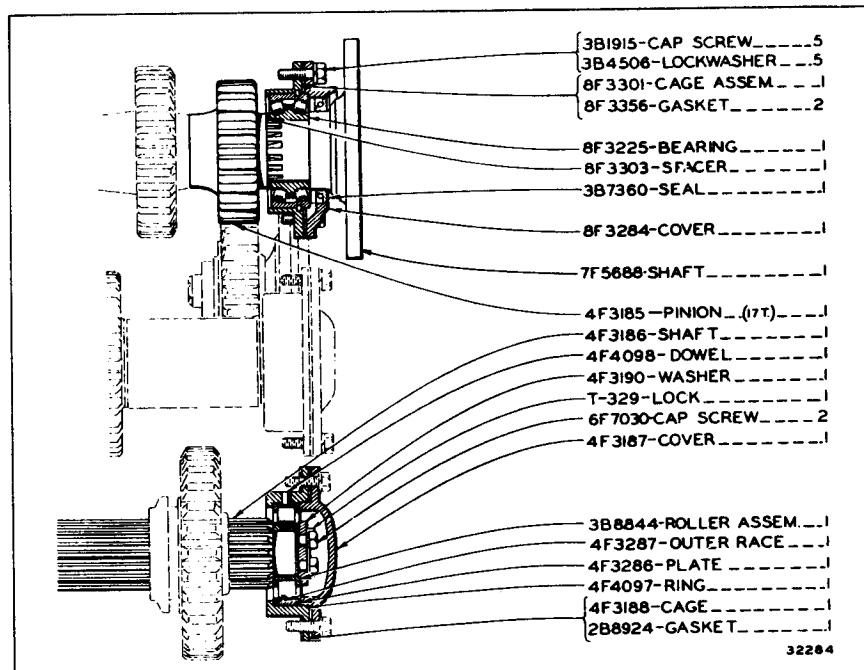


32284

IH3160 TRANSMISSION BEARING GROUP—Field Replacement (Replaces 4F4007)

For use with 7B8428 Transmission Group


Serial No. 4R1 to 4R3067 inclusive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

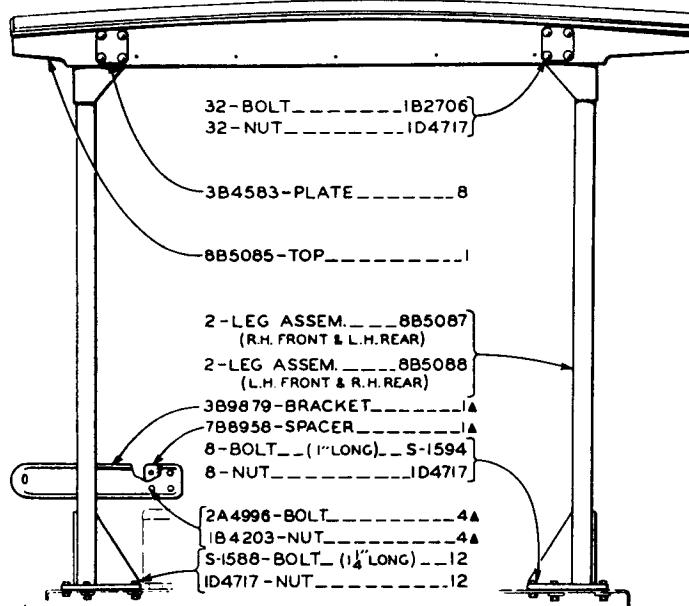

18570

8B5093 CANOPY GROUP

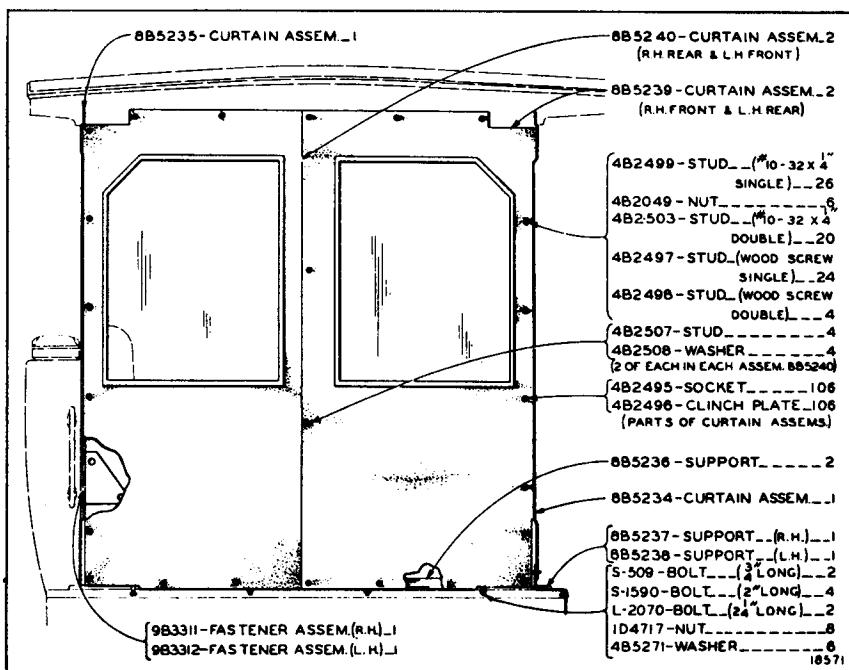


18571


8B5241 CANOPY CURTAIN GROUP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

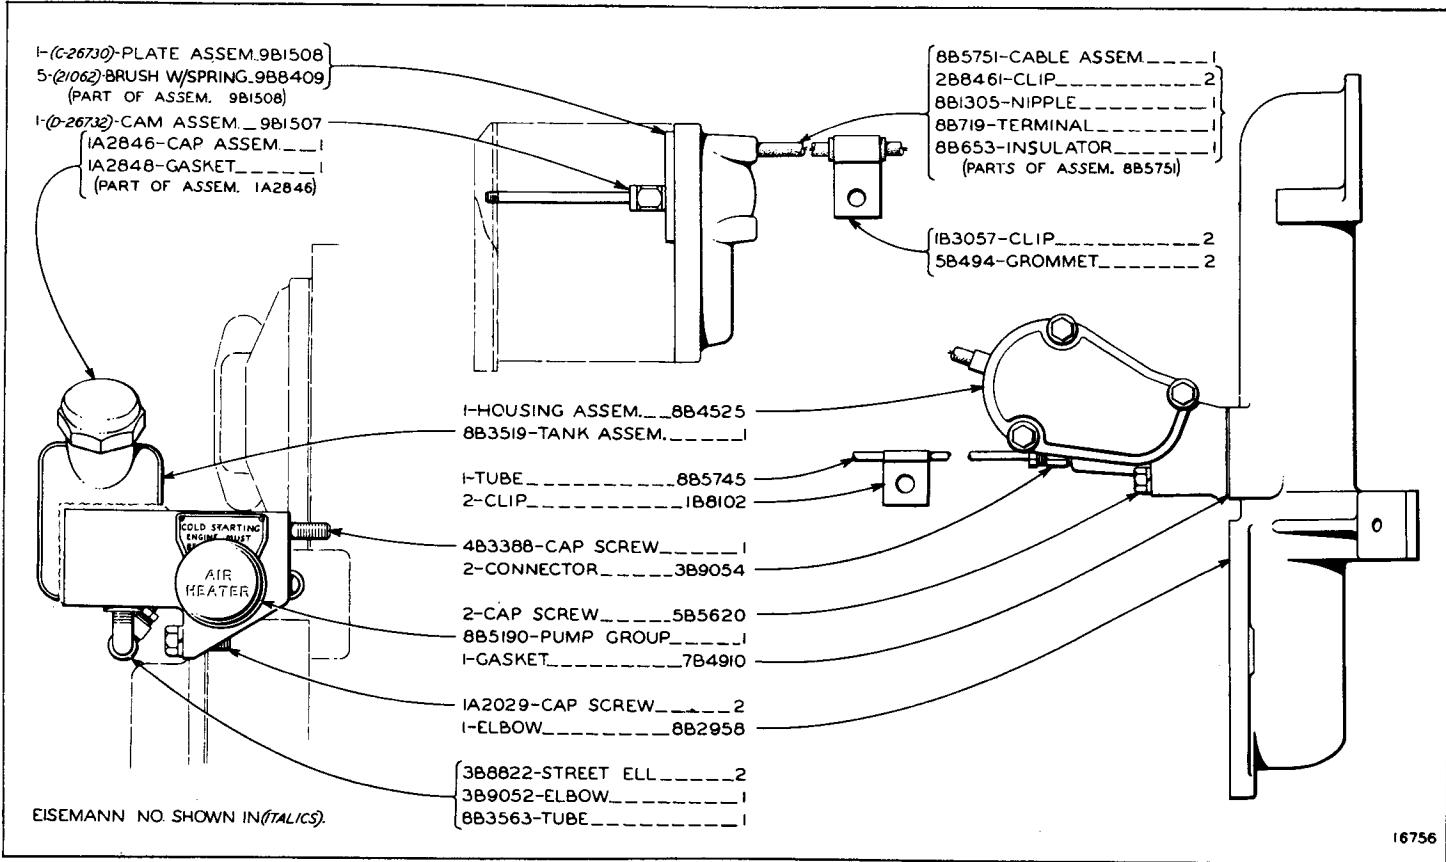

8B5925 MANIFOLD AIR HEATER GROUP—For use with Gasoline Starting Engine
8B4525 Housing Group is shown on Page 133. 8B5190 Pump Group is shown on Page 132.
Only separate parts serviced. When complete group is required order 2F9588

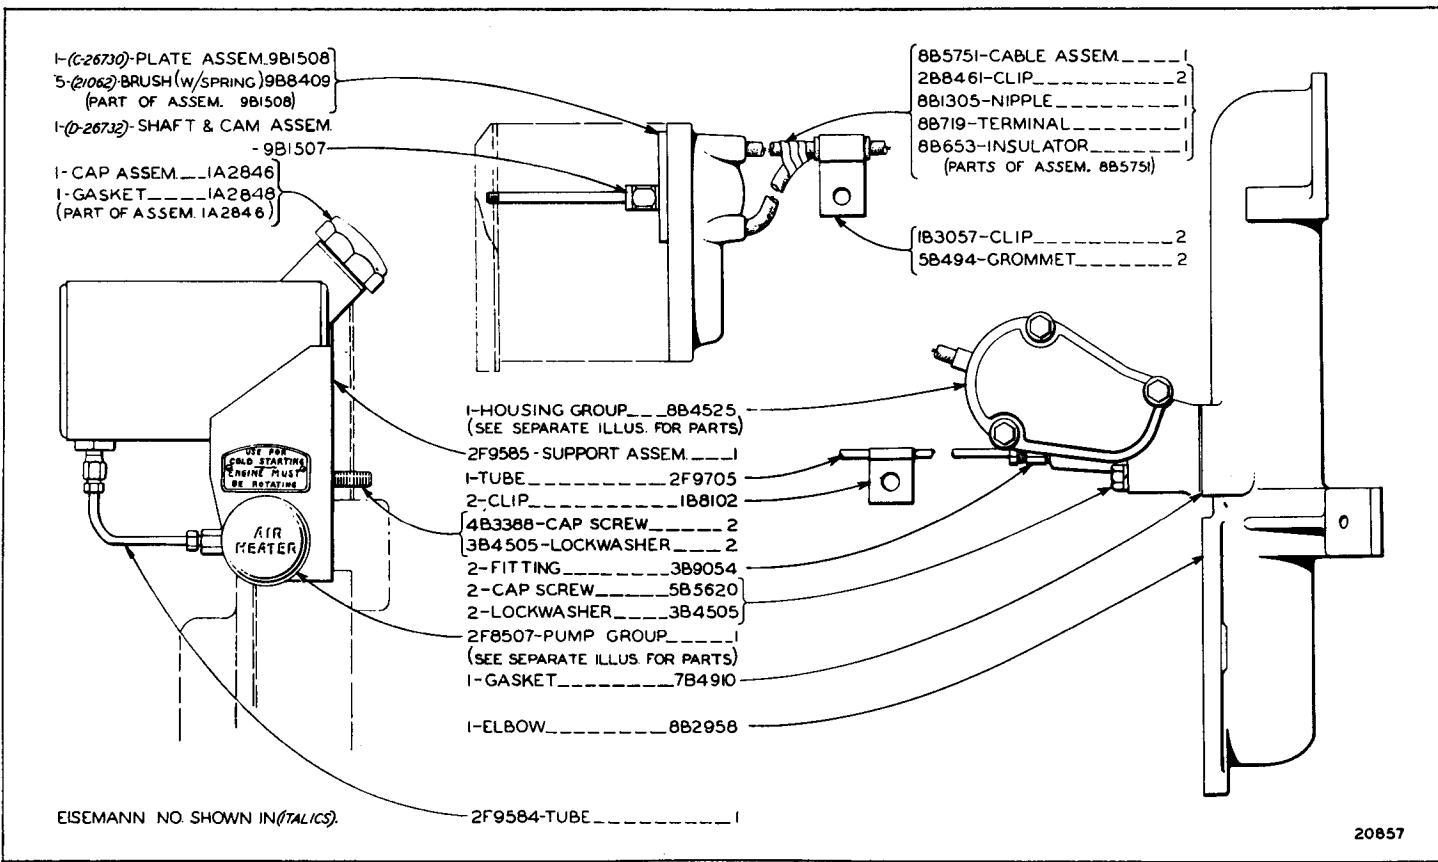


2F9588 MANIFOLD AIR HEATER GROUP—Field Installation—For use with Gasoline Starting Engine
8B4525 Housing Group is shown on Page 133. 2F8507 Pump Group is shown on Page 132.

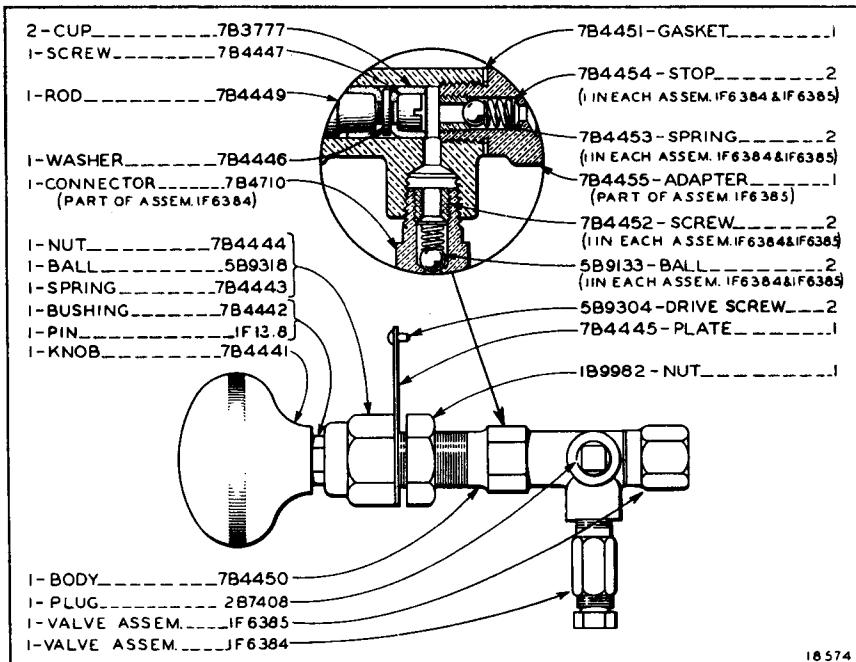

18574


885190 MANIFOLD AIR HEATER HAND PUMP GROUP
Part of 885925 Manifold Air Heater Group

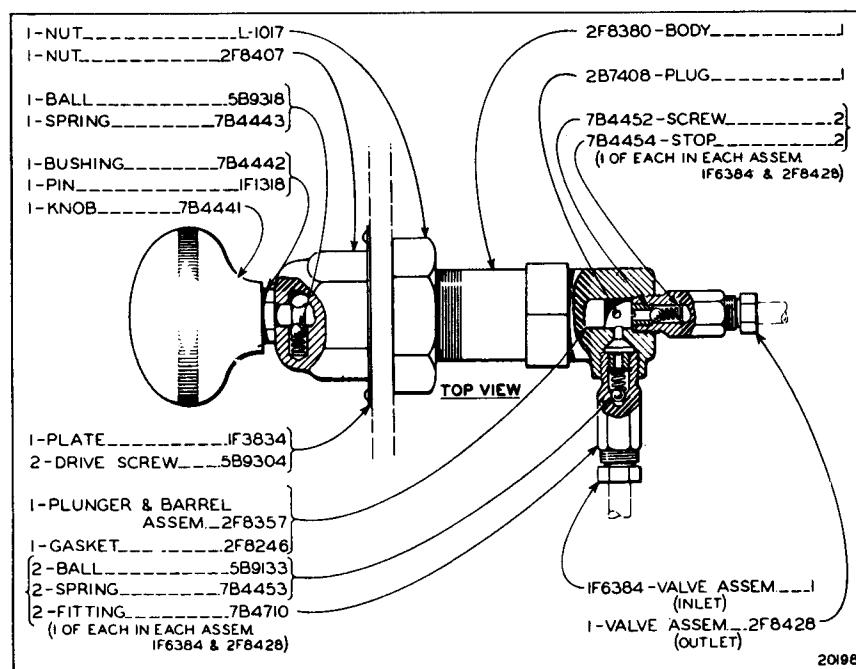

20198

2F8507 MANIFOLD AIR HEATER HAND PUMP GROUP
Part of 2F9588 Manifold Air Heater Group

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

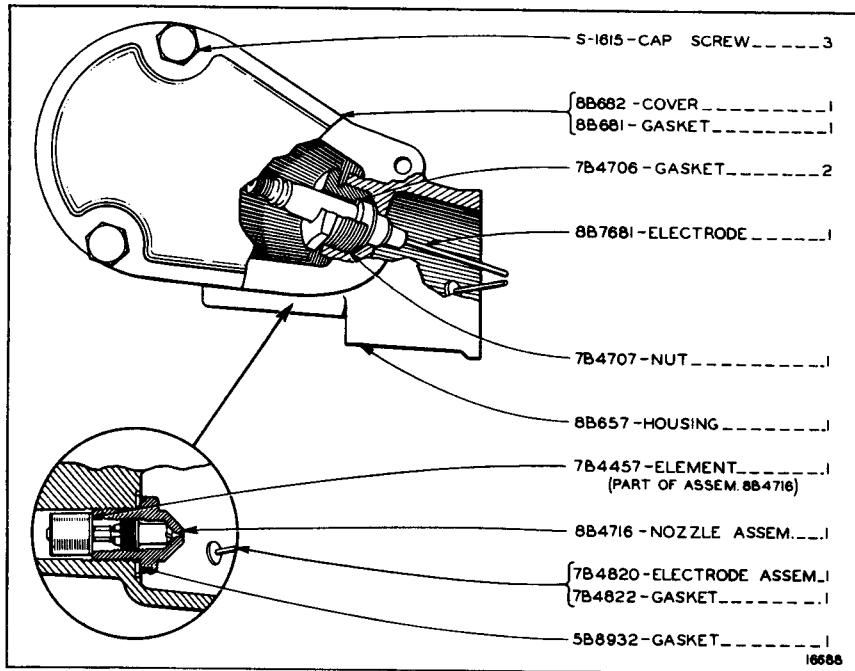


8B4525 MANIFOLD AIR HEATER HOUSING GROUP
Part of Manifold Air Heater Groups


8B5700 Cab Arrangement

Consists of:

- | | | | |
|---|--------|-----------------------------------|--------------|
| 1 | 8B5698 | Wide Seat Cushion Group | Page 134 |
| 1 | 8B5699 | Cab Group | Page 134-135 |

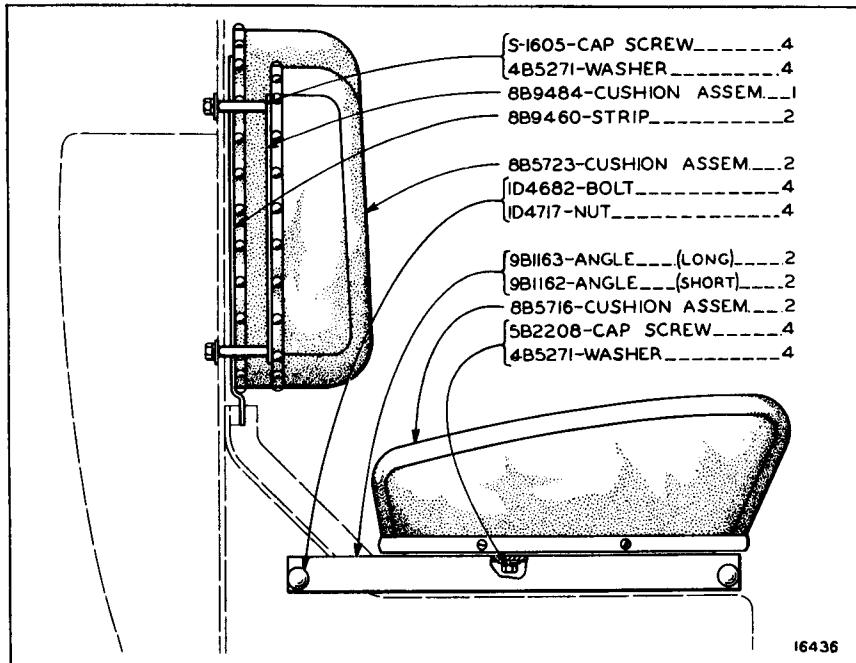


8B5698 WIDE SEAT CUSHION GROUP
Part of 8B5700 Cab Arrangement

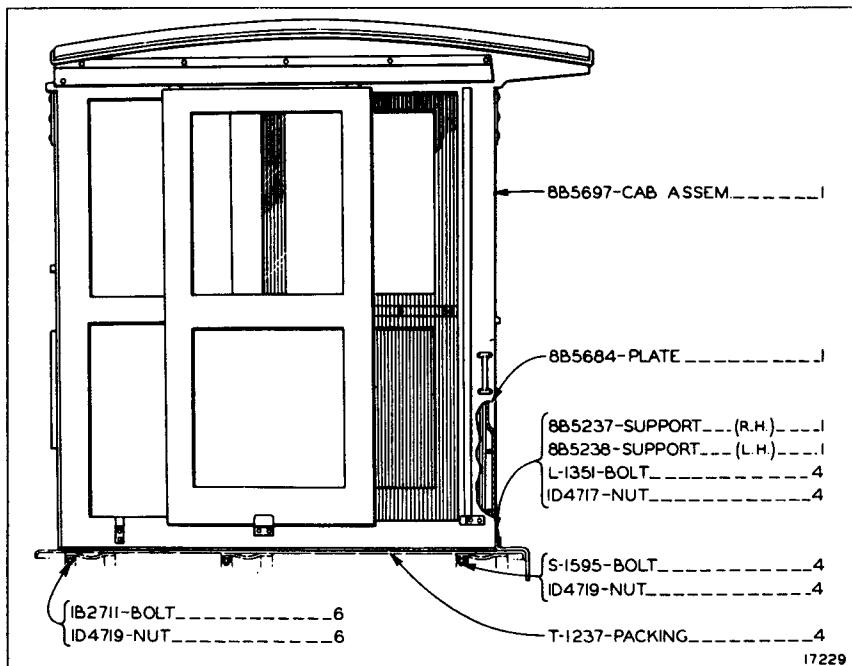


8B5699 CAB GROUP
Part of 8B5700 Cab Arrangement

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

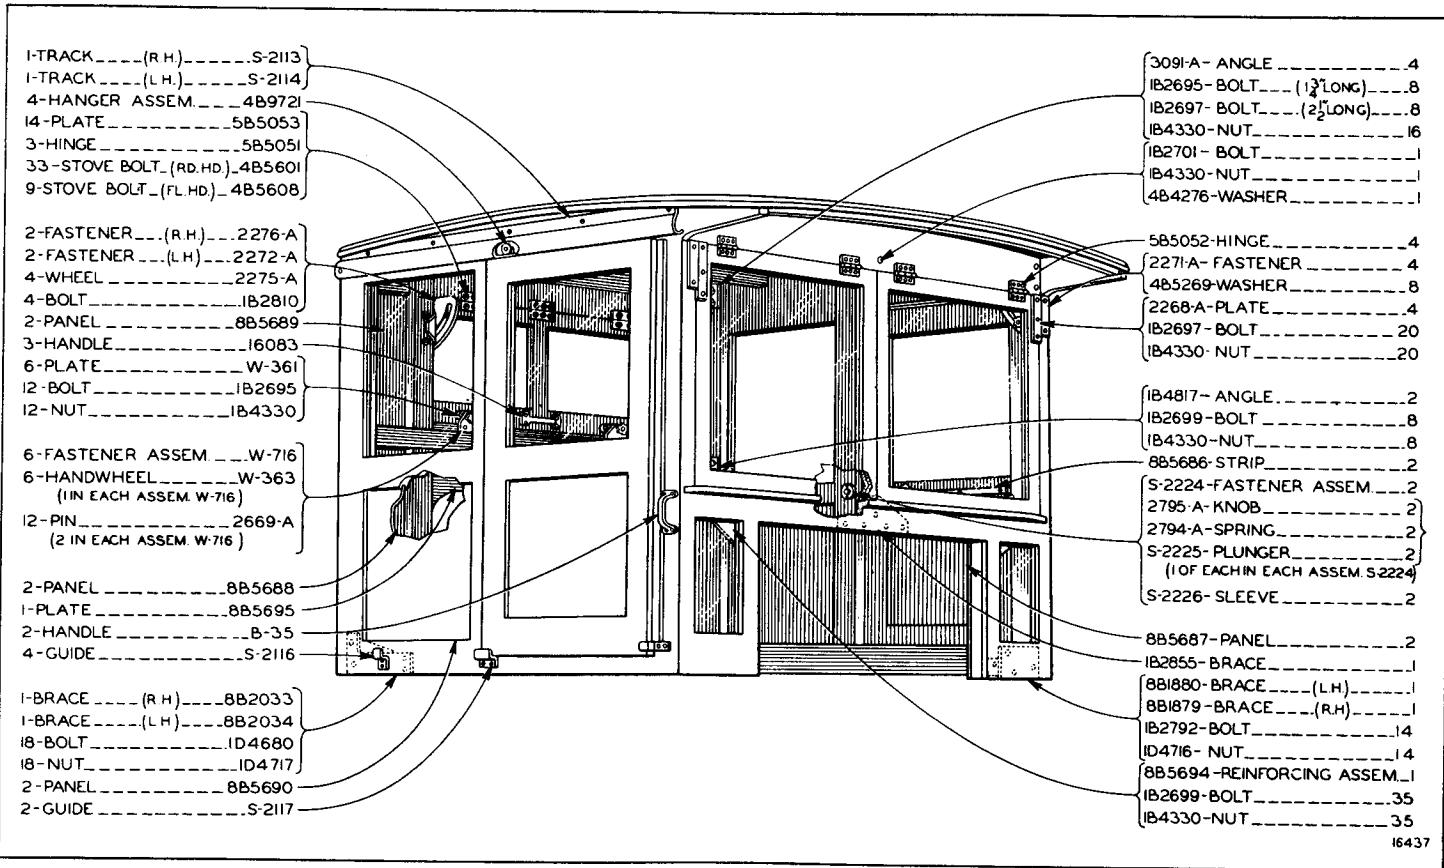

8B5697 CAB ASSEMBLY
Part of 8B5699 Cab Group

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

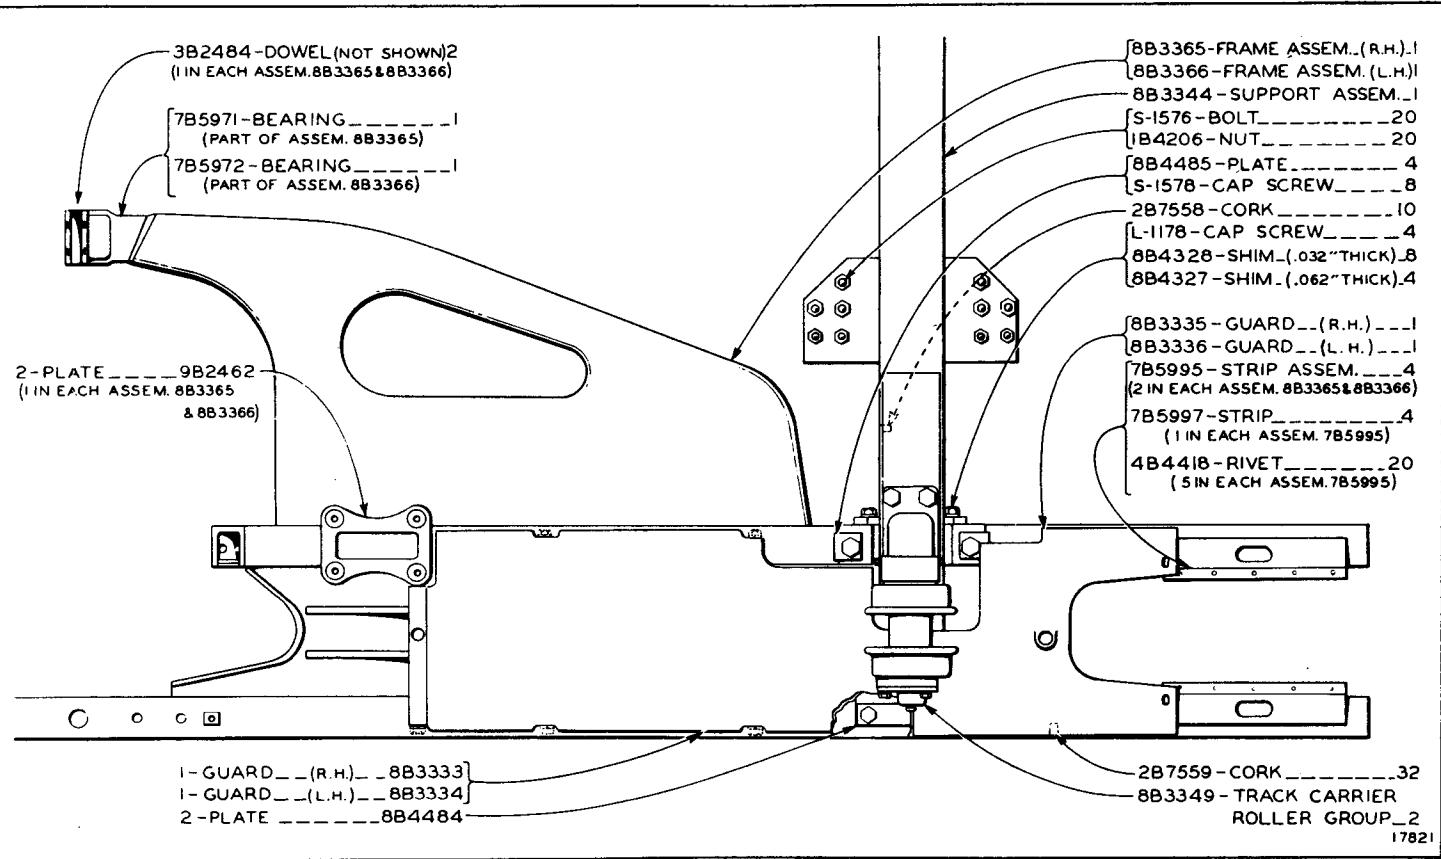


8B3475 TRACK ROLLER FRAME GROUP—Non-oscillating Type

Serial No. 4R1 to 4R2265 Inclusive
8B3349 parts are shown on Page 139

INSERT BETWEEN PAGES 136 & 137 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74" GAUGE


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

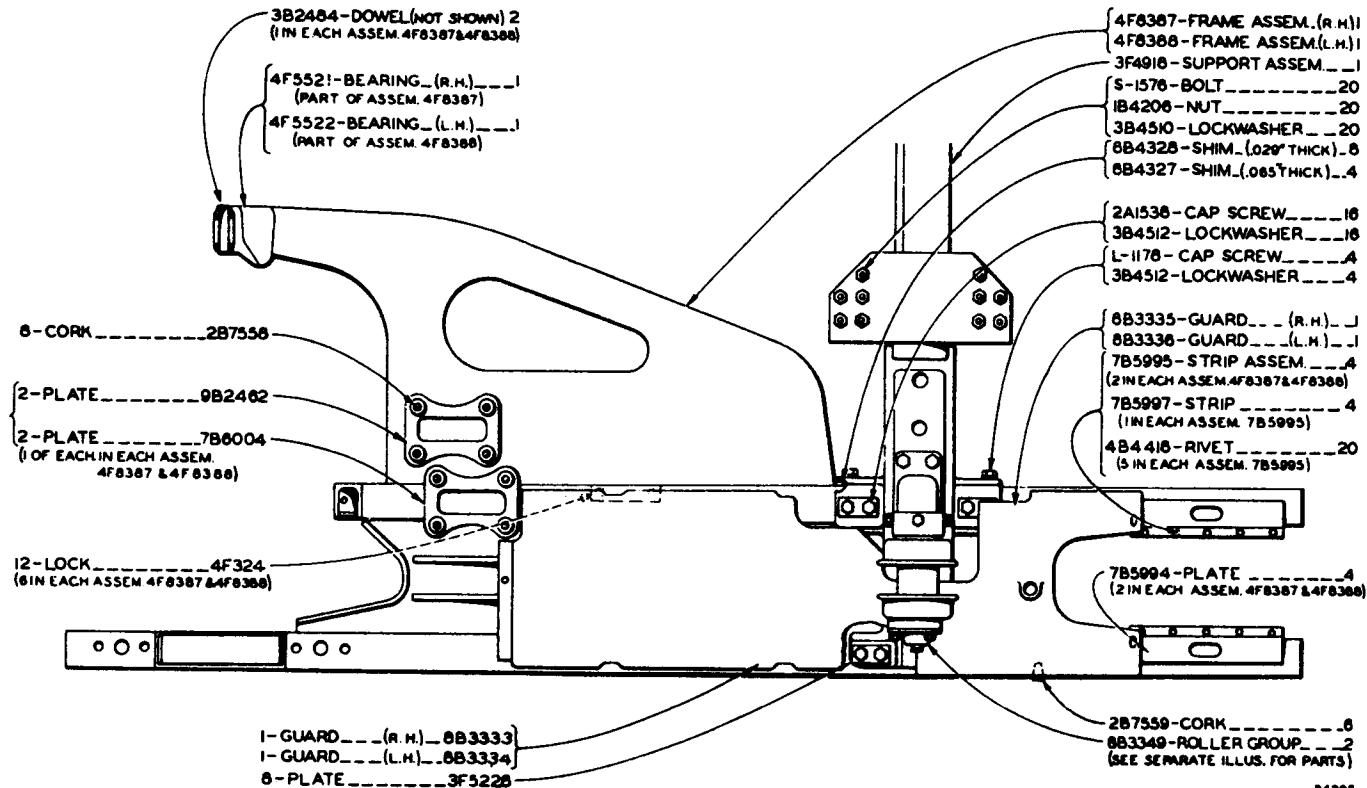

4F7648 TRACK ROLLER FRAME GROUP—Non-oscillating Type
Effective with Serial No. 4R2266
8B3349 parts are shown on Page 139

24205

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

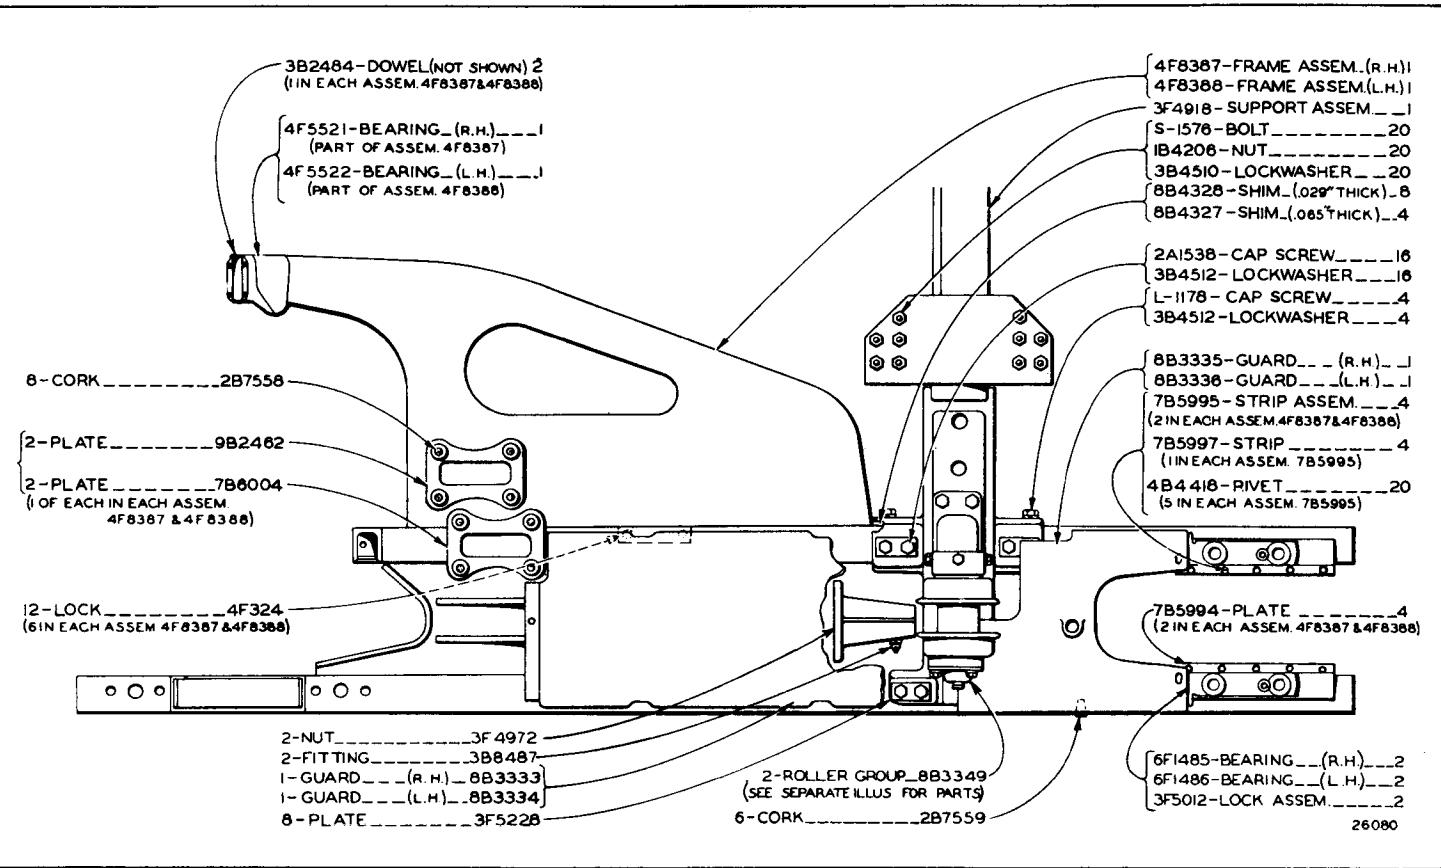


4F7648 TRACK ROLLER FRAME GROUP—Non-oscillating (Second Type)

Only separate parts serviced

Serial No. 4P1266 to 4P533 Inclusive 133319 part no. shc in on Page 139

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

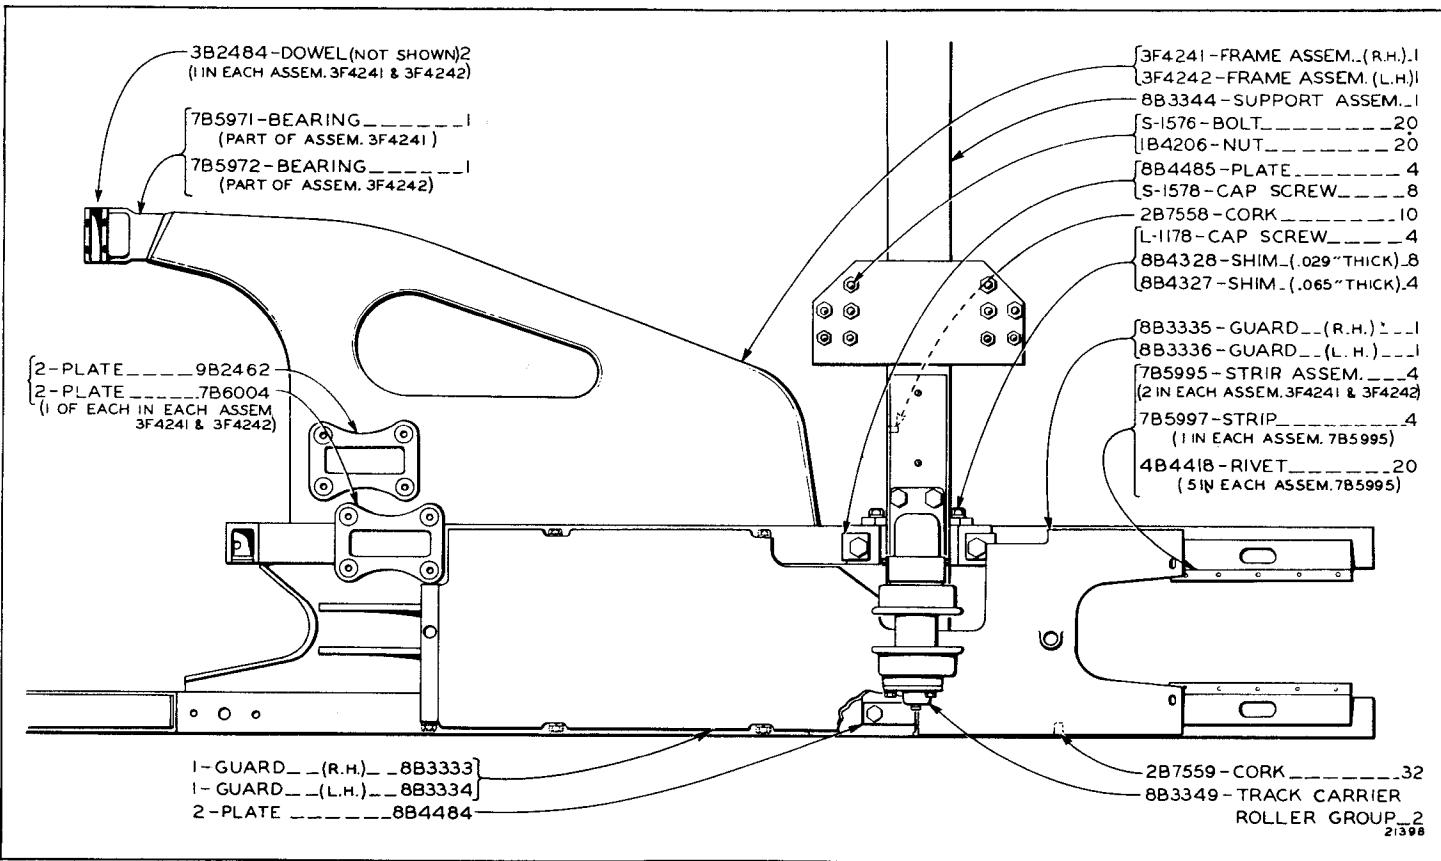


3F4258 TRACK ROLLER FRAME GROUP—Non-oscillating Type

Effective with Serial No. 4R2266

8B3349 parts are shown on Page 139


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

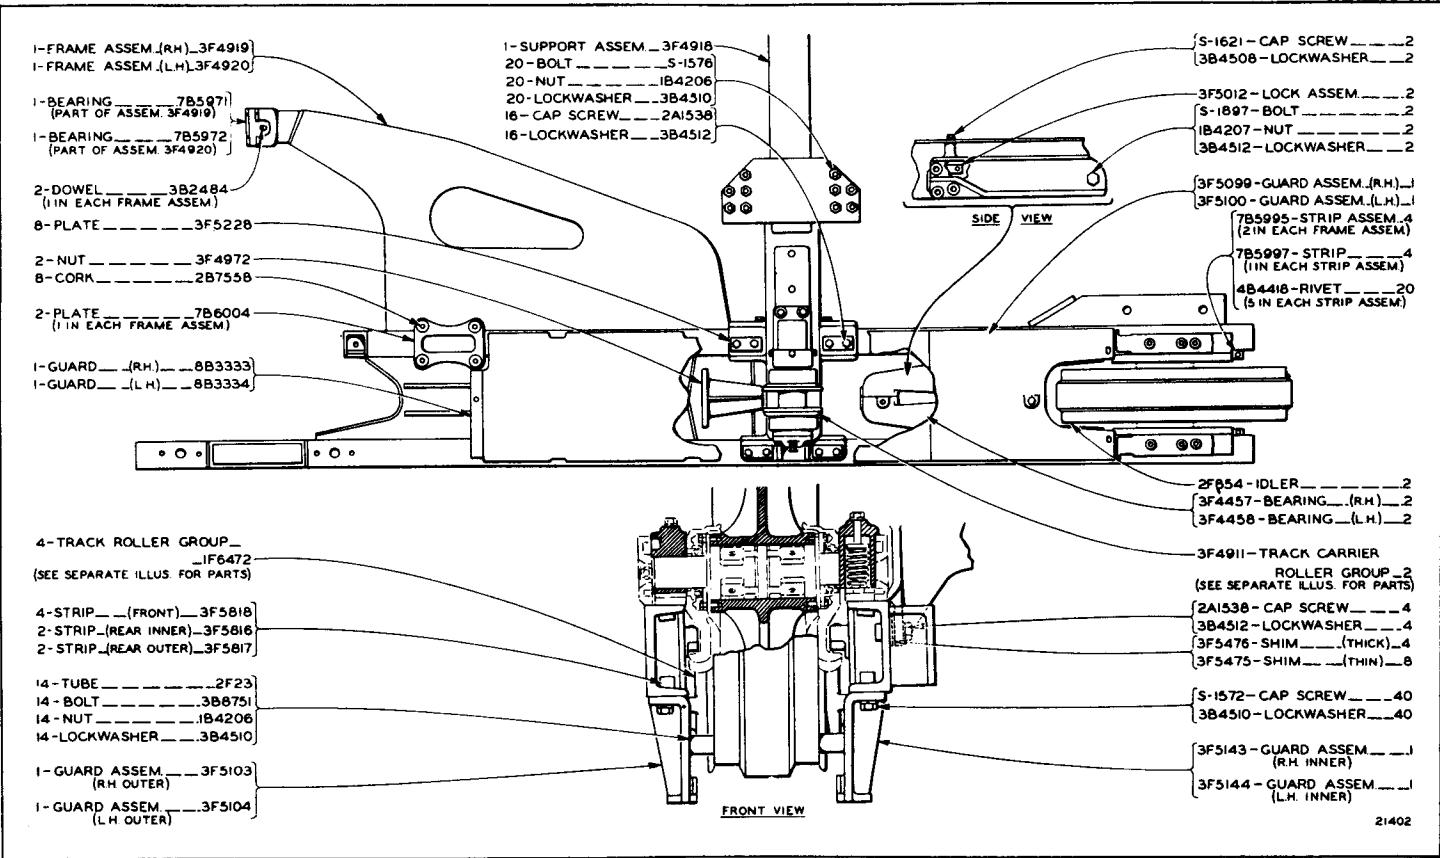


3F5009—7 ROLLER TRACK ROLLER FRAME GROUP—Non-oscillating Type

Effective with Serial No. 4R2266—For use with Traxcavator

3F4911 parts shown on Page 140. 45 Link Track Group shown on Page 142.

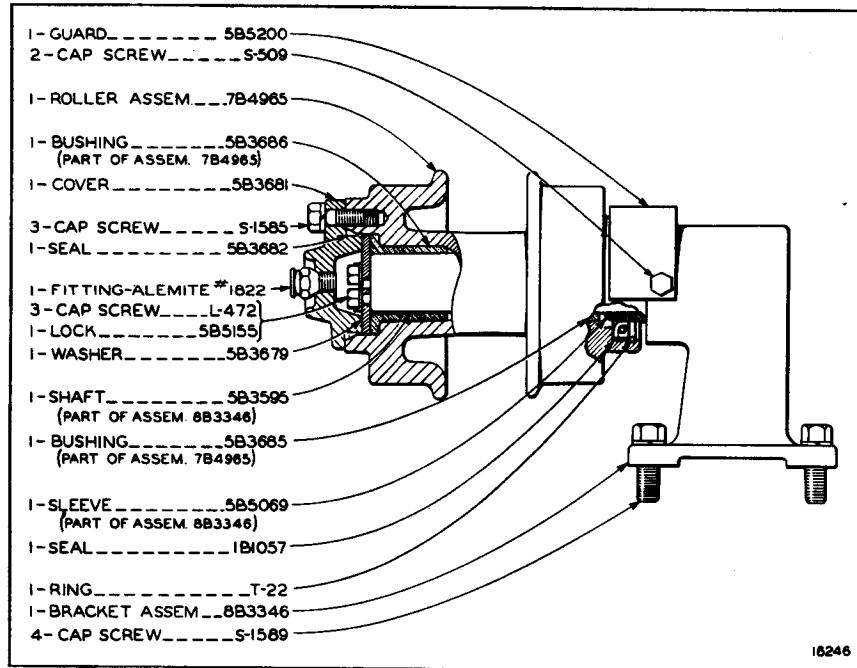


8B3349 TRACK CARRIER ROLLER GROUP (2 Groups Req'd.)
 Part of 8B3475 and 3F4258 Track Roller Frame Groups

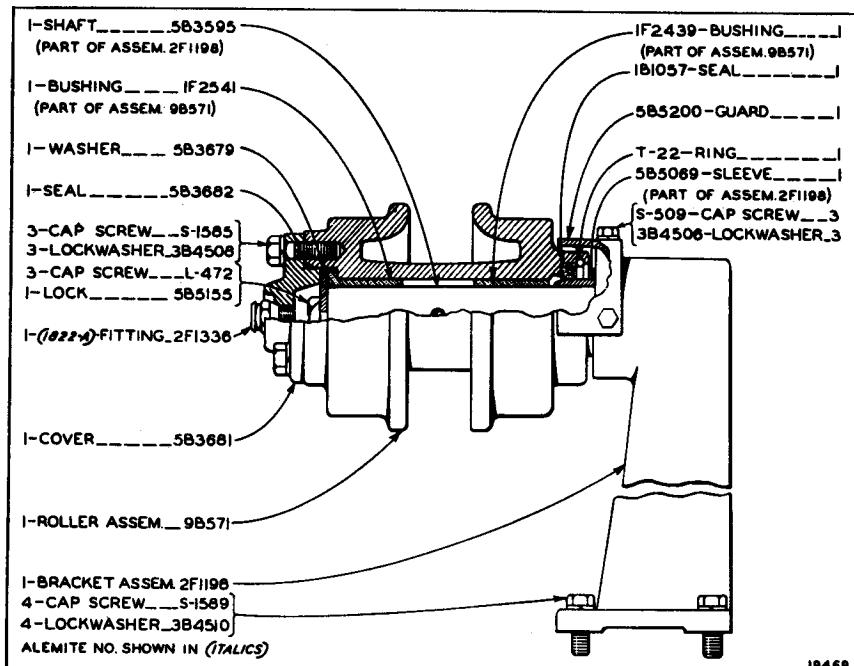


2F1157 TRACK CARRIER ROLLER GROUP (2 Groups Req'd.)
 Effective with Serial No. 4R1251
 Part of 2F857 Front Idler Group

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

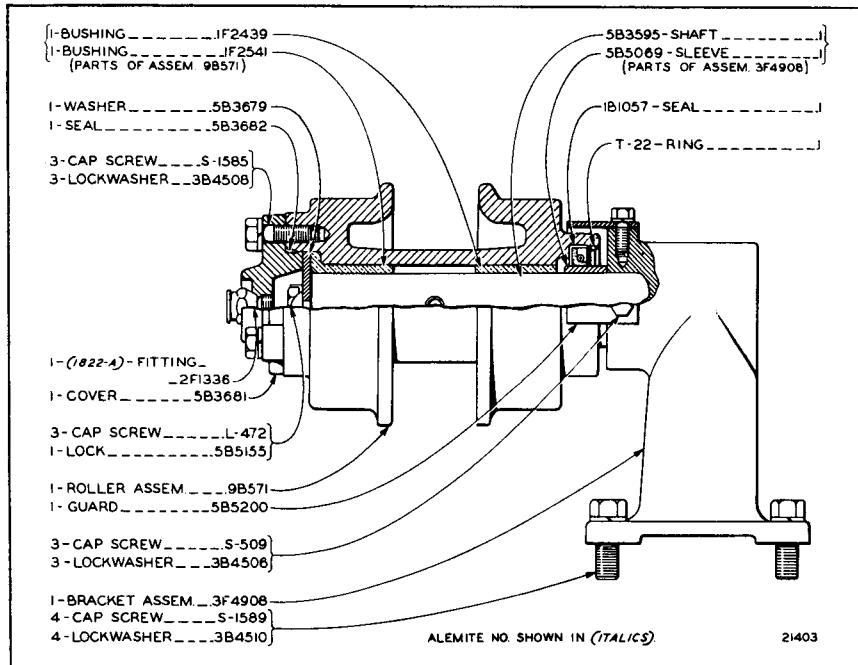


3F4911 TRACK CARRIER ROLLER GROUP (2 Groups Req'd.)
Part of 3F5009 Track Roller Frame Group

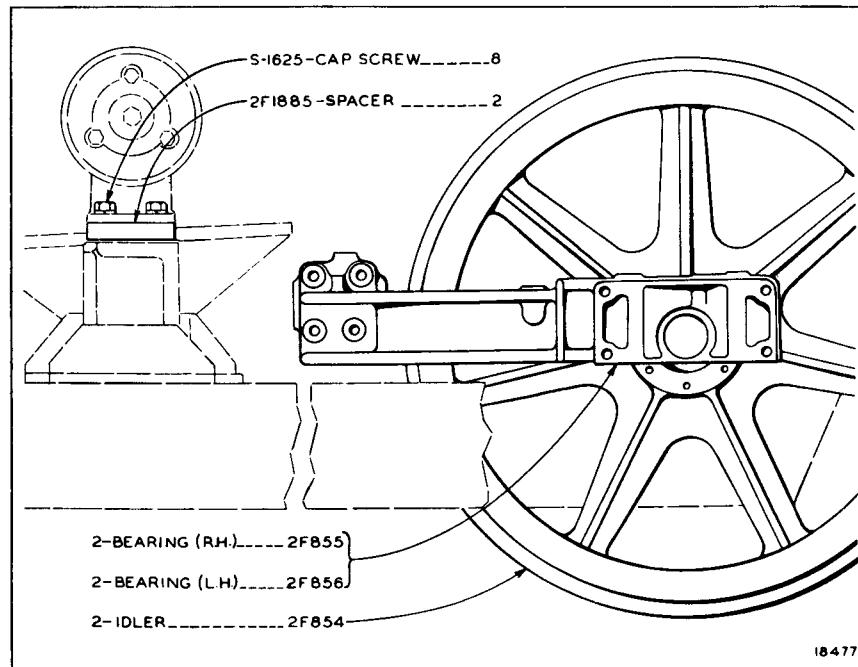


2F1886 FRONT IDLER GROUP—27" O.D.
For use with Non-oscillating Type Track Roller Frame

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

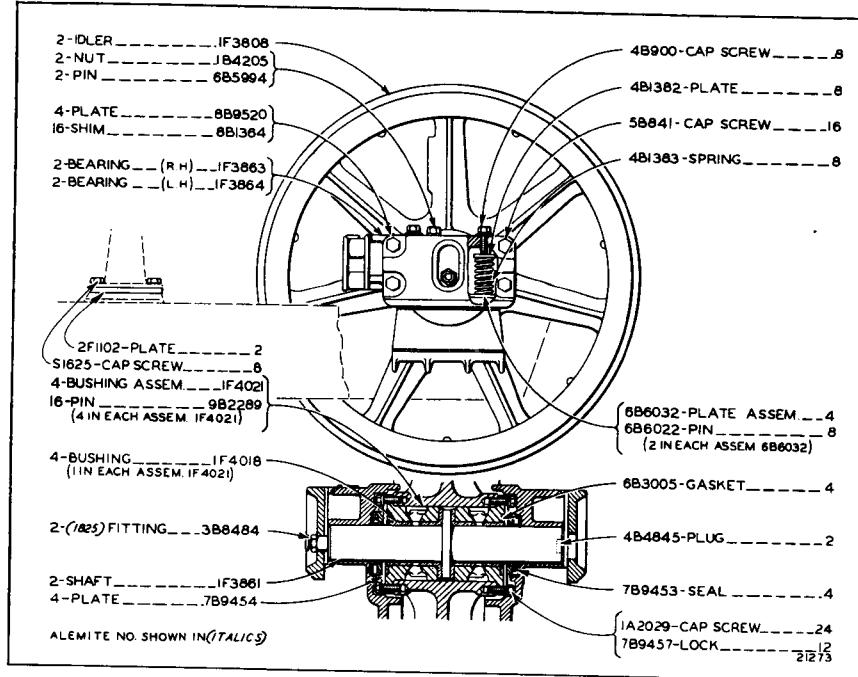

1F3536 FRONT IDLER GROUP—27" O. D.
Serial No. 4R1 to 4R1250 Inclusive

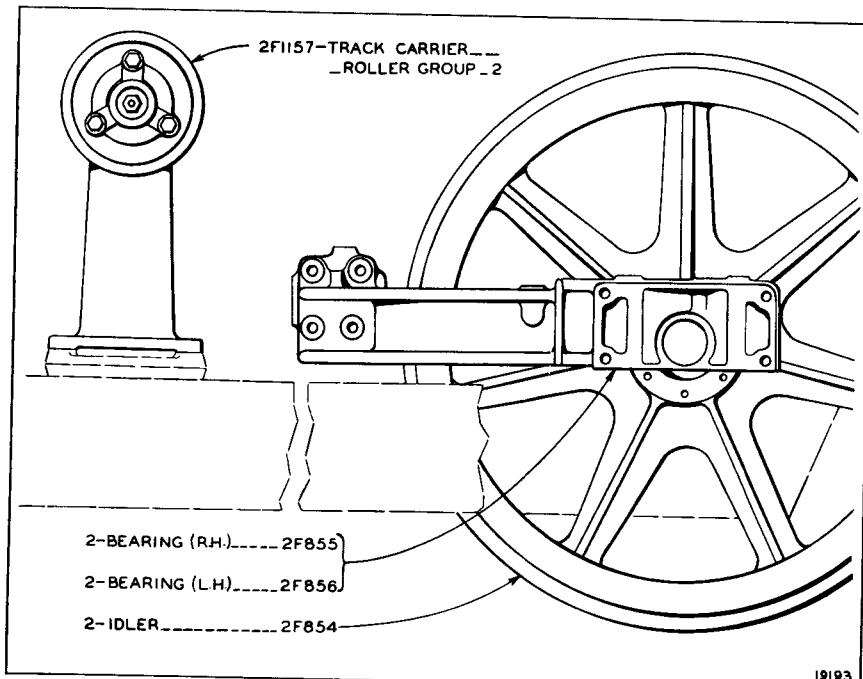

2F857 FRONT IDLER GROUP—27" O. D.
Effective with Serial No. 4R1251

19193

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

40-LINK TRACK GROUP

For use with 27" Outside Diameter Front Idler

16" Grouser Shoe Track Group-Heat Treated

1F3534 Track Group (2 Groups Req'd.)
 Consists of:

1	1F3931	Track Link Assembly
160	2B9511	Bolt
160	3B4509	Lockwasher
160	2B9512	Nut
40	3B248	Shoe

16" Flat Shoe Track Group

2F1848 Track Group (2 Groups Req'd.)
 Consists of:

1	1F3931	Track Link Assembly
160	2F1009	Bolt
160	2B9512	Nut
160	3B4509	Lockwasher
40	2B7314	Shoe

18" Grouser Shoe Track Group-Heat Treated

1F7650 Track Group (2 Groups Req'd.)
 Consists of:

1	1F3931	Track Link Assembly
160	2B9511	Bolt
160	2B9512	Nut
160	3B4509	Lockwasher
40	3B247	Shoe

45-LINK TRACK GROUP

For use with Seven Roller Track Roller Frame and 27" O.D. Front Idler
 Effective with Serial No. 4R1266


16" Flat Shoe Track Group

3F5005 Track Group (2 Groups Req'd.)
 Consists of:


1	3F5006	Track Link Assembly
45	2B7314	Shoe
180	2F1009	Bolt
180	2B9512	Nut
180	3B4509	Lockwasher

Track Link Assembly parts are shown with Standard Track.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

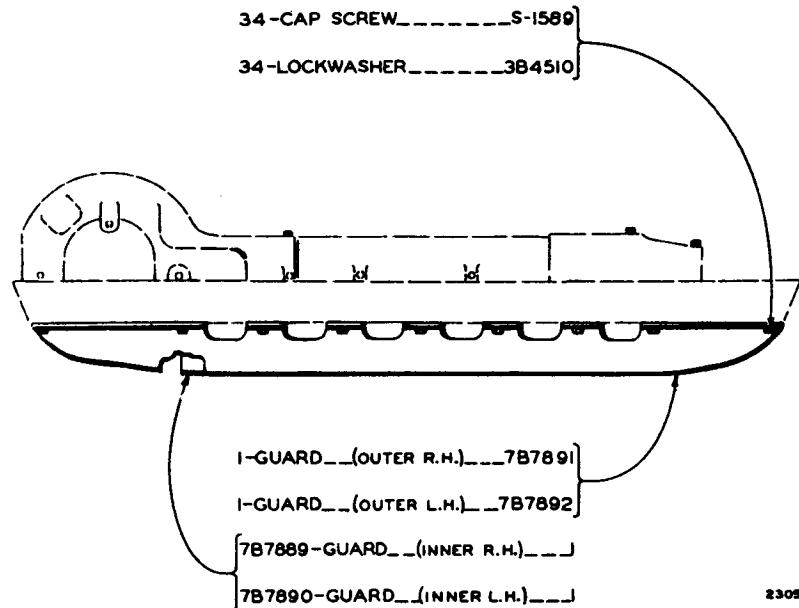

4F7236 TRACK ROLLER DIRT GUARD GROUP—Light Duty

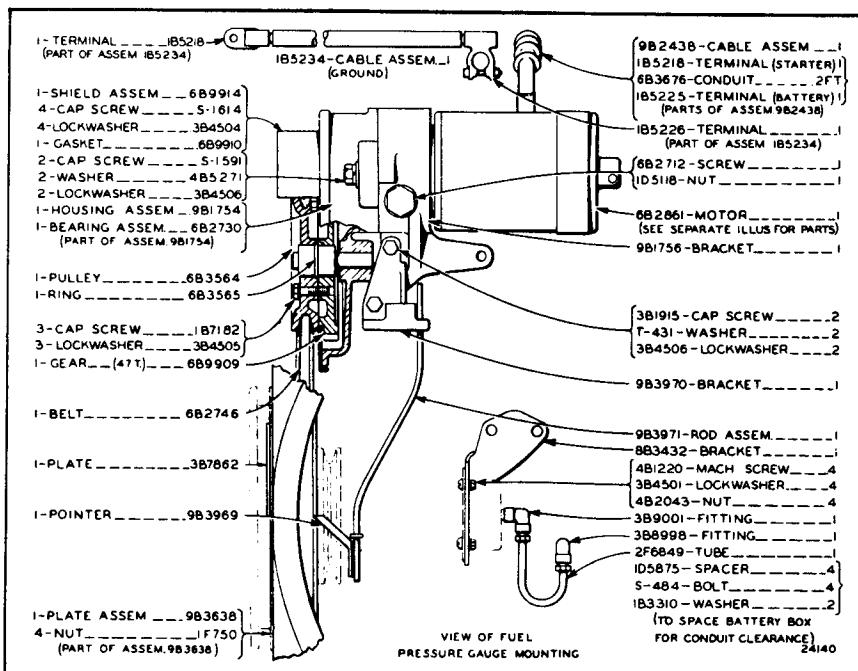


5F3199 ELECTRIC STARTER GROUP—Starting Engine


Effective with Serial No. 4R3570. For use with Lights.

6B2861 Motor is shown on insert between Pages 144 & 145.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

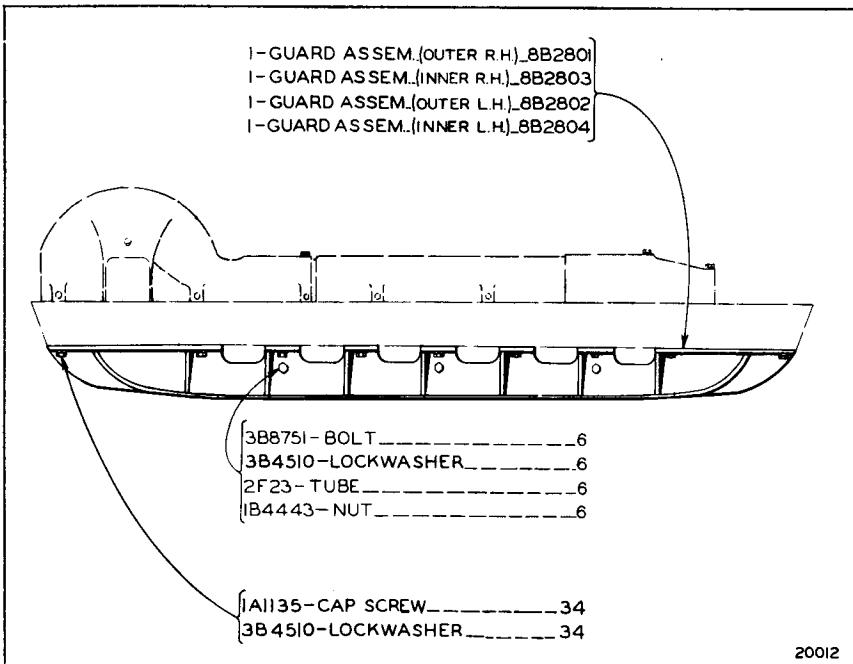


8B2868 TRACK ROLLER FRAME GUARD GROUP—Heavy Duty

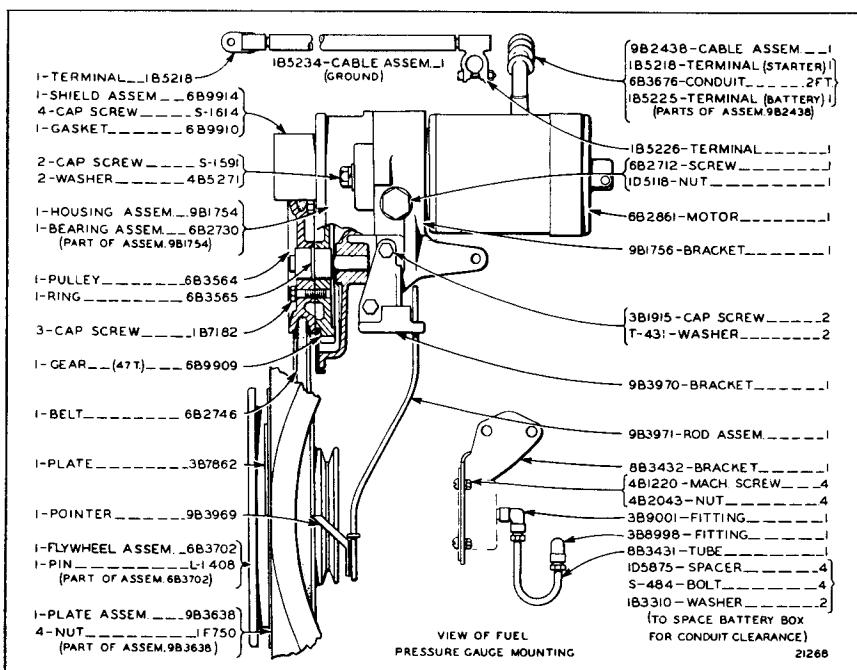9B1825 ELECTRIC STARTER GROUP—Starting Engine
For use with Lights

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

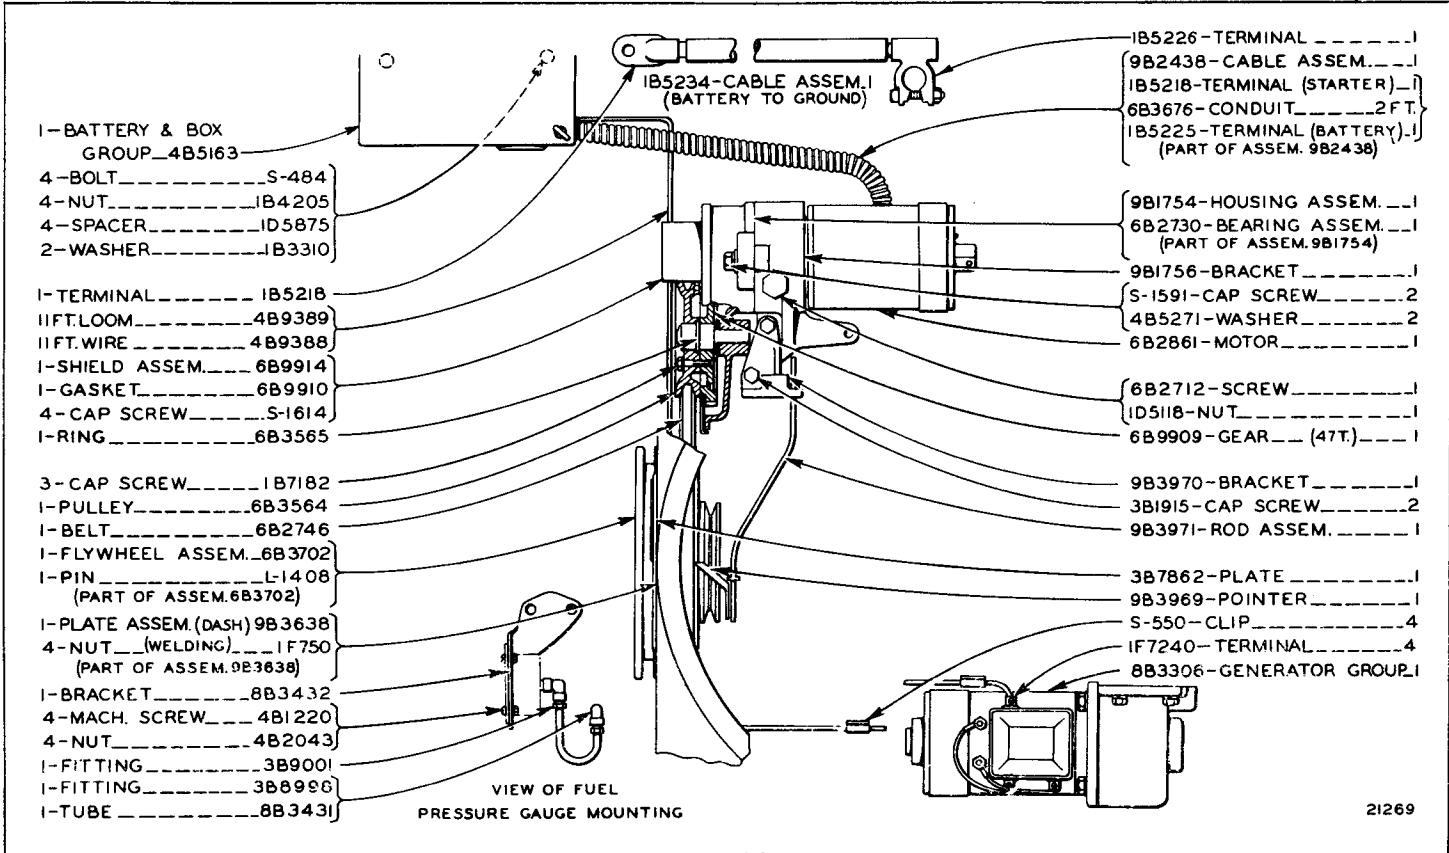


9B2439 ELECTRIC STARTER GROUP—Starting Engine—For use without Lights

4B5163 Battery and Box Group parts are shown on Page 148.

8B3306 Generator Group parts are shown on Page 148.

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

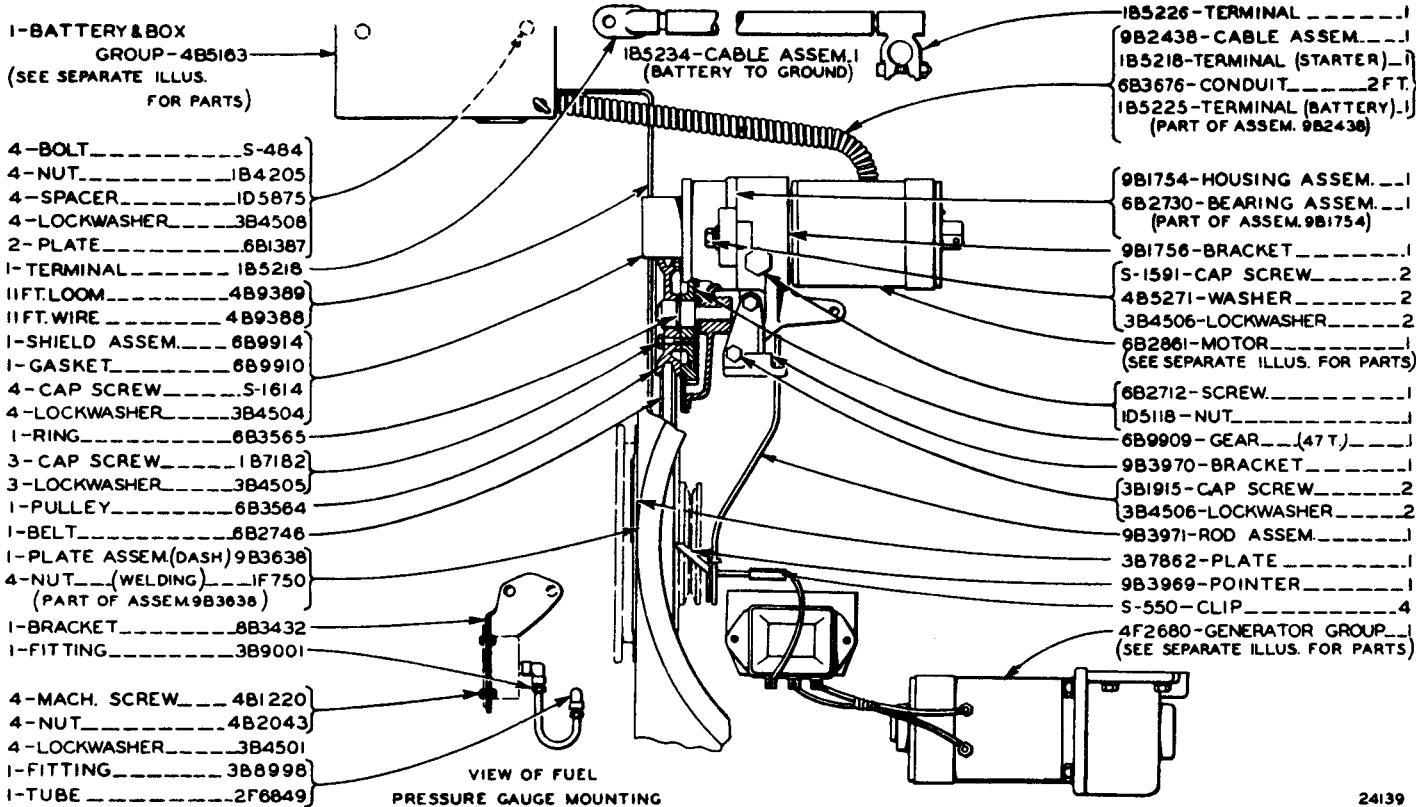


5F3198 ELECTRIC STARTER GROUP—Starting Engine

Effective with Serial No. 4R3570. For use without Lights.

4F2680 parts are shown on insert between Pages 148 & 149. 4B5163 parts are shown on Page 148. 6B2861 parts are shown on reverse side of insert.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

6B2861 MOTOR

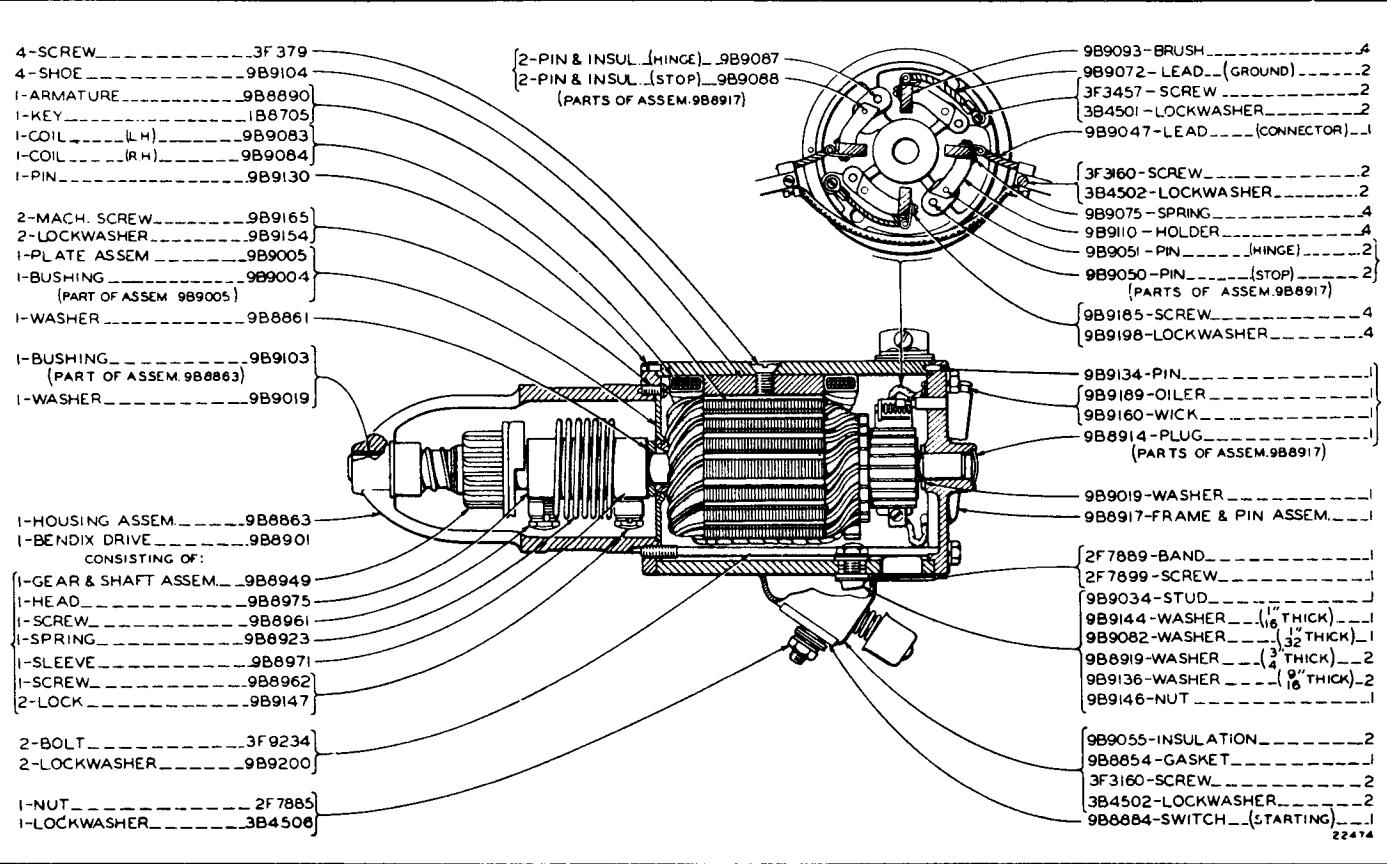




IB1301
DASH LAMP-1



2B9375 TAIL LAMP-1



W-423
BRACKET-1

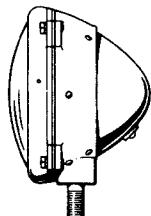

4B1172
LAMP-2



IF7240
TERMINAL-4




4B9232
CLIP-12



4B9233
CLIP-2



S-550
CLIP-8

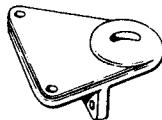

2B6186
BRACKET-2



2B8352
WASHER-2

IF732-GENERATOR GROUP
-OR-
8B9386-GENERATOR GROUP
4B9388-WIRE
4B9389-LOOM
ID4683-BOLT-($\frac{3}{8} \times 3\frac{1}{2}$)-4
ID4717-NUT-4
2B9369-BOLT-($\frac{5}{16} \times 5\frac{3}{4}$)-4
ID4716-NUT-4
S-158I-BOLT-2
IB4203-NUT-2
IB4206-NUT-2
8B4337-SCREW-2 (DASH LAMP)
21267

8B1585 LIGHTING SYSTEM GROUP—6 Volt, 75 Watt

For use without Battery, with Cab
8B9386 Generator Group is shown on Page 149



IB1301
DASH LAMP-1



2B8352
WASHER-2



2B4551
BRACKET-2



IF7240
TERMINAL-4




8B4337
SCREW-2



S-550 CLIP-12



4B9233 CLIP-2

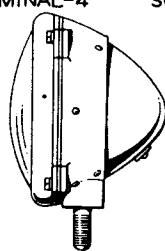

4B1172
LAMP-2


IF732-GENERATOR GROUP
-OR-

8B9386 -GENERATOR GROUP
4B9388-WIRE
4B9389-LOOM
5B2208-CAP SCREW($\frac{1}{8}$ " LONG) 4
S-158I-BOLT-(1" LONG)-4
IB4203-NUT-4
S-158I-BOLT-2
IB4203-NUT-2
T-284-BOLT-($\frac{3}{16}$ " LONG)-2
S-1597-BOLT-(1" LONG)-3
IB4201-NUT-5
IB4206-NUT-2 (DASH LAMP)
21271

8B1587 LIGHTING SYSTEM GROUP—6 Volt, 75 Watt


For use without Battery, without Cab
8B9386 Generator Group is shown on Page 149

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

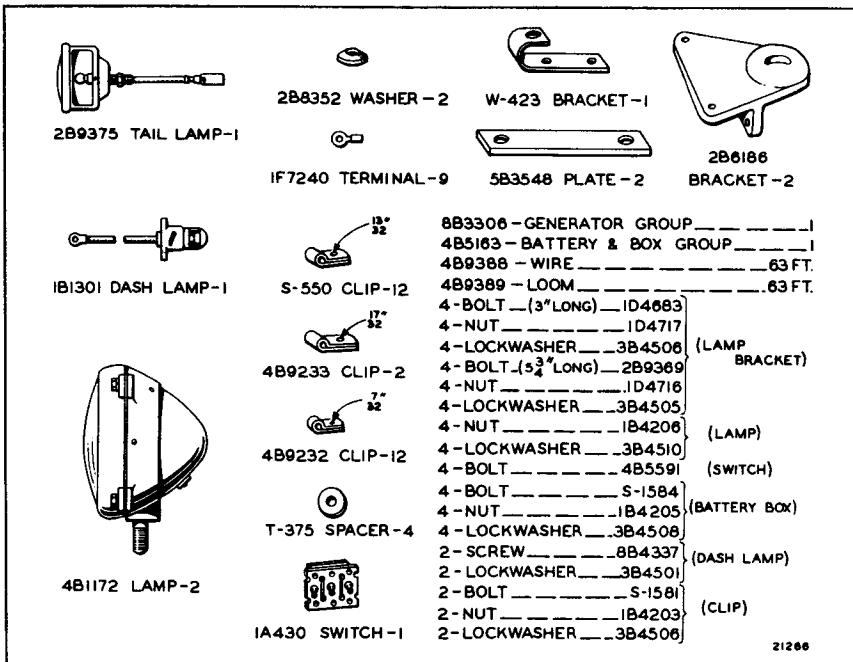

21266


8B1584 LIGHTING SYSTEM GROUP—6 Volt, 90 Watt—For use with Battery, with Cab
 8B3306 Generator Group is shown on Page 148
 4B5163 Battery and Box Group is shown on Page 148

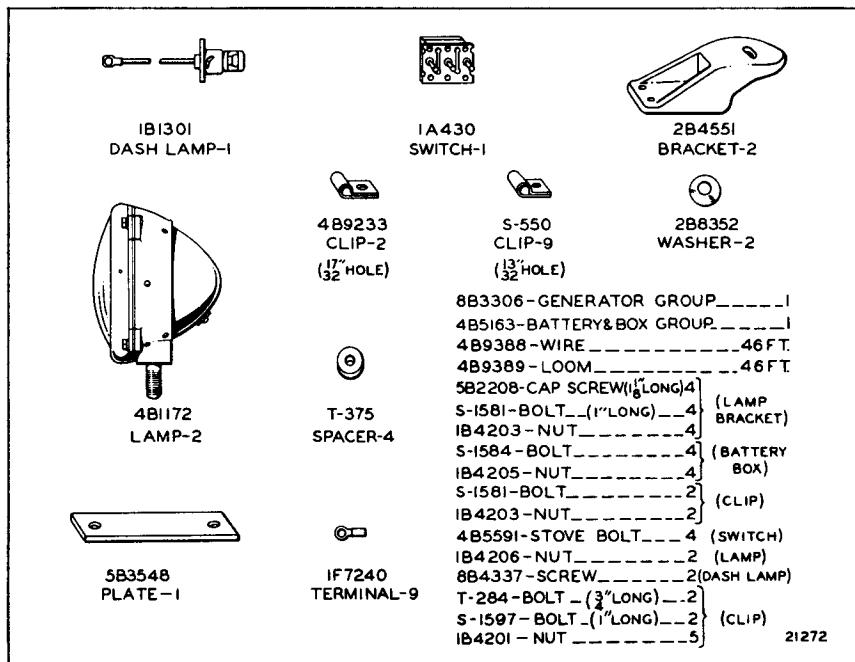

21272


8B1586 LIGHTING SYSTEM GROUP—6 Volt, 90 Watt—For use with Battery, without Cab
 8B3306 Generator Group is shown on Page 148
 4B5163 Battery and Box Group is shown on Page 148

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

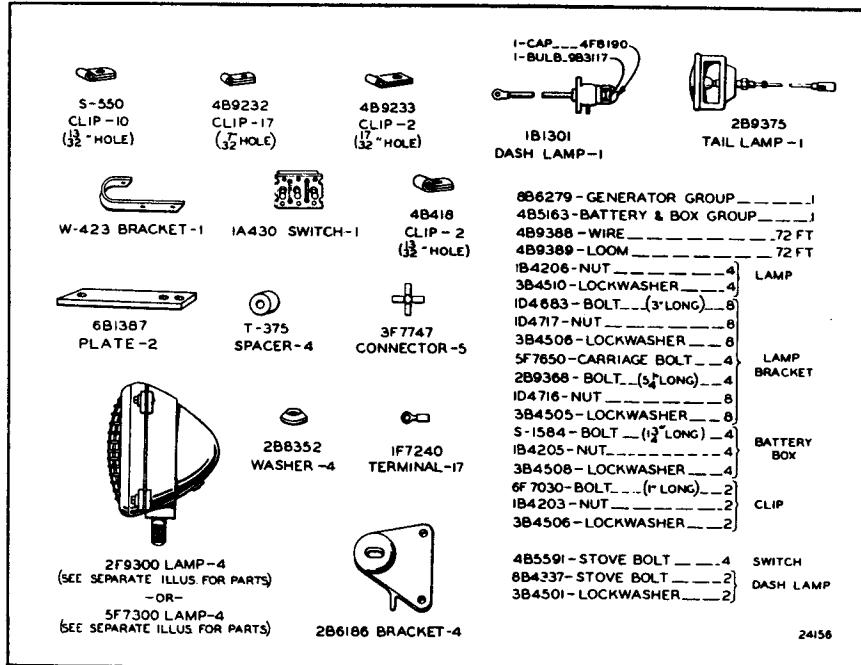


4F1868 LIGHTING SYSTEM GROUP—6 Volt, 175 Watt—For use with Battery, with Cab
4B5163 parts are shown on Page 148

8B6279, 2B9375, 2F9300 and 5F7300 parts are shown on insert

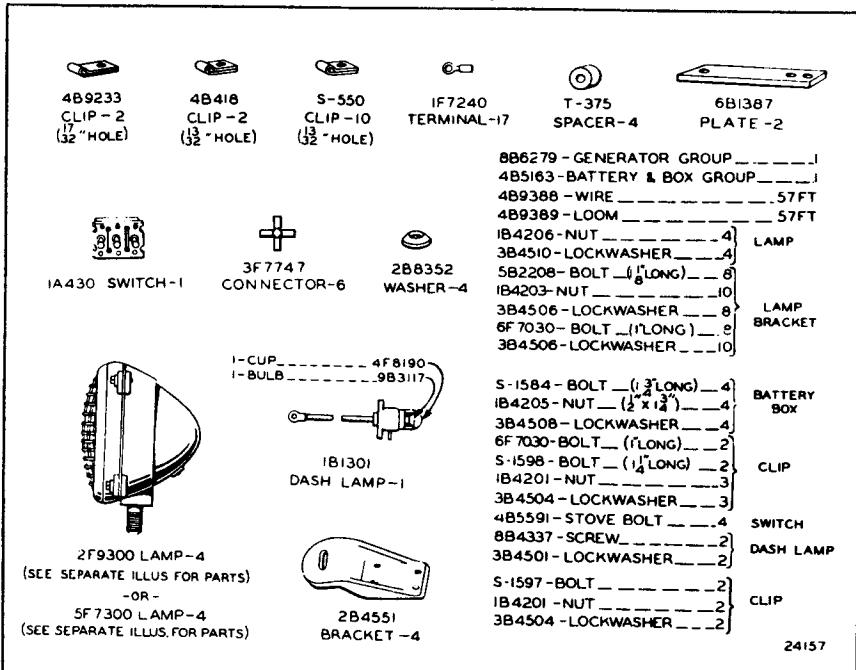

4F1869 LIGHTING SYSTEM GROUP—6 Volt, 175 Watt—For use with Battery, without Cab
4B5163 parts are shown on Page 148. 8B6279, 2F9300 and 5F7300 parts are shown on insert


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

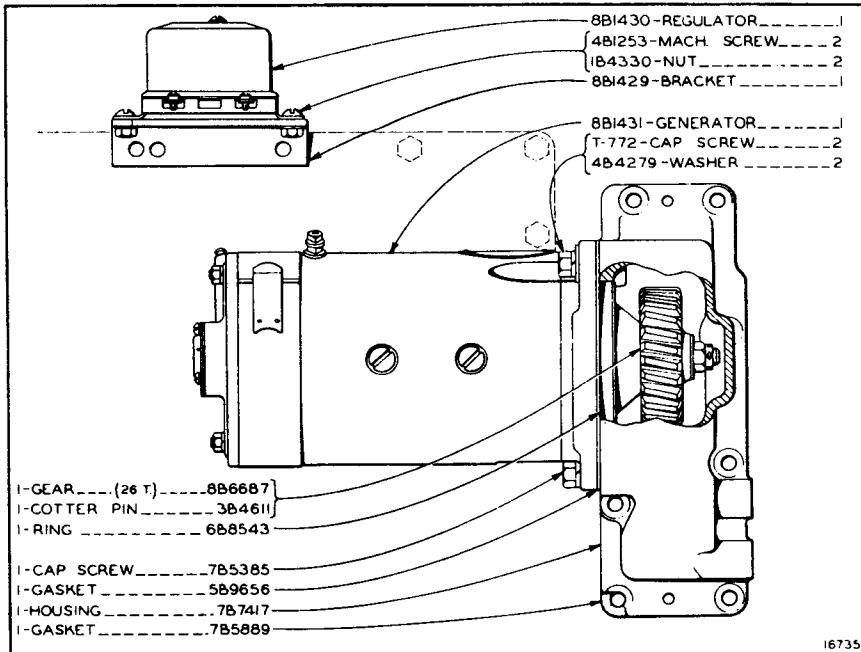

16735

8B6279 GENERATOR GROUP—First Type

Only separate parts serviced

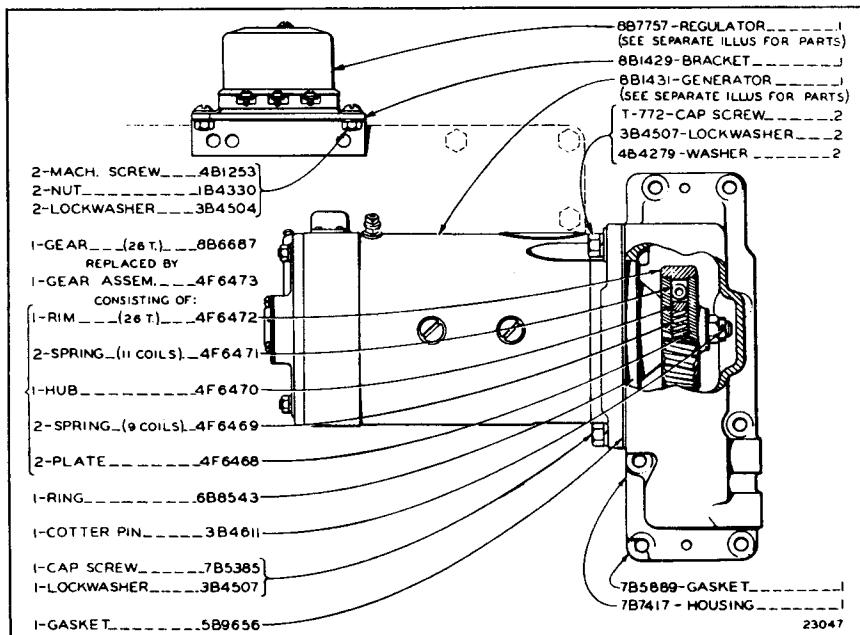Part of 4F1868 and 4F1869 Lighting System Groups
8B1430 and 8B1431 parts are shown on insert

23047

8B6279 GENERATOR GROUP—Second Type


Only separate parts serviced

Part of 4F1868 and 4F1869 Lighting System Groups
8B1431 and 8B7757 parts are shown on insert


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGES 146 & 147 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

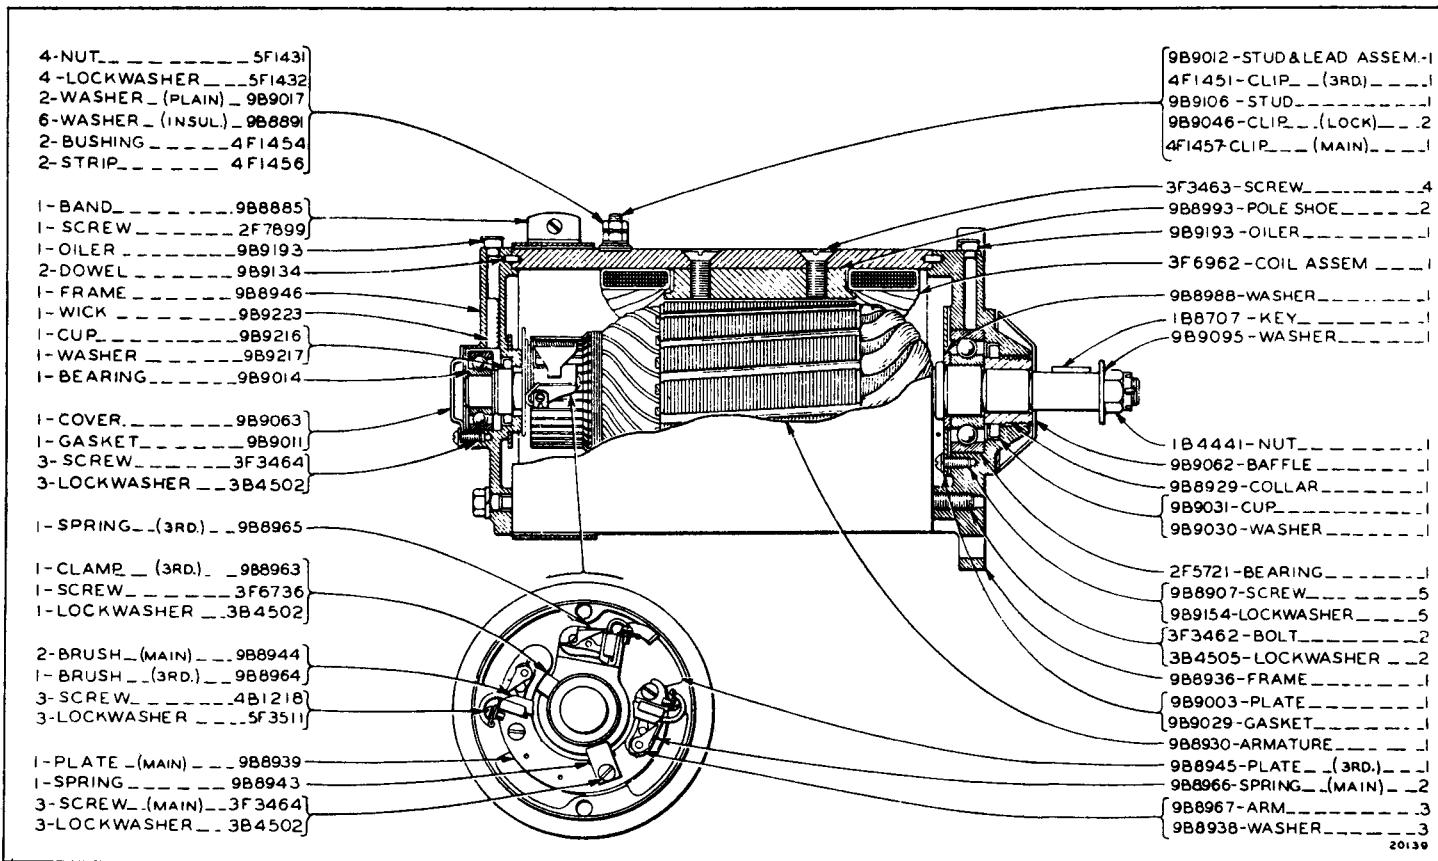


8B1431 GENERATOR
Part of 8B6279 Generator Group

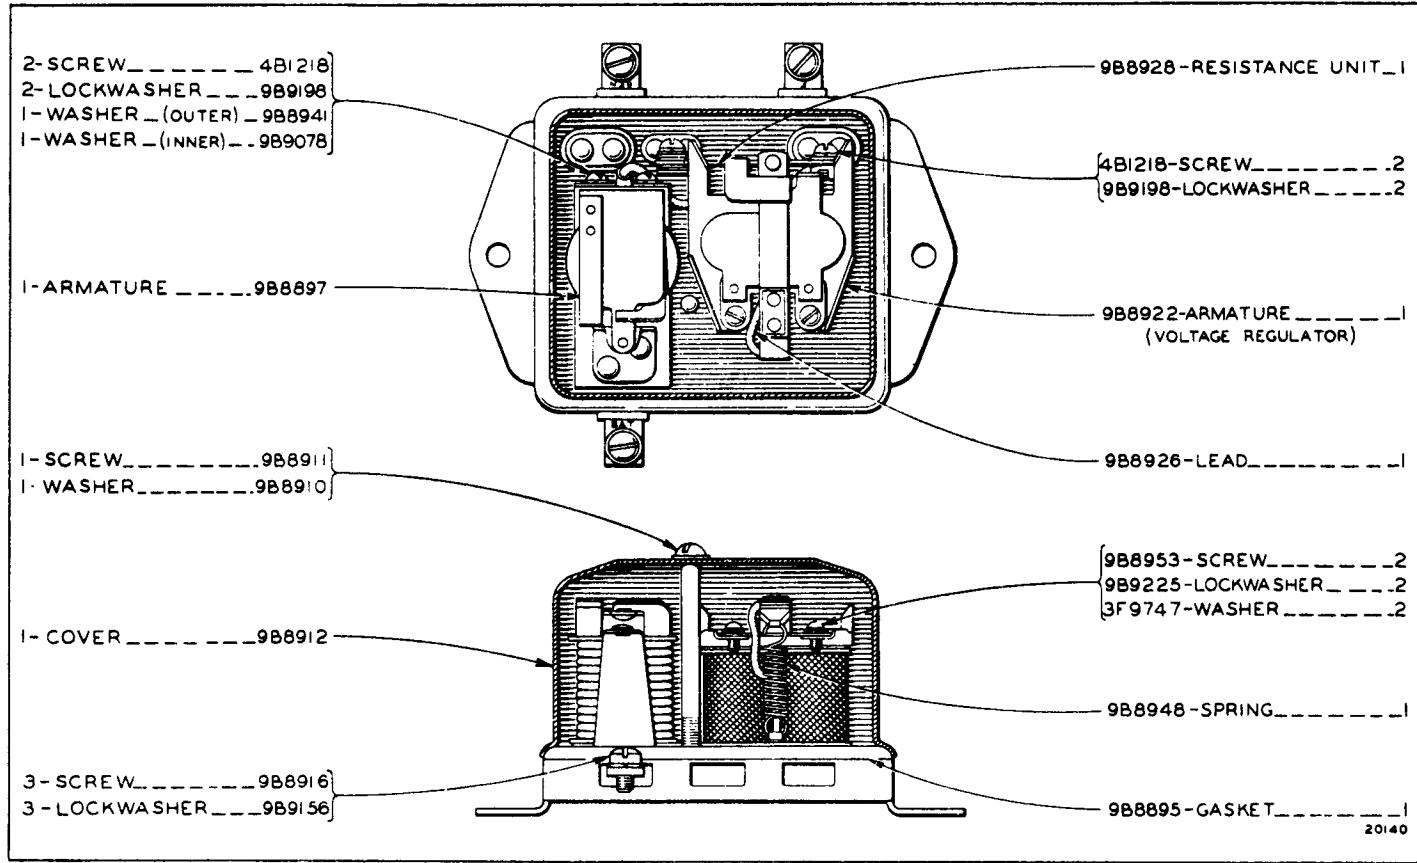

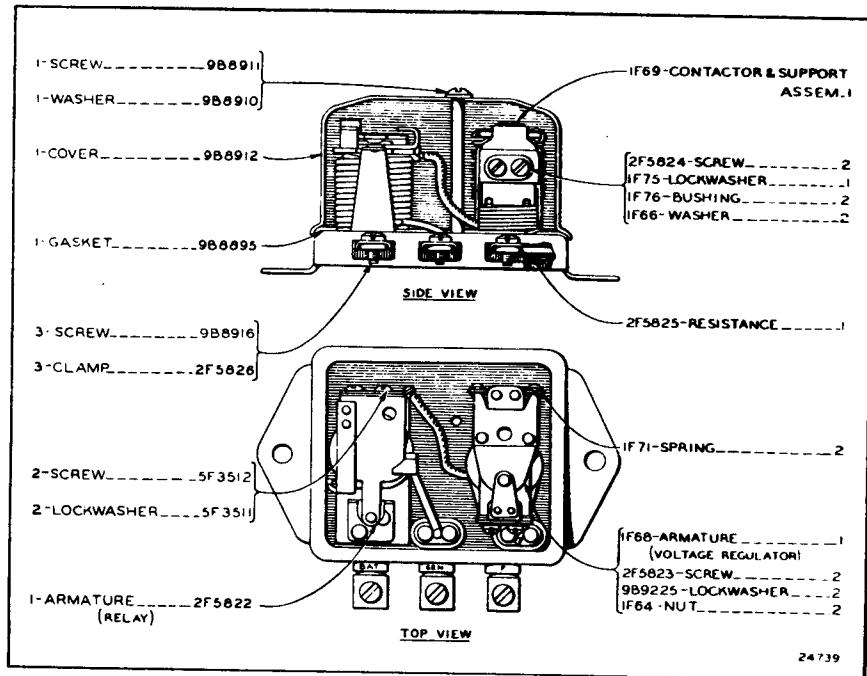


8B7757 REGULATOR
Part of 8B6279 Generator Group

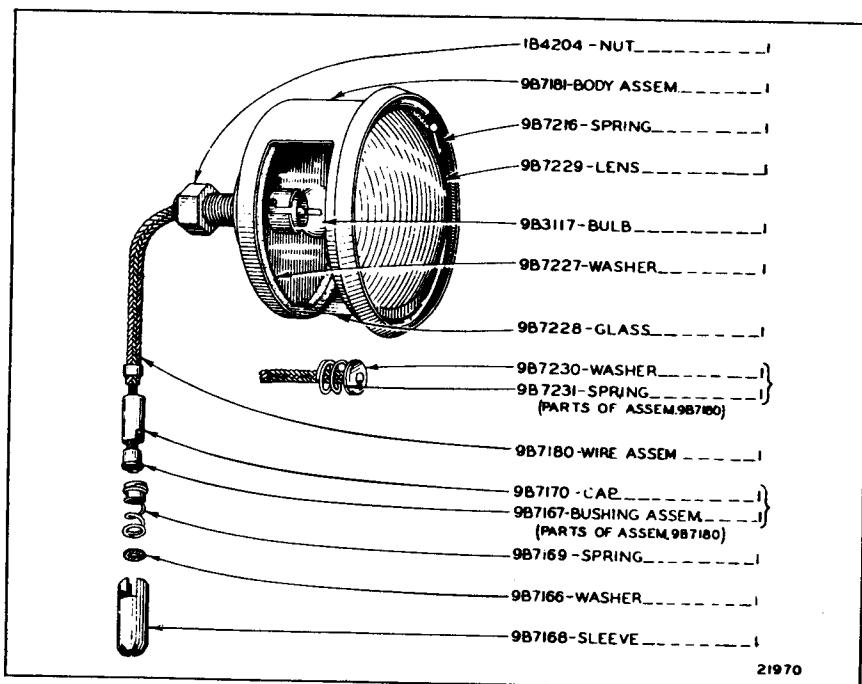


2B9375 TAIL LAMP
Part of Lighting System Groups

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

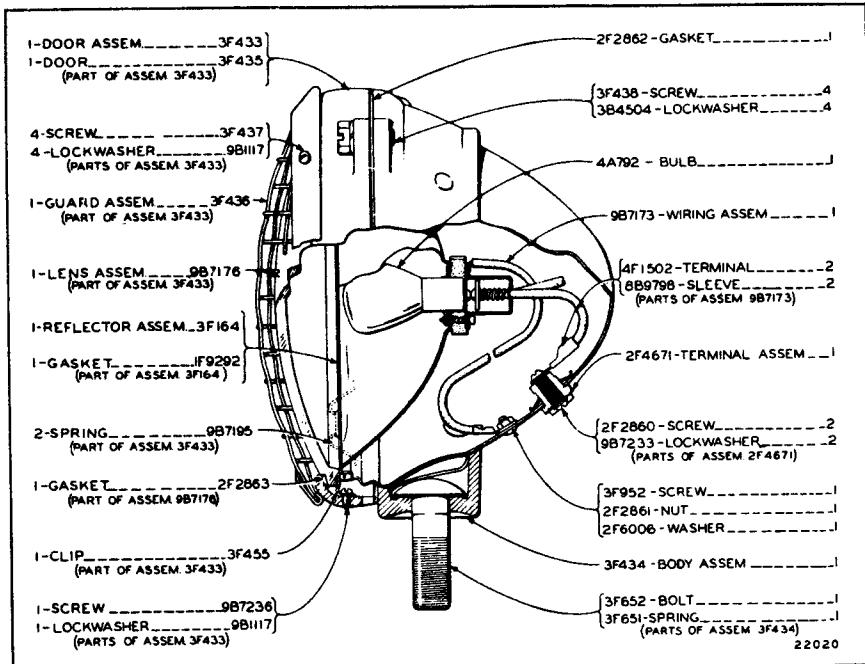

2F9300 HEAD LAMP

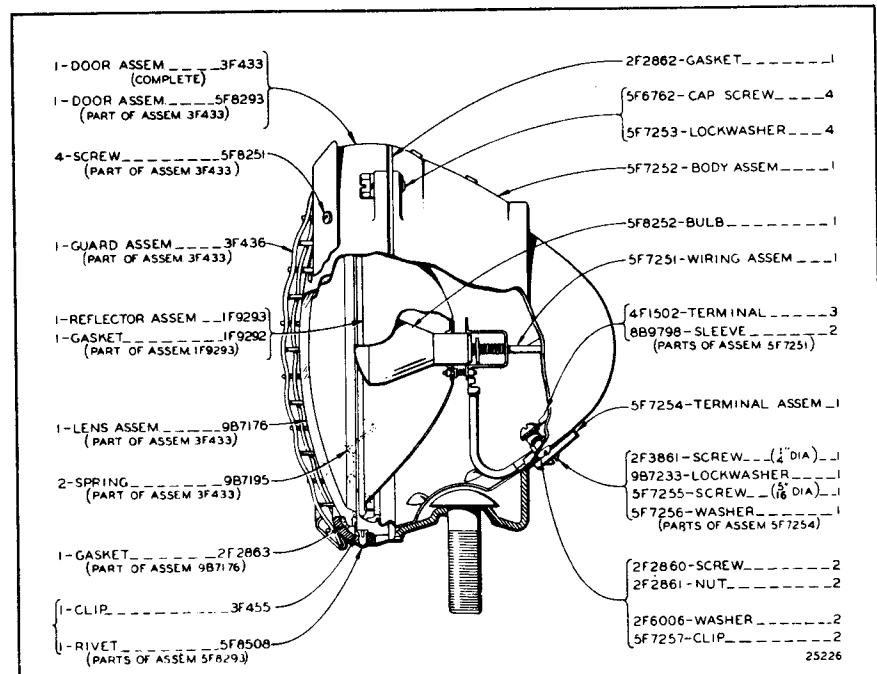

5F7300 HEAD LAMP

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


PARTS CATALOG INSERT

146G

I-SCREW-----2F386
I-LOCKWASHER---9B7233
(PARTS OF TERMINAL ASSEM.)

2-CLIP-----5F7257

I-TERMINAL ASSEM.---5F7254
I-SCREW-----2F386
I-LOCKWASHER---9B7233
I-SCREW-----4B8979
I-WASHER-----5F7256

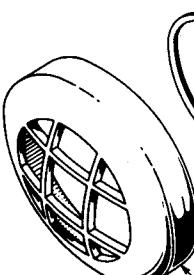

I-SCREW-----4B8979
I-WASHER-----5F7256
(PARTS OF TERMINAL ASSEM.)


2-SCREW-----7F8835
2-NUT-----4B2043
3-LOCKWASHER---9B7233
4B1307-MACH. SCREW-----7
5F7256-WASHER-----7

7F8829-CONNECTOR ASSEM.---1
7F8832-PLATE-----1

7F8828-SEALED UNIT-----1
7F8833-GASKET-----1

27932



7F4625 LAMP

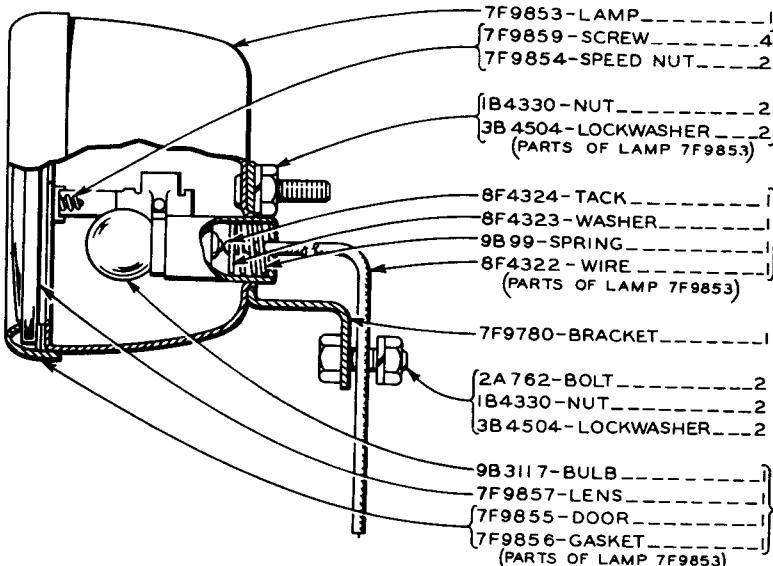





31769

9F1699 TAIL LAMP GROUP

  ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE


		
IB1301 DASH LAMP - 1	2B8352 WASHER-4	2B4551 BRACKET - 4
 		 
8B4337 SCREW-2	3B4501 LOCKWASHER-2	IF7240 TERMINAL-6
S-550 CLIP-13		
4B9233 CLIP-2		
8B9385-GENERATOR GROUP		OR
IF731-GENERATOR GROUP		1
4B9388-WIRE		4 FT.
4B9389-LOOM		4 FT.
5B2208-CAP SCREW (1/8" LONG) .8		
S-1581-BOLT (1" LONG) .8		(LAMP
IB4203-NUT .8		BRACKET)
3B4506-LOCKWASHER .16		
S-1581-BOLT .2		
IB4203-NUT .2		(CLIP)
3B4506-LOCKWASHER .2		
T-284-BOLT (3/4" LONG) .2		
S-1597-BOLT (1" LONG) .3		(CLIP)
IB4201-NUT .5		
3B4504-LOCKWASHER .5		
IB4206-NUT .4		
3B4510-LOCKWASHER .4		(LAMP) 21270

    8B1588 LIGHTING SYSTEM GROUP
 4 Lights, 6 Volt, 130 Watt—For use without Battery, without Cab
 8B9385 Generator Group is shown on Page 150


			
2B9375 TAIL LAMP-1	2B8352 WASHER-4	W-423 BRACKET-1	2B6186 BRACKET-2
			
IF7240 TERMINAL-6			
		IF731-GENERATOR GROUP (SEE SEPARATE ILLUS. FOR PARTS)	
IB1301 DASH LAMP-1	S-550 CLIP-8	4B9388-WIRE	47FT.
		4B9389-LOOM	47FT.
		12-BOLT (3" LONG) .1D4683	
		12-NUT .1D4717	
		12-LOCKWASHER .3B4506	(LAMP
		4-BOLT (.5" LONG) .2B9368	BRACKET)
		4-NUT .1D4716	
		4-LOCKWASHER .3B4505	
	4B9232 CLIP-22	4-NUT .1B4206	(LAMP)
2F9300 LAMP-4		4-LOCKWASHER .3B4510	
-OR-			
4B1172 LAMP (W/O GUARD) - 4		2-BOLT .S-1581	
	2B4551 BRACKET-2	2-NUT .1B4203	(CLIP)
		2-LOCKWASHER .3B4506	
		2-SCREW .8B4337	(DASH LAMP)
		2-LOCKWASHER .3B4501	
			21265

2F9706 LIGHTING SYSTEM GROUP
 4 Lights, 6 Volt, 130 Watt—For use without Battery, with Cab
 IF731 Generator Group is shown on Page 150


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

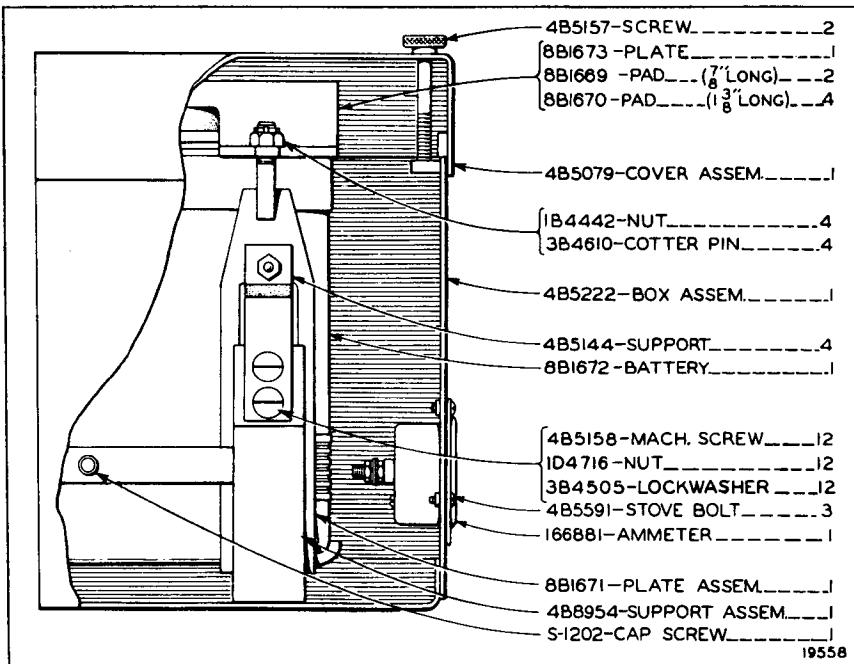

4B5163 BATTERY AND BOX GROUP—6 Volt

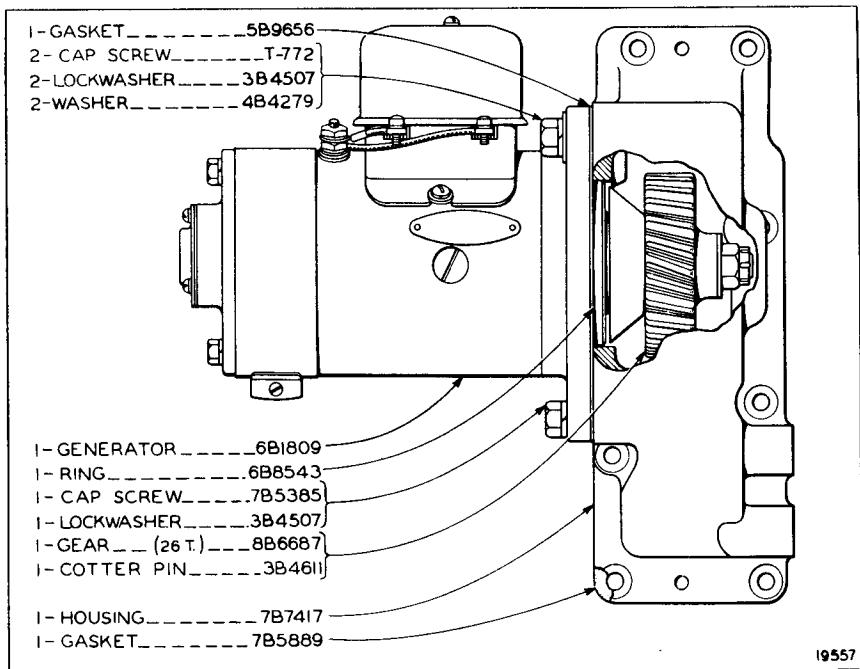
8B3306 GENERATOR GROUP—6 Volt, 90 Watt
For use with Battery

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

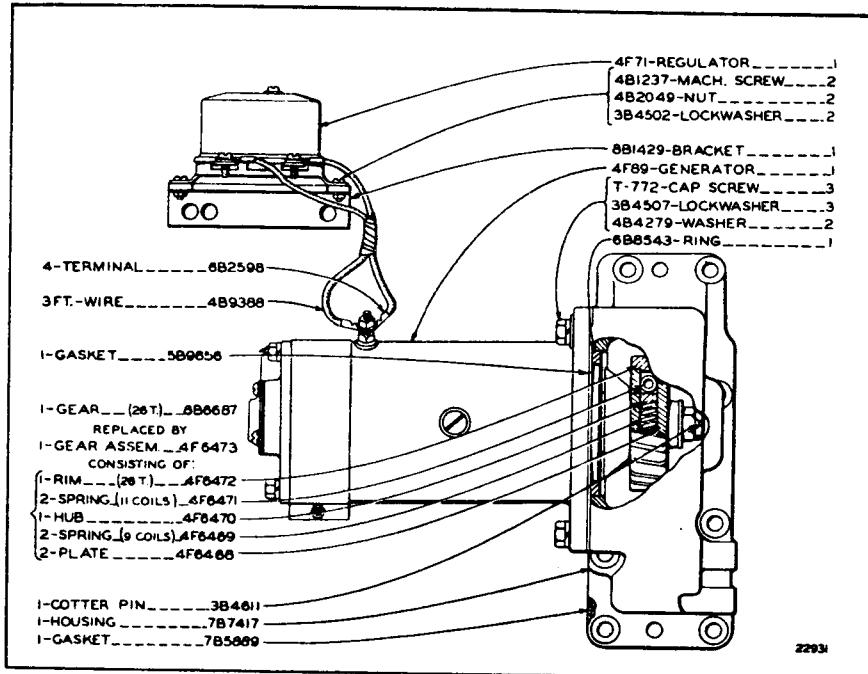**4F2680 GENERATOR GROUP**


6 Volt, 115 Watt—For use with Battery

4F71 parts are shown below. 4F89 parts are shown on reverse side of insert.

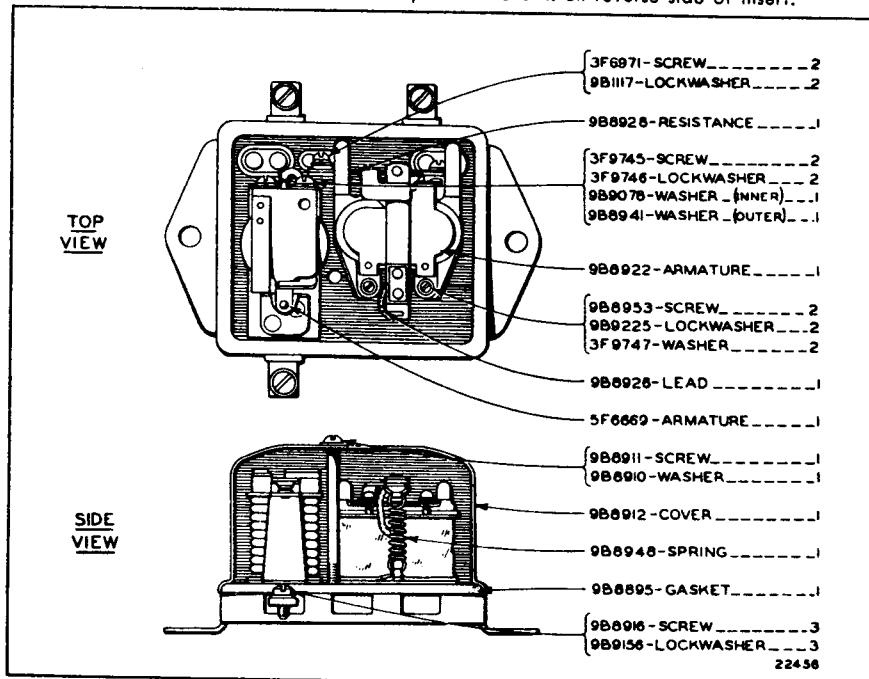**4F71 REGULATOR****ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE**

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

4F89 GENERATOR

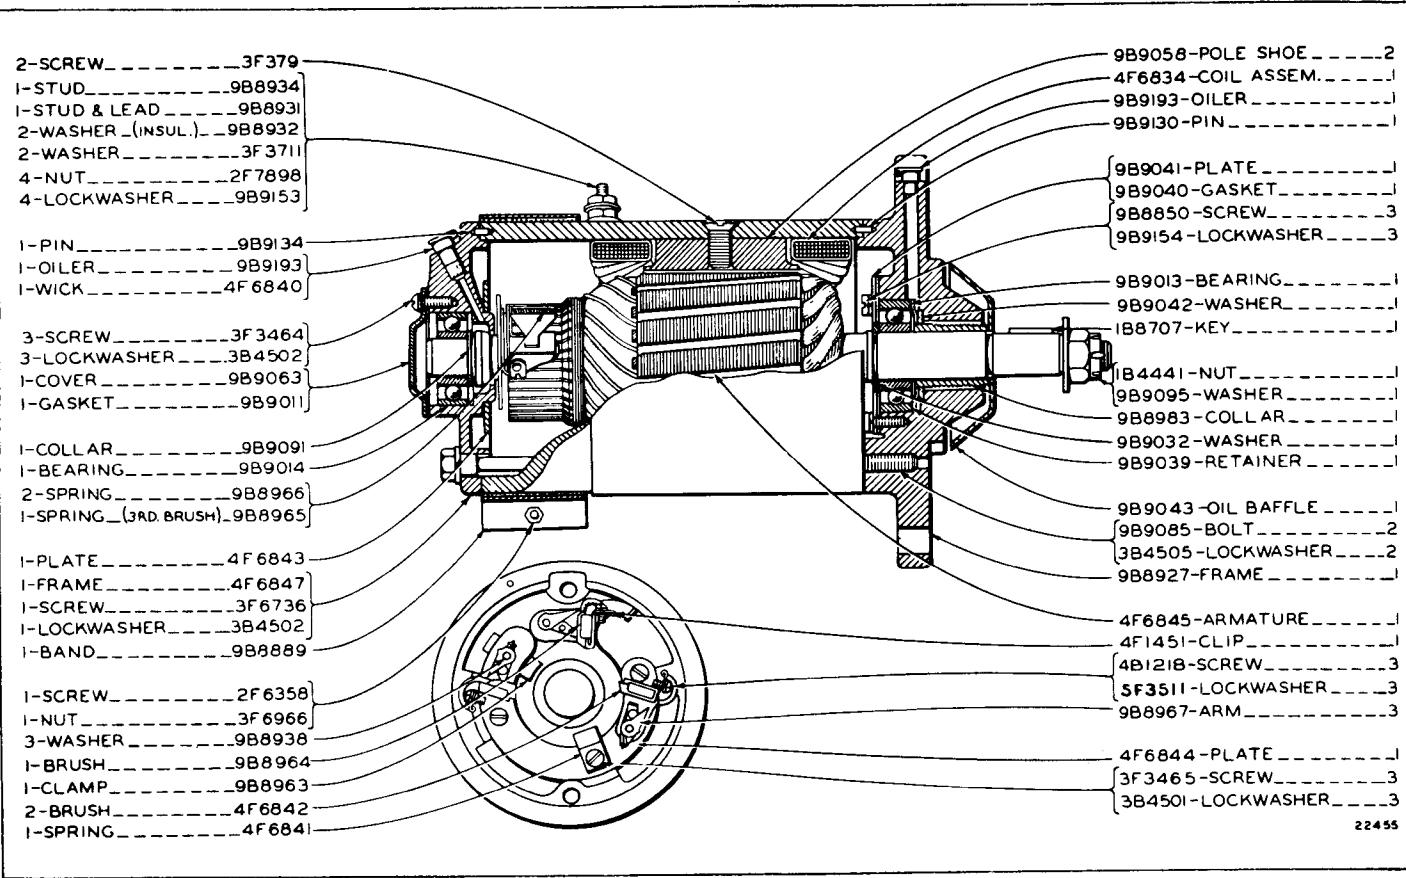

INSERT BETWEEN PAGES 148 & 149 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

• USED AS REQUIRED


1-COIL (No.1 UPPER R.H.)	9B9820	9B9891-ARMATURE	1
1-COIL (No.2 LOWER R.H.)	9B9822	9B9792-FRAME ASSEM.	1
1-COIL (No.3 LOWER L.H.)	9B9821	9B9564-SCREW	2
1-COIL (No.4 UPPER L.H.)	9B9819	9B9616-GASKET (PARTS OF ASSEM 9B9894	2
1-STRIPL (INSUL.)	9B9644	9B9894-COVER ASSEM.	1
1-CLIP	9B9640	9B9633-CABLE	1
2-PIN	9B9797 (PARTS OF ASSEM 9B9792)	9B9718-SCREW	1
1-PLUG	9B9725	9B9654-LOCKWASHER	1
2-SCREW	9B9711	9B9689-REGULATOR ASSEM.	1
1-GASKET	9B9616	9B9582-PLUG (FELT)	1
1-OIL SLINGER	9B9606	9B9574-BOLT	2
1-PACKING	9B9583	9B9759-NUT	2
1-WASHER	9B9609	9B9652-LOCKWASHER	2
1-KEY	9B9788	9B9616-GASKET	2
1-NUT	9B9600	9B9872-PLATE ASSEM.	1
1-COTTER PIN	9B9692	9B9873-PLATE (PART OF ASSEM. 9B9872)	1
1-WASHER	9B9663	9B9649-WASHER	●
1-COVER	9B9604	9B9648-WASHER	●
1-PLATE ASSEM	9B9883	9B9776-BEARING	1
1-BEARING	9B9774	9B9644-PLUG (FELT)	1
1-OIL SLINGER	9B9613	9B9884-COVER	1
1-RING	9B9625	9B9722-SCREW	2
2-PLATE	9B9846	9B9637-HOLDER ASSEM.	1
4-SCREEN	9B9834	9B9839-HOLDER ASSEM.	1
2-CLOTH	9B9845	9B9642-SPRING	2
4-SCREW	9B9720	9B9851-PLATE	1
4-LOCKWASHER	9B9662	9B9867-WASHER	1
1-PLATE ASSEM	9B9868	9B9597-BUSHING	2
2-PACKING	9B9590	9B9748-WASHER	2
1-SCREW	9B9715	9B9647-WASHER	2
1-LOCKWASHER	9B9659	9B9714-SCREW	4
4-POLE SHOE	9B9691 (PART OF ASSEM 9B9792)	9B9653-LOCKWASHER	4
4-SCREW	9B9723	9B9718-SCREW	2
		9B9655-LOCKWASHER (PARTS OF ASSEM 9B9872)	2

2-BRUSH
(IN EACH ASSEM. 9B9837 &
9B9839)

20010

7B8343 GENERATOR

9B9689 Regulator parts are shown on reverse side of insert

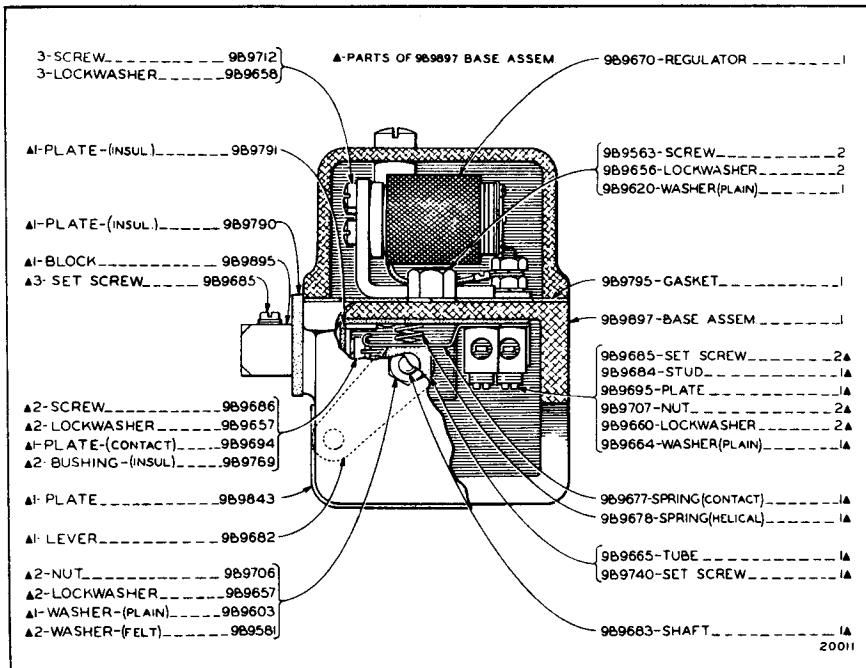


9B9689 REGULATOR

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS


INSERT BETWEEN PAGES 148 & 149 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

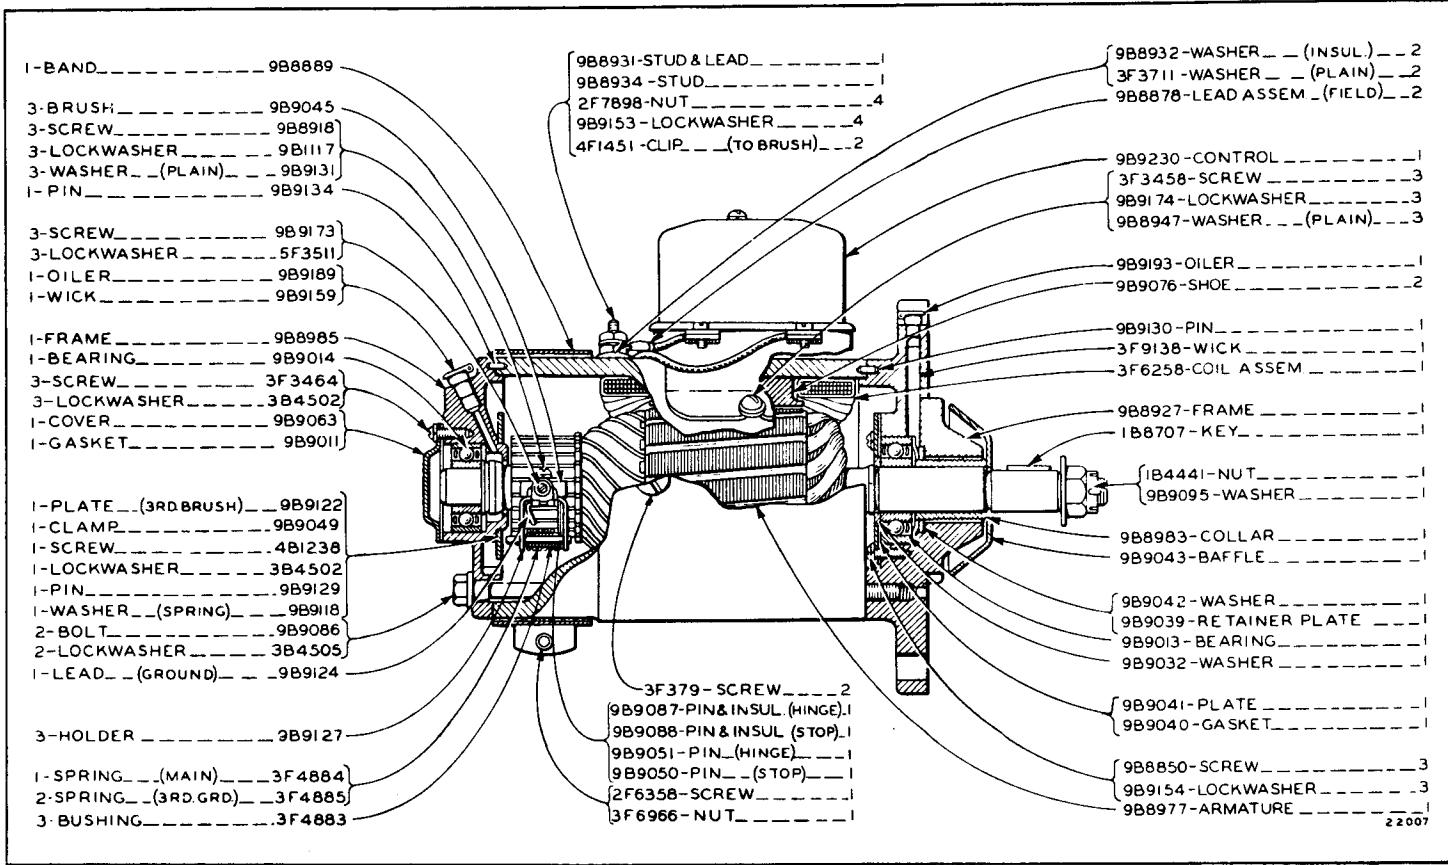

6B1809 GENERATOR

Part of 8B3306 Generator Group shown on Page 148. 9B9230 Voltage Control parts are shown on reverse side of insert
 Only separate parts serviced. When complete Generator is required order 5F4710 Generator Service Group listed on insert

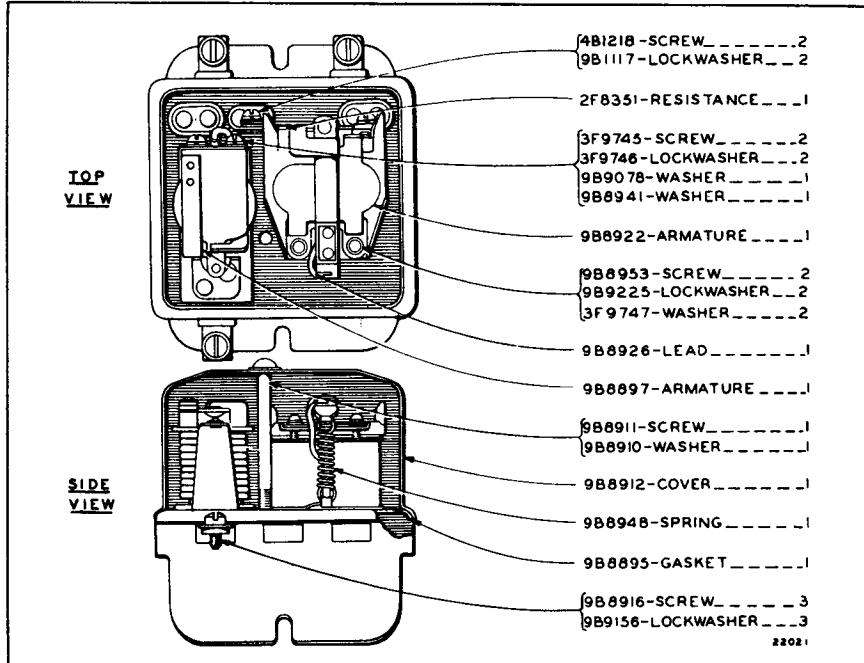


9B9230 VOLTAGE CONTROL
Part of 6B1809 Generator shown on front side of insert

- I 4F71 Regulator Show on insert
or
- I 8B7757 Regulator Show on insert
or
- I 7F3946 Regulator Show on insert
- I 4F89 Generator Show on insert
- 2 3B4502 Lockwasher
- 2 4B1237 Machine Screw
- 2 4B2049 Nut
- 5 Ft. 4B9388 Wire
- 7 6B2598 Terminal
- I 8B1429 Bracket

5F4710 GENERATOR SERVICE GROUP (Replaces 6B1809 Generator)
Only separate parts serviced


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

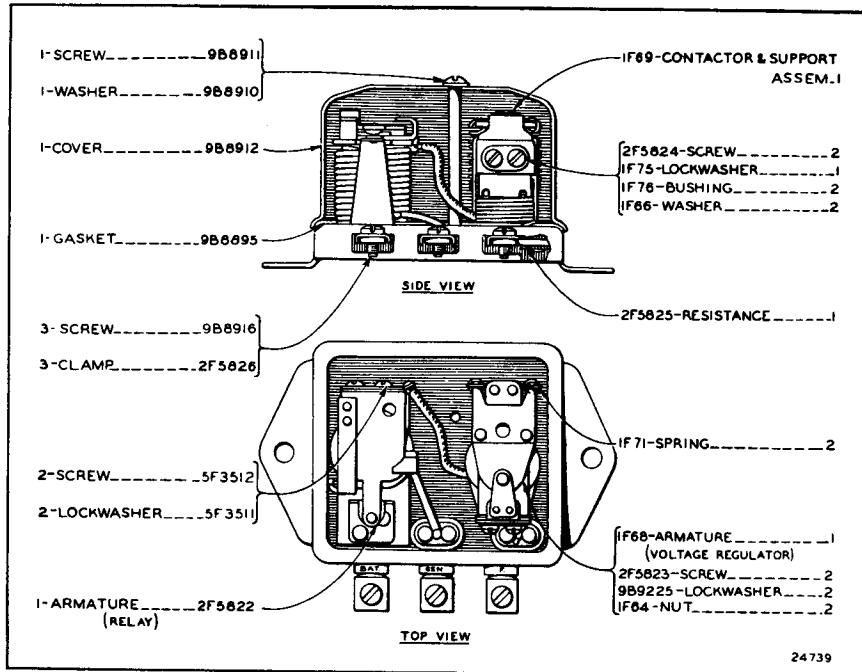**8B7757 REGULATOR**

Part of 5F4710 Generator Service Group listed on insert

Only separate parts serviced


When complete Regulator is required order 7F3946 shown on reverse side of insert

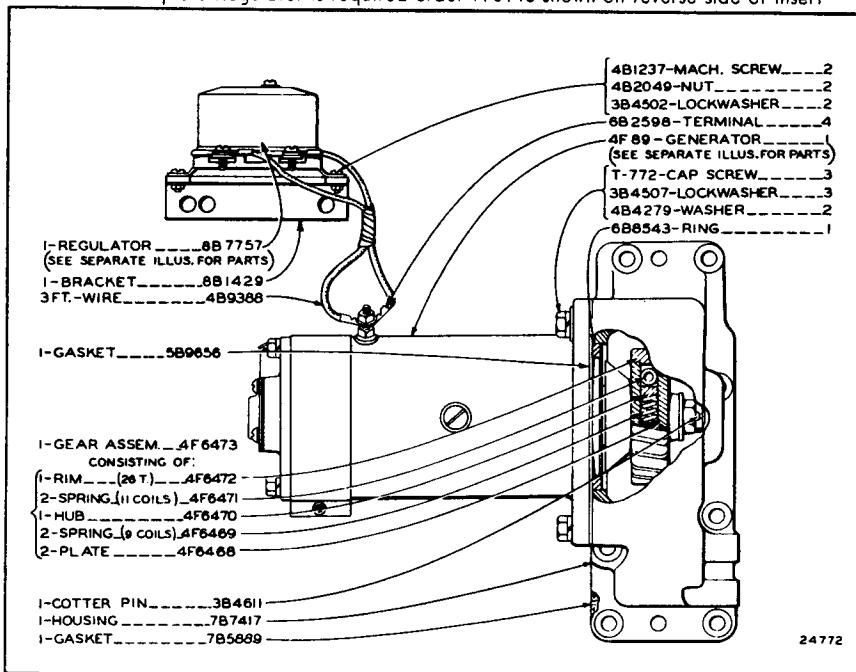**4F2680 GENERATOR GROUP—Second Type**


6 Volt, 115 Watt—For use with Battery

8B7757 Regulator and 4F89 Generator parts are shown on insert

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

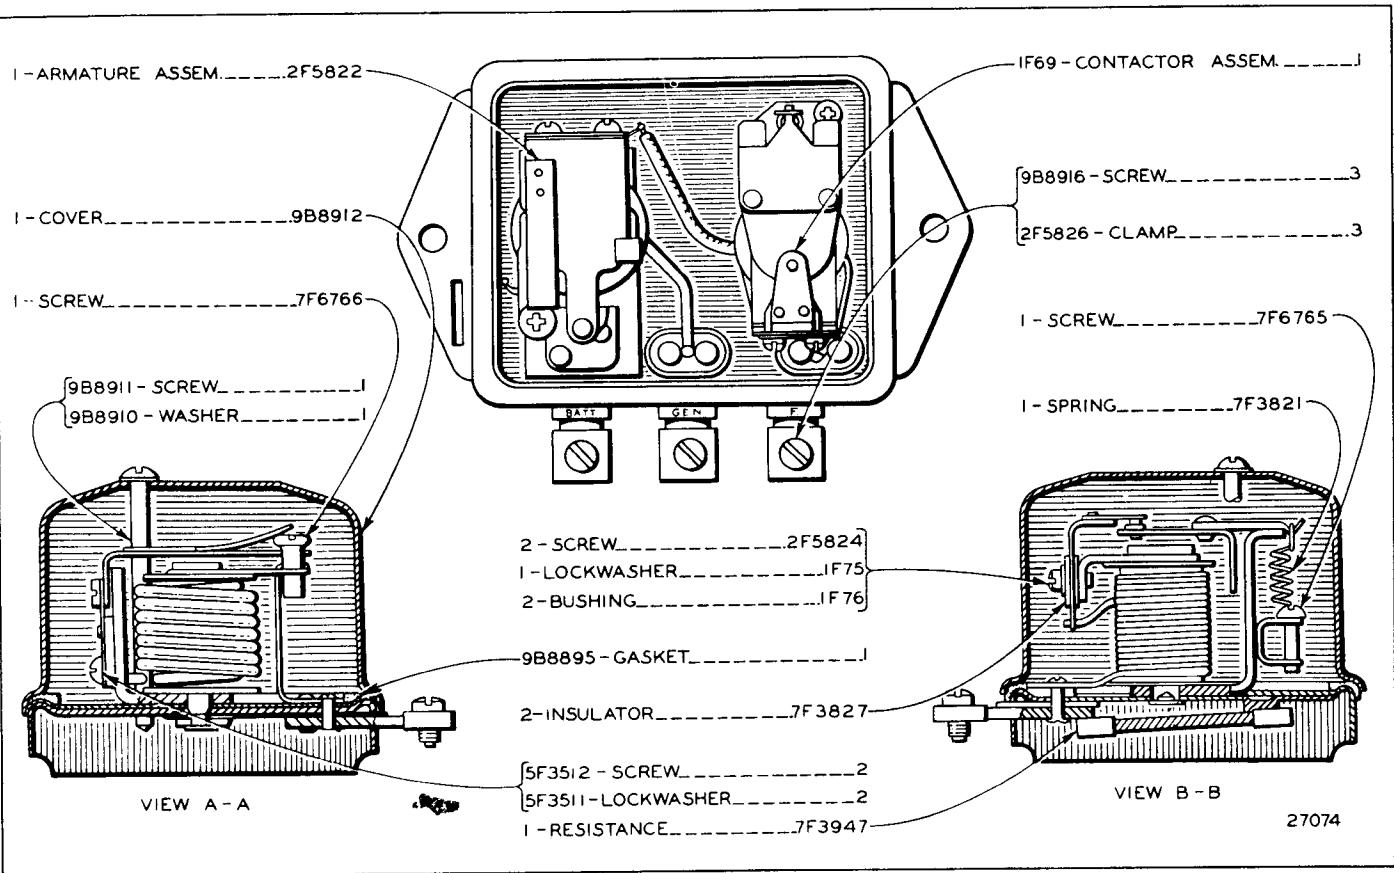

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

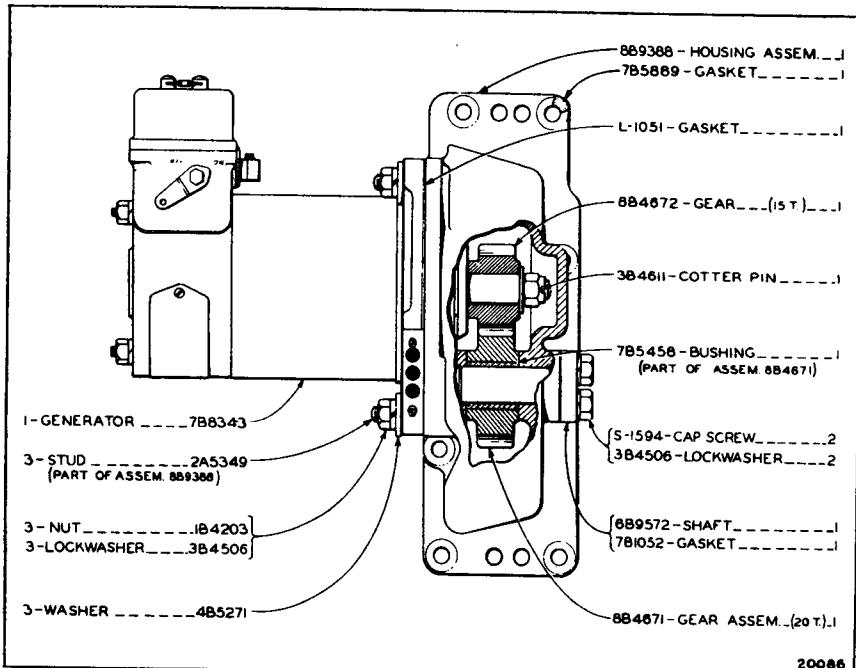


20086

8B9386 GENERATOR GROUP—6 Volt, 75 Watt

For use without Battery

Only separate parts serviced. When complete group is required order 1F732

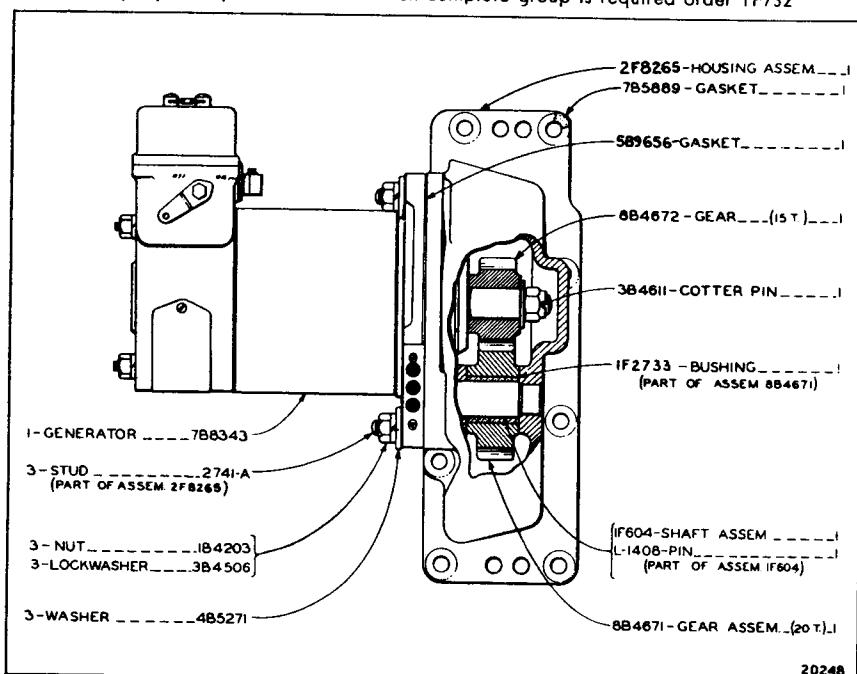


20248

1F732 GENERATOR GROUP—6 Volt, 75 Watt


For use without Battery

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

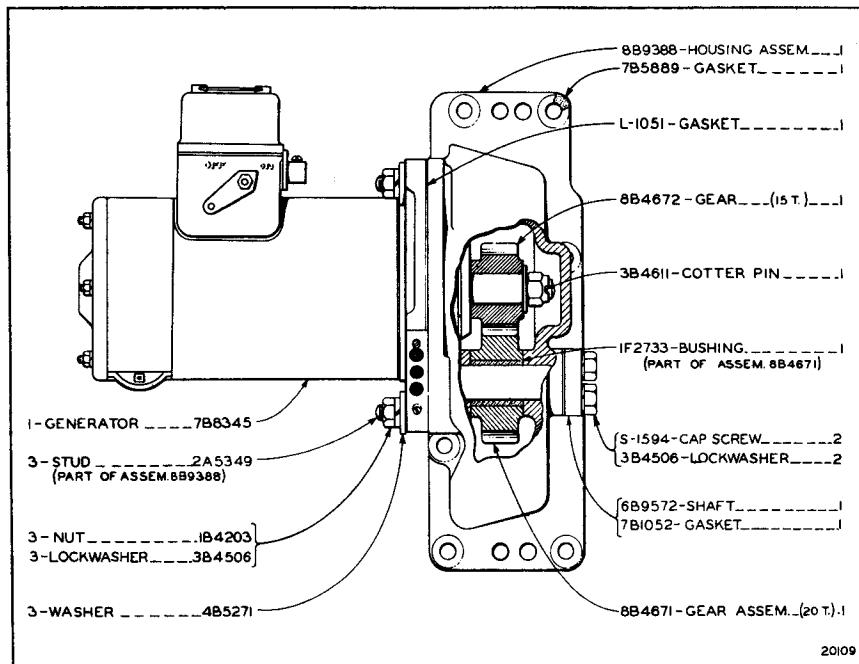**8B9385 GENERATOR GROUP—6 Volt, 130 Watt**


For use without Battery

Only separate parts serviced. When complete group is required order IF731

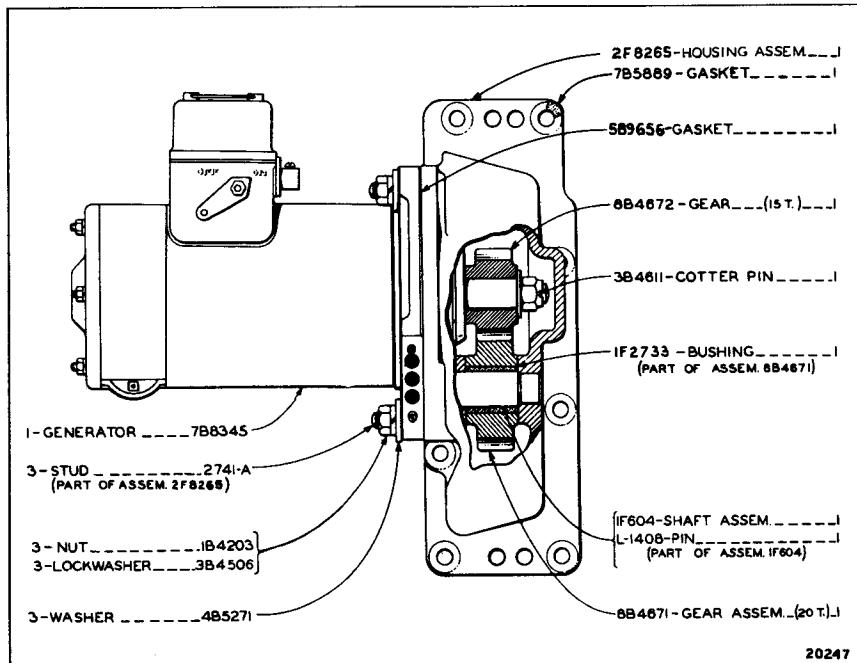
**IF731 GENERATOR GROUP—6 Volt, 130 Watt**

For use without Battery

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

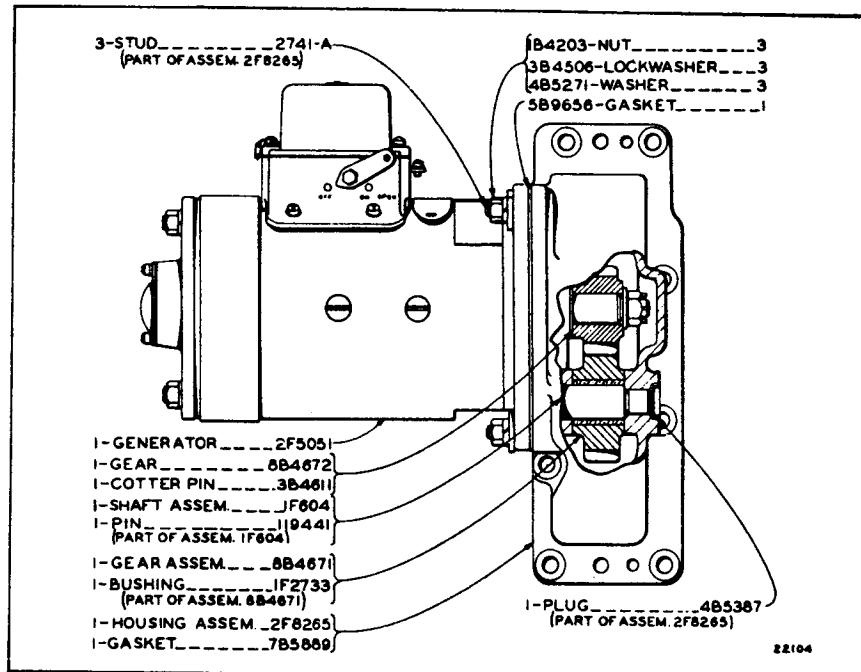


4F5519 GENERATOR AND DRIVE GROUP—6 Volt, 140 Watt
For use without Battery

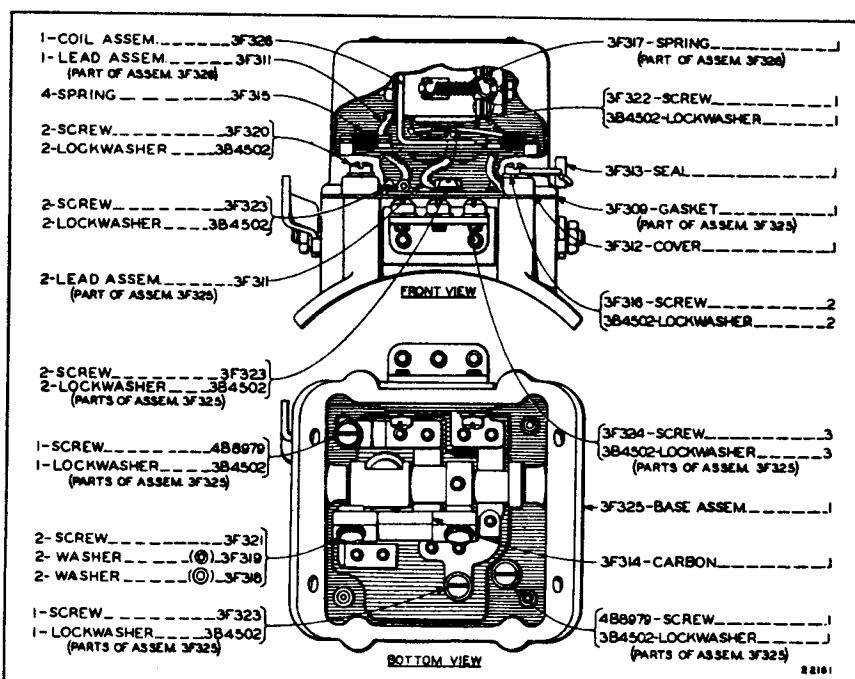


2P9769 REGULATOR

2F501 GENERATOR

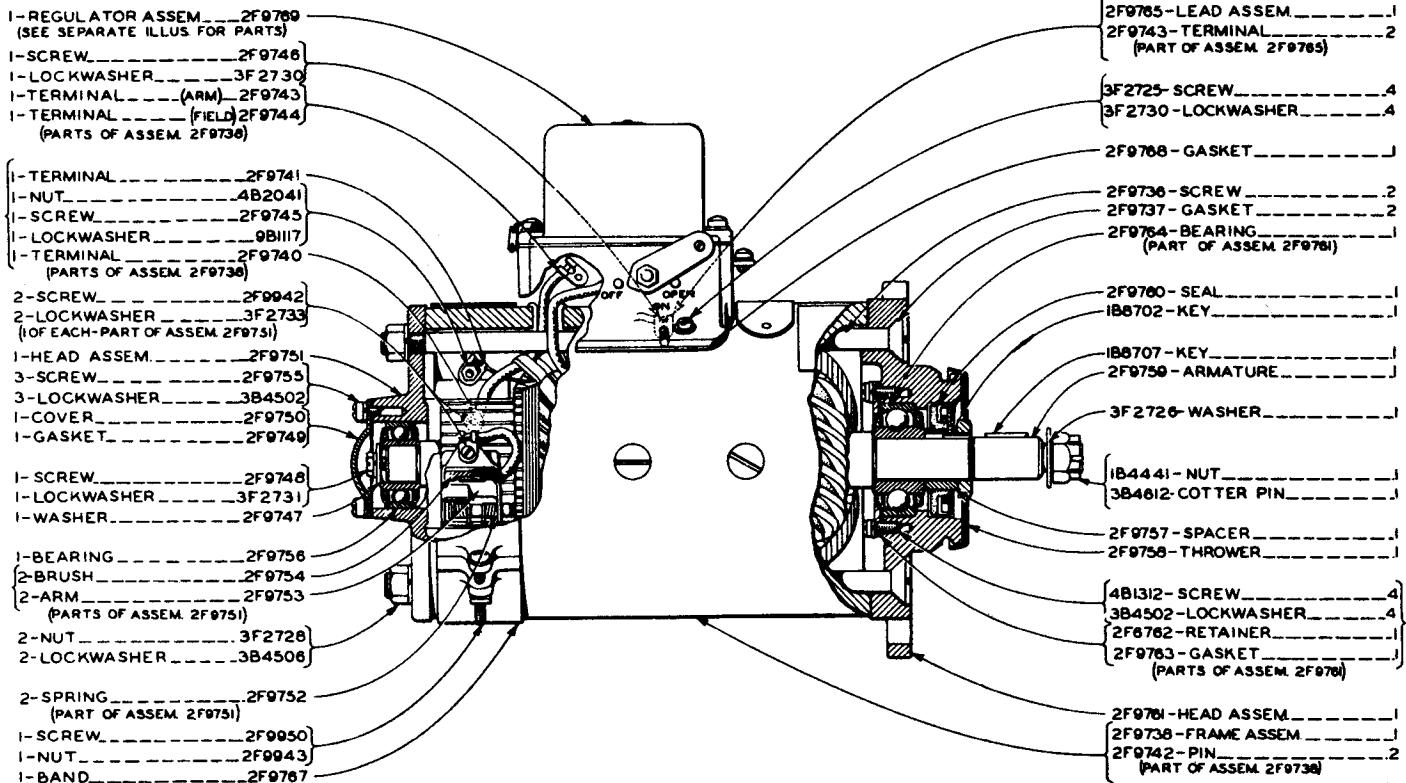

INSERT BETWEEN PAGES 150 & 151 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

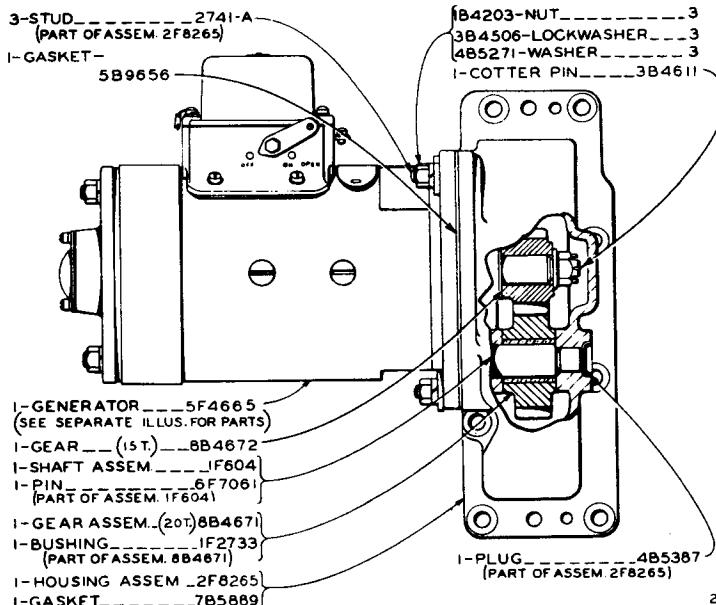


24783

4F5519 GENERATOR AND DRIVE GROUP—Second Type

6 Volt, 140 Watt—For use without Battery

5F4665 Generator parts are shown on reverse side of insert

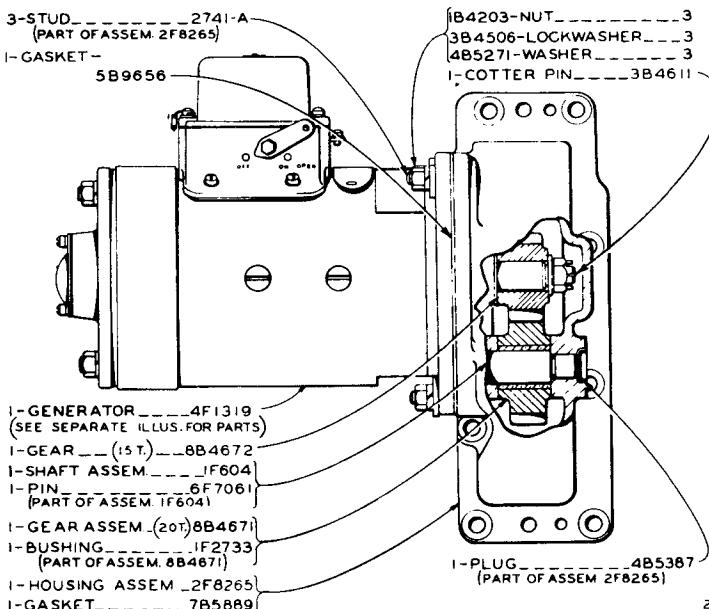


24784

4F5519 GENERATOR AND DRIVE GROUP—Third Type

6 Volt, 140 Watt—For use without Battery

4F1319 Generator parts are shown on insert

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

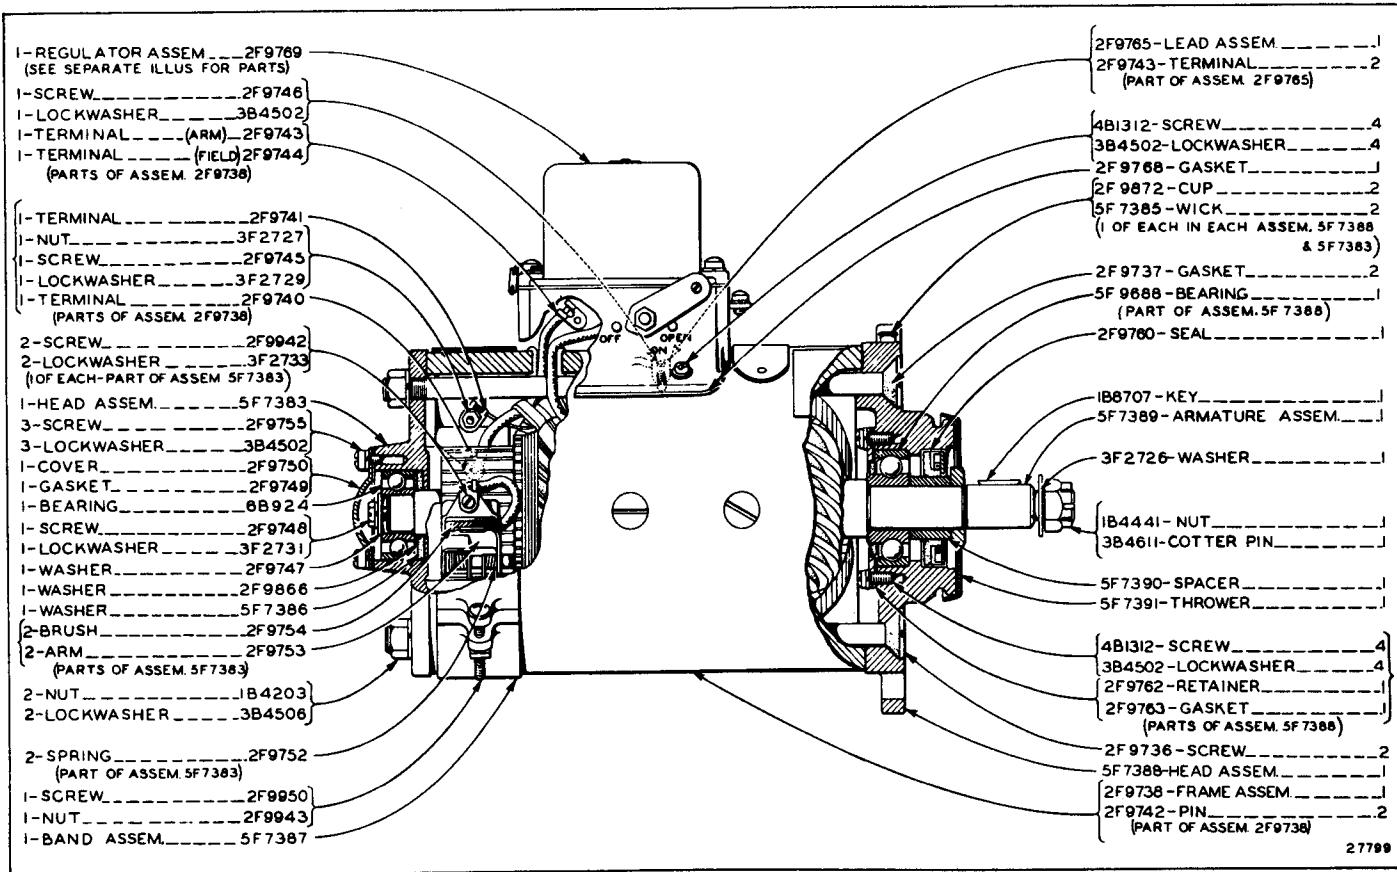**5F4665 GENERATOR**

2F9769 Regulator Assembly parts are shown on insert
Only separate parts serviced. When complete Generator is required order 4F1319


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

PARTS CATALOG INSERT

150E

INSERT BETWEEN PAGES 150 & 151 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE


ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

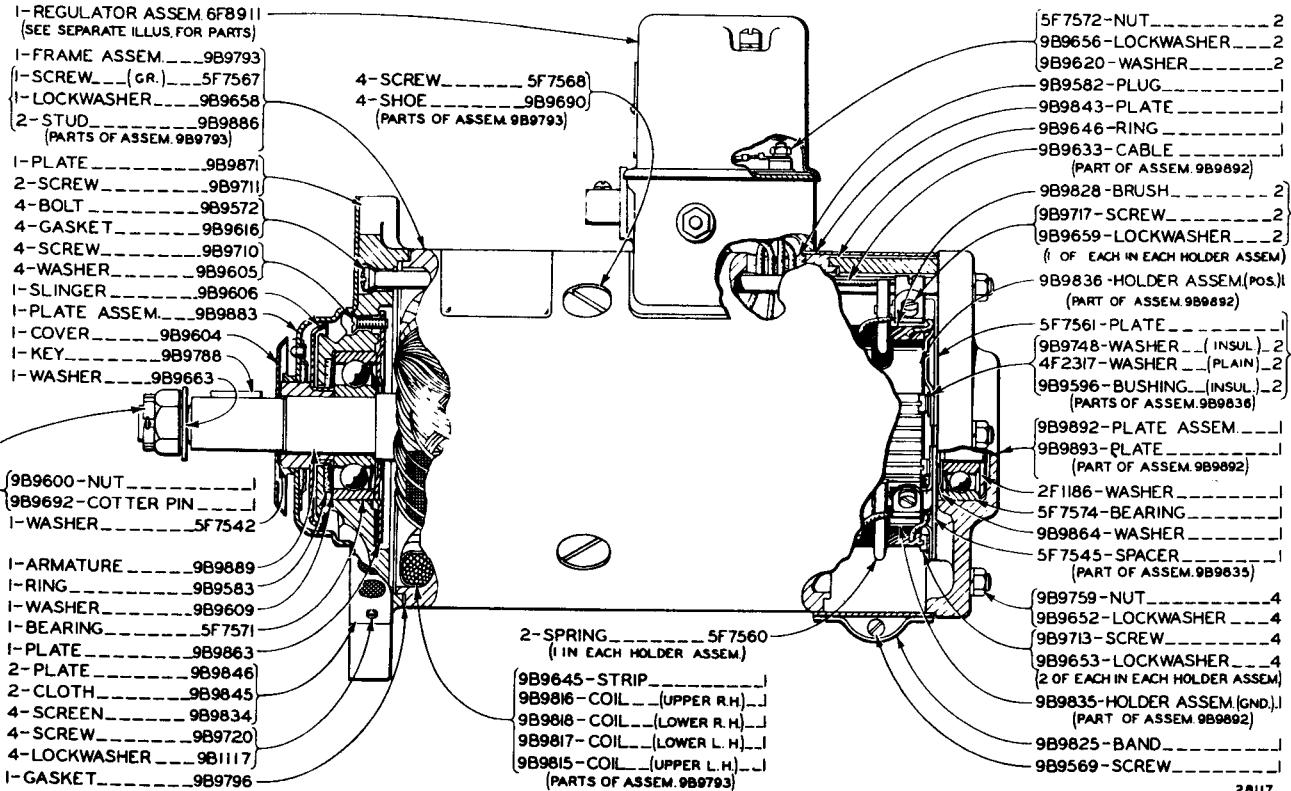


4F1319 GENERATOR

6F8911 Regulator Assembly parts are shown on reverse side of insert


6F8911 REGULATOR ASSEMBLY

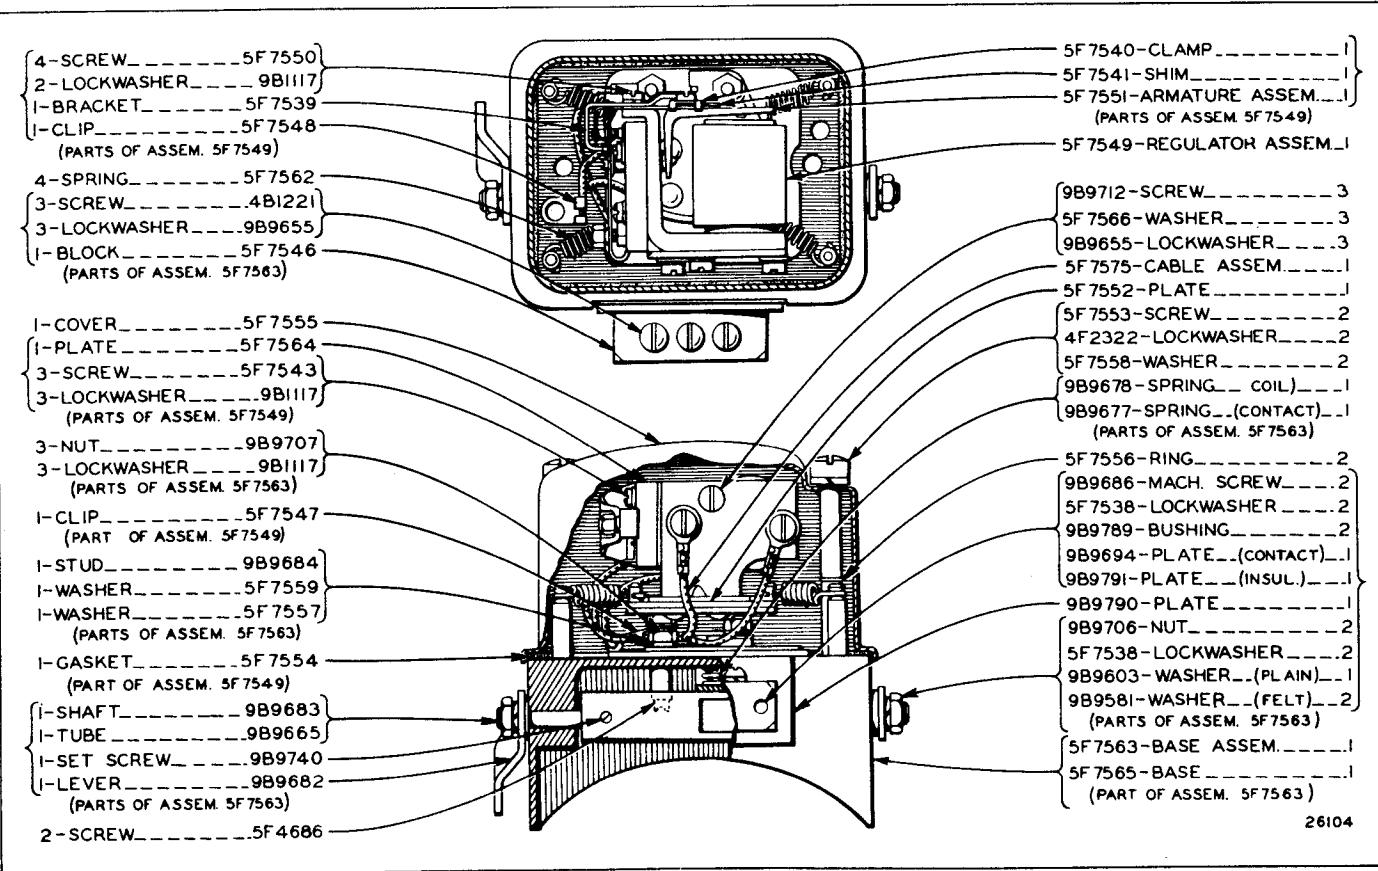

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

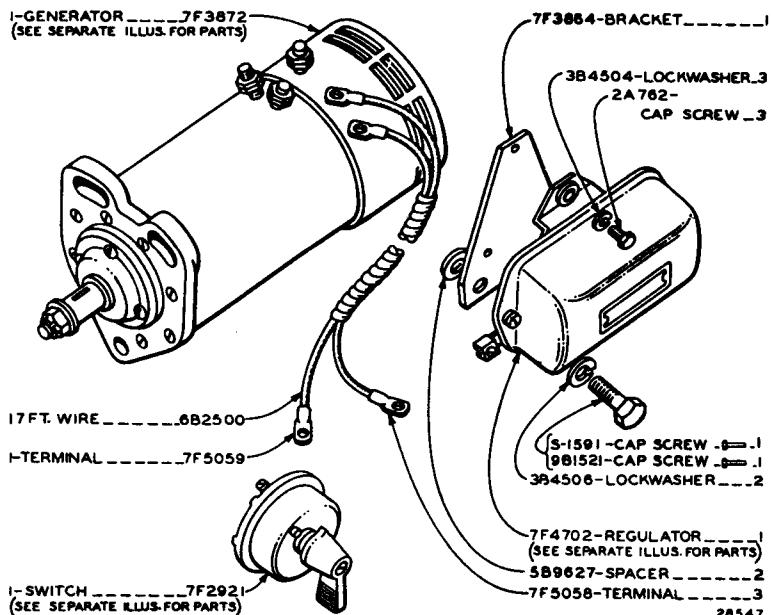
**7F4832 GENERATOR SERVICE GROUP**

7F2921 parts are shown below. 7F3872 and 7F4702 parts are shown on insert

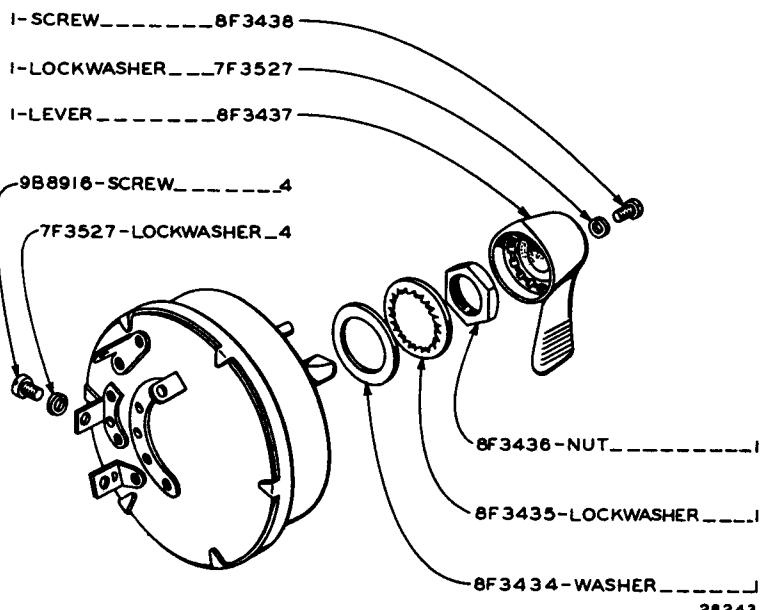**7F2921 SWITCH**

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

7F3872 GENERATOR

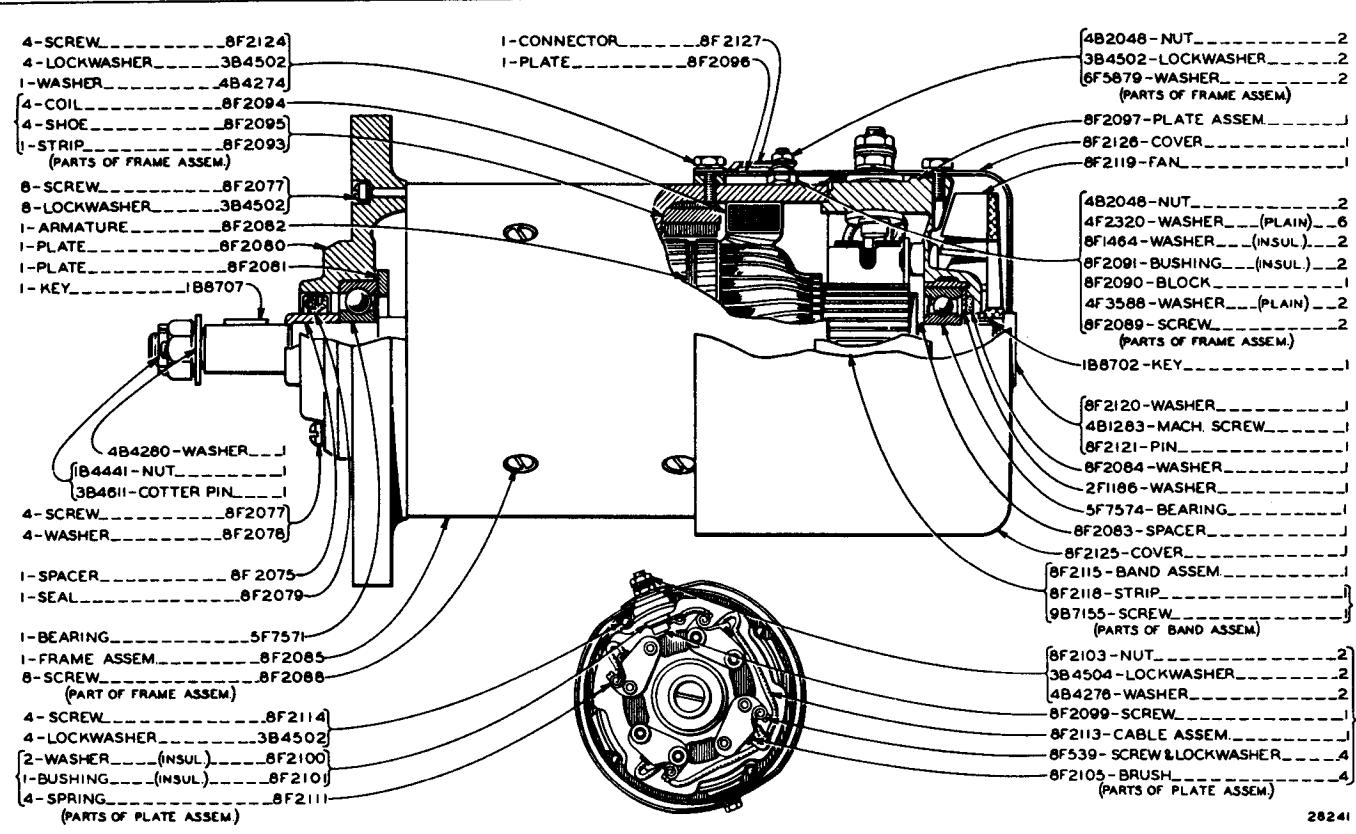


PARTS CATALOG INSERT

I 150J


INSERT BETWEEN PAGES 150 & 151 IN FORM 8885—PARTS CATALOG FOR D6 TRACTOR—74 INCH GAUGE

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

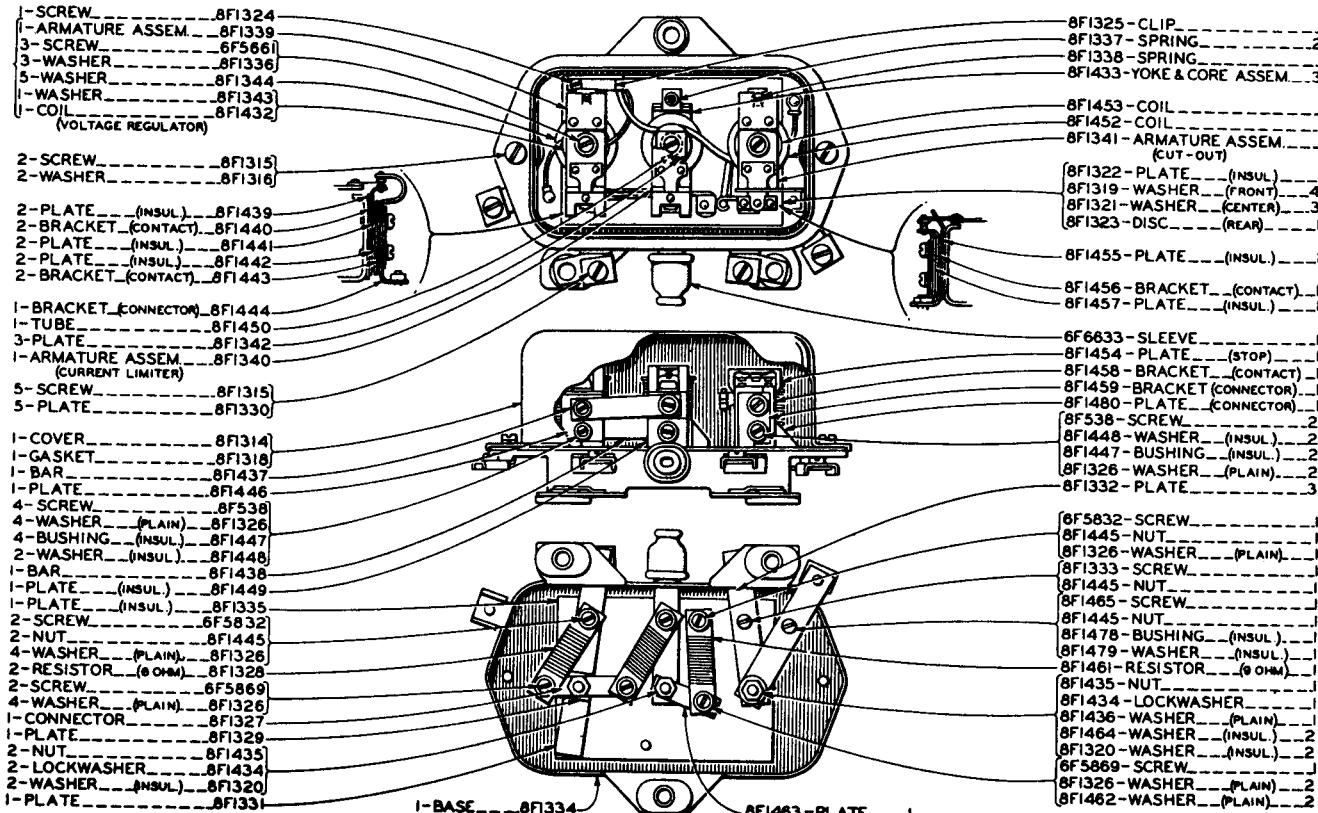


26242

7F4702 REGULATOR

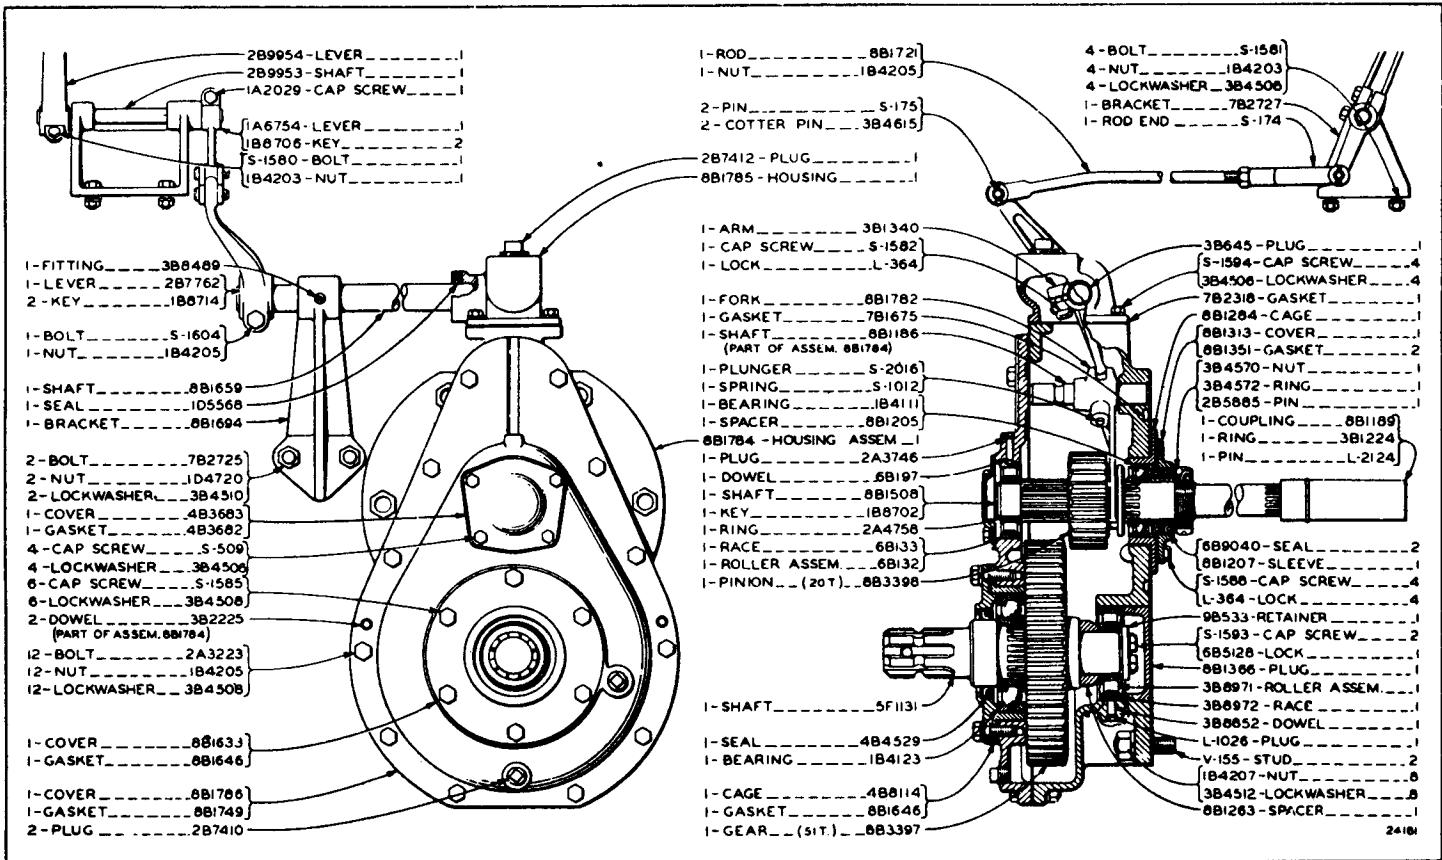


5F1130 REAR POWER TAKE-OFF GROUP—550 R.P.M.
Includes 1 $\frac{3}{8}$ " standard A.S.A.E., 6-spline shaft

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

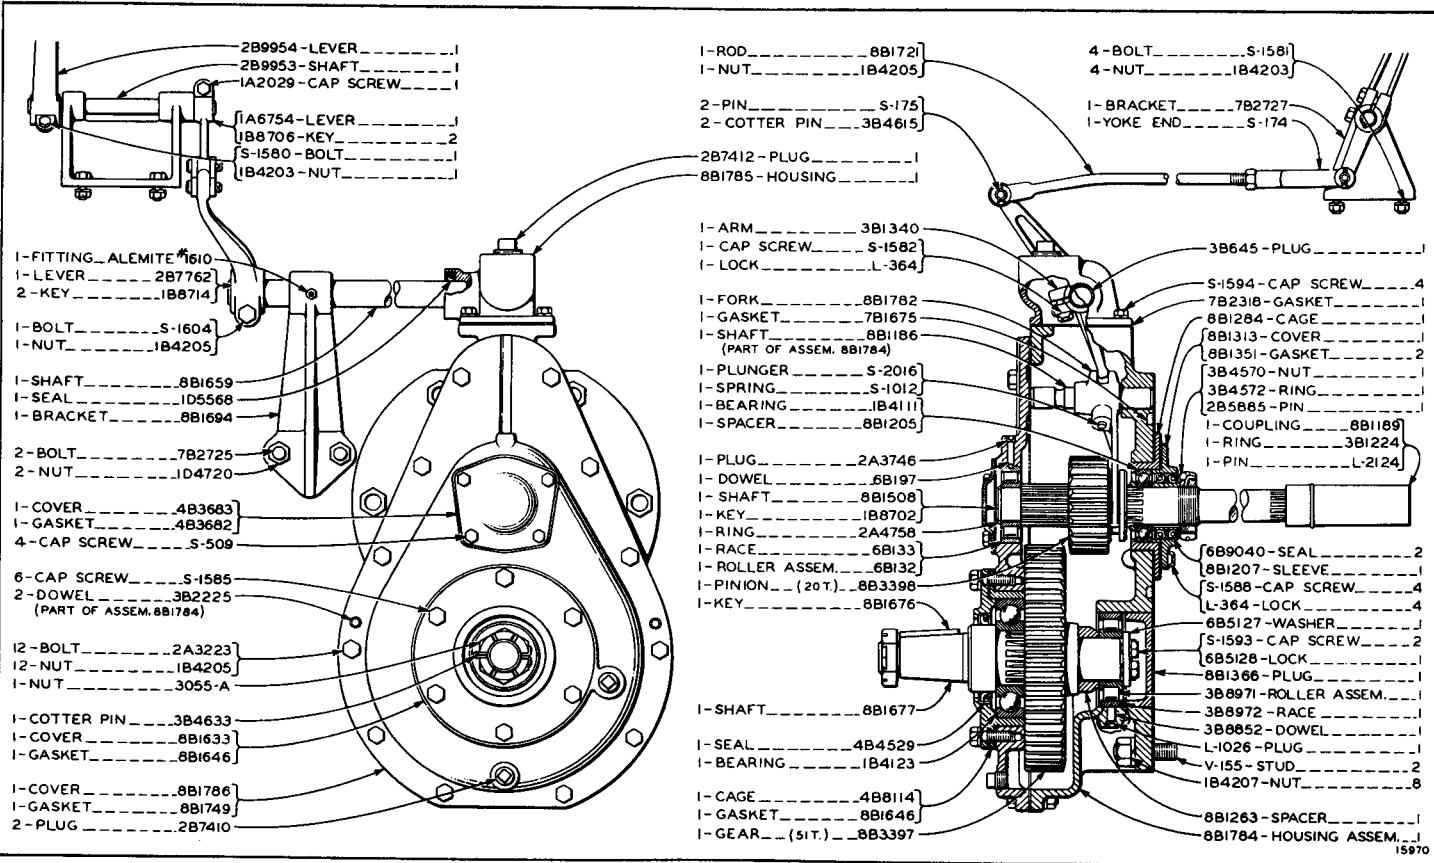


8B2000 REAR POWER TAKE-OFF GROUP—375 R. P. M.

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

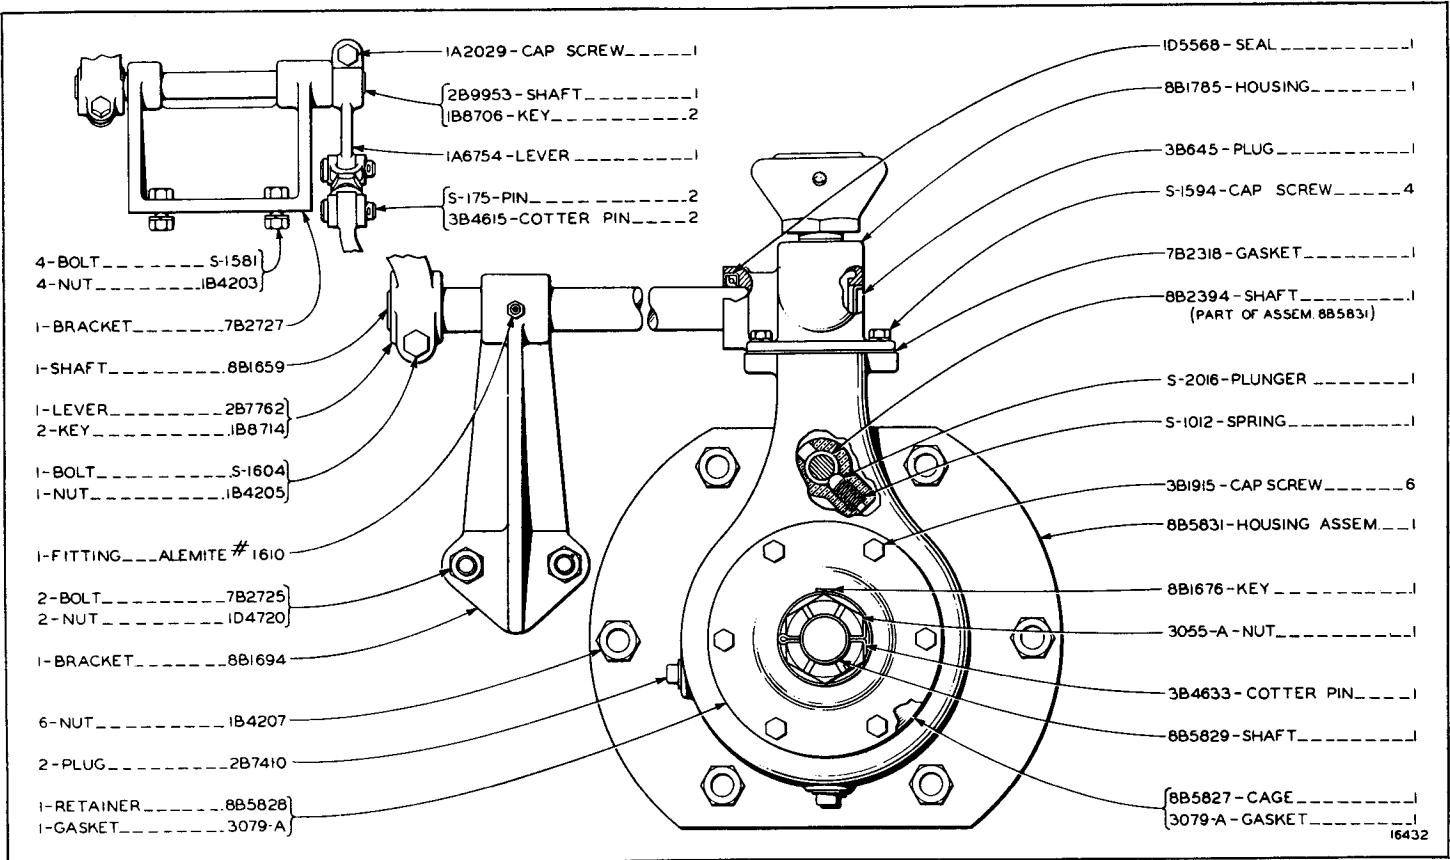


8B5832 REAR POWER TAKE-OFF GROUP—Direct Drive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

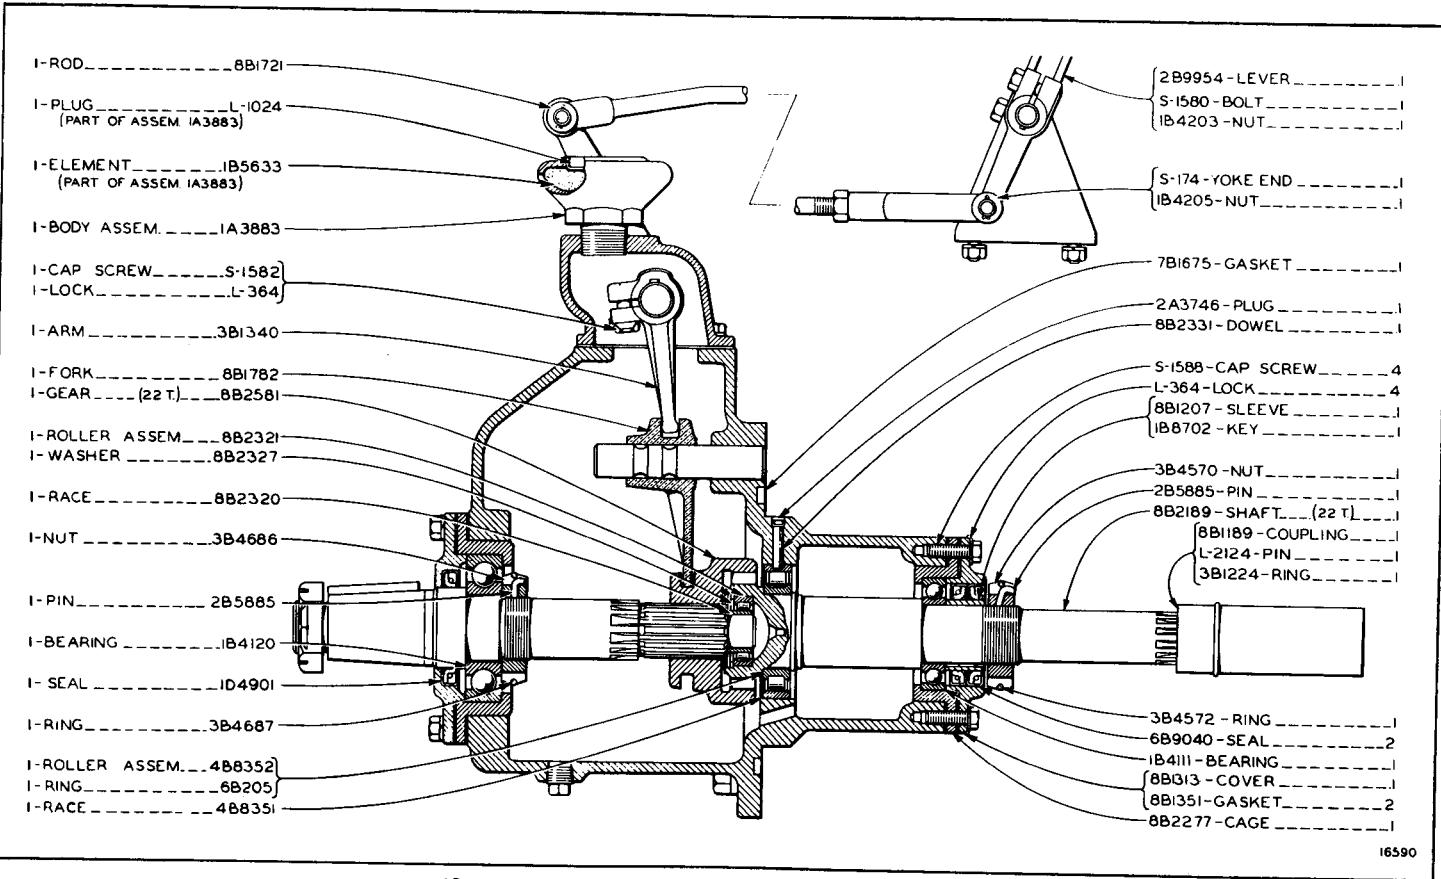


8B5832 REAR POWER TAKE-OFF GROUP—Direct Drive

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

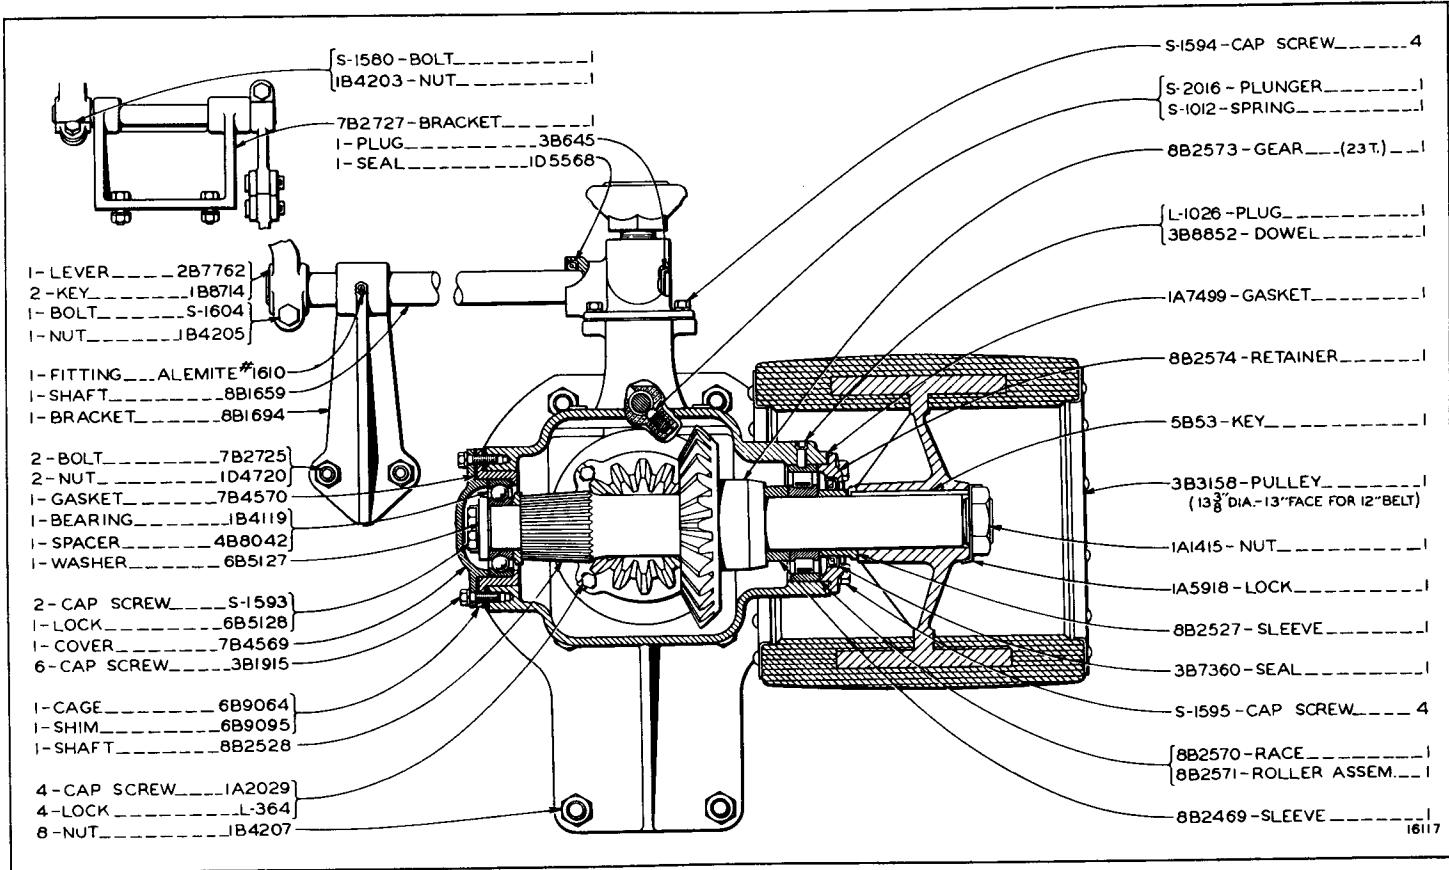


8B2399 BELT PULLEY DRIVE GROUP—With Pulley
8B2400 Belt Pulley Drive Group—Without Pulley

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

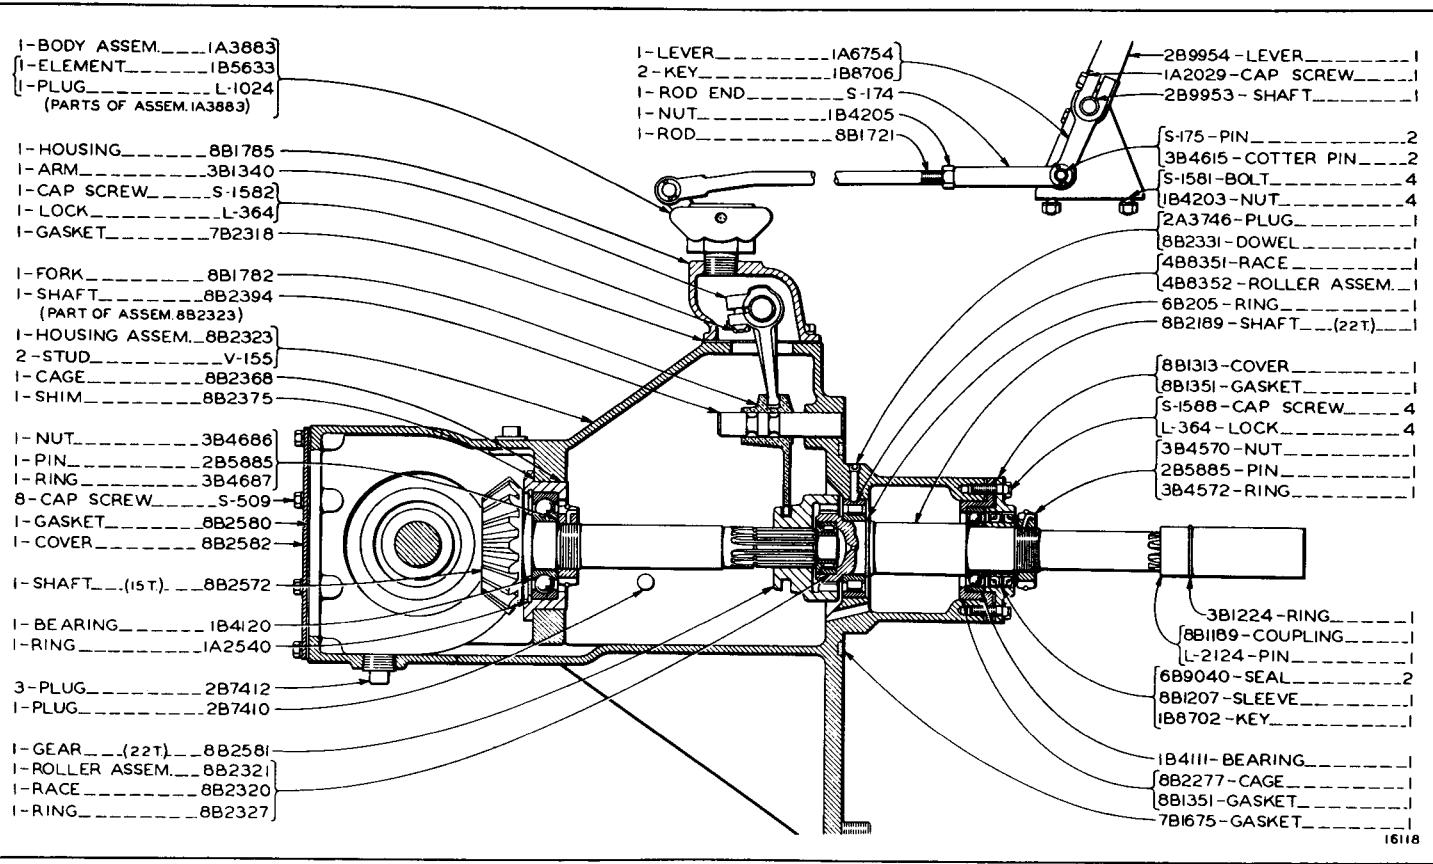


8B2399 and 8B2400 BELT PULLEY DRIVE GROUP


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

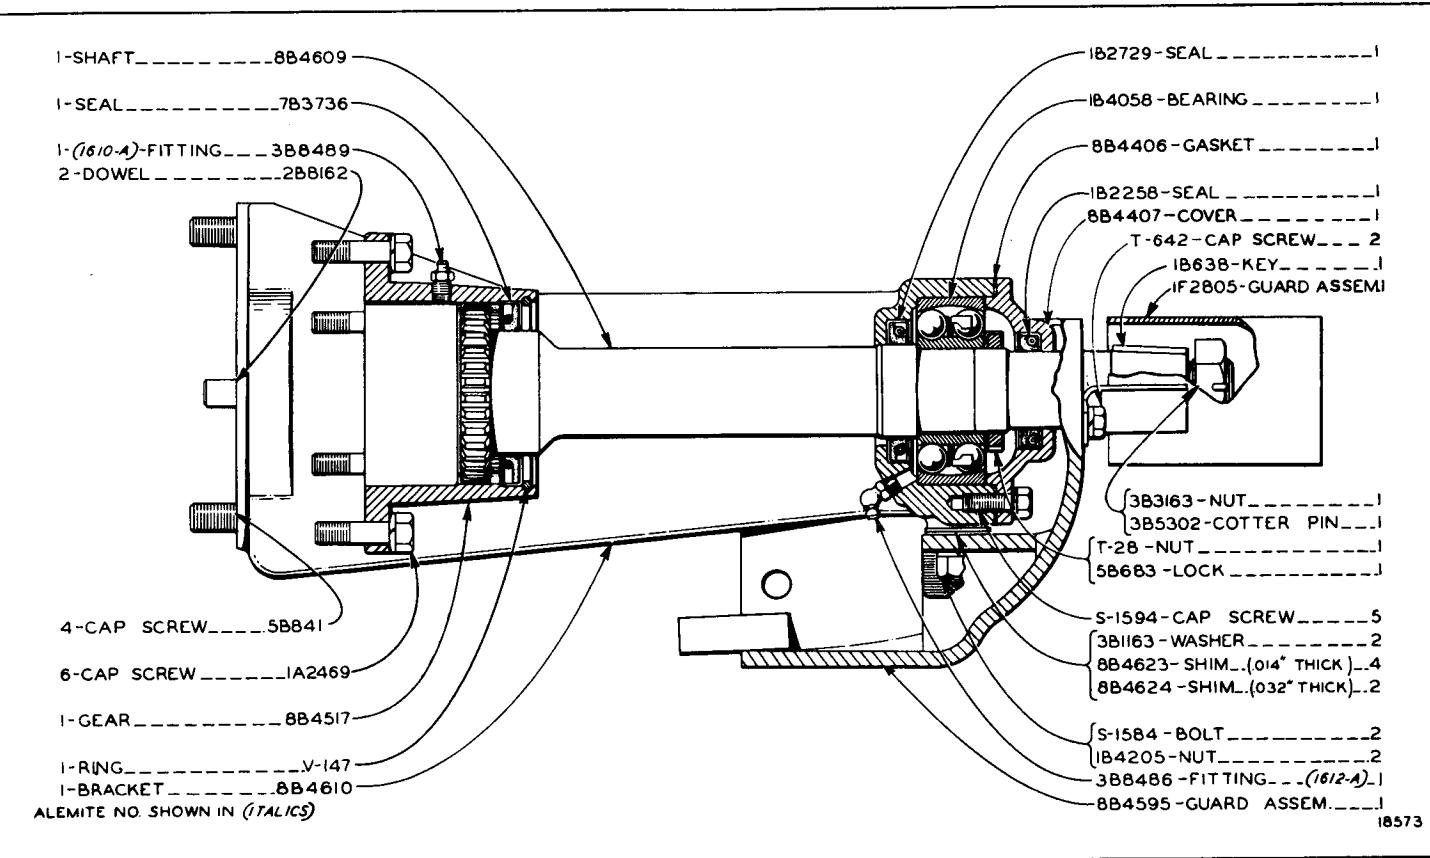


8B4626 FRONT POWER TAKE-OFF GROUP

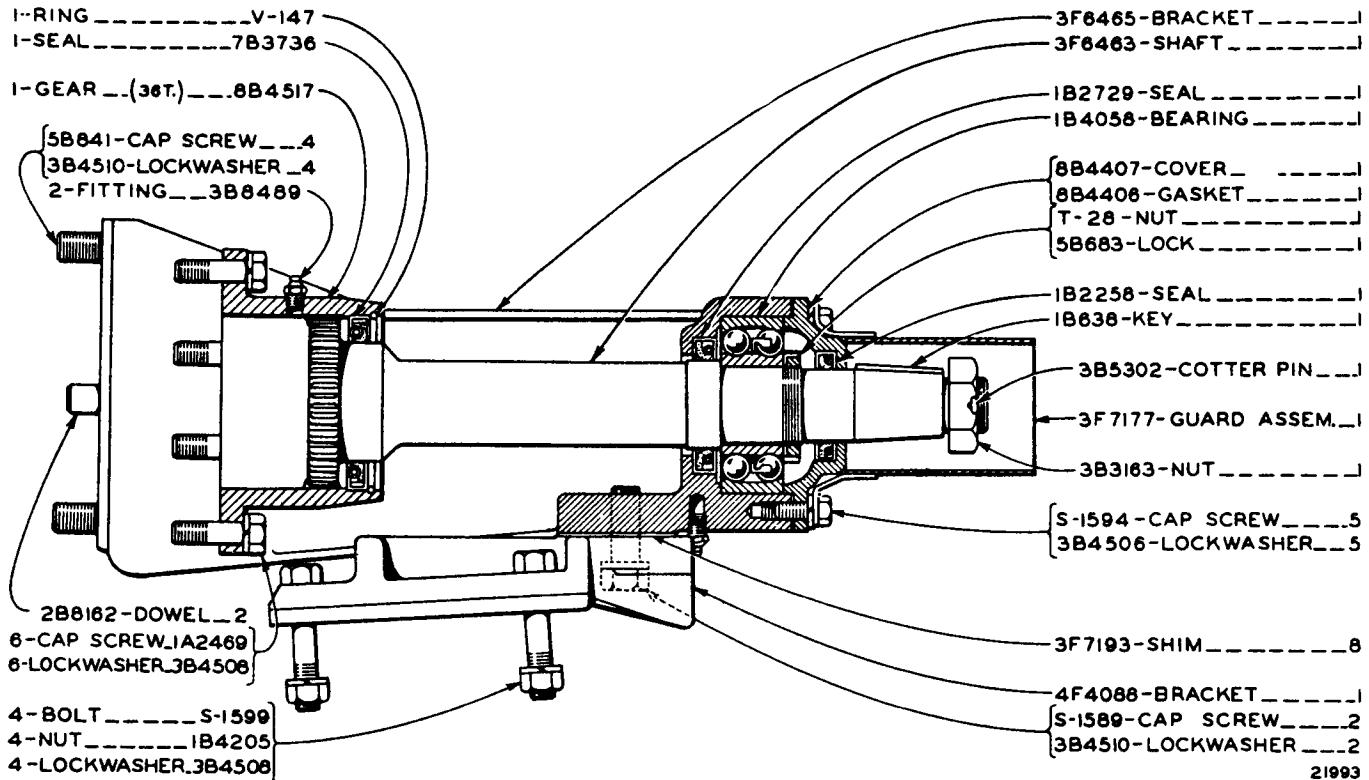

4F4087 FRONT POWER TAKE-OFF GROUP
Effective with Serial No. 4R2433

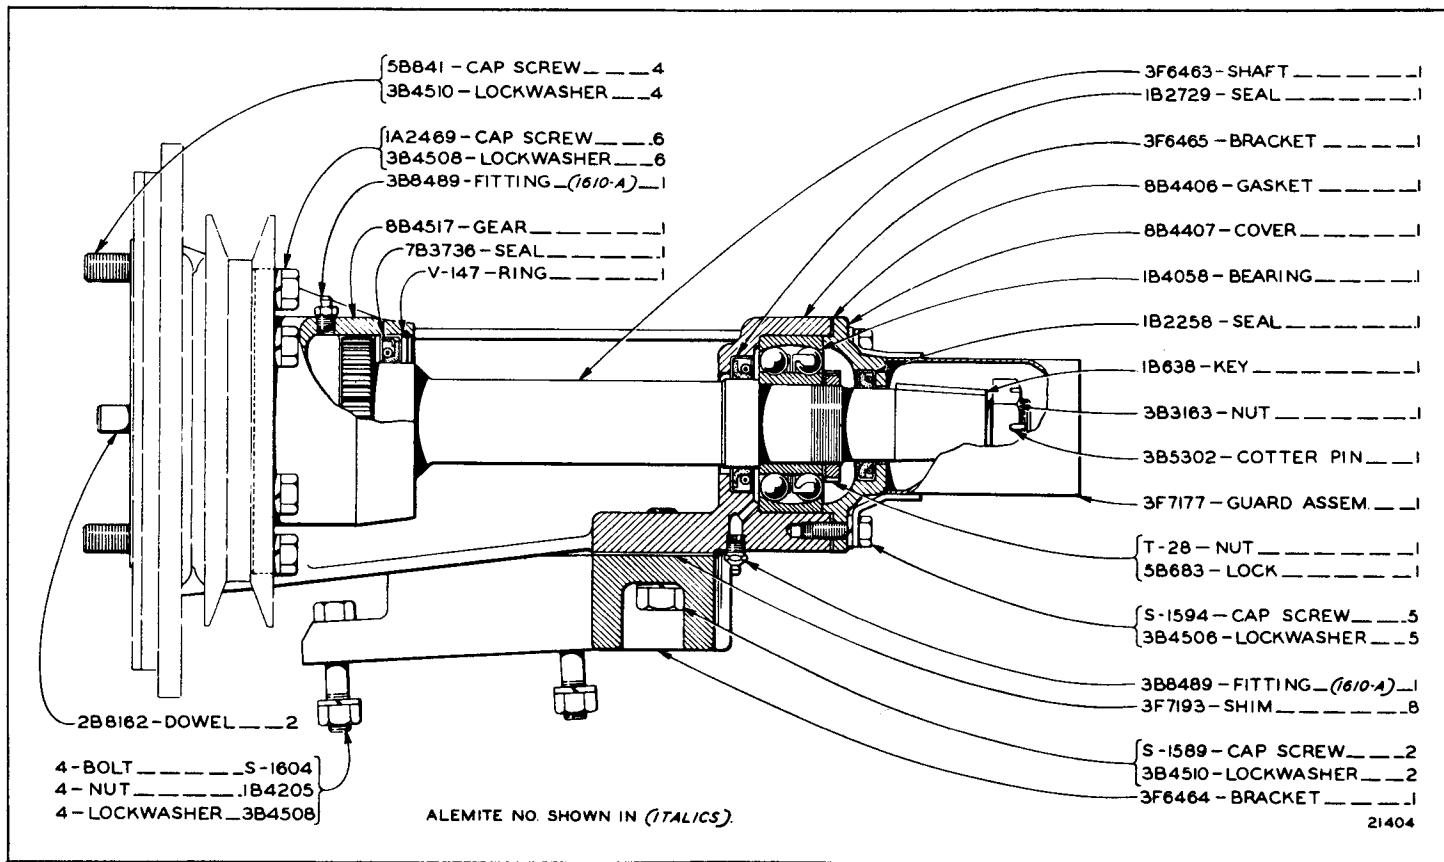

3F5007 FRONT POWER TAKE-OFF GROUP
Effective with Serial No. 4R2266
For use with Traxcavator

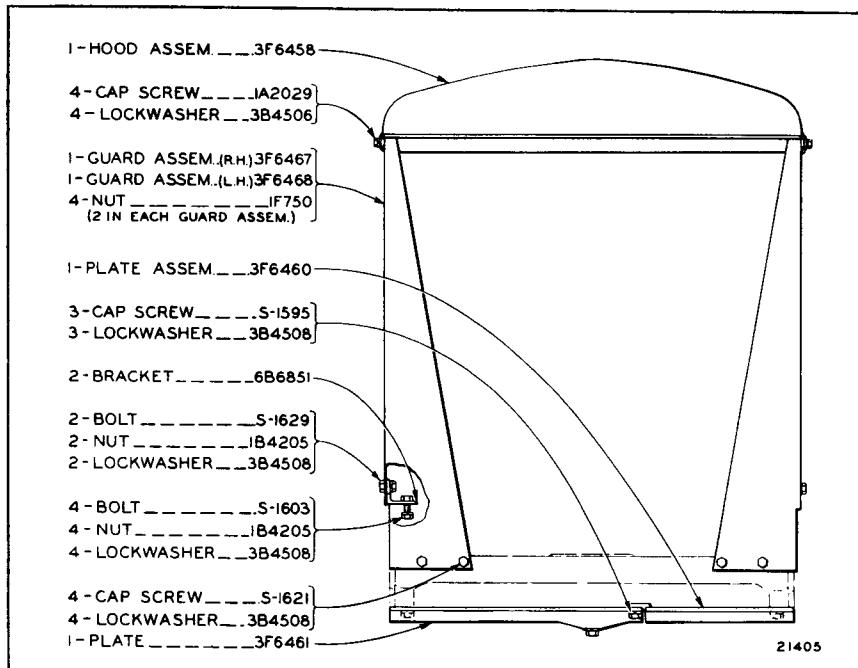



3F7210 HOOD AND SUPPORT GROUP
For use with 3F5007 Front Power Take-off Group

TRANSFERS AND NAME PLATES

Quantity Used	Part Number	Description
3	8887	Transfer ("Caterpillar")
3	7B9975	Transfer (Diesel)
1	888137	Transfer (Manufactured by Caterpillar Tractor Co., Peoria, Illinois)
1	4B6671	Transfer (D6)
1	6B2233	Transfer-Safety
1	1F6989	Transfer-Tractor Instructions
2	4B6630	Plate-Name (D6)
8	4B4159	Drive Screw-Name Plate
1	3F4136	Label-Certification

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

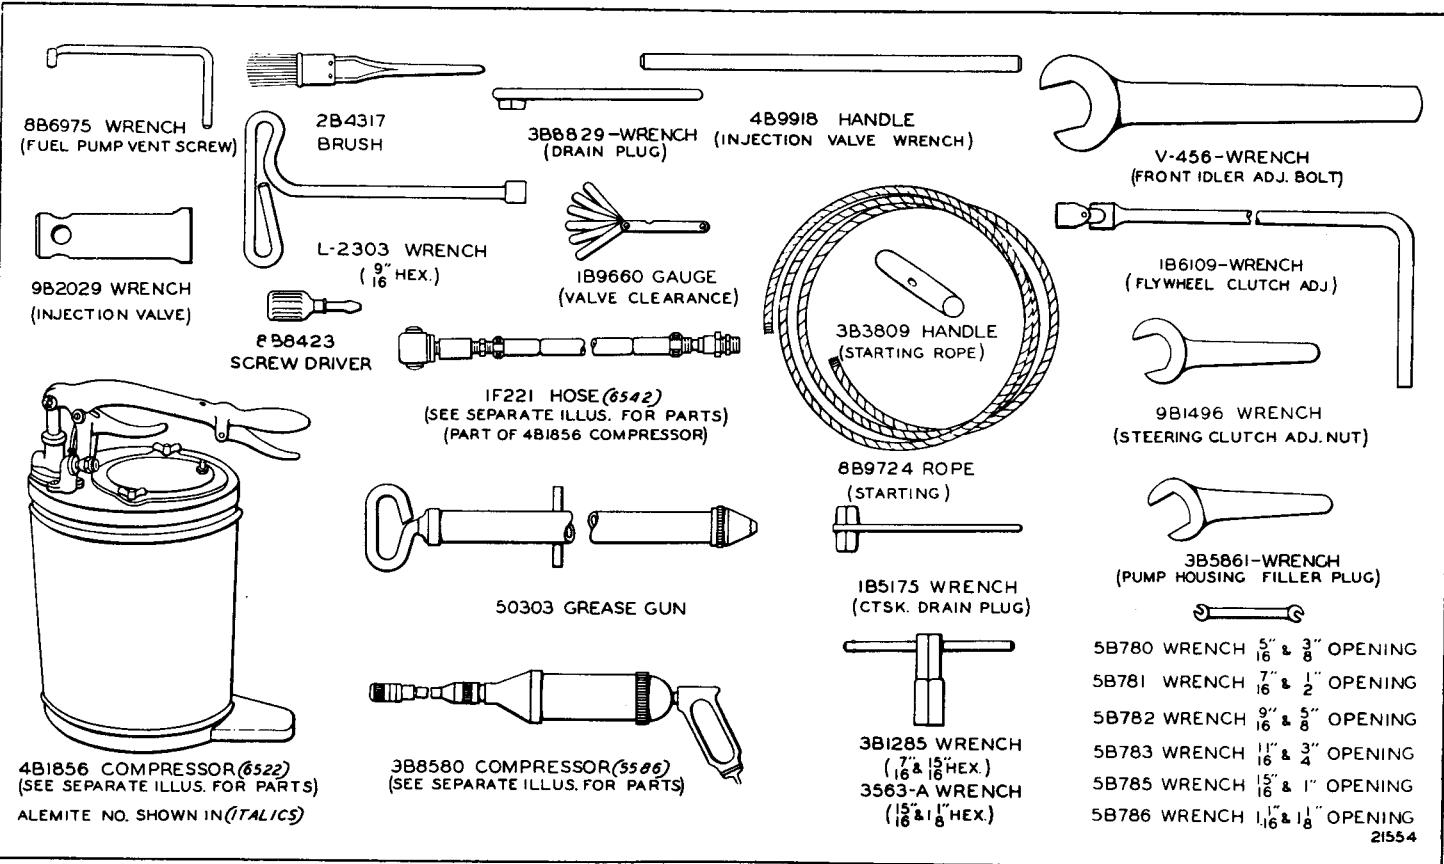


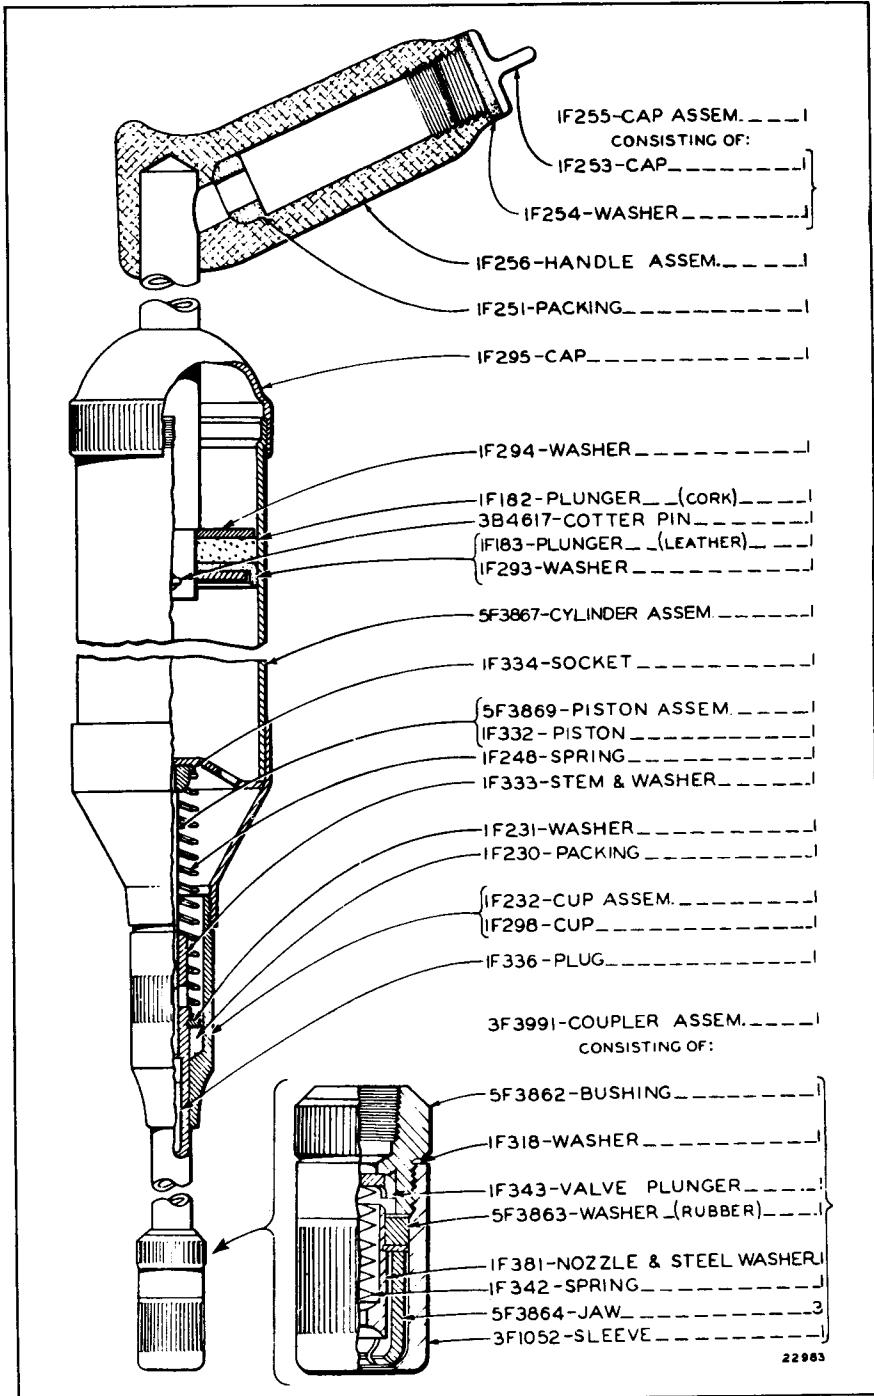


3B8580 GREASE GUN

22083


ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

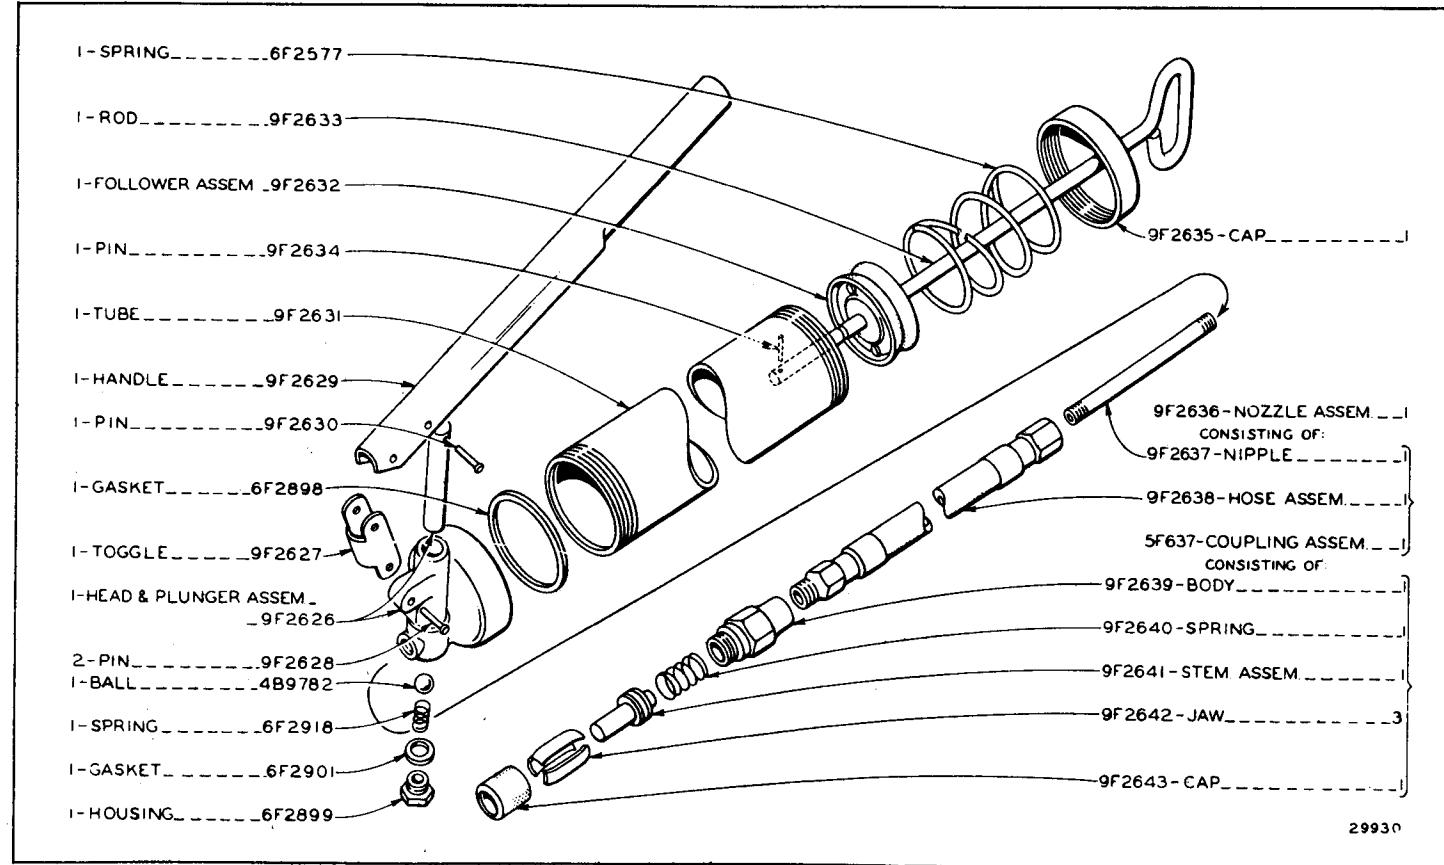

8F9866 GREASE GUN

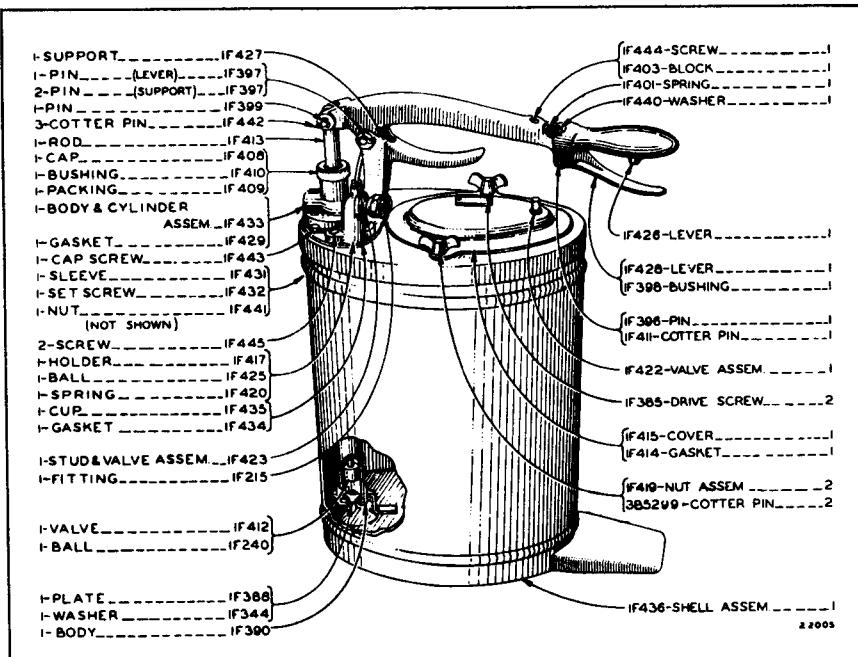


4B1856 VOLUME COMPRESSOR—First Type

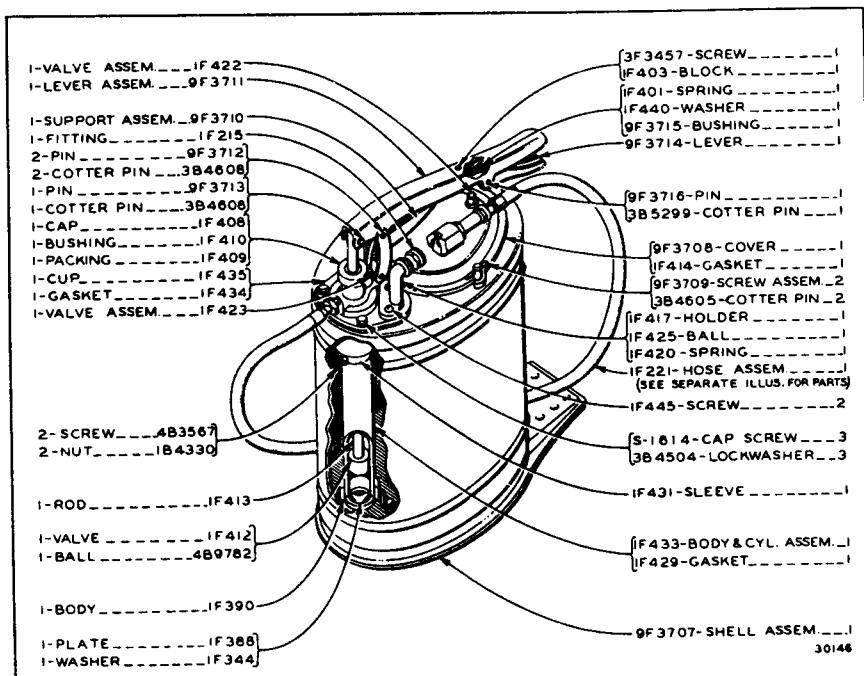


4B1856 VOLUME COMPRESSOR—Second Type

ALWAYS GIVE SERIAL NUMBER WHEN ORDERING PARTS

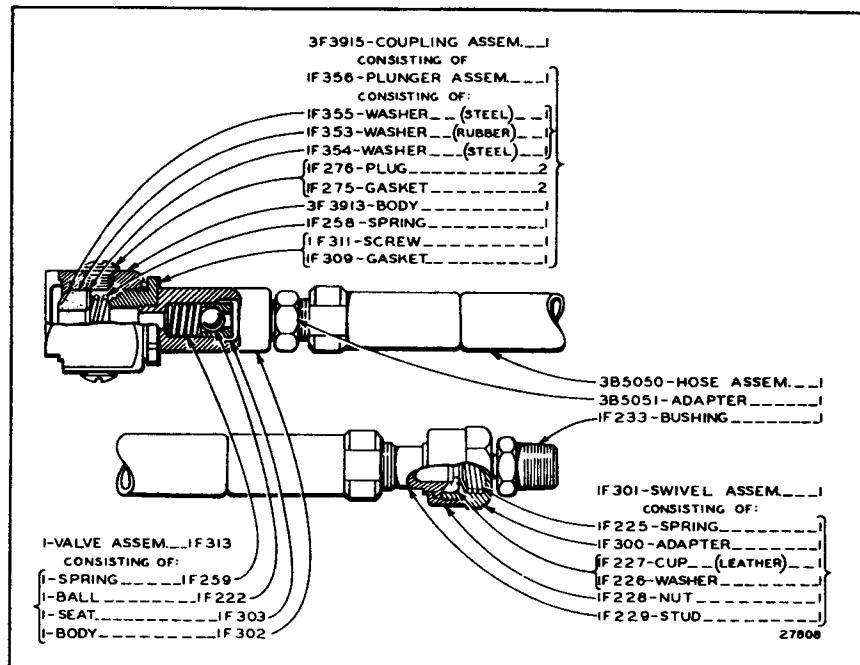

IF221 HOSE ASSEMBLY—First Type
Part of 4B1856 Volume Compressor shown on Page 161

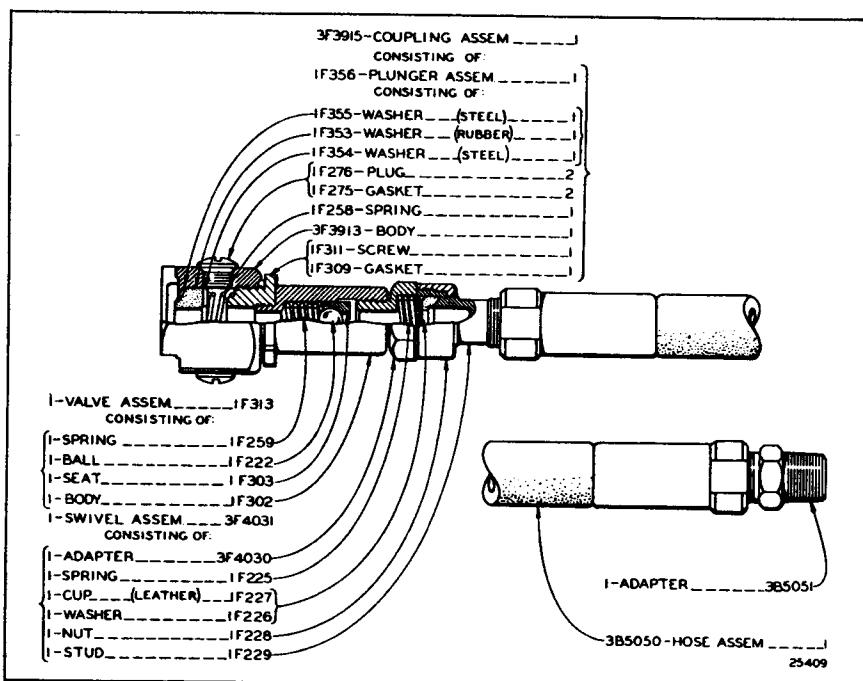

IF221 HOSE ASSEMBLY—Second Type
Part of 4B1856 Volume Compressor shown on Page 161

ONLY "CATERPILLAR" PARTS GIVE "CATERPILLAR" PERFORMANCE

CATERPILLAR

Reg. U. S. Pat. Off.

PRINTED IN U.S.A.

FORM 8885