


# PARTS CATALOG

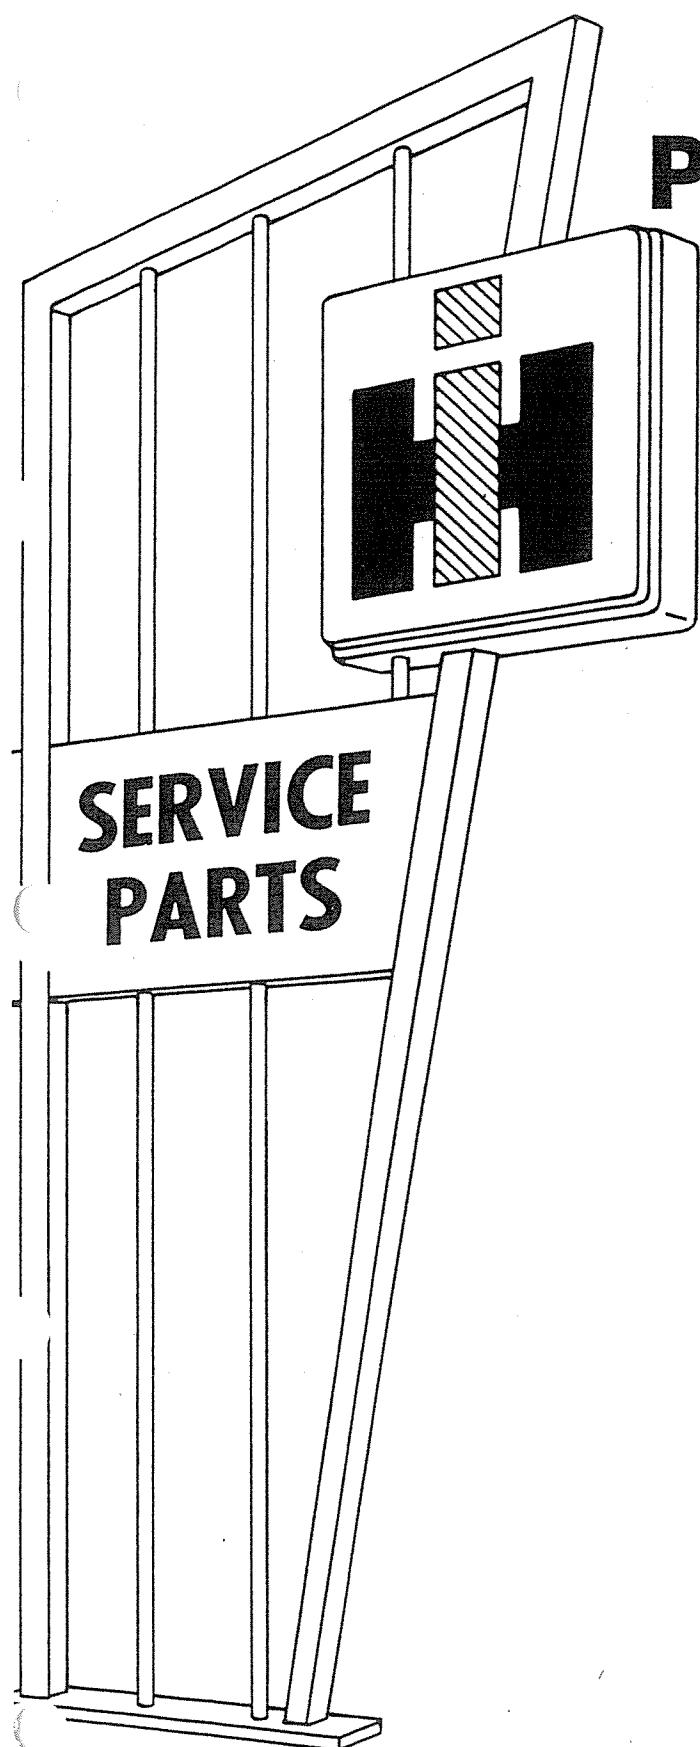

**Model 150  
Loader  
TC-93B**

PRINTED IN U.S.A. © 1968 INTERNATIONAL HARVESTER COMPANY

**INTERNATIONAL HARVESTER COMPANY • 401 NORTH MICHIGAN AVE. • CHICAGO, ILLINOIS 60611, U.S.A.**



Due to a continuous program of research and development, some procedures, specifications and parts may be altered in a constant effort to improve machines.

Periodic revisions may be made to this publication and mailed automatically to distributors. It is recommended that customers contact their distributor or dealer for information on the latest revision.

## **MODEL 150 LOADER**

**FORM**

**TC-93B**

**MAY, 1966**

*(Includes Partial Rev. No. 8 Dated 11-71)*

*(Supersedes FORM TC-93, and TC-93A  
which should be destroyed)*

# The Importance of ADEQUATE PARTS and SERVICE

The wise purchaser of a new machine gives consideration to the following factors:

1. Original quality
2. Availability of service parts
3. Availability of adequate service facilities

In many cases the machine becomes the only means of performing certain tasks that must be done in a limited period of time. Wear is to be expected and under extreme conditions even breakage of parts may occur. However, the user can still be assured of getting his work done on time if service parts and adequate service facilities are available.

Foresighted International Harvester dealers make every effort to provide good service and maintain a completely adequate stock of service parts.

When in need of parts, always give the International Construction Equipment distributor or dealer your serial numbers. We suggest that you write these serial numbers in the spaces provided below, for ready reference when parts are required.

Chassis Serial No. \_\_\_\_\_  
(Stamped on nameplate on dash also on upper right hand side near rear face of rear main frame)

Engine Serial No. \_\_\_\_\_  
(Stamped on right hand side of engine, to the front and above fuel injection pump)

## INSTRUCTIONS FOR ORDERING PARTS

- (a) All parts orders should be sent to the control district office or parts depot when so instructed. Give complete address, state the county and railroad station (when shipping point is different than post office), also whether shipment is to go by parcel post, express, truck, or freight.
- (b) When ordering parts, give the IH part number, including suffix or prefix letters. To facilitate identification of these parts, "Complete Serial Numbers" (including letters and numerals) assigned to machines, if any, should be furnished.
- (c) Parts should be ordered on the standard parts order blank. The parts should be arranged in sequence by part numbers to facilitate service on orders at the parts depot.
- (d) Claims for shortage or error in the handling of an order for parts must be made upon receipt of goods.

*It is the policy of International Harvester Company to improve its products whenever it is possible and practical to do so.*

*We reserve the right to make changes or add improvements in the design or construction of parts at any time without incurring the obligation to install such changes on products previously delivered.*

## INTRODUCTION

This catalog contains a list of service parts for the following:

### LOADERS

MODEL 150	Manual Shift
MODEL 150	Power Shift

The MODEL 150 Manual Shift Loader has a six-cylinder 3-11/16 x 4.390 inch (DT-282) turbocharged diesel engine.

The MODEL 150 Power Shift Loader has a six-cylinder 3-11/16 x 4.390 inch (D-282) naturally aspirated diesel engine.

Following is a brief summary of the system used in compiling this catalog. It is to your advantage to carefully study this summary.

This catalog is printed in a double column page format, and is divided into four sections ---Introductory Pages, Indexes to Units, Illustrations and Parts Lists, and Numerical Index.

(1) INDEXES. Two types of indexes are used. The index to units alphabetically lists all of the units by page number. The numerical index at the back of the catalog lists all part numbers (excluding standard fasteners) giving the page number when the part is listed.

NOTE - Refer frequently to the Index to Units to save time in locating the proper unit.

(2) ILLUSTRATIONS. Parts in this catalog are illustrated by the "exploded view" method. Individual parts in each illustration are shown where they belong in relation to one another. Reference numbers only are shown in each illustration. These numbers correspond with numbers in the Reference Number column in the accompanying list of parts. Parts in illustrations without reference numbers are the same as duplicate parts with reference numbers.

CAUTION: Reference numbers should not be used when ordering parts. Always use IH part numbers or description when ordering.

(3) METHOD OF LISTING. The parts list of each classification is divided into units. Parts are listed in order according to reference number shown in the illustration, followed by a full description based upon the "noun first" method ---i.e., the noun name of the part is listed first then the modifying descriptive information which serves to specifically identify the item. For example: SHAFT w/two PLUGS ASSEMBLY, valve lever. Parts not shown in illustrations appear at end of list in alphabetical sequence by noun name. Parts listed will work on all

units covered in this catalog unless a serial number or other qualifying designation is given for purpose of identification.

Throughout this catalog the term "Front" indicates the radiator end. Whenever the terms "Right" or "Left" are used it should be understood to mean from a rear position looking toward the radiator end.

MANUFACTURERS PART NUMBERS ARE LISTED IN BRACKETS FOLLOWING THE DESCRIPTION OF THE PART.

(4) NUMBER REQUIRED. In this new double-column catalog format the single "No. Req'd." column is eliminated and the quantity used of each item is shown in parenthesis (4) following the description of the item. Where no quantity is indicated it should be understood to mean that only one (1) is required.

In many parts lists it is possible to include more than one assembly or attachment. The assemblies or attachments are listed at the beginning of the parts lists with the letters A, B, C, etc., preceding the part number of the assembly or attachment. The number required information is shown in parenthesis following the description of the parts. When letters (A, B, C, etc.,) are shown without a quantity it should be understood to mean only one (1) is required. Parts without letters after the description indicate the part is used for all assemblies or attachments listed in the heading.

(5) ASSEMBLIES AND ATTACHMENTS. Wherever possible the component parts of assemblies or attachments are shown in the "exploded views" by use of boxes, brackets or arrows. Component parts of assemblies or attachments are listed by one of the following methods.

- The listings are fully covered by descriptions for simple assemblies and attachments.
- When four or more parts are contained in the assemblies or attachments the listing of components immediately follows the description with the wording "(Composed of-)."
- Assemblies or attachments consisting of many parts shows the assembly or attachment number at the beginning of the unit list, followed by the listing of the components.

Exceptions to the above methods are explained by footnotes in the text.

Individual parts of an assembly which are not available for service are marked with a symbol \$. In some instances, such parts are

## INTRODUCTION - Continued

listed with a notation giving the information which is to be used for ordering.

(6) REVISIONS. Due to a continuous program of research and development, some procedures, specifications and parts may be altered in a constant effort to improve machines.

Periodic revisions may be made to this publication and mailed automatically to distributors. It is recommended that customers contact their distributor or dealer for information on the latest revision.

(7) MISCELLANEOUS PARTS. Standard bolts, screws, nuts, etc. ---are not identified by a reference number. These parts are known as COMMON HARDWARE items and appear in abbreviated nomenclature and are shown indented under the major items with which they are used. They should be ordered as listed, since they are not component parts of the pieces they attach. Hardware parts identified with part numbers have been designed for a specific usage. Standard hardware parts should not be substituted for them.

**WARNING:** Attaching parts especially made for their location should never be substituted with regular standard parts.

The following rules are established to govern the listing of attaching parts:

The part number for Common Hardware items is eliminated. However, Design Hardware items will continue to be listed by part number and description.

All Carriage, Machine and Plow BOLTS; NUTS; Cap, Machine and Set SCREWS, will be considered furnished with National Coarse Thread unless otherwise specified. The number of threads per inch will be eliminated.

All NUTS will be considered "hex." unless otherwise specified.

All WASHERS will be considered "Plain" unless otherwise specified. The "ID", "OD" and "No." identity will be eliminated. The inside dimension will be listed first, followed by the outside diameter and the thickness.

All lock WASHERS will be considered "Medium" type unless specified as "Light" or "Heavy."

All cotter PINS will be considered "Extended-Prong" type unless otherwise specified.

All groove PINS will be considered "Standard Groove" unless otherwise specified.

All common RIVETS will be considered "Annealed" unless otherwise specified.

All countersunk-head tubular RIVETS will be considered "Copper-Plated Steel" unless otherwise specified.

All oval-head tubular RIVETS will be considered "Brass."

Standard bolts used in International Harvester Products are manufactured under standards known as Unified National Coarse Thread (U.N.C.) and Unified National Fine Thread (U.N.F.) with the number of threads per inch for various diameters as follows:

Diameter of Bolt	No. of Threads per inch (U.N.C.)	No. of Threads per inch (U.N.F.)
1/4"	20	28
5/16"	18	24
3/8"	16	24
7/16"	14	20
1/2"	13	20
9/16"	12	18
5/8"	11	18
3/4"	10	16
7/8"	9	14
1"	8	14
1-1/8"	7	12
1-1/4"	7	12
1-3/8"	6	12
1-1/2"	6	12

(8) ABBREVIATIONS. The abbreviations used in this catalog are explained in the list of abbreviations on page 3.

### (9) SERIAL NUMBERS.

Following is a list of starting serial numbers for these units:

Loader	Engine Starting Serial Number	Chassis Starting Serial Number
--------	-------------------------------	--------------------------------


150 (Manual Shift) L-150GM 5698 L-150G 6519  
150 (Power Shift) L-150PM 5698 L-150P 6501

The engine serial numbers are stamped on the right side of the engine to the front and above the fuel injection pump.

The chassis serial numbers are stamped on the name plate which is located on the dash.

No attempt is made at the factory to have the engine and chassis serial numbers correspond.

Customers should be urged to supply the engine and chassis numbers, including model prefix and suffix letters, when ordering parts.

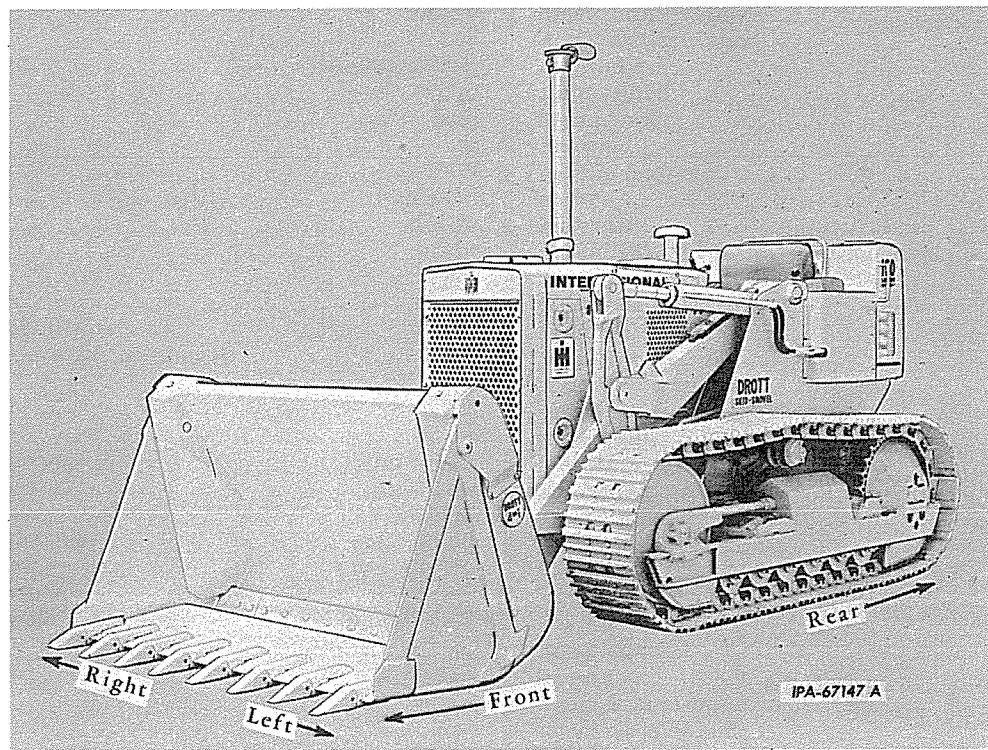

**L-150 Loader Equipped with Hood Side  
Doors and Four-in-One Bucket**

## LIST OF ABBREVIATIONS

A period after the abbreviation is used only when the abbreviation form spells a common English word.

adj	adjustable	int	internal
al	aluminum	lb	pound, pounds
aly-stl	alloy steel	lentil-hd	lentil head
amp	ampere, amperes	LH	left hand
anl	annealed	lkg	locking
approx	approximately	LP Gas	Liquefied Petroleum Gas
assy	assembly	lub	lubrication
att	attachment	mach	machine
bd-hd	binding head	med	medium
b-hd	button head	MI	malleable iron
brg	bearing	NC	National Coarse Thread
brs	brass	NF	National Fine Thread
brz	bronze	ni	nickel
cd-pltd	cadmium plated	ni-pltd-stl	nickel plated steel
cd-pltd-stl	cadmium plated steel	No.	number
cr-pltd	chromium plated	NPT	National pipe thread
cr-pltd-stl	chromium plated steel	OC	outside circumference
CI	cast iron	OD	outside diameter
csk	countersunk	O/S	oversize
csk-hd	countersunk head	ov-hd	oval head
cl-rec-hd	clutch recess head	oz	ounce
com	common	parkerized-stl	parkerized steel
cone-pt	cone point	pkg	package
contd	continued	pltd	plated
cop	copper	pt	point
cop-pltd	copper plated	PTO	power take-off
cot.	cotter	rd-end	round end
c-pin	cotter pin	rd-hd	round head
cres	corrosion-resistant-steel (stainless)	rd-pt	round point
cr-rec-hd	cross recess head	reg	regular
cre	corrosion resisting	RH	right hand
crg	carriage	RPM	revolutions per minute
cup-pt	cup point	SAE	Society of Automotive Engineers
cyl	cylinder, cylinders	sf	semi-finished
deg	degree	slt	slotted
dia	diameter	slt-hd	slotted head
dld	drilled	slt-bd-hd	slotted binding head
dld-f/c-pin	drilled for cotter pin	slt-fil-hd	slotted fillister head
dld-f/lkg-wire	drilled for locking wire	slt-f-hd	slotted flat head
dog-pt	dog point	slt-hex-hd	slotted hexagon head
ext	external	slt-pan-hd	slotted pan head
f/	for	slt-rd-hd	slotted round head
fem	female	slt-truss-hd	slotted truss head
fil-hd	fillister head	sq	square
fin-nk	fin neck	sq-hd	square head
f-csk-hd	flat countersunk head	sq-nk	square neck
f-fil-hd	flat fillister head	std	standard
f-hd	flat head	std-hd	standard head
f-pt	flat-point	stl	steel
flex	flexible	str	straight
ftd	fluted	T	teeth
ft	foot (or feet)	tap.	tapping
ga	gauge	thd	thread
hd	head	U/S	undersize
hdl	headless	unfin	unfinished
hex.	hexagon	wagon-box-hd	wagon box head
hex-hd	hexagonal-head	w/	with
hex-soc-hd	hexagon socket head	w/brz	with bronze
hp	horsepower	w/hex.	with hexagon
hv	heavy	w/o	without
hyd	hydraulic	zn	zinc
ID	inside diameter	zn-ct	zinc coated
in.	inch or inches	zn-pltd	zinc plated

-5-  
ALPHABETICAL INDEX

DESCRIPTION	PAGE	FICHE	DESCRIPTION	PAGE	FICHE
A			E - Continued		
Air Cleaner... (Check Serial Numbers and Restrictions on Top of Each Page Listed Before Ordering Parts.	23A, 24 25A, 25B 26		Engine, Skeleton and Basic Service.	9	
Altitude Compensation .....	147		Engine Clutch .....	72, 73	
Air Cleaner Pipe Extension .....	26		Engine Controls .....	124 to 131	
Alternator .....	56A		Engine Oil Cooler.....	46	
B			Exhaust Manifold .....	19, 20	
Battery, support .....	70		Exhaust Rain Cap.....	21, 22	
Belt, fan .....	44, 45		F		
C			Fan Blower .....	43	
Camshaft and Related Parts.....	18		Reversible .....	43	
Cap, Lockable Exhaust Rain .....	21, 22		Fan Drive .....	44	
Cap, Locking .....	146B		Filter Fuel .....	36-38	
Channels, main frame .....	78		Filter, lubricating oil.....	47, 48	
Connecting Rods.....	17		Filter, Transmission Pressure .....	92	
Crankcase .....	12, 13		Filter, Transmission Safety .....	93	
Crankcase Cover .....	16		Filter, Transmission Suction.....	94	
Crankcase Gasket Set .....	151		Flywheel.....	18	
Crankcase Oil Pan .....	49		Front Engine Support .....	18	
Cranking Motor .....	62 to 64		Front Idler .....	109	
Crankshaft and Related Parts.....	14 to 16		Front Pull Hook.....	140	
Cylinder Head .....	10, 11		Fuel Filters .....	36-38	
Cylinder Head Gasket Package .....	151		Fuel Injection Pump Roosa-Master .....	30, 31	
Cylinder, Scarifier .....	154		International .....	32 to 34	
Cylinder Sleeve .....	17		Fuel Strainer .....	28, 29	
D			Fuel Tank and Connections.....	28, 29	
Dash .....	120, 121		G		
Decelerator .....	124 to 129		Gasket Sets Cylinder Head .....	151	
Drawbar .....	139		Crankcase .....	151	
Drive, fan .....	44		Transmission .....	151	
Drive, bevel gear .....	104		Generator .....	55, 56	
E			Generator and Connections .....	57	
Electric Starting and Lighting .....	66 to 69		Glow Plug .....	35	
Electrical Switches .....	57, 58, 67		Glow Plug Switch .....	67	

ALPHABETICAL INDEX

DESCRIPTION	PAGE	FICHE	DESCRIPTION	PAGE	FICHE
H			P		
Headlight, and rear light .....	58-60		Packages - NOTE: Refer to major part desired.		
Hood .....	120, 121		Pipes, fuel injection .....	28, 29	
Hourmeter .....	70		Piping, transmission .....	92 to 94	
Hydraulic Pump .....	138		Pistons .....	17	
Hydraulic System, transmission....	138		Pipe, exhaust .....	22	
Hydraulic Track Adjuster .....	111		Pivot Shaft .....	116	
			Platform .....	122, 123	
I			Power Take-Off		
Idler			Front.....	15	
Fan .....	43		Rear .....	141	
Front .....	109		Precombustion Chamber .....	35	
Track .....	110		Product Graphics .....	150	
Injector Nozzles .....	35		Pump, converter supply .....	88	
Instruments and Panel .....	132 to 137		Pump, fuel injection.....	30-32	
Intake Manifold .....	19, 20		Pump, hydraulic .....	138	
			Pump, lubricating oil.....	49	
L			Pump, water .....	44, 45	
Lights, head and rear .....	58 to 60		R		
Lighting Switch .....	58		Radiator and Connections.....	40, 41	
Lock, Oil Level Dipstick .....	140		Radiator Guard .....	42	
Lock, Pad .....	21, 22, 142		S		
Lubricating Oil Filter .....	47, 48		Safety Seat Belt .....	140	
Lubricating Oil Guage .....	133, 135, 136		Seat .....	122, 123	
Lubricating Oil Pump .....	49		Scarifier .....	153	
Lubricators .....	143		Side Sheets .....	120, 121	
M			Sprocket .....	116 to 118	
Master, switch lock .....	57		Sprocket Drive.....	116 to 118	
Main Frame .....	76 to 78		Starting Motor (see cranking motor)	62 to 64	
Master Switch .....	57		Steering Brakes.....	100, 101	
Muffler, exhaust .....	21		Steering Clutch Controls.....	102, 103	
O			Release Shaft .....	106, 107	
Oil Cooler .....	46		Switch, Starting.....	67	
Oil Pan .....	49				

-7-  
ALPHABETICAL INDEX

DESCRIPTION	PAGE	FICHE		DESCRIPTION	PAGE	FICHE
T						
Thermostat .....	45					
Tools .....	142, 144, 145					
Tool Box.....	142					
Torque Converter.....	74, 75					
Track Chain .....	110					
Track Chain w/Shoes .....	110					
Track Frame.....	108 to 114					
Track Idler .....	110					
Track Roller.....	112					
Track Roller Shield .....	113					
Track Shoes .....	114					
Track Spring.....	108					
Transmission (manual shift) .....	80, 81					
Transmission (power shift) .....	82 to 99					
Turbocharger .....	50 to 53					
Tube, exhaust .....	38					
V						
Valve Cover .....	10					
Valve, main regulator .....	99					
Valve, range selector.....	98					
Valves, engine .....	10					
Vibration Damper .....	14					
Voltage Regulator .....	54					
W						
Watchdog Fuel Filter .....	148 to 149					
Water, conditioner .....	146A					
Water Pump .....	44, 45					
Water, trap .....	146					

QUICK REFERENCE  
FILTER ELEMENTS AND BELTS  
FOR  
MODEL 150 LOADER  
FILTER ELEMENTS

FUEL SYSTEM ELEMENTS

	PART NO.
Primary fuel filter element with gasket (not for units equipped with water separator attachment)	306 353 R91
Primary fuel filter element with gasket (for units equipped with water separator attachment)	610 309 C91
Final fuel filter element with gasket	304 101 R91

AIR CLEANER ELEMENTS

Air cleaner element (for manual shift loaders and power shift loaders not equipped with altitude compensation attachment)	317 702 R91
L150G-6519 to 15964 Also 15994 to 16217 except 15996	
L150P-6501 to 15964 Also 15994 to 16217 except 15996	
Air cleaner element (for power shift loaders equipped with altitude compensation attachment)	338 744 R91
L150P-6501 to 15964 Also 15994 to 16217 except 15996	
Air cleaner element	627 114 C1
L150G-15965 to 15993 and 16218 Up Also 15996	
L150P-15965 to 15993 and 16218 Up Also 15996	
Air cleaner safety element	627 115 C1
L150G-15965 to 15993 and 16218 Up Also 15996	
L150P-15965 to 15993 and 16218 Up Also 15996	
Air cleaner element (heavy duty)	610 636 C91

LUBRICATING OIL SYSTEM ELEMENTS

Lubrication oil filter element with gasket	323 827 R91
L150G-5698 to 10859	
L150P-5698 to 10859	
Lubrication oil filter element	279 994 R91
L150G 10860 Up	
L150P 10860 Up	

TRANSMISSION ELEMENTS

Pressure filter element with gasket	302 574 R91
Safety filter and suction filter element (used w/filter 610 794 C91)	346 821 R91
Safety filter and suction filter element (used w/filter 333 734 R91)	321 029 R91

WATER FILTER ATTACHMENT ELEMENTS

Water filter element	237 364 R91
----------------------	-------------

BELTS

ELECTRICAL SYSTEM

Generator belt	306 658 R1
Alternator belt	670 572 C1
Fan belt	328 539 R1

---

## SKELETON, BASIC AND REPLACEMENT SERVICE ENGINES

---

### SKELETON SERVICE ENGINE (See NOTE)

345 245 R92      ENGINE, Skeleton Service Diesel  
(Consists of -  
Camshaft and Related Parts  
Connecting Rods and Pistons  
Crankcase  
Crankcase Front Plate, Idler Gear and Related Parts  
Crankshaft and Related Parts  
Oil Pump )

---

### BASIC SERVICE ENGINE

304 449 R91      ENGINE, Basic Service Diesel (See NOTE)  
(Consists of -  
Camshaft and Related Parts  
Connecting Rods and Pistons  
Crankcase  
Crankcase Front Cover, Plate, Idler Gear and Related  
Parts  
Crankcase Oil Pan  
Crankshaft and Related Parts  
Cylinder Head, Valve Housing, Valves and Related Parts  
Oil Pump and Related Parts

NOTE - When Basic Service Engine 304 449 R91 is used for  
Model 150 Loaders

Deduct the following parts:

1 PAN, crankcase oil	367 575 R92
1 SCREEN, oil pump	308 367 R91

ADD the following parts:

1 PAN, crankcase oil	332 137 R91
1 SCREEN, oil pump	347 372 R91

---

### REPLACEMENT SERVICE ENGINE (See NOTE)

609 073 C91      ENGINE, replacement (MODEL 150 Power Shift Loader)  
(diesel engine complete from Water Pump to Flywheel  
inclusive except cranking motor, fan, exhaust  
muffler, rain cap, pipe extension, and voltage  
regulator)

609 075 C91      ENGINE, replacement (MODEL 150 Manual Shift Loader)  
(diesel engine complete from Water Pump to Flywheel  
inclusive except cranking motor, fan, exhaust  
muffler, rain cap, pipe extension, and voltage  
regulator)


NOTE: When ordering a Service Engine, give complete serial  
number (including letters and numerals) shown on crank-  
case of engine to be replaced.

# DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

CYLINDER HEAD, VALVE COVER, VALVES AND ROCKER ARM ASSEMBLY

CYLINDER HEAD, VALVE COVER, VALVES AND ROCKER ARM ASSEMBLY - Continued

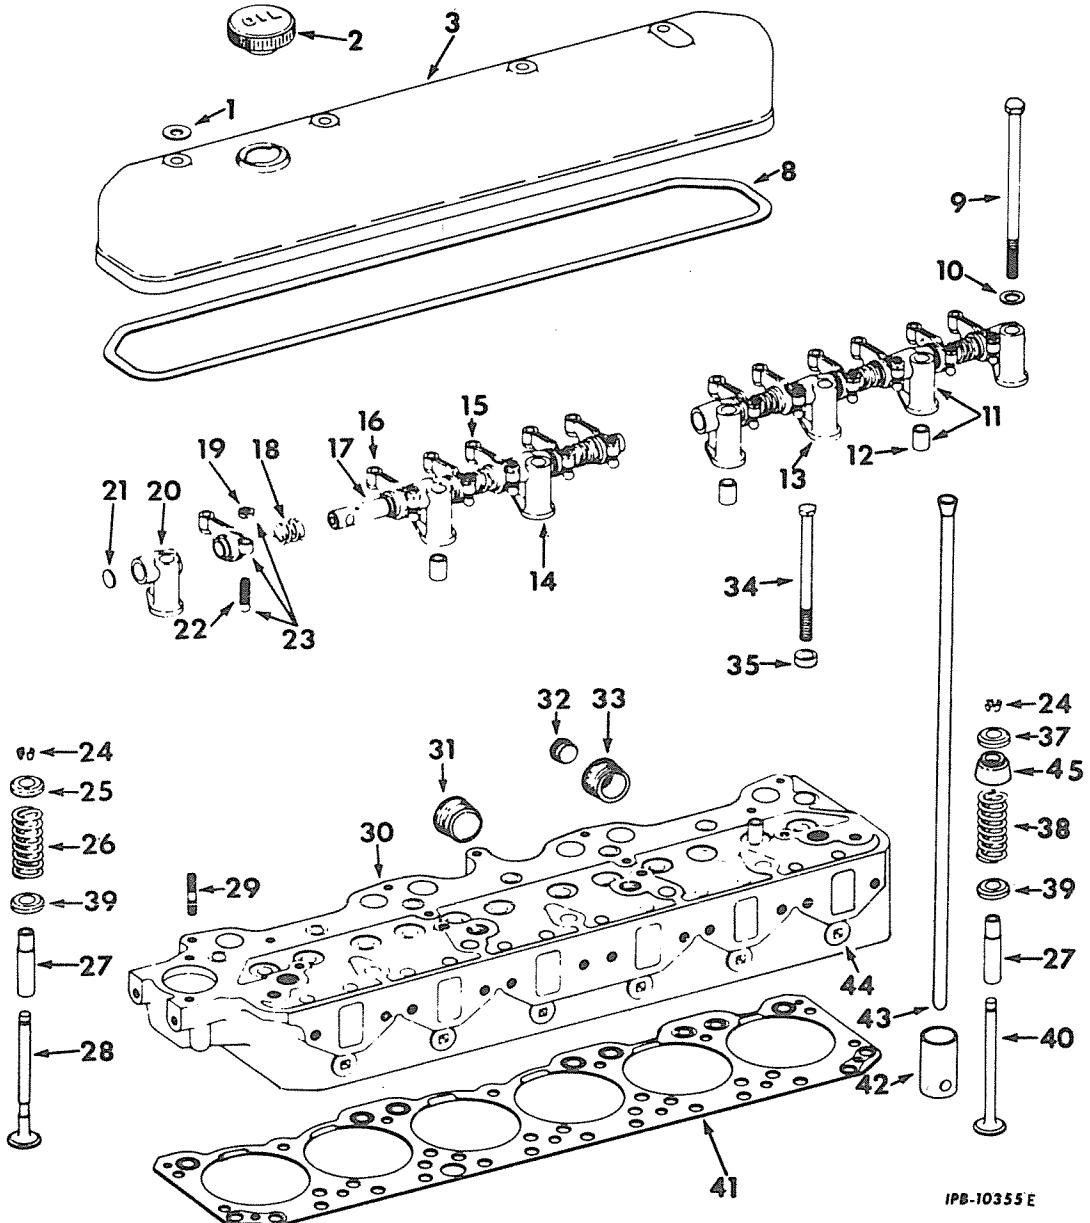

IPB-10355E

1	WASHER, valve cover bolt (13/32 x 13/16" x 16 ga.) (copper) (4)	9	320 097 R1	BOLT, cylinder head (long) (9)
2	84 079 R91 CAP, oil filler (optional with 86 900 R91)	10	345 409 R1	WASHER, cylinder head bolt (7)
2	86 900 R91 CAP, oil filler (optional with 84 079 R91)	11	76 860 R11	BRACKET w/DOWEL, 69 500 R1, rocker arm shaft (Nos. 2, 4 and 6) (3)
3	315 825 R1 17 790 R1 COVER, valve SCREW, 3/8 x 4-3/4" hex-hd cap (4)	12	69 500 R1	DOWEL, rocker arm shaft bracket (3)
8	278 308 R1 GASKET, valve cover	13	76 858 R1	BRACKET, rocker arm shaft (No. 5)
		14	76 858 R1	BRACKET, rocker arm shaft (No. 3)

## DIESEL ENGINE




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CYLINDER HEAD, VALVE COVER, VALVES AND ROCKER ARM ASSEMBLY - Continued					
15	278 304 R21	ARM w/SCREW, 16 067 DA and NUT, 133 093 R1, RH exhaust rocker (3)	31	601 244 C1	PLUG, 1-1/4" csk-hdls pipe (5)
16	323 727 R91	ARM w/SCREW, 16 067 DA and NUT, 133 093 R1, intake rocker (6)	32	444 589	PLUG, 1/2" sq-hd pipe
17	318 020 R11	SHAFT w/PLUG, 169 071 R1 rocker arm (2)	33	142 765	BUSHING, 1-1/4 x 1/2" reducing pipe
18	35 619 H	SPRING, rocker arm shaft (6)	34	278 305 R1	BOLT, cylinder head (short) (5)
19	133 093 R1	NUT, tappet adjusting screw lock (12)	35	278 306 R1	SPACER, cylinder head bolt (5)
20	76 859 R1	BRACKET, rocker arm shaft (Nos. 1 and 7) (2)	37	151 167 R3	RETAINER, valve spring (6)
21	169 071 R1	PLUG, cup (2)	38	315 744 R1	SPRING, intake valve (6)
22	16 067 DA	SCREW, tappet adjusting (12)	39	317 935 R91	ROTOCOIL, intake and exhaust (12)
23	278 303 R21	ARM w/SCREW, 16 067 DA and NUT, 133 093 R1, LH exhaust rocker (3)	40	278 301 R1	VALVE, intake (6) L-150GM 5698 to 6081 (6) L-150PM 5698 to 6081
24	41 339 D	KEY, valve spring seat (24)	40	323 774 R1	VALVE, intake (6) L-150GM 6082 up (6) L-150PM 6082 up
25	151 167 R3	RETAINER, valve spring (6)	41	601 509 C1	GASKET, cylinder head
26	315 744 R1	SPRING, exhaust valve (6)	42	75 524 R3	TAPPETS, valve (12)
27	278 300 R1	GUIDE, valve (12)	43	164 436 R91	ROD w/upper and lower rod ENDS, valve lifter (12)
28	278 302 R1	VALVE, exhaust (for use with cylinder HEAD, 278 368 R61) (6) L-150GM 5698 to 6081 (6) L-150PM 5698 to 6081	44	271 848 R1	PLUG, 3/4" sq-soc pipe (11)
			45	612 107 C1 50 410 DA	DEFLECTOR, intake valve stem oil (6) PLUG, 1/8" sq-soc pipe (2)
28	323 800 R1	VALVE, exhaust (for use with cylinder HEAD, 323 771 R11) (6) L-150GM 6082 to 8277 (6) L-150PM 6082 to 8277	315 701 R1	SPACER, cylinder head bolt (2)	
28	349 381 R1	VALVE, exhaust (for use with cylinder HEAD, 323 771 R21 and 323 771 R31) (optional with 612 312 C1) (6) L-150GM 8278 up (6) L-150PM 8278 up			
28	612 312 C1	VALVE, exhaust (for use with cylinder HEAD, 323 771 R21 and 323 771 R31) (optional with 349 381 R1) (6) L-150GM 8278 up (6) L-150PM 8278 up			
29	303 473 R1	STUD, exhaust manifold (10)			
30	278 368 R61	HEAD ASSY, cylinder L-150GM 5698 to 6081 L-150PM 5698 to 6081 (Composed of - 1 BUSHING 142 765 12 GUIDE 278 300 R1 § 1 HEAD 1 PLUG 444 589 2 PLUG 50 410 DA 5 PLUG 264 057 R1 11 PLUG 271 848 R1 § 6 SLEEVE 10 STUD 303 473 R1)			
30	323 771 R31	HEAD ASSY, cylinder L-150GM 6082 up L-150PM 6082 up (Composed of - 1 BUSHING 142 765 12 GUIDE 278 300 R1 § 1 HEAD 1 PLUG 444 589 5 PLUG 601 244 C1 11 PLUG 271 848 R1 § 6 SLEEVE 10 STUD 303 473 R1)			

§ - Not Furnished Separately.

# DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

## CRANKCASE AND RELATED PARTS

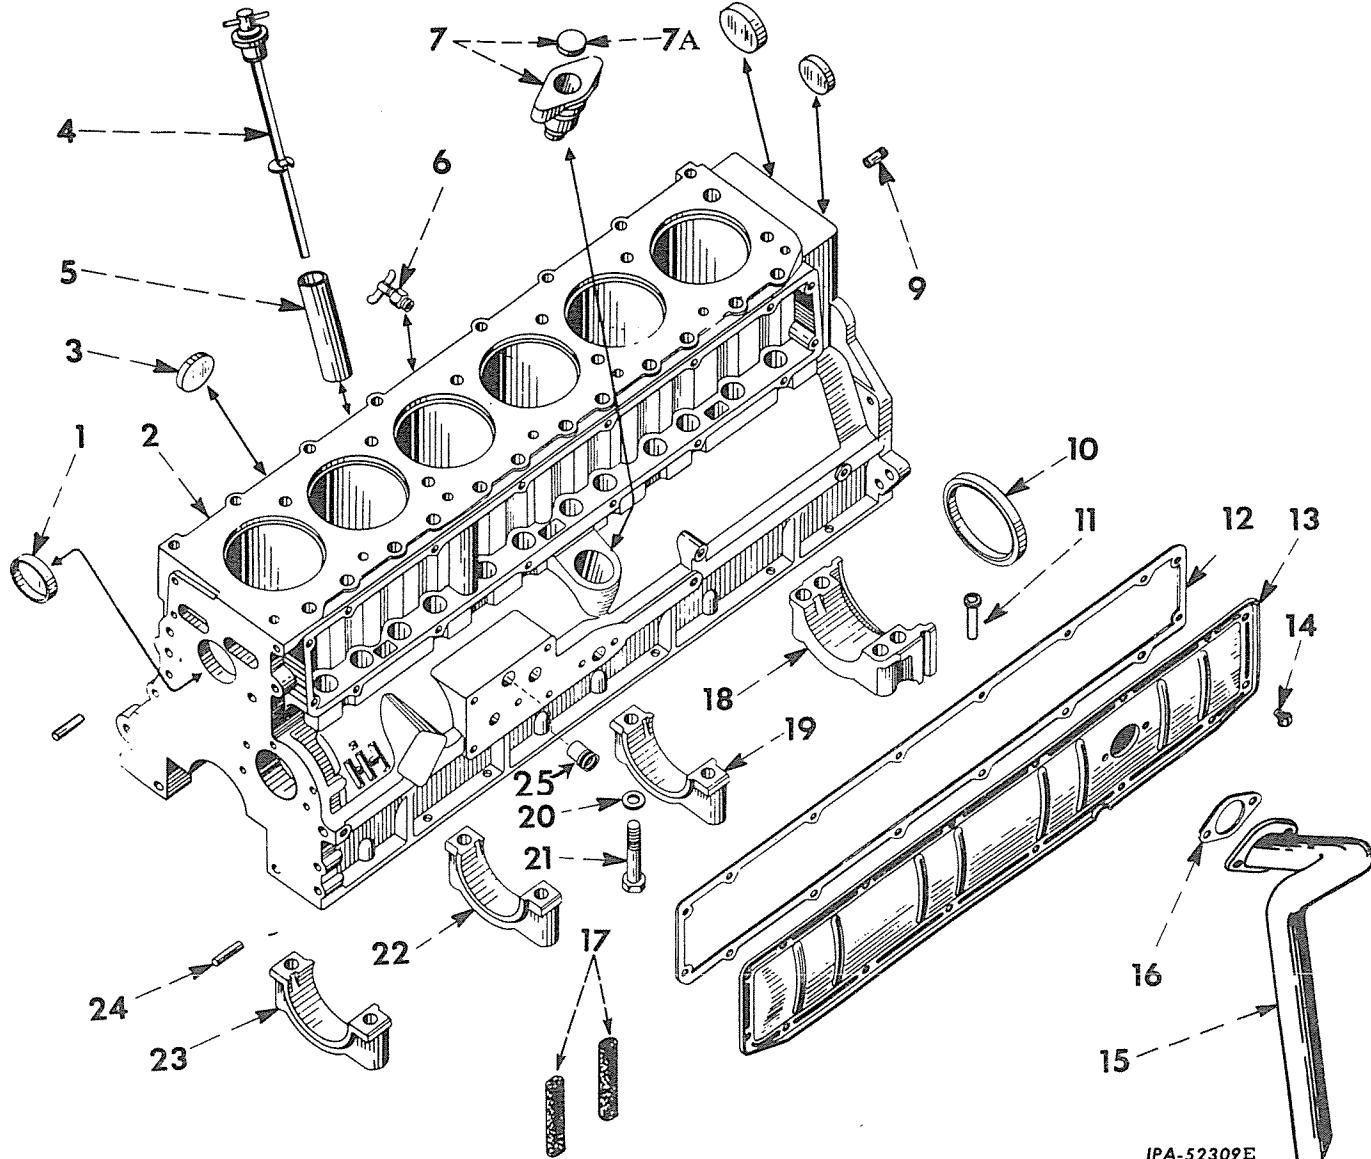

1 20 840 R1 PLUG, core-hole (2)

2 612 017 C91 CRANKCASE ASSY (will work for CRANKCASE, 601 776 C91) (together w/VALVE, 612 092 C91 and "O" RING, 349 055 R2 will work for CRANKCASE, 312 434 R93)  
(Composed of -

1	BEARING	70 259 R2
1	BEARING	70 260 R1
1	BEARING	70 261 R2
1	BEARING	70 262 R1
X	BOLT	320 097 R1
10	BOLT	328 512 R1
1	CAP	306 671 R1
1	CAP	306 672 R1
1	CAP	306 673 R1
1	CAP	306 674 R1
1	CRANKCASE	
2	DOWEL	141 285
2	DOWEL	371 699 R2
2	PIN	19 328 R1
1	PLUG	50 410 D <sup>A</sup>
6	PLUG	70 128 R1

2 612 017 C91

CRANKCASE ASSY (will work for CRANKCASE, 601 776 C91) (together w/VALVE, 612 092 C91 and "O" RING, 349 055 R2 will work for CRANKCASE, 312 434 R93)  
(Composed of - Continued

2	PLUG	20 840 R1
3	PLUG	444 571
2	PLUG	444 783
§	SLEEVE	
1	TUBE	368 985 R2
10	WASHER	345 409 R1)
	PLUG, 3/8" sq-soc-hd pipe (short) (2)	
	1/2NF NUT (2)	
3/8 x 7/8"	hex-hd cap SCREW	
1/2 x 1-1/4"	hex-hd cap SCREW (6) (*)	
5/8 x 1-1/2"	hex-hd cap SCREW (7) (†)	
3/8" lock WASHER		
1/2" lock WASHER (8)		
17/32 x 1-1/16 x .095"	WASHER (2)	
1/2NF x 3-1/2"	hex-hd cap SCREW (2)	

§ - Not Furnished Separately.

(†)- Used On Power Shift Loaders.

(\*)- Used On Manual Shift Loaders.

## DIESEL ENGINE


REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------

### CRANKCASE AND RELATED PARTS - Continued

3	70 128 R1	PLUG, core hole (6)
4	368 986 R91	GAUGE, oil level
5	368 985 R2	TUBE, oil filler
6	9 982 T	VALVE, 1/4" drain
7	306 637 R11	SUPPORT w/PLUG, 41 162 D oil pump shaft
7A	41 162 D	PLUG, oil pump shaft support
9	371 699 R2	DOWEL, engine rear support (2)
10	403 066 R91	OIL SEAL, rear bearing cap
11	310 665 R1	BOOT, rear bearing cap seal (2)
12	369 982 R1	GASKET, valve push rod cover
13	315 970 R91	COVER w/two ELEMENT, 315 849 R1, valve push rod
14	375 612 R91	SCREW, 1/4 x 1/2" slt-rd-hd mach w/WASHER (valve push rod cover) (16)
15	328 560 R11 374 587 R91	PIPE, breather SCREW w/WASHER (2)
16	369 981 R1	GASKET, breather pipe
17	315 849 R1	ELEMENT, breather (optional with 349 363 R1) (2)
17	349 363 R1	ELEMENT, breather (optional with 315 849 R1) (2)
18	306 674 R1	CAP, crankshaft rear bearing
19	306 673 R1	CAP, crankshaft rear intermediate bearing
20	345 409 R1	WASHER, crankshaft bearing cap bolt (10)
21	328 512 R1	BOLT, crankshaft bearing cap (10)
22	306 672 R1	CAP, crankshaft intermediate front bearing
23	306 671 R1	CAP, crankshaft front bearing
24	141 285	DOWEL, 1/2 x 1-1/4" crankcase front plate
25	612 092 C91 349 055 R2	VALVE, oil pressure regulating (used only when CRANKCASES, 601 776 C91 or 612 017 C91, replaces CRANKCASE, 312 434 R93) (also listed with filters) "O" RING, oil pressure regulating valve (used only when CRANKCASES, 601 776 C91 or 612 017 C91, replaces CRANKCASE, 312 434 R93) (also listed with filters)
19	328 R1	PIN, Roll (2)
50	410 DA	PLUG
444	571	PLUG, 1/8" sq-hd pipe
47	401 D	WASHER, breather pipe screw sealing (2)

# DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CRANKSHAFT, BEARING AND VIBRATION DAMPER			CRANKSHAFT, BEARING AND VIBRATION DAMPER - Continued		

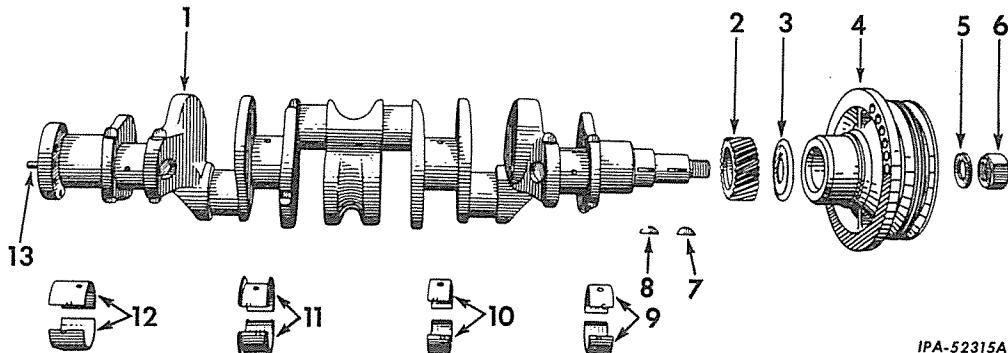


IPA-52315A

1		CRANKSHAFT (standard size) (order PACKAGE, 320 188 R93)	11	367 282 R91	BEARING, crankshaft intermediate rear (standard size) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
1		CRANKSHAFT (undersize) (renewal) (order PACKAGE, 320 186 R91)	11	332 267 R91	BEARING, crankshaft intermediate rear (standard size) (two halves) L-150GM 6903 up L-150PM 6903 up
2	367 272 R1	GEAR, crankshaft	11	367 306 R91	BEARING, crankshaft intermediate rear (.002" undersize) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
3	71 763 R2	SLINGER, crankshaft oil	11	332 273 R91	BEARING, crankshaft intermediate rear (.002" undersize) (two halves) L-150GM 6903 up L-150PM 6903 up
4	338 951 R91	DAMPER, vibration (together with OILSEAL, 317 549 R91 will work for 306 367 R91)	11	376 676 R91	BEARING, crankshaft intermediate rear (.010" undersize) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
5	70 109 R1	WASHER, starting crank nut	11	332 276 R91	BEARING, crankshaft intermediate rear (.010" undersize) (two halves) L-150GM 6903 up L-150PM 6903 up
6		NUT, 1NF jam	11	376 689 R91	BEARING, crankshaft intermediate rear (.020" undersize) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
7	117 984	KEY, 5/16 x 1-3/8" fan drive pulley (Woodruff No. 23)	11	332 279 R91	BEARING, crankshaft intermediate rear (.020" undersize) (two halves) L-150GM 6903 up L-150PM 6903 up
8	103 462	KEY, 3/16 x 1" crankshaft gear (Woodruff No. 13)	11	367 294 R91	BEARING, crankshaft intermediate rear (.030" undersize) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
9	367 276 R91	BEARING, crankshaft front (standard size) (two halves)	11	367 303 R91	BEARING, crankshaft intermediate front (.002" undersize) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
9	367 300 R91	BEARING, crankshaft front (.002" undersize) (two halves)	11	376 673 R91	BEARING, crankshaft intermediate front (.010" undersize) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
9	376 670 R91	BEARING, crankshaft front (.010" undersize) (two halves)	11	376 686 R91	BEARING, crankshaft intermediate front (.020" undersize) (two halves) L-150GM 5698 to 6902 L-150PM 5698 to 6902
9	376 683 R91	BEARING, crankshaft front (.020" undersize) (two halves)	12	367 285 R91	BEARING, crankshaft rear (standard size) (two halves)
9	367 288 R91	BEARING, crankshaft front (.030" undersize) (two halves)	12	367 309 R91	BEARING, crankshaft rear (.002" undersize) (two halves)
10	367 279 R91	BEARING, crankshaft intermediate front (standard size) (two halves)			
10	367 303 R91	BEARING, crankshaft intermediate front (.002" undersize) (two halves)			
10	376 673 R91	BEARING, crankshaft intermediate front (.010" undersize) (two halves)			
10	376 686 R91	BEARING, crankshaft intermediate front (.020" undersize) (two halves)			
10	367 291 R91	BEARING, crankshaft intermediate front (.030" undersize) (two halves)			

## DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CRANKSHAFT, BEARING AND VIBRATION DAMPER - Continued					
12	376 679 R91	BEARING, crankshaft rear (.010" undersize) (two halves)			
12	376 692 R91	BEARING, crankshaft rear (.020" undersize) (two halves)			
12	367 297 R91	BEARING, crankshaft rear (.030" undersize) (two halves)			
13	82 970 R1	PIN, flywheel to crankshaft dowel			
	382 357 R91	BEARING SET, crankshaft (standard size) (Consists of - 1 BEARING 367 276 R91 1 BEARING 367 279 R91 1 BEARING 332 267 R91 1 BEARING 367 285 R91)			
	382 360 R91	BEARING SET, crankshaft (.010" undersize) (Consists of - 1 BEARING 376 670 R91 1 BEARING 376 673 R91 1 BEARING 332 276 R91 1 BEARING 376 679 R91)			
	320 188 R93	PACKAGE, crankshaft w/ BEARINGS, field service (standard size) (Composed of - 1 BEARING SET 382 357 R91 1 BEARING SET 367 630 R91 § 1 CRANKSHAFT 1 BEARING 367 282 R91 1 PIN 82 970 R1 1 PAMPHLET 1 019 253 R1 )	1	269 293 R1	PIN, dowel (2)
	320 186 R91	PACKAGE, (undersize) (renewal) field service (consists of CRANKSHAFT w/ six connecting rod BEARINGS, four crankshaft BEARINGS and PIN, 82 970 R1)	2	331 421 R1 306 354 R2	COUPLING, front power take-off BOLT, front power take-off coupling (2)
			3	307 080 R1	SEAL, felt
			4	330 734 R1	SHAFT, front power take-off coupling
			5	126 152	FITTING, lubrication (2)
			6	342 968 R1	RETAINER, shaft 3/8 x 1-3/4" hex-hd cap SCREW (4) 3/8" lock WASHER (4)

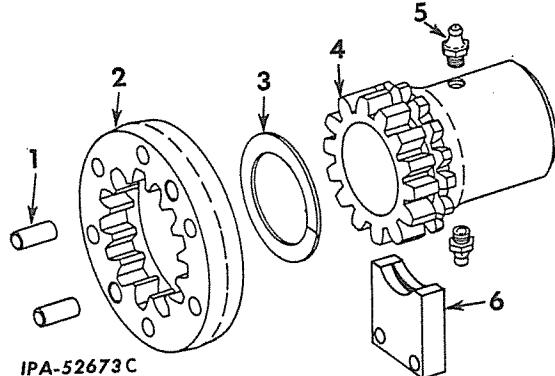


§ - Not Furnished Separately.

## DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CRANKCASE FRONT COVER					

CRANKCASE FRONT COVER - Continued

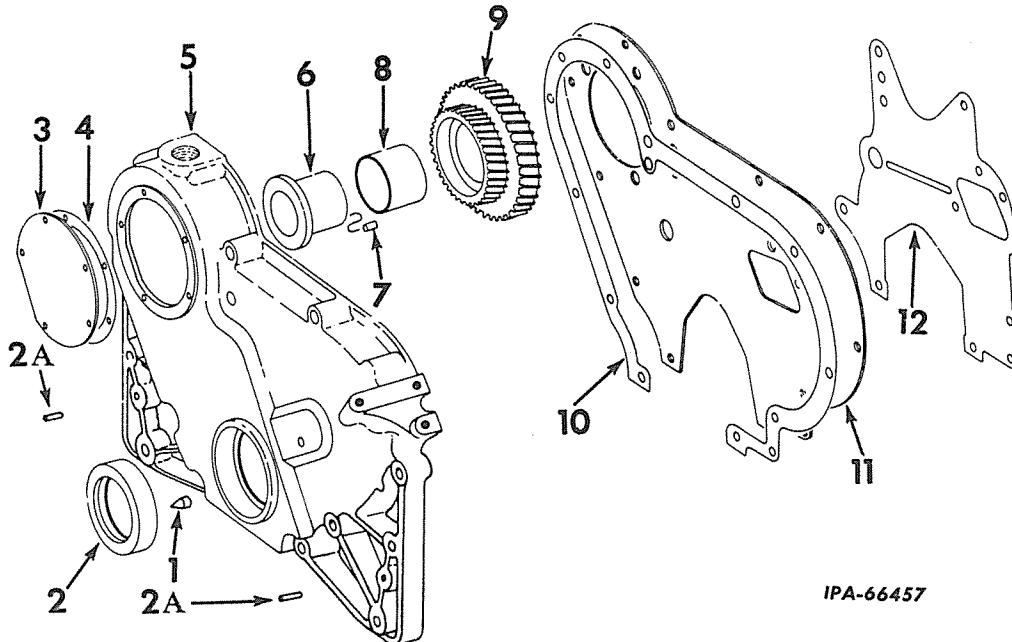

IPA-66457

1	367 572 R1	POINTER, timing	6	367 580 R11	SHAFT w/DOWEL, 141 150, idler gear 1/2 x 2-1/4" hex-hd cap SCREW 1/2" lock WASHER
2	357 672 R91	OIL SEAL, crankshaft (used with vibration DAMPER, 306 367 R91 or 338 951 R91)	7	141 150	DOWEL, 3/16 x 7/16" idler gear shaft
2	317 549 R91	OIL SEAL, crankshaft (used with vibration DAMPER, 338 951 R91)	8	367 578 R1	BUSHING, idler gear
2A	19 892 R1	DOWEL, 3/8 x 1.5" (2)	9	278 263 R11	GEAR w/BUSHING, 367 578 R1 idler
3	278 269 R1	COVER, injection pump gear 5/16 x 9/16" hex-hd cap SCREW (5) 5/16" lock WASHER (5)	10	278 268 R1	GASKET, crankcase front cover
4	278 270 R1	GASKET, injection pump gear cover	11	278 264 R11	PLATE w/three NUT, 264 723 R1, crankcase front L-150GM-5698 to 12177 L-150PM-5698 to 12177 3/8 x 7/8" hex-hd cap SCREW (4) 3/8" lock WASHER (40)
5	328 542 R11	COVER w/POINTER, 367 572 R1 and two DOWEL, 19 892 R1, crankcase front 1/2NF NUT (3) 1/2 x 3" hex-hd cap SCREW (6) 3/8 x 1" hex-hd cap SCREW (6) 1/2" lock WASHER (6) 3/8" lock WASHER (6)	11	612 151 C11	PLATE, crankcase front L-150GM-12178 up L-150PM-12178 up 3/8 x 7/8" hex-hd cap SCREW (4) 3/8" lock WASHER (4)
			12	278 265 R1	GASKET, crankcase front plate
				171 823 R1	ELBOW, hose (‡) (\$)
				444 595	PLUG, front cover (‡)

- (‡) - Used On Power Shift Loader Not Equipped With Altitude Compensation Attachment.  
 (†) - Used On Manual Shift Loader.  
 (\$) - Used On Power Shift Loader Equipped With Altitude Compensation Attachment.

## DIESEL ENGINE


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CONNECTING ROD AND PISTON					
					CONNECTING ROD AND PISTON - Continued
1	674 726 C91	RING, piston (top compression) (order set 674 726 C91) (6)	7	612 000 C11	SLEEVE, cylinder (.002" oversize) (X) L-150GM 11440 up (X) L-150PM 11440 up
2	674 726 C91	RING, piston (chrome plated) (intermediate compression) (order set 674 726 C91) (6)	7	612 001 C11	SLEEVE, cylinder (.010" oversize) (X) L-150GM 11440 up (X) L-150PM 11440 up
3	674 726 C91	RING, piston (oil regulating) (order set 674 726 C91) (6)	8	318 377 R2	PISTON ("SS" marking) (6)
4	674 726 C91	RING SET, piston (perfect circle) (consists of two compression RING and one oil RING) (optional w/RING SET 674 727 C91)	8A	609 343 C91	PISTON, PISTON PIN, and RINGS (6)
4	674 727 C91	RING SET, piston (KOPPERS) (consists of two compression RING and one oil RING) (optional w/RING SET 674 726 C91)	9	609 344 C91	SLEEVE w/PISTON and RING ASSY, cylinder (6) L-150GM 5698 to 11439 (6) L-150PM 5698 to 11439
5	338 835 R1	RING, piston pin retainer (12)	9	612 008 C91	SLEEVE w/PISTON and RING ASSY, cylinder (X) L-150GM 11440 up (X) L-150PM 11440 up
6	332 436 R1	PIN, piston (standard size) (6)	10	306 708 R1	BUSHING, piston pin (6)
7	278 272 R1	SLEEVE, cylinder (6) L-150GM 5698 to 11439 (6) L-150PM 5698 to 11439	11	367 408 R11	BEARING, connecting rod (standard) (two halves) (6)
7	323 802 R1	SLEEVE, cylinder (.002" oversize) (part of PACKAGE, 609 346 C91) (X) L-150GM 5698 to 11439 (X) L-150PM 5698 to 11439	11	367 632 R11	BEARING, connecting rod (.002" undersize) (two halves) (6)
7	601 289 C1	SLEEVE, cylinder (.010" oversize) (X) L-150GM 5698 to 11439 (X) L-150PM 5698 to 11439	11	376 666 R11	BEARING, connecting rod (.010" undersize) (two halves) (6)
7	609 028 C11	SLEEVE, cylinder (S3) (X) L-150GM 11440 up (X) L-150PM 11440 up	11	376 668 R11	BEARING, connecting rod (.020" undersize) (two halves) (6)
			11	367 631 R11	BEARING, connecting rod (.030" undersize) (two halves) (6)
			12	306 280 R12	ROD w/two BOLTS, 316 366 R1 and BUSHING, 306 708 R1 connecting (6)
			13	316 366 R1 367 630 R91	BOLT, connecting rod (12) BEARING SET, connecting rod (consists of six rod BEARING, 367 408 R11)
			320 017 R91	PACKAGE, cylinder sleeve (6) L-150GM 5698 to 11439 L-150PM 5698 to 11439	
				(Consists of -	
				1	PAMPHLET 1 014 864 R3
				1	SLEEVE 278 272 R1
				1	SHIM 320 000 R1
				2	SHIM 320 018 R1
				PACKAGE, piston and oversize cylinder sleeve (.002" oversize) field service (X)	
					L-150GM 5698 to 11439
					L-150PM 5698 to 11439
				(Consists of -	
				1	PAMPHLET 1 014 864 R3
				1	PISTON 318 377 R2
				1	PIN 332 436 R1
				§ 3	RING 338 835 R1
				2	RING 320 000 R1
				1	SHIM 320 018 R1
				2	SHIM 323 802 R1
			320 000 R1	SHIM, cylinder sleeve (.005") (6)	
			320 018 R1	SHIM, cylinder (.003") (12)	
				(X) - As Required.	
				§ - Not Furnished Separately.	

## DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

CAMSHAFT AND RELATED PARTS

CAMSHAFT AND RELATED PARTS - Continued

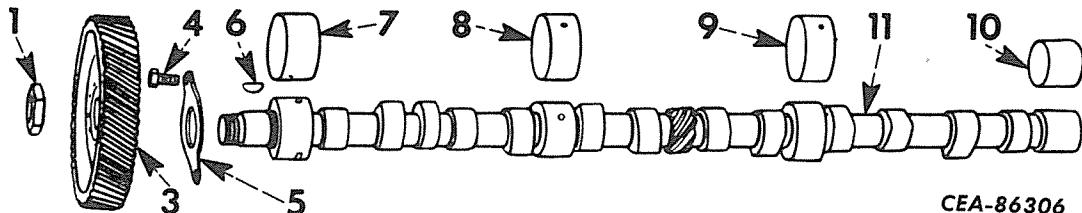


CEA-86306

1	16 026 DB	NUT, camshaft gear
3	367 240 R1	GEAR, camshaft
4	70 425 R1	BOLT, camshaft thrust plate (2)
5	35 650 HA	PLATE, camshaft thrust
6	127 559	KEY, 1/4 x 3/4" camshaft gear (Woodruff No. 91)


7	70 259 R2	BEARING, camshaft (front) (will work for 367 515 R1 and 367 514 R1)
8	70 260 R1	BEARING, camshaft (intermediate front) (will work for 71 326 R1)
9	70 261 R2	BEARING, camshaft (intermediate rear) (will work for 70 131 R1)
10	70 262 R1	BEARING, camshaft (rear) (will work for 70 132 R1)
11	367 229 R1	CAMSHAFT

FLYWHEEL AND ENGINE SUPPORTS  
(Used on Manual Shift Loaders)

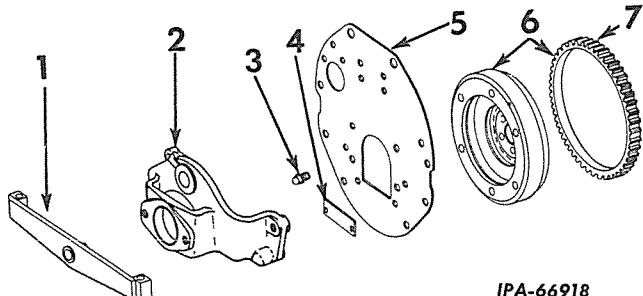

IPA-66918

FLYWHEEL AND ENGINE SUPPORTS  
(Used on Power Shift Loaders)

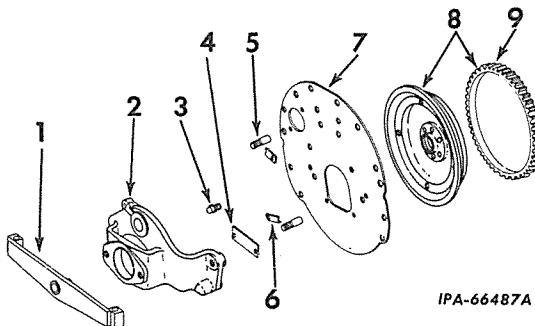

IPA-66487A

1	306 648 R91	SUPPORT, front engine 5/8 x 3-3/4" hex-hd cap SCREW (4) 5/8" lock WASHER (4)
2	332 111 R1	BRACKET, front engine support
3	Q 5 009	FITTING, lubrication
4	367 225 R1	SEAL, rear engine support dust 5/16 x 5/8" hex-hd cap SCREW (2) 11/32 x 11/16" x No. 16 ga. plain WASHER (2)
5	306 645 R11	SUPPORT, rear engine 1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)
6	306 638 R11	FLYWHEEL w/RING GEAR, 33 817 DE
7	33 817 DE	GEAR, flywheel ring (149T)
	601 558 C1	BOLT, 7/16NF x 3" hex lock flywheel to crankshaft (6)
48 384 D		SHIM, front engine support (heavy) (X)
48 385 D		SHIM, front engine support (light) (X)

(X) - As Required.

1	306 648 R91	SUPPORT, front engine 5/8 x 3-3/4" hex-hd cap SCREW (4) 5/8" lock WASHER (4)
2	332 111 R1	BRACKET, front engine support
3	Q 5 009	FITTING, 1/8" x 30° lubrication
4	367 225 R1	SEAL, rear engine support dust 5/16 x 5/8" hex-hd cap SCREW (2) 11/16 x 11/32" x No. 16 ga. WASHER (2)
5	331 384 R1	DOWEL, main frame (. 7453" standard size)(2)
5	331 792 R2	DOWEL, main frame (. 8140" oversize) (2)
5	331 793 R2	DOWEL, main frame (. 8453" oversize) (2)
6	331 383 R1	RETAINER, dowel (2) 1/2 x 3/4" hex-hd cap SCREW
7	328 544 R21	SUPPORT, rear engine 1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)
8	328 543 R21	FLYWHEEL w/RING GEAR, 33 817 DE
9	33 817 DE	GEAR, flywheel ring (149T)
	332 136 R1	BOLT, 7/16NF x 3" hex-hd lock (flywheel to crankshaft) (6)
48 384 D		SHIM, front engine support (heavy) (X)
48 385 D		SHIM, front engine support (light) (X)

(X) - As Required.

## DIESEL ENGINE


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**INTAKE AND EXHAUST MANIFOLD**

(Used on Manual Shift Loader) (Used on Power Shift Loader  
Equipped With Altitude Compensation Attachment)

**INTAKE AND EXHAUST MANIFOLD - Continued**

(Used on Manual Shift Loader) (Used on Power Shift Loader  
Equipped With Altitude Compensation Attachment)

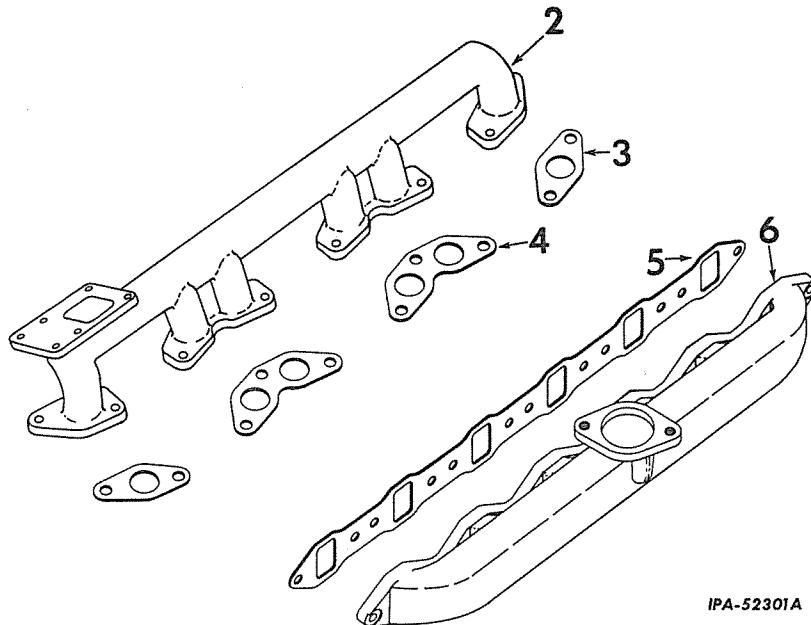


2	306 656 R1	MANIFOLD, exhaust	264 196 R91	CLIP, pipe
3	278 313 R2	GASKET, exhaust manifold (end) (2)	39 524 DA	NUT, exhaust manifold stud (10)
4	278 314 R1	GASKET, exhaust manifold (center) (2)	103 877	PLUG, 1/8" sq-hd pipe (intake manifold)
5	305 804 R1	GASKET, intake manifold	103 878	PLUG, 1/4NPT sq-hd stl pipe (optional with 219 189)
6	332 110 R11	MANIFOLD w/PLUG, 103 877 intake 3/8 x 1-1/8" hex-hd cap SCREW (12) 3/8" lock WASHER (12)	219 189	PLUG, 1/4NPT sq-hd MI pipe (optional with 103 878)
			113 934 H	WASHER, exhaust manifold flat (10)

## DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

### INTAKE AND EXHAUST MANIFOLD

(Used on Power Shift Loader Not Equipped With Altitude Compensation Attachment)

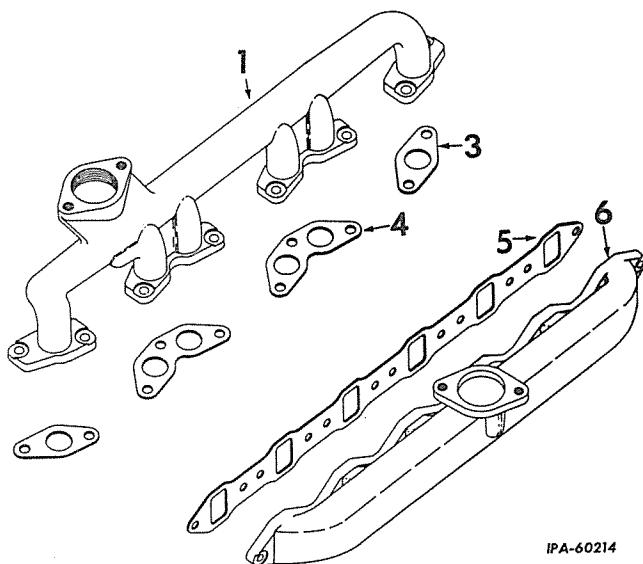

IPA-60214

1	278 643 R2	MANIFOLD, exhaust
3	278 313 R2	GASKET, exhaust manifold (end) (2)
4	278 314 R1	GASKET, exhaust manifold (center) (2)
5	305 804 R1	GASKET, intake manifold
6	332 110 R11	MANIFOLD w/PLUG, 103 877 intake 3/8 x 1-1/8" hex-hd cap SCREW (12) 3/8" lock WASHER (12)
	264 196 R91	CLIP, pipe (2)
	39 524 DA	NUT, exhaust manifold stud (10)
	103 877	PLUG, 1/8" sq-hd pipe (intake manifold)
	113 934 H	WASHER, exhaust manifold flat (10)

## DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>EXHAUST MUFFLER</b> (Used on Power Shift Loader) (Not Equipped With Altitude Compensation Attachment) (Not Used on Loaders Equipped With Heavy Duty Air Cleaner)					
<b>EXHAUST MUFFLER - Continued</b> (Used on Power Shift Loader) (Not Equipped With Altitude Compensation Attachment) (Not Used on Loaders Equipped With Heavy Duty Air Cleaner)					
1	650 430 C91	CAP, lockable exhaust rain (will work for CAPS 283 001 R91 and 321 576 R91)	5	604 678 C91	MUFFLER, exhaust (heavy hood) (together with PIPE, 604 677 C1 will work for 330 736 R91)
1A	620 149 C1	PIPE, exhaust muffler (together with CAP, 650 430 C91 will work for PIPE, 318 982 R1)	6	350 602 R1 102 635 179 843 103 321	CLAMP, exhaust muffler 3/8" NUT 3/8 x 1-1/2" hex-hd cap SCREW 3/8" lock WASHER
2	299 864 R1	CLAMP, exhaust pipe extension (together with 3/8" NUT and 3/8 x 1-1/2" hex-hd cap SCREW, will work for CLAMP, 311 420 R11) (2)	7	7	PIPE, exhaust (2" std-pipe 8.6" long obtain locally) (for use with MUFFLER, 330 736 R91) L-150P 6501 to 9936
3	320 535 R11	RETAINER, exhaust spring	7	604 677 C1	PIPE, exhaust (for use with MUFFLER, 604 678 C91) L-150P 9937 up
4	318 985 R1	SPRING, exhaust baffle	15 022 R1	BOLT, exhaust pipe clamp (used with CLAMP, 311 420 R11) (2) 5/16" NUT (2)	
			628 164 C91	ATTACHMENT, lockable exhaust rain cap (used on loader equipped w/PIPE 620 149 C1) (see NOTES 1 and 3) (consists of CAP 650 430 C91)	
			650 382 C91	ATTACHMENT, exhaust rain cap padlock w/KEYS (see NOTES 1 and 3)	

IPA-66539 A

- 1 650 430 C91 CAP, lockable exhaust rain (will work for CAPS 283 001 R91 and 321 576 R91)
- 1A 620 149 C1 PIPE, exhaust muffler (together with CAP, 650 430 C91 will work for PIPE, 318 982 R1)  
  
L-150G (\*)  
L-150P (\*)
- 2 299 864 R1 CLAMP, exhaust pipe extension (together with 3/8" NUT and 3/8 x 1-1/2" hex-hd cap SCREW, will work for CLAMP, 311 420 R11) (2)
- 3 320 535 R11 RETAINER, exhaust spring
- 4 318 985 R1 SPRING, exhaust baffle

NOTE 1 - Factory Application - Order On Machine Order Form.

NOTE 3 - Field Application - Order Through Regular Service Parts Channels.


(\*) - Now Regular Equipment From Serial Number 11702 and Up.

## DIESEL ENGINE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**EXHAUST PIPE**  
 (Used on Manual Shift Loader) (Used on Power Shift Loader  
 Equipped With Altitude Compensation Attachment)  
 (Not Used on Loader Equipped With Heavy Duty Air Cleaner)

**EXHAUST PIPE - Continued**  
 (Used on Manual Shift Loader) (Used on Power Shift Loader  
 Equipped With Altitude Compensation Attachment)  
 (Not Used on Loader Equipped With Heavy Duty Air Cleaner)

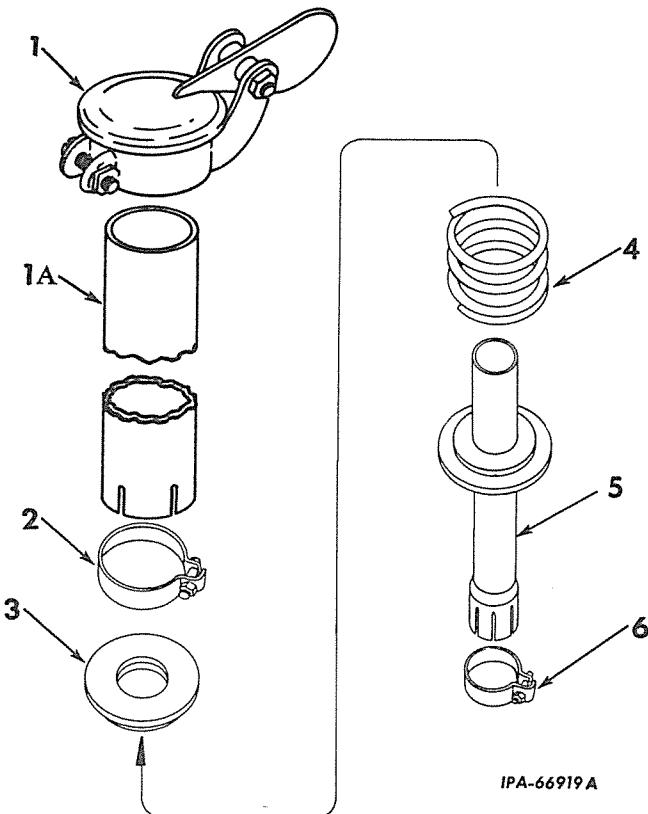

- |             |  |                               |
|-------------|--|-------------------------------|
| 5           | 330 737 R11  | PIPE, exhaust                 |
| 6           | 276 223 R91  | CLAMP, exhaust pipe extension |
| 628 164 C91 | ATTACHMENT, lockable exhaust rain cap<br><small>(used on loaders equipped w/PIPE<br/>   620 149 C1) (see NOTES 1 and 3) (consists<br/>   of CAP 650 430 C91)</small> |                               |
| 650 382 C91 | ATTACHMENT, exhaust rain cap padlock<br><small>w/KEYS (See NOTES 1 and 3)</small>  |                               |

- |           |  |   |
|-----------|--|---|
| 1         | 650 430 C91  | CAP, lockable exhaust rain (will work for<br>CAPS 283 001 R91 and 321 576 R91)  |
| 1A        | 620 149 C1   | PIPE, exhaust muffler (together with CAP,<br>650 430 C91 will work for PIPE,<br>318 982 R1)<br><br>L-150G (*)<br>L-150P (*)             |
| 2         | 299 864 R1   | CLAMP, exhaust pipe extension (together<br>with 3/8" NUT and 3/8 x 1-1/2" hex-hd<br>cap SCREW, will work for CLAMP,<br>311 420 R11) (2) |
| 15 022 R1 | BOLT, exhaust pipe clamp (used with<br>CLAMP, 311 420 R11) (2) |   |
| 102 634   | 5/16" NUT (2)  |   |
| 3         | 320 537 R11  | RETAINER, spring  |
| 4         | 318 987 R1   | SPRING, exhaust baffle  |

NOTE 1 - Factory Application - Order On  
 Machine Order Form

NOTE 3 - Field Application - Order Through  
 Regular Service Parts Channels.

(\*) - Now Regular Equipment From Serial  
 Number 11702 and Up.



-23-

## MEMORANDA



## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

## AIR CLEANER AND CONNECTIONS


(United Specialties) (Used on Manual Shift Loaders) (Used on Power Shift Loaders Not Equipped With Altitude Compensation Attachment)

L-150G 6519 To 15964  
Also 15994 To 16217 Except 15996  
L-150P 6501 To 15964  
Also 15994 To 16217 Except 15996

## AIR CLEANER AND CONNECTIONS - Continued

(United Specialties) (Used on Manual Shift Loaders) (Used on Power Shift Loaders Not Equipped With Altitude Compensation Attachment)

L-150G 6519 to 15964  
Also 15994 To 16217 Except 15996  
L-150P 6501 To 15964  
Also 15994 To 16217 Except 15996

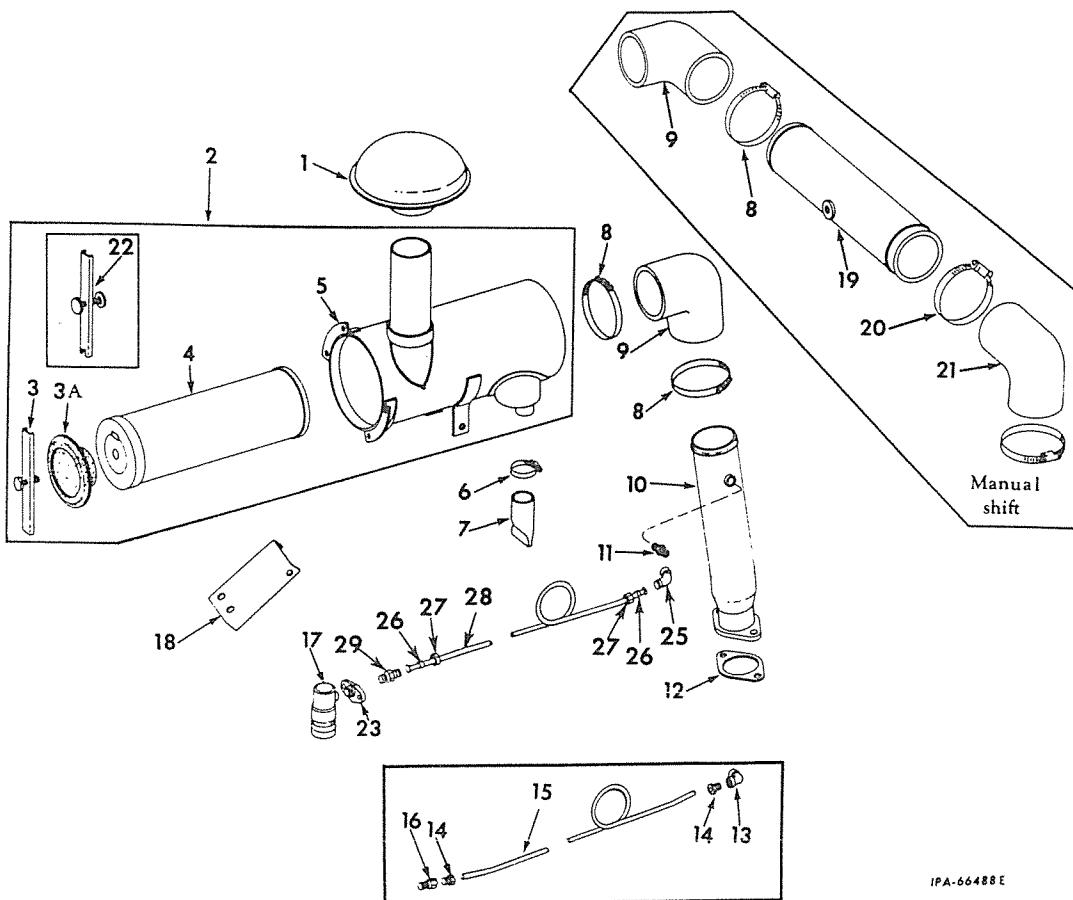

IPA-66488E

1	313 625 R91	CAP, weather (#)	10	345 794 R11	PIPE, air cleaner outlet (†) (#) L-150P 8929 to 15964 Also 15994 to 16217 except 15996
2	327 468 R91	CLEANER ASSY, air (†) (*) (#) 25 520 R1      5/16" NUT (4) 25 228 R1      5/16 x 3/4" hex-hd cap SCREW (4) 116 120      5/16" lock WASHER (4)	24 849 R1	115 314	7/16 x 1" hex-hd cap SCREW (2) 7/16" lock WASHER (2)
3	313 930 R91	LOCK, filter element (†) (*) (#)	11	317 972 R91	NIPPLE and FILTER, air cleaner
3A	603 824 C1	GASKET, element seal (†) (*) (#)	12	369 497 R2	GASKET, air cleaner outlet pipe (†) (#)
4	317 702 R91	ELEMENT (#)	13	19 717 R1	ELBOW, 1/8"NPT L-150G-6519 to 12166 L-150P-6501 to 12166
5		BODY (Not Furnished Separately) (#)			
6	274 085 R91	CLAMP, automatic dust unloader (#)	14	36 092 D	NUT, 1/8" tube coupling (2) L-150G-6519 to 12166 (2) L-150P-6501 to 12166
7	324 194 R1	UNLOADER, automatic dust (#)			
8	274 089 R91	CLAMP, air cleaner outlet hose elbow (2) (#)			
9	304 398 R1	ELBOW, air cleaner outlet hose (*) (#) (†) L-150P 6501 to 8928	15	331 976 R1	TUBE, air cleaner indicator (†) L-150G - 6519 to 12166 L-150P- 6501 to 12166
9	345 795 R1	ELBOW, air cleaner outlet hose (†) (#) L-150P 8929 to 15964 Also 15994 to 16217 except 15996	15	331 977 R1	TUBE, air cleaner indicator (*) L-150G-6519 to 12166 L-150P-6501 to 12166
10	330 622 R11	PIPE, air cleaner outlet (order PIPE, 345 794 R11 and ELBOW, 345 795 R1)(†)(#) L-150P 6501 to 8928			(#) - Not Used With Heavy Duty Air Cleaner. (†) - For Power Shift Loaders. (*) - For Manual Shift Loaders.

## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------

**AIR CLEANER AND CONNECTIONS - Continued**  
(United Specialties) (Used on Manual Shift Loaders) (Used on Power Shift Loaders Not Equipped with Altitude Compensation Attachment)  
L-150G 6519 To 15964  
Also 15994 To 16217 Except 15996  
L-150P 6501 To 15964  
Also 15994 To 16217 Except 15996

16	59 939 D	CONNECTOR, hi-duty male pipe L-150G-6519 to 12166 L-150P-6501 to 12166
17	346 666 R91	INDICATOR, air cleaner filter
18	327 983 R11 24 839 R1 115 093 25 522 R1	BRACKET, air cleaner support (†) (*) (#) 3/8 x 3/4" hex-hd cap SCREW (4) 3/8" lock WASHER (4) 3/8" NUT
19	327 998 R11	PIPE, air cleaner to turbocharger (*) (#)
20	279 029 R91	CLAMP, air cleaner to turbocharger pipe hose elbow (2) (*) (#)
21	327 999 R1	ELBOW, air cleaner to turbocharger pipe hose (*) (#)
22		NOT USED
23	284 874 C1 103 089 100 779 106 498	FLANGE, air cleaner filter indicator mounting No. 12 NUT (2) 12 x 3/4" hex-hd cap SCREW (2) No. 12 lock WASHER
	606 519 C1	PLATE, air cleaner indicator name
25	610 040 C1	ELBOW, air cleaner indicator tube L-150G-12167 to 15964 Also 15994 to 16217 except 15996 L-150P-12167 to 15964 Also 15994 to 16217 except 15996
26	606 926 C1	SLEEVE (2) L-150G-12167 to 15964 Also 15994 to 16217 except 15996 (2) L-150P-12167 to 15964 Also 15994 to 16217 except 15996
27	606 925 C1	NUT (2) L-150G-12167 to 15964 Also 15994 to 16217 except 15996 (2) L-150P-12167 to 15964 Also 15994 to 16217 except 15996
28	611 427 C11	TUBE, w/two SLEEVE, /606 926 C1 and two NUT, 606 925 C1, air cleaner indicator (†) L-150G-12167 to 15964 Also 15994 to 16217 except 15996 L-150P-12167 to 15964 Also 15994 to 16217 except 15996
29	606 999 C1	CONNECTOR, air cleaner filter indicator tube L-150G-12167 to 15964 Also 15994 to 16217 except 15996 L-150P-12167 to 15964 Also 15994 to 16217 except 15996

(#) - Not Used With Heavy Duty Air Cleaner.

(†) - For Power Shift Loaders.


(\*) - For Manual Shift Loaders.

## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**AIR CLEANER AND CONNECTIONS**  
 (United Specialties) (Used on Power Shift Loader Equipped With Altitude Compensation Attachment)  
 L-150P 6501 To 15964  
 Also 15994 To 16217 Except 15996

**AIR CLEANER AND CONNECTIONS - Continued**  
 (United Specialties) (Used on Power Shift Loader Equipped With Altitude Compensation Attachment)  
 L-150P 6501 To 15964  
 Also 15994 To 16217 Except 15996

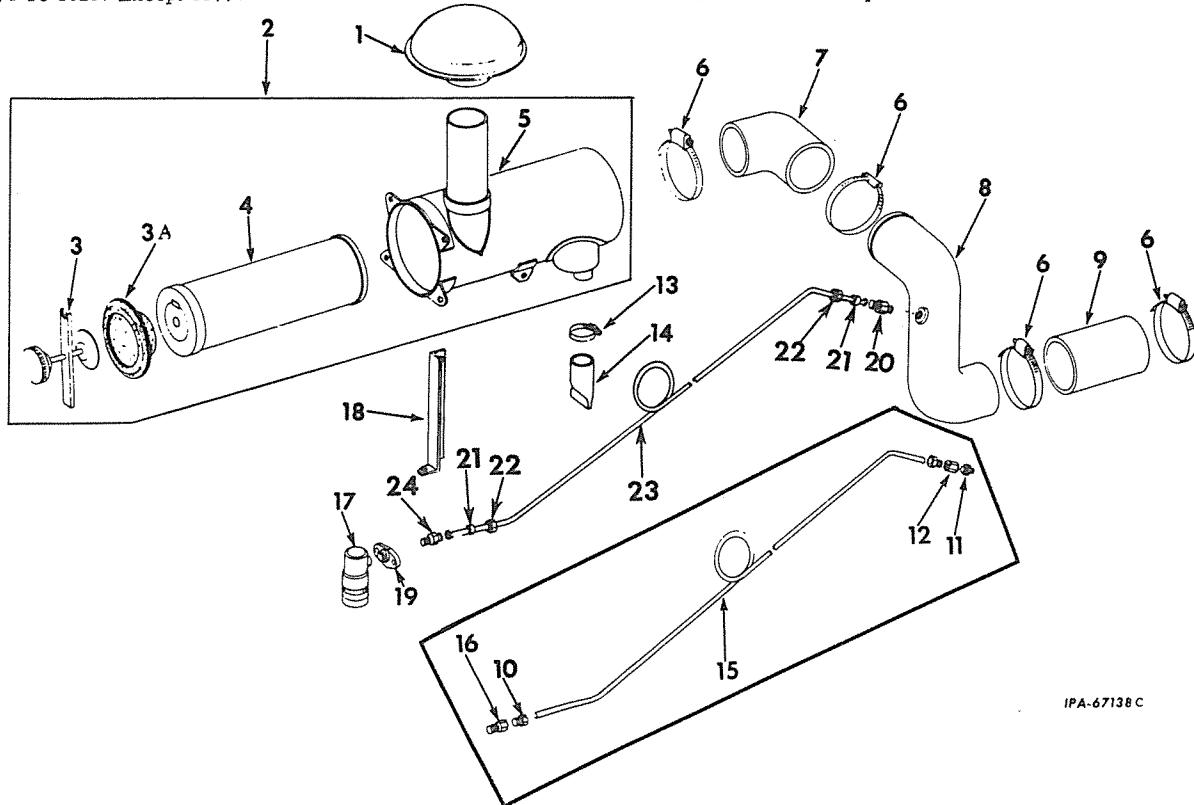

IPA-67138C

1	313 625 R91	CAP, weather (#)	20	610 858 C1	CONNECTOR, air cleaner indicator tube
2	338 725 R91	CLEANER ASSY, air (N-108D2S) (see NOTE) (#)			L-150P-12167 to 15964
		3/8" NUT (4)			Also 15994 to 16217
		3/8 x 3/4" hex-hd cap SCREW (4)			except 15996
		3/8" lock WASHER (4)			
3	338 743 R91	LOCK, filter element (193B6K030) (#)	21	606 926 C1	SLEEVE (2)
3A	603 823 C1	GASKET, element seal (615B23) (#)			L-150P-12167 to 15964
4	338 744 R91	ELEMENT (250C13-S) (#)	22	606 925 C1	NUT (2)
5	274 089 R91	BODY (Not Furnished Separately) (#)	23	611 429 C11	TUBE w/2 SLEEVE 606 926 C1 and 2 NUT
6	274 089 R91	CLAMP, hose (4) (#)		606 925 C1, air cleaner indicator	L-150P-12167 to 15964
7	304 398 R1	ELBOW, air cleaner outlet hose (#)			Also 15994 to 16217
8	331 703 R1	PIPE, air cleaner to turbocharger (#)			except 15996
9	407 015 R1	HOSE, air cleaner to turbocharger pipe (3" ID x 2-1/2" long) (#) (#)			
10	36 092 D	NUT, 1/8" tube coupling (2)	24	606 999 C1	CONNECTOR, air cleaner filter indicator tube
		L-150P-6501 to 12166			L-150P-12167 to 15964
11	317 972 R91	NIPPLE and FILTER, air cleaner			Also 15994 to 16217
12	19 715 R1	ELBOW, 1/8"NPT			except 15996
		L-150P-6519 to 12166			
13	274 085 R91	CLAMP, automatic dust unloader (#)	606 519 C1	PLATE, air cleaner indicator name	
14	324 194 R1	UNLOADER, automatic dust (#)	624 919 C91	PACKAGE, air cleaner field improvement	
15	331 978 R1	TUBE, air cleaner indicator		(consists of AIR CLEANER 627 096 C91 and DRAWING 12G9902)	
		L-150P-6519 to 12166			
16	59 939 D	CONNECTOR, hi-duty male pipe			
		L-150P-6519 to 12166			
17	346 666 R91	INDICATOR, air cleaner filter			
18	331 706 R1	SUPPORT, air cleaner (#)			
		3/8" NUT			(#) - Not Used With Heavy Duty Air Cleaner.
		3/8 x 3/4" hex-hd cap SCREW			(*) - Part Number And Price Covers One
		3/8" lock WASHER			Foot Of Hose, Furnished Only In Three
19	284 874 C1	FLANGE, air cleaner filter indicator mounting			Foot Lengths.
		No. 12 NUT (2)			
		12 x 3/4" hex-hd cap SCREW (2)			
		No. 12 lock WASHER (2)			

NOTE - AIR CLEANER ASSY 338 725 R91  
 No Longer Available, Order AIR  
 CLEANER ASSY 627 096 C91 Listed  
 Under AIR CLEANER and CONNEC-  
 TIONS L-150G 15965 To 15993 and  
 16218 Up, Also 15996 - L-150P 15965  
 To 15993 and 16218 Up, Also 15996




-25-

# MEMORANDA




**FUEL SYSTEM**


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>AIR CLEANER AND CONNECTIONS</b> (United Specialties) (Used on Manual Shift Loaders or Power Shift Loaders Equipped With Altitude Compensation Attachment) L-150G 15965 To 15993 and 16218 Up, Also 15996 L-150P 15965 To 15993 and 16218 Up, Also 15996					
					AIR CLEANER AND CONNECTIONS - Continued (United Specialties) (Used on Manual Shift Loaders or Power Shift Loaders Equipped With Altitude Compensation Attachment) L-150G 15965 To 15993 and 16218 Up, Also 15996 L-150P 15965 To 15993 and 16218 Up, Also 15996

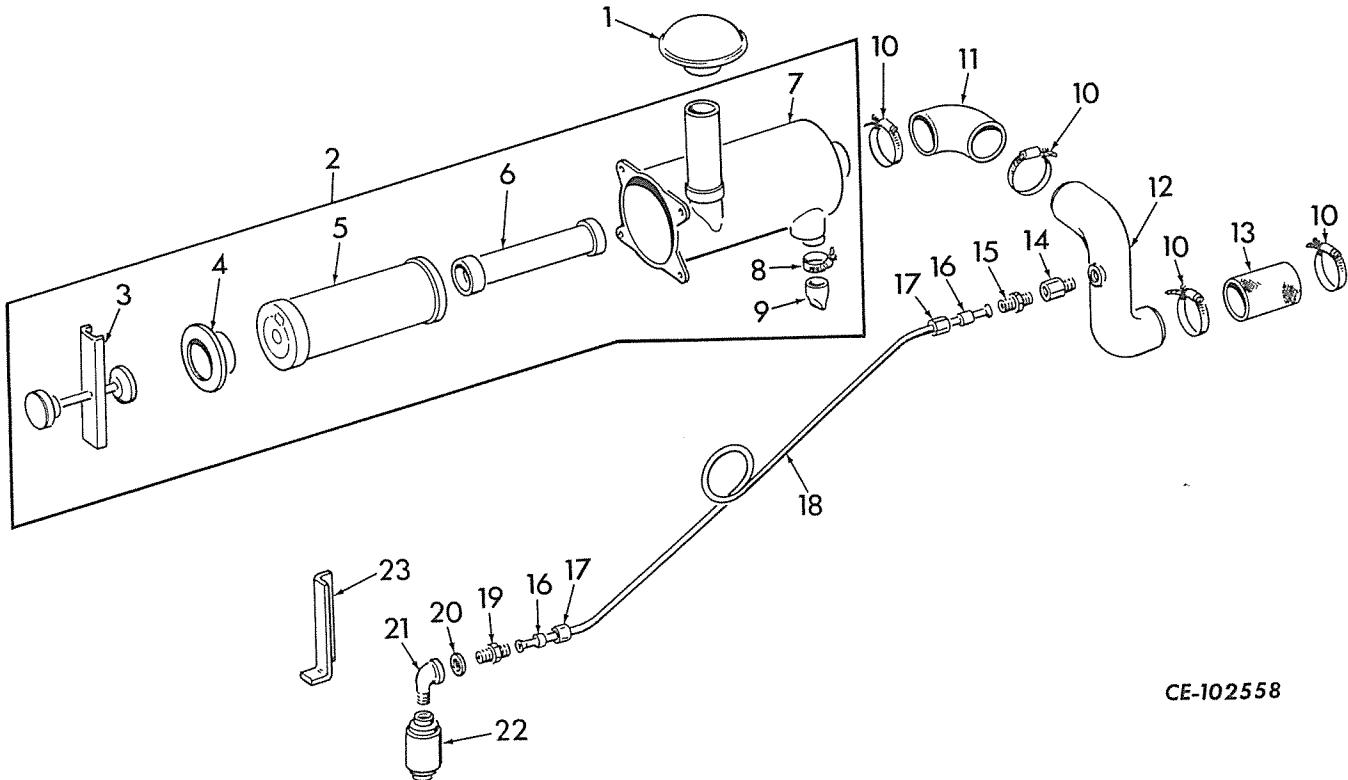


CE-102558

1	272 152 R91	CAP, weather	13	407 015 R1	HOSE, air cleaner pipe
2	627 096 C91 25 522 R1 24 839 R1 115 093	CLEANER ASSY, air NUT, 3/8" (4) SCREW, 3/8 x 3/4" hex-hd cap (4) WASHER, 3/8" lock (4)	14	317 972 R91	NIPPLE and FILTER, air cleaner
3	338 743 R91	LOCK, filter element	15	610 858 C1	CONNECTOR, air cleaner indicator tube
4	603 824 C1	GASKET, element seal	16	606 926 C1	SLEEVE (2)
5	627 114 C1	ELEMENT, air cleaner	17	606 925 C1	NUT (2)
6	627 115 C1	ELEMENT, cleaner safety	18	611 429 C11	TUBE w/two SLEEVE 606 926 C1 and two NUT 606 925 C1, air cleaner indicator
7	BODY (Not Furnished Separately)		19	606 999 C1	CONNECTOR, air cleaner filter indicator tube
8	526 609 R91	CLAMP, dust unloader	20	21 403 R1	WASHER, air cleaner filter indicator
9	324 194 R1	UNLOADER, dust	21	444 476	ELBOW, air cleaner filter indicator
10	274 089 R91	CLAMP, air cleaner hose (4)	22	366 078 C1	INDICATOR, air cleaner filter
11	304 398 R1	ELBOW, air cleaner outlet hose	23	331 706 R1 24 839 R1 115 093 25 522 R1	BRACKET, air cleaner support SCREW, 3/8 x 3/4" hex-hd cap WASHER, 3/8" lock NUT, 3/8"
12	331 703 R1	PIPE, air cleaner to turbocharger			


**FUEL SYSTEM**


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>AIR CLEANER AND CONNECTIONS</b> (United Specialties) (Used on Power Shift Loaders Without Altitude Compensation Attachment) L-150P 15965 To 15993 and 16218 Up, Also 15996					
					AIR CLEANER AND CONNECTIONS - Continued (United Specialties) (Used on Power Shift Loaders Without Altitude Compensation Attachment) L-150P 15965 To 15993 and 16218 Up, Also 15996

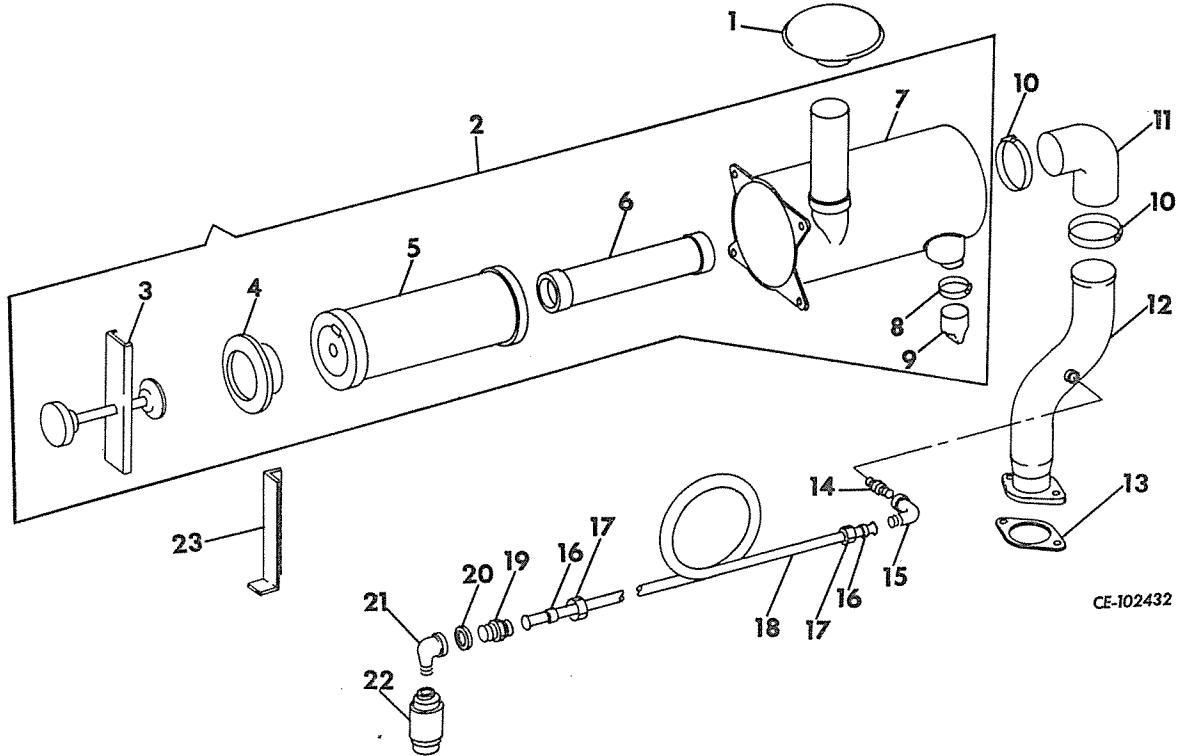

1	272 152 R91	CAP, weather	13	369 497 R2	GASKET, air cleaner outlet pipe	
2	627 096 C91 25 522 R1 24 839 R1 115 093	CLEANER ASSY, air NUT, 3/8" (4) SCREW, 3/8 x 3/4" hex-hd cap (4) WASHER, 3/8" lock (4)	14	317 972 R91	NIPPLE and FILTER, air cleaner	
3	338 743 R91	LOCK, filter element	15	610 040 C1	ELBOW, air cleaner indicator tube	
4	603 824 C1	GASKET, element seal	16	606 926 C1	SLEEVE (2)	
5	627 114 C1	ELEMENT, air cleaner	17	606 925 C1	NUT (2)	
6	627 115 C1	ELEMENT, cleaner safety	18	624 909 C91	TUBE w/two SLEEVE, 606 926 C1 and two NUT, 606 925 C1, air cleaner indicator	
7	BODY (Not Furnished Separately)			19	606 999 C1	CONNECTOR, air cleaner filter indicator tube
8	526 609 R91	CLAMP, dust unloader	20	21 403 R1	WASHER, air cleaner filter indicator	
9	324 194 R1	UNLOADER, dust	21	444 476	ELBOW, air cleaner filter indicator	
10	274 089 R91	CLAMP, air cleaner outlet hose elbow (2)	22	366 078 C1	INDICATOR, air cleaner filter	
11	304 398 R1	ELBOW, air cleaner outlet hose	23	331 706 R1 25 522 24 839 R1 115 093	BRACKET, air cleaner support NUT, 3/8" SCREW, 3/8 x 3/4" hex-hd cap WASHER, 3/8" lock	
12	624 900 C2 24 849 R1 115 314	PIPE, air cleaner outlet SCREW, 7/16 x 1" hex-hd cap (2) WASHER, 7/16" lock (2)				




-26-  
**FUEL SYSTEM**



AIR CLEANER (HEAVY DUTY)  
(Farr Co.)

AIR CLEANER (HEAVY DUTY) - Continued  
(Farr Co.)


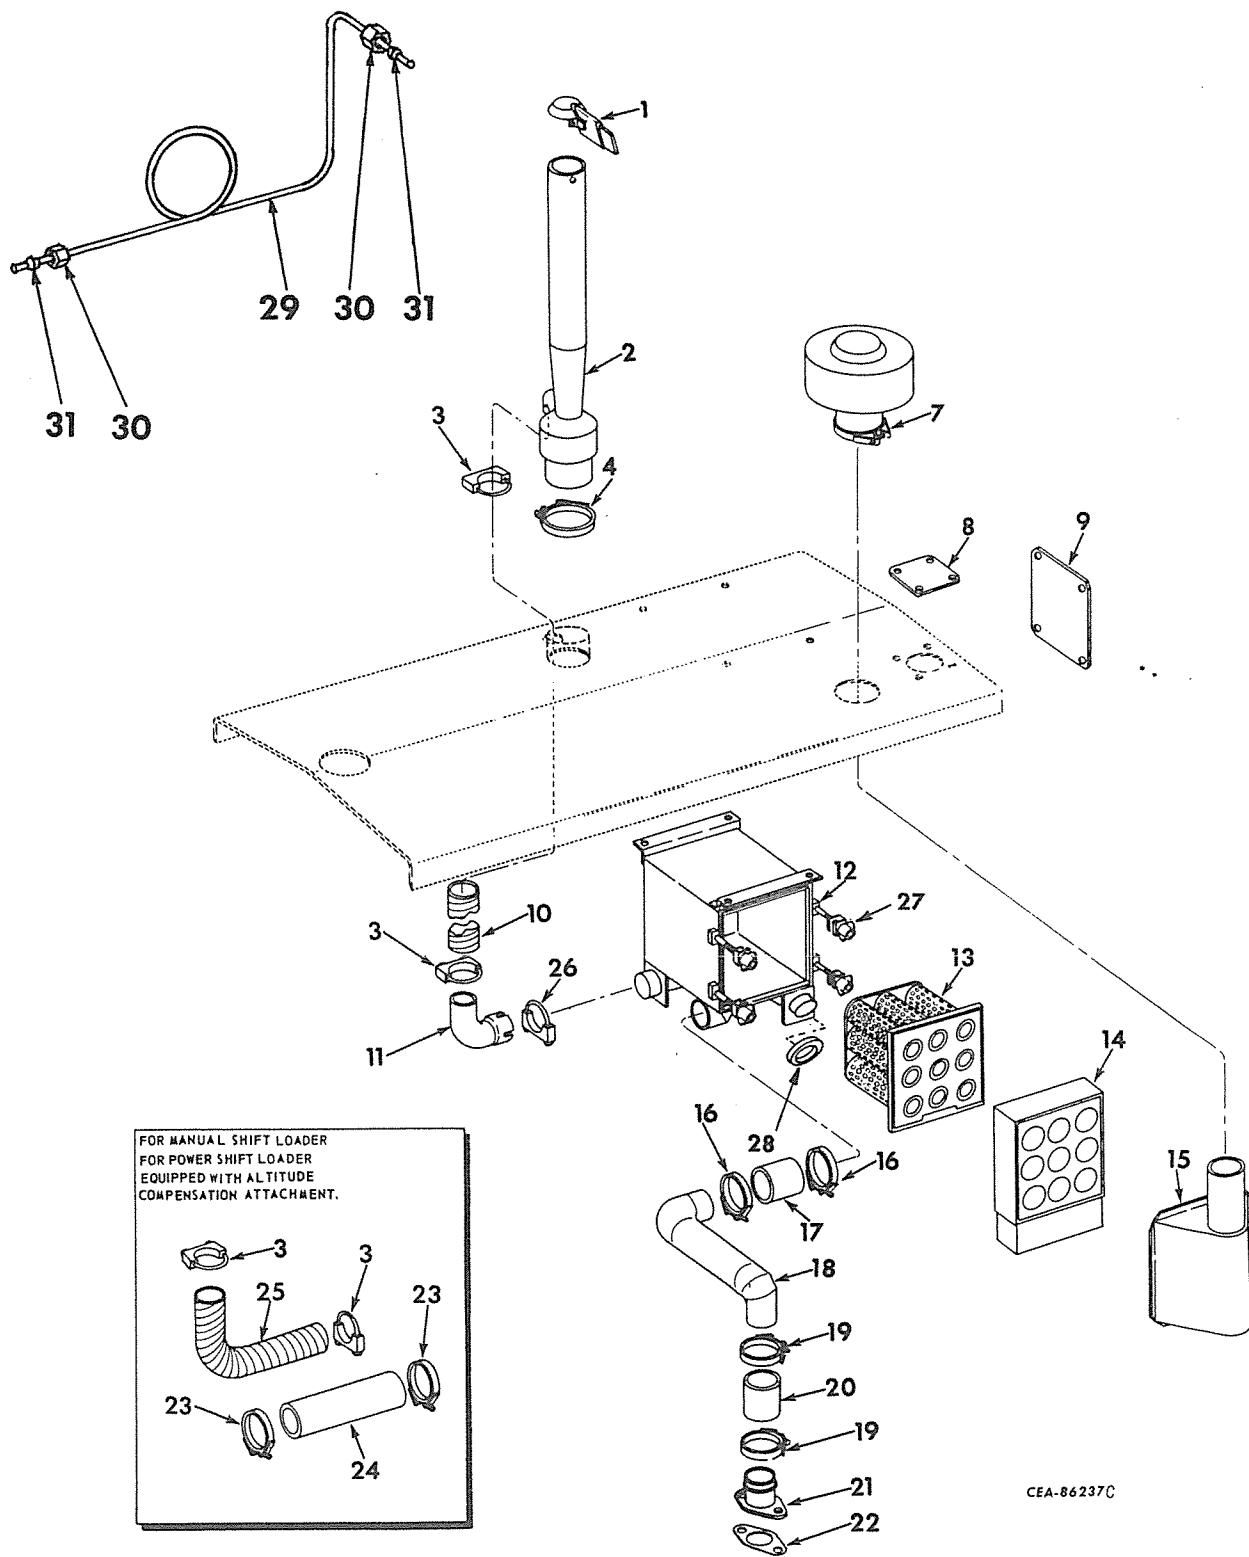


## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
AIR CLEANER (HEAVY DUTY) (Farr Co.)			AIR CLEANER (HEAVY DUTY) - Continued (Farr Co.)		
		Parts without letters after the description indicate the part is used for all Attachments listed below. Letters A and B are used to identify separate Attachments.	27	702 718 C1	FASTENER, cam type panel (4)
A	609 833 C92	ATTACHMENT, heavy duty air cleaner (for Manual Shift Loaders) (for Power Shift Loaders equipped with Altitude Compensation Attachment) (see NOTE 3)	28	615 864 C1	GASKET, aspirator tube
B	609 834 C92	ATTACHMENT, heavy duty air cleaner (for Power Shift Loaders) (see NOTE 3)	29	616 284 C11	TUBE, w/two NUT 606 925 C1 and two SLEEVE, 606 926 C1, air cleaner indicator (Attachments C and D)
1	610 645 C91	CAP, exhaust rain	30	606 925 C1	NUT, air cleaner indicator tube (Attachments C and D){2}
2	610 644 C91	ASPIRATOR, exhaust	31	606 926 C1	SLEEVE, air cleaner indicator tube (Attachments C and D){2}
3	170 570 R91	CLAMP, metal tube	20 337 R1		ELBOW, engine and transmission oil pressure (cast iron) (cd-zn-ptld) (optional with 444 163 and 20 338 R1) (3)
4	615 232 C91	CLAMP, aspirator	444 163		ELBOW, engine and transmission oil pressure (brass) (optional with 20 337 R1 and 20 338 R1)(3)
			20 338 R1		ELBOW, engine and transmission oil pressure (malleable iron) (cd-zn-ptld) (optional with 20 337 R1 and 444 163) (3)
7	606 827 C91	CAP, air inlet	407 010 R1		HOSE, 2-1/4" ID bulk (x)
8		COVER, air intake hole (Not Furnished Separately)	407 015 R1		HOSE, 3" ID bulk (x)
109 084		1/4" NUT (4)	1 085 172 R1		PAMPHLET, installation instruction (Attachment A)
179 799		1/4 x 1-1/4" hex-hd cap SCREW (4)	1 085 174 R1		PAMPHLET, installation instruction (Attachment B)
103 319		1/4" lock WASHER (4)	2 752 940 R1		PRODUCT GRAPHIC, air cleaner instructions
9		COVER, dash hole (Not Furnished Separately)			
102 634		5/16" NUT (4)			
179 818		5/16 x 1" hex-hd cap SCREW (4)			
103 320		5/16" lock WASHER (4)			
103 340		11/32 x 11/16" x 16 ga. WASHER (4)			
10	610 642 C1	HOSE, metal (Attachment B)			
11	610 641 C1	ELBOW, dust outlet (Attachment B)			
12	702 725 C91	HOUSING, w/GASKET 615 864 C1 and (4) fastener 702 718 C1, air cleaner			
13	610 636 C91	ELEMENT, air cleaner			
14	702 726 C1	PANEL, rotopamic			
15	610 637 C92	ADAPTER, air inlet			
16	274 089 R91	CLAMP, 3" ID hose (2 for Attachment B)			
17		HOSE, 3" ID x 2-1/2" long (cut from bulk HOSE, 407 015 R1) (Attachment B)			
18	610 646 C1	TUBE, outlet (Attachment B)			
19	279 028 R91	CLAMP, 2-1/4" ID hose (2 for Attachment B)			
20		HOSE, 2-1/4" ID x 2-1/2" long (cut from bulk HOSE, 407 010 R1) (Attachment B)			
21	610 648 C91	CONNECTOR, air inlet (Attachment B)			
22	369 497 R2	GASKET, air inlet connector (Attachment B)			
23	274 089 R91	CLAMP, 3" ID hose (2 for Attachment A)			
24		HOSE, 3" ID x 11" long (cut from bulk HOSE, 407 015 R1)			
25	610 642 C1	HOSE, 1-1/2" ID x 24" metal (Attachment A)			
26	610 647 C91	CLAMP, elbow (Attachment B)			

NOTE 3 - Field Application - Order Through Regular Service Parts Channels.  
(x) - Order Cut Length As Required.

## **FUEL SYSTEM**

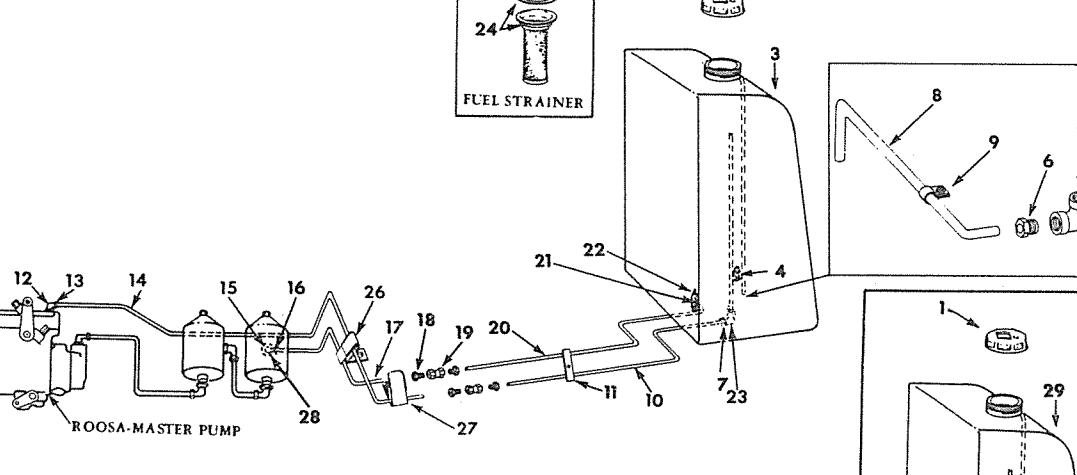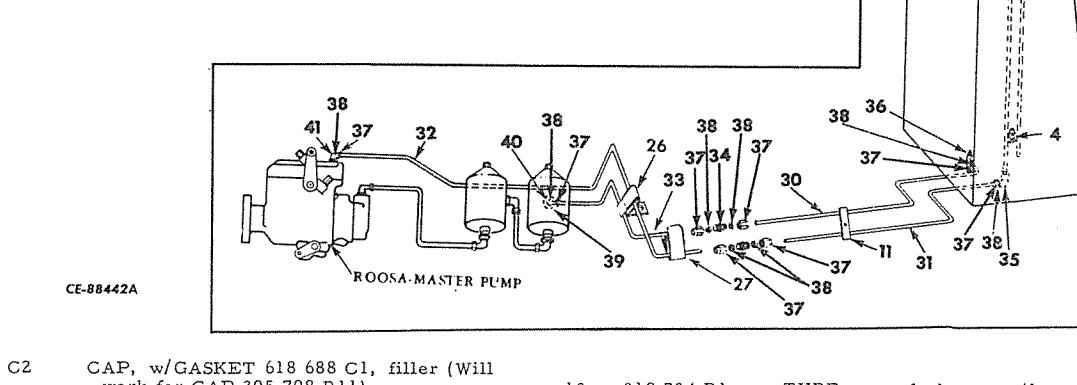REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TUEL TANK, PIPING AND FUEL STRAINER For Roosa-Master Fuel Injection Pump			FUEL TANK, PIPING AND FUEL STRAINER For Roosa-Master Fuel Injection Pump - Continued		
 <p>The diagram illustrates the fuel system. On the left, the 'ROOSA-MASTER PUMP' is shown with various internal components labeled 12 through 28. A fuel tank (3) is connected to the pump via a network of pipes. A fuel strainer (25) is located at the top of the tank. A front fuel return tube (10) leads from the tank back to the pump. A rear fuel return tube (11) is also present. An overflow tube (12) connects the tank to a drain valve (13). The system includes several fittings and clamps, such as elbow joints (14, 16, 17, 18, 20, 21, 22, 23, 26, 27) and a connector (15). A gasket (24) is used between the tank and the strainer.</p>			 <p>This detailed view shows the fuel tank (29) with its cap (1). Various parts of the piping and fittings are labeled with part numbers 2 through 29. The labels correspond to the parts listed in the table below. The tank is shown with its internal structure and external connections.</p>		
CE-88442A					
1	701 922 C2	CAP, w/GASKET 618 688 C1, filler (Will work for CAP 305 798 R11)	10	318 734 R1	TUBE, rear fuel return (for use w/TANK, 318 737 R91)
618 688 C1		GASKET (used w/CAP 701 922 C1)			L-150P 6501 to 6825
3	341 947 R91	TANK, fuel (33 gal) (Order the following parts -	10	331 487 R1	L-150G 6519 to 6825
		2 CONNECTOR 603 867 C1	11	42 385 D	TUBE, rear fuel return (for use w/TANK, 341 947 R91 or 604 590 C91)
		1 CONNECTOR 606 819 C1			L-150P 6826 to 12166
		1 ELBOW 606 930 C1			L-150G 6826 to 12166
		1 TANK 611 419 C92			CLAMP, fuel pipe
		1 TUBE 611 423 C11	102 635		(4) L-150P 6501 to 10074
		1 TUBE 611 434 C11			(4) L-150G 6519 to 10074
		TD-9BG 6502 to 6825	179 845		3/8" NUT (2)
		TD-9BP 6502 to 6825	179 843		3/8 x 1-3/4" hex-hd cap SCREW (2)
		1 TUBE 611 424 C11	103 321		3/8 x 1-1/2" hex-hd cap SCREW
		TD-9BG 6826 up	604 557 C1		3/8" lock WASHER (3)
		TD-9BP 6826 up			CLIP, fuel pipe (on steering clutch inspection cover bolt)
		1 TUBE 611 425 C11			L-150P 10075 to 14048
		1 TUBE 611 427 C11			L-150G 10075 to 14048
		1 VALVE 606 928 C91 )	11	616 369 C1	CLIP, rear fuel line (on steering clutch inspection cover bolt)
		1/2 x 1-1/4" hex-hd cap SCREW (6)			L-150P 14049 up
		1/2" lock WASHER (6)			L-150G 14049 up
4	24 861 R1	VALVE, fuel tank drain	12	37 167 D	ELBOW, 1/8" (hi-dt) fuel return (in pump) (for Roosa-Master Pumps)
116 121		ELBOW, fuel tank overflow tube			L-150PM 5698 to 12165
31 729 D		L-150P 6501 to 10074			L-150GM 5698 to 12165
67 869 D		L-150G 6519 to 10074	13	37 165 D	NUT, return tube (pump end)
		L-150P 6501 to 10074			L-150P 5698 to 12165
		L-150G 6519 to 10074			L-150G 5698 to 12165
7	37 165 D	NUT, nylon fuel return (in stand pipe elbow)	14	311 352 R1	TUBE, front fuel return
		L-150P 6501 to 12166			L-150P 6501 to 12166
		L-150G 6519 to 12166			L-150G 6519 to 12166
8	318 729 R1	TUBE, fuel tank overflow	15	50 607 D	ELBOW, fuel supply tube
		L-150P 6501 to 10074			L-150P 5698 to 12165
		L-150G 6519 to 10074			L-150G 5698 to 12165
9	61 387 D	CLIP, fuel tank overflow tube			
		L-150P 6501 to 10074			
		L-150G 6519 to 10074			

## FUEL SYSTEM

REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION
FUEL TANK, PIPING AND FUEL STRAINER For Roosa-Master Fuel Injection Pump - Continued					
16	19 986 R1	NUT (nylon) fuel supply tube L-150P 5698 to 12165 L-150G 5698 to 12165	32	611 425 C11	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, front L-150P 12167 up L-150G 12167 up
17	311 350 R1	TUBE, front fuel supply L-150P 6501 to 12166 L-150G 6519 to 12166	33	611 426 C11	TUBE, w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, front fuel supply L-150P 12167 up L-150G 12167 up
18	37 165 D	NUT (nylon) fuel supply and fuel return tube connector (4) L-150P 6501 to 12166 (4) L-150G 6519 to 12166	34	603 867 C1	CONNECTOR, tube (2) L-150P 12167 up (2) L-150G 12167 up
19	55 999 D	CONNECTOR, fuel supply and fuel return tubes (2) L-150P 6501 to 12166 (2) L-150G 6519 to 12166	35	333 774 R1	ELBOW, fuel return stand pipe L-150P 12167 up L-150G 12167 up
20	318 735 R1	TUBE, rear fuel supply L-150P 6501 to 12166 L-150G 6519 to 12166	36	606 928 C91	VALVE, fuel shut-off L-150P 12167 up L-150G 12167 up
21	37 165 D	NUT (nylon) fuel supply (valve end) L-150P 6501 to 12166 L-150G 6519 to 12166	37	265 205 R1	NUT, fuel supply and return (8) L-150P 12167 up (8) L-150G 12167 up
22	307 881 R91	VALVE, fuel shut off L-150P 6501 to 12166 L-150G 6519 to 12166	38	265 204 R1	SLEEVE (8) L-150P 12167 up (8) L-150G 12167 up
23	319 884 R1	ELBOW, fuel return stand pipe L-150P 6501 to 12166 L-150G 6519 to 12166	39	606 819 C1	CONNECTOR L-150P 12167 up L-150G 12167 up
24	266 337 R91	ATTACHMENT, fuel strainer (consists of STRAINER and GASKET, 303 962 R1) (see NOTES 1 and 3)	40	613 689 C1	ELBOW, front fuel supply L-150PM 12166 up L-150GM 12166 up
25	303 962 R1	GASKET, fuel strainer	41	606 930 C1	ELBOW, 1/8" fuel return (in pump) L-150PM 12166 up L-150GM 12166 up
26	604 559 C1	CLIP, front fuel line (on clutch cover bolt) L-150P 10075 to 14048 L-150G 10075 to 14048	275 159 R11	BRACKET, fuel tank support (2)	
26	616 367 C1	CLIP, front fuel line (on clutch cover bolt) L-150P 14049 up L-150G 14049 up	120 755	COUPLING, 3/8" pipe (for use with drain valve)	
27	604 558 C1	CLIP, center fuel line (on clutch cover bolt) L-150P 10075 to 14048 L-150G 10075 to 14048	144 603	NIPPLE, 3/8" NPT x 3" long pipe (for use with drain valve)	
27	616 368 C1	CLIP, center fuel line (on clutch cover bolt) L-150P 14049 up L-150G 14049 up	305 799 R1	RING, sealing (Used w/CAP 305 798 R11)	
28	38 026 DM	CONNECTOR, L-150P 6501 to 12166 L-150G 6519 to 12166			
29	611 419 C92	TANK w/CAP, 701 922 C2, fuel (33 gallons) L-150P 12563 up L-150G 12563 up			
	24 861 R1 116 121	1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)			
30	611 423 C11	TUBE w/two NUT 265 205 R1 and two SLEEVE, 265 204 R1, rear fuel supply L-150P 12167 up L-150G 12167 up			
31	611 424 C1	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, rear fuel return L-150P 12167 up. L-150G 12167 up			

NOTE 1 - Factory Application - Order on Machine Order Form.

NOTE 3 - Field Application - Order Through Regular Service Parts Channels.



-29A-

## FUEL SYSTEM




REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

FUEL TANK, PIPING AND FUEL STRAINER  
For I.H.R.D. Fuel Injection Pumps

REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

FUEL TANK, PIPING AND FUEL STRAINER  
For I.H.R.D. Fuel Injection Pumps - Continued

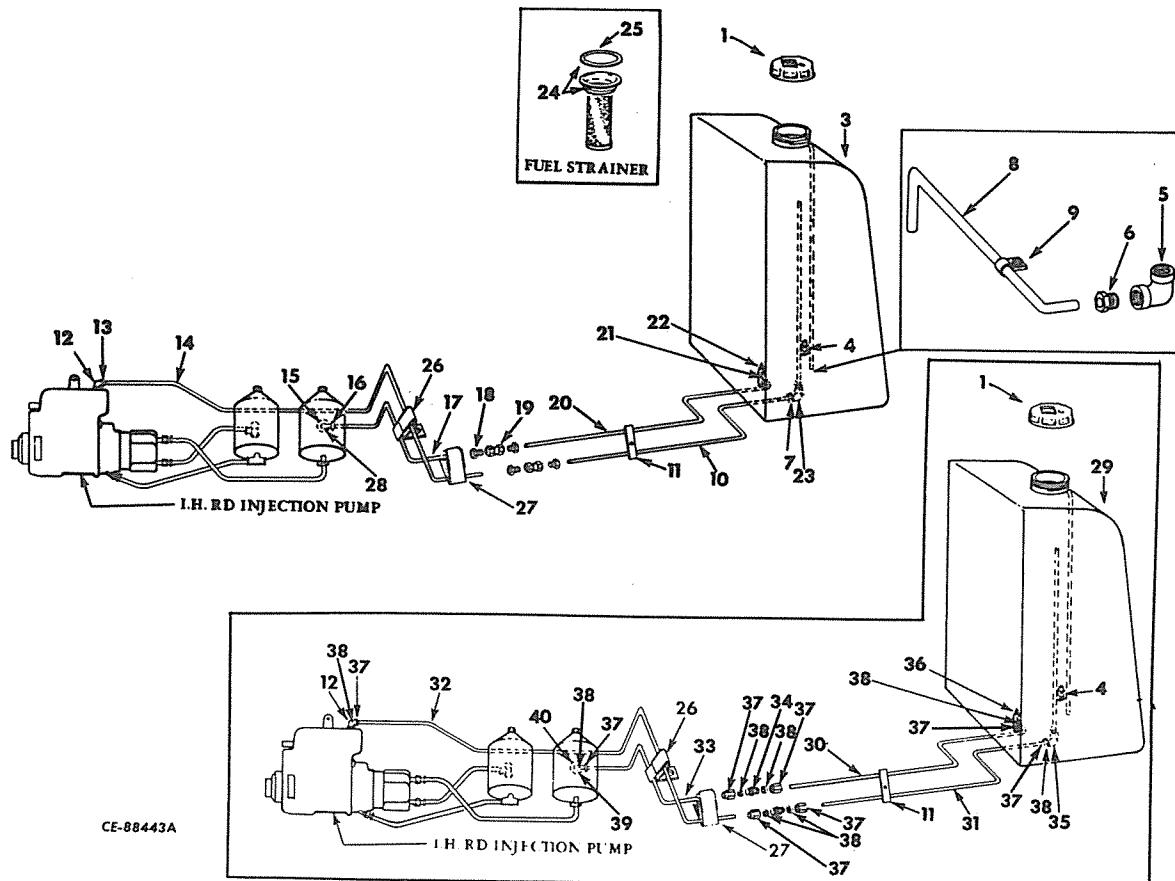

1	701 922 C2	CAP, w/GASKET, 618 688 C1, filler (Will work for CAP 305 798 R11)	9	61 387 D	CLIP, fuel tank overflow tube L-150P 6501 to 10074 L-150G 6519 to 10074
3	618 688 C1	TANK, GASKET (used w/CAP 701 922 C1) fuel (33 gal)	10	318 734 R1	TUBE, rear fuel return (for use w/TANK, 318 737 R91) L-150P 6501 to 6825 L-150G 6519 to 6825
3	341 947 R91	TANK, fuel (33 gal.) L-150P 6501 to 12562 L-150G 6519 to 12562 (Order the following parts -	10	331 487 R1	TUBE, rear fuel return (for use w/TANK, 341 947 R91) L-150P 6826 to 12166 L-150G 6826 to 12166
		2 CONNECTOR 603 867 C1 2 CONNECTOR 606 819 C1 1 TANK 611 419 C92 1 TUBE 611 423 C11 1 TUBE 611 434 C11 TD-9BG 6502 to 6825 TD-9BP 6525 to 6825 1 TUBE 611 424 C11 TD-9BG 6826 up TD-9BP 6826 up 1 TUBE 611 433 C11 1 TUBE 611 426 C11 1 VALVE 606 928 C91 )	10	611 434 C11	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, rear fuel return (for use w/TANK, 611 419 C92) L-150P 6501 to 6825 L-150G 6519 to 6825
24 861 R1 116 121	1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)	11	42 385 D	CLAMP, fuel pipe (4) L-150P 6501 to 10074 (4) L-150G 6519 to 10074	
4 31 729 D	VALVE, fuel tank drain	102 635		3/8" NUT (2) 3/8 x 1-3/4" hexphd cap SCREW (2)	
5 67 869 D	ELBOW, fuel tank overflow tube L-150P 6501 to 10074 L-150G 6519 to 10074	179 845		3/8 x 1-1/2" hexphd cap SCREW 3/8" lock WASHER (3)	
6	29 898 D	NUT, fuel tank overflow tube (nylon) L-150P 6501 to 10074 L-150G 6519 to 10074	11	616 369 C1	CLIP, rear fuel line (on steering clutch inspection cover bolt) L-150P 10075 to 14048 L-150G 10075 to 14048
7	37 165 D	NUT, nylon fuel return (in stand pipe elbow) L-150P 6501 to 12166 L-150G 6519 to 12166	11	103 321	CLIP, rear fuel line (on steering clutch inspection cover bolt) L-150P 14049 up L-150G 14049 up
8	318 729 R1	TUBE, fuel tank overflow L-150P 6501 to 10074 L-150G 6519 to 10074	12	37 323 D	ELBOW, fuel return (in pump) for Inter- national RD pump serial No. 1000 to 6227



-29B-

**FUEL SYSTEM**



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>FUEL TANK, PIPING AND FUEL STRAINER</b> For I. H. R. D. Fuel Injection Pumps - Continued					
12	346 792 R1	ELBOW, 1/4" x 90° restricted fuel return (in pump) (for International RD pump serial No. 6228 up)	30	611 423 C11	TUBE, w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, rear fuel supply L-150P 12167 up L-150G 12167 up
13	37 165 D	NUT, return tube (pump end) L-150PM 5698 to 12165 L-150GM 5698 to 12165	31	611 424 C1	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, rear fuel return L-150P 12167 up L-150G 12167 up
14	338 107 R1	TUBE, front fuel return (use with TANK 341 947 R91 or TANK 604 590 C91) L-150P 6501 to 12562 L-150G 6519 to 12562	32	611 433 C11	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, front fuel return (used with TANK, 611 419 C91) L-150P 12167 up L-150G 12167 up
15	50 607 D	ELBOW, fuel supply tube L-150P 5698 to 12165 L-150G 5698 to 12165	33	611 426 C11	TUBE, w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, front fuel supply L-150P 12167 up L-150G 12167 up
16	19 986 R1	NUT (nylon) fuel supply tube L-150P 5698 to 12165 L-150G 5698 to 12165	34	603 867 C1	CONNECTOR, tube (2) L-150P 12167 up (2) L-150G 12167 up
17	311 350 R1	TUBE, front fuel supply L-150P 6501 to 12166 L-150G 6519 to 12166	35	333 774 R1	ELBOW, fuel return stand pipe L-150P 12167 up L-150G 12167 up
18	37 165 D	NUT (nylon) fuel supply and fuel return tube connector (4) L-150P 6501 to 12166 (4) L-150G 6519 to 12166	36	606 928 C91	VALVE, fuel shut-off L-150P 12167 up L-150G 12167 up
19	55 999 D	CONNECTOR, fuel supply and fuel return tubes (2) L-150P 6501 to 12166 (2) L-150G 6519 to 12166	37	265 205 R1	NUT, fuel supply and return (8) L-150P 12167 up (8) L-150G 12167 up
20	318 735 R1	TUBE, rear fuel supply L-150P 6501 to 12166 L-150G 6519 to 12166	38	265 204 R1	SLEEVE (8) L-150P 12167 up (8) L-150G 12167 up
21	37 165 D	NUT (nylon) fuel supply (valve end) L-150P 6501 to 12166 L-150G 6519 to 12166	39	606 819 C1	CONNECTOR L-150P 12167 up L-150G 12167 up
22	307 881 R91	VALVE, fuel shut-off L-150P 6501 to 12166 L-150G 6519 to 12166	40	613 689 C1	ELBOW, front fuel supply ("flex-type") L-150PM 12166 up L-150GM 12166 up
23	319 884 R1	ELBOW, fuel return stand pipe L-150P 6501 to 12166 L-150G 6519 to 12166	275 159 R11		BRACKET, fuel tank support (2)
24	266 337 R91	ATTACHMENT, fuel strainer (consists of STRAINER and GASKET, 303 962 R1) (see NOTES 1 and 3)	120 755		COUPLING, 3/8" pipe (for use with drain valve)
25	303 962 R1	GASKET, fuel strainer	144 603		NIPPLE, 3/8"NPT x 3" long pipe (for use with drain valve)
26	604 559 C1	CLIP, front fuel line (on clutch cover bolt) L-150P 10075 to 14048 L-150G 10075 to 14048	305 799 R1		RING, sealing (Used w/CAP 305 798 R11)
26	616 367 C1	CLIP, front fuel line (on clutch cover bolt) L-150P 14049 up L-150G 14049 up			
27	604 558 C1	CLIP, center fuel line (on clutch cover bolt) L-150P 10075 to 14048 L-150G 10075 to 14048			
27	616 368 C1	CLIP, center fuel line (on clutch cover bolt) L-150P 14049 up L-150G 14049 up			
28	38 026 DM	CONNECTOR L-150P 6501 to 12166 L-150G 6519 to 12166			
29	611 419 C92	TANK w/CAP 701 922 C1, fuel (33 gals.)  L-150P 12563 up L-150G 12563 up 1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)			NOTE 1 - Factory Application - Order on Machine Order Form.
					NOTE 3 - Field Application - Order through Regular Service Parts Channels.

# FUEL SYSTEM


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**FUEL INJECTION PUMP DRIVE AND INJECTION****PIPES**

(Used With Roosa-Master Fuel Injection Pump)  
 L-150GM 5698 to 6673  
 L-150PM 5698 to 6674  
 L-150GM 10995 up  
 L-150PM 11375 up

**FUEL INJECTION PUMP DRIVE AND INJECTION****PIPES - Continued**

(Used With Roosa-Master Fuel Injection Pump)  
 L-150GM 5698 to 6673  
 L-150PM 5698 to 6674  
 L-150GM 10995 up  
 L-150PM 11375 up

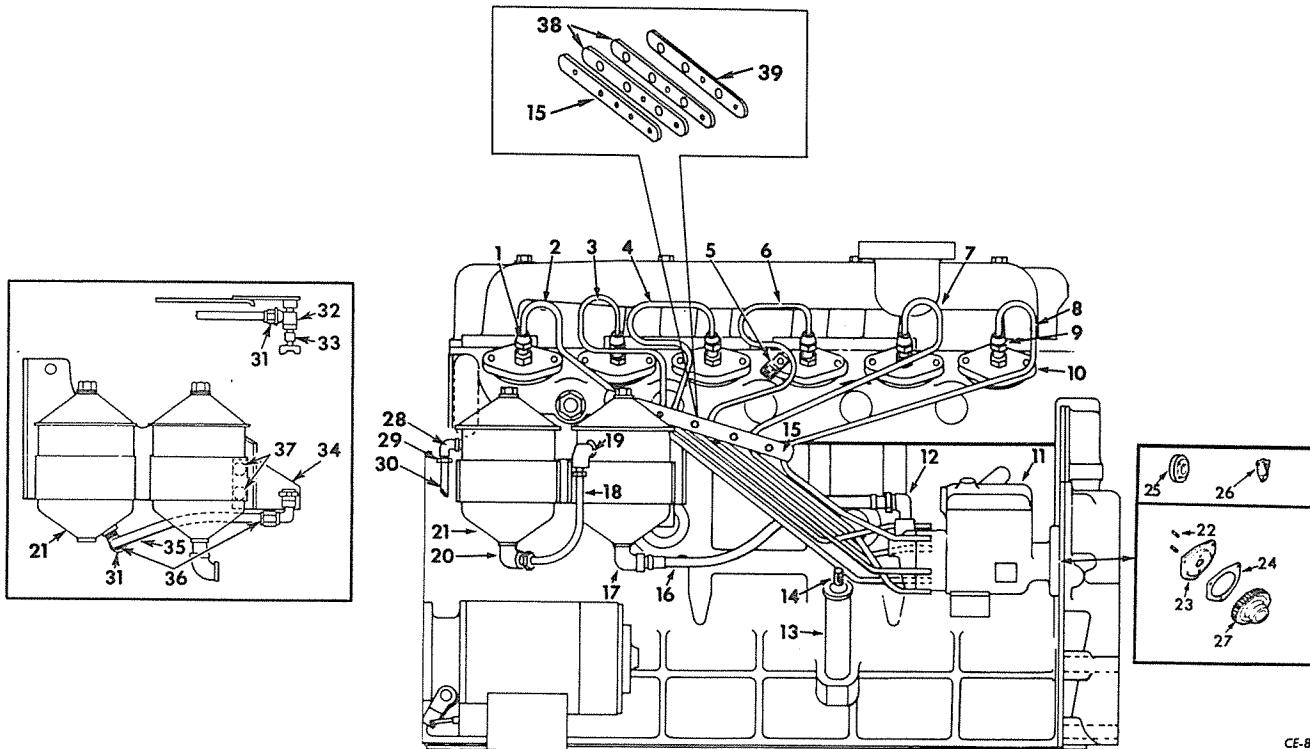

CE-88196 B

1	250 617 R1	NUT, injection pipe (nozzle end) (6)	11	338 818 R91(+)PUMP ASSY, fuel injection (DBGFC-631-77AE) (2200 RPM) (used on Power Shift Loaders equipped with Altitude Compensation Attachment) (see NOTE)
2	278 707 R11	PIPE, injection (cylinder No. 6)		L-150PM 5698 to 6674
3	278 706 R11	PIPE, injection (cylinder No. 5)	11	610 500 C91(+)PUMP ASSY, fuel injection (DBGFC-631-27AJ) (2200 RPM) (used on Power Shift Loaders not equipped with Altitude Compensation Attachment) (see NOTE)
4	278 705 R11	PIPE, injection (cylinder No. 4)		L-150PM 11375 up
5	42 915 D	BLOCK, junction (refer to "Electric Starting")	11	610 502 C91 PUMP ASSY, fuel injection (DBGFC-631-88AE) (1800 RPM) (used on Manual Shift Loaders) (see NOTE)
6	278 704 R11	PIPE, injection (cylinder No. 3)		L-150GM 10995 up
7	278 703 R11	PIPE, injection (cylinder No. 2)	11	615 071 C91(+)PUMP ASSY, fuel injection (DBGFC-631-18AL) (2200 RPM) (used on Power Shift Loaders equipped with Altitude Compensation Attachment) (see NOTE)
8	278 702 R21	PIPE, injection (cylinder No. 1)		L-150PM 11375 up
9	278 321 R1	FITTING, nozzle (also listed and illustrated with "Injection Nozzle") (6)	12	118 755 ELBOW, 3/8" x 90° flared tube (injection pump inlet)
10	310 388 R91	NOZZLE ASSY, injection (for components see list of parts under details of "Injection Nozzle") (6)		
11	321 201 R91(+)PUMP ASSY, fuel injection (DBGFC-631-51AE) (1800 RPM) (used on Manual Shift Loaders) (see NOTE)	L-150GM 5698 to 6673	NOTE - Pumps Listed With Symbol (+) Are Not Available Under Part Numbers Shown - Order Basic Pump And Necessary Parts As Shown In The Parts Catalog PU-70. Also Refer To The PU-70 Catalog For Detail Parts On All Roosa-Master Pumps.	
11	327 432 R91(+)PUMP ASSY, fuel injection (DBGFC-631-73AE) (2200 RPM) (used on Power Shift Loaders) (see NOTE)	L-150PM 5698 to 6674		

## FUEL SYSTEM

REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION
FUEL INJECTION PUMP DRIVE AND INJECTION PIPES - Continued (Used with Roosa-Master Fuel Injection Pump)			FUEL INJECTION PUMP DRIVE AND INJECTION PIPES - Continued (Used with Roosa-Master Fuel Injection Pump)		
L-150GM	5698 to 6673		L-150GM	5698 to 6673	
L-150PM	5698 to 6674		L-150PM	5698 to 6674	
L-150GM	10995 up		L-150GM	10995 up	
L-150PM	11375 up		L-150PM	11375 up	
13	368 985 R2	TUBE, oil filler (also listed and illustrated with "Crankcase and Related Parts")	36	265 204 R1	SLEEVE (for water separator attachment) (2)
14	368 986 R91	GAUGE, oil level (also listed and illustrated with "Crankcase and Related Parts")	37	265 205 R1	NUT (for water separator attachment) (2)
15	332 490 R1	CLAMP, injection pipe (tapped) 181 317      1/4NF x 1-1/4" hex-hd cap SCREW (5) 103 319      1/4" lock WASHER (3) 103 339      9/32 x 5/8 x 16 ga WASHER (3)	703 246 C91	ATTACHMENT, water separator element (Consists of the following parts) (see NOTES 1 and 3) 1 BRACKET      703 247 C1 1 COCK      134 519 1 ELEMENT      610 309 C91 2 ELBOW      606 930 C1 1 GASKET      304 102 R1 1 TEE      9 409 943 1 TUBE      616 300 C11	
16	275 946 R91	HOSE w/FITTINGS, final fuel filter to injection pump (HOSE, 5/16" ID x 14-1/2" long w/FITTINGS)	38	332 491 R2	PAD, injection pipe clamp (2)
17	137 538	ELBOW, 1/4" x 90° (final fuel filter outlet)	39	332 489 R1	CLAMP, injection pipe (drilled) (Order PACKAGE 701 127 C91) L150GM 5698 to 6673 Also 10995 to 12850 L150PM 5698 to 6674 Also 11375 to 12850
18	278 335 R11	PIPE, auxiliary filter to final fuel filter	39	670 004 C11	CLAMP w/three PINS, 19 387 R1, injection pipe (drilled) L150GM 12851 Up L150PM 12851 Up
19	22 510 D	ELBOW, final fuel filter inlet	19 387 R1	PIN, spring (Used w/CLAMP 670 004 C11) (3)	
20	65 834 D	ELBOW, auxiliary fuel filter outlet	278 318 R1	BRACKET, fuel filter 7/16 x 1" hex-hd cap SCREW (3) 7/16" lock WASHER (3)	
21		FILTER ASSY, fuel (for components see list of parts under details of "Primary and Final Fuel Filters") (2)	103 322	304 313 R1	BRACKET, junction block
22	303 463 R1	STUD, Roosa pump adapter (2)	263 717 R91	265 126 R91	CLIP
23	303 462 R11	ADAPTER w/two STUD, 303 463 R1, Roosa pump 179 838      3/8 x 7/8" hex-hd cap SCREW (3) 103 321      3/8" lock WASHER (3)	606 930 C1	CLIP, pipe ELBOW, 1/8" (hi-duty) fuel return (in pump) (for Roosa-Master pumps) ("flex-type") L-150GM 12166 up L-150PM 12166 up	
24	278 347 R1	GASKET, injection pump adapter	367 984 R1	GASKET, fuel line connector (12)	
25	278 316 R1	HUB, injection pump gear (used with GEAR 278 315 R1) 5/16 x 1-1/4" hex-hd mach SCREW w/external-tooth lock WASHER (3)	37 167 D	ELBOW, 1/8" (hi-duty) fuel return (in pump) (for Roosa-Master pumps) L-150GM 5698 to 12165 L-150PM 5698 to 12165	
26	278 317 R1	WASHER, injection pump gear (used with GEAR 278 315 R1)	37 165 D	NUT, return tube (pump end) L-150GM 5698 to 12165 L-150PM 5698 to 12165	
27	612 084 C1	GEAR, injection pump drive (will work for injection pump GEAR, 278 315 R1, HUB 278 316 R1 and WASHER 278 317 R1)	61 921 D	SEAL, injection pump torque screw	
28	613 689 C1	ELBOW, front fuel supply ("flex type") L-150GM 12166 up L-150PM 12166 up	250 610 R2	SLEEVE, injection pipe (6)	
28	50 607 D	ELBOW, front fuel supply L-150GM 5698 to 12165 L-150PM 5698 to 12165	701 127 C91	PACKAGE, pipe clamp parts L150GM 5698 to 6673 Also 10995 to 12850 L150PM 5698 to 6674 Also 11375 to 12850	
29	119 986 R1	NUT, (nylon) front fuel supply L-150GM 5698 to 12165 L-150PM 5698 to 12165		(Composed of - 1 CLAMP      670 004 C11 2 PAD      332 491 R2 3 WASHER      103 339 3 WASHER      103 319 )	
30	311 350 R1	TUBE, front fuel supply *	678 026 C1	WIRE, lock (injection pump) (2)	
31	609 930 C1	ELBOW, 90° x 1/8 NPT (filter outlet and tee inlet) (2) (for water separator attachments)	678 027 C1	LOCK, seal wire (injection pump) (2)	
32	94 943	TEE (for water separator attachment)	673 178 C1	PRODUCT GRAPHIC, engine warranty policy	
33	134 519 C1	COCK, drain 1/8" pipe (for water separator attachment)			
34	703 247 C1	BRACKET, water drain tube (for water separator attachment) 179 817      5/16-18 x 7/8" hex hd cap SCREW 102 634      5/16-18 NUT 103 340      11/32 x 11/16" x No. 16 ga. WASHER 103 320      5/16" lock WASHER			
35	616 300 C11	TUBE, w/two SLEEVE 265 204 R1 and two NUT 205 205 R1 water drain (for water separator attachment)		* - Listed and Illustrated with "Fuel Tank Piping and Fuel Strainer" NOTE 1 - Factory Application - Order on Machine Order Form. NOTE 3 - Field Application - Order Through Regular Service Parts Channels.	

## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>FUEL INJECTION PUMP, PIPES AND CONNECTIONS</b> (Used With International R. D. Fuel Injection Pump) L-150GM 6674 to 10994 L-150PM 6675 to 11374					
<b>FUEL INJECTION PUMP, PIPES AND CONNECTIONS - Continued</b> (Used With International R. D. Fuel Injection Pump) L-150GM 6674 to 10994 L-150PM 6675 to 11374					
CE-94141					
1	250 617 R1	NUT, injection pipe (nozzle end) (6)	142 619 H		WASHER (3)
2	323 717 R1	PIPE, injection (cylinder No. 6)			(Order the following parts -
	332 026 R91	FITTING, extended banjo (on No. 6 injection pipe pump end)			1 PACKAGE 609 121 C91
	250 617 R1	NUT, injection pipe (pump end)			1 PACKAGE 609 124 C91
	250 610 R2	SLEEVE, injection pipe (pump end)			1 PUMP, Roosa- (+) 610 502 C91
3	323 716 R11	PIPE, injection (cylinder No. 5)			Master (see NOTE 2)
4	332 618 R11	PIPE, injection (cylinder No. 4)	10	339 105 R92	PUMP ASSY, International R. D. fuel injec- tion (used on power shift loaders not equipped with altitude compensation attach- ment) (2200 RPM) (see NOTE 1)
5	601 133 C11	PIPE, injection (cylinder No. 3)			3/8 x 1-1/8" hex-hd cap SCREW (3)
6	601 132 C11	PIPE, injection (cylinder No. 2)			3/8" lock WASHER (3)
7	601 131 C11	PIPE, injection (cylinder No. 1)	142 619 H		WASHER (3)
8		FITTING, nozzle (also listed and illustrated with "Injection Nozzle") (6)			(Order the following parts -
9		NOZZLE ASSY, injection (for components see list of parts under details of "Injection Nozzle") (6)			1 PACKAGE 609 121 C91
10	339 109 R91	PUMP ASSY, International R. D. fuel injec- tion (used on power shift loaders equipped with altitude compensation attachment) (2200 RPM) (see NOTE 1)	10A	37 323 D	1 PACKAGE 609 124 C91
		3/8 x 1-1/8" hex-hd cap SCREW (3)	10A	346 792 R1	1 PUMP, Roosa- (+) 610 500 C91
		3/8" lock WASHER (3)			Master (see NOTE 2)
142 619 H		WASHER (3)			
		(Order the following parts -			
		1 PACKAGE 609 121 C91			
		1 PACKAGE 609 124 C91			
		1 PUMP, Roosa-Master (+) 615 071 C91			
		(see NOTE 2)			
10	323 728 R92	PUMP ASSY, International R. D. fuel injec- tion (used on manual shift loaders) (1800 RPM) (see NOTE 1)			NOTE 1 - Refer To International Model R. D. Fuel Injection Pump Parts Catalog PU-67 When Ordering Detail Parts Or Complete Pumps.
		3/8 x 1-1/8" hex-hd cap SCREW (3)			NOTE 2 - Pumps Listed With Symbol (+) Are Not Available Under Part Numbers Shown. Order Basic Pump And Necessary Parts As Shown In The Parts Catalog PU-70. Also Refer To The PU-70 Catalog For Detail Parts On All Roosa-Master Pumps.
		3/8" lock WASHER (3)			

# FUEL SYSTEM

REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION
<b>FUEL INJECTION PUMP, PIPES AND CONNECTIONS - Continued</b> (Used With International R. D. Fuel Injection Pump)					
L-150GM 6674 to 10994					
L-150PM 6675 to 11374					
11	324 274 R1	ELBOW, injection pump inlet L-150GM 6674 to 7765 L-150PM 6675 to 7765	39	9 410 202	CONNECTOR, primary pump inlet (3/8 - 37° flared tube) L-150GM 7766 to 10994 L-150PM 7766 to 11374
12	324 273 R1	CONNECTOR, primary pump inlet L-150GM 6674 to 7765 L-150PM 6675 to 7765	40	9 410 976	ELBOW, injection pump inlet (3/8 - 37° flared tube) L-150GM 7766 to 10994 L-150PM 7766 to 11374
13	324 273 R1	CONNECTOR, primary pump outlet L-150GM 6674 to 7765 L-150PM 6675 to 7765	41	9 410 202	CONNECTOR, primary pump outlet (3/8 - 37° flared tube) L-150GM 7766 to 10994 L-150PM 7766 to 11374
14		GAUGE, oil level (also listed and illustrated with "Crankcase and Related Parts")	42	347 823 R91	HOSE w/FITTINGS, final filter to injection pump (HOSE, .38" ID x 16" long including FITTINGS) L-150GM 7766 to 10994 L-150PM 7766 to 11374
15		TUBE, oil filler (also listed and illustrated with "Crankcase and Related Parts")	43	347 823 R91	HOSE w/FITTINGS, primary pump to final filter (HOSE, .38" ID x 10" long including FITTINGS) L-150GM 7766 to 10994 L-150PM 7766 to 11374
16	343 968 R91	HOSE w/FITTINGS, final filter to injection pump (HOSE, .38" ID x 16" long including FITTINGS) L-150GM 6674 to 7765 L-150PM 6675 to 7765	44	120 498	TEE, final filter outlet (1/4" pipe) L-150GM 7766 to 10994 L-150PM 7766 to 11374
17	343 713 R91	HOSE w/FITTINGS, primary pump to final filter (HOSE, .38" ID x 10" long including FITTINGS) L-150GM 6674 to 7765 L-150PM 6675 to 7765	45	347 823 R91	HOSE w/FITTINGS, primary filter to primary pump (HOSE, .38" ID x 16" long including FITTINGS) L-150GM 7766 to 10994 L-150PM 7766 to 11374
18	42 915 D	BLOCK, junction (also listed with "Electric Starting")	46	444 577	PLUG, 1/4" sq-hd pipe (gauge connection hole) L-150GM 7766 to 10994 L-150PM 7766 to 11374
19	332 490 R1	CLAMP, injection pipe (tapped) 1/4NF x 1-1/8" hex-hd cap SCREW (5) 1/4" lock WASHER (3) 9/32 x 5/8" x 16 ga WASHER (3)	47	137 538	ELBOW, primary filter outlet (1/4" x 90° pipe) L-150GM 7766 to 10994 L-150PM 7766 to 11374
20		FILTER ASSY, fuel (for components see list of parts under details of "Fuel Filter") (2)	48	50 607 D	ELBOW, primary filter inlet L-150GM 7766 to 10994 L-150PM 7766 to 11374
21	444 169	ELBOW, (3/8" x 90° street) final filter inlet (brass) L-150GM 6674 to 7765 L-150PM 6675 to 7765	49	444 040	ELBOW, final filter inlet (1/4" x 90° pipe street) L-150GM 7766 to 10994 L-150PM 7766 to 11374
22	444 259	TEE, (3/8") final filter inlet (brass) L-150GM 6674 to 7765 L-150PM 6675 to 7765	50	606 930 C1	ELBOW, 90° x 1/8NPT (filter outlet and TEE inlet) (2)
23	332 624 R1	TUBE, primary filter to final filter L-150GM 6674 to 7765 L-150PM 6675 to 7765	51	940 943	TEE
25	444 584	PLUG, 3/8" sq-hd pipe (brass) L-150GM 6674 to 7765 L-150PM 6675 to 7765	52	134 519	COCK, drain 1/8" pipe
26	120 281	TEE, (3/8") final filter outlet (brass) L-150GM 6674 to 7765 L-150PM 6675 to 7765	53	703 247 C1	BRACKET, water drain tube 5/16-18 x 7/8" hex-hd cap SCREW 5/16-18" NUT 11/32 x 11/16" x 16 ga. WASHER 5/16" lock WASHER
27	343 712 R91	HOSE w/FITTINGS, primary filter to primary pump (HOSE, .38" ID x 18" long including FITTINGS) L-150GM 6674 to 7765 L-150PM 6675 to 7765	54	616 300 C11	TUBE, w/two SLEEVE 265 204 R1 and two NUT 265 205 R1 water drain
28	336 070 R91	VALVE, primary to final filter needle L-150GM 6674 to 7765 L-150PM 6675 to 7765	55	265 204 R1	SLEEVE (2)
29	119 928	BUSHING, (3/8 x 1 1/4") reducing pipe L-150GM 6674 to 7765 L-150PM 6675 to 7765	56	265 205 R1	NUT (2)
30	42 409 D	CONNECTOR, tube L-150GM 6674 to 7765 L-150PM 6675 to 7765	703 246 C91	ATTACHMENT, water separator element (Consists of the following parts) (see NOTES 1 and 3)	
31	278 953 R91	NUT, tube L-150GM 6674 to 7765 L-150PM 6675 to 7765	1	BRACKET	703 247 C1
32	444 169	ELBOW, (3/8" x 90° street) primary filter outlet (brass) L-150GM 6674 to 7765 L-150PM 6675 to 7765	1	COCK	134 519
33	444 259	TEE, (3/8") primary filter outlet (brass) L-150GM 6674 to 7765 L-150PM 6675 to 7765	1	ELEMENT	610 309 C91
34	444 199	ELBOW, (3/8" x 90° street) primary filter outlet (brass) L-150GM 6674 to 7765 L-150PM 6675 to 7765	2	ELBOW	606 930 C1
35	20 034 R1	ELBOW, (3/8" x 90° female) primary filter inlet L-150GM 6674 to 7765 L-150PM 6675 to 7765	1	GASKET	304 102 R1
36	278 347 R1	GASKET, fuel injection pump	1	TEE	9 409 943
37	278 315 R1	GEAR, fuel injection pump	1	TUBE	616 300 C11 )
	347 230 R1	5/16 x 1-1/4" hex-hd SCREW w/lock WASHER (3)			
38	278 317 R1	WASHER, injection pump gear			

## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>FUEL INJECTION PUMP, PIPES AND CONNECTIONS - Continued</b> (Used With International R. D. Fuel Injection Pump) L-150GM 6674 to 10994 L-150PM 6675 to 11374					
57	332 491 R2	PAD, injection pipe clamp (2)	609 121 C91	PACKAGE, engine field conversion (less fuel injection pumps) (chassis conversion PACKAGE, 609 124 C91 must be used in conjunction with this package) (see NOTE)	
58	332 489 R1	CLAMP, injection pipe (drilled) (Order PACKAGE 701 127 C91)			(Consists of - Continued)
58	670 004 C11	CLAMP w/three PINS 19 387 R1 injection pipe (drilled) (Part of PACKAGE 701 127 C91)		1	NUT, fuel return line elbow
	19 387 R1	PIN, spring (Used w/CLAMP 670 004 C11) (3)		278 953 R91	
278 318 R1	BRACKET, fuel filter 7/16 x 1-1/8" hex-hd cap SCREW (3) 7/16" lock WASHER (3)			1	PIPE, injection (cylinder No. 1)
363 717 R91	CLIP			278 702 R11	
265 126 R91	CLIP, pipe			1	PIPE, injection (cylinder No. 2)
144 604	NIPPLE, primary fuel filter inlet (1-1/8" pipe nipple)	L-150GM 6674 to 7765 L-150PM 6675 to 7765		1	PIPE, injection (cylinder No. 3)
278 953 R91	NUT, primary filter inlet elbow	L-150GM 7766 to 10994 L-150PM 7766 to 11374		1	PIPE, injection (cylinder No. 4)
303 545 R1	"O" RING (.468 x .624 x .078") injection pump fuel fittings (3)			1	PIPE, injection (cylinder No. 5)
FIELD CONVERSION PACKAGE (Engine) (for converting engines equipped with International Model "R. D." Fuel Injection Pumps to Roosa-Master Fuel Injection Pumps) L-150GM 6674 to 10994 L-150PM 6675 to 11374					
701 127 C91	PACKAGE, pipe clamp parts (Composed of -	1 CLAMP 670 004 C11 2 PAD 332 491 R2 3 WASHER 103 339 3 WASHER 103 319 )		1	PIPE, injection (cylinder No. 6)
609 121 C91	PACKAGE, engine field conversion (less fuel injection pumps) (chassis conversion PACKAGE, 609 124 C91 must be used in conjunction with this package) (see NOTE)			1	PIPE, primary filter to final filter
	(Consists of -			1	SEAL, injection pump torque SCREW
	1 ADAPTER, Roosa- Master 303 462 R11			279 673 R91	
	3 3/8 x 7/8" hex-hd cap SCREW			6 SLEEVE, injection pipe	250 610 R2
	3 3/8" lock WASHER			Injection pump mounting hardware	
	1 CLAMP, injection pipe (drilled) 332 489 R1			2 3/8" NUT	
	1 CLAMP, injection pipe (tapped) 332 490 R1			2 3/8" lock WASHER	
	2 PAD, injection pipe clamp 332 491 R1			2 WASHER 142 619 H	
	5 1/4NF x 1-1/4" hex-hd cap SCREW				
	1 ELBOW, final filter inlet 22 510 D				
	1 ELBOW, fuel return line 37 165 D				
	1 ELBOW, primary filter outlet 65 834 D				
	1 ELBOW, final fuel filter outlet 137 538				
	1 ELBOW, injection pump inlet 118 755				
	1 GASKET, injection pump adapter 278 347 R1				
	1 HUB, injection pump gear 278 316 R1				
	3 5/16 x 1-1/4" hex-hd mach SCREW w/ external-tooth lock WASHER 347 230 R91				
	1 HOSE w/FITTING, final fuel filter to injection pump (HOSE, 5/16" ID x 14-1/2" long w/FITTINGS) 275 946 R91				
6	NUT, injection pipe (nozzle end) 250 617 R1				
FIELD CONVERSION PACKAGE (Chassis) (for use in conjunction with engine conversion PACKAGE, 609 121 C91 when converting engines equipped with International Model "R.D." Fuel Injection Pumps to Roosa-Master Fuel Injection Pumps) L-150GM 6674 to 10994 L-150PM 6675 to 11374					
609 124 C91 PACKAGE, chassis field conversion (see NOTE)					
	(Consists of -			1 CLEVIS, 5/16" adjusting	116 535
	1 DRAWING, fuel pump linkage adjusting			1 DRAWING, fuel piping	1 ZG-6358
	1 DRAWING, product graphic location			1 DRAWING, product graphic location	1 ZG-7885
	1 NUT, 5/16NF jam			1 NUT, 5/16NF jam	1 ZG-7898
	1 PAMPHLET, instruction			2 PIN, 3/8" rod end	1 085 208 R1
	2 PLUG, button			2 3/32 x 5/8" cotter pin	103 496
	1 PRODUCT GRAPHIC, primary fuel filter			1 PRODUCT GRAPHIC, primary fuel filter	432 577
	1 PRODUCT GRAPHIC, final fuel filter			1 PRODUCT GRAPHIC, final fuel filter	2 752 515 R1
	1 ROD, injection pump control			1 ROD, injection pump control	2 752 521 R1
	1 TUBE, front fuel return			1 TUBE, front fuel return	609 958 C11
				250 610 R2	SLEEVE, injection pump (nozzle end) (6)
NOTE: All Parts Listed In This Conversion Package Are Listed And Illustrated Throughout This Catalog. NOTE 1 - Factory Application - Order On Machine Order Form NOTE 3 - Field Application - Order Through Regular Service Parts Channels					

## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
INJECTION NOZZLE, PRECOMBUSTION CHAMBER AND GLOW PLUG					INJECTION NOZZLE, PRECOMBUSTION CHAMBER AND GLOW PLUG - Continued
			1	278 321 R1	FITTING, nozzle (6)
			3	279 274 R1	GASKET, nozzle valve (18)
			4	310 402 R1	SLEEVE, nozzle valve (6)
			5	332 496 R91	VALVE ASSY, nozzle (6)
			6	310 394 R1	SEAT, nozzle spring (.102" thick) (6)
			6	310 395 R1	SEAT, nozzle spring (.104" thick) (6)
			6	310 396 R1	SEAT, nozzle spring (.106" thick) (6)
			6	310 397 R1	SEAT, nozzle spring (.108" thick) (6)
			6	310 398 R1	SEAT, nozzle spring (.110" thick) (6)
			6	310 399 R1	SEAT, nozzle spring (.112" thick) (6)
			6	310 400 R1	SEAT, nozzle spring (.114" thick) (6)
			6	310 401 R1	SEAT, nozzle spring (.116" thick) (6)
			7	310 393 R1	SPRING, nozzle valve (6)
			8		SEAT, nozzle valve (order 332 496 R91) (6)
			9		VALVE, nozzle (order 332 496 R91) (6)
			10	310 389 R1	BODY, nozzle (6)
			11	251 044 R2	SEAL, nozzle body dust (6)
			12	260 879 R4	GASKET, nozzle body (6)
			13	278 275 R3	CHAMBER, precombustion (6)
			14	260 879 R4	GASKET, precombustion chamber (6)
			15	304 131 R2	PLUG, glow (optional with 343 894 R1) (6)
			15	343 894 R1	PLUG, glow (optional with 304 131 R2) (6)
			16	332 495 R91	NOZZLE ASSY, injection (6) 3/8 x 2-1/2" hex-hd cap SCREW (12)

IPA-68788



## FUEL SYSTEM




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>PRIMARY AND FINAL FILTERS</b> (Fram Corporation)					
					<b>PRIMARY AND FINAL FILTERS - Continued</b> (Fram Corporation)
			4	603 941 C91	COVER, fuel filter (X-138557) (2 for Filter B)
			5	304 102 R1	GASKET, element cover (2)
			6	306 777 R1	"O" RING, 9/16 x 3/4 x 3/32" (110960) (2)
			7	304 101 R91	PACKAGE, final fuel filter element field service (consists of ELEMENT and GASKET, 304 102 R1) (Filter A)
			7	306 353 R91	PACKAGE, primary fuel filter element field service (consists of ELEMENT and GASKET, 304 102 R1) (Filter B)
			7	610 309 C91	PACKAGE, primary fuel filter ELEMENT (consists of ELEMENT and GASKET 304 102 R1 (for units equipped w/water separator element attachment)
			8	306 780 R1	STRAP, bracket (not furnished as part of fuel filter assembly) (111741) (2) 1/4" sq NUT (2) 1/4 x 3" rd-hd slt mach SCREW (2) 1/4" lock WASHER (2)
			9	306 775 R91	BODY (2640) (2 for Filter A)
			9		BODY (Not Furnished Separately) (2 for Filter B)
			10	258 995 R1	PLUG, fuel drain (2 for Filter A)
			10	610 383 C1	PLUG, fuel filter drain (151728) (2 for Filter B)
			11	306 778 R1	PLUG, vent (104018) (2 for Filter A)
			12	368 492 R1	SCREW, vent cap (104258) (2 for Filter A)
			13	306 776 R91	COVER (2639) (2 for Filter A)

IPA-52313 A

Parts without letters after the description indicate the part is used for all filters listed below. Letters "A" and "B" are used to identify separate filters.

- A 306 399 R91 FILTER ASSY, final fuel (order final fuel FILTER, 347 066 R91)  
5/16" NUT (2)  
5/16 x 7/8" hex-hd cap SCREW (2)  
5/16" lock WASHER (2)  
11/32 x 11/16" x No. 16 ga. WASHER (2)
- B 601 508 C91 FILTER ASSY, less STRAP, primary fuel (order FILTER ASSY, 610 932 C91 and BRACKET, 304 104 R91)  
5/16" NUT (2)  
5/16 x 7/8" hex-hd cap SCREW (2)  
5/16" lock WASHER (2)  
11/32 x 11/16" x No. 16 ga. WASHER (2)
- 1 321 822 R1 SCREW, fuel filter retaining cap (101395) (2 for Filter B)
- 2 368 493 R1 GASKET, vent cap screw (151376) (2)
- 3 39 677 DA BLEEDER, fuel filter (X-138555) (2 for Filter B)

-37-  
**FUEL SYSTEM**

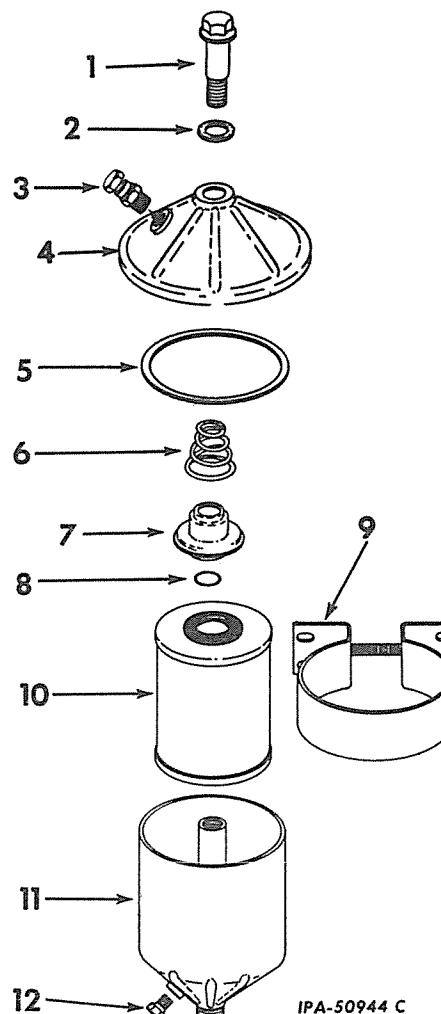REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
PRIMARY AND FINAL FUEL FILTERS (Purulator Products, Inc.)					PRIMARY AND FINAL FUEL FILTERS – Continued (Purulator Products, Inc.)
		 <p style="text-align: center;"><b>IPA-50944 C</b></p>			B 610 932 C91 FILTER ASSY, primary fuel (less BRACKET (together with BRACKET, 304 104 R91 will work for primary fuel FILTER, 278 062 R91 or 306 399 R91) also (together with BRACKET, 304 104 R91, ELBOW, 179 547 and ELBOW, 37 323 D will work for final fuel FILTER, 333 863 R91) 5/16" NUT (2) 5/16 x 7/8" hex-hd cap SCREW (2) 5/16" lock WASHER (2) 11/32 x 11/16" x 16 ga. WASHER (2)
A 347 066 R91	FILTER ASSY, final fuel (less BRACKET) (together with BRACKET, 304 104 R91 will work for final fuel FILTER, 278 062 R91 or 306 399 R91) also (together with BRACKET, 304 104 R91, ELBOW, 179 547 and ELBOW, 37 323 D will work for final fuel FILTER, 333 863 R91) 5/16" NUT (2) 5/16 x 7/8" hex-hd cap SCREW (2) 5/16" lock WASHER (2) 11/32 x 11/16" x 16 ga. WASHER (2)		1 321 727 R1 SCREW, retaining (37171-6) (Filter A)	1 368 333 R1 SCREW, retaining (Filter B)	
			2 368 334 R1 GASKET, retaining (37172) (2)	3 39 677 DA BLEEDER (15002)	
			4 321 720 R91 COVER and BUSHING (54529) (2)	5 304 102 R1 GASKET, element cover (19954-5) (2)	
			6 321 721 R1 SPRING, retaining (33263-1) (2)	7 321 722 R1 RETAINER, gasket (6654062) (2)	
			8 355 966 R1 GASKET, "O" ring retainer (54537) (2)	9 304 104 R91 BRACKET, fuel filter (not furnished as part of fuel filter assemblies) (2)	
			10 304 101 R91 PACKAGE, final fuel filter field service (consists of ELEMENT and GASKET, 304 102 R1) (Filter A)	10 306 353 R91 PACKAGE, primary fuel filter element field service (consists of ELEMENT and GASKET, 304 102 R1) (Filter B)	
			10 610 309 C91 PACKAGE, primary fuel filter ELEMENT (consists of ELEMENT and GASKET, 304 102 R1) for units equipped w/water separator element attachment	11 304 100 R91 CASE (37163-15) (2)	
			12 258 995 R1 PLUG, fuel filter drain (7600) (2)	444 014 ADAPTER, primary fuel filter inlet (#) (Filter B)	
			37 323 D ELBOW, 3/8" x 90° final filter inlet (#) (Filter A)	179 547 ELBOW, 3/8 x 1/4" reducing pipe (final filter outlet (#) (Filter A)	
			603 945 C1 NUT, flat speed (Filter B)	336 109 R1 SCREW, retaining (SK-55281) (2 for use with FILTER, 333 863 R91)	
			116 386 TEE, 3/8 x 3/8 x 1/4" reducing (primary fuel filter outlet) (#) (Filter B)		
					(#) - Used With Final Fuel FILTER, 347 066 R91 Only When It Replaces Final Fuel FILTER, 333 863 R91
					(+) - Used With Primary Fuel FILTER, 601 507 C91 Only When It Replaces Primary Fuel FILTER, 333 863 R91

Parts without letters after the description indicate the part is used for all filters listed below. Letters A and B are used to identify separate filters.


## FUEL SYSTEM

REF. PART  
NO. NUMBER

DESCRIPTION

AIR CLEANER PIPE EXTENSION

MEMORANDA

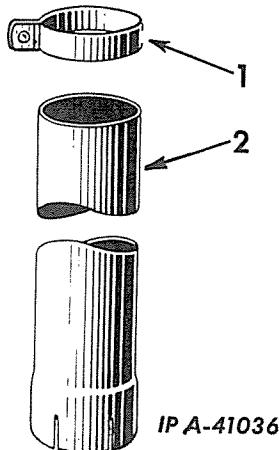

IPA-41036

331 794 R91	ATTACHMENT, air cleaner pipe extension (used on all manual shift loaders) (used on power shift loaders L-150P 6501 to 15964 also 15994 to 16217 except 15996 with altitude compensation attachment) (used on all power shift loaders L-150P 15965 to 15993 and 16218 up also 15996) (not for use with heavy duty (Farr) air cleaner attachment or heavy hood 700 388 C91) (see NOTES 1 and 3)
334 789 R91	ATTACHMENT, air cleaner pipe extension (for manual shift loaders and power shift loaders w/o altitude compensation attachment) (not for use with heavy duty (Farr) air cleaner attachment) (see NOTE 3) L-150G 6519 to 15964 Also 15994 to 16217 except 15996 L-150P 6501 to 15964 Also 15994 to 16217 except 15996
1	276 223 R91 CLAMP, air cleaner pipe extension (part of ATTACHMENT, 331 794 R91) 25 522 R1 3/8" NUT 24 841 R1 3/8 x 1-1/2" hex-hd cap SCREW 115 093 3/8" lock WASHER
1	604 399 C1 CLAMP, air cleaner pipe extension (part of ATTACHMENT, 334 789 R91)
2	330 737 R1 PIPE, air cleaner pipe extension (part of ATTACHMENT, 331 794 R91)
2	334 788 R1 PIPE, air cleaner pipe extension (part of ATTACHMENT, 334 789 R91)


NOTE 1 - Factory Application - Order On Machine Order Form.

NOTE 3 - Field Application - Order Through Regular Service Parts Channels.

## FUEL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

RETURN FUEL BY-PASS  
(Roosa-Master) (Hartford Machine Screw Co.)

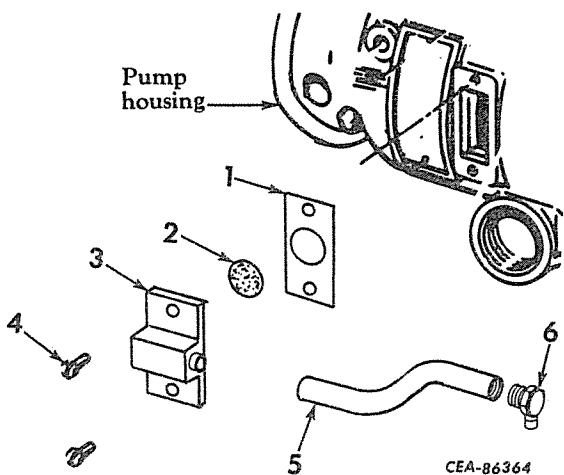

606 847 C91 KIT, return fuel by-pass system (see NOTE)  
(Consists of the following parts -

- |   |             |   |
|---|-------------|---|
| 1 | 610 953 C1  | GASKET, timing and return oil fitting<br>(15522)                  |
| 2 | 610 955 C1  | SCREEN, return oil (16460)  |
| 3 | 610 951 C91 | FITTING, timing and return oil (15517)                            |
| 4 |             | SCREW, No. 8 x 5/16" slt-ov-hd (timing line<br>cover) (10584) (2) |
| 5 | 610 952 C1  | HOSE, return oil (15521)  |
| 6 | 610 954 C91 | FITTING, inlet (16463)  |
|   | 610 950 C91 | CONNECTOR, return line (13212) (top<br>of governor control cover) |

NOTE - Parts For Reference Numbers 1 To 6  
Are Also Listed and Illustrated In  
Roosa-Master Fuel Injection Pump  
Parts Catalog, PU-70.




-40-

## COOLING SYSTEM



### RADIATOR CONNECTIONS

### RADIATOR CONNECTIONS - Continued

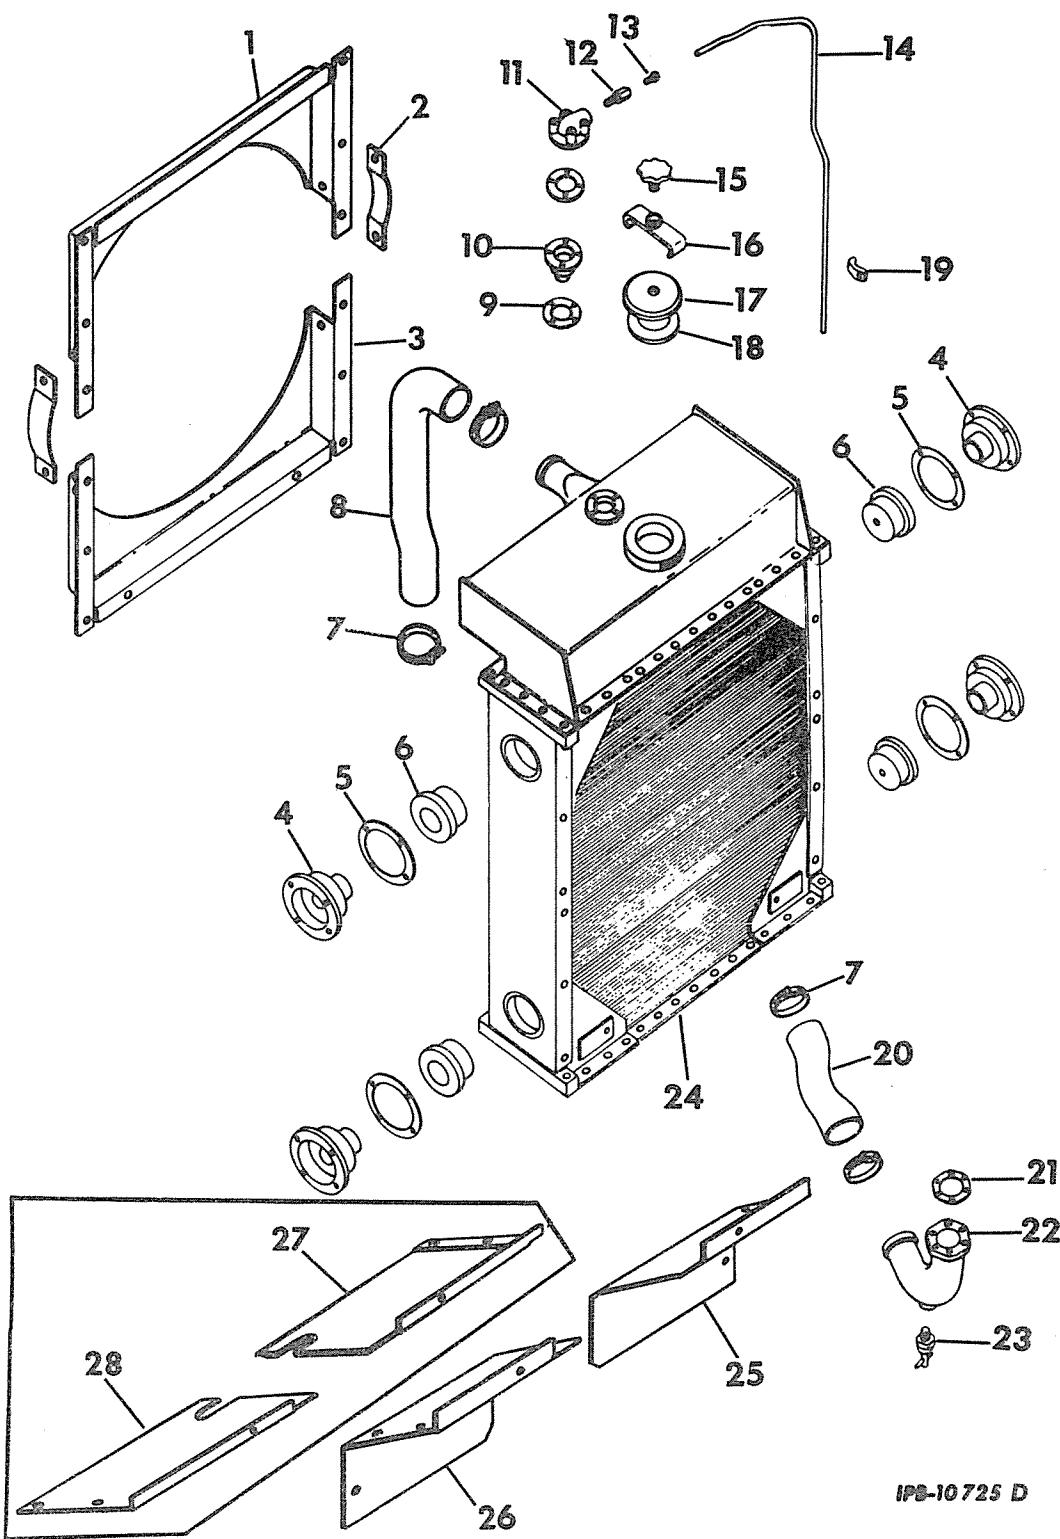

IPB-10725 D

# COOLING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION		
<b>RADIATOR CONNECTIONS - Continued</b>							
1	330 663 R11	SHEET, fan housing upper (%)	25	620 116 C1	BAFFLE, LH radiator bottom air (used on power shift loaders)		
1	334 101 R11	SHEET, fan housing upper (#)	179 789		L-150P 14001 up		
	181 356	3/8NF x 5/8" hex-hd cap SCREW (6)	181 356		1/4 x 3/8" hex-hd cap SCREW		
	103 321	3/8" lock WASHER (6)	103 319		3/8NF x 5/8" hex-hd cap SCREW		
	103 341	13/32 x 13/16" x 16 ga. WASHER (6)	103 321		1/4" lock WASHER		
2	330 665 R1	EXTENSION, fan housing (%) (2)	103 341		3/8" lock WASHER		
2	334 103 R1	EXTENSION, fan housing (#) (2)	26	703 605 C1	13/32 x 13/16" x 16 ga. WASHER		
	181 356	3/8NF x 5/8" hex-hd cap SCREW (4)			BAFFLE, RH radiator bottom air (used on manual shift loaders)		
	103 321	3/8" lock WASHER (4)			L-150G 14001 up		
	103 341	13/32 x 13/16" x 16 ga. WASHER (4)			L-150P 15424 up		
3	330 664 R11	SHEET, fan housing lower (%)	26	703 606 C1	BAFFLE, RH radiator bottom air (used on power shift loaders)		
3	334 102 R11	SHEET, fan housing lower (#)	179 789		L-150P 14001 to 15423		
	181 356	3/8NF x 5/8" hex-hd cap SCREW (8)	181 356		1/4 x 3/8" hex-hd cap SCREW		
	103 321	3/8" lock WASHER (8)	103 319		3/8NF x 5/8" hex-hd cap SCREW		
	103 341	13/32 x 13/16" x 16 ga. WASHER (8)	103 341		1/4" lock WASHER		
4	311 218 R1	BRACKET, radiator mounting (4)			13/32 x 13/16" x 16 ga. WASHER		
	616 373 C1	BOLT, radiator mounting bracket (16)			SPACER, radiator mounting bracket (4)		
5	325 990 R1	SPACER, radiator mounting bracket (4)	27	331 740 R1	BAFFLE, LH radiator bottom air (used on manual shift loaders)		
6	274 287 R2	MOUNTING, radiator (rubber) (4)			L-150G 6519 to 14000		
7	279 026 R91	CLAMP, radiator inlet and outlet hose (4)	27	331 741 R1	BAFFLE, LH radiator bottom air (used on power shift loaders)		
8	330 661 R2	HOSE, radiator inlet			L-150P 6501 to 14000		
9	320 391 R1	GASKET, pressure relief valve (2)	179 789		1/4 x 3/8" hex-hd cap SCREW		
10	321 149 R92	VALVE w/"O" RING, 252 707 R1, pressure relief	181 356		3/8NF x 5/8" hex-hd cap SCREW		
	252 707 R1	"O" RING, 3/4 x 15/16 x 3/32"	103 319		1/4" lock WASHER		
11	612 558 C1	HOUSING, pressure relief valve (together with PIPE, 330 856 R2 will work for HOUSING, 325 371 R1)	103 321		3/8" lock WASHER		
	24 841 R1	SCREW, 3/8 x 1-1/2" hex-hd cap (4)	103 341		13/32 x 13/16" x 16 ga. WASHER		
	115 093	WASHER, 3/8" lock (4)	28	331 739 R11	BAFFLE, RH radiator bottom air (used on manual shift loaders)		
12	18 506 R1	CONNECTOR, overflow pipe			L-150G 6519 to 14000		
13	371 217 R1	NUT, overflow pipe coupling	28	331 742 R11	BAFFLE, RH radiator bottom air (used on power shift loaders)		
14	330 856 R2	PIPE, radiator overflow			L-150P 6501 to 14000		
15	262 603 R12	HANDLE, radiator cap clamp	179 789		1/4 x 3/8" hex-hd cap SCREW		
		L-150G 6519 to 15567	181 356		3/8NF x 5/8" hex-hd cap SCREW		
		L-150P 6501 to 15567	103 319		1/4" lock WASHER		
15	703 482 C1	HANDLE, radiator cap clamp	103 321		3/8" lock WASHER		
		1/8 x 7/8" spring PIN	103 341		13/32 x 13/16" x 16 ga. WASHER		
		L-150G 15568 up	703 483 C91	CAP ASSY, radiator			
		L-150P 15568 up			L-150G 15568 up		
					L-150P 15568 up		
16	259 603 R91	CLAMP, radiator cap			(Composed of -		
		L-150G 6519 to 15567	1	CAP	703 480 C1		
		L-150P 6501 to 15567	1	CLAMP	703 481 C1		
16	703 481 C1	CLAMP, radiator cap			1	GASKET	620 086 C1
		L-150G 15568 up	1	HANDLE	703 482 C1		
		L-150P 15568 up	1	PIN, 1/8 x 7/8"	)		
17	259 599 R91	CAP w/GASKET, 620 086 C1, radiator	650 382 C91	ATTACHMENT, radiator cap padlock w/Keys (see NOTES 1 and 3)			
		L-150G 6519 to 15567					
		L-150P 6501 to 15567					
17	703 480 C1	CAP, radiator					
		L-150G 15568 up					
		L-150P 15568 up					
18	620 086 C1	GASKET					
19	274 239 R1	CLIP, radiator overflow pipe (2)					
20	330 848 R1	HOSE, radiator outlet					
21	330 662 R1	GASKET, radiator outlet elbow			(#) - Part of Reversible Fan ATTACHMENT, 331 702 R91.		
22	330 660 R1	ELBOW, radiator outlet			(%) - Not Used On Units Equipped With Reversible Fan ATTACHMENT, 331 702 R91.		
	179 840	3/8 x 1-1/8" hex-hd cap SCREW (6)					
	103 321	3/8" lock WASHER (6)					
23	627 799 C1	VALVE, drain			NOTE 1 - Factory Application - Order On Machine Order Form		
24		RADIATOR, for components see list of parts under details of "RADIATOR"			NOTE 3 - Field Application - Order Through Regular Service Parts Channels.		
25	620 114 C1	BAFFLE, LH radiator bottom air (used on manual shift loaders)					
		L-150G 14001 up					




## COOLING SYSTEM



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

RADIATOR

RADIATOR - Continued

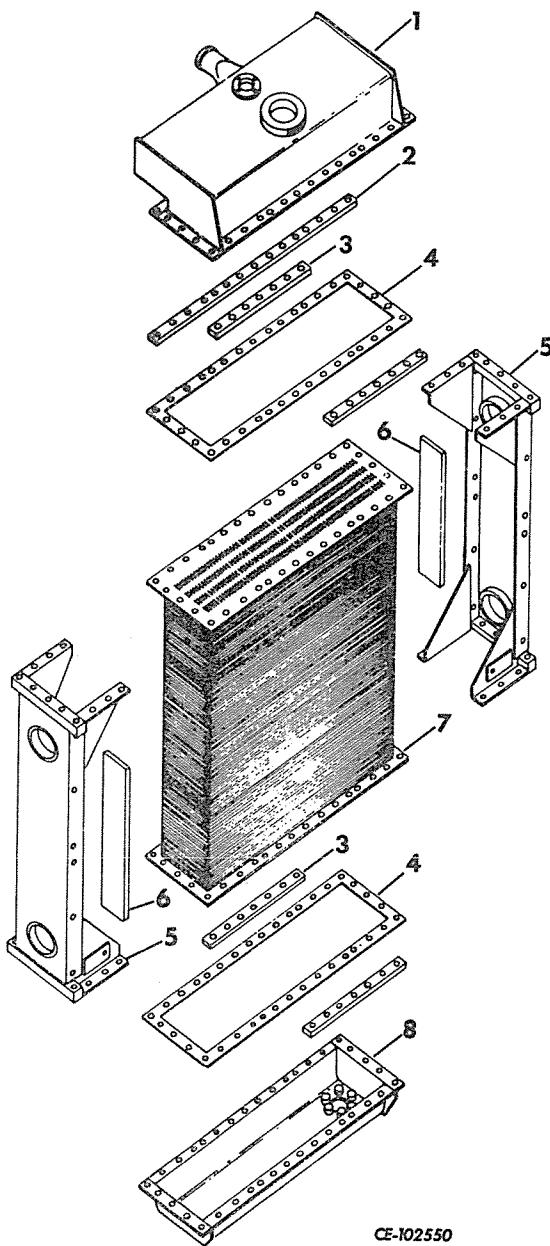

CE-102550

A	Service Parts for Radiator Assy (IH) L-150G 6519 to 16172 L-150P 6501 to 16172		
B	Service Parts for Radiator Assy (MODINE) L-150G 16173 up L-150P 16173 up		
C	Service Parts for Radiator Assy (PERFEX) (Service parts not yet available) L-150G 16173 up L-150P 16173 up		
D	331 679 R91	ATTACHMENT, forest radiator (see NOTE 4)	
1	330 667 R91 25 522 R1 24 840 R1 179 840 115 093	TANK, radiator upper (A) NUT, 3/8" (13) SCREW, 3/8 x 1" hex-hd cap (12) SCREW, 3/8 x 1-1/8" hex-hd cap (14) WASHER, 3/8" lock (26)	
1	630 465 C1 25 522 R1 24 840 R1 115 093	TANK, radiator upper (B) NUT, 3/8" (13) SCREW, 3/8 x 1" hex-hd cap (26) WASHER, 3/8" lock (26)	
2	330 669 R1	BAR, upper tank mounting (A)	
2	630 494 C1	BAR, upper tank mounting (B)	
3	330 668 R1	STIFFNER, upper and lower radiator core (A) (4)	
3	630 488 C1	BAR, top and bottom tank header (B)	
4	330 670 R1	GASKET, upper and lower tank (A and D) (2)	
4	627 940 C91	KIT, w/four gasket strips and four end gaskets, radiator gasket (B)	
5	330 672 R11 179 838 115 093	CHANNEL, side (A) (2) SCREW, 3/8 x 7/8" hex-hd cap (20) WASHER, 3/8" lock (20)	
5	630 486 C1 24 840 R1 115 093	MEMBER, RH and LH side (B) (2) SCREW, 3/8 x 1" hex-hd cap (20) WASHER, 3/8" lock (20)	
6	330 874 R1	SNUBBER, radiator core (A and D) (2)	
7	338 564 R91	CORE, radiator (Armored) (A)	
7	630 454 C1	CORE, radiator (B)	
7	330 840 R91	CORE, radiator (D)	
8	330 671 R91 25 522 R1 24 840 R1 179 840 115 093	TANK, radiator lower (A) NUT, 3/8" (14) SCREW, 3/8 x 1" hex-hd cap (12) SCREW, 3/8 x 1-1/8" hex-hd cap (14) WASHER, 3/8" lock (26)	
8	630 472 C1 25 522 R1 24 840 R1 115 093	TANK, radiator lower (B) NUT, 3/8" (36) SCREW, 3/8 x 1" hex-hd cap (26) WASHER, 3/8" lock (26)	
1	019 024 R2	PAMPHLET, installation (D)	

NOTE 4 - Attachment No Longer Available  
Service Parts Will Be Furnished  
As Ordered.

-41B-

MEMORANDA

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------	-------------	----------------	-------------

## COOLING SYSTEM

REF. PART  
NO. NUMBER


DESCRIPTION

REF. PART  
NO. NUMBER

DESCRIPTION

RADIATOR GUARD  
L-150G 6519 to 14000  
L-150P 6501 to 14000


RADIATOR GUARD - Continued  
L-150G 6519 to 14000  
L-150P 6501 to 14000

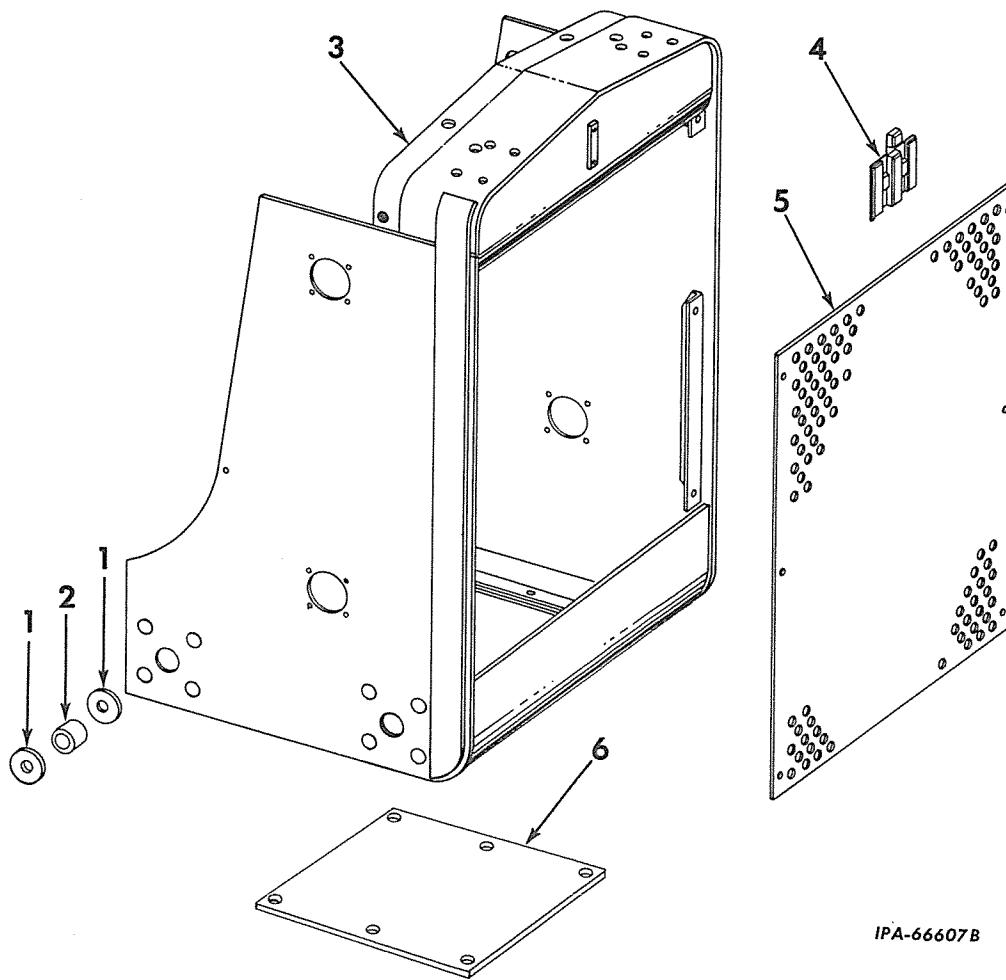

1	103 345	RETAINER, dowel (8) 5/8" NUT (4) 5/8 x 2-1/4" hex-hd cap SCREW (4)	4	311 263 R1	PRODUCT GRAPHIC, I. H. emblem (for loaders painted other than yellow) (used on tractor equipped with guard 331 494 R91) No. 4 x 1/4" drive SCREW (2)
2	330 653 R1	DOWEL, radiator guard mounting (4)	5	330 647 R11	DOOR, radiator guard 1/2 x 1" hex-hd cap SCREW (6) 1/2" lock WASHER (6) 17/32 x 1-1/16" x 13 ga. WASHER (6)
3	331 494 R91	GUARD, radiator 3/4" NUT (16) 3/4 x 2" hex-hd cap SCREW (16)	6	330 646 R1	COVER, radiator guard bottom 1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)
4	345 610 R1	PRODUCT GRAPHIC, I. H. emblem (for loaders painted yellow) (used on tractors equipped with guard 331 494 R91)		330 645 R1	SEAL, radiator top air baffle

## COOLING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>RADIATOR GUARD - Continued</b>					
L-150G	14001 up		L-150G	14001 up	
L-150P	14001 up		L-150P	14001 up	

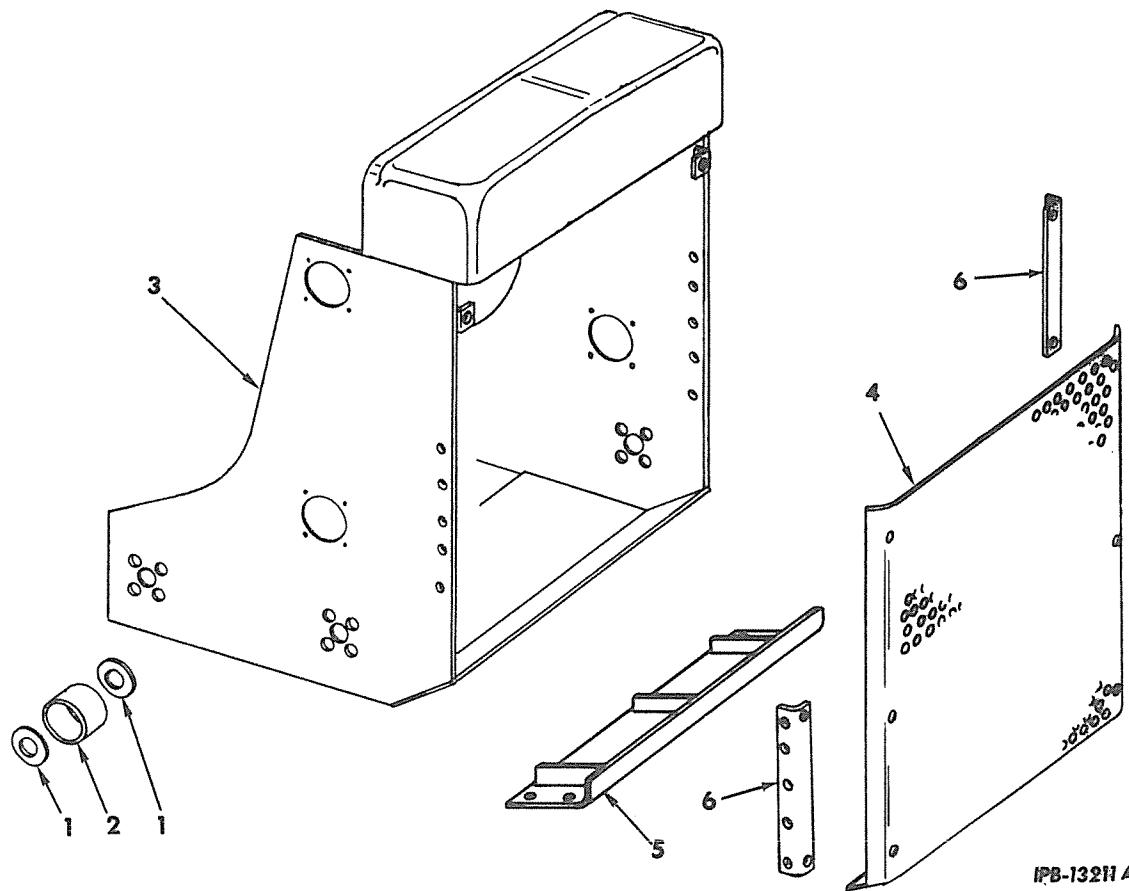

1	103 345	RETAINER, dowel (8) 5/8" NUT (4) 5/8 x 2-1/4" hex-hd cap SCREW (4)	4	703 385 C1	DOOR, radiator guard 1/2 x 3" hex-hd cap SCREW (6) 1/2" lock WASHER (6) 17/32 x 1-1/16 x 13 ga. WASHER (6)
2	330 653 R1	DOWEL, radiator guard mounting (4)	5	330 646 R1	COVER, radiator guard bottom 1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)
3	703 384 C91	GUARD, radiator L-150G 14001 to 15423 L-150P 14001 to 15423 (order the following parts - 2 ANGLE 624 411 C1 1 GUARD 624 618 C1 2 GUARD 624 390 C1 2 SWIVEL 303 706 R1)	330 645 R1	SEAL, radiator top air baffle	
3	703 384 C92	GUARD, radiator L-150G 15424 to 15525 L-150P 15424 to 15525 (order the following parts - 2 GUARD 624 390 C1 1 GUARD 624 618 C1 2 SWIVEL 303 706 R1)	6	624 411 C1	ANGLE, radiator guard door lower (used on GUARD, 703 384 C92 and 624 618 C1) 5/8 x 1-1/4" hex-hd cap SCREW (10) 5/8" NUT (10)
3	624 618 C1	GUARD, radiator L-150G 15526 up L-150P 15526 up 3/4" NUT (6) 3/4 x 2" hex-hd cap SCREW (6)			




-42B-

**MEMORANDA**




## COOLING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
		BLOWER FAN AND FAN GUARD			IDLER

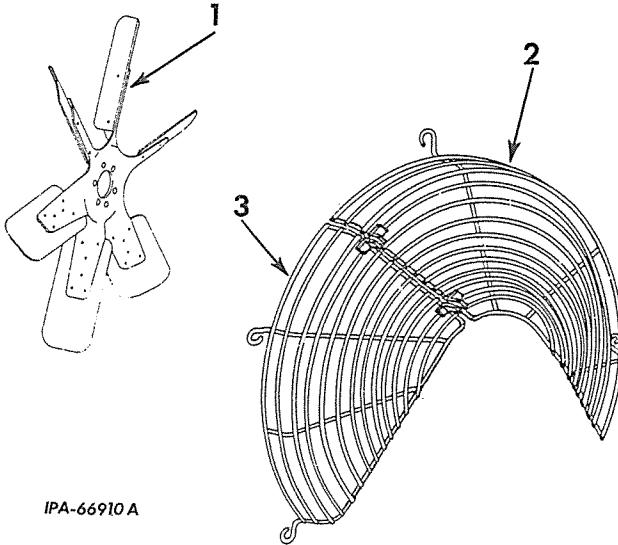

- |   |             |  |
|---|-------------|--|
| 1 | 327 499 R91 | FAN, blower<br>3/8 x 7/8" hex-hd cap SCREW (6)<br>3/8" lock WASHER (6)   |
| 2 | 612 591 C91 | GUARD, RH fan<br>3/8 x 3/4" hex-hd cap SCREW (3)<br>3/8" lock WASHER (3)<br>3/8 x 7/8" x 14 ga. WASHER (3)                 |
| 3 | 612 590 C91 | GUARD, LH fan<br>3/8" NUT (2)<br>3/8 x 3/4" hex-hd cap SCREW (5)<br>3/8" lock WASHER (5)<br>3/8 x 7/8" x 14 ga. WASHER (5) |

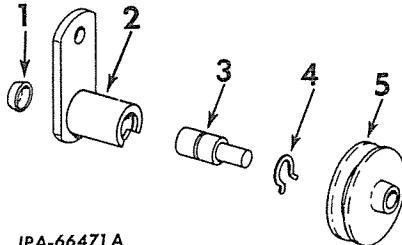


- |   |             |  |
|---|-------------|--|
| 1 | 169 071 R1  | PLUG, cup (for use only with ARM, 322 384 R12)                           |
| 1 | 172 547     | PLUG, expansion (for use only with ARM, 322 384 R11)                     |
| 2 | 322 384 R12 | ARM, adjuster (together with PLUG, 169 071 R1 will work for 322 384 R11) |
| 3 | 284 670 R91 | BEARING and SHAFT  |
| 4 | 322 386 R1  | RETAINER, bearing and shaft  |
| 5 | 9 102 D     | PULLEY   |
|   | 322 383 R1  | WASHER, idler<br>5/8" NUT  |

### REVERSIBLE FAN ATTACHMENT

- |             |   |
|-------------|---|
| 331 702 R91 | ATTACHMENT, reversible fan (see NOTE 3)<br>(Consists of the following parts -   |
| 334 103 R1  | EXTENSION, fan housing (#) (2)<br>3/8NF x 5/8" hex-hd cap SCREW (4)<br>3/8" lock WASHER (4)<br>13/32 x 13/16 x .065" WASHER (4) |
| 333 835 R91 | FAN, reversible (22" dia) (6 blade)<br>3/8 x 7/8" hex-hd cap SCREW (6)<br>3/8" lock WASHER (6)                                  |
| 334 101 R11 | SHEET, fan housing upper (#)<br>3/8NF x 5/8" hex-hd cap SCREW (6)<br>3/8" lock WASHER (6)<br>13/32 x 13/16 x .065" WASHER (6)   |
| 334 102 R11 | SHEET, fan housing lower (#)<br>3/8NF x 5/8" hex-hd cap SCREW (8)<br>3/8" lock WASHER (8)<br>13/32 x 13/16 x .065" WASHER (8)   |


(#) - Illustrated And Listed With "Radiator And Connections".  
NOTE 3 - Field Application - Order Through Regular Service Parts Channels.

## COOLING SYSTEM

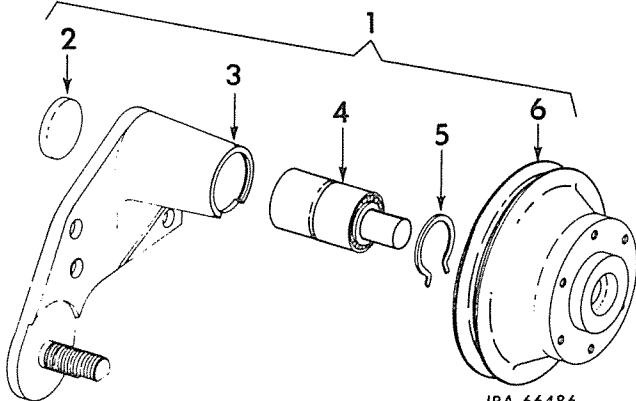REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
FAN DRIVE					FAN DRIVE - Continued
			1	330 018 R91	DRIVE ASSY, fan (used on power shift loaders)
			1	330 019 R91	DRIVE ASSY, fan (used on manual shift loaders)
			2	145 201 R1	PLUG, core hole
			3	328 991 R11	BRACKET, fan drive 7/16 x 1-1/4" hex-hd cap SCREW (3) 7/16" lock WASHER (3)
			4	306 365 R91	SHAFT w/BEARING
			5	306 630 R1	RING, bearing retainer
			6	328 535 R1	PULLEY, fan (used with DRIVE ASSY, 330 018 R91)
			6	328 537 R1	PULLEY, fan (used with DRIVE ASSY, 330 019 R91)

WATER PUMP AND FAN BELT


WATER PUMP AND FAN BELT - Continued

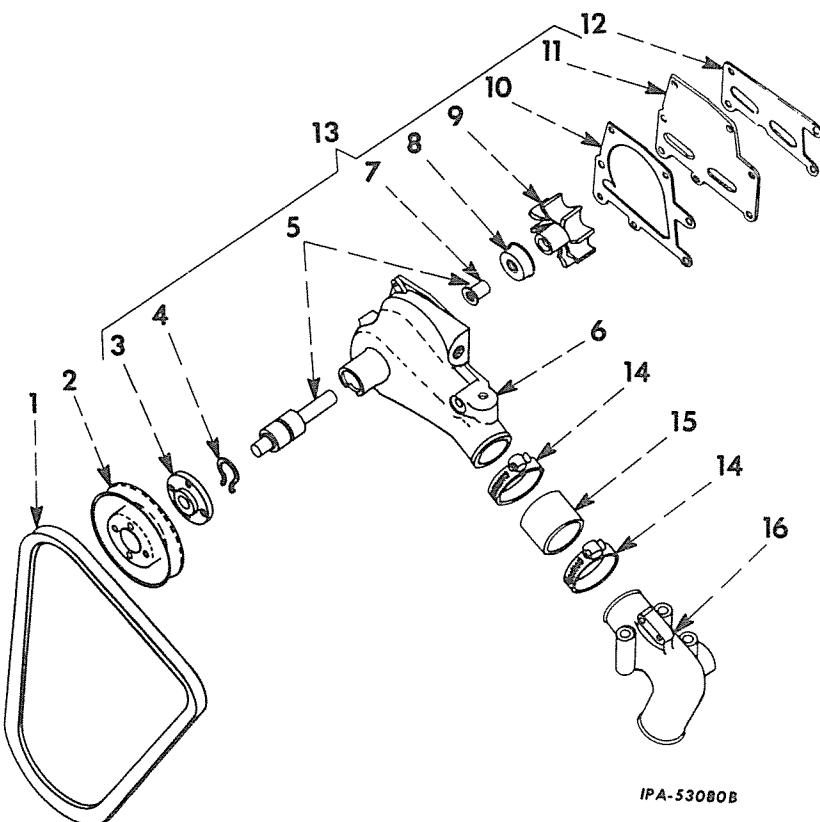

## COOLING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
WATER PUMP AND FAN BELT					WATER PUMP AND FAN BELT - Continued
1	328 539 R1	BELT, fan (used on power shift loaders)	13	601 816 C91	PUMP ASSY, water (will work for PUMP ASSY, 318 119 R92) (Composed of - Continued)
1	328 540 R1	BELT, fan (used on manual shift loaders)			1 SEAL 73 296 R92
2	306 625 R1	PULLEY, water pump 1/4 x 1/2" hex-hd cap SCREW (4) 1/4" lock WASHER (4)			1 SHAFT and BEARING 376 602 R91
3	368 501 R2	HUB, pulley			3/8 x 2-1/4" hex-hd cap SCREW
4	102 069 H	RING, bearing retainer			3/8" x 2-1/2" hex-hd cap SCREW (3)
5	376 602 R91	SHAFT and BEARING w/SLINGER, 71 351 R1			3/8" lock WASHER (4)
6	318 118 R21	BODY w/two PLUG, 444 589, PLUG, 444 661 and PLUG, 444 789 water pump	14	279 038 R91	CLAMP, water pump inlet hose (2)
7	71 351 R1	SLINGER, water pump	15	278 281 R1	HOSE, water pump inlet (1-3/4 x 2 x 3/16")
8		SEAL, water pump (order PACKAGE, 607 467 C91)	16	278 278 R2	ELBOW, water inlet 3/8 x 2-3/4" hex-hd cap SCREW (3) 3/8" lock WASHER (3)
9	332 117 R1	IMPELLER, water pump (used on PUMP ASSY, 318 119 R92) (order PACKAGE, 601 817 C91)	374 544 R92		PACKAGE, water pump field service (Consists of the following parts -)
9	387 931 R1	IMPELLER, water pump (used on PUMP ASSY, 601 816 C91)			1 GASKET 69 674 R1 1 GASKET 69 676 R1 1 PACKAGE 601 817 C91 1 RING 102 069 H 1 SEAL 73 296 R92 1 SHAFT and BEARING 376 602 R91)
10	69 674 R1	GASKET, water pump plate	607 467 C91		PACKAGE, water pump seal field service (Consists of SEAL and SEAT, 265 164 C91)
11	69 675 R1	PLATE, water pump 1/4 x 1/2" pan-hd stl mach SCREW (3)		444 589	PLUG, 1/2" sq-hd pipe
12	69 676 R1	GASKET, water pump		444 661	PLUG, 3/8" sq-hd pipe
13	601 816 C91	PUMP ASSY, water (will work for PUMP ASSY, 318 119 R92) (Composed of -)		444 789	PLUG, 1/2" sq-soc-hd pipe
		1 BODY 318 118 R21 1 GASKET 69 674 R1 1 HUB 368 501 R2 1 IMPELLER 387 931 R1 1 PLATE 69 675 R1 1 RING 102 069 H 1 SEAT AND BUSHING 265 164 C91		265 164 C91	SEAT, water pump seal (part of PACKAGE, 607 467 C91)
				601 817 C91	PACKAGE, water pump impeller (consists of IMPELLER, 387 931 R1 and SEAL PACKAGE 607 467 C91) (will work for IMPELLER, 332 117 R1)

THERMOSTAT, THERMOSTAT HOUSING, WATER PUMP BY-PASS HOSE AND CONNECTIONS

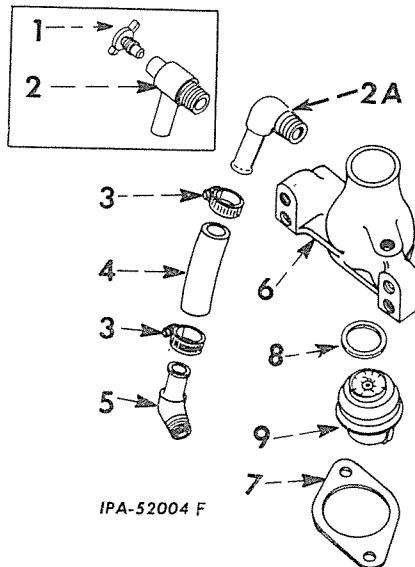

THERMOSTAT, THERMOSTAT HOUSING, WATER PUMP BY-PASS HOSE AND CONNECTIONS - Continued

1	538 V	STEM, water pump by-pass valve (Order ELBOW 320 275 R1)
2	303 483 R1	BODY, water pump by-pass valve (Order ELBOW 320 275 R1)
2A	320 275 R1	ELBOW, water pump by-pass hose (90°) (Will work for BODY, 303 483 R1 and STEM 538 V)
3	274 085 R91	CLAMP, water pump by-pass hose (2)
4	278 807 R1	HOSE, water pump by-pass (4 x 5/8 x 3/16")
5	278 089 R1	ELBOW, water pump by-pass hose (45°)
6	278 279 R2	HOUSING, thermostat 7/16 x 2-3/4" hex-hd cap SCREW (2) 1/2" lock WASHER (2)
7	278 280 R1	GASKET, thermostat housing
8	262 882 R1	GASKET, seal
9	313 942 R91	THERMOSTAT w/GASKET, 262 882 R1 (170° to 190°)


## COOLING SYSTEM



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

ENGINE OIL COOLER

ENGINE OIL COOLER - Continued

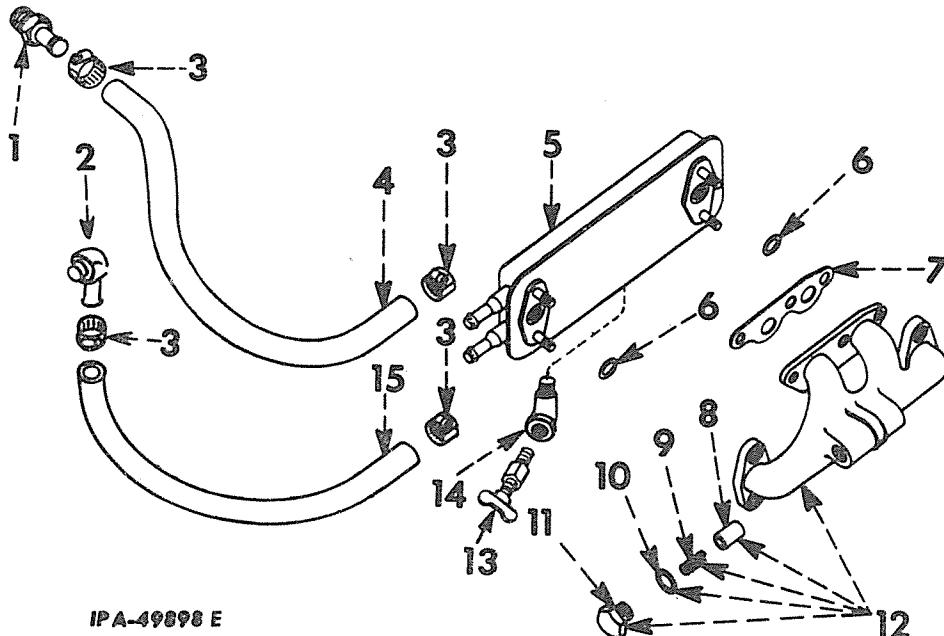

1	320 182 R1	CONNECTOR, oil cooler water inlet	12	279 160 R11	MANIFOLD ASSY, engine oil cooler (Composed of -
2	320 275 R1	ELBOW, outlet water oil cooler		1	GASKET 251 403 R1
3	274 085 R91	CLAMP, water hose (4)		§1	MANIFOLD
4	321 878 R1	HOSE, engine oil cooler water inlet		2	PLUG 444 577
5	279 212 R91 102 634 103 320	COOLER, engine oil 5/16" NUT (4) 5/16" lock WASHER (4)		1	PLUG 251 402 R1
6	350 684 R1	"O" RING, oil cooler to manifold (3/4 x 15/16 x 3/32") (2)	13	134 519	SPRING 279 163 R1
7	349 038 R1	GASKET, oil cooler manifold	13	141 615	VALVE 251 400 R1)
8	251 400 R1	VALVE, oil cooler relief	14	9 409 927	VALVE, drain L-150GM 5698 to 14300 L-150PM 5698 to 14300
9	279 163 R1	SPRING, oil cooler relief valve	14	444 054	ELBOW, 1/8" x 45° street L-150GM 5698 to 14300 L-150PM 5698 to 14300
10	251 403 R1	GASKET, relief valve plug	15	305 206 R1	ELBOW, 1/4" x 45° street L-150GM 14300 up L-150PM 14301 up
11	251 402 R1	PLUG, relief valve	362 123 R1		HOSE, engine oil cooler water outlet
				444 577	CLIP
					PLUG, 1/4NPT sq-hd pipe (2)


§ - Not Furnished Separately.

## LUBRICATION SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

**LUBRICATING OIL FILTER**

L-150GM 5698 to 10859  
L-150PM 5698 to 10859

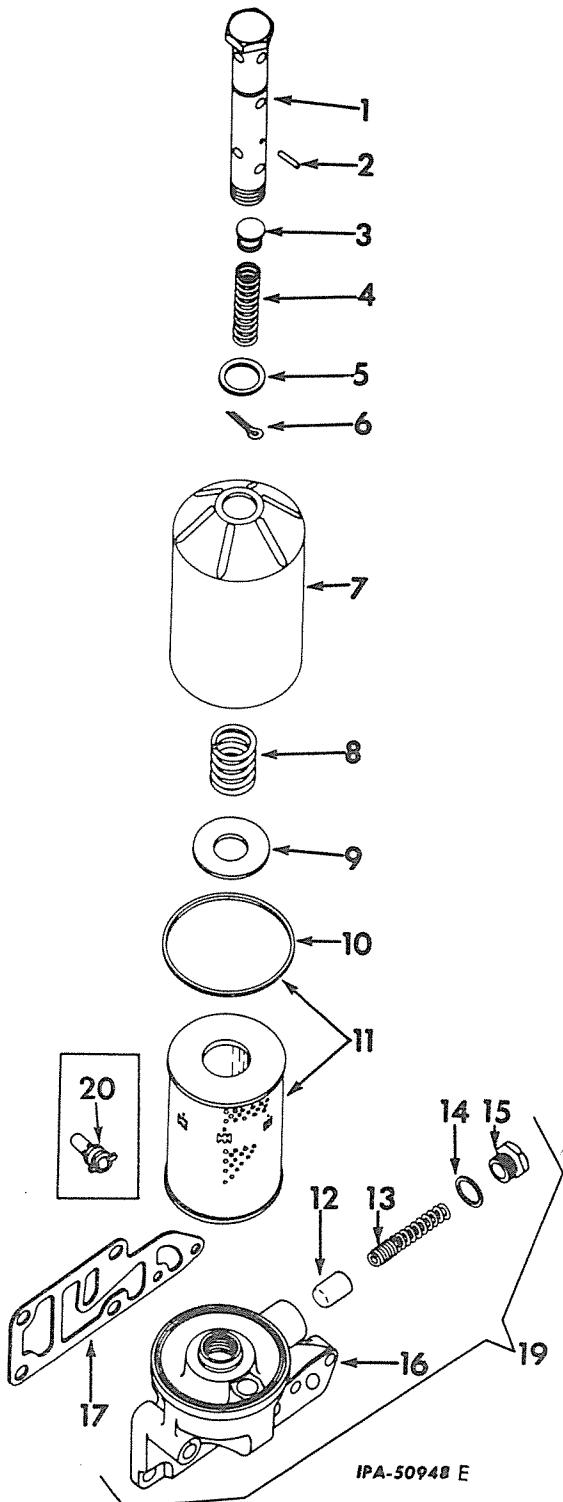

REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

**LUBRICATING OIL FILTER - Continued**

L-150GM 5698 to 10859  
L-150PM 5698 to 10859


Parts without letters after the description indicates the part is used for all Filters listed below: Letters "A" and "B" are used to identify separate Filters.		
A	304 003 R91	FILTER ASSY, lubricating oil (+) L-150PM 5698 to 10859
B	318 381 R91	FILTER ASSY, lubricating oil (%) L-150GM 5698 to 10859 7/16 x 1-1/4" hex-hd cap SCREW (3) 7/16 x 2" hex-hd cap SCREW 5/16 x 1-3/4" hex-soc-hd cap SCREW (2) 7/16" lock WASHER (4)
1	304 005 R91	TUBE w/PIN, 17 141 R1, VALVE 304 008 R1 and SPRING, 304 009 R1, center
2	17 141 R1	PIN., 5/32 x 1" (by-pass valve and spring retainer)
3	304 008 R1	VALVE, by-pass
4	304 009 R1	SPRING, by-pass valve
5	304 012 R1	GASKET, center tube
6	103 364	PIN, 1/16 x 1-1/8" cotter
7	303 998 R1	CASE, lubricating oil filter
8	304 011 R1	SPRING, element hold down
9	304 010 R1	WASHER, element retainer
10	304 854 R1	GASKET, oil filter case
11	323 827 R91	PACKAGE, lubricating oil filter element service (consists of ELEMENT and GASKET, 304 854 R1)
12	61 261 VA	VALVE, relief
13	49 946 HA	SPRING, relief valve
14	3 405 H	GASKET, relief valve plug
15	61 263 VA	PLUG, relief valve
16		(Not Furnished Separately)
17	349 039 R1	GASKET, lubricating oil filter base
19	320 285 R11	BASE ASSY (Consists of Ref. 12 to 16 and PLUG, 20 972 R1) 7/16 x 1-1/4" hex-hd cap SCREW (3) 7/16 x 2" hex-hd cap SCREW 5/16 x 1-3/4" hex-soc-hd cap SCREW (2) 7/16" lock WASHER (4)
20	612 092 C91	VALVE, oil pressure regulating (used only when CRANKCASES, 601 776 C91 or 612 017 C91 replace CRANKCASE, 312 434 R93) "O" RING
	349 055 R2	CLIP
	362 123 R1	ELBOW, 3/8" x 90° street (for manual shift loader and for power shift loader equipped with altitude compensation attachment) (also listed and illustrated w/turbocharger and piping)
	20 972 R1	PLUG, 3/8NPT sq-hd pipe (for power shift loader not equipped with altitude compensation attachment)
	444 618	PLUG, pipe
(+) - Not Used On Power Shift Loaders Equipped With Altitude Compensation Attachment.		
(-) - Used On Power Shift Loaders Equipped With Altitude Compensation Attachment.		

## LUBRICATION SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

LUBRICATING OIL FILTER  
L-150GM 10860 up  
L-150PM 10860 up

LUBRICATING OIL FILTER - Continued  
L-150GM 10860 up  
L-150PM 10860 up

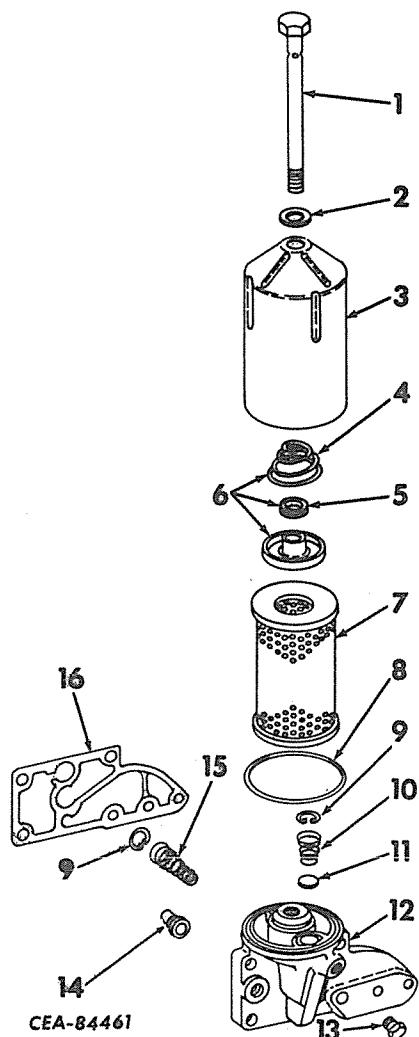



5	384 535 R1	GROMMET, element retaining washer
6	384 533 R91	RETAINER w/GROMMET, 384 535 R1 and SPRING, 384 536 R1 element
7	279 994 R91	ELEMENT, oil filter
8	304 854 R1	GASKET, oil filter case
9	303 322 R1	RING, snap (2)
10	384 525 R1	SPRING, check valve
11	384 528 R1	VALVE, oil filter base
12	601 789 C11	BASE w/PLUG, 445 673 oil filter
13	444 618	PLUG, 1/4" automotive hex-hd pipe
14	341 195 R92	VALVE, oil pressure regulating (*)
15	384 527 R1	SPRING, element by-pass
16	601 790 C1	GASKET, oil filter base (*)
	445 673	PLUG, oil filter base

601 786 C91 FILTER ASSY, lubricating oil (+)  
L-150PM 10860 up  
601 788 C91 FILTER ASSY, lubricating oil (%)  
L-150GM 10860 up  
179 860 7/16 x 1-1/4" hex-hd cap SCREW (3)  
179 866 7/16 x 2" hex-hd cap SCREW  
179 824 5/16 x 1-3/4" hex-soc-hd cap SCREW (2)  
103 322 7/16" lock WASHER (4)

- 1 384 530 R11 TUBE ASSY, oil filter center
- 2 384 532 R1 GASKET, center tube
- 3 384 529 R1 CASE, oil filter
- 4 384 536 R1 SPRING, element hold down

(\*) - Not Furnished As Part Of Filter Assy.  
(+) - Not Used On Power Shift Loaders  
Equipped With Altitude Compensation  
Attachment.  
(%) - Used On Power Shift Loaders Equipped  
With Altitude Compensation Attach-  
ment.

## LUBRICATION SYSTEM

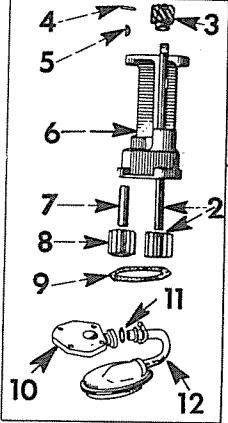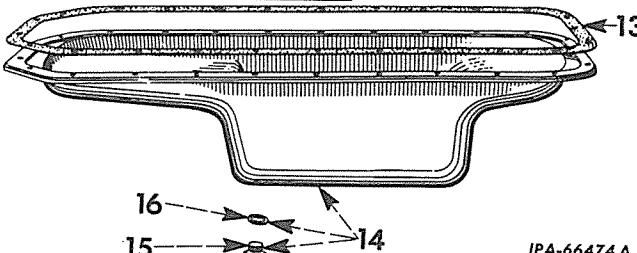
REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CRANKCASE OIL PAN AND OIL PUMP		CRANKCASE OIL PAN AND OIL PUMP - Continued			
		<p>13 369 984 R1 GASKET, crankcase oil pan</p> <p>14 332 137 R91 PAN w/GASKET, 3 405 H and PLUG, 445 096 crankcase oil 5/16 x 3/4" hex-hd cap SCREW (25) 5/16" lock WASHER (25)</p> <p>15 445 096 PLUG, crankcase oil pan drain</p> <p>16 3 405 H GASKET, crankcase oil pan drain plug</p>			
		IPA-66474 A			
1	230 421 R91	PUMP ASSY, oil (less SCREEN and "O" RING - Ref. 11 and 12) (together with SCREEN, 347 372 R91, PIN, 137 195 and "O" RING, 352 221 R1, will work for PUMP, 328 546 R91) 5/16 x 1" hex-hd cap SCREW (2) 5/16" lock WASHER (2)	13		
2	230 409 R91	SHAFT w/GEAR, oil pump drive	16		
3	69 608 R1	GEAR, oil pump drive	15		
4	112 011	PIN, 1/8 x 7/8" square end straight	14		
5	103 905	KEY, oil pump drive gear (Woodruff No. 5)			
6		BODY (Not Furnished Separately)			
7	35 647 H	SHAFT, idler gear			
8	227 713 R1	GEAR, pump body driven			
9	69 607 R1	GASKET, oil pump cover			
10	169 679 R1	COVER, oil pump body 5/16 x 1" hex-hd cap SCREW (4) 5/16" lock WASHER (4)			
11	352 221 R1	"O" RING (3/4 x 9/16 x 3/32") (not furnished as part of PUMP, 230 421 R91)			
12	347 372 R91	SCREEN, oil pump (not furnished as part of PUMP, 230 421 R91) (together with COVER, 169 679 R1, PIN, 137 195 and "O" RING, 352 221 R1, will work for COVER and SCREEN, 327 409 R91) 1/8 x 1-1/4" cotter PIN			

# TURBOCHARGER

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**TURBOCHARGER**  
 (Airesearch Industrial Division)  
 (Used on Manual Shift Loader) (Used on Power Shift Loaders  
 Equipped With Altitude Compensation Attachment)

**TURBOCHARGER - Continued**  
 (Airesearch Industrial Division)  
 (Used on Manual Shift Loader) (Used on Power Shift Loaders  
 Equipped With Altitude Compensation Attachment)

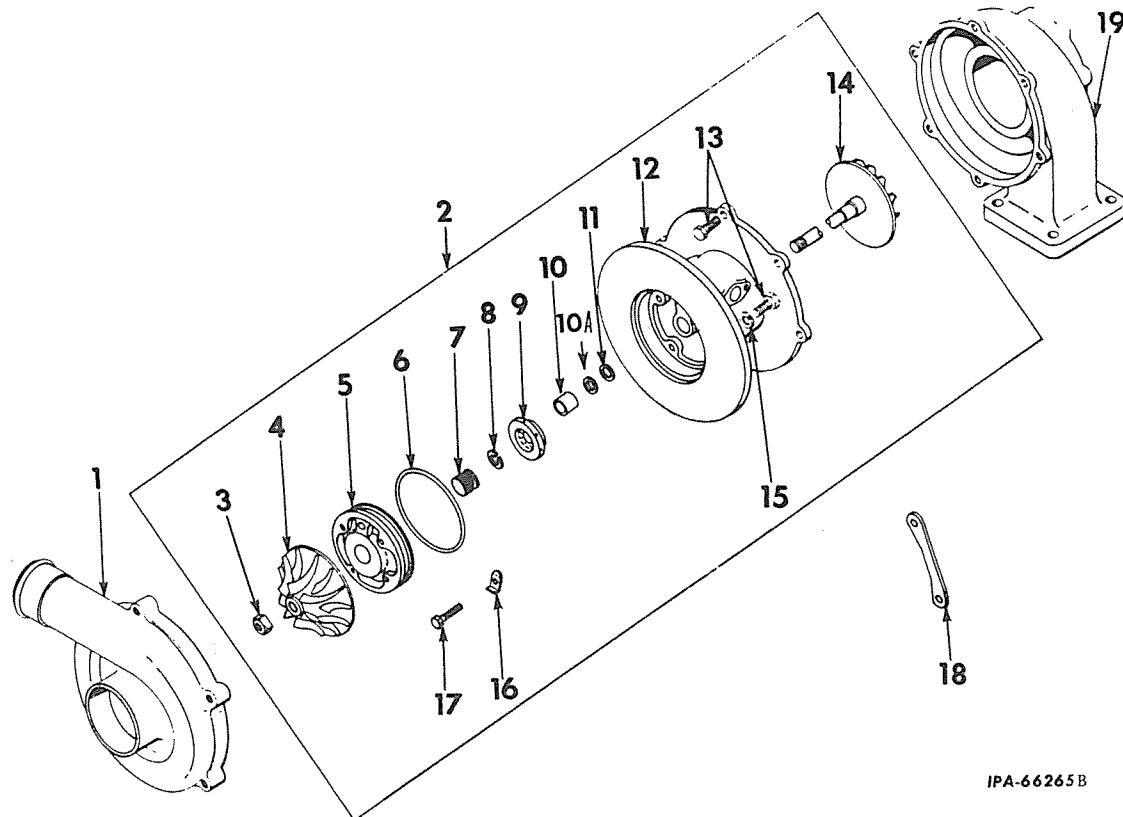

IPA-66265B

321 373 R91	TURBOCHARGER ASSY (for manual shift loader) (consists of the following parts unless otherwise indicated)	13	SCREW, 5/16 x 3/4" hex-hd cap (not part of center housing and rotating core assembly) (6)
324 032 R91	TURBOCHARGER ASSY (for power shift loaders equipped with altitude compensation attachment) (consists of the following parts unless otherwise indicated)	14	324 258 R91 WHEEL and SHAFT ASSY, turbine (402243)
310 427 R1	BOLT, turbocharger mounting (4)	15	WASHER, 5/16" extra heavy lock (not part of center housing and rotating core assembly)(6)
1 309 126 R1	HOUSING, compressor	16	PLATE, thrust lock (4)
2 321 374 R91	CORE ASSY, center housing and rotating (not remanufactured)	17	SCREW, No. 10 x 7/8" hex-hd mach (4)
627 915 C91	CORE ASSY (Remanufactured) (individual component parts making up remanufactured core assys are not serviceable by themselves)	18	PLATE, turbine housing lock (6)
3 19 839 R1	NUT, 5/16NF lock	19	309 127 R1 HOUSING, turbine (part of TURBOCHARGER, 321 373 R91)
4 324 255 R1	WHEEL, compressor	309 164 R1	HOUSING, turbine (part of TURBOCHARGER, 324 032 R91)
5 321 377 R91	PLATE ASSY, housing thrust	309 164 R1	FLANGE, oil inlet blank 3/8 x 3/4" hex-hd cap SCREW (2)
6 319 970 R1	"O" RING, thrust plate (2.98 x 3.25 x .135")	307 787 R1	3/8" lock WASHER (2)
7 324 256 R1	SPACER, thrust	321 376 R91	RING, oil inlet screen snap (order 601 005 C91)
8 321 379 R1	RING, compressor wheel seal	321 376 R91	ROTATING ASSY, compressor and turbine wheel (Composed of -
9 615 374 C1	WASHER, thrust	1	NUT 19 839 R1
10 615 841 C1	BUSHING, rotate shaft (406 702) (together w/ WASHER, 615 842 C1 will work for BUSHING 319 971 R1) (2)	1	RING 321 379 R1
10A 615 842 C1	WASHER, bushing (used w/BUSHING, 615 841 C1) (2)	1	SPACER 324 256 R1
11 21 519 R1	RING, shaft bushing retaining (3)	1	WASHER 615 374 C1
12	HOUSING (order 321 374 R91)	1	WHEEL 324 255 R1
		1	WHEEL and SHAFT 324 258 R91)

MEMORANDA






## TURBOCHARGER



**TURBOCHARGER AND PIPING**  
(Used on Manual Shift Loader) (Used on Power Shift Loader  
Equipped With Altitude Compensation Attachment)

**TURBOCHARGER AND PIPING – Continued**  
**(Used on Manual Shift Loader) (Used on Power Shift Loader  
Equipped With Altitude Compensation Attachment)**

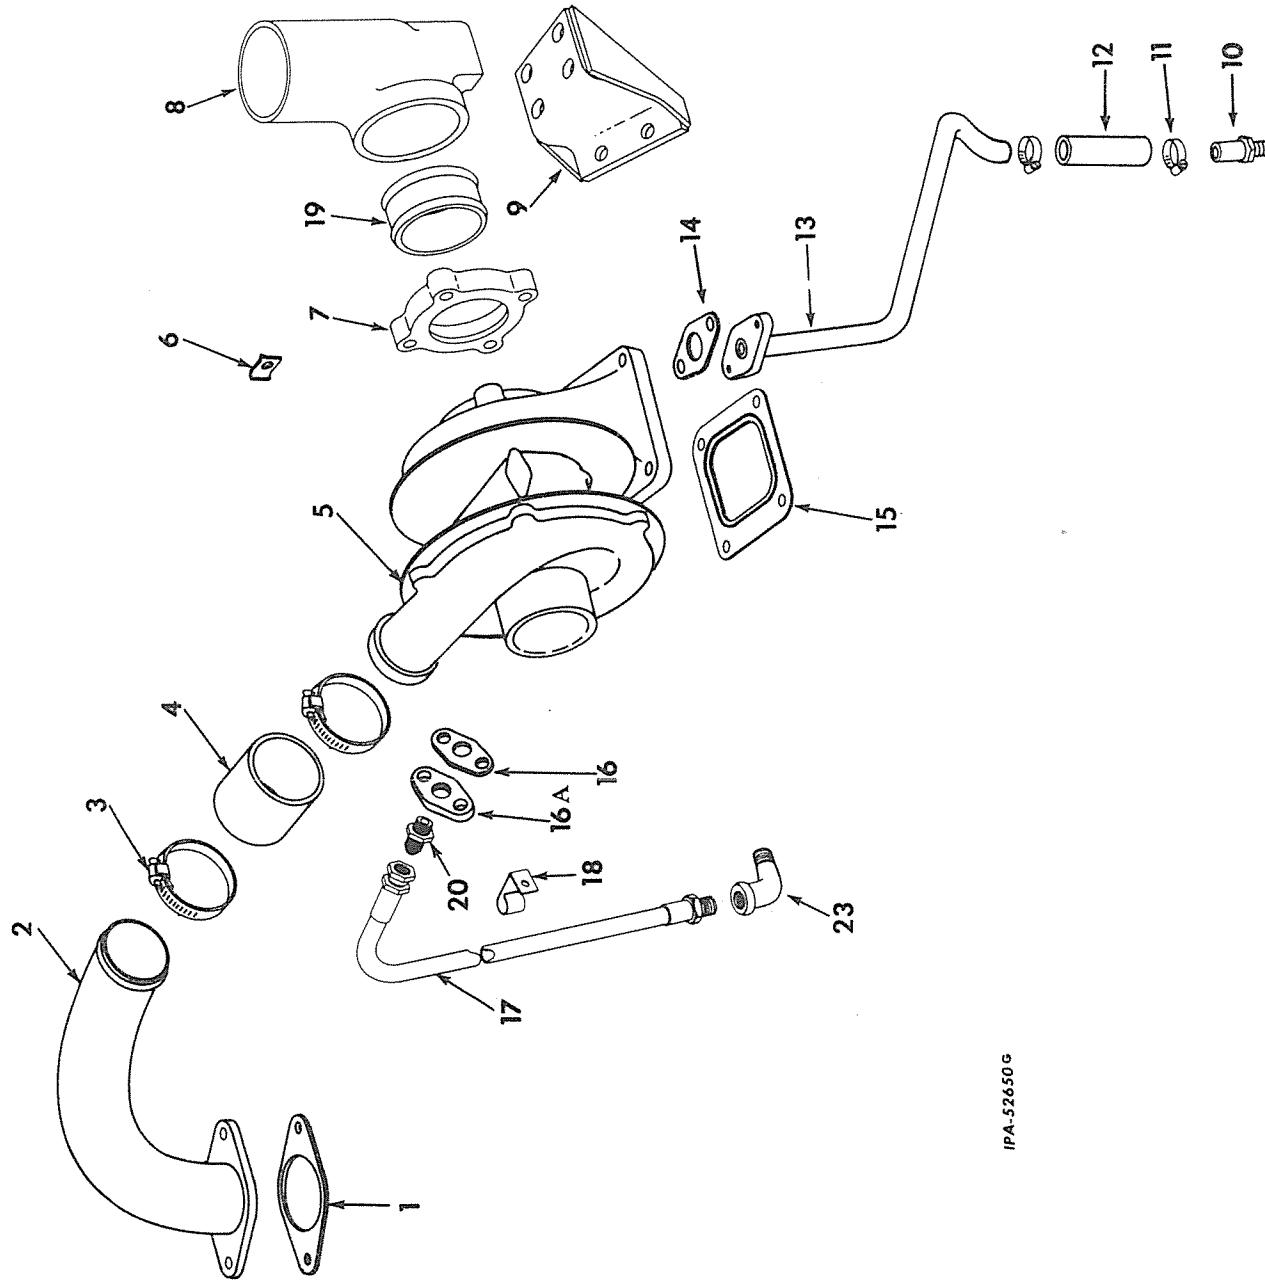

JPA-52650 G

# TURBOCHARGER




REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION
<b>TURBOCHARGER AND PIPING - Continued</b> (Used on Manual Shift Loader) (Used on Power Shift Loader Equipped With Altitude Compensation Attachment)					
<b>TURBOCHARGER AND PIPING - Continued</b> (Used on Manual Shift Loader) (Used on Power Shift Loader Equipped With Altitude Compensation Attachment)					
1	369 497 R2	GASKET, air outlet pipe flange	23	120 063	ELBOW, 3/8" x 90° street (also listed with "Lubricating Oil Filter")
2	306 660 R11	PIPE w/PLUG, 444 575 turbocharger air outlet			
	179 859 103 322	7/16 x 1-1/8" hex-hd cap SCREW (2) 7/16" lock WASHER (2)			
	444 577	PLUG, 1/4NPT sq-hd pipe			
3	279 038 R91	CLAMP, air outlet pipe hose (2)			
4	310 385 R1	HOSE, air outlet pipe (2-1/4 x 2-5/8 x 2-3/4")			
5		TURBOCHARGER (for components see list of parts under details of "Turbocharger")			
6	50 408 D	LOCK, exhaust discharge elbow bolt (4)			
7	316 050 R1 304 426 R1	RETAINER, exhaust elbow BOLT, exhaust discharge elbow (4)			
8	316 052 R2 310 427 R1 113 934 H	ELBOW, exhaust discharge BOLT, exhaust discharge elbow (4) WASHER (4)			
9	316 053 R11 304 451 R1 186 317 113 934 H	BRACE, exhaust elbow upper NUT (2) 3/8NF x 1-5/8" hex-hd cap SCREW (2) WASHER (2)			
10	171 823 R1	NIPPLE, 3/4NPT x 3/4" hose			
11	122 316 R91	CLAMP, turbocharger oil outlet (2)			
12	312 109 R1	HOSE, turbocharger oil outlet (3/4 x 1-1/4 x 4.2")			
13	308 361 R11 179 837 103 321	TUBE, turbocharger oil outlet 3/8 x 3/4" hex-hd cap SCREW (2) 3/8" lock WASHER (2)			
14	253 664 R2	GASKET, turbocharger oil outlet			
15	304 391 R2	GASKET, turbocharger			
16	253 660 R1	GASKET, turbocharger oil inlet flange			
16A	318 379 R1 179 837 103 321	FLANGE, turbocharger oil inlet tube 3/8 x 3/4" hex-hd cap SCREW (2) 3/8" lock WASHER (2)			
17	606 696 C91	HOSE w/FITTINGS, turbocharger oil inlet (HOSE, 1/2 x 27" long w/FITTINGS)			
18	318 380 R1	CLAMP, turbocharger oil inlet line			
19	316 051 R1	SLEEVE, turbocharger exhaust			
20	321 359 R1	ADAPTER, turbocharger oil inlet			



## ELECTRICAL SYSTEM



REF. NO.	DELCO-REMY NUMBER	DESCRIPTION	REF. NO.	DELCO-REMY NUMBER	DESCRIPTION
VOLTAGE REGULATOR (Delco-Remy) L150G 6519 to 14843 L150P 6501 to 14843			VOLTAGE REGULATOR - Continued (Delco-Remy) L150G 6519 to 14843 L150P 6501 to 14843		

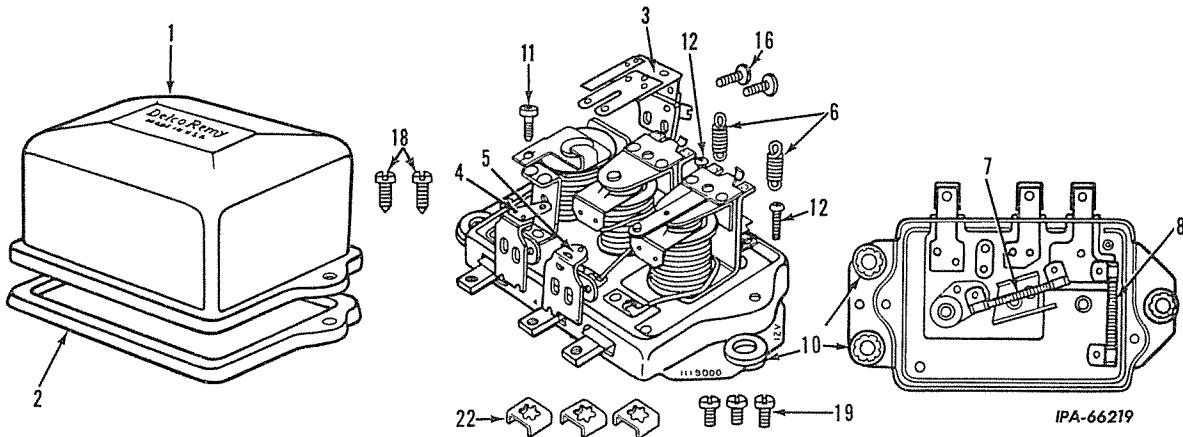

Parts without letters after the description indicates the part is used for all "Regulators" listed below: Letters "A" and "B" are used to identify separate "Regulators".

A 1119257	REGULATOR ASSY, voltage (12 volt - 17 amp) (used w/GENERATOR, 1105121) (Order REGULATOR 1119682)	6 1912176	SPRING, current regulator armature
B 1119247	REGULATOR ASSY, voltage (12 volt - 24 amp) (used w/GENERATOR, 1105134)	7 1910174	RESISTOR, "F" terminal to ground
1 1931886	COVER	8 1910174	RESISTOR, "F" terminal to relay
2 1931887	GASKET, cover	10 1879663	GROMMET, in base (rubber) (3)
3 1939646	ARMATURE, relay	11 1912159	SCREW, relay armature adjusting
4 1945732	CONTACT and SUPPORT, voltage regulator (Regulator A)	12 1944590	SCREW, regulator armature adjusting (2)
4 1878517	CONTACT and SUPPORT, voltage regulator (Regulator B)	16 1924764	SCREW, relay armature attaching (2)
5 1945732	CONTACT and SUPPORT, current regulator (Regulator A)	18 1943385	SCREW, cover (2)
5 1933239	CONTACT and SUPPORT, current regulator (Regulator B)	19 1878502	SCREW, terminal (3)
6 1949142	SPRING, voltage regulator armature (Regulator A)	22 1878503	CLAMP, terminal (3)
6 1923517	SPRING, voltage regulator armature (Regulator B)	1933941	LEAD, ground
		124818	NUT, shock mount attaching (3)
		1911034	SHOCK, mount (4 hole)
		1911028	SHOCK, mount (3 hole)
		273484	SCREW, shock mount attaching (3)
		1874495	WASHER, mount attaching screw lock (3)


Always Give VOLTAGE REGULATOR Number When Ordering Parts.

-54A-

## ELECTRICAL SYSTEM



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
VOLTAGE REGULATOR - Continued (Delco-Remy) L150G 6519 to 14843 L150P 6501 to 14843			VOLTAGE REGULATOR (Delco-Remy) L150G 6519 to 14843 L150P 6501 to 14843		

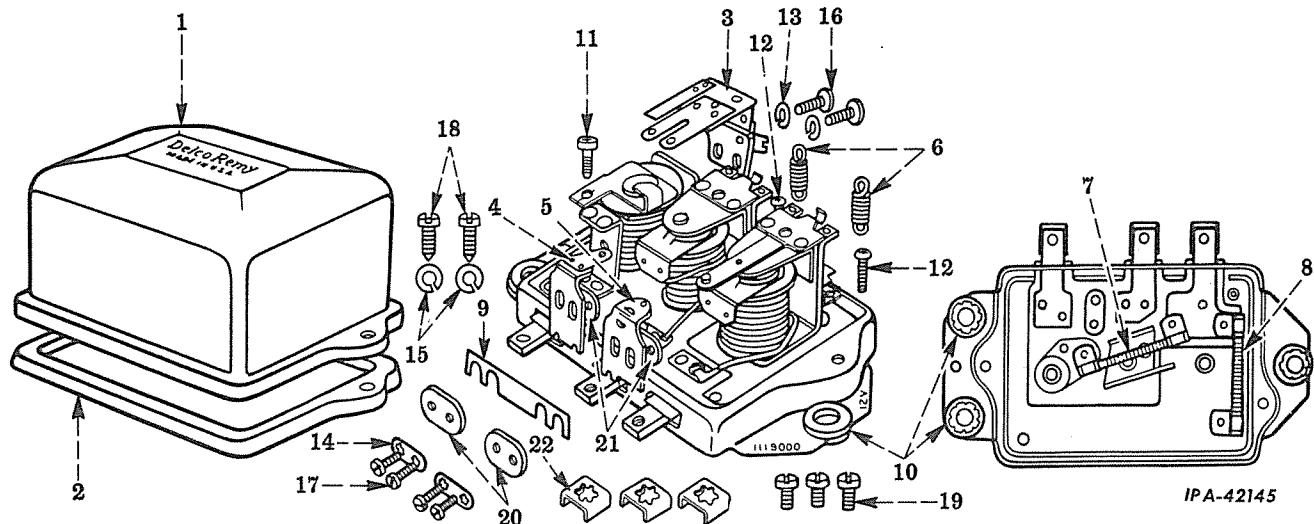

1	1119682	REGULATOR ASSY, voltage (12 volt) (Will work for REGULATOR 1119257) (Used with GENERATOR 1105121) (Consists of the following parts - COVER (Not furnished separately)	17	1878516	SCREW, current regulator contact attaching (3)
2	1931887	GASKET	17	1943854	SCREW, voltage regulator contact attaching (3)
3	1942909	ARMATURE, relay	18	1943386	SCREW, cover (2)
4	1878493	CONTACT and SUPPORT, current regulator	19	1914800	SCREW, terminal (3)
5	1939658	CONTACT and SUPPORT, voltage regulator	20	1922599	BUSHING, current regulator contact attaching screw
6	1912176	SPRING, regulator armature (current)	21	1878507	WASHER, current regulator attaching screw insulating
6	1959948	SPRING, regulator armature (voltage)	22	1878503	CLAMP, terminal (3)
7	1941431	RESISTOR, relay to voltage circuit	1855978		CLAMP, ground screw (in base)
7	1941432	RESISTOR, current to field	1939659		INSULATOR, voltage contact support
8	1941431	RESISTOR, current to ground	1933941		LEAD ASSY, ground
9	1939661	CONNECTOR, voltage and current	1910966		PACKAGE, shock mount
10	1879663	GROMMET, rubber (in base) (3)	1950267		RESISTOR, voltage adjusting (110 ohm)
11	1912159	SCREW, relay armature adjusting	1950268		RESISTOR, voltage adjusting (56 ohm)
12	1944590	SCREW, regulator adjusting (2)	1950269		RESISTOR, voltage adjusting (36 ohm)
13	1924764	SCREW, and lock WASHER ASSY, relay armature attaching (2)	1950270		RESISTOR, voltage adjusting (20 ohm)
14	1878505	WASHER, current regulator contact attaching screw lock	274 577		SCREW, ground (in base)
15		NOT USED	1950276		SCREW and lock WASHER, voltage adjusting
16	1924764	SCREW and lock WASHER ASSY, relay armature attaching (2)	1922996		WASHER, insulating contact (1/32" thick)
			1957462		WASHER, insulating contact

Always Give VOLTAGE REGULATOR Number When Order-  
ing Parts.




## ELECTRICAL SYSTEM



REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

VOLTAGE REGULATOR  
(Delco-Remy)  
L150G 14844 Up  
L150P 14844 Up

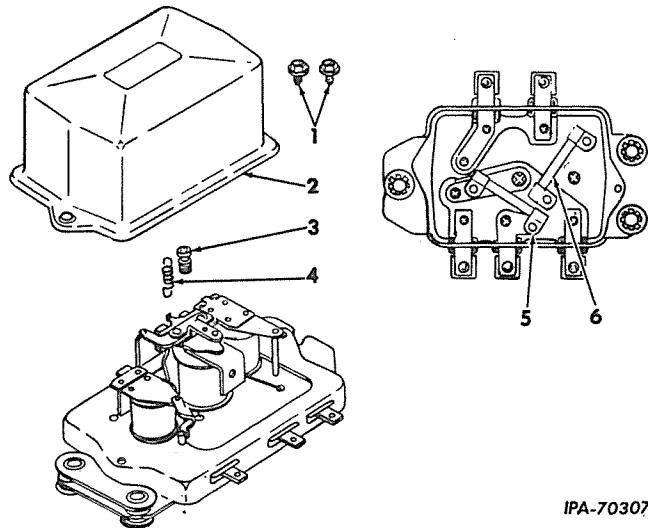

IPA-70307

1119513 REGULATOR w/SHOCK BRACKET,  
voltage (Used with ALTERNATOR  
1100812)

(Composed of -  
1 PACKAGE 1962629  
1 REGULATOR 1119507  
3 SCREW 454669  
3 WASHER 120380 )  
1/4" NF NUT  
1/4 x 1" std-mach SCREW (2)  
1/4" lock WASHER (3)

1119507 REGULATOR ASSY, voltage  
(Consists of Ref. Nos. 1 thru 6) (fur-  
nished as part of REGULATOR  
1119513)

- |   |         |                                 |
|---|---------|---------------------------------|
| 1 | 9418115 | SCREW, cover attaching (2)      |
| 2 | 1958151 | COVER, regulator                |
| 3 | 1958148 | SCREW, adjusting                |
| 4 | 1958137 | SPRING, adjusting screw         |
| 5 | 1941431 | RESISTOR                        |
| 6 | 1960347 | RESISTOR                        |
|   | 1962629 | PACKAGE, shock bracket          |
|   | 454669  | SCREW, terminal (3)             |
|   | 120380  | WASHER, terminal screw lock (3) |

Always Give VOLTAGE REGULATOR Number When Order-  
ing Parts.


# ELECTRICAL SYSTEM



REF. NO.	DELCO-REMY NUMBER	DESCRIPTION	REF. NO.	DELCO-REMY NUMBER	DESCRIPTION
----------	-------------------	-------------	----------	-------------------	-------------

**GENERATOR**  
 (12 Volt) (Delco-Remy) (Standard)  
 L150G 6519 to 14843.  
 L150P 6501 to 14843

**GENERATOR - Continued**  
 (12 Volt) (Delco-Remy) (Standard)  
 L150G 6519 to 14843  
 L150P 6501 to 14843

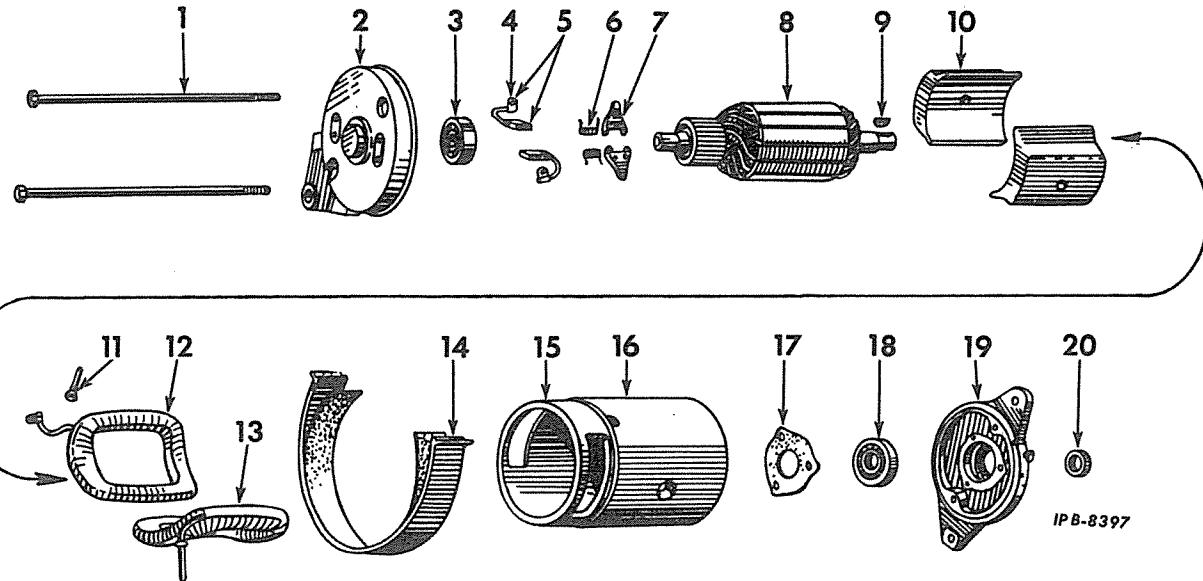

1105121	GENERATOR ASSY (12 volt)	12	1945276	COIL, RH field
1 809763 9421424	BOLT, thru (2) WASHER, thru bolt lock (2)	13	1945275	COIL, LH field
2 1936330 1929959	FRAME, commutator end RING, bearing retainer	14	1879530 453479 34816	BAND, cover SCREW, cover band NUT, cover band
3 904751	BEARING, commutator end ball	15	809062	PIN, dowel, commutator end and drive end (2)
4 200 362	CLIP, terminal to brush	16	131238 453294	FRAME (Not Furnished Separately) SCREW, frame WASHER, frame lock
5 1932506 453460 1914816	BRUSH (2) SCREW, brush lead attaching (2) WASHER, brush lead attaching lock (2)	17	1911263 1914580	PLATE, drive end ball bearing retainer SCREW, ball bearing retainer plate attaching (3) WASHER, ball bearing retainer plate attaching screw lock (3)
6 1856993	SPRING, brush (2)	18	900529	BEARING, drive end ball
7 1878183 1857412	ARM, brush (2) WASHER, brush arm space (2)	19	1936333	FRAME, drive end
8 1950357	ARMATURE	20	1858603 809945	COLLAR, drive end space (outside) COLLAR, drive end space (inside)
9 124545	KEY (Woodruff)			
10 1918004 1914750	SHOE, pole (2) SCREW, pole shoe (2)			
11 1858751 1902746 1881409 121743 1914579	STUD, terminal (2) WASHER, insulating terminal stud (2) WASHER, plain terminal stud (2) NUT, terminal stud (4) WASHER, terminal stud lock (4)		1885090 1915172 1915265	INSULATOR, terminal (2) NUT, drive end shaft WASHER, drive end shaft

Always Give GENERATOR Number When Ordering Parts.

# ELECTRICAL SYSTEM



REF. DELCO-REMY  
NO. NUMBER


DESCRIPTION

REF. DELCO-REMY  
NO. NUMBER

DESCRIPTION

**GENERATOR**  
(12 Volt) (Delco-Remy) (Hi-Output)  
L150G 6519 to 14843  
L150P 6501 to 14843

**GENERATOR - Continued**  
(12 Volt) (Delco-Remy) (Hi-Output)  
L150G 6519 to 14843  
L150P 6501 to 14843

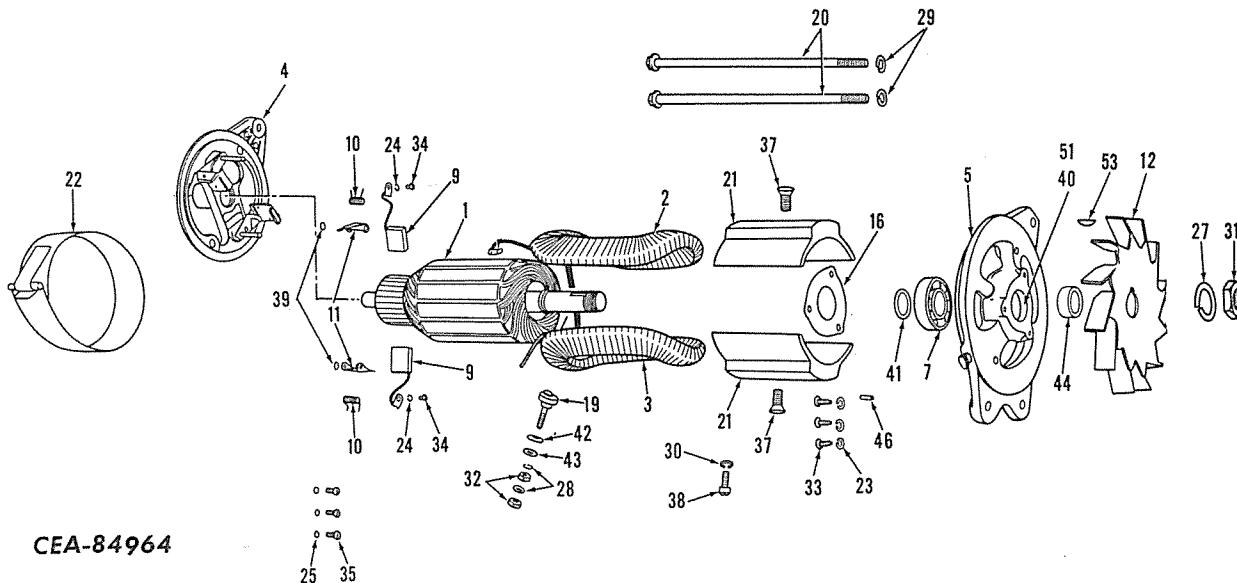


1105134	GENERATOR ASSY	29	9421424	WASHER, thru bolt lock
1 1938209	ARMATURE	30	453294	WASHER, field frame lock
2 1945276	COIL, RH field	31	9418881	NUT, shaft
3 1945275	COIL, LH field	32	121743	NUT, terminal stud
4 1938207	FRAME, commutator end	33	1914580	SCREW, bearing retainer plate (drive end)
5 1934553	FRAME, drive end	34	453 460	SCREW, brush lead attaching
6 900529	BEARING, commutator end ball	35	1917123	SCREW, commutator cover attaching
7 900529	BEARING, drive end ball	37	1914750	SCREW, pole shoe
9 1932506	BRUSH (2)	38	131238	SCREW, field frame
10 1856993	SPRING, brush (2)	39	1857412	WASHER, brush arm spacer
11 1878183	ARM, brush (2)	40	809961	WASHER, felt
12 1937227	FAN, drive end	41	809945	WASHER, commutator end spacer
16 1935923	PLATE, bearing retainer	42	1902746	WASHER, terminal stud insulating
19 1858751	STUD, terminal	43	1881409	WASHER, terminal stud plain
20 809763	BOLT, thru (2)	44	1913689	COLLAR, fan
21 1918004	SHOE, pole (2)	46	809062	PIN, drive end dowel
22 1879530	BAND, cover	51	1929959	RING, bearing clamp
23 1962276	WASHER, ball bearing retainer screw lock	52	200362	CLIP, terminal to brush
24 1914816	WASHER, brush lead attaching screw lock	53	124548	KEY, drive end
25 1962276	WASHER, commutator cover lock	1885090	1885090	BUSHING, terminal
27 1905406	WASHER, shaft nut lock	1945119	1945119	COVER, commutator end
28 1914579	WASHER, terminal stud lock	1912073	1912073	INSULATION, field coil

-56A-

# ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
ALTERNATOR (Delco-Remy) L1150G 14844 Up L1150P 14844 Up			ALTERNATOR (Delco-Remy) L1150G 14844 Up L1150P 14844 Up		

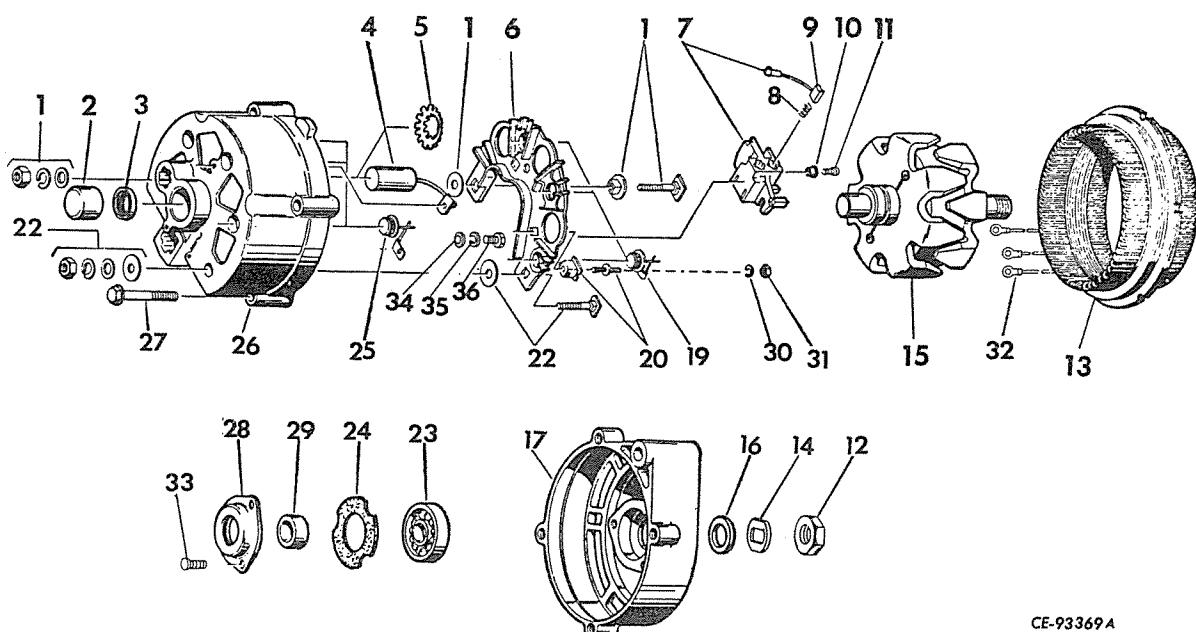

CE-93369A

ILLUSTRATIONS ARE OF TYPICAL PARTS ONLY.

1100812	ALTERNATOR ASSEMBLY (12V - 22 Amp.) (Consists of the following parts -	16	1959991	COLLAR
1	TERMINAL, Package Ground	17	1970595	FRAME, Drive End
2	BEARING, slip ring end	19	1964353	DIODE, Positive (3)
3	SEAL, slip ring end	20	1959834	TERMINAL PACKAGE
4	CAPACITOR WASHER, capacitor screw insulator	22	1959832	TERMINAL PACKAGE, Battery
5	RETAINER, capacitor retaining	23	904751	BEARING, Drive End
6	HEAT SINK ASSEMBLY (Composed of - 3 DIODE 1964353 1 NUT 453434 1 TERMINAL PACKAGE 1958934 1 WASHER 9419392 )	24	1912008	GASKET
7	BRUSH HOLDER AND BRUSH ASSY.	25	1964354	DIODE, Negative (3)
8	SPRING	26	1970918	FRAME, Slip Ring - End (Composed of - 1 BEARING 7451763 3 DIODE 1964354 1 RETAINER 1960750 1 SEAL 1959790 )
9	BRUSH (Not Furnished Separately)	27	1956975	BOLT (4)
10	INSULATOR, Brush Holder - Screw	28	1955494	RETAINER ASSY.
11	SCREW, Brush Holder WASHER, Spring, Brush Holder Attaching Screw	29	1963139	COLLAR
12	NUT, Shaft	30	9419392	WASHER, Lock
13	STATOR ASSY, w/three CLIP 1959532	31	453434	NUT, Diode Junction Terminal
14	WASHER, Shaft Nut Drive End Lock	32	1959532	CLIP (3)
15	ROTOR ASSEMBLY	33	1965104	SCREW (3)
		34	815540	WASHER, Plain Capacitor Terminal Screw
		35	9419392	WASHER, Capacitor Terminal Screw Lock
		36	132768	SCREW, Capacitor Terminal



-56B-

**MEMORANDA**



## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
ALTERNATOR AND CONNECTIONS					
L150G	14844 Up		L150G	6519 to 14843	GENERATOR AND CONNECTIONS
L150P	14844 Up		L150P	6501 to 14843	

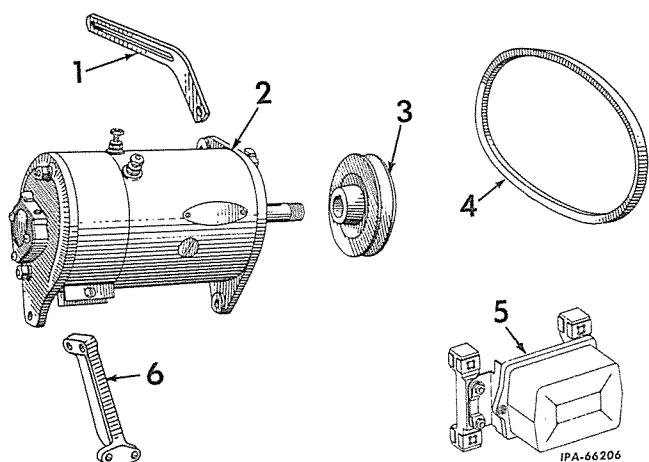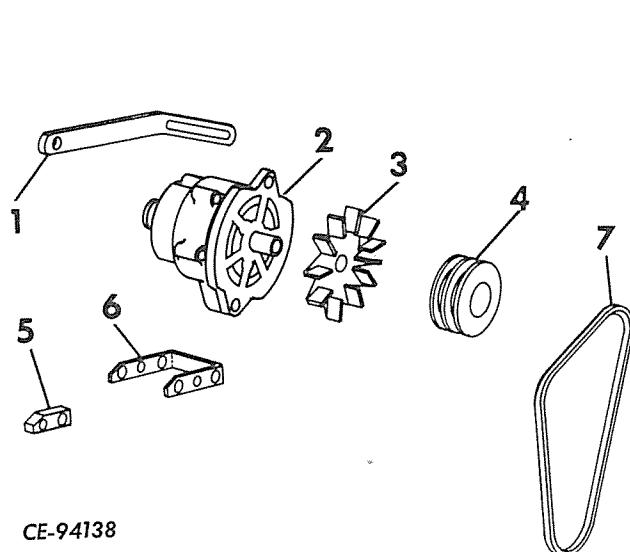

CE-94138

1	384 997 R1	BRACE, alternator 5/16 x 1-1/8" hex-hd cap SCREW 7/16 x 1" hex-hd cap SCREW 5/16" lock WASHER 7/16" lock WASHER WASHER, flat	1	274 191 R2	BRACE, generator 7/16" NUT 3/8 x 7/8" hex-hd cap SCREW 3/8" lock WASHER 13/32 x 13/16" x 16 ga. WASHER 7/16" lock WASHER
2		ALTERNATOR ASSY. (For components see list of parts under details of "Alternator")	2		GENERATOR ASSY, w/o PULLEY (for components see list of parts under details of "Generator", standard or high output) 3/8" NUT 3/8 x 2" hex-hd cap SCREW 3/8 x 2" hex-hd cap SCREW 3/8" lock WASHER (2)
3	221 425 R1	FAN, alternator	3	306 659 R1	PULLEY, generator (used with standard generator)
4	678 030 C1	PULLEY, alternator 3/8" NUT 3/8 x 3-1/4" hex-hd cap SCREW 3/8" lock WASHER	4	306 658 R1	BELT, generator REGULATOR, voltage (for components see list of parts under details of "Voltage Regulator") 1/4NF NUT 1/4NF x 1" hex-hd cap SCREW (3) 1/4NF x 1-1/4" hex-hd cap SCREW 1/4" lock WASHER (4)
5	384 996 R1	SPACER, bracket	5	306 657 R1	BRACKET, generator 5/16 x 1" hex-hd cap SCREW (2) 5/16" lock WASHER (2) WASHER
6	384 995 R1	BRACKET, alternator 5/16 x 1-3/4" hex-hd cap SCREW 3/8 x 1-3/4" hex-hd cap SCREW 5/16" lock WASHER 3/8" lock WASHER	6	62 493 D	100 770 H CLIP, cable harness (on generator bracket)
7	670 572 C1	BELT, alternator "V"	7	23 316 H	23 316 H SPACER, generator front mounting bolt (used with high output generator)
			8	612 559 C91	ATTACHMENT, high output generator (consists of GENERATOR (Delco-Remy No. 1105134), PULLEY, 322 760 R1, REGULATOR (Delco-Remy No. 1119247) and SPACER, 23 316 H) (See NOTE 3)

NOTE 3 - Field Application - Order Through Service Parts Channels.



## ELECTRICAL SYSTEM



REF. DELCO-REMY  
NO. NUMBER


DESCRIPTION

MASTER SWITCH  
(Delco-Remy)


REF. DELCO-REMY  
NO. NUMBER

DESCRIPTION

LIGHTING SWITCH  
(Delco-Remy)

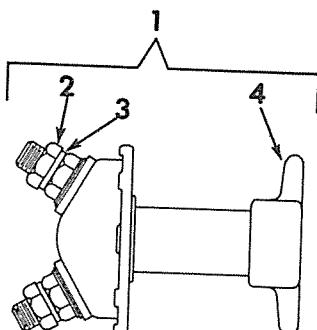

IPA-60759

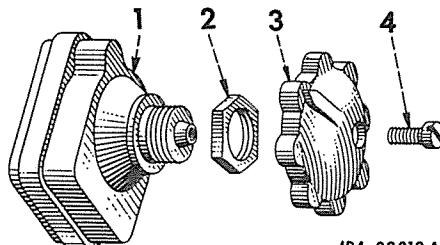


IPA-32313A

1	1996495	SWITCH ASSY, master (order 1996496)
1	1996496	SWITCH ASSY, master (will work for 1996495)
	25 519 R1	1/4" NUT
	25 222 R1	1/4 x 3/4" hex-hd cap SCREW
	115 109	1/4" lock WASHER
2	453787	NUT, terminal (2)
3	9 421 425	WASHER, terminal nut lock (2)
4	1886953	KNOB, control (part of SWITCH ASSY, 199 6495)
	132110	SCREW, knob attaching
	364 910 R1	COVER, terminal (Not Furnished As Part of Master SWITCH ASSY.)
	9422354	WASHER, knob attaching screw lock

1	1994050	SWITCH ASSY, lighting 11/16" internal-tooth lock WASHER
2	1882012	NUT, lighting switch mounting
3	1882013	KNOB, lighting switch
4	1864099	SCREW, lighting switch knob mounting No. 8 cd-pltd lock WASHER

## MASTER SWITCH LOCK

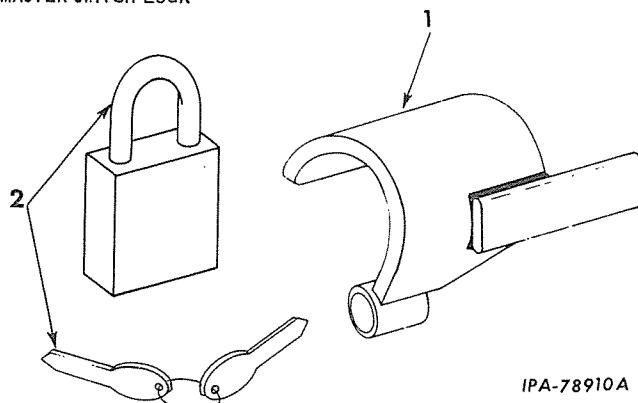


IPA-78910A


1	314 751 R31	LOCK, master switch
	109 084	1/4" NUT
	179 800	1/4 x 1-3/8" hex-hd cap SCREW
	103 319	1/4" lock WASHER
	16 558 R1	1/4" flat WASHER (2)
2	650 382 C91	PADLOCK/W/KEYS
	16 558 R1	WASHER, master switch lock flat
	314 753 R1	SPACER, master switch lock

## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
HEADLIGHT AND REAR LIGHT (Guide Lamp)			BRACKETS AND SWIVELS FOR HEADLIGHTS AND REAR LIGHTS (Part of Electric Lighting Attachments, 334 787 R91 and 624 385 C91)		

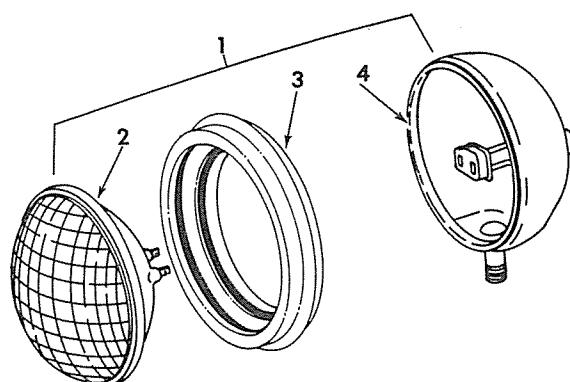

IPA-67725

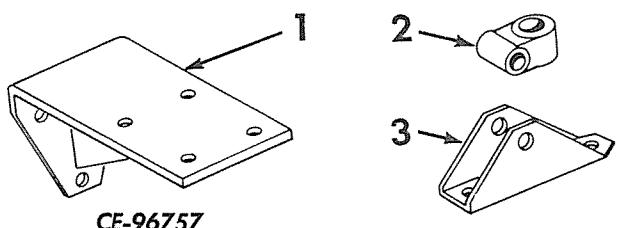


CE-96757

1	338 826 R91	HEADLIGHT and REAR LIGHT ASSY (optional with LIGHT, 303 704 R92) (899600) (3) 1/2NF NUT (3) 1/2" lock WASHER (3) WASHER, headlight upper (2) WASHER, headlight lower (2)
2	272 061 R91	UNIT, sealed (12 volt) (4478) (3)
3	338 896 R1	RETAINER, sealed unit (5932776) (3)
4		BODY (order 338 826 R91) (3)

1	330 713 R11	BRACKET, headlight mounting (2) 1/2 x 1" hex-hd cap SCREW (6) 1/2" lock WASHER (6)
2	303 706 R1	SWIVEL, rear light 1/2NF NUT 1/2NF x 2-1/2" hex-hd cap SCREW 1/2" lock WASHER
3	281 923 R1	BRACKET, rear light mounting 1/2NF NUT (2) 1/2NF x 1" hex-hd cap SCREW (2) 1/2" lock WASHER (2)


HEADLIGHT AND REAR LIGHT  
(Hobbs)

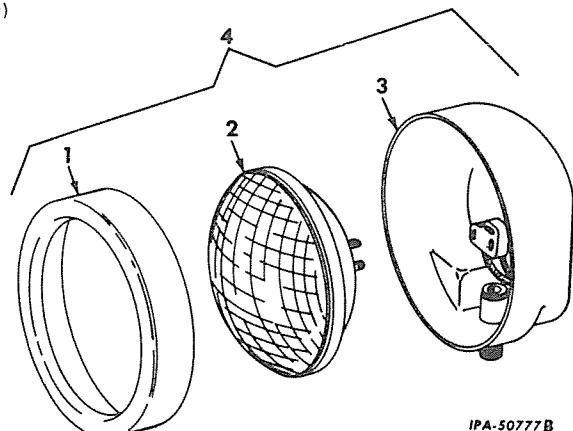

IPA-50777B

1	313 957 R1	RETAINER, lamp (4491) (3)
2	272 061 R91	UNIT, sealed (4478) (3)
3		SHELL (order 303 704 R92) (3)
4	303 704 R92	HEADLIGHT and REAR LIGHT ASSY (optional with LIGHT, 338826 R91) (MI 1498) (3) 1/2NF NUT (3) 1/2" lock WASHER (3) WASHER, headlight (upper) (2) WASHER, headlight (lower) (2)

HEADLIGHT BRACKET  
(Part of Electric Lighting Attachment, 334 787 R91)


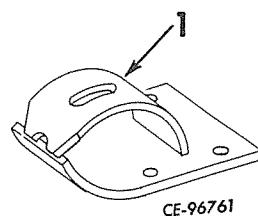


CE-96761

1	331 145 R91	BRACKET, headlight mounting (2) 7/16" NUT (8) 7/16 x 1-1/4" hex-hd cap SCREW (8) 7/16" lock WASHER (8)
---	-------------	---

## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
		HEADLIGHT BRUSH GUARD			REAR LIGHT BRUSH GUARD

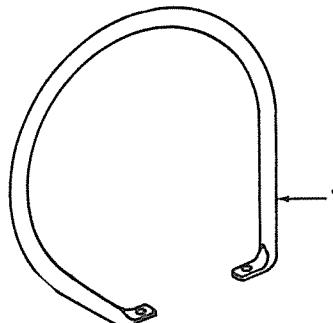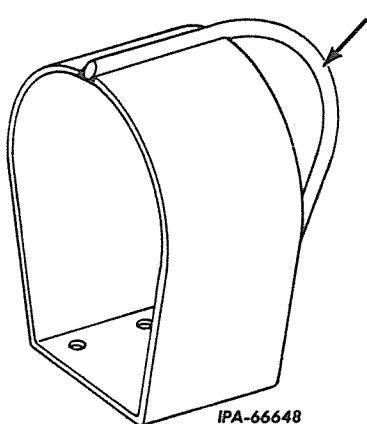

Parts without letters after the description indicates the part is used for all attachments listed below: Letters "A" and "B" are used to identify separate attachments.

- |   |             |   |  |
|---|-------------|---|--|
| A | 331 238 R91 | ATTACHMENT, headlight brush guard<br>(see NOTE 3)                                     | L-150G 6519 to 15522<br>L-150P 6501 to 15522 |
| B |             | GUARD, headlight brush (service for loaders equipped w/ATTACHMENT, 624 385 C91)       |  |
| 1 | 330 714 R11 | HEADLIGHT, brush guard (2)<br>7/16 x 1" hex-hd cap SCREW (8)<br>7/16" lock WASHER (8) |  |

Parts without letters after the description indicates the part is used for all attachments listed below: Letters "A" and "B" are used to identify separate attachments.

- |   |             |   |  |
|---|-------------|---|--|
| A | 277 457 R91 | ATTACHMENT, rear light brush guard<br>(see NOTE 3)  | L-150G 6519 to 15522<br>L-150P 6501 to 15522 |
| B |             | GUARD, rear light brush (service for loaders equipped w/ATTACHMENT, 624 385 C91)                        |  |
| 1 | 281 268 R2  | GUARD, rear light brush<br>1/2NF NUT (2)<br>1/2NF x 1-3/4" hex-hd cap SCREW (2)<br>1/2" lock WASHER (2) |  |



NOTE 3 - Field Application - Order Through Regular Service Parts Channels.

**MEMORANDA**



## ELECTRICAL SYSTEM

REF. NO.	DELCO-REMY NUMBER	DESCRIPTION	REF. NO.	DELCO-REMY NUMBER	DESCRIPTION
CRANKING MOTOR (Delco-Remy)			CRANKING MOTOR - Continued (Delco-Remy)		

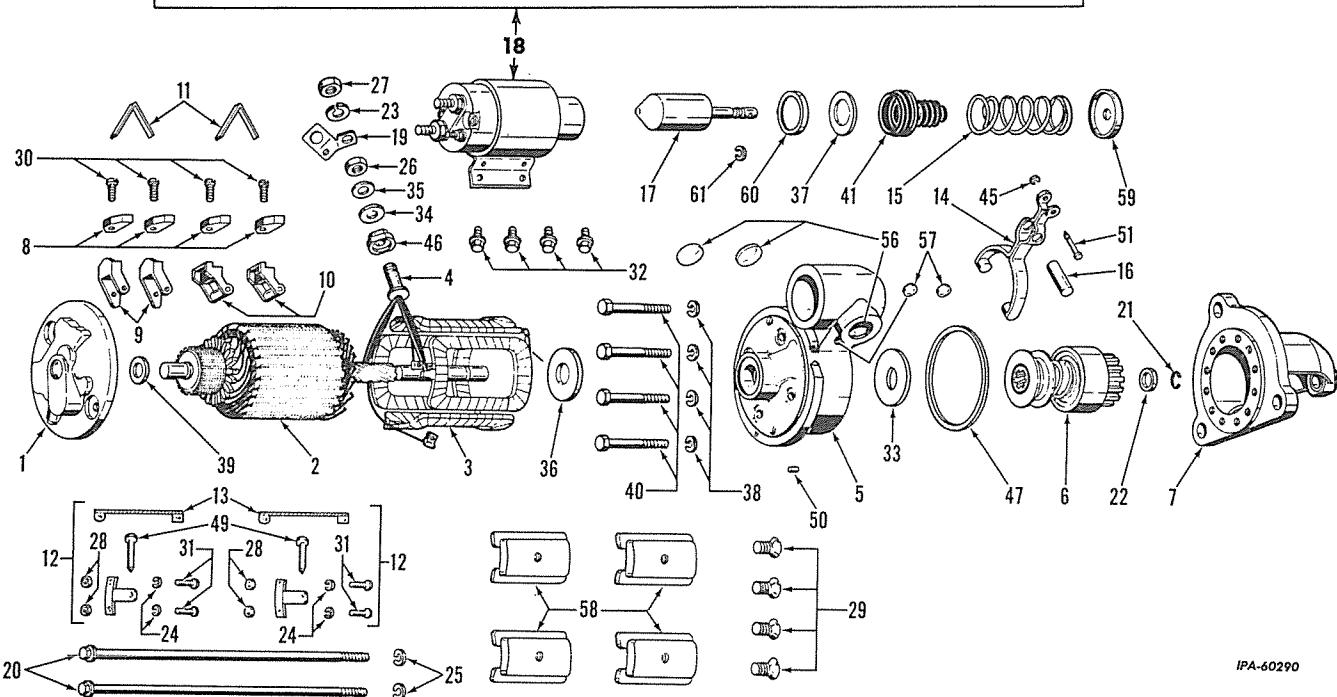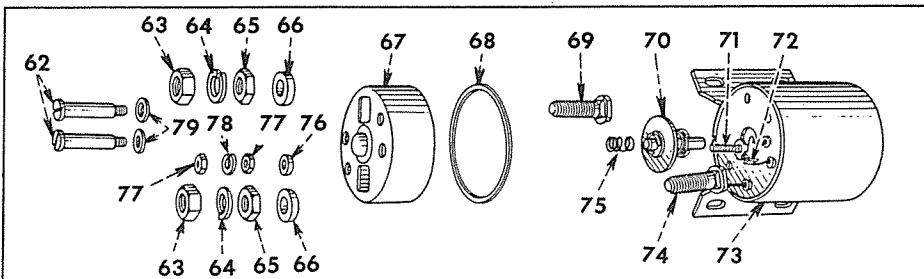

IPA-60290

Parts without letters after the description indicates the part is used for all cranking motor assemblies listed below: Letters "A" and "B" are used to identify separate cranking motor assemblies.

- |   |         |   |   |         |  |
|---|---------|---|---|---------|--|
|   |         | Parts without letters after the description indicates the part is used for all cranking motor assemblies listed below: Letters "A" and "B" are used to identify separate cranking motor assemblies. | 2 | 1946391 | ARMATURE (long shaft) (Cranking Motor A)   |
| A | 1113626 | MOTOR ASSY, cranking (12 volt) (with long shaft armature) (order cranking MOTOR ASSY w/short shaft ARMATURE)<br>3/8 x 1-3/8" hex-hd cap SCREW (3)<br>3/8" lock WASHER (3)                           | 2 | 1948999 | ARMATURE (short shaft) (Cranking Motor B)  |
|   |         |   | 3 | 1946386 | COIL w/STUD, 1945626, field (4 coils)  |
|   |         |   | 4 | 1945626 | STUD, terminal   |
| B | 1113626 | MOTOR ASSY, cranking (12 volt) (with short shaft armature) (will work for cranking MOTOR ASSY w/long shaft ARMATURE)<br>3/8 x 1-3/8" hex-hd cap SCREW (3)<br>3/8" lock WASHER (3)                   | 5 | 1942241 | HOUSING ASSY, lever<br>(Composed of -<br>1 BUSHING 1933999<br>§1 HOUSING<br>1 PLUG 273913<br>1 PLUG 1948694<br>2 PLUG 9411375<br>1 WICK 1936465) |
| 1 | 1946555 | FRAME ASSY, commutator end (Cranking Motor A) BUSHING, 1872678, PLUG, 125947 and WICK, 1909654<br>(Composed of -<br>§1 FRAME  | 6 | 1941157 | DRIVE ASSY, motor<br>(Composed of -<br>1 BUSHING 37535<br>1 COLLAR 1904443<br>1 LOCKWIRE 1904436<br>1 SPRING 1932354)                            |
| 1 | 1945617 | FRAME ASSY, commutator end (Cranking Motor B)<br>(Composed of -<br>1 BUSHING 1872678<br>§1 FRAME<br>1 PLUG 125947<br>1 PLUG 810819<br>1 WICK 1909654)   |   |         | § - Not Furnished Separately.  |
|   |         |   |   |         | Always Give CRANKING MOTOR Number When Ordering Parts.   |

<sup>s</sup> - Not Furnished Separately.

Always Give CRANKING MOTOR Number When Ordering Parts.

## ELECTRICAL SYSTEM



REF. NO.	DELCO-REMY NUMBER	DESCRIPTION	REF. NO.	DELCO-REMY NUMBER	DESCRIPTION
CRANKING MOTOR - Continued (Delco-Remy)					
7	1946383	HOUSING w/BUSHING, 1943628, PLUG, 125947 and WICK, 1909654 drive end	37	1942259	WASHER, retainer spring
8	1906987	BRUSH (4)	38	120214	WASHER, lock (4)
9	1926617	HOLDER, brush ground (2)	39	833602	WASHER, commutator end space
10	1926618	HOLDER, brush insulated (2 for Cranking Motor A)	40	122077	BOLT (4)
10	1950546	HOLDER, brush insulated (2 for Cranking Motor B)	41	1942257	BOOT
11	1945620	SPRING, brush (2)	45	1938376	RING, snap (lever attaching pin)
12	1945923	PACKAGE, brush support (Consists of - 1 LEAD 1930694 2 NUT 120361 1 PIN 1938058 2 RIVET 1945630 2 SCREW 445639 2 WASHER 120217 )	46	1931783	BUSHING, terminal stud insulating (Not Used)
13	1930694	LEAD, ground	47	1938058	PIN, brush holder
14	1942245	LEVER, shift	49	809593	PIN, dowel (drive housing)
15	1942260	SPRING, lever	50	1942253	PIN, lever attaching
16	1942255	SHAFT, lever	51	9411375	PLUG, expansion (lever housing 1-3/16" dia) (2)
17	1942250	PLUNGER	56	1948694	PLUG, expansion (lever housing 1/2" dia)
18	1119833	SWITCH, solenoid (Cranking Motor A)	57	1934478	SHOE, pole (4)
18	1119890	SWITCH, solenoid (Cranking Motor B)	58	1942282	RETAINER, spring (13/32" hole)
19	1946394	CONNECTOR, switch	59	1942256	RETAINER, spring (1-13/64" hole)
20	1883865	BOLT, thru (2)	60	9415234	RING, snap (spring retainer)
21	1928022	RING, pinion stop retaining	61	132903	SCREW, cover attaching (2)
22	1928021	COLLAR, pinion stop	62	134566	NUT, terminal stud (1/4" thick) (2)
23	120381	WASHER, terminal stud lock (Cranking Motor A)	63	453290	WASHER, terminal stud lock (2)
23	9421425	WASHER, terminal stud lock (Cranking Motor B)	64	1904419	NUT, terminal stud (5/32" thick) (2)
24	453435	WASHER, brush support attaching screw lock (2)	65	1927345	NUT, terminal stud insulating (2 for Cranking Motor A)
25	120214	WASHER, thru bolt lock (2)	66	1931818	COVER (Cranking Motor A)
26	805258	NUT, terminal stud (5/32" thick)	67	1952122	COVER (Cranking Motor B)
27	134566	NUT, terminal stud (1/4" thick)	68	1930629	GASKET, cover (Cranking Motor A)
28	120361	NUT, brush support attaching screw (2)	68	1957650	GASKET, cover (Cranking Motor B)
29	1843646	SCREW, pole shoe (4 for Cranking Motor A)	69	1927344	STUD, battery terminal (Cranking Motor A)
29	1913960	SCREW, pole shoe (4 for Cranking Motor B)	69	1950061	STUD, battery terminal (Cranking Motor B)
30	9413326	SCREW, brush attaching (4)	70	1912059	CONTACT and ROD, push (Cranking Motor A)
31	445639	SCREW, brush support attaching (2)	70	1952563	CONTACT and ROD, push (Cranking Motor B)
32	1916529	SCREW, switch attaching (4)	71	1837533	STUD, terminal (Cranking Motor A)
33	821453	WASHER, brake (between lever housing and motor drive housing)	71	1950069	STUD, terminal (Cranking Motor B)
34	1857268	WASHER, terminal stud insulating	72	1937381	CLIP, terminal
35	805790	WASHER, terminal stud	73	1931813	CASE and COIL (Cranking Motor A)
36	1946395	WASHER, space (between lever housing and armature)	73	1956428	CASE and COIL (Cranking Motor B)
			74	1931814	STUD, motor terminal (Cranking Motor A)
			74	1956427	STUD, motor terminal (Cranking Motor B)
			75	1853342	SPRING, contact return
			76	1923935	WASHER, terminal insulating

Always Give CRANKING MOTOR NUMBER When Ordering Parts.



## ELECTRICAL SYSTEM



REF. NO.	DELCO-REMY NUMBER	DESCRIPTION
----------	-------------------	-------------

CRANKING MOTOR - Continued  
(Delco-Remy)

77	453996	NUT, terminal stud (2)
78	1915334	WASHER, terminal stud lock
79	1923935	WASHER, cover attaching screw (2 for Cranking Motor A)
	37535	BUSHING, motor drive
	1872678	BUSHING, commutator end frame
	1933999	BUSHING, lever housing
	1943628	BUSHING, drive end
	1904443	COLLAR, motor drive
	1913534	INSULATION, field coil (2)
	125947	PLUG, pipe (commutator end frame)
	125947	PLUG, pipe (drive end)
	273913	PLUG, pipe (lever housing 15/64" dia)
	810819	PLUG, expansion (commutator end frame) (Cranking Motor B)
	1945630	RIVET, brush support (2)
	1932354	SPRING, motor drive
	1909654	WICK, commutator end
	1909654	WICK, drive end
	1936465	WICK, lever housing
	1904436	WIRE, lock
	1950064	WASHER, sealing, terminal stud (Cranking Motor B)
	1950071	WASHER, terminal stud

Always Give CRANKING MOTOR NUMBER When Ordering Parts.

MEMORANDA




## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

ELECTRIC STARTING AND LIGHTING  
L150G 6519 to 14843  
L150P 6501 to 14843

ELECTRIC STARTING AND LIGHTING - Continued  
L150G 6510 to 14843  
L150P 6501 to 14843

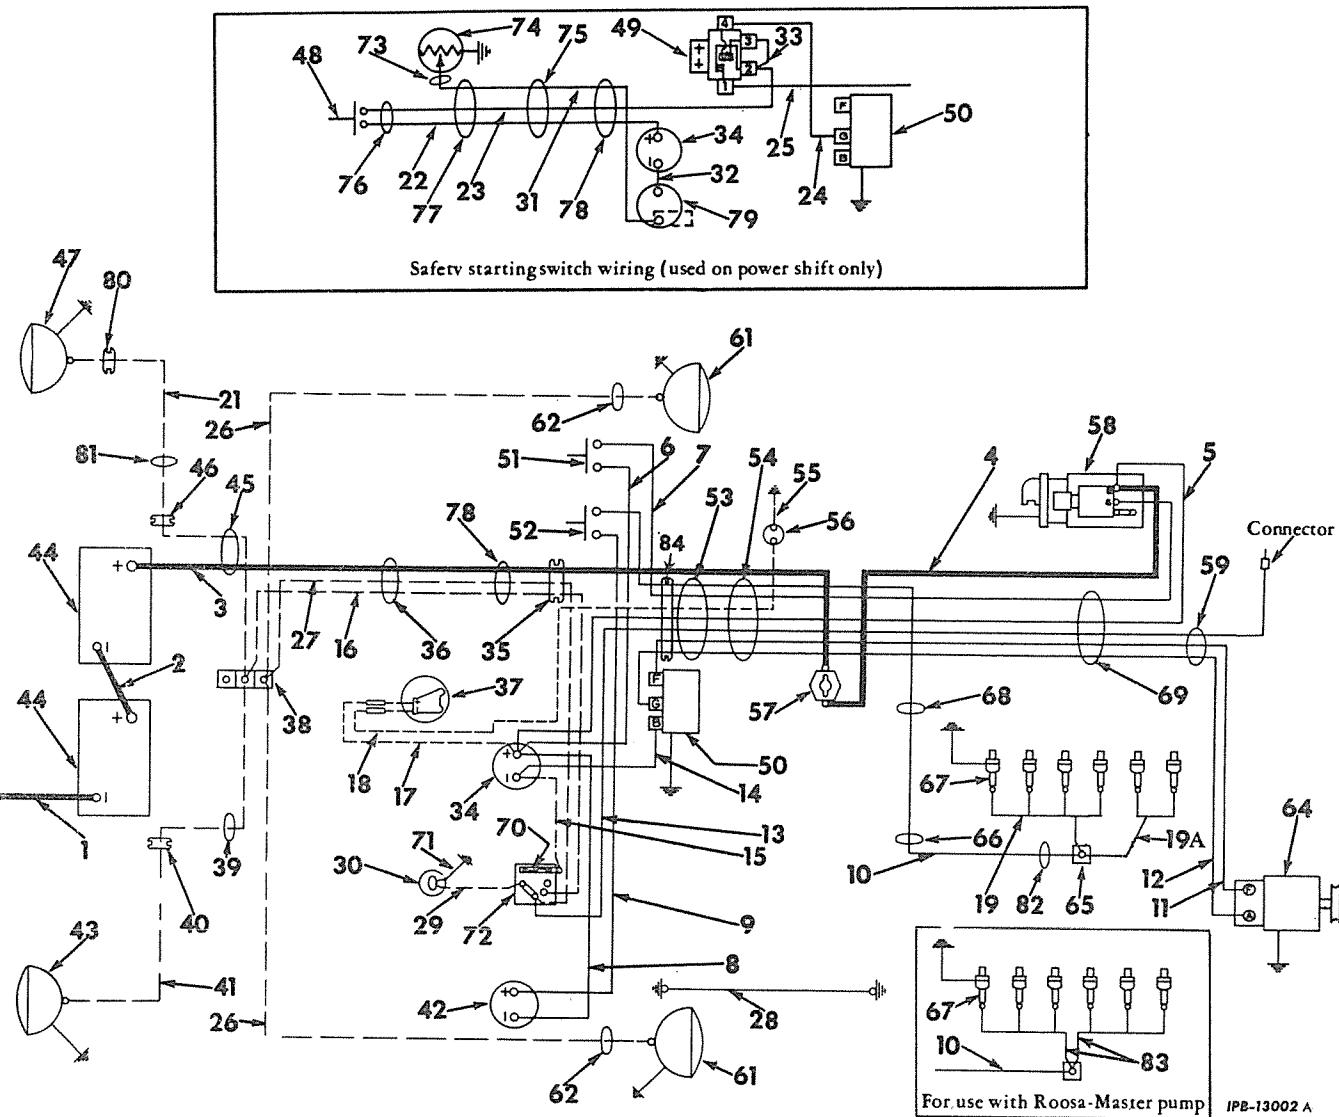

For use with Roosa-Master pump IPB-13002 A

1	330 823 R91	CABLE, battery to ground	8	278 209 R92	CABLE, minus (-) on glow plug meter to plus (+) on ammeter
	356 062 R91	1/2" lock WASHER			
2	266 854 R91	BOLT, battery cable	9	278 210 R91	CABLE, glow plug switch to plus (+) on glow plug meter
3	264 200 R91	CABLE, battery to master switch	10	325 585 R91	CABLE, glow plug switch to glow plug junction block
4	345 526 R91	CABLE, master switch to solenoid			CABLE, "F" on generator to "F" on regulator (blue) (order HARNESS, 330 825 R92)
5		CABLE, "B" on solenoid to plus (+) on ammeter (red) (order HARNESS, 330 825 R92)	11		CABLE, "A" on generator to "G" on regulator (yellow) (order HARNESS, 330 825 R92)
6	359 374 R91	CABLE, plus (+) on ammeter to starting switch (used on manual shift loaders)			NOTE 4 - Reference Nos. 7 And 25 Are The Same Cable In HARNESS, 330 825 R92, But Are Connected At Different Points For Use On Manual Shift Loaders And Power Shift Loaders.
7		CABLE, starting switch to "S" on solenoid (gray) (used on manual shift loaders) (order HARNESS, 330 825 R92) (see NOTE 4)			


**ELECTRICAL SYSTEM**


REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION
<b>ELECTRIC STARTING AND LIGHTING - Continued</b>					
L150G	6519 to 14843		L150G	6519 to 14843	
L150P	6501 to 14843		L150P	6501 to 14843	
13		CABLE (black) (not used) (end terminals to be taped securely to HARNESS, 330 825 R92)	33		CABLE, terminal No. 2 to terminal No. 3 (order HARNESS, 334 701 R91 or 703 375 C1)
14	359 437 R91	CABLE, minus (-) on ammeter to "B" on regulator	34		AMMETER (listed and illustrated with "Instruments and Instrument Panel")
15	30 436 DA	CABLE, minus (-) on ammeter to fuse on light switch (part of electric light ATTACHMENT, 334 787 R91)	35	142 350	GROMMET, main harness (on dash) (2) (2) L-150P 6501 to 14047 (2) L-150G 6519 to 14047 (1) L-150P 14049 to 14843 (1) L-150G 14049 to 14843
16	358 581 R91	CABLE, light switch to rear light junction block (part of electric lighting ATTACHMENT, 334 787 R91)	36	263 515 R91	CLIP, cable (on gear shift housing) (used on gear drive loaders)
17	271 065 R91	CABLE, plus (+) on ammeter to plus (+) on hourmeter	37		HOURMETER (listed and illustrated with "Instruments and Instrument Panel" and "Electric Hourmeter")
18	305 366 R91	CABLE, minus (-) on hourmeter to engine oil pressure switch	38	300 559 R91	BLOCK, rear light junction (part of electric lighting ATTACHMENT, 334 787 R91) No. 10NF NUT (2) No. 10NF x 5/8" slt-rd-hd SCREW (2) No. 10 lock WASHER (2)
19	319 966 R91	HARNESS, glow plug (rear) (for units equipped with International R. D. fuel injection pump)	42		METER, glow plug (listed and illustrated with "Instruments and Instrument Panel")
19A	320 150 R91	HARNESS, glow plug (front) (for units equipped with International R. D. fuel injection pump)	44		BATTERY (6 volt) (dry charged) (Prestolite 2A9Y) (2)
21	358 563 R91	CABLE, rear light to junction block (part of electric lighting ATTACHMENT, 334 787 R91)	45	267 788 R91	CLIP, rubber covered cable (on LH seat side sheet)
22		CABLE, plus (+) on ammeter to starting switch (green) (used on power shift loaders) (order HARNESS, 334 701 R91 or 703 375 C1)	46	112 734	GROMMET, rear light (on LH seat side sheet) (part of electric lighting ATTACHMENT, 334 787 R91)
23		CABLE, starting switch to "B" on starting relay (gray) (used on power shift loaders) (order HARNESS, 334 701 R91 or 703 375 C1)	47	303 704 R92	REAR LIGHT ASSY, (Hobbs) (optional with LIGHT, 338 826 R91) (for components see list of parts under details of "Headlight and Rear Light") (part of electric lighting ATTACHMENT, 334 786 R91)
24	358 588 R91	CABLE, "KD" on relay to "G" on regulator (used on power shift loaders)	47	338 826 R91	REAR LIGHT ASSY, (guide lamp) (optional with LIGHT, 303 704 R92) (for components see list of parts under details of "Headlight and Rear Light") (part of electric lighting ATTACHMENT, 334 787 R91)
25		CABLE, "S" on starting relay to "S" on solenoid (gray) (used on power shift loaders) (order HARNESS, 330 825 R92) (see NOTE 4)	48	700 395 C91	SWITCH w/CAP, 702 268 C1, starting (used on power shift loaders) (together with BRACKET, 700 393 C1 will work for SWITCH 347 906 R91, 334 702 R91 and 606 289 C91)
26	316 647 R91	CABLE, junction block to headlights (part of electric lighting ATTACHMENT, 334 787 R91) (2)	700 393 C1		BRACKET, starting switch mounting (used only w/SWITCH 700 393 C91) (*)
27	277 460 R91	CABLE, light switch to junction block (for headlights) (part of electric lighting ATTACHMENT, 334 787 R91)	12 935 R1		BOLT (2)
28	274 304 R91	CABLE, instrument panel ground (oil pressure gauge to relay mounting bolt) 1/4 x 3/4" hex-hd cap SCREW 1/4" internal-external lock WASHER No. 10NF NUT No. 10 internal-external lock WASHER (2)	702 268 C1		CAP and FACE NUT (used only with SWITCH 700 395 C91)
29		(For instrument panel ground on dash relay mounting) (On gauge for panel grounding cable)	49		RELAY, starting (used on power shift loaders) (Delco-Remy No. 1116963) 1/4" NUT (2) 1/4 x 1/2" hex-hd cap SCREW 1/4" internal-external tooth lock WASHER (2)
30		CABLE, light switch to instrument panel light (part of instrument panel LIGHT)	50		REGULATOR ASSY, voltage (for components see list of parts under details of "Voltage Regulator")
30		PACKAGE, panel light field service (part of electric lighting ATTACHMENT, 334 787 R91) (Listed and illustrated w/INSTRUMENT and INSTRUMENT PANEL)	51		SWITCH, starting (used on manual shift loaders) (Delco-Remy No. 1996097)
31		CABLE, terminal with tag on clutch pressure gauge to clutch pressure sending unit (purple) (order HARNESS, 334 701 R91) (used on power shift loaders)	52		SWITCH, glow plug (Delco-Remy No. 1996097)
32	358 584 R91	CABLE, negative terminal on ammeter to clutch pressure gauge (used on power shift loaders) (used w/GAUGE, 338 977 R92)	53	103 213 H	CLIP, main harness (on RH bottom bolt of governor control ratchet)
NOTE 4 - Reference Nos. 7 And 25 Are The Same Cable In HARNESS, 330 825 R92, But Are Connected At Different Points For Use On Manual Shift Loaders And Power Shift Loaders. * - Also listed and illustrated with "Gear Selector Hand Lever."					

## ELECTRICAL SYSTEM

PRINTED IN UNITED STATES OF AMERICA  
(Rev. No. 6 3-69)

## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

**ELECTRIC STARTING AND LIGHTING - Continued**

L150G 6519 to 14843

L150P 6501 to 14843


- |             |   |
|-------------|---|
| 62 302 D    | CLIP, cable (junction block to headlight) (8)   |
| 88 398      | CLIP, dash harness (mount on engine side of dash with lower LH regulator bolt)<br>1/4NF NUT<br>1/4" lock WASHER             |
| 263 514 R91 | CLIP, rubber covered cable (on rear light bracket bolt) (part of electric lighting ATTACHMENT, 334 787 R91)                 |
| 362 120 R11 | CLIP, rubber covered cable (on seat side sheet rear upper bolt) (part of electric lighting ATTACHMENT, 334 787 R91)         |
| 117 962     | GROMMET, LH rear light cable  |
| 118 833     | GROMMET, starter safety switch, pressure switch and glow plug cable (on dash)   |
| 330 825 R92 | HARNESS, main cable (consists of Ref. Nos. 5, 7, 11, 12, 13 and 25) (see NOTE 4)  |
| 334 701 R91 | HARNESS, safety starting (consists of Ref. Nos. 22, 23, 31 and 33) (used on power shift loaders) (used w/GAUGE 338 977 R92) |
| 703 375 C1  | HARNESS, starting safety switch (consists of Nos. 22, 23 and 33) (used on power shift tractors) (used w/GAUGE, 703 232 C1)  |

NOTE 4 - Reference Nos. 7 And 25 Are The Same Cable In HARNESS, 330 825 R92, But Are Connected At Different Points For Use On Manual Shift Loaders And Power Shift Loaders.

## ELECTRICAL SYSTEM

ELECTRICAL STARTING AND LIGHTING  
L150G 14844 Up  
L150P 14844 Up

ELECTRICAL STARTING AND LIGHTING - Continued  
L150G 14844 Up  
L150P 14844 Up

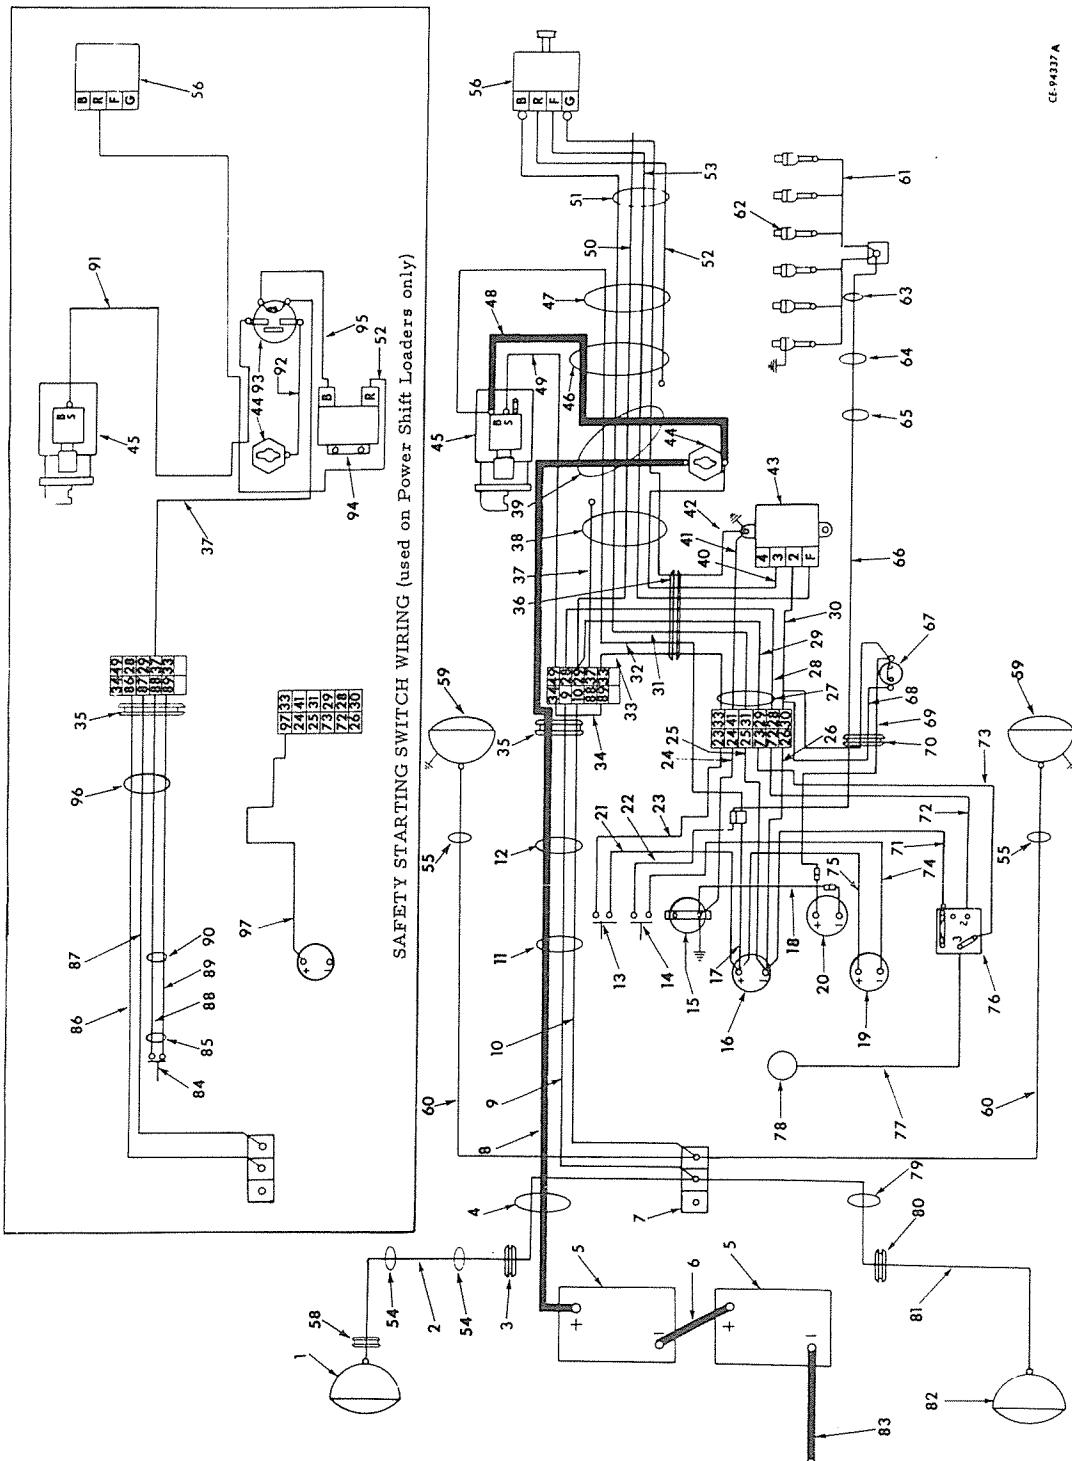

## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
		ELECTRIC STARTING AND LIGHTING			ELECTRIC STARTING AND LIGHTING
L150G	14844 Up		L150G	14844 Up	
L150P	14844 Up		L150P	14844 Up	
1		REAR LIGHT ASSY (for components see list of parts under details of "Headlight, Rear Light and Auxiliary Rear Light") (part of Electric Lighting ATTACHMENT 334 787 R91 and 624 385 C91)	24		CABLE, engine oil pressure gauge to dash connector (ground) (Order HARNESS 624 226 C1)
2	358 563 R91	CABLE, rear light to junction block (part of Electric Lighting ATTACHMENT 334 787 R91)	25		CABLE, negative terminal on ammeter to dash connector (brown) (Order HARNESS 624 226 C1)
2	624 389 C1	CABLE, rear junction block to rear light (part of Electric Lighting ATTACHMENT 624 385 C91)	26		CABLE, negative terminal on ammeter to dash connector (yellow) (Order HARNESS 624 226 C1)
3	112 734	GROMMET, rear light (part of Electric Lighting ATTACHMENT 334 787 R91)	27	88 398 R1	CLIP, on RH top of dash (on RH relay mounting bolt hole) 1/4x1 1/2" hex-hd cap SCREW 1/4" lock WASHER 1/4" NUT
4	267 788 R91	CLIP, rubber covered cable (on LH seat side sheet)	28		CABLE, dash connector to safety switch connector (rear lamp) (dark blue) (Order HARNESS 624 225 C1)
5		BATTERY (6 volt) (Prestolite 3A9Y) (2)	29		CABLE, dash connector to safety switch connector (front lamps) (dark green) (Order HARNESS 624 225 C1)
6	266 854 R91	CABLE, battery to battery	30		CABLE, number two terminal on regulator to engine oil pressure switch (light blue) (Order HARNESS 624 225 C1)
7	300 559 R91	BLOCK, rear light junction	31		CABLE, dash connector to "B" terminal on alternator (brown) (Order HARNESS 624 225 C1)
8	264 200 R91	CABLE, battery to master switch	32		CABLE, main harness line connector to "B" terminal on solenoid (red) (Order HARNESS 624 225 C1)
9		CABLE, safety switch connector to rear lamp junction block (Dark Blue) (Order HARNESS 624 228 C1) (Used on manual shift loaders)	33		CABLE, dash connector to safety switch connector (white) (Order HARNESS 624 225 C1)
10		CABLE, safety switch connector to front lamp junction block (Dark Green) (Order HARNESS 624 228 C1) (Used on manual shift loaders)	34		CABLE, safety switch terminals 32 to 44 (Order HARNESS 624 228 C1) (used on manual shift loaders)
11	267 787 R91	CLIP, cable (on gear shift housing)	35	142 350	GROMMET, harness (on lower dash)
12	267 788 R91	CLIP, rubber covered cable (on engine clutch cover LH bolt)	36	52 062 D	GROMMET, (on upper portion of dash LH)
13		SWITCH, starting (Delco-Remy No. 1996097) (Used on manual shift loaders)	37		CABLE, magnetic switch to safety switch connector (white) (Order HARNESS 624 225 C1) (used on power shift loaders)
14		SWITCH, glow plug (Delco-Remy No. 1996097)	37		CABLE, (not used on manual shift loaders and should be taped securely to harness)
15		GAUGE, engine oil pressure (listed and illustrated with "Instruments and Instrument Panel")	38	88 398 R1	CLIP, dash harness (mount on engine side of dash with lower LH regulator bolt)
16		AMMETER (listed and illustrated with "Instruments and Instrument Panel")	39	604 375 C1	CLIP, cable harness (mount on LH bottom of dash) 1/4" NUT 1/4x1-1/4" hex-hd cap SCREW 1/4" lock WASHER 1/4x1-1/2"x18 ga. WASHER
17		CABLE, positive terminal on ammeter to instrument panel harness line connector (Order HARNESS 624 226 C1)	40		CABLE, number three terminal on regulator to master switch (orange) (Order HARNESS 624 225 C1)
18	271 065 R91	CABLE, negative terminal on hour-meter to engine oil pressure gauge	41		CABLE, dash connector to mounting bolt of regulator (Order HARNESS 624 225 C1)
19		METER, glow plug (listed and illustrated with "Instruments and Instrument Panel")			(*) - Reverence Nos. 23 and 97 are the same cable in HARNESS 624 226 C1 but are connected at different points for use on manual shift and power shift loaders.
20		HOURMETER, electric (for components see list of parts under details of "Electric Hourmeter")			
21	359 374 R91	CABLE, positive terminal on ammeter to starting switch (used on manual shift loaders)			
22		CABLE, glow plug switch to line connector (Order HARNESS 624 226 C1)			
23		CABLE, starting switch to dash connector (white) (Order HARNESS 624 226 C1) (used on manual shift loaders) (*)			

## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
ELECTRIC STARTING AND LIGHTING - Continued			ELECTRIC STARTING AND LIGHTING - Continued		
L150G	14844 Up		L150G	14844 Up	
L150P	14844 Up		L150P	14844 Up	
42	CABLE, "G" terminal on alternator to mounting bolt of REGULATOR (Order HARNESS 624 225 C1)		62		PLUG, glow (listed and illustrated with "Injector Nozzle, Precombustion Chamber and Glow Plug")
43	REGULATOR ASSY., (for components see list of parts under details of "Voltage Regulator Assy.")		63	263 717 R91	CLIP, cable (on forward mounting cap screw of fifth nozzle)
44	SWITCH, master (for components see list of parts under details of "Master Switch")		64	263 717 R91	CLIP, cable (on cylinder head RH side rear upper bolt)
45	MOTOR ASSY., cranking (for components see list of parts under details of "Cranking Motor")		65	263 717 R91	CLIP, cable (on RH upper bolt of dash support)
364 910 R1	COVER, terminal (on solenoid terminals)		66	624 232 C1	CABLE, line connector to glow plug junction block
46	CLIP, (welded on LH bottom of dash)		67	132 244 R91	SWITCH, engine oil pressure
47	264 196 R91 CLIP, rubber covered cable (on intake manifold bolt third from rear)		68		CABLE, dash connector to engine oil pressure switch (yellow) (Order HARNESS 624 225 C1)
48	345 526 R91 CABLE, master switch to solenoid		69	271 066 R92	CABLE, positive terminal on hour meter to engine oil pressure switch
49	CABLE, "S" terminal on solenoid to safety switch connector (white) (Order HARNESS 624 225 C1)		70	118 833	GROMMET (on upper portion of dash RH)
50	CABLE, (dark green) (Not used on loaders and should be taped securely back to harness.)		71	30 436 DA	CABLE, negative terminal on ammeter to fuse terminal on light switch
51	264 196 R91 CLIP, rubber covered cable (on engine intake manifold bolt) (fifth from front)		72		CABLE, number two terminal on light switch to dash connector (rear lamps) (dark blue) (Order HARNESS 624 226 C1)
52	CABLE, "R" terminal on relay to "R" terminal on alternator (Order HARNESS 624 225 C1) (used on power shift loaders)		73		CABLE, light switch to dash connector (front lamps) (dark green) (Order HARNESS 624 226 C1)
52	CABLE, (not used on manual shift loaders and should be taped securely back to harness)		74	278 210 R91	CABLE, negative terminal on glow plug meter to glow plug switch
53	CABLE, "F" terminal on regulator to "F" terminal on alternator (light green) (Order HARNESS 624 225 C1)		75	278 209 R92	CABLE, positive terminal on ammeter to positive terminal on glow plug meter
54	264 186 R91 CLIP, rubber covered cable (on inside of front plate of hydro spring housing) (2)		76		SWITCH, light (for components see list of parts under details of "Lighting Switch")
55	263 514 R91 CLIP, rubber covered cable (on front lamps bracket rear inner bolt) (part of "Electric Lighting Attachment" 334 787 R91 and 624 385 C91) (2)		77		CABLE, light switch to instrument panel light (Order PACKAGE 603 467 C91)
56	ALTERNATOR ASSY., (for components see list of parts under details of "Alternator")		78	603 467 C91	PACKAGE, panel light field service (less bulb) (consists of Light, Grommet 273 406 R1 and Washer 273 405 R1)
58	117 962 GROMMET, LH rear lamp cable (on hydro spring housing) (Part of Electric Lighting ATTACHMENT 334 787 R91 and 624 385 C91)		79	362 120 R11	CLIP, auxiliary rear light cable (on RH seat side sheet) 3/8"NF NUT
59	HEADLIGHT ASSY., (for components see list of part details of "Headlight, Rear Light and Auxiliary Rear Light") (part of Electric Lighting ATTACHMENT 334 787 R91 and 624 385 C91) (2)		80	112 734	GROMMET, auxiliary rear light cable (on RH seat side sheet)
60	316 647 R91 CABLE, rear junction block to front lamps (part of Electric Lighting ATTACHMENT 334 787 R91 and 624 385 C91) (2)				(*) Reference Nos. 23 and 97 are the same cable in HARNESS 624 226 C1 but are connected at different points for use on manual shift and power shift loaders.
61	319 965 R91 HARNESS, glow plug cable (2)				



**ELECTRICAL SYSTEM**


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>ELECTRIC STARTING AND LIGHTING - Continued</b>			<b>ELECTRIC STARTING AND LIGHTING - Continued</b>		
L150G	14844 Up		L150G	14844 Up	
L150P	14844 Up		L150P	14844 Up	
81	358 563 R91	CABLE, auxiliary rear light to junction block	97		CABLE, positive terminal on ammeter to dash connector (white) (Order HARNESS 624 226 C1) (used on power shift loaders) (*)
82		REAR LIGHT ASSY., auxiliary (for components see list of parts under details of "Headlights, Rear Light and Auxiliary Rear Light")	334 787 R91		ATTACHMENT, electric lighting (see NOTE 3) L-150G 14844 to 15522 L-150P 14844 to 15522
83	330 823 R91	CABLE, battery ground strap (negative terminal on battery)		(Composed of -	
356 062 R91		BOLT, battery terminal 1/2" lock WASHER	1	BLOCK	300 559 R91
84	700 395 C91	SWITCH, w/CAP 702 268 C1 and PAMPHLET 1 085 291 R2, starting (used on power shift Loaders)	1	BRACKET	281 923 R1
	702 268 C1	CAP and FACE NUT	2	BRACKET	331 145 R91
85	263 513 R91	CLIP, starting switch harness (on lower front bolt of range selector bracket) (used on power shift loaders)	2	BRACKET	330 713 R11
86		CABLE, starting switch and lighting harness safety switch connector to rear lamp junction block (dark blue) (Order HARNESS 624 227 C1) (used on power shift loaders)	1	CABLE	30 436 DA
87		CABLE, starting switch and lighting harness safety switch connector to front lamp junction block (dark green) (Order HARNESS 624 227 C1) (used on power shift loaders)	1	CABLE	277 460 R1
88		CABLE, starting switch and lighting harness safety switch connector to safety starting switch (white) (Order HARNESS 624 227 C1) (used on power shift loaders)	2	CABLE	316 647 R91
89		CABLE, starting switch and lighting harness safety switch connector to safety starting switch (white) (Order HARNESS 624 227 C1) (used on power shift loaders)	1	CABLE	358 563 R91
90	362 120 R1	CLIP, starting switch harness (on lower front bolt of main frame regulator valve) (used on power shift loaders)	1	CABLE	358 581 R91
91	624 230 C1	CABLE, "S" terminal on solenoid to magnetic switch (used on power shift loaders)	8	CLIP	62 302 D
92	624 229 C1	CABLE, master switch to magnetic switch (used on power shift loaders)	1	CLIP	362 120 R1
93		SWITCH, magnetic (used on power shift loaders) (Delco-Remy No. 1114238) 1/4x1 1/2" hex-hd cap SCREW (2) 1/2" lock WASHER (2) 1/4" NUT (2)	3	CLIP	263 514 R91
94		RELAY, starting (used on power shift loaders) (Delco-Remy No. 1115885) 1/4x5 8/16" hex-hd cap SCREW (2) 1/4" NUT (2) 1/4" Int. tooth lock WASHER (2) 1/4" lock WASHER (2)	1	DRAWING	IZG 8744
95	624 231 C1	CABLE, "B" terminal on relay to magnetic switch (used on power shift loaders)	1	DRAWING	IZG 7053
96	263 515 R91	CLIP, cable (on steering clutch inspection cover) (used on power shift loaders)	1	FUSE	432 644
			1	GROMMET	112 734
			1	GROMMET	117 962
			1	KNOB	(Delco-Remy No. 1882013)
			3	LIGHT	303 704 R92
			1	NUT	(Delco-Remy No. 1882012)
			1	PACKAGE	603 467 C91
			1	SCREW	(Delco-Remy No. 1864099)
			1	SWITCH	(Delco-Remy No. 1994050)
			1	SWIVEL	303 706 R1
			2	WASHER	600 658 C1
			2	WASHER	446 229 )
			624 385 C91	ATTACHMENT, electric lighting (see NOTES 1 and 3)	L-150G 15523 up L-150P 15523 up
				(Composed of -	
			1	BRACKET	281 923 R1
			2	BRACKET	330 713 R11
			1	CABLE	624 389 C1
			2	CABLE	316 647 R91
			3	CLIP	263 514 R91
			1	GROMMET	117 962
			1	GUARD	281 268 R2
			2	GUARD	330 714 R11
			3	LIGHT	303 704 R92
			1	SWIVEL	303 706 R1)
			62 302 D	CLIP, cable (junction block to head light) (8)	
			88 398 R1	CLIP, (on RH mounting bolt of relay) (used on power shift tractors)	
			103 213 H	CLIP HARNESS (on Drott safety shield) 5 1/16 x 1-1/4" hex-hd cap SCREW 5 1/16" lock WASHER 5 1/16" NUT	
			112 745	GROMMET, harness (on dash) (used on power shift loaders)	
			624 225 C1	HARNESS, main cable (consists of Ref. 28 thru 33, 37, 40 thru 42, 49, 50, 52, 53 and 68)	
				#12 NUT	
				#12 lock WASHER	
				#10 NUT	
				#10 lock WASHER	
			624 226 C1	HARNESS, instrument cable (consists of Ref. Nos. 17, 22 thru 26, 72 and 73)	
			624 228 C1	HARNESS, lighting cable (consists of Ref. Nos. 9, 10 and 34) (used on manual shift loaders)	
			624 227 C1	HARNESS, starting switch and lighting (consists of Ref. Nos. 86, 87, 88 and 89) (used on power shift loaders)	
				NOTE 1 - Factory Application - Order On Machine Order Form.	
				NOTE 3 - Field Application - Order Through Regular Service Parts Channels.	
				(*) - Reference Nos. 23 and 97 are the same cable in HARNESS 624 226 C1 but are connected at different points for use on manual shift and power shift loaders.	

## ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------


ELECTRIC HOURMETER  
(Hobbs)

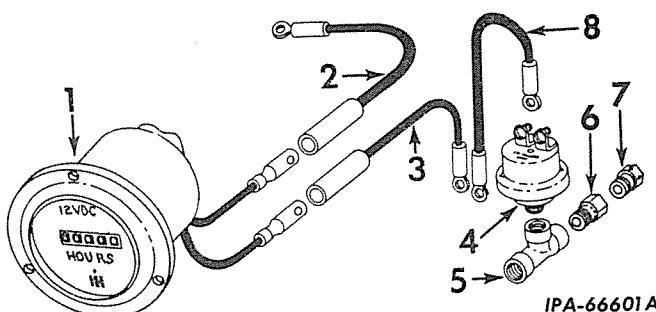

Parts without letters after the description indicates the part is used for both Hourmeters. Letters "A" and "B" are used to identify separate Hourmeters.

A	Service parts for Hourmeter, electric (regular)			
	L-150G	9810 up		
	L-150P	9810 up		
B	330 868 R91	ATTACHMENT, electric hourmeter (see NOTE 3)		
	L-150G	6519 to 9809		
	L-150P	6501 to 9809		
1	621 657 C91	HOURMETER No. 6 NUT (3 for Hourmeter B) No. 6 x 3/8" slt-rd-hd SCREW (3 for Hourmeter B) No. 6 x 1/2" slt-rd-hd SCREW (3 for Hourmeter A) No. 6 lock WASHER (3)		
2	271 065 R91	CABLE, ammeter to hourmeter		
3	305 366 R91	CABLE, hourmeter to pressure switch		
4	132 244 R91	SWITCH, pressure (optional with 277 748 R91)		
4	277 748 R91	SWITCH, pressure (optional with 132 244 R91)		
5	444 221	TEE, pressure switch (Hourmeter B)	1	NUT, wing 3/8" battery hold-down bolt (4) 1/16 x 5/8" cotter PIN (4) 3/8" lock WASHER (4)
5	444 253	TEE, pressure switch (Hourmeter A)	2	CLAMP, battery hold-down (2)
6	29 901 D	BODY, connector (Hourmeter B)	3	BUMPER, battery hold-down (4)
7	369 987 R1	NUT, nylon (Hourmeter B)	4	SUPPORT, battery 1/2 x 7/8" hex-hd cap SCREW (6) 17/32 x 1-1/16" x 13 ga. WASHER (6)
8	274 304 R91	CABLE, pressure switch to ground (Hourmeter B)	5	BOLT, battery hold-down (front) (long) (2)
8	341 874 R91	CABLE, pressure switch to ground (Hourmeter A)	6	BOLT, battery hold-down (rear) (short) (2)
263 514 R91	CLIP, rubber covered cable		275 241 R1	SPACER, battery support (2)
264 674 R91	DAMPER, vibration (Hourmeter A) No. 6 x 1/2" SCREW (3) No. 6 lock WASHER (3)			
444 163	ELBOW, hourmeter pressure switch (Hourmeter A)			
1 019 023 R1	PAMPHLET, installation instructions (Hourmeter B)			

BATTERY SUPPORT

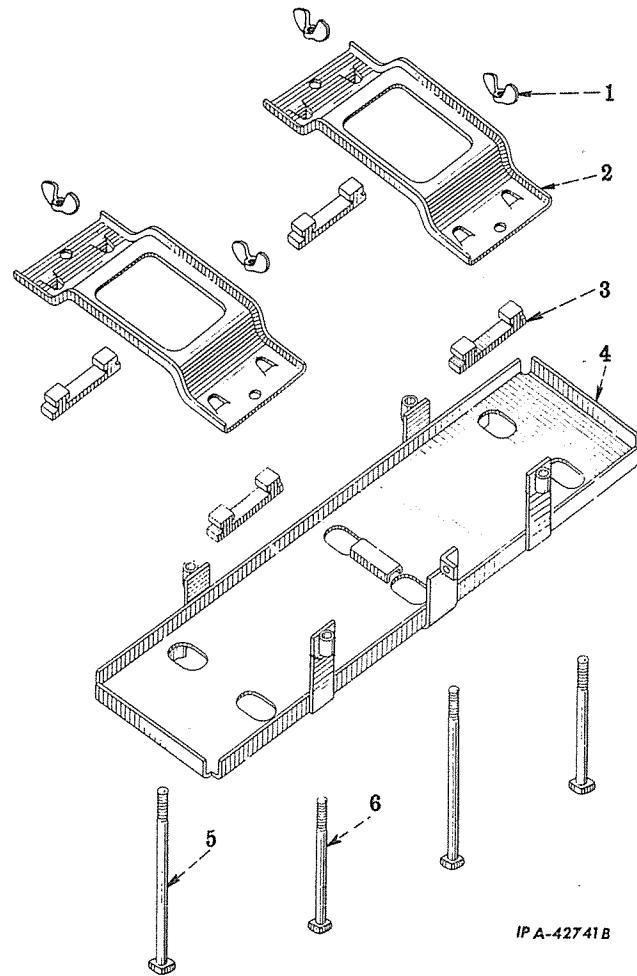

IPA-42741B

NOTE 3 - Field Application - Order Through Regular Service Parts Channels.

MEMORANDA




# CLUTCH

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

ENGINE OVER-CENTER CLUTCH 13"  
(Hand Operated) (Rockford Drilling Machine)  
(Used on Manual Shift Loaders)

ENGINE OVER-CENTER CLUTCH 13" - Continued  
(Hand Operated) (Rockford Drilling Machine)  
(Used on Manual Shift Loaders)

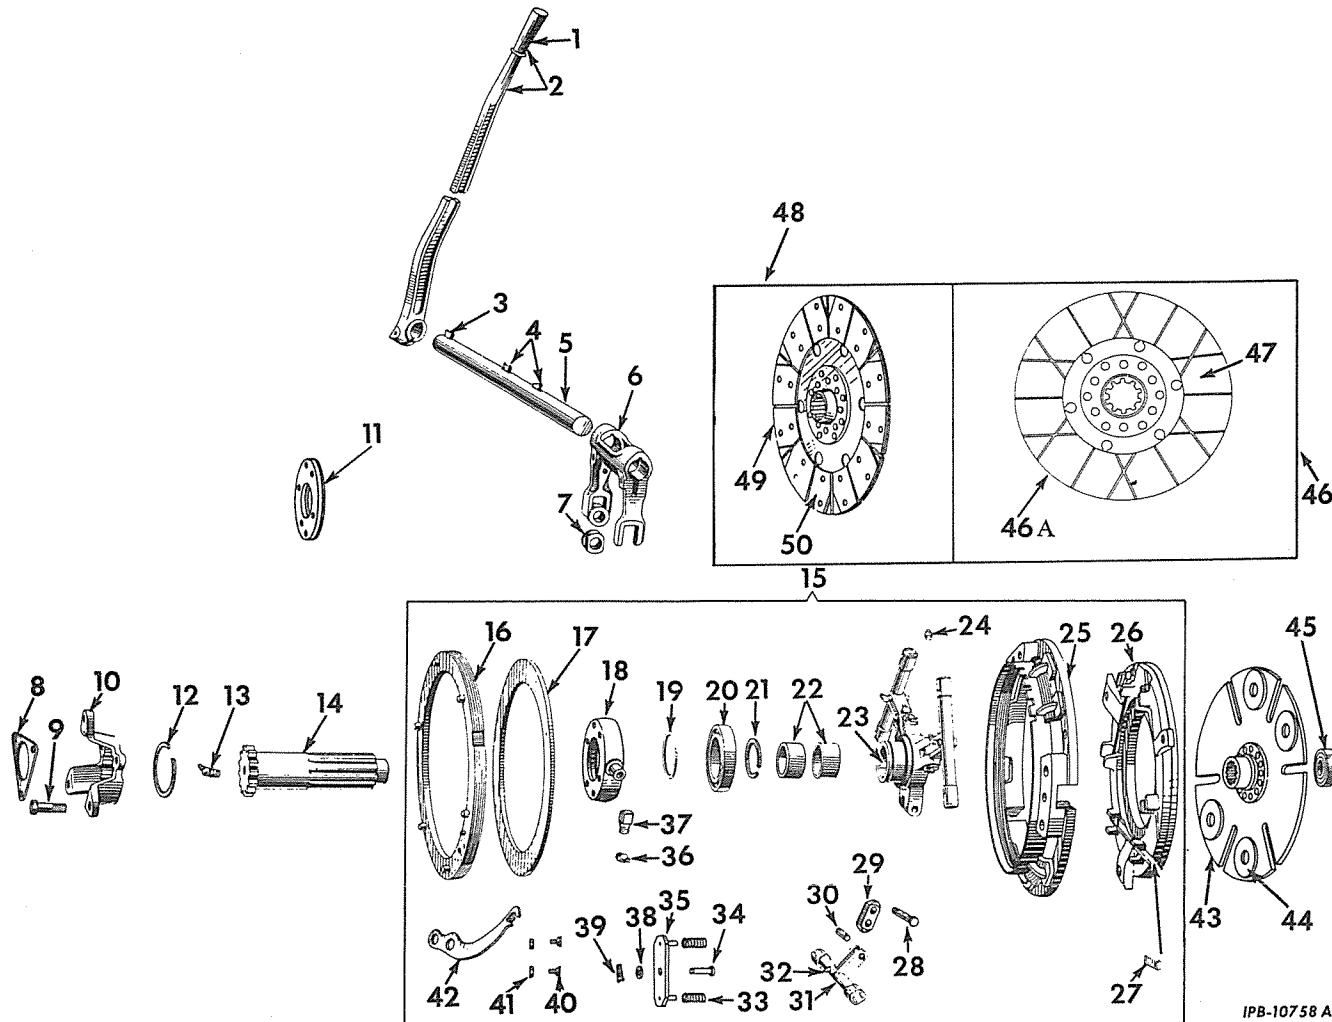

1	619 405 C1	HANDLE, engine clutch hand lever	8	259 688 R1 181 343 103 320	PLATE, engine clutch shaft end 5/16NF x 1/2" hex-hd cap SCREW (3) 5/16" lock WASHER (3)
2	275 227 R11	LEVER w/HANDLE, 619 405 C1, engine clutch hand	9	54 969 D 271 305 103 322	BOLT, engine clutch coupling dowel (3) 7/16NF NUT (3) 7/16" lock WASHER (3)
	103 028	1/2NF NUT			
	181 436	1/2NF x 2-1/2" hex-hd cap SCREW			
	103 723	1/2" lock WASHER			
3	103 909	KEY, 1/4 x 1-1/8" (Woodruff) (engine clutch hand lever)	10	266 457 R11	COUPLING, engine clutch
4	103 462	KEY, 3/16 x 1" (Woodruff) (engine clutch release fork) (2)	11	317 861 R1	FACING, brake clutch bearing (optional with 317 862 R1) (CL-11080-89)
5	53 494 D	SHAFT, engine clutch release	11	317 862 R1	FACING, brake clutch bearing (optional with 317 861 R1) (CL-11080-81)
6	8 247 DB 181 374 103 321	FORK, engine clutch release 3/8NF x 1-1/2" hex-hd cap SCREW (2) 3/8" lock WASHER (2)	12	266 458 R1	RING, engine clutch coupling snap
7	51 227 DB	BUSHING, engine clutch release pin (2)			

## TORQUE CONVERTER

REF.	PART NO.	NUMBER	DESCRIPTION
------	-------------	--------	-------------

**TORQUE CONVERTER, OUTPUT SHAFT****AND RELATED PARTS - Continued**

(Borg and Beck) (Used on Power Shift Loaders)

19 604 844 C1 "O" RING, 1-7/8 x 2-1/32 x 5/64" (for use with CONVERTER ASSY, 606 333 C91)  
L-150P 9906 up

19A 606 295 C1 RING, converter hub rectangular sealing (Chicago Rawhide No. 711534) (for use with CONVERTER ASSY, 606 333 C91)  
L-150P 9906 up

20 327 717 R2 SHAFT, converter output

21 444 813 PLUG, 1/8" automotive hex-hd pipe (6361) (2)

22 338 550 R92 CONVERTER ASSY, torque (13660)  
L-150P 6501 to 9905

22 606 333 C91 CONVERTER ASSY, torque (13723)  
L-150P 9906 up

331 793 R2 DOWEL, main frame (2)

327 923 R1 GASKET, pump mounting housing

338 078 R91 PACKAGE, converter driving strap field service (consists of three STRAP and one BOLT, 297 330 R1) (4)

604 846 C91 PACKAGE, torque converter seal field improvement  
L-150P 6501 to 9905



(Consists of -

1	BEARING	ST 572
1	BEARING	65 490 D
1	COVER	327 957 R2
2	DOWEL	331 793 R2
1	GASKET	158 512 R1
1	GASKET	327 923 R1
1	GEAR	604 845 C1
1	HOUSING	327 963 R2
1	HUB	606 334 C91
1	"O" RING	604 844 C1
1	"O" RING	264 681 R1
1	RING	158 503 R1
1	RING	327 420 R1
1	RING	606 295 C1
1	SEAL	606 293 C91
1	PAMPHLET	1 085 046 R1 )

# MAIN FRAME


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

MAIN FRAME AND COVERS

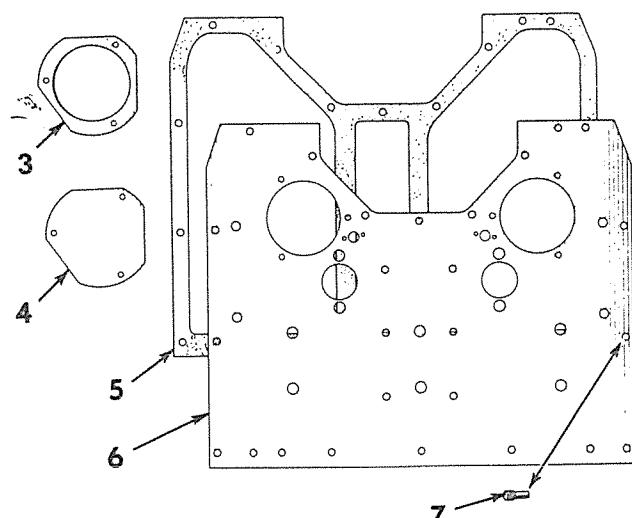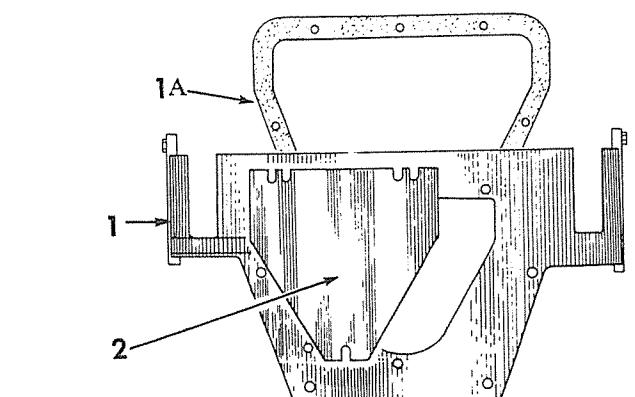

IPA-66632 E

MAIN FRAME AND COVERS - Continued

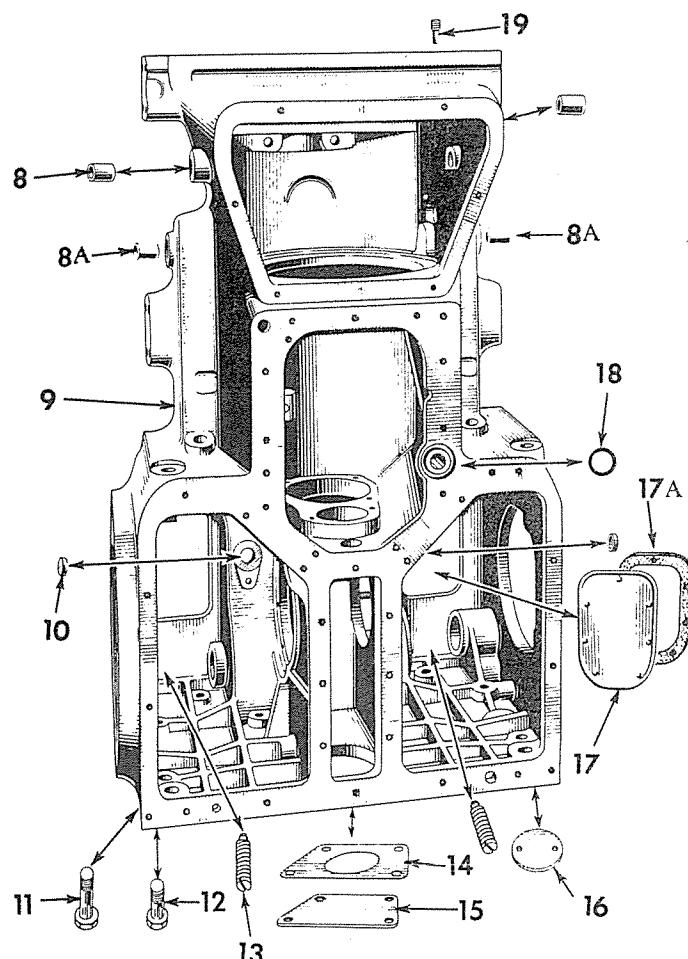

1	275 200 R31	COVER, converter and engine clutch 3/8" NUT (2) 3/8 x 3/4" hex-hd cap SCREW (4) 3/8 x 1" hex-hd cap SCREW (2) 3/8 x 1-3/4" hex-hd cap SCREW (2) 3/8" lock WASHER (8) 13/32 x 13/16" x 16 ga. WASHER (2)
1A	331 724 R1	GASKET, converter and engine clutch cover
2	331 496 R1	COVER, converter inspection 3/8 x 5/8" hex-hd cap SCREW 3/8" lock WASHER
3	53 714 D	GASKET, steering clutch inspection cover (2)
4	53 559 D	COVER, steering clutch inspection (2) 5/16NF x 1/2" hex-hd cap SCREW (6) 5/16" lock WASHER (6)
5	604 358 C2	GASKET, main frame cover

6	280 706 R22	COVER, main frame L-150P 6501 to 9812 L-150G 6519 to 9812 7/16 x 1-1/8" hex-hd cap SCREW (16) 15/32 x 59/64" x 16 ga. WASHER (16)
6	604 359 C1	COVER, main frame L-150P 9813 up L-150G 9813 up
	604 360 C1	BOLT, main frame cover (20)
7	18 585 DA	PIN, main frame cover dowel (3)
8	45 120 D	BUSHING, engine clutch release shaft (2) (*)
8A	46 332 D	BUSHING, steering brake operating shaft (4) (*)
8A	331 716 R1	BUSHING, steering brake operating shaft (4) (†)

(\*) - Used On Manual Shift Loaders.  
(†) - Used On Power Shift Loaders.

# CLUTCH


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>ENGINE OVER-CENTER CLUTCH 13" - Continued (Hand Operated) (Rockford Drilling Machine) (Used on Manual Shift Loaders)</b>					
13	109 460	FITTING, engine clutch pilot bearing lubrication	39	267 689 R1	"X" WASHER, return spring retaining pin (3)
14	266 459 R1	SHAFT, engine clutch	40	61 115 D	SCREW, adjusting ring lock (2)
15	317 859 R93 179 883 103 323	CLUTCH ASSY, less driven member 1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)	41		NUT, 3/8NF (2)
16	55 371 DA	RING, adjusting	42	264 679 R1	LOCK, adjusting ring
17	31 238 DA	PLATE, adjusting ring	43	702 537 C91	MEMBER w/eight FACING and four RIVET, 338 360 R1, cerametallic driven (will work for MEMBER 324 999 C91)
18	317 860 R91	CARRIER w/FACING and six RIVET, 96 189 R1, throw out bearing	44	702 550 C1	PACKAGE, driven member cerametallic facing field service (consists of two cerametallic FACING and RIVET, 338 360 R1) (6)
				338 360 R1	RIVET, special (4)
19	29 780 D	RING, snap	45	ST 211	BEARING, clutch pilot ball
20	972 386 R91	BEARING, throw out ball	46	604 644 C91	ATTACHMENT, asbestos-metallic clutch member (see NOTES 1 and 3) (consists of semi-metallic driven MEMBER ASSY, 277 675 R91)
21	304 780 R1	RING, snap	46A	277 675 R91	MEMBER w/two FACING and twenty-six RIVET, 50 413 D, semi-metallic driven
22	26 039 DA	BUSHING, release sleeve (2)	47	277 676 R91	PACKAGE, semi-metallic clutch facing field service (consists of two semi-metallic FACING and twenty-six RIVET, 50 413 D)
23	304 778 R92	SLEEVE w/two BUSHING, 26 039 DA and FITTING, 126 121, release		50 413 D	RIVET, clutch facing (26)
24	126 121	FITTING, release sleeve lubrication	48	331 204 R91	ATTACHMENT, bi-metallic driven member (see NOTES 1 and 3)
25	304 776 R1	PLATE, back	49	313 531 R92	MEMBER w/two FACING and twenty-six RIVET, 250 263 R1, bi-metallic driven
26	304 777 R1	PLATE, pressure	50	313 530 R92	PACKAGE, bi-metallic driven member field service (consists of two bi-metallic FACING and twenty-six RIVET, 250 263 R1) (2)
27	267 665 R91 261 106 R1	BLOCK, cam (set of 6) SCREW, hex-hd cap (6) 1/4" external-tooth lock WASHER (6)	50	250 263 R1	RIVET, clutch facing (26)
28	324 561 R91	PACKAGE, connecting link pin field service (consists of PIN, WASHER and "X" WASHER) (3)	52	324 549 R91	PACKAGE, clutch brake facing field service (consists of FACING and eight RIVET) (for CARRIER, 317 860 R91) (optional with 324 560 R91)
29	304 782 R1	LINK, connecting (3)	53	324 560 R91	PACKAGE, clutch brake facing field service (consists of FACING and eight RIVET) (for CARRIER, 317 860 R91) (optional with 324 549 R91)
30	304 784 R2	PIN, connecting link (short) (3)	54	324 998 R91	PACKAGE, driven member cerametallic facing field service (consists of two cerametallic facing and rivet, 338 360 R1) (will work for MEMBER 324 998 R1)
31	702 390 C1	CAMSHAFT w/three FITTING, 109 460 (set of 3)	55		NOTE 1 - Factory Application - Order On Machine Order Form.
32	109 460	FITTING, camshaft lubrication (3)	56		NOTE 3 - Field Application - Order Through Regular Service Parts Channels.
33	304 785 R2	SPRING, return (6)			
34	304 786 R1	PIN, return spring retaining (3)			
35	304 787 R91	STOP, return spring (3)			
36	273 347	FITTING, engine clutch release bearing lubrication			
37	191 759	ADAPTER, engine clutch release bearing lubrication fitting angle elbow (optional with 145 017 H)			
37	145 017 H	ADAPTER, engine clutch release bearing lubrication fitting angle elbow (optional with 191 759)			
38	615 029 R1	WASHER, return spring retaining pin (3)			

# TORQUE CONVERTER

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------	-------------	----------------	-------------

TORQUE CONVERTER, OUTPUT SHAFT AND RELATED PARTS  
(Borg and Beck) (Used on Power Shift Loaders)

TORQUE CONVERTER, OUTPUT SHAFT AND RELATED PARTS - Continued  
(Borg and Beck) (Used on Power Shift Loaders)

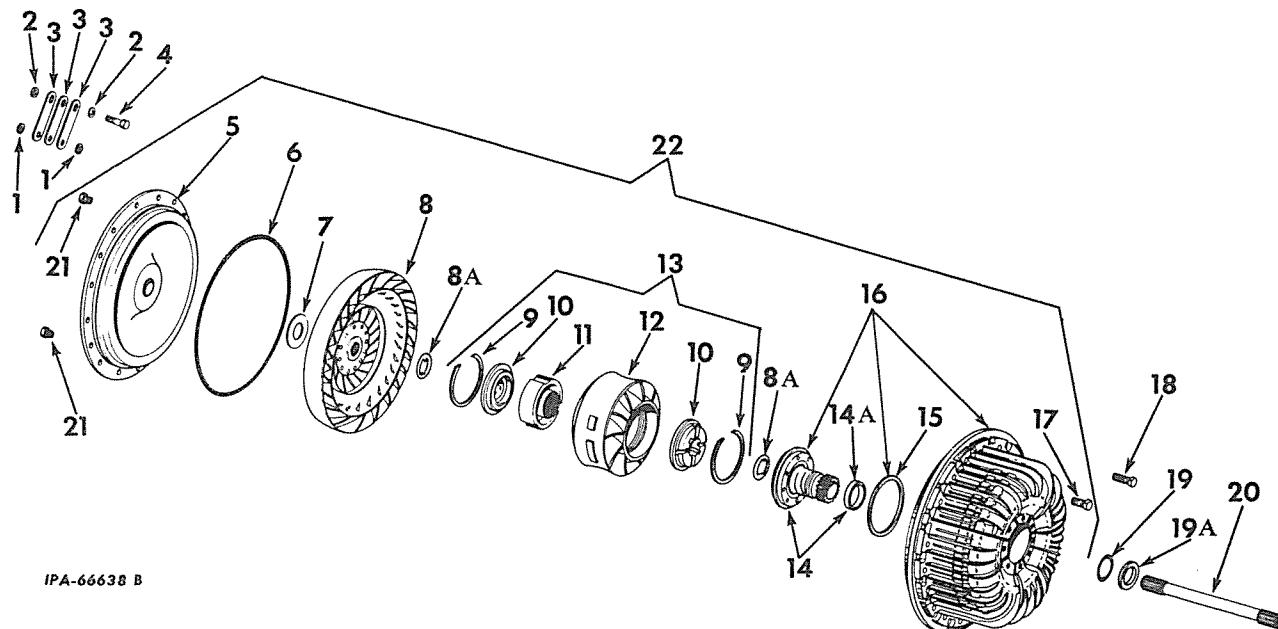

1	331 649 R1	SPACER, converter (8)	14	338 646 R1	HUB, impeller (for use with CONVERTER ASSY, 338 550 R92) L-150P 6501 to 9905
2	331 650 R1	SPACER, flywheel (8)	14	606 334 C91	HUB w/SLEEVE, 606 294 C1, impeller (for use with CONVERTER ASSY, 606 333 C91) L-150P 9906 up 1/4 x 5/8" hex-hd cap SCREW (8) 1/4" lock WASHER (8)
3		STRAP, drive (order PACKAGE, 338 078 R91) (12)	14A	606 294 C1	SLEEVE, pump drive housing wear (Chicago Rawhide No. 075917) (for use with CONVERTER ASSY, 606 333 C91) L-150P 9906 up
4	297 330 R1	BOLT, 3/8 x 1" (4)	15	158 503 R1	RING, seal (6049)
5	338 645 R91	COVER w/two PLUG, 444 813, converter	15	338 642 R91	IMPELLER ASSY (for use with CONVERTER ASSY, 338 550 R92) L-150P 6501 to 9905
6	158 512 R1	GASKET, converter cover	16	606 391 C91	IMPELLER w/HUB ASSY, 606 334 C91, SEAL, 158 503 R1, eight SCREW and eight WASHER (for use with CONVERTER ASSY, 606 333 C91) L-150P 9906 up
7	158 511 R1	WASHER, turbine forward thrust	17	158 513 R1	BOLT, cover (18) 5/16" lock NUT (6319) (18)
8	338 643 R92	TURBINE, converter	18	327 447 R1	BOLT, cover (to attach drive strap to cover) (4)
8A	603 803 C1	WASHER, thrust (2) L-150P 9126 up	19	341 808 R1	"O" RING, 1-15/16 x 2-1/8 x 3/32" (for use with CONVERTER ASSY, 338 550 R92) L-150P 6501 to 9905
9	158 510 R1	RING, snap (2)			
10	158 506 R1	WASHER, stator thrust (order WASHER, 603 804 C1 together with WASHER, 603 803 C1) (2) L-150P 6501 to 9125			
10	603 804 C1	WASHER, stator thrust (2) L-150P 9126 up			
11	338 648 R1	HUB, stator			
12	119 739 H1	STATOR			
13	338 644 R92	STATOR and HUB ASSY (together with WASHER, 603 803 C1 will work for 338 644 R91) L-150P 9126 up			

# MAIN FRAME

REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION	
<b>MAIN FRAME AND COVER - Continued</b>						
9	331 380 R11	FRAME ASSY (†) L-150P 6501 to 8149 (Order the following parts - 1 BAFFLE, sump tube 338 150 R1 1 CLAMP, sump tube 308 882 R1 1 FRAME, main 604 361 C11 1 "O" RING, 1-1/4 x 1-1/2 x 1/8" 252 483 R1 2 SCREW, 3/8 x 1-1/4" hex-hd cap 1 SCREW, 3/8 x 1" hex-hd cap 2 SPACER, sump tube baffle 253 729 R1 1 TUBE, sump 338 151 R11 3 WASHER, 3/8" lock 3 WASHER, 13/32 x 13/16" x 16 ga. )		19	266 079 R1	PIN, rear engine support dowel (2) (*)
				334 600 R1	ANCHOR, drawbar	
				250 868 R1	DOWEL, main frame cover L-150P 9813 up L-150G 9813 up	
				282 818 R2	GASKET, steering clutch lubrication port cover (2)	
				331 497 R1	GASKET, converter inspection cover	
				607 532 C91	PACKAGE, main frame cover field improvement L-150P 6501 to 9812 L-150G 6519 to 9812 (Consists of - 2 BEARING w/BUSHING 604 366 C11 1 COVER 604 359 C1 1 PIN 18 585 DA 1 DOWEL 250 868 R1 1 GASKET 604 358 C1 1 PAMPHLET 1 085 050 R2 4 SCREW 13 253 R1 4 SCREW 20 050 R1 6 SCREW 321 964 R1 20 SCREW 604 360 C1 4 SCREW 871 570 R1 )	
9	604 361 C11	FRAME ASSY, main (†) L-150P 8150 up (Composed of - §1 FRAME 4 BUSHING 331 716 R1 1 PLUG 144 016 1 PLUG 254 817 R92 2 PLUG 41 600 D )		13 044 R1	PIN, 3/16 x 3/4" cotter	
9	604 357 C11	FRAME ASSY, main (*) (Composed of - 6 BOLT 272 527 R1 2 BUSHING 45 120 D 4 BUSHING 46 332 D 1 CAP 6 612 D 2 CORK 104 941 7 CORK 106 613 4 CORK 117 928 2 COVER 275 066 R1 §1 FRAME 2 GASKET 282 818 R2 2 PIN 266 079 R1 2 PLUG 144 016 1 PLUG 271 647 R1 1 PLUG 254 817 R92 2 PLUG 41 600 D 4 STUD 57 382 D 2 STUD 57 383 D ) 104 941 CORK, No. 5, 11/16" dia x 7/8" long (2) 106 613 CORK, No. 9, 15/16" dia x 1-1/8" long (7) 117 928 CORK, No. 14, 1-1/4" dia x 1-1/4" long (4) 3/4 x 7/8" hex-hd cap SCREW		144 011	PLUG, pipe	
10	41 600 D	PLUG, steering brake pivot shaft cup (2)		144 016	PLUG, pipe	
11		SCREW, 3/4 x 2" hex-hd cap (4)		271 647 R1	PLUG, 1" drain (3)	
12		SCREW, 3/4 x 3" hex-hd cap (2)		254 817 R92	PLUG w/PIN, 13 044 R1, 1/2" engine clutch compartment drain	
13	46 809 D	SCREW, track frame pivot shaft set (see NOTE) (2) 5/8" jam NUT (2)				
14	48 073 D	GASKET, power take-off cover				
15	48 072 D	COVER, power take-off 5/8 x 1" hex-hd cap SCREW (4)				
16	275 066 R1	COVER, steering clutch lubrication port (2) 1/2 x 1" hex-hd cap SCREW (4) 1/2" lock WASHER (4)				
17	48 044 D	COVER, steering brake inspection (2) 3/8 x 1" hex-hd cap SCREW (14) 3/8" lock WASHER (14)				
17A	331 722 R1	GASKET, steering brake inspection cover (2)			NOTE - Also Listed Under Heading "Track Frame Pivot Shaft".	
18	461 173 R1	"O" RING, 1-5/8 x 2 x 3/16" (also listed with "Gear Shifter Housing, Lever and Related Parts") (†)			§ - Not Furnished Separately. (*) - Used On Manual Shift Loaders. (†) - Used On Power Shift Loaders.	




## MAIN FRAME



REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

MAIN FRAME CHANNELS

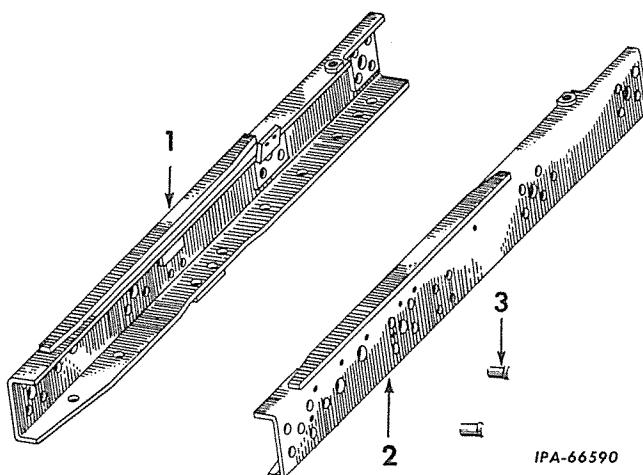

IPA-66590

- |   |             |   |
|---|-------------|---|
| 1 | 330 836 R91 | CHANNEL, LH main frame side (*)   |
| 1 | 330 838 R91 | CHANNEL, LH main frame side (†)<br>3/4 x 1-3/4" hex-hd cap SCREW (4)<br>7/8 x 2" hex-hd cap SCREW (4) |
| 2 | 330 837 R91 | CHANNEL, RH main frame side (*)   |
| 2 | 330 839 R91 | CHANNEL, RH main frame side (†)<br>3/4 x 1-3/4" hex-hd cap SCREW (4)<br>7/8 x 2" hex-hd cap SCREW (4) |
| 3 | 48 074 D    | DOWEL, main frame side channel (4)  |

(\*) - Used On Manual Shift Loaders.  
(†) - Used On Power Shift Loaders.

MEMORANDA






-80-  
**TRANSMISSION**  
(Used on Manual Shift Loaders)



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRANSMISSION GEAR SHIFTER MECHANISM					

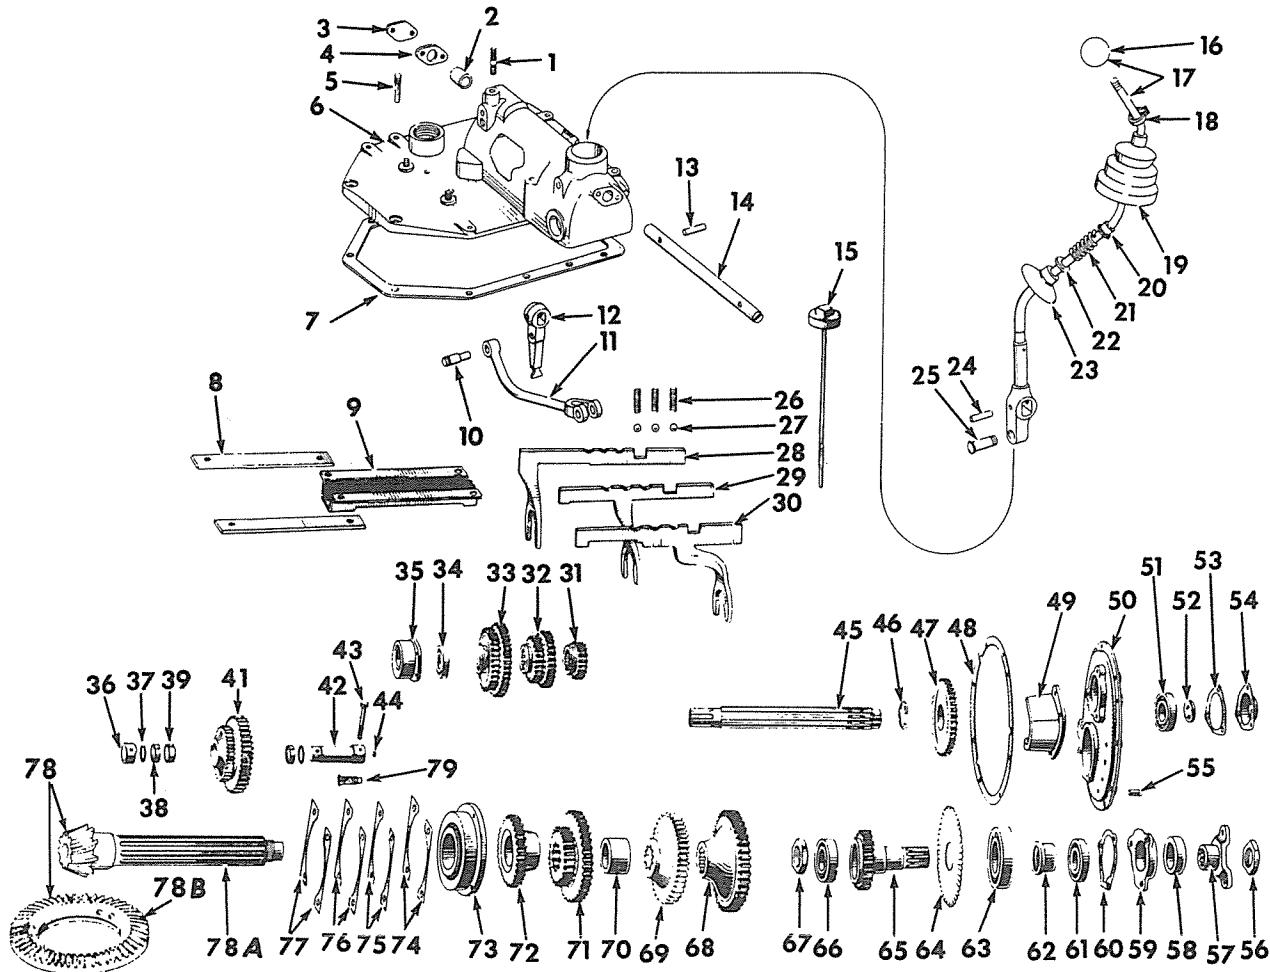

IPA-66928 B

1	41 633 D	STUD, platform	7	604 363 C1	GASKET, transmission gear shifter housing
2	276 156 R1	BUSHING, shifter lever shaft	8	62 779 D	LOCK, gear shifter rail guide support bolt (2)
3	275 226 R1	COVER, transmission gear shift lever shaft end (2) 179 835 3/8" x 5/8" hex-hd cap SCREW (4) 103 321 3/8" lock WASHER (4)	9	69 466 DA 179 837	GUIDE, gear shifter rail 3/8" x 3/4" hex-hd cap SCREW (4)
4	275 225 R1	GASKET, transmission gear shift lever shaft end cover (2)	10	275 748 R2 148 152	PIN, transmission gear shift lever lower SPRING, 1/2" retainer
5	18 585 DA	DOWEL, transmission gear shifter housing main frame (3)	11	275 745 R11	LINK w/CLEVIS, transmission gear shift selector
6	604 362 C11	HOUSING ASSY, transmission gear shifter (Composed of - 2 ANCHOR 50 826 D 1 BUSHING 276 156 R1 §1 HOUSING 1 STUD 41 633 D ) 20 049 R1 SCREW, 7/16 x 1-3/8" hex-hd cap (4) 20 050 R1 SCREW, 7/16 x 1-5/8" hex-hd cap (5) 20 051 R1 SCREW, 7/16 x 3-1/8" hex-hd cap (2)	12	275 747 R12	LEVER w/PIN, 275 748 R2, transmission gear shift
			13	277 037 R1	PIN, transmission gear shift hand lever upper
			14	275 744 R2	SHAFT, transmission gear shift lever upper
			15	53 683 DA	ROD w/PLUG and SHIELD, transmission oil level

**TRANSMISSION**  
**(Used on Manual Shift Loaders)**


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>TRANSMISSION GEAR SHIFTER MECHANISM - Continued</b>					
16	264 055 R2	BALL, transmission gear shift hand lever	31	258 626 R3	GEAR, transmission first and low reverse speed sliding (19 T)
17	276 099 R92	LEVER w/BALL, 264 055 R2, transmission gear shift hand	32	260 153 R1	GEAR, transmission second and high reverse sliding (24 and 28 T)
18	64 604 D	CLAMP, transmission gear shift hand lever boot	33	271 861 R1	GEAR, sliding transmission third and fourth speed (33 and 38 T) L-150G 6519 to 14000
19	275 742 R1	BOOT, transmission gear shift hand lever	33	616 476 C1	GEAR, sliding transmission third and fourth speed L-150G 14001 up
20	11 373 D	STOP, transmission gear shift hand lever swivel shield spring upper 3/16 x 1-1/4" rd-hd RIVET (iron)	34	272 478 R91	BEARING, transmission spline shaft rear
21	29 547 D	SPRING, transmission gear shift hand lever swivel shield	35	6 477 DB	CAGE, transmission spline shaft rear bearing 3/8 x 7/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2)
22	17 700 D	STOP, transmission gear shift hand lever swivel shield spring lower	36	279 433 R1	SLEEVE, reverse idler gear shaft
23	275 743 R1	SHIELD, transmission gear shift hand lever swivel	37	279 427 R1	RING, high and low reverse idler gear snap (2)
24	277 037 R1	PIN, transmission gear shift hand lever upper	38	313 946 R91	BEARING, high and low reverse idler gear (2)
25	275 746 R1 148 152	PIN, transmission gear shift hand lever lower SPRING, 1/2" retainer	39	311 277 R1	SPACER, high and low reverse idler gear
26	64 163 D	SPRING, gear shifter rail poppet (3)	41	279 431 R2	GEAR, high and low reverse idler (24 and 33 T)
27	D 2 616	POPPET, gear shifter rail (grade 3, 1/2" steel ball) (optional with 13 722 D) (3)	42	279 435 R11	SHAFT w/PLUG, 45 361 D, transmission reverse idler gear
27	13 722 D	POPPET, gear shifter rail (grade 4, 1/2" steel ball) (optional with D 2 616) (3)	43	4 457 D	BOLT, transmission reverse idler gear shaft 3/8NF slt-hex NUT 3/32 x 3/4" cotter PIN
28	53 480 DA	RAIL and FORK, third and fourth gear shifter	44	45 361 D	PLUG, transmission reverse idler gear shaft
29	53 481 DA	RAIL and FORK, second and high reverse gear shifter	45	258 625 R2	SHAFT, transmission spline
30	69 464 DB	RAIL and FORK, first speed and low reverse gear shifter	46	53 632 D	COLLAR, transmission driven gear split half (2)
			47	307 155 R1	GEAR, transmission driven (42 T)
			48	46 918 D	GASKET, transmission end cover
			49	8 779 D	POCKET, transmission end cover oil 5/16 x 7/8" hex-hd cap SCREW (3) 5/16" lock WASHER (3)
			50	6 480 DC 274 863 R1	COVER, transmission end 7/16 x 1-1/8" hex-hd cap SCREW w/nylon pellet insert (8)
			51	ST 238	BEARING, transmission spline shaft front
			52	45 357 D	WASHER, transmission spline shaft bearing retainer front 7/16NF x 1" hex-hd cap SCREW (2) 7/16" external-tooth lock WASHER (2)
			53	46 913 D	GASKET, transmission spline shaft front bearing retainer
			54	46 912 D	RETAINER, transmission spline shaft bearing front 3/8 x 3/4" hex-hd cap SCREW (3) 3/8" lock WASHER (3)
			55	45 132 D	PIN, transmission end cover dowel
			56	255 630 R1	NUT, transmission drive coupling retaining
			57	52 208 D	COUPLING, transmission drive
			58	310 508 R91	OIL SEAL, transmission driving shaft



-82-

**TRANSMISSION**  
(Used on Manual Shift Loaders)




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRANSMISSION - Continued (Four Speeds Forward, Two Reverse) (Manual Shift)					
59	6 479 DB	RETAINER, transmission driving shaft bearing front 3/8 x 1" hex-hd cap SCREW (3) 3/8" lock WASHER (3)	172 529	PLUG, 5/8" expansion (4)	
60	46 916 D	GASKET, transmission driving shaft bearing retainer front	172 574	PLUG, 1-1/2" expansion (3)	
61	ST 238	BEARING, transmission driving shaft front	311 278 R1	WASHER, high and low reverse idler gear thrust	
62	6 478 D	SPACER, transmission driving shaft bearing			
63	272 480 R91	BEARING, transmission driving shaft rear			
64	262 752 R1	SLINGER, transmission oil			
65	307 082 R1	SHAFT, transmission driving (23 T)			
66	307 819 R91	BEARING, bevel pinion shaft front			
67	279 733 R1	NUT, bevel pinion and shaft lock			
68	52 215 DB	GEAR, transmission first speed (46 T)			
69	260 151 R1	GEAR, transmission high and low reverse speed (41 T)			
70	46 859 D	SPACER, bevel pinion shaft			
71	52 213 DA	GEAR, transmission second and fourth speed (27 and 41 T)			
72	616 478 C1	GEAR, transmission third speed L-150G 14001 up			
72	271 860 R2	GEAR, transmission third speed (32 T) L-150G 6519 to 14000			
73	271 863 R91	BEARING, bevel pinion and shaft rear 1/2 x 1-5/8" hex-hd cap SCREW (4) 1/2" lock WASHER (4)			
74	53 635 D	SHIM, bevel pinion and shaft rear bearing cage (heavy) (X)			
75	53 636 D	SHIM, bevel pinion and shaft rear bearing cage (medium) (X)			
76	53 637 D	SHIM, bevel pinion and shaft rear bearing cage (light) (X)			
77	250 307 R1	SHIM, bevel pinion and shaft rear bearing cage (extra light) (X)			
78	279 339 R91	PINION and SHAFT, BEVEL w/DRIVE BEVEL GEAR, 279 338 R1 (Matched Pair) (see NOTE)			
78A		PINION and SHAFT BEVEL (9T) (order PINION and SHAFT BEVEL w/DRIVE BEVEL GEAR 279 339 R91) (see NOTE)			
78B	279 338 R1	GEAR, DRIVE BEVEL (38T) (see NOTE)			
79	279 434 R92	STRAINER, oil reverse idler			
	50 826 D	ANCHOR, steering clutch release lever return spring (2)			
	311 279 R1	CLIP, high and low reverse idler gear thrust washer stop			
	2 750 008 R1	DECALCOMANIA, shifting diagram			
	250 868 R1	DOWEL, gear shifter housing			
607 533 C91		PACKAGE, gear shifter housing field improvement L-150G 6519 to 9768 (Composed of - 3 DOWEL 18 585 DA 1 DOWEL 250 868 R1 1 GASKET 604 363 C1 1 HOUSING 604 362 C11 1 PAMPHLET (installation instructions) 1 085 050 R1 )			

NOTE - Also Listed And Illustrated Under  
Heading STEERING SYSTEM -  
"Drive Bevel Gear".  
(X) - As Required.

**TRANSMISSION**  
(Used on Power Shift Loaders)


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>GEAR SHIFT HOUSING, LEVER AND RELATED PARTS</b>					
1	264 055 R2	BALL, gear shift hand lever	11	341 949 R1	TUBE, transmission vent L-150P 8089 to 12166
2	64 604 D	CLAMP, gear shift hand lever boot	12	327 932 R91	PIPE, transmission filler (order PACKAGE, 341 950 R91) L-150P 6501 to 8088
3	64 603 DA	BOOT, gear shift hand lever	12	327 932 R92	PIPE, transmission filler L-150P 8089 up
4	104 073	RIVET, 3/16 x 1-1/4"	13	327 940 R11	ROD, transmission oil level
5	11 373 D	STOP, upper gear shift lever spring	14	51 434 D	ELBOW, transmission vent tube L-150P 8089 to 12166
6	29 547 D	SPRING, gear shift lever	15	19 986 R1	NUT, transmission vent tube elbow L-150P 8089 to 12166
7	17 700 D	STOP, lower gear shift lever spring	16	604 364 C1 20 049 R1 20 050 R1	HOUSING, gear shifter SCREW, 7/16 x 1-3/8" hex-hd cap (4) SCREW, 7/16 x 1-5/8" hex-hd cap (7) 15/32 x 59/64" x 16 ga. WASHER (11)
8	355 889 R3	SHIELD, gear shift housing swivel	17	18 585 DA	DOWEL, gear shifter housing to main frame (3)
9	327 941 R91	LEVER, gear shift hi-low	18	461 173 R1	"O" RING, 1-5/8 x 2 x 3/16" (illustrated and listed with "Main Frame")
10	57 904 DA	PIN, gear shift hand lever	19	604 365 C2	GASKET, gear shifter housing
<b>GEAR SHIFT HOUSING, LEVER AND RELATED PARTS - Continued</b>					
21	64 163 D	SPRING, gear shifter rail ball	20	13 722 D	BALL, gear shifter rail (optional with D-2616)
22	50 826 D	ANCHOR, steering clutch release lever return spring (2)	20	D-2616	BALL, gear shifter rail (optional with 13 722 D)
23	611 432 C11	TUBE, w/NUT 265 205 R1 and SLEEVE 265 204 R1, Transmission vent L-150P 12167 up	21	64 163 D	SPRING, gear shifter rail ball
24	265 204 R1	SLEEVE L-150P 12167 up	22	50 826 D	ANCHOR, steering clutch release lever return spring (2)
25	265 205 R1	NUT L-150P 12167 up	23	611 432 C11	TUBE, w/NUT 265 205 R1 and SLEEVE 265 204 R1, Transmission vent L-150P 12167 up
26	606 889 C1 250 868 R1	ELBOW, transmission vent tube TD-9BP 12167 up DOWEL, gear shifter housing	24	265 204 R1	SLEEVE L-150P 12167 up
607 534 C91 (Composed of - 3 DOWEL 1 DOWEL 1 GASKET 1 HOUSING 1 "O" RING 1 PAMPHLET (installation instructions) 1 085 050 R1)					
PACKAGE, gear shifter housing field improvement L-150P 6501 to 9812					
(Composed of - §2 CLIP 1 ELBOW 1 NUT 1 PIPE 1 TUBE 1 DRAWING, installation IZG-6417 )					
PLUG, 5/8" expansion (2) § - Not Furnished Separately.					

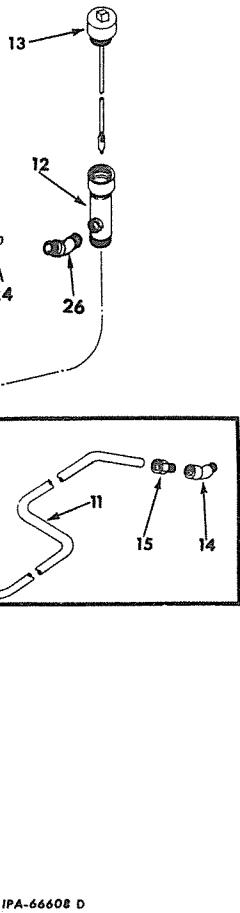

IPA-66608 D



-84-

## TRANSMISSION

(Used on Power Shift Loaders)



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRANSMISSION, COUNTERSHAFT, GEARS AND RELATED PARTS					TRANSMISSION, COUNTERSHAFT, GEARS AND RELATED PARTS – Continued
1	631 255 R1	RING, countershaft rear bearing snap	13	327 929 R1	WASHER, countershaft front bearing retainer 7/16NF x 1" hex-hd cap SCREW (2) 7/16" lock WASHER (2)
2	319 962 R91	BEARING, countershaft rear	14	327 943 R1	SHAFT, reverse idler
3	327 936 R1	RETAINER, countershaft rear bearing 3/8 x 1" hex-hd cap SCREW (2) 3/8" lock WASHER (2)	15		BEARING (order 327 426 R91)
4	327 949 R91	RAIL and FORK, hi-low speed shifter	16		SPACER (order 327 426 R91)
5	327 939 R11 62 778 D	GUIDE, gear shifter rail LOCK, gear shifter rail guide screw (2) 3/8 x 3/4" hex-hd cap SCREW (4)	17	327 955 R1	GEAR, reverse idler (27 T)
6	331 375 R1	GEAR, hi-low sliding (18T and 25T) (Order SHAFT, 327 951 R2 and GEAR, 331 375 R2) L150P 6501 to 6976	18		BEARING (order 327 426 R91)
7	331 375 R2	GEAR, hi-low sliding (18T and 25T) L-150P 6977 up	19	327 927 R1	WASHER, reverse idler shaft nut lock
8	17 138 R1	KEY, 1/4 x 2-3/4" (Woodruff) (2)	20	18 558 R1	NUT, reverse idler shaft (3/4NF)
8	327 951 R1	SHAFT, transmission counter (order GEAR, 331 375 R2 and SHAFT, 327 951 R2) L-150P 6501 to 6976	21	327 965 R91	PINION and SHAFT, BEVEL, 327 960 R1 w/DRIVE BEVEL GEAR 609 967 C1 (matched pair) (order GEAR and PINION SET, 609 969 C91, RETAINER, 341 811 R1, NUT, 20 017 R1) (see NOTE) L-150P 6501 to 8414 Except 8312, 8314, 8325 and 8326
9	327 952 R1	GEAR, reverse countershaft (28 T)	21	609 969 C91	PINION and SHAFT, BEVEL (609 968 C91) w/DRIVE BEVEL GEAR 609 967 C1 (matched pair) (see NOTE) L-150P 8312, 8314, 8325, 8326, and 8415 up
10	327 935 R1	SPACER, transmission countershaft gear			
11	327 959 R1	GEAR, forward countershaft (35 T)			
12	327 427 R91	BEARING, countershaft front			

NOTE:- Also Listed and Illustrated Under  
Heading "STEERING SYSTEM-  
DRIVE BEVEL GEAR."

**TRANSMISSION**  
**(Used on Power Shift Loaders)**

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRANSMISSION, COUNTERSHAFT, GEARS AND RELATED PARTS - Continued					
21A	327 960 R1	PINION and SHAFT, BEVEL (9T) (Order PINION and SHAFT SET 609 969 C91, RETAINER 341 811 R1 and NUT, 20 017 R1) (See NOTE) L150P 6501 to 8414 Except 8312, 8314, 8325 and 8326	31	327 950 R1	CAGE, pinion shaft front bearing 3/8 x 1-1/4" hex-hd cap SCREW (3) 3/8" lock WASHER (3)
21A	341 812 R1	PINION and SHAFT, BEVEL (9T) (Order PINION and SHAFT SET 609 969 C91) (See NOTE) L150P 8312, 8314, 8325, 8326, and 8415 to 12770	32		PACK ASSY, clutch (for components see list of parts under details of "Clutch Pack and Related Parts")
21A	609 968 C1	PINION and SHAFT, BEVEL (9T) (30° spiral angle) (See NOTE) L150P 12771 Up	33	327 956 R11 297 330 R1	BAFFLE, transmission oil SCREW, 3/8 x 1" hex-hd cap (2) L-150P 6501 to 8013
21B	279 338 R1	GEAR, drive bevel (38T) (20° pressure angle) (for L150P 6501 to 8414 Except 8312, 8314, 8325 and 8326 order PINION and SHAFT SET 609 969 C91, RETAINER 341 811 R1 and NUT 20 017 R1) (for L150P 8312, 8314, 8325, 8326, and 8415 to 12770 order PINION and SHAFT SET 609 969 C91) (See NOTE) L150P 6501 to 12770	327 426 R91		BEARING, reverse idler gear (consists of Ref. Nos. 15, 16 and 18)
21B	609 967 C1	GEAR, DRIVE BEVEL (38T) (22-1/2° pressure angle) (See NOTE) L150P 12771 Up			
22	53 635 D	SHIM, rear bearing (heavy) (X)			
22	53 636 D	SHIM, rear bearing (medium) (X)			
22	53 637 D	SHIM, rear bearing (light) (X)			
22	250 307 R1	SHIM, rear bearing (extra light) (X)			
23	38 260 D	KEY, 3/8 x 2-3/4" (Woodruff)			
24	327 425 R91 313 692 R1	BEARING, pinion shaft SCREW, 1/2 x 1-3/4" hex-hd cap (4) 1/2" lock WASHER (4)			
25	331 376 R1	GEAR, hi-low driven (35 T)			
26	351 048 R1	RETAINER, hi-low driven gear L-150P 6501 to 8414			
26	341 811 R1	RETAINER, hi-low driven gear L-150P 8415 up			
27	279 732 R1	NUT, bevel pinion shaft L-150P 6501 to 8414			(X) - As Required.
27	20 017 R1	NUT, bevel pinion shaft L-150P 8415 up			NOTE - Also Listed and Illustrated Under Heading "Steering System - Drive Bevel Gear".
29	327 429 R1	BEARING, input shaft rear			
30	279 456 R92	BEARING, pinion shaft front			




- 86 -  
**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**



TRANSMISSION, FRONT COVER, OIL PUMP  
AND RELATED PARTS

TRANSMISSION, FRONT COVER, OIL PUMP  
AND RELATED PARTS - Continued

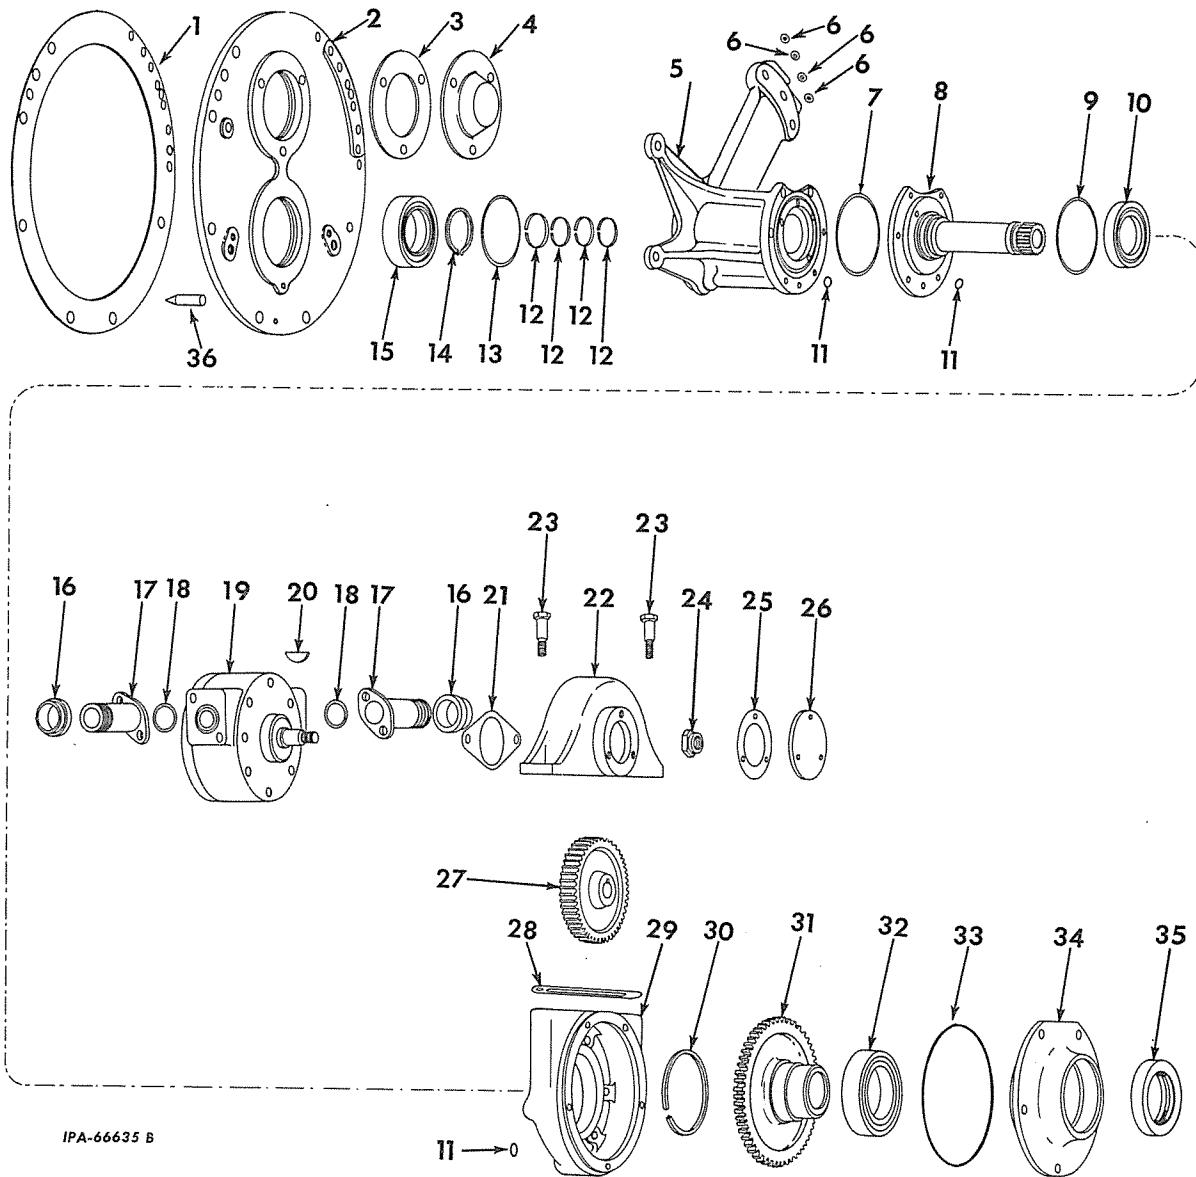

IPA-66635 B

**TRANSMISSION  
(USED ON POWER SHIFT LOADERS)**


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRANSMISSION, FRONT COVER, OIL PUMP AND RELATED PARTS - Continued					
1	331 461 R1	GASKET, transmission front cover	29	327 963 R2	HOUSING, pump drive (together w/"O" RING, 264 681 R1 will work for 327 963 R1)
2	331 463 R11	COVER, w/two PIN, 316 079 R1, transmission front SCREW, 7/16 x 1-1/8" hex-hd cap (7)	30	327 420 R1	RING, pump drive gear sealing (hook type)
3	327 925 R1	GASKET, transmission countershaft front bearing retainer	31	327 953 R1	GEAR, pump drive (33 T) L-150P 6501 to 9905
4	338 165 R1	RETAINER, transmission countershaft bearing 3/8 x 1" hex-hd cap SCREW (3)	31	604 845 C1	GEAR, pump drive (33 T) L-150P 9906 up
5	331 460 R11	SUPPORT w/PIN, 141 275 and PLUG, 444 783, pump drive housing SCREW, 1/2 x 1-3/8" hex-hd cap (3) 7/16 x 3" hex-hd cap SCREW (3) 7/16" lock WASHER (3)	32	65 490 D	BEARING, pump drive gear front
6	252 739 R1	"O" RING (1/2 x 11/16 x 3/32") (4)	33	327 928 R1	GASKET, pump drive housing cover L-150P 6501 to 9905
7	259 246 R1	"O" RING, converter stator support quill (3-7/8 x 4-1/8 x 1/8")	33	264 681 R1	"O" RING (6-1/2 x 6-3/4 x 1/8") L-150P 9906 up
8	331 462 R1 313 756 R1	QUILL, converter stator support SCREW, 3/8 x 1-1/4" hex-hd cap (6)	34	327 957 R2	COVER, pump drive housing 3/8 x 7/8" hex-hd cap SCREW (5) 3/8" lock WASHER (5)
9	468 339 R1	"O" RING, converter stator support quill (4 x 4-1/4 x 1/8")	35	327 424 R92	SEAL, pump drive housing L-150P 6501 to 9905
10	ST 572	BEARING, input drive	35	606 293 C91	SEAL, pump drive housing L-150P 9906 up
11	355 967 R1	"O" RING (3/8 x 1/16") (3)	36	316 079 R1	PIN, transmission baffle guide (2) L-150P 8014 up
12	325 059 R1	RING, input shaft sealing (hook type) (4)	36	341 763 R1	PIN, transmission baffle guide (furnished as part of PACKAGE, 341 762 R91) (2) L-150P 6501 to 8013
13	610 411 C1	"O" RING, pump drive housing support (3-1/2 x 3-3/4 x 1/8")	341 762 R91	PACKAGE, transmission baffle guide pin field improvement (consists of baffle guide PIN, 341 763 R1) (2) L-150P 6501 to 8013	
14	466 191 R1	RING, input shaft front bearing snap	141 275		PIN, pump drive housing support dowel
15	327 428 R91	BEARING, input shaft front	45 132 D		PIN, front cover dowel
16	330 851 R1	BUSHING, pump inlet and outlet pipe (2)	444 783		PLUG, pump drive housing support pipe (3/8")
17	330 850 R11	PIPE, pump inlet and outlet (2) 3/8 x 1" hex-hd cap SCREW (4) 3/8" lock WASHER (4)			
18	708 560 R1	"O" RING (1-5/16 x 1-9/16 x 1/8") (2)			
19	327 421 R91	PUMP, converter supply (for components see list of parts under details of "Converter Supply Pump") 3/8 x 3" hex-hd cap SCREW (2) 3/8" WASHER (brass) (2)			
20	124 549	KEY, 3/16 x 3/4" (Woodruff No. 91)			
21	327 945 R1	GASKET, pump			
22	327 964 R1	HOUSING, pump mounting			
23	327 924 R2	BOLT, pump housing dowel (2) 1/2" external tooth lock WASHER (2)			
24	19 263 R1	NUT, 5/8NF (Esna)			
25	327 922 R1	GASKET, pump mounting housing cover			
26	327 921 R1	COVER, pump mounting housing 5/16 x 3/4" hex-hd cap SCREW (3) 5/16" lock WASHER (3)			
27	327 961 R1	GEAR, pump driven (46 T)			
28	327 923 R1	GASKET, pump mounting housing			




-88-

## TRANSMISSION (USED ON POWER SHIFT LOADERS)



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CONVERTER SUPPLY PUMP (Webster)			CONVERTER SUPPLY PUMP - Continued (Webster)		

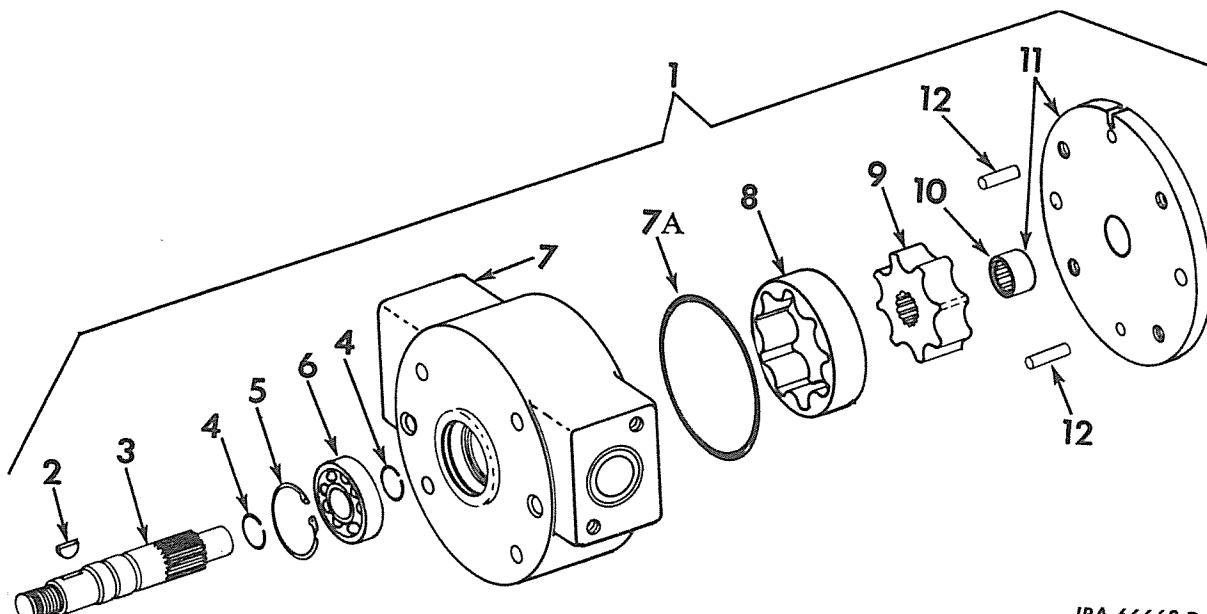

IPA-66663 D

1	327 421 R91	PUMP, converter supply (155-35206)	7A	343 700 R1	"O" RING (4 x 4-3/16 x 3/32")
2	124 549	KEY, pump drive gear (Woodruff) (3/16 x 3/4")	8	333 827 R1	GEAR, outer (151-35212-1)
3	333 825 R1	SHAFT, drive (151-35210)	9	333 826 R1	GEAR, inner (151-35211)
4	454 331 R1	RING, shaft retaining (2)	10	276 578 R91	BEARING, needle (151-21054)
5	272 842 R1	RING, bearing retainer	11	333 822 R91	COVER, w/BEARING, 276 578 R91, pump housing end
6	333 829 R91	BEARING, ball (151-23360)	12	343 691 R1	PIN, cover mounting dowel (2)
7	333 824 R1 333 830 R1	HOUSING, pump (151-35209-1) SCREW, counter bore '5/16 x 2") (4)			

-89-

**MEMORANDA**




**TRANSMISSION  
(USED ON POWER SHIFT LOADERS)**

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

CLUTCH PACK AND RELATED PARTS  
(Rockford)

CLUTCH PACK AND RELATED PARTS - Continued  
(Rockford)

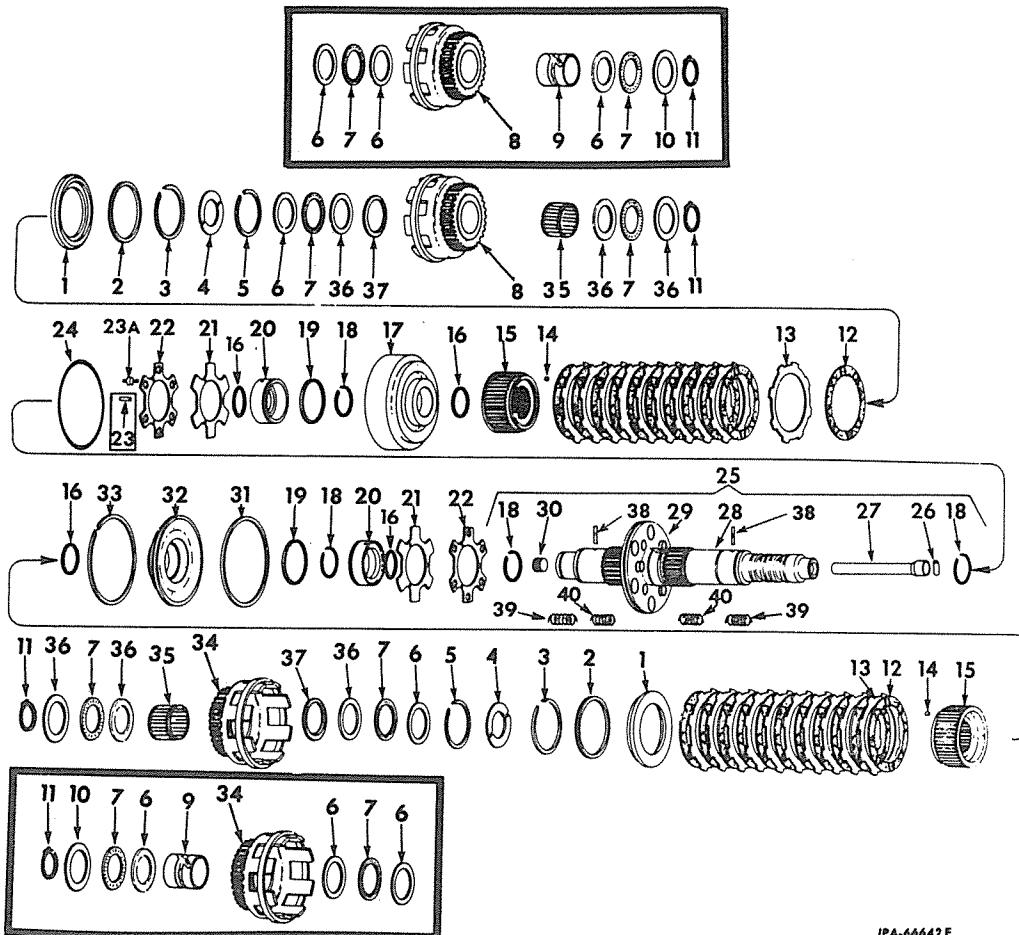

IPA-66642 F

1	324 242 R1	PLATE, clutch backing (used w/HUB 346 647 R91) (2)	8	610 827 C91	GEAR, clutch second speed drive L-150P 12635 up
1	627 365 C1	PLATE, backing (part of HUB ASSY 627 401 C91) (2)	9	610 008 C1	BUSHING, first and second drive clutch gear (2) L-150P 6501 to 12634
2	324 245 R1	RING, snap (int) (used w/HUB 346 647 R91) (2)	10	333 853 R1	SPACER, washer (2) L-150P 6501 to 12634
2	627 367 C1	RING, snap (int) (part of HUB ASSY 627 401 C91) (2)	11	287 049 R1	RING, external snap (2)
3	333 857 R2	RING, snap (ext) (used w/HUB 346 647 R91) (2)	12	324 240 R1	PLATE, internal splined (Order 22 PLATE 702 959 C1) (see NOTE)
3	627 366 C1	RING, snap (ext) (part of HUB ASSY 627 401 C91) (2)	12	702 959 C1	PLATE, internal splined (22 PLATES 702 959 C1 will work for PLATES 324 240 R1) (see NOTE) (22)
4	324 231 R1	RETAINER, clutch hub (4)	13	324 241 R1	PLATE, external splined (20)
5	324 232 R1	RING, snap (internal) (2)	14	324 244 R1	PIN, dowel (used w/HUB 346 647 R91) (2)
6	584 269 R1	SPACER, washer (6) L-150P 6501 to 12634 (2) L-150P 12635 up	15	346 647 R91	HUB, clutch (order HUB ASSY 627 491 C91) (2)
7	584 268 R91	BEARING, needle thrust (4)	15	627 400 C1	HUB, clutch (part of HUB ASSY 627 401 C91) (2)
8	333 852 R91	GEAR w/BUSHING 610 008 C1 CLUTCH second speed drive L-150P 6501 to 12634	NOTE - Do Not Intermix CLUTCH PLATE 702 959 C1 With Displaced CLUTCH PLATE 324 240 R1 In Any One CLUTCH PACK ASSY.		

**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**

REF.	PART NO.	PART NUMBER	DESCRIPTION	REF.	PART NO.	PART NUMBER	DESCRIPTION
<b>CLUTCH PACK AND RELATED PARTS - Continued</b> (Rockford)							
16	627 969 C1	"O" RING (piston hook type) (2 used with CLUTCH PACK 610 464 C91 and 610 752 C92, 4 used w/CLUTCH PACK 625 777 C92)		27			TUBE, clutch shaft (Not Furnished Separately)
17	324 228 R2	HOUSING, piston (for CLUTCH PACK 610 464 C91 and 610 752 C92 order HOUSING 627 669 C1) (for CLUTCH PACK 625 777 C91 order 1 HOUSING 627 669 C1, 1 PISTON 627 668 C1, 2 PISTON 627 667 C1, and 3 PIN 627 666 C1)		28			SHAFT (Not Furnished Separately)
17	627 669 C1	HOUSING, piston		29	346 596 R91	PLATE, separator (order PACKAGE, 610 877 C91)	L-150P 6501 to 11306
18	324 222 R1	RING, snap (external) (4)		29	610 478 C1	PLATE, separator	L-150P 11307 to 15338
19	324 223 R1	"O" RING (piston hook type) (2)		29	627 092 C1	PLATE, separator	L-150P 15339 up
20	324 221 R1	PISTON, accelerating (order two PISTON, 610 481 C1)		30	324 236 R1	PLUG, 3/8" pipe	L-150P 6501 to 8625
20	610 481 C1	PISTON, accelerating (used with CLUTCH PACK 610 464 C91 and 610 752 C92) (2)		30	347 553 R1	PLUG, 1/2" pipe	L-150P 8626 up
20	627 093 C1	PISTON, accelerating (used with CLUTCH PACK 625 777 C91) (order 1 HOUSING 627 669 C1, 1 PISTON 627 668 C1, 2 PISTON 627 667 C1, and 3 PIN 627 666 C1) (2)		31	324 226 R1	"O" RING (lathe cut)	
20	627 667 C1	PISTON, accelerating (used with CLUTCH PACK 625 777 C92) (2)		32	324 225 R2	PISTON, clutch (for CLUTCH PACK 610 464 C91 and 610 752 C92 order PISTON 627 668 C1) (for CLUTCH PACK 625 777 C91 order 1 HOUSING 627 669 C1, 1 PISTON 627 668 C1, 2 PISTON 627 667 C1, and 3 PIN 627 666 C1)	
21	610 751 C1	VALVE, disc (2)		32	627 668 C1	PISTON, clutch	
22	610 760 C1	DISC, reinforcing (used with CLUTCH PACK 610 464 C91 and 610 752 C92) (2)		33	347 297 R1	RING, snap (internal)	
22	625 205 C1	DISC, reinforcing (used with CLUTCH PACK 327 422 R92 and 625 777 C92) (2)		34	333 851 R91	GEAR w/BUSHING, 610 008 C1 clutch first speed drive	L-150P 6501 to 12634
23	324 218 R1	PIN, dowel (used with CLUTCH PACK, 327 422 R92) (3)		34	610 826 C91	GEAR, clutch first speed drive	L-150P 12635 up
23A	610 755 C1	PIN, dowel (used with CLUTCH PACK 610 464 C91, and 610 752 C92) (for CLUTCH PACK 625 777 C91 order 1 HOUSING 627 669 C1, 1 PISTON 627 668 C1, 2 PISTON 627 667 C1, and 3 PIN 627 666 C1) (3)		35	610 828 C91	BEARING, roller, first and second drive clutch gear	(2) L-150P 12635 up
23A	627 666 C1	PIN, dowel (used with CLUTCH PACK 625 777 C92) (3)		36	610 769 C1	WASHER, thrust	(6) L-150P 12635 up
24	324 227 R1	"O" RING		37	610 829 C1	SPACER, bearing	(2) L-150P 12635 up
25	333 854 R92	SHAFT ASSY, clutch (order KIT 630 110 C1) L-150P 6501 to 11306		38	17 164 R1	PIN, spring (2)	
25	610 809 C91	SHAFT ASSY, clutch (order KIT 630 110 C1) L-150P 11307 to 12634		39	625 206 C1	SPRING, comp	(6) L-150P 15339 up
25	610 825 C91	SHAFT ASSY, clutch L-150P 12635 to 15338 (Order the following - 2 DISC 625 205 C1 2 PISTON 627 667 C1 1 SHAFT 627 091 C91 6 SPRING 625 206 C1 6 SPRING 625 821 C1 )		40	625 821 C1	SPRING, comp	(6) L-150 15339 up
25	627 091 C91	SHAFT ASSY, clutch L-150P 15339 up (Composed of - 1 PIN 606 102 C1 2 PIN 17 164 R1 1 PLATE 627 092 C1 1 PLUG 347 553 R1 2 RING 324 222 R1 1 SHAFT )		627 401 C91	HUB ASSY (2) (Composed of - 1 HUB 627 400 C1 1 PLATE 627 365 C1 1 RING 627 366 C1 1 RING 627 367 C1)		
26	606 102 C1	PIN, dowel					S - Not Furnished Separately.

**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
CLUTCH PACK AND RELATED PARTS - Continued (Rockford)					
630 110 C1	KIT, clutch shaft field service L-150P 6501 to 12634		610 752 C92	PACK ASSY, final clutch (order PACK ASSY, 625 777 C92) L-150P 12635 to 15338	
	(Consists of -			(Composed of -	
2	DISC	625 205 C1	4	BEARING	584 268 R91
1	HOUSING	627 669 C1	2	DISC	610 760 C1
3	PIN	627 666 C1	1	GEAR ASSY	610 826 C91
2	PIN	17 169 R1	1	GEAR ASSY	610 827 C91
2	PISTON	627 667 C1	1	HOUSING	627 669 C1
1	PISTON	627 668 C1	2	HUB ASSY	627 401 C91
1	RING	324 226 R1	2	"O" RING	324 223 R1
1	RING	324 227 R1	2	"O" RING	627 969 C1
2	RING	324 223 R1	1	"O" RING	324 226 R1
4	RING	627 969 C1	1	"O" RING	324 227 R1
1	RING	347 297 R1	3	PIN	610 755 C1
2	RING	324 222 R1	2	PISTON	610 481 C1
§ 1	SHAFT ASSY		1	PISTON	627 668 C1
6	SPRING	625 206 C1	22	PLATE	702 959 C1
6	SPRING	625 821 C1	20	PLATE	324 241 R1
2	VALVE	610 751 C1)	4	RETAINER	324 231 R1
610 877 C91	PACKAGE, separator plate field service L-150P 6501 to 11306		2	RING	287 049 R1
	(Consists of -		4	RING	324 222 R1
2	DISC	610 760 C1	2	RING	324 232 R1
3	PIN	610 755 C1	1	RING	347 297 R1
1	PLATE	610 478 C1	1	SHAFT ASSY	610 825 C91
2	PISTON	610 481 C1	2	SPACER	610 829 C1
1	RING	324 226 R1	2	SPACER	584 269 R1
1	RING	324 227 R1	2	VALVE	610 751 C1
2	VALVE	610 751 C1)	6	WASHER	610 769 C1)
610 464 C91	PACK ASSY, final clutch (will work for final clutch PACK ASSY, 327 422 R92) L-150P 6501 to 12634		625 777 C92	PACK ASSY, final clutch L-150P 15339 up	
	(Composed of -			(Composed of -	
4	BEARING	584 268 R91	4	BEARING	584 268 R91
2	DISC	610 760 C1	2	BEARING	610 828 C91
1	GEAR ASSY	333 851 R91	2	DISC	625 205 C1
1	GEAR ASSY	333 852 R91	1	GEAR ASSY	610 826 C91
1	HOUSING	627 669 C1	1	GEAR ASSY	610 827 C91
2	HUB ASSY	627 401 C91	1	HOUSING	627 669 C1
2	"O" RING	324 223 R1	2	HUB ASSY	627 401 C91
2	"O" RING	627 969 C1	2	"O" RING	324 223 R1
1	"O" RING	324 226 R1	4	"O" RING	627 969 C1
1	"O" RING	324 227 R1	1	"O" RING	324 226 R1
3	PIN	610 755 C1	1	"O" RING	324 227 R1
2	PISTON	610 481 C1	3	PIN	627 666 C1
1	PISTON	627 668 C1	2	PISTON	627 067 C1
22	PLATE	702 959 C1	22	PLATE	702 959 C1
20	PLATE	324 241 R1	20	PLATE	324 241 R1
4	RETAINER	324 231 R1	4	RETAINER	324 231 R1
2	RING	287 049 R1	2	RING	287 049 R1
4	RING	324 222 R1	4	RING	324 222 R1
2	RING	324 232 R1	2	RING	324 232 R1
1	RING	347 297 R1	1	RING	347 297 R1
§ 1	SHAFT ASSY		1	SHAFT ASSY	627 091 C91
2	SPACER	333 853 R1	2	SPACER	610 829 C1
6	SPACER	584 269 R1	6	SPRING	584 269 R1

§ - Not Furnished Separately.

MEMORANDA



# TRANSMISSION (USED ON POWER SHIFT LOADERS)

REF. PART  
NO. NUMBER


DESCRIPTION

REF. PART  
NO. NUMBER

DESCRIPTION

TRANSMISSION PIPING

TRANSMISSION PIPING - Continued

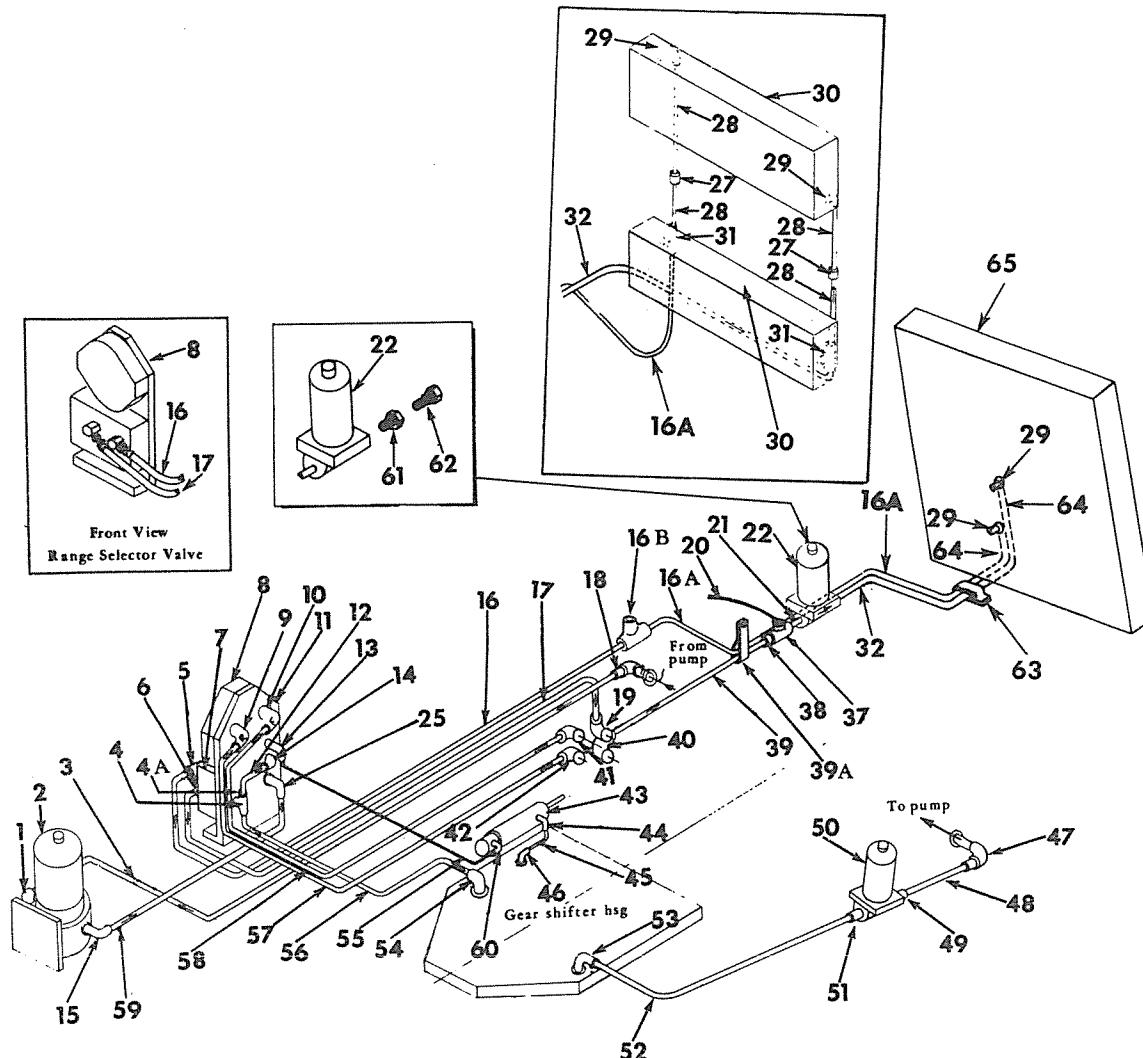

IPB-10731 F

1	297 581 R91	ELBOW, 90° adapter	7	VALVE ASSY, main regulator (for components see list of parts under details of "Main Regulator Valve") 3/8" NUT (4) 3/8 x 1-1/4" hex-hd cap SCREW (4) 3/8" lock WASHER (4)
2	333 719 R91	FILTER, pressure (for components see list of parts under details of "Pressure Filter") 3/8" NUT (4) 3/8 x 1-1/4" hex-hd cap SCREW (4) 3/8" lock WASHER (4)	8	VALVE ASSY, range selector (for components see list of parts under details of "Range Selector Valve") 5/16NF NUT (8) 5/16NF x 4-1/2" hex-hd cap SCREW (6) 5/16NF x 5" hex-hd cap SCREW (2) 5/16" lock WASHER (8)
3	338 621 R91	- HOSE w/FITTINGS, pump to pressure filter (HOSE, 3/4" x 45" long w/FITTINGS)	9	338 587 R91 UNION, adapter (3/8" NPT x 90°) 364 839 R1 "O" RING (.468 x .624 x .078")
4	338 335 R91	ADAPTER, 90° swivel (3/4-1/8" NPT)	10	338 587 R91 UNION, adapter (3/8" NPT x 90°) 364 839 R1 "O" RING (.468 x .624 x .078")
4A	9 409 271 272 982 9 409 521	CONNECTOR, 1/8" NPT FERRULE NUT	11	331 669 R1 BRACKET, regulator and selector valve 1/2" NUT (3) 1/2 x 1-5/8" hex-hd cap SCREW (3) 1/2" lock WASHER (3)
5	291 572 R91	UNION, 90° adapter L-150P 6501 to 9809	12	334 740 R1 TUBE, regulator to tee
5	297 581 R91 144 056	ELBOW, 90° adapter REDUCER, 1-3/4" NPT L-150P 9810 up		
6	291 572 R91	UNION, 90° adapter		

**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**



REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION
<b>TRANSMISSION PIPING - Continued</b>					
13	338 587 R91 364 839 R1	UNION, adapter (3/8" NPT x 90°) (2) "O" RING (.468 x .624 x .078")	18	338 586 R91	ADAPTER, union (3/4NPT)
14	9 409 323 272 982 9 409 521	ELBOW, 1/8" NPT FERRULE NUT	19	338 596 R91 570 838 R1	UNION, 90° adapter "O" RING (.644 x .818 x .087")
15	444 377	ELBOW, 3/4" NPT street (optional with 454 112)	20		CABLE, converter temperature (part of converter temperature gauge)
15	454 112	ELBOW, 3/4" NPT street (optional with 444 377)	21	127 878 610 794 C91	NIPPLE, 1 x 1-1/2NPT FILTER ASSY safety (Consists of ELEMENT 346 821 R91, "O" RING 313 337 R1 and SPRING 346 822 R1) (Filter Assembly 610 794 C91 will work for Filter Assembly 333 734 R91) 1/2 x 2-3/4" hex-hd cap SCREW (2) 17/32 x 1-1/16" x 13 ga WASHER (2) 1/2" lock WASHER (2)
16	603 564 C91	HOSE w/two FITTING, 347 957 R91, thermo by-pass to regulator (HOSE, 5/8" ID x 80" long including FITTINGS) L-150P 6501 to 9809	25	336 009 R91 368 269 R1	UNION, adapter (3/4NPT x 90°) "O" RING (.924 x 1.166 x .116")
16	347 957 R91	HOSE w/o FITTINGS, cut length 5/8" ID x 76-5/8" long cut from bulk HOSE, 319 710 R1 FITTING, rigid male pipe hose (2)	27	324 169 R91	COUPLING, pipe (2) L-150P 6501 to 15423
16	347 959 R91	HOSE w/FITTING, 347 957 R91 and FITTING, 319 753 R91, thermo by-pass to regulator (rear) (HOSE, 5/8" ID x 56" long including FITTINGS) L-150P 9810 to 10700	28	330 993 R1	PIPE, cooler connector (4) L-150P 6501 to 15423
16	347 957 R91 319 753 R91	HOSE w/o FITTINGS, cut length, 5/8" ID x 52-5/8" long, cut from bulk HOSE, 319 710 R1 FITTING, rigid male pipe hose FITTING, rigid male pipe hose	29	444 044	ELBOW, 90° street (2)
16	347 959 R91	HOSE w/FITTING, 347 957 R91 and FITTING, 319 753 R91, oil cooler outlet (rear) (HOSE, 5/8" ID x 56" long including FITTINGS) L-150P 10701 up	30	333 705 R92	COOLER, oil (mount ahead of radiator) (2) L-150P 6501 to 15423 3/8NF x 7/8" hex-hd cap SCREW (2) 3/8NF x 5/8" hex-hd cap SCREW (8) 3/8" lock WASHER (6) 3/8" plain WASHER (2)
16	347 957 R91 319 753 R91	HOSE w/o FITTINGS, cut length, 5/8" ID x 52-5/8" long, cut from bulk HOSE, 319 710 R1 FITTING, rigid male pipe hose FITTING, rigid male pipe hose	31	444 138	TEE, 1/2NPT (2) L-150P 6501 to 15423
16	347 957 R91 319 753 R91	HOSE w/two FITTING, 319 752 R91, by-pass housing to cooler (HOSE, 1/2" ID x 51" long including FITTINGS)	32	603 546 C91	HOSE w/o FITTINGS, cut length 1/2" ID x 47-3/4" long cut from bulk HOSE, 319 709 R1 (used only on units equipped with thermo by-pass valve) L-150P 6501 to 10700 FITTING, rigid male pipe hose (2)
16A	347 958 R91	HOSE w/two FITTINGS, 347 957 R91, thermo by-pass to regulator - front (HOSE, 5/8" ID x 23" long including FITTINGS) L-150P 9810 to 10700	32	319 752 R91 603 546 C91	HOSE w/two FITTINGS, 319 752 R91 safety filter to cooler inlet (HOSE, 1/2" ID x 51" long including FITTINGS) L-150P 10701 to 15423
16A	347 957 R91	HOSE w/o FITTINGS, cut length 5/8" ID x 19-5/8" long cut from bulk HOSE, 319 710 R1 L-150P 9810 to 10700	32	319 752 R91 619 789 C1	HOSE w/o FITTINGS, cut length 1/2" ID x 47-3/4" long cut from bulk HOSE, 319 709 R1 L-150P 10701 to 15423 FITTING, rigid male pipe hose (2)
16A	610 138 C91	HOSE w/two FITTINGS, 319 752 R91, oil cooler outlet (front) (HOSE, 1/2" ID x 61" long including FITTINGS) L-150P 10701 to 15423	32	319 752 R91 619 789 C1	HOSE, 2/two FITTINGS, safety filter to oil cooler inlet (HOSE 1/2" ID x 43" long w/FITTINGS) L-150P 15424 up
16A	319 752 R91 619 788 C1	HOSE w/o FITTINGS, cut length, 1/2" ID x 57-3/4" long, cut from bulk HOSE, 319 709 R1 FITTING, male pipe hose (2) HOSE, w/two FITTINGS, oil cooler outlet front (HOSE 1/2" ID x 68" long w/FITTINGS) L-150P 15424 up	39	347 957 R91	HOSE w/o FITTINGS, cut length 5/8" ID x 23-5/8" long cut from bulk HOSE, 319 710 R1 FITTING, rigid male pipe hose (2)
16B	347 516 R91	TEE, thermo by-pass hose swivel L-150P 9810 up	39A	326 078 R1	CLAMP, hose
17	603 565 C91	HOSE w/two FITTINGS, 347 957 R91, regulator to converter (HOSE, 5/8" ID x 41" long including FITTINGS)	40	338 783 R91 570 828 R1	UNION, adapter (1/2NPT x 90°) "O" RING (.644 x .818 x .087")
17	347 957 R91	HOSE w/o FITTINGS, cut length 5/8" ID x 37-5/8" long cut from bulk HOSE, 319 710 R1 FITTING, rigid male pipe hose (2)	41	338 587 R91 364 839 R1	UNION, adapter (3/8NPT x 90°) "O" RING (.468 x .624 x .078")
(x) - Order Cut Length Required.					

# TRANSMISSION (USED ON POWER SHIFT LOADERS)

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>TRANSMISSION PIPING - Continued</b>					
42	338 587 R91 364 839 R1	UNION, adapter (3/8NPT x 90°) "O" RING (.468 x .624 x .078")	63	326 078 R1	CLAMP, cooler hose L-150P 15424 up
43		CYLINDER, decelerator (illustrated and listed with "Engine Controls")			3/8 x 3/4" hex-hd cap SCREW 13/32 x 13/16 x 16 ga. WASHER
44	333 712 R1 272 984 9 409 523	ELBOW, 1/8NPT FERRULE NUT	64	255 678 C1	NIPPLE, cooler inlet and outlet elbow (2) L-150P 15424 up
45	330 808 R1	TUBE, decelerator to sump	65	619 787 C2	COOLER, oil (mount ahead of radiator) 3/8 x 7/8" hex-hd cap SCREW (4) 3/8" lock WASHER (4) 13/32 x 13/16" x 16 ga. WASHER (4)
46	9 409 325 272 984 9 409 523	ELBOW, 1/4NPT FERRULE NUT	338 784 R91		ADAPTER, 90° swivel (used on units equipped with a thermo by-pass valve) L-150P 6501 to 10700
47	9 409 343 272 989 9 409 528	ELBOW, 1NPT FERRULE NUT	345 811 R91		BAFFLE w/SEAL, 345 810 R1, dust (mounted on top of lower cooler) L-150P 8617 up
48	330 790 R1	TUBE, filter to pump	160 834 R91 301 819 R1		CLAMP, hose (2) CLAMP (3) L-150P 6501 to 15423 3/8 x 3/4" hex-hd cap SCREW (3)
49	9 409 278 272 989 9 409 528	CONNECTOR, 1NPT FERRULE NUT	330 929 R1		CLIP, oil cooler outlet hose (mounted to front safety filter bolt) L-150P 10701 up
50	610 794 C91	FILTER w/ELEMENT, 346 821 R91, "O" RING, 313 337 R1 and SPRING, 346 822 R1, suction (will work for 333 734 R91)	321 029 R91		ELEMENT, safety and suction filter (used with FILTER, 333 734 R91) (2)
51	9 409 278 9 409 528 272 989	CONNECTOR, 1NPT NUT FERRULE	346 821 R91		ELEMENT, safety and suction filter (used with FILTER, 610 794 C91) (2)
52	330 789 R1	TUBE, sump to filter	325 040 R1		GASKET, regulator valve
53	9 409 330 272 989 9 409 528	ELBOW, 1NPT FERRULE NUT	325 041 R1		GASKET, hydraulic valve spacer
54	297 581 R91	ELBOW, 90° adapter	317 623 R1		GROMMET, 1-1/2" ID (2) L-150P 6501 to 15423
55		HOSE w/two FITTINGS, 317 912 R91, regulator to decelerator (HOSE, 13/32" ID x 25" long including FITTINGS)	318 497 R1		GROMMET, 1-3/4" ID oil cooler hose L-150P 15424 up
		HOSE w/o FITTINGS, cut length 13/32" ID x 22-3/8" long cut from bulk HOSE, 319 708 R1	319 709 R1		HOSE, bulb 1/2" ID (x)
	317 912 R91	FITTING, rigid male pipe hose (Aeroquip No. 4412-6-8) (2)	319 710 R1		HOSE, bulk 5/8" ID (x)
	319 708 R1	HOSE, 13/32" ID bulk (x)	219 679		NIPPLE, 1 x 4-1/2" (used on units equipped with a thermo by-pass valve) L-150P 6501 to 10700
56	702 199 C91	HOSE w/two FITTING, 319 753 R1, regulator to sump (HOSE, 5/8" ID x 17" long including FITTINGS)	313 337 R91		"O" RING, safety and suction filter (3.250 x 3.500 x .125") (optional with 354 836 R1) (2)
	319 753 R1	HOSE w/o FITTINGS cut length 5/8" ID x 13-5/8" long (cut from bulk HOSE 319 710 R1)	354 836 R1		"O" RING, safety and suction filter (3.250 x 3.500 x .125) (optional with 313 337 R91) (2)
57	338 624 R91	FITTING, male pipe (2)	331 775 R1		PAD, hydraulic hose clamp (2)
	338 624 R91	HOSE w/FITTINGS, reverse selector to manifold (HOSE, 1/2 x 40" long w/ FITTINGS)	444 661		PLUG, 3/8" sq-soc pipe (used on units equipped with a thermo by-pass valve) L-150P 6501 to 10700
58	338 623 R91	HOSE w/FITTINGS, forward selector to manifold (HOSE, 1/2 x 44" long w/ FITTINGS)	345 810 R1		SEAL, dust baffle
59	702 199 C91	HOSE w/two FITTING, 319 753 R1, pressure filter to regulator (HOSE 5/8" ID x 17" long including FITTINGS)	325 030 R1		SPACER, hydraulic valve
	319 753 R1	HOSE w/o FITTINGS, cut length 5/8" ID x 13-5/8" long (cut from bulk HOSE, 319 710 R1)	346 822 R1		SPRING, safety and suction filter (used with FILTER, 610 794 C91) (2)
60	293 350 R91	FITTING, male pipe (2)	291 572 R91		UNION, 90° adapter (3/4NPT) (used on units equipped wth a thermo by-pass valve) L-150P 6501 to 10700
61	347 521 R91	UNION, 3/8NPT x 90° adapter	346 505 R91		UNION, 45° adapter (used on units equipped with a thermo by-pass valve) L-150P 6501 to 10700
61	255 678 C1	ADAPTER, safety filter to oil cooler inlet L-150P 10701 to 15423			
62	120 062	NIPPLE, safety filter to oil cooler inlet L-150P 15424 up			
		BUSHING, filter reducer pipe L-150P 10701 up			


(x) - Order Cut Length Required.

TRANSMISSION  
(USED ON POWER SHIFT LOADERS)

REF. PART  
NO. NUMBER

DESCRIPTION

GEAR SELECTOR HAND LEVER, GUARD AND GATE

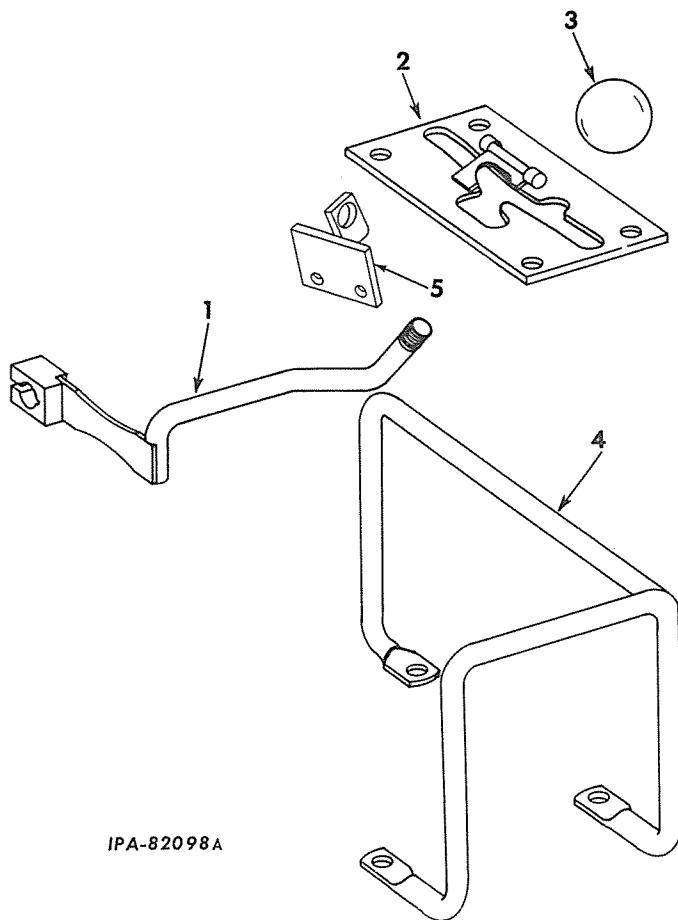


IPA-82098A

- |   |                         |  |
|---|-------------------------|--|
| 1 | 330 796 R12             | LEVER, gear selector hand<br>3/8" NUT<br>3/8 x 2" hex-hd cap SCREW<br>3/8" lock WASHER   |
| 2 | 700 394 C1              | GATE, gear selector hand lever (together<br>with SWITCH, 700 395 C1, BRACKET,<br>700 393 C1 and two BOLT, 12 935 R1<br>will work for GATE, 330 799 R13,<br>604 852 C91 or 612 711 C91)<br>3/8" NUT (3)<br>3/8 x 7/8" hex-hd cap SCREW (3)<br>3/8" lock WASHER (3)<br>7/16 x 1" x 14 ga. WASHER (3) |
| 3 | 264 055 R2              | BALL, gear selector hand lever   |
| 4 | 331 962 R91             | GUARD, gear selector hand lever<br>1/2" NUT<br>1/2 x 1" hex-hd cap SCREW<br>1/2" lock WASHER   |
| 5 | 700 393 C1<br>12 935 R1 | BRACKET, starting switch mounting (used<br>only with SWITCH, 700 395 C91) (*)<br>BOLT (3)  |
|   | 12 026 R1               | WASHER (3 max. to each mounting bolt)<br>(between Drott carrying frame and top<br>torque converter cover) (x)  |

(\*) - Also Listed With "Electric Starting and  
Lighting."  
(x)- As Required.

**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**

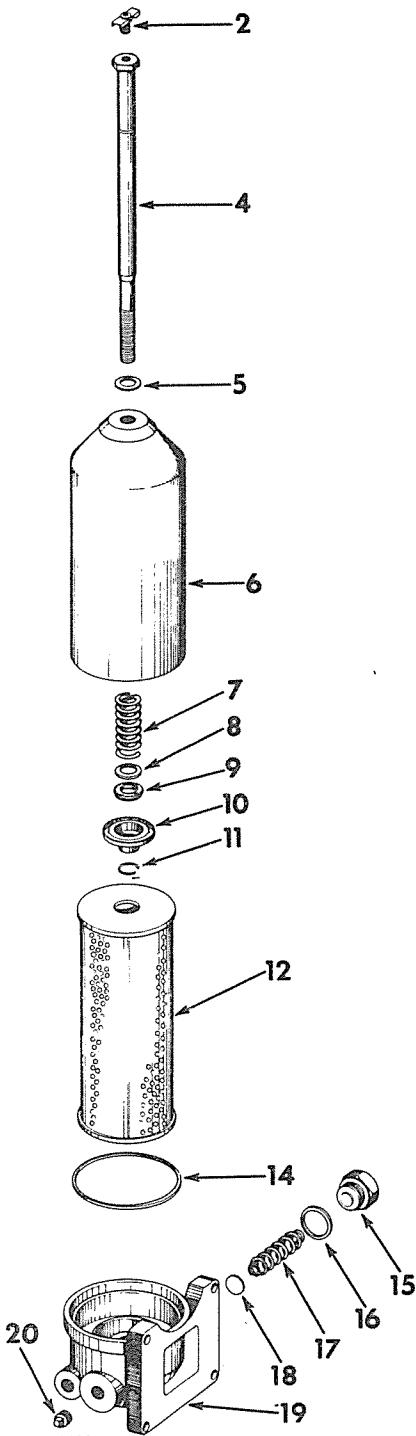REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
PRESSURE FILTER (AC)					PRESSURE FILTER (AC) - Continued
					
1	333 719 R91 102 635 179 841 615 031 R1 103 321	FILTER ASSY, pressure (5578951) 3/8" NUT (4) 3/8 x 1-1/4" hex-hd cap SCREW (4) WASHER, 3/8" (4) 3/8" lock WASHER (4) (Consists of the following parts -	2		VALVE, purge (Not Furnished Separately)
4		STUD, center (Not Furnished Separately)	4		
5	302 567 R1	GASKET, oil filter shell stud	5		
6		SHELL (Not Furnished Separately)	6		
7	313 021 R1	SPRING, oil filter shell	7		
8	302 570 R1	WASHER, oil filter shell	8		
9	302 571 R1	SEAL, filter element retainer	9		
10	302 572 R1	RETAINER, filter element	10		
11	302 573 R1	RING, filter element snap	11		
12	302 574 R91	PACKAGE, filter element field service (consists of ELEMENT, GASKET 302 567 R1 and GASKET 302 565 R1) (optional w/PACKAGE 613 797 C91)	12	613 797 C91	PACKAGE, filter element field service (consists of ELEMENT, GASKET 303 123 R1, and GASKET 306 330 R1) (PUROLATOR) (optional w/PACKAGE 302 574 R91)
14	302 565 R1	GASKET, oil filter base	14		
15	338 754 R1	PLUG	15		
16	338 751 R1	GASKET	16		
17	338 752 R1	SPRING	17		
18	338 753 R1	VALVE	18		
19		BASE, oil filter (Not Furnished Separately)	19		
20	444 577	PLUG, oil filter drain (1/4" NPT) (2)	20		


**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

TRANSMISSION SUMP TUBE AND RELATED PARTS  
 (For Units Equipped With PACKAGE, 345 577 R91)  
 L-150P 6501 to 8149

TRANSMISSION SUMP TUBE AND RELATED PARTS  
 L-150P 8150 up

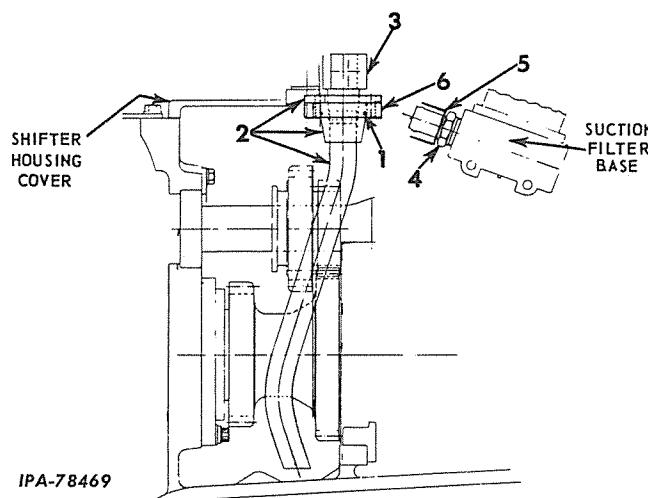

IPA-78469

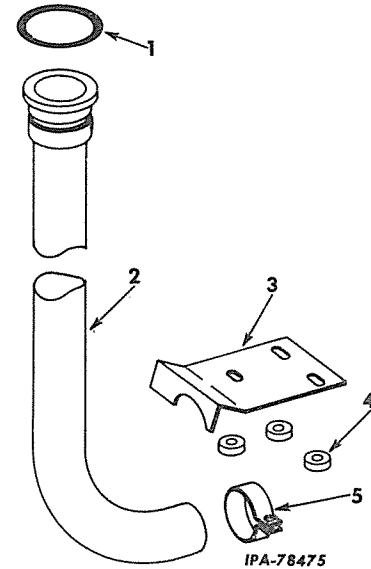

IPA-78475


1	298 384 R1	"O" RING, 1-11/16 x 1-7/8 x 3/32" (tube flange)	1	252 483 R1	"O" RING, 1-1/4" x 1-1/2 x 1/8" sump tube
2	345 576 R11	TUBE, sump 3/8 x 1" hex-hd cap SCREW	2	338 151 R11	TUBE, sump
3	444 048	ELBOW, 90° automotive	3	338 150 R1	BAFFLE, sump tube 3/8 x 1-1/4" hex-hd cap SCREW (3) 3/8" lock WASHER (3) 13/32 x 13/16" x 16 ga. WASHER (3)
4	343 834 R1	NIPPLE, hose (2)	4	253 729 R1	SPACER, baffle (3)
5	272 281 R1	HOSE (molded)	5	308 882 R1	CLAMP, sump tube
6	345 574 R1	ADAPTER, sump tube			
	279 027 R91	CLAMP, hose (2)			
	604 365 C2	GASKET, shifter housing			
	444 679	PLUG, 1" pipe			

**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

RANGE SELECTOR VALVE  
(Rockford)

RANGE SELECTOR VALVE - Continued  
(Rockford)

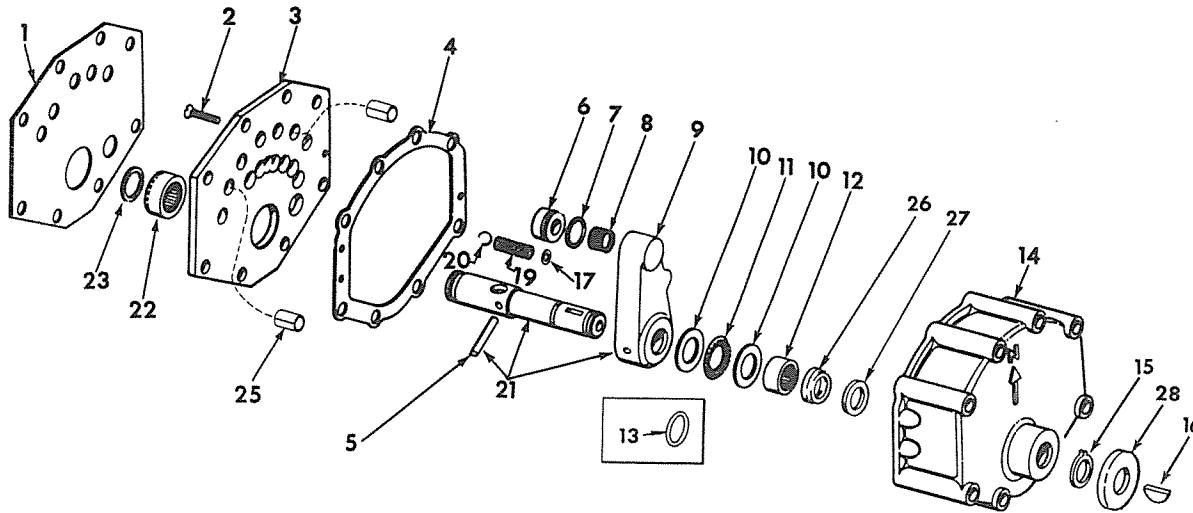


1	324 021 R1	GASKET, valve plate	26	615 851 C1	SEAL, shaft L-150P 14001 up
2		SCREW, 1/4 x 3/4" fl-hd	27	615 850 C1	WASHER, seal back up L-150P 14001 up
3	606 068 C91	PLATE w/BEARING, 10 026 R and two PIN, 20 348 R1 selector valve	28	616 285 C1	SHEIELD, range selector dust L-150P 14001 up
4	324 019 R1	GASKET, range selector valve		606 067 C92	VALVE ASSY, range selector (Composed of -
5	324 009 R1	PIN (Not Furnished Separately)			1 BALL 13 722 D
6	324 013 R1	WIPER, range selector valve			1 BEARING 276 578 R91
7	347 641 R1	"O" RING, wiper (3/4 x 7/8 x 1/16")			1 BEARING 324 105 R91
8	324 010 R1	SPRING, valve wiper			1 COVER 324 003 R1
9		VALVE (Not Furnished Separately)			1 GASKET 324 019 R1
10	324 004 R2	WASHER, thrust (2)			1 GASKET 324 021 R1
11	324 105 R91	BEARING, thrust needle			1 KEY 124 549
12	276 578 R91	BEARING			1 "O" RING 347 641 R1
13	324 030 R1	"O" RING, shaft (3/4 x 1 x 1/8") (order SEAL, 615 851 C1 and WASHER, 615 850 C1) L-150P 6501 to 14000			1 PLATE 606 068 C91
14	324 003 R1	COVER, range selector valve			1 RETAINER 324 013 R1
15	516 010 R1	RING, snap			1 RING 516 010 R1
16	124 549	KEY (Woodruff No. 9)			1 RING 324 022 R1
17	324 013 R1	RETAINER, spring			1 SEAL 616 851 C1
19	324 012 R1	SPRING, detent			1 SHAFT 324 006 R92
20	13 722 D	BALL, 1/2" dia detent spring			1 SPRING 324 010 R1
21	324 006 R92	SHAFT w/PIN and VALVE, range selector valve			1 SPRING 324 012 R1
22	10 026 R	BEARING, plate needle			1 WIPER 324 009 R1
23	324 022 R1	RING, piston hook type			2 WASHER 324 004 R2
25	20 348 R1	PIN, roll (selector valve plate) (2)			1 WASHER 616 850 C1 )
			606 067 C91		VALVE ASSY, range selector (order PACKAGE 703 239 C91)

**TRANSMISSION**  
**(USED ON POWER SHIFT LOADERS)**

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

MAIN REGULATOR VALVE  
(Rockford)

MAIN REGULATOR VALVE - Continued  
(Rockford)

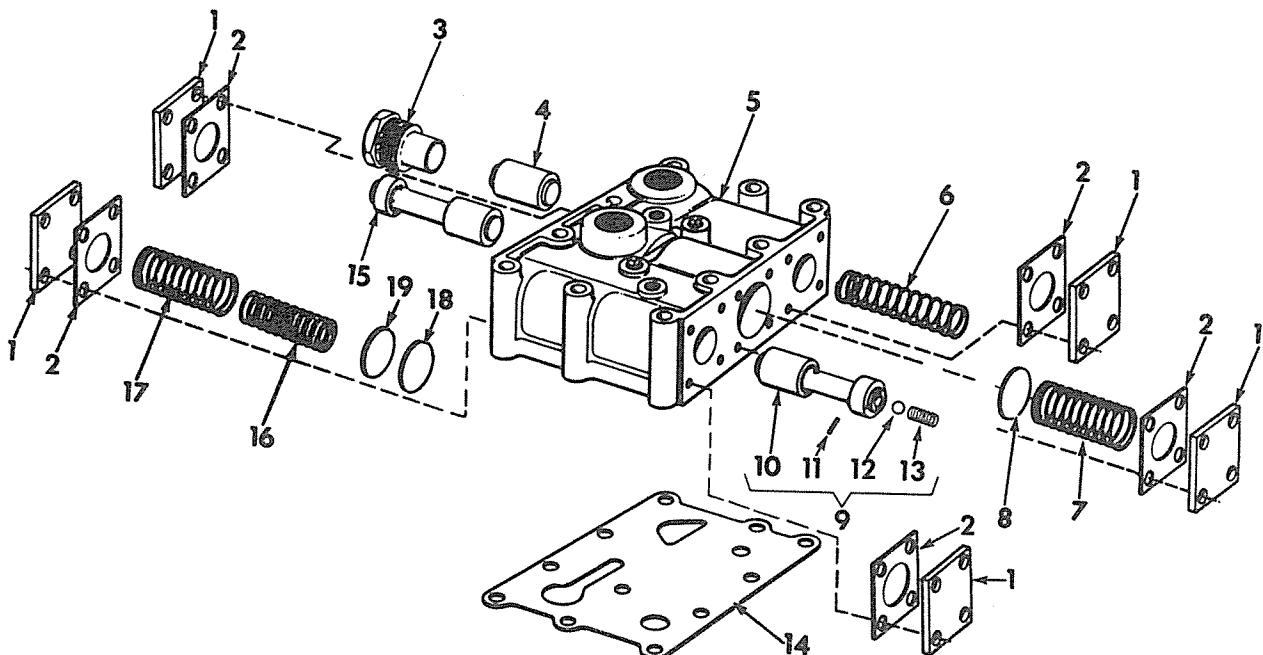


IPA-66252 G

1	321 991 R1	COVER, valve (A-300306) (5) 5/16 x 3/4" hex-hd cap SCREW w/lock WASHER (20)	15	321 998 R1	VALVE, by-pass (A-300304)
2	321 992 R1	GASKET, valve cover (A-300308) (5)	16	324 299 R1	SPRING, main pressure regulator (inner) (A-305698)
3	343 556 R1	PLUG (A-306587)	17	324 300 R1	SPRING, main regulator (A-305697)
4	321 994 R1	VALVE, lube pressure regulator (A-303280)	18	606 506 C1	WASHER, spring (A-30765700) (x)
5		BODY, main regulator valve (Not Furnished Separately)	19	321 997 R1	WASHER, spring (A-300305) (x)
6	336 103 R1	SPRING, lube valve (A-305966)	444 613		PLUG, 1/8" NPT sq-hd pipe (3)
7	338 415 R1	SPRING, by-pass valve (A-305879)	333 787 R92		VALVE ASSY, main regulator (C-305880) (Composed of -
8	321 997 R1	WASHER, (A-300305) (1)			§1 BODY
9	338 651 R94	VALVE ASSY, main spool (A-306707)			5 COVER 321 991 R1
10		VALVE, main spool (Not Furnished Separately)			5 GASKET 321 992 R1
11	20 139 R1	PIN, main spool valve (A-306706)			1 PLUG 343 556 R1
12	346 509 R1	BALL, main spool valve (A-303641)			(x) WASHER 606 506 C1
13	347 243 R1	SPRING, main spool valve (A-306946)			3 PLUG 444 613
14	325 040 R2	GASKET, main valve body (not part of VALVE ASSY, 333 787 R92)			1 SPRING 336 103 R1
					1 SPRING 338 415 R1
					1 SPRING 324 300 R1
					1 SPRING 324 299 R1
					1 VALVE 321 994 R1
					1 VALVE 321 998 R1
					1 VALVE 338 651 R94
					1 WASHER 321 997 R1 )
					3/8" NUT (11)
					3/8 x 4-3/4" hex-hd cap SCREW (11)
					3/8" lock WASHER (11)

(x) - Order Cut Length Required.  
§ - Not Furnished Separately.

## STEERING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
STEERING BRAKES AND CONTROLS			STEERING BRAKES AND CONTROLS - Continued		

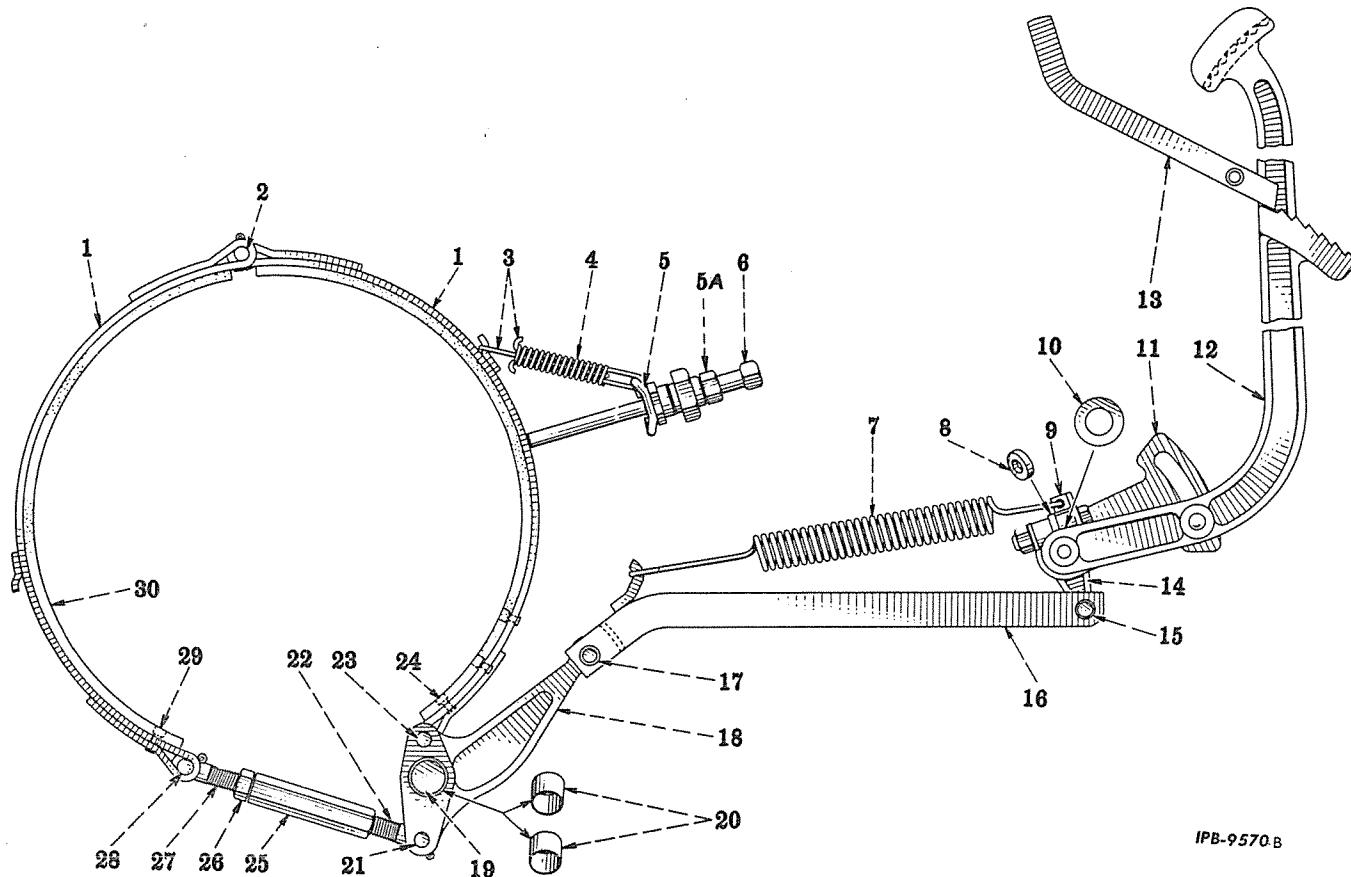

IPB-9570B

1	703 387 C91	BAND w/LINING (long life), twenty-two RIVET, 269 164 R1 and two RIVET, 274 164 R1 steering brake (4)	7	53 495 D	SPRING, steering brake rod return (2)
1	274 160 R91	BAND w/four LINING (high capacity), twenty-two RIVET, 269 164 R1 and two RIVET, 274 164 R1 steering brake (optional with 603 468 C91) (x)	8	20 841 D	KEY, steering brake lever (2)
1	603 468 C91	BAND w/four LINING (high capacity), twenty-two RIVET, 269 164 R1 and two RIVET, 274 164 R1 steering brake (optional with 274 160 R91) (x)	9	53 497 D	ANCHOR, steering brake rod return spring (2)
2	274 165 R1	PIN, steering brake band joint (2) 1/8 x 1-1/8" cotter PIN (2)	10	41 519 D	SEAL, steering brake pedal shaft dirt (2)
3	269 178 R1	HOOK, steering brake band anchor spring (4)	11	53 503 DA	SHAFT and ADJUSTER, LH steering brake pedal
4	269 177 R1	SPRING, steering brake band anchor (2)	11	53 504 DA	SHAFT and ADJUSTER, RH steering brake pedal
5	43 664 DC	ANCHOR, steering brake return spring (2) 1" jam NUT (2)	12	275 179 R2	PEDAL, LH steering brake
5A		NUT, 5/8" brake band set screw lock (2)	12	275 180 R2	PEDAL, RH steering brake 1/2NF x 1-1/2" hex-hd cap SCREW (2) 1/2NF x 2-3/4" hex-hd cap SCREW (2) 1/2" lock WASHER (4)
6	53 490 D	SCREW, steering brake band set (2)	13	304 768 R91	PAWL, LH steering brake ratchet

(x) - Order Cut Length Required.

## STEERING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
STEERING BRAKES AND CONTROLS - Continued					
13	304 769 R91	PAWL, RH steering brake ratchet 1/8 x 5/8" cotter PIN (2)	274 699 R1		SPACER, steering brake pivot lever (2)
14	8 444 DA	LEVER, steering brake (2) 1/2NF NUT (2) 1/2NF x 2-1/4" hex-hd cap SCREW (2) 1/2" lock WASHER (2)	277 209 R1		STUD, steering brake pivot shaft (2) 1/2" lock WASHER (2)
15	103 498	PIN, 1/2" rod end (steering brake rod) (short) (2) 1/8 x 3/4" cotter PIN (2)			
16	264 830 R21	ROD, steering brake (2)			
17	275 734 R1 148 150	PIN, steering brake rod end (long) (2) SPRING, retainer (3/8" groove) (2)			
18	274 167 R11	LEVER w/two BUSHINGS, 46 023 D, steering brake pivot (2)			
19	274 698 R1	SHAFT, steering brake pivot (2)			
20	46 023 D	BUSHING, steering brake pivot lever (4)			
21	274 169 R1	PIN, steering brake band turnbuckle eye (short) (2) 1/8 x 1-1/8" cotter PIN (2)			
22	274 168 R1	EYE, steering brake band turnbuckle (LH thread) (2)			
23	274 165 R1	PIN, steering brake band pivot joint (2) 1/8 x 1-1/8" cotter PIN (2)			
24	269 164 R1	RIVET, steering brake band (short) (88)			
25	59 311 D	TURNBUCKLE, steering brake band (2)			
26		Follows Reference No. 27			
27	274 170 R1	EYE, steering brake band turnbuckle (RH thread) (2) 5/8NF NUT (2)			
28	274 165 R1	PIN, steering brake band turnbuckle eye (long) (2) 1/8 x 1-1/8" cotter PIN (2)			
29	274 164 R1	RIVET, steering brake band (long) (8)			
30		LINING, steering brake band (order 274 166 R91) (16)			
105 422		ELBOW, steering brake pedal shaft lubrica- tion fitting (†)			
273 348		FITTING, steering brake pedal shaft lubrica- tion (Alemite 1684-B) (optional with 443 564) (†)			
443 564		FITTING, steering brake pedal shaft lubrica- tion (Lincoln 5009) (optional with 273 348) (†)			
127 743		FITTING, steering brake pedal shaft lubrica- tion (2)			
53 514 DB		LOCK, steering brake pedal adjuster (2)			
274 166 R91		PACKAGE, steering brake lining (high capacity) field service (consists of four LINING, twenty-two RIVET, 269 164 R1 and two RIVET, 274 164 R1) (for use with steering brake BAND, 274 160 R91) (4)			
604 942 C91		PACKAGE, steering brake lining (high capacity) field service (consists of four LINING, twenty-two RIVET, 269 164 R1 and two RIVET, 274 164 R1) (for use with steer- ing brake BAND, 603 468 C91) (4)			
703 388 C91		PACKAGE, steering brake lining (long life field service (consists of four LINING, twenty-two RIVET, 269 164 R1 and two RIVET, 274 164) (for use with steering brake BAND, 703 387 C91) (4)			


(†) - Used On Power Shift Loaders.

## STEERING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

STEERING CLUTCH CONTROLS

STEERING CLUTCH CONTROLS - Continued

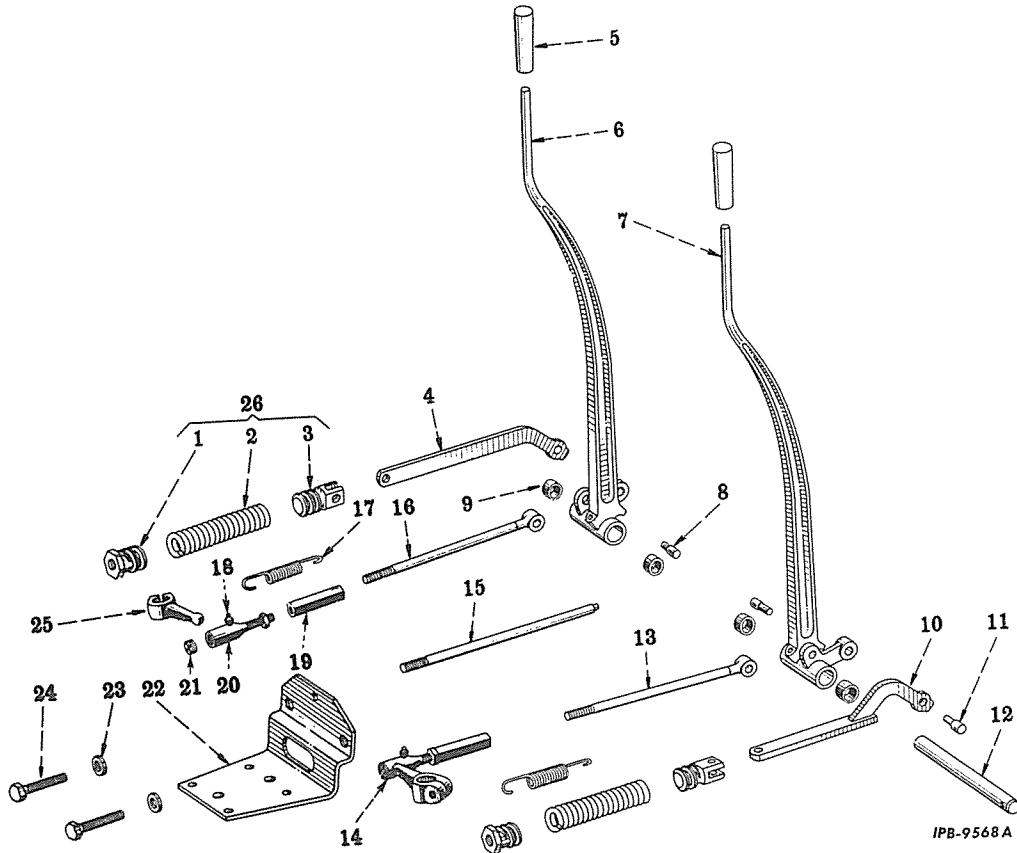

1	275 219 R1	NUT, steering clutch hand lever booster spring adjuster (2)	7	278 141 R11	LEVER ASSY, RH steering clutch hand (*) (Composed of -
2	275 218 R1	SPRING, steering clutch hand lever booster (2)			2 BUSHING 42 175 D
3	275 220 R1	YOKE, steering clutch hand lever booster spring (2)			1 EYE 275 785 R1
4	275 715 R1	LINK, LH steering clutch hand lever booster spring (order LINK, 604 737 C1, together with EYE, 275 784 R2, steering clutch operating turnbuckle) L-150G 6519 to 11055	271 500 179 860		1 HANDLE 619 405 C1
4	604 737 C1	LINK, LH steering clutch hand lever booster spring (together with EYE, 275 784 R2, will work for LINK, 275 715 R1) 1/8 x 1" cotter PIN 103 385 147 587 23/32 x 1-3/8" x 13 ga. WASHER L-150G 11056 up		7 327 981 R11	§1 LEVER 1 PIN 59 310 D 1 PIN 257 620 R1)
5	619 405 C1	HANDLE, steering clutch hand lever (2)	8	59 310 D	LEVER ASSY, RH steering clutch hand (†) (Composed of -
6	278 140 R11	LEVER ASSY, LH steering clutch hand (Composed of -			2 BUSHING 42 175 D
		2 BUSHING 42 175 D			1 EYE 275 785 R1
		1 EYE 275 784 R2			§1 LEVER
		1 HANDLE 619 405 C1			1 PIN 59 310 D
		§1 LEVER			1 PIN 257 620 R1)
		1 PIN 59 310 D			7/16" NUT
		1 PIN 257 620 R1)			7/16 x 1-1/4" hex-hd cap SCREW
271 500 179 860	7/16" NUT 7/16 x 1-1/4" hex-hd cap SCREW		9	42 175 D	PIN, steering clutch operating turnbuckle eye (2)
			10	275 716 R91	BUSHING, steering clutch hand lever (4)
					LINK, RH steering clutch hand lever booster spring (*)
					§ - Not Furnished Separately. (†) - Used On Power Shift Loaders. (*) - Used On Manual Shift Loaders.

## STEERING SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------

### STEERING CLUTCH CONTROLS - Continued

10	327 979 R1	LINK, RH steering clutch hand lever booster spring (†) 1/8 x 1" cotter PIN 23/32 x 1-3/8" x 13 ga. WASHER
11	257 620 R1	PIN, steering clutch booster link front (2)
12	275 217 R1	SHAFT, steering clutch hand lever 5/16 x 2" hex-hd cap SCREW 5/16" lock WASHER
13	275 785 R1	EYE, RH steering clutch operating turnbuckle 5/8NF jam NUT (LH thread)
14	59 313 D	SOCKET, RH steering clutch operating turn- buckle 5/8NF jam NUT
15	275 223 R1	BRACE, steering clutch hand lever booster spring anchor (*)
15	327 980 R1	BRACE, steering clutch hand lever booster spring anchor (†) 5/8" jam NUT (2)
16	275 784 R2	EYE, LH steering clutch operating turnbuckle 5/8NF jam NUT (LH thread)
17	59 315 D	SPRING, steering clutch release lever return (2)
18	109 461	FITTING, steering clutch operating turn- buckle socket lubrication (2)
19	59 311 D	TURNBUCKLE, steering clutch operating (2)
20	59 312 D	SOCKET, LH steering clutch operating turn- buckle 5/8NF jam NUT
21	59 314 D	PLUG, steering clutch operating turnbuckle socket (2) 1/8 x 1-1/2" cotter PIN (2)
22	275 224 R1	ANCHOR, steering clutch hand lever booster spring
	20 009 R1	SCREW, 7/16 x 1-1/2" hex-hd cap (4) L-150P 6501 to 9812 (4) L-150G 6519 to 9812
	20 050 R1	BOLT (nylock) (4) L-150P 9813 up (4) L-150G 9813 up 15/32 x 59/64" x 16 ga. WASHER (4)
23	257 625 R1	WASHER, steering clutch hand lever booster spring adjuster bolt (2)
24	275 222 R1	BOLT, steering clutch hand lever booster spring adjuster (2)
25	59 317 DA	LEVER, steering clutch release (2) 1/2NF NUT (2) 1/2NF x 2-1/2" hex-hd cap SCREW (2) 1/2" lock WASHER (2)
26	275 221 R91	SPRING w/NUT, 275 219 R1, SPRING, 275 218 R1 and YOKE, 275 220 R1, steering clutch hand lever booster (2) 1/2" rod end PIN (2) 1/8 x 7/8" cotter PIN (2)
	109 461	FITTING, steering clutch hand lever lubrication (2)
	109 454	FITTING, steering clutch operating turn- buckle eye lubrication (2)

(†) - Used On Power Shift Loaders.  
(\*) - Used On Manual Shift Loaders.

## **STEERING SYSTEM**

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
		DRIVE BEVEL GEAR			DRIVE BEVEL GEAR - Continued
1	341 925 R1	ADJUSTER, drive bevel gear bearing (together with "O" RING, 264 270 R1, will work for ADJUSTER, 271 855 R4) (2)	10	609 969 C91	PINION and SHAFT, bevel, 609 968 C1 w/drive bevel GEAR 609 967 C1 (matched pair) (see NOTE 2) L-150P 8312, 8314, 8325 8226 and 8415 up
2	313 913 R92	OIL SEAL, steering clutch shaft coupling (2)	10A		PINION and SHAFT, bevel (9T) (order PINION and SHAFT bevel w/drive bevel GEAR 279 339 R91) (See NOTE 1)
3	271 762 R1 311 269 R1 278 027 R1	LOCK, drive bevel gear bearing adjuster (2) SCREW, 3/8 x 1/2" hex-hd cap WIRE, bulk locking (No. 16 ga.) (customer must specify amount required)	10A	327 960 R1	PINION and SHAFT, bevel (9T) (order PINION, 609 968 C1, RETAINER 341 811 R1 and NUT, 20 017 R1) (see NOTE 2) L-150P 6501 to 8414 Except 8312, 8314, 8325 and 8326
4	271 856 R2	RING, drive bevel gear bearing adjuster (2)	10A	609 968 C1	PINION and SHAFT, bevel (9T) (see NOTE 2) L-150P 8312, 8314, 8325 8326 and 8415 up
5	271 854 R1	CAGE, drive bevel gear bearing (2)	10B	279 338 R1	GEAR, drive bevel (38T) (see NOTE 1)
6	341 764 R1	GASKET, drive bevel gear bearing cage (2)	10B	609 967 C1	GEAR, drive bevel (38T) (see NOTE 2)
7	271 857 R2	"O" RING, drive bevel gear bearing adjuster sealing (2) (for use with ADJUSTER, 271 855 R4)	11	271 853 R1	HUB, drive bevel gear
7	264 270 R1	"O" RING, drive bevel gear bearing adjuster sealing (2) (for use with ADJUSTER, 341 925 R1)	12	274 075 R2	BOLT, drive bevel gear dowel (6)
8	272 120 R1	CUP, drive bevel gear bearing (2)	274 864 R1		BOLT, drive bevel gear bearing cage and adjuster ring (16)
9	272 119 R91	CONE, drive bevel gear bearing (2)	25 079 D		NUT, drive bevel gear dowel bolt (6)
10	279 339 R91	PINION and SHAFT, bevel w/drive bevel GEAR, 279 338 R91) (matched pair) (see NOTE)			
10	327 965 R92	PINION and SHAFT, bevel, 327 960 R1 w/drive bevel GEAR 609 967 C1 (matched pair) (order GEAR and PINION SET, 609 969 C91, RETAINER, 341 811 R1 and NUT, 20 017 R1) (see NOTE 2) L-150P 6501 to 8414 Except 8312, 8314, 8325, and 8326			

NOTE 1 - Used on Manual Shift Loaders.  
Also Listed and Illustrated Under  
Heading "TRANSMISSION, (Four  
Speeds Forward, Two Reverse)  
(Manual Shift)."

NOTE 2 - Used on Power Shift Loaders.  
Also Listed and Illustrated Under  
Heading "TRANSMISSION,  
COUNTERSHAFT, GEARS and  
RELATED PARTS."

MEMORANDA






## STEERING SYSTEM



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
STEERING CLUTCH RELEASE SHAFT AND MECHANISM			STEERING CLUTCH RELEASE SHAFT AND MECHANISM – Continued		

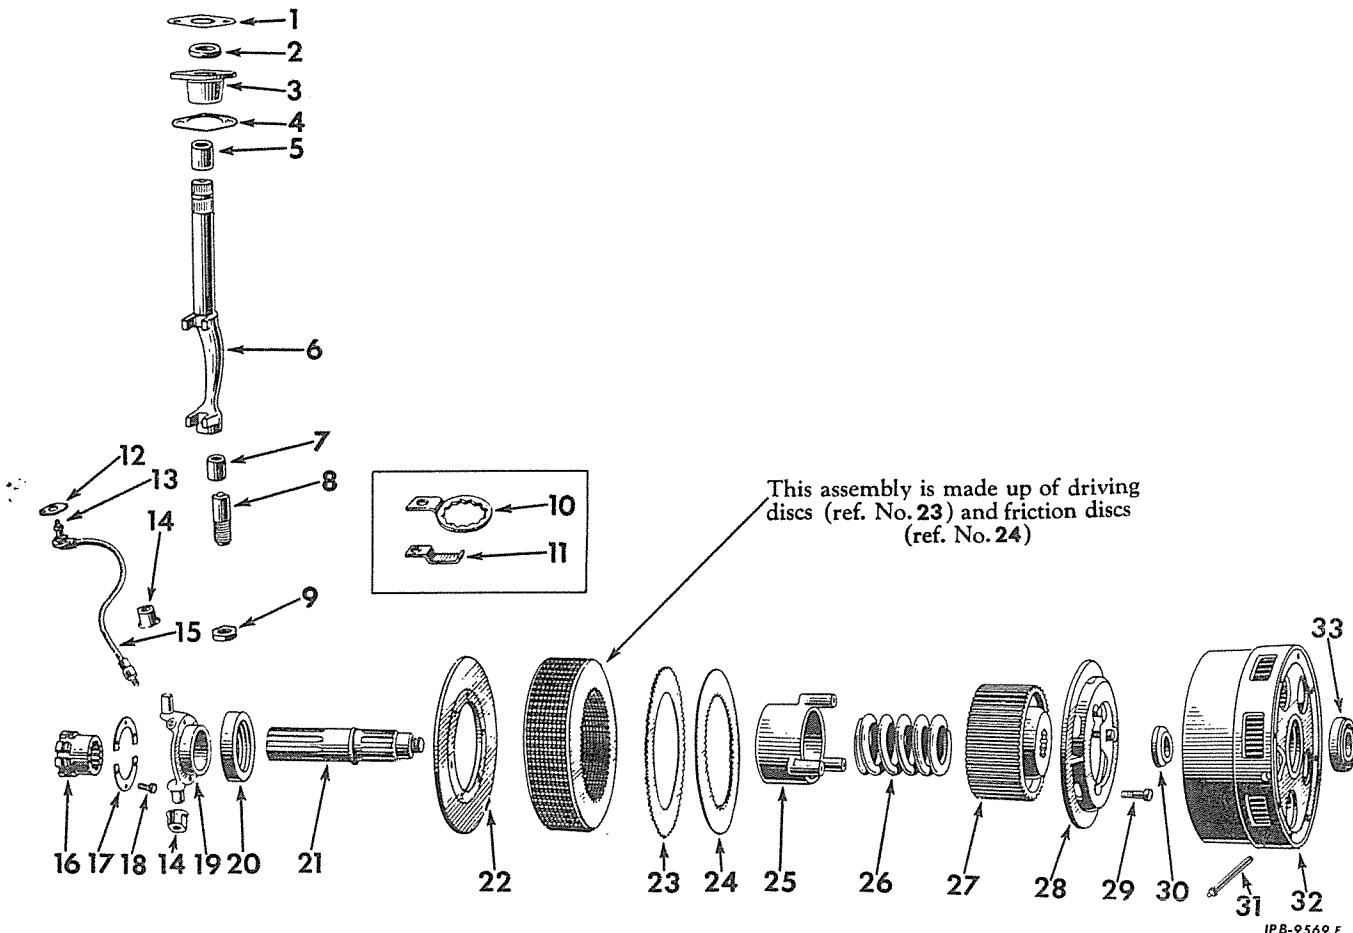

1	46 040 D 871 570 R1	RETAINER, steering clutch release shaft bearing felt (2) 7/16 x 1" nylock BOLT (4)	10	60 096 D	LOCK, steering clutch release fork pivot nut (2)
2	46 038 D	FELT, steering clutch release shaft bearing (2)	11	60 095 D	LOCK, steering clutch release fork pivot (2) 1/2 x 1" hex-hd cap SCREW (2) 1/2" lock WASHER (2)
3	604 366 C11	BEARING w/BUSHING, 53 597 D, steering clutch release shaft (2)	12	282 233 R1	GASKET, release bearing grease tube (2)
4	338 249 R1	GASKET, steering clutch release sha...	13	127 743	FITTING, steering clutch release bearing lubrication (2)
5	53 597 D	BUSHING, steering clutch release shaft (2)	14	42 298 DB	BUSHING, steering clutch release pin (4)
6	55 959 DD	FORK w/BUSHING, 55 955 DA andFITTING, 109 461 steering clutch release (2)	15	52 244 DX 13 253 R1	TUBE w/COUPLING and BRACKET, steering clutch release bearing grease (2) BOLT, 1/4 x 1" sq-hd mach (4) 1/4" NUT (4) 1/4" lock WASHER (4)
7	55 955 DA	BUSHING, steering clutch release fork pivot (2)	16	254 967 R21	COUPLING w/PLUG, 324 745 R1, steering clutch shaft (6 T) (2)
8	55 954 DA	PIVOT, steering clutch release fork (2)	17	254 968 R1	RETAINER, steering clutch shaft coupling (4)
9	47 726 D	NUT, steering clutch release fork pivot lock (2)			

## STEERING SYSTEM

REF.	PART NO.	NUMBER	DESCRIPTION
------	-------------	--------	-------------


### STEERING CLUTCH RELEASE SHAFT AND MECHANISM - Continued

18	333 785 R1		BOLT, steering clutch shaft coupling retainer (12)
19	52 243 DAX		COLLAR w/PLUG, 103 883, steering clutch release (2)
20	55 745 D		BEARING, steering clutch release thrust (2)
21	258 277 R2		SHAFT, steering clutch (2)
22	6 470 D		PLATE, steering clutch hub (2) 7/16 x 1" hex-hd cap SCREW (12) 7/16" lock WASHER (12)
23	46 826 D		DISC, steering clutch driving (20 used on units not equipped with ATTACHMENT, 320 398 R91) (22 used on units equipped with ATTACHMENT, 320 398 R91)
24	624 849 C1		DISC, steering clutch friction (not used with ATTACHMENT, 320 398 R91) (22)
24	320 395 R91		DISC, steering clutch friction (used with ATTACHMENT, 320 398 R91) (24)
25	8 236 DA		RETAINER, steering clutch pressure spring (2)
26	54 610 DB		SPRING, steering clutch pressure (2)
27	8 238 DB		HUB, steering clutch (2)
28	8 237 DB		PLATE, steering clutch pressure (2)
29	54 969 D		BOLT, steering clutch pressure plate dowel (6)
30	52 239 D		SPACER, steering clutch pilot bearing (2)
31	46 831 D		FITTING, steering clutch pilot bearing lubrication (2)
32	8 235 DB 338 357 R1		DRUM, steering clutch (2) BOLT, steering clutch drum (16)
33	ST 333		BEARING, steering clutch pilot (2)
109 461			FITTING, steering clutch release fork lubrication (2)
105 404			NIPPLE, steering clutch release collar (1/8 x 3/4" long cloved nipple) (2)
258 278 R1			NUT, steering clutch pilot bearing retainer (2)
103 883			PLUG, 1/8" hdls steering clutch release collar pipe (2)
324 745 R1			PLUG, steering clutch shaft coupling (2)
320 398 R91			ATTACHMENT, bi-metallic steering clutch (consists of twenty-four DISC, 320 395 R91 and two DISC, 46 826 D) (see NOTE 3)

NOTE 3 - Field Application - Order Through Regular Service Parts Channels.

## TRACK DRIVE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRACK FRAME AND SPRING			TRACK FRAME AND SPRING - Continued		

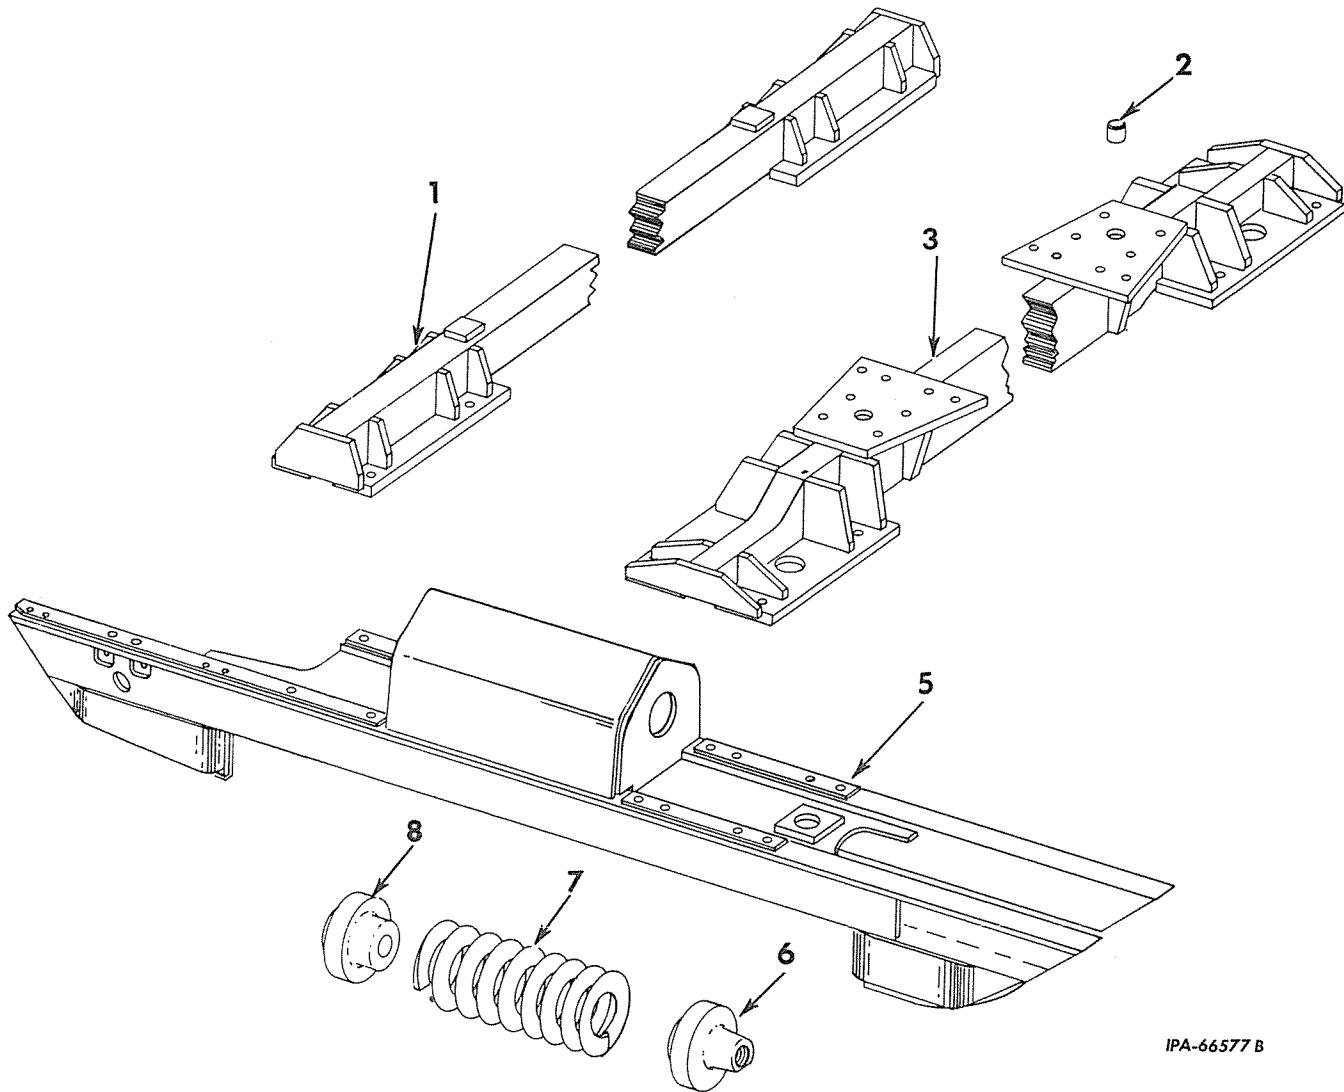

1	330 600 R91	CROSSBAR, rigid rear 1 x 2" hex-hd cap SCREW (8)	5	327 978 R92	FRAME, RH track
2	330 845 R1	DOWEL, equipment mounting (2)	6	330 638 R1	SEAT, track spring front (2)
3	330 607 R91	CROSSBAR, rigid front 3/4 x 2" hex-hd cap SCREW (4) 1 x 2" hex-hd cap SCREW (16)	7	330 631 R1	SPRING, track (2)
5	327 977 R92	FRAME, LH track	8	330 637 R1	SEAT, track spring rear (2)
				334 420 R1	GUIDE, hydraulic track adjuster rod (2) 1/2 x 1-1/4" hex-hd cap SCREW (4) 1/2" lock WASHER (4)

# TRACK DRIVE




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
FRONT IDLER					
1	316 992 R2	GUIDE, LH front idler L-150G 6519 to 14000 L-150P 6501 to 14000	2	616 342 C1	GUIDE, LH front idler (2) L-150G 14001 up (2) L-150P 14001 up
2	263 441 R1	CLAMP, front idler shaft (4) 9/16 x 1-7/8" hex-hd cap SCREW (18) 9/16" lock WASHER (4)	3	268 996 R1	PLUG, front idler lubrication (2)
4	382 432 R1	"O" RING, 2 x 2-1/4 x 1/8" (2) L-150G 14001 up (2) L-150P 14001 up	5	616 344 C1	SHAFT, front idler (2) L-150G 14001 up (2) L-150P 14001 up
6	616 345 C1	NUT, front idler adjusting L-150G 14001 up L-150P 14001 up	7	604 187 C91	OIL SEAL w/PAMPHLET, 108 522 GR1, metal face type front idler (2) L-150G 14001 up (2) L-150P 14001 up
8	13 367 DC	CONE, front idler shaft roller bearing (4)	9	13 363 D	CUP, front idler shaft roller bearing (4)
10	316 988 R1	IDLER, front (2) L-150G 6519 to 14000 (2) L-150P 6501 to 14000	10	616 339 G1	IDLER, front (2) L-150G 14001 up (2) L-150P 14001 up
11	316 993 R2	GUIDE, RH front idler L-150G 6519 to 14000 L-150P 6501 to 14000	11	616 343 C1	GUIDE, RH front idler (2) L-150G 14001 up (2) L-150P 14001 up
FRONT IDLER - Continued					
12	53 398 DA	PLATE, front idler guide cross (*) (2) 5/8 x 1-3/4" hex-hd SCREW (8)			
13	330 635 R1	ADJUSTER, front idler (*) 1/2 x 1-1/4" hex-hd cap SCREW (4) 1/2" lock WASHER (4)			
14	266 068 R1	NUT, front idler adjuster locking (*) (2)			
15	316 991 R1	SHAFT, front idler L-150G 6519 to 14000 L-150P 6501 to 14000			
16	319 635 R91	OIL SEAL, front idler L-150G 6519 to 14000 L-150P 6501 to 14000			
17	321 736 R1	"O" RING, 2-1/2 x 2-3/4 x 1/8" (front idler nut) L-150G 6519 to 14000 L-150P 6501 to 14000			
18	316 987 R1	NUT, front idler adjusting L-150G 6519 to 14000 L-150P 6501 to 14000			
606 133 C91	606 628 C91	PACKAGE, front idler oil seal field service (consists of WASHER, two BAND, two WIPER and PAMPHLET, 1 019 085 R1) (PACKAGE to be used to service OIL SEAL, 604 187 C91) (x) L-150G 14001 up (x) L-150P 14001 up	PACKAGE, reunitization band field service (consists of 50 RETAINER BANDS) (PACKAGE to be used to service OIL SEAL, 604 187 C91) (x) L-150G 14001 up (x) L-150P 14001 up		
(*) - Not Used On Units Equipped With Hydraulic Track Adjuster.					

## TRACK DRIVE




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>TRACK IDLER</b>			<b>TRACK IDLER-Continued</b>		
1	330 721 R1	SUPPORT, track idler (2) 3/4 x 1-3/4" hex-hd cap SCREW (8)			
2	307 041 R2	SHAFT, track idler (2) 1/2NF NUT (2) 1/2NF x 3-1/2" hex-hd cap SCREW (2) 1/2" lock WASHER (2)			
3	321 292 R91	OIL SEAL, track idler (2)			
4	320 641 R1	IDLER, track (2)			
5	307 033 R2	WASHER, track idler thrust (2) 1/2NF x 1-1/4" hex-hd cap SCREW (4) 1/2" external tooth lock WASHER (4)			
6	48 229 D	GASKET, track idler (2)			
7	307 042 R2	CAP, track idler (2) 1/2 x 1-1/2" hex-hd cap SCREW (6) 1/2" lock WASHER (6)			
8	271 647 R1	PLUG, 1" track idler lubrication (2)			

## TRACK CHAIN AND TRACK CHAIN W/SHOES

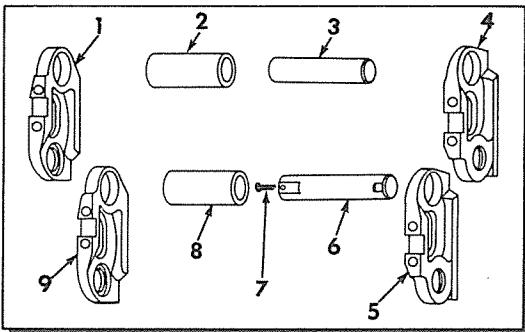

## TRACK CHAIN AND TRACK CHAIN W/SHOES - Continued

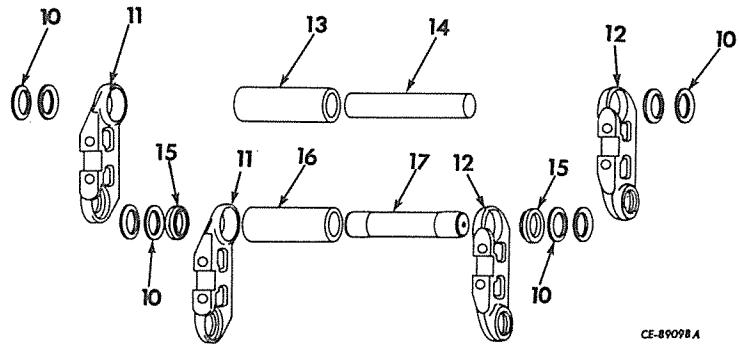

CE-89098A

Parts without letters after the description indicate the part is used for all Track Assemblies listed below: Letters A and B are used to identify separate Track Assemblies.

- A 316 846 R93 TRACK ASSY (less shoes) (2)  
L-150G 6519 to 14000  
L-150P 6501 to 14000  
(Order the following parts -  
156 BOLT 616 191 C1  
156 NUT 616 192 C1  
1 TRACK 703 127 C91 )
- B 703 127 C91 TRACK ASSY (less shoes) (2)  
L-150G 14001 up  
L-150P 14001 up

- |   |            |   |
|---|------------|---|
| 1 | 316 841 R3 | LINK, LH MASTER TRACK (2 for track A)                 |
| 2 | 621 299 C1 | BUSHING, track link (70) (76*)                        |
| 3 | 263 975 R1 | PIN, track link (70) (76*)                            |
| 4 | 316 742 R3 | LINK, RH master track (2 for track A)                 |
| 5 | 316 839 R3 | LINK, LH track (10) (76*) (for track frame A)         |
| 6 | 263 976 R1 | PIN, track master link (2 for track frame A)          |
| 7 | 19 795 R1  | LOCKWIRE, track master link pin (2 for track frame A) |
| 8 | 621 402 C1 | BUSHING, track master link (2 for track frame A)      |

TRACK DRIVE

REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------

TRACK CHAIN AND TRACK CHAIN W/SHOES - Continued

9	316 840 R3	LINK, RH track (70) (76*) (2 for track A)
10	616 187 C1	SEAL, track chain bushing (156 for track B)
11	616 186 C1	LINK, track RH (39 for track B)
12	616 185 C1	LINK, track LH (39 for track B)
13	621 299 C1	BUSHING, track chain (38 for track B)
14	263 975 R1	PIN, track chain (38 for track B)
15	616 189 C1	SPACER, master link (2 for track B)
15	272 853 R2	SPACER, master link (used with PACKAGE, 272 858 R92) (2)
16	621 402 C1	BUSHING, track master (track B)
17	616 190 C1	PIN, master (track B)
318 840 R95		CHAIN, track with shoes (15" overlapping flat low profile three grouser shoe) (*) (Composed of - 156     BOLT                 616 191 C1 1     CHAIN                 703 127 C91 156     NUT                 616 192 C1 39     SHOE                 277 507 R2)
272 858 R92		PACKAGE, track link bushing field service (consists of BUSHING, 263 974 R3, PIN, 263 975 R1 and two SPACER, 272 853 R2)

(\*) - Above CHAINS Service One Side of  
Tractors. Order Two Of Any Above  
To Service Both Sides Of Tractor.




-110B-

**MEMORANDA**



# TRACK DRIVE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
HYDRAULIC TRACK ADJUSTER			HYDRAULIC TRACK ADJUSTER - Continued		

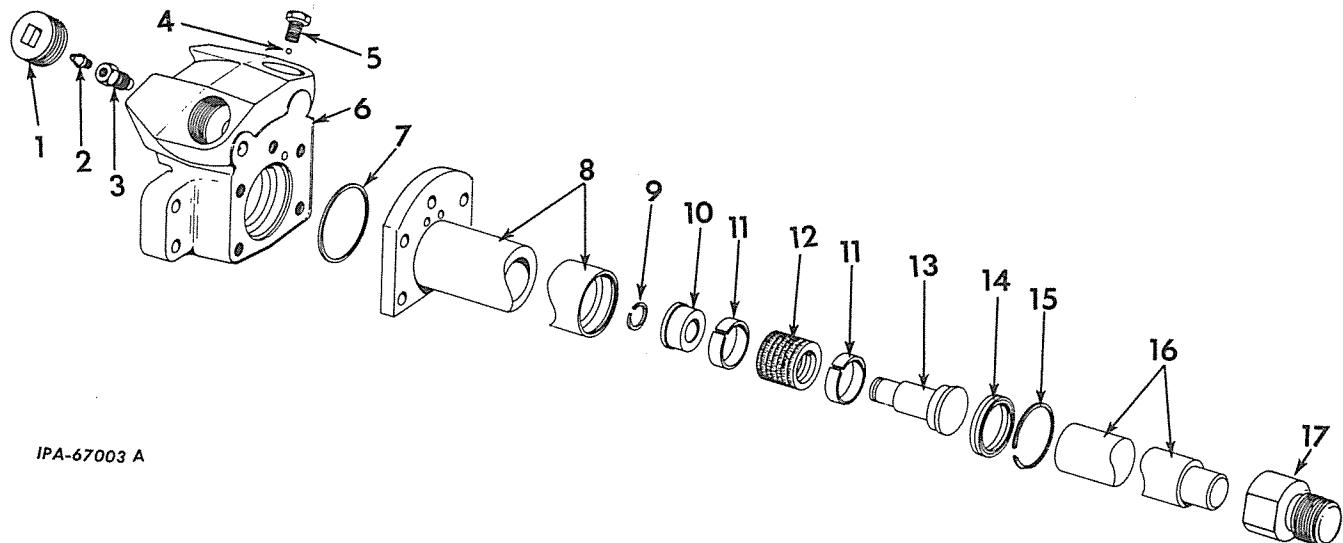

IPA-67003 A

331 541 R91	ATTACHMENT, hydraulic track adjuster (see NOTES 1 and 3)	8	345 649 R91	CYLINDER, RH hydraulic track adjuster (Order the following parts -
1 21 501 R1	PLUG, 1-1/4" sq-soc pipe (2)			1 CYLINDER 345 643 R91
2 109 461	FITTING, lubrication (2)			1 PLATE 345 646 R1
3 319 628 R91	VALVE, check (2)	19 993 R1		5 BOLT 570 879 R1 )
4 16 012 R1	BALL, 3/8" steel (2)	8	345 643 R91	1 "O" RING 606 170 C1 )
5 311 070 R1	BOLT, vent (2)			SCREW, 1/2 x 2-3/4" hex-hd cap (4)
6 331 539 R1	PLATE, cross LH (Order the following parts -		570 879 R1	1/2" lock WASHER (4)
	1 CYLINDER 345 643 R91	9	369 875 R1	RING, snap (2)
	1 PLATE 345 645 R1	10	331 537 R1	CYLINDER, hydraulic track adjuster (2) L-150P 9005 up
	1 "O" RING 606 170 C1			(2) L-150G 9005 up
	5 BOLT 570 879 R1 )	5/8 x 2-1/4" BOLT (10)	570 879 R1	5/8 x 2-1/4" BOLT (10)
6 331 540 R1	PLATE, cross RH (Order the following parts -	11	338 393 R1	END, hydraulic track adjuster piston (2)
	1 CYLINDER 345 643 R91	12	338 391 R1	RING, piston wear (4)
	1 PLATE 345 646 R1	13	331 538 R1	PACKING, hydraulic track adjuster (2)
	1 "O" RING 606 170 C1	14	338 392 R91	BODY, piston hydraulic track adjuster (2)
	5 BOLT 570 879 R1 )	15	338 390 R1	WIPER, seal (2)
6 345 645 R1	PLATE, cross LH	16	331 532 R2	RING, snap (2)
6 345 646 R1	PLATE, cross RH L-150P 9005 up L-150G 9005 up 5/8 x 1-7/8" hex-hd cap SCREW (8)	17	331 531 R1	ROD, hydraulic track adjuster (2)
7 606 170 C1	"O" RING, track adjuster sealing (2)			ADAPTER, hydraulic track adjuster rod (2)
8 345 649 R91	CYLINDER, LH hydraulic track adjuster (Order the following parts -			
	1 CYLINDER 345 643 R91			
	1 PLATE 345 645 R1			
	5 BOLT 570 879 R1			
	1 "O" RING 606 170 C1 )			
19 993 R1	SCREW, 1/2 x 2-3/4" hex-hd cap (4) 1/2" lock WASHER (4)			

NOTE 1 - Factory Application - Order On  
Machine Order Form.


NOTE 3 - Field Application - Order Through  
Regular Service Parts Channels.



## TRACK DRIVE



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRACK ROLLER			TRACK ROLLER - Continued		

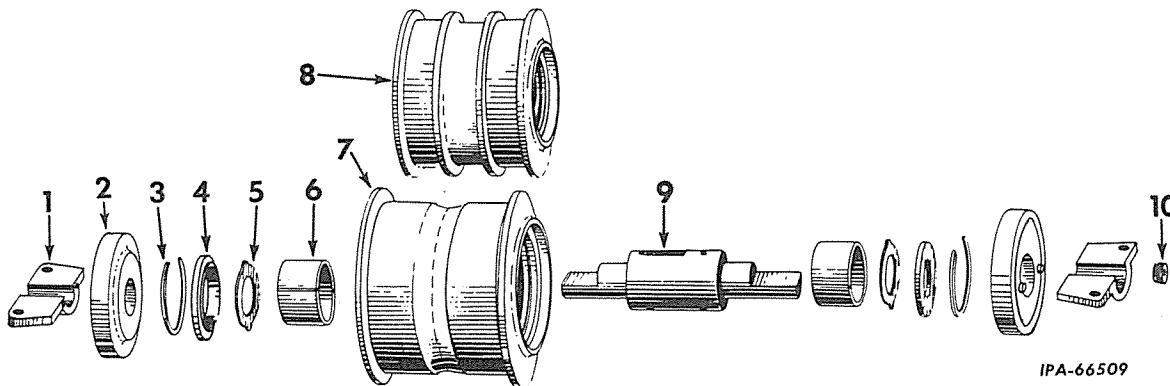


1	311 431 R1	BRACKET, track roller shaft (24) 1/2 x 1-1/2" hex-hd cap SCREW (48) 1/2" lock WASHER (48)	331 626 R92	PACKAGE, track roller oil seal field service (consists of RING, 331 408 R2 and OIL SEAL) (24)
2		OIL SEAL, track roller (order PACKAGE, 331 626 R92) (24)	331 408 R2	RING, track roller oil seal (24)
3	272 623 R2	RING, track roller retainer snap (24)	306 125 R92	ROLLER and SHAFT ASSY, track (single flange) (installed in positions 2, 4 and 5) (6) (Composed of -
4	322 528 R1	RETAINER, track roller (24)		1 PLUG 268 996 R1 2 RETAINER 322 528 R1 2 RING 272 623 R2 1 ROLLER 306 127 R92 1 SHAFT 304 915 R92 2 WASHER 53 369 D )
5	53 369 D	WASHER, track roller thrust (.083 - .085") (24)	306 126 R92	ROLLER and SHAFT ASSY, track (double flange) (installed in positions 1, 3 and 6) (6) (Composed of -
5	322 247 R1	WASHER, track roller thrust (.100 - .105") (X)		1 PLUG 268 996 R1 2 RETAINER 322 528 R1 2 RINGS 272 623 R2 1 ROLLER 306 128 R92 1 SHAFT 304 915 R92 2 WASHER 53 369 D )
6	314 937 R91	BUSHING SET, track roller (set of two) (12)		
7	306 127 R92	ROLLER w/BUSHING SET, 314 937 R91, track (single flange) (6)		
8	306 128 R92	ROLLER w/BUSHING SET, 314 937 R91, track (double flange) (6)		
9	304 915 R92	SHAFT, track roller (12)		
10	268 996 R1	PLUG, track roller shaft lubrication (12)		

(X) - As Required.

## TRACK DRIVE



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRACK ROLLER SHIELD					TRACK ROLLER SHIELD - Continued

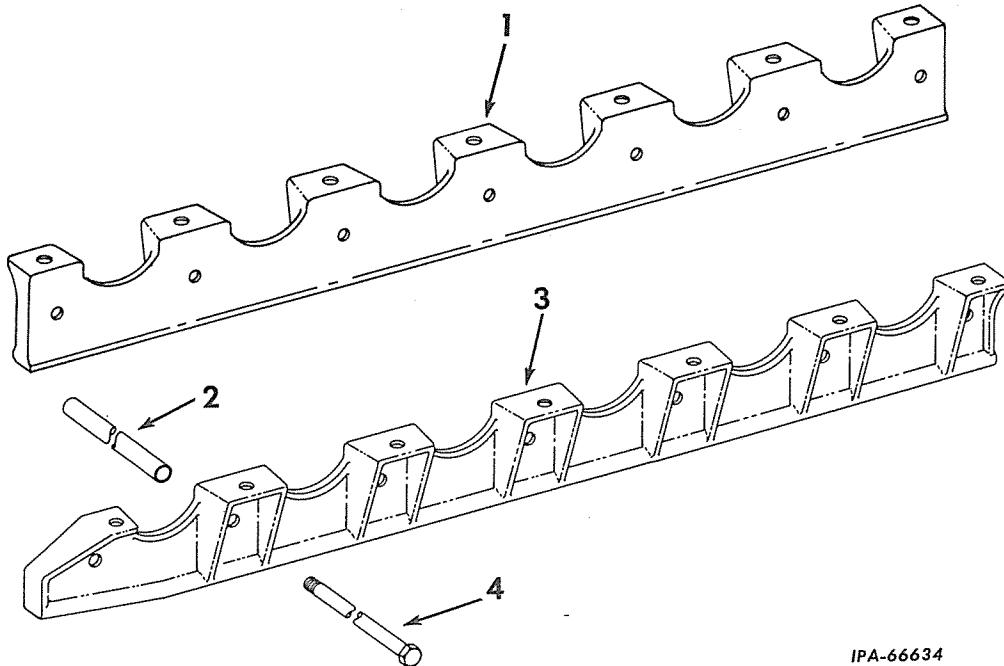

IPA-66634

	325 981 R92	ATTACHMENT, track roller shield (see NOTES 1 and 3)	3	331 131 R1	SHIELD, inner LH track roller
1	331 133 R2	SHIELD, outer track roller (2) 5/8 x 1-1/4" hex-hd cap SCREW (14) 21/32 x 1-5/16 x 13 ga. WASHER (14)	3	331 132 R1	SHIELD, inner RH track roller 5/8 x 1-1/4" hex-hd cap SCREW (14) 21/32 x 1-5/16 x 13 ga. WASHER (14)
2	331 604 R2	SPACER, track roller shield (14)	4	18 749 R1	BOLT, track roller shield spacer (14) 3/4NF NUT (14)

NOTE 1 - Factory Application - Order On  
Machine Order Form  
NOTE 3 - Field Application - Order Through  
Regular Service Parts Channels




## TRACK DRIVE



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TRACK SHOES					

TRACK SHOES - Continued

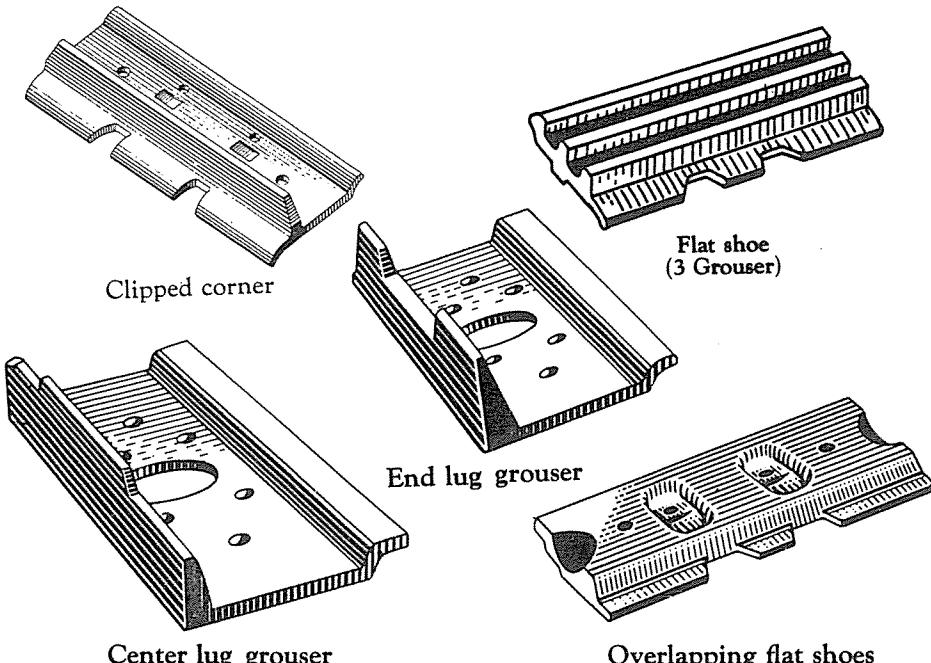

Overlapping flat shoes

IPA-66960 A

## CLIPPED CORNER

49 472 DD	SHOE, track 15" (part of ATTACHMENT, 609 681 C92 (78)
316 843 R2 273 871 R1	BOLT, track shoe NUT, track shoe bolt (See NOTE 5) (312) L150G 6519 to 14000 (312) L150P 6501 to 14000
616 191 C1 616 192 C1	BOLT, track shoe NUT, track shoe bolt (312) L150G 14001 Up (312) L150P 14001 Up
609 681 C92	ATTACHMENT, track shoe (includes 78 SHOE 49 472 DD, 312 BOLT, 616 191 C1, and 312 NUT 616 192 C1) (See NOTES 1, 3 and 4)

## STAGGERED LUG GROUSER

57 515 DA	SHOE, track 15" (center lug grouser) (part of ATTACHMENT, 303 646 R92) (39)
57 516 DA	SHOE, track 15" (end lug grouser) (part of ATTACHMENT 303 646 R92) (39)
316 843 R2 273 871 R1	BOLT, track shoe NUT, track shoe bolt (See NOTE 5) (312) L150G 6519 to 14000 (312) L150P 6501 to 14000
616 191 C1 616 192 C1	BOLT, track shoe NUT, track shoe bolt (312) L150G 14001 Up (312) L150P 14001 Up

303 646 R92 ATTACHMENT, track shoe (includes  
39 SHOE 57 515 DA, 39 SHOE 57 516 DA,  
312 BOLT 616 191 C1 and 312 NUT  
616 192 C1) (See NOTES 1, 3 and 4)

## FLAT SHOE

9 245 DA	SHOE, track 15" (part of ATTACHMENT 303 645 R92) (78)
258 874 R1	SHOE, track 15" (part of ATTACHMENT 303 644 R92) (78)
277 507 R2	SHOE, track 15" (Standard) (78)
316 843 R2 273 871 R1	BOLT, track shoe NUT, track shoe bolt (See NOTE 5) (312) L150G 6519 to 14000 (312) L150P 6501 to 14000
616 191 C1 616 192 C1	BOLT, track shoe NUT, track shoe bolt (312) L150G 14001 Up (312) L150P 14001 Up

303 645 R92 ATTACHMENT, track shoe (includes  
78 SHOE 9 245 DA, 312 BOLT 616 191 C1  
and 312 NUT 616 192 C1) (See NOTE 3)

303 644 R92 ATTACHMENT, track shoe (includes  
78 SHOE 258 874 R1, 312 BOLT 616 191 C1  
and 312 NUT 616 192 C1) (See NOTES 1  
and 3)

NOTE 1 - Factory Application - Order  
On Machine Order Form.

NOTE 3 - Field Application - Order  
Through Regular Service  
Parts Channels.

NOTE 4 - These Attachments Can Be  
Furnished Only With The Ap-  
proval Of The Construction  
Equipment Engineering De-  
partment.

NOTE 5 - Square Type Track Shoe Bolt  
Nut 263 981 R1 also Available  
For Service in Place of Hex  
Type 273 871 R1.

**MEMORANDA**






-116-

## FINAL DRIVE



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
		SPROCKET DRIVE, SHAFT, PINION, SPROCKET AND TRACK FRAME PIVOT SHAFT			SPROCKET DRIVE, SHAFT, PINION, SPROCKET AND TRACK FRAME PIVOT SHAFT - Continued

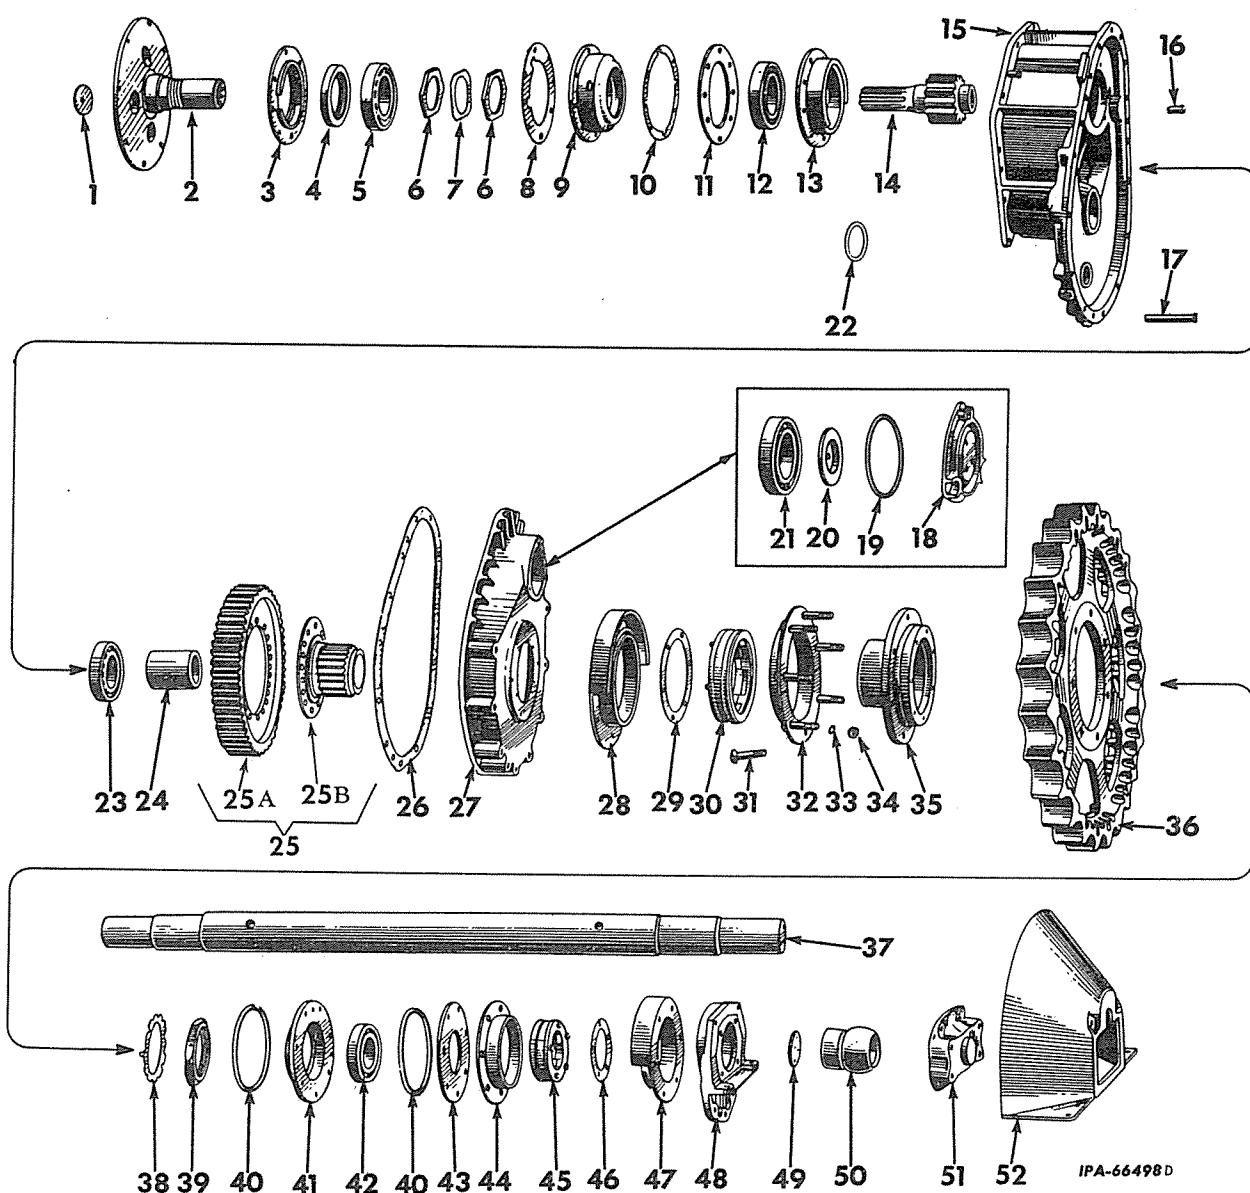

1	172 599	PLUG, steering clutch support shaft (expansion 2-3/8") (2)	4	310 514 R91	OIL SEAL, steering clutch support shaft (2)
2	52 210 DAXA	SHAFT w/PLUG, 172 599 and two NUTS, 54 013 D sprocket drive pinion (2)	5	ST 276	BEARING, steering clutch support (2)
3	8 508 DA	RETAINER, steering clutch support bearing (2) 3/8 x 1-3/8" hex-hd cap SCREW (8) 3/8" lock WASHER (8)	6	54 013 D	NUT, steering clutch support bearing (4)
			7	54 016 D	LOCK, steering clutch support bearing nut (2)
			8	54 004 D	GASKET, steering clutch support bearing retainer (2)

## FINAL DRIVE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
SPROCKET DRIVE, SHAFT, PINION, SPROCKET AND TRACK FRAME PIVOT SHAFT - Continued					
9	275 600 R1	CAGE, LH steering clutch support bearing	29	313 190 R1	GASKET, sprocket drive oil seal snap-on (2)
9	275 601 R1	CAGE, RH steering clutch support bearing	30	313 205 R91	OIL SEAL, sprocket drive (2)
10	54 003 D	GASKET, steering clutch support bearing cage (2)	31	52 226 DA	BOLT, sprocket carrier (14)
11	54 010 D	RETAINER, sprocket drive pinion inner bearing (2) 3/8 x 1-1/4" hex-hd cap SCREW (4) 3/8" lock WASHER (4)	32	52 222 D	DEFLECTOR, sprocket drive oil seal dirt (2)
12	ST 655	BEARING, sprocket drive pinion inner (*) (2)	33		WASHER, lock sprocket carrier bolt (external-tooth 5/8") (14)
12	333 703 R91	BEARING, sprocket drive pinion inner (†) (2)	34	32 454 D	NUT, sprocket carrier bolt (14)
13	8 509 D	CAGE, sprocket drive pinion inner bearing (2)	35	52 229 DA	CARRIER, sprocket (2)
14	306 896 R1	PINION, sprocket drive (11 T) (2)	36	8 450 DC	SPROCKET (27 T) (not cutaway) (2)
15	8511 DEX	CARRIER w/two PLUG 9 409 949, PLUG 18 524 R1 and GASKET 142 756 (2) Order the following - 1 CARRIER 8511 DFX 9 SCREW, 3/8 x 3" hex-hd cap (type 4) 9 WASHER, 13/32 x 1" x 4 ga. flat	37	260 894 R1	SHAFT, track frame pivot
15	8511 DFX	CARRIER w/two PLUG 9 409 949, PLUG 18 524 R1 and GASKET 142 756 (together w/9 SCREW, 3/8 x 3" hex-hd cap (type 4) and 9 WASHER, 13/32 x 1" x 4 ga. flat, will work for CARRIER, 8511 DEX) (see NOTE)(2)	38	46 795 D	LOCK, sprocket drive gear carrier nut (2)
18 524 R1 9 409 949		PLUG, 1-1/4" sq-soc stl pipe (filler plug)(4) PLUG, 3/4" sq-soc stl pipe (drain plug) (2) 1/2 x 1-3/8" hex-hd cap SCREW (32) 1/2" lock WASHER (32)	39	46 794 DA	NUT, sprocket drive gear carrier (2)
16	22 977 DA	PIN, sprocket drive gear housing to carrier dowel, upper (4)	40	264 263 R1	RING, sprocket drive gear outer bearing cage, packing (outer ring) (2)
17	54 007 D	PIN, lower sprocket drive gear housing to carrier dowel (2)	40	264 262 R1	RING, sprocket drive gear outer bearing cage packing (inner ring) (2)
18	306 897 R1	CAP, sprocket drive pinion outer bearing (2) 1/2 x 1-1/4" hex-hd cap SCREW (6) 1/2" lock WASHER (6)	41	264 261 R3	CAGE, sprocket drive gear outer bearing (2)
19	264 123 R1	"O" RING, 5-1/8 x 5-3/8 x 1/8" sprocket drive pinion outer bearing cap (2)	42	ST 684	BEARING, outer sprocket drive gear (2)
20	46 821 D	RETAINER, sprocket drive pinion outer bearing (Manual Shift Loaders Only) (2) 7/16 x 1-1/4" hex-hd cap SCREW (4) 7/16" lock WASHER (4)	43	54 514 D	RETAINER, sprocket drive gear outer bearing (2)
21	ST 655	BEARING, sprocket drive pinion outer (*) (2)	44	54 515 D	DEFLECTOR, track frame pivot oil seal dirt (2)
21	333 703 R91	BEARING, sprocket drive pinion outer (†) (2)	264 259 R1		BOLT, sprocket drive gear outer bearing retainer (14) 7/16" external-tooth lock WASHER (14)
22	295 762 R1	RING, track frame pivot shaft oil seal (2)	45	313 206 R91	OIL SEAL, track frame pivot (2)
23	278 063 R91	BEARING, inner sprocket drive gear (2)	46	313 191 R1	GASKET, track frame pivot oil seal snap-on (2)
24	52 225 D	SPACER, sprocket drive gear bearing (2)	47	46 800 D	GUARD w/INNER and outer dirt deflectors track frame pivot oil seal (2) 3/8 x 5/8" hex-hd cap SCREW (12) 3/8" lock WASHER (12)
25	306 899 R91	GEAR, sprocket drive (58 T) (2) (consists of GEAR, 306 898 R2, CARRIER, 52 228 DD and RIVET, 264 156 R1)	48	266 059 R2	BRACKET, track frame pivot (2)
25A	306 898 R2	GEAR, 58 teeth (2)	262 650 R1		BOLT, track frame pivot bracket (top) (4)
25B	52 228 DD	CARRIER, 24 teeth (2)	266 060 R1		BOLT, track frame pivot bracket (side) (6)
26	264 156 R1	RIVET, 1/2 x 1-7/8" (40)	262 651 R1		NUT, track frame pivot bracket top bolt (4)
26	54 012 D	GASKET, sprocket drive gear housing (2)	45 293 D		NUT, track frame pivot bracket side (6)
27	306 700 R1	HOUSING, outer sprocket drive gear L-150G 6519 to 15558 L-150P 6501 to 15558	49	261 289 R1	SHIM, track frame pivot bearing (heavy) (12)
		1/2NF NUT (16)	49	261 290 R1	SHIM, track frame pivot bearing (light) (8)
		1/2NF x 1-1/2" hex-hd cap SCREW (12)	50	260 892 R2	BEARING, track frame pivot (2) 5/8NF x 1-1/2" hex-hd cap SCREW (4)
		1/2NF x 2-3/4" hex-hd cap SCREW (4)			
		1/2 x 2-3/4" hex-hd cap SCREW (18)			
		1/2" lock WASHER (34)			
27	624 539 C1	HOUSING, outer sprocket drive gear L-150G 15559 up L-150P 15559 up	51	8 461 DA	CAP, track frame pivot bracket (2)
		1/2NF NUT (16)	271 664 R1		BOLT, track frame pivot bracket cap (8)
		1/2NF x 1-1/2" hex-hd cap SCREW (12)	104 940		CORK (No. 4 5/8" dia x 1-3/16" long) (4)
		1/2 x 2-3/4" hex-hd cap SCREW (4)			
		1/2NF x 2-3/4" hex-hd cap SCREW (4)			
		1/2" lock WASHER (16)			
28	52 231 D	GUARD w/INNER and OUTER dirt reflectors sprocket drive oil seal (2) 3/8 x 3/4" hex-hd cap SCREW (12) 3/8" lock WASHER (12)			NOTE - When CARRIER, 8 511 DFX Is Furnished On Units Equipped With Sprocket Drive Housing Shield Attachment, 331 548 R91, New Collar, 259 896 R1, Must Be Furnished Along With New Carrier.
					(*) - Used On Manual Shift Loaders.
					(†) - Used On Power Shift Loaders.



## FINAL DRIVE



REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------

SPROCKET DRIVE, SHAFT, PINION, SPROCKET  
AND TRACK FRAME PIVOT SHAFT - Continued


52	53 539 DBX	SHIELD w/SUPPORT and SPACER, sprocket (2) 1/2" NUT (4) 7/16 x 1-3/4" hex-hd cap SCREW (4) 1/2 x 1" hex-hd cap SCREW (4) 1/2 x 1-1/2" hex-hd cap SCREW (4) 7/16" lock WASHER (4) 1/2" lock WASHER (8)
57	536 DA	ATTACHMENT, cutaway sprocket (consists of two SPROCKETS, 8 775 DC and two LOCKWIRE, 263 945 R1) (see NOTE 4)
142	756	GASKET, sprocket drive oil filler plug (2)
103	883	PLUG, 1/8" pipe (optional with 219 187) (2)
219	187	PLUG, 1/8" pipe (optional with 103 883) (2)
46	821 D	RETAINER, sprocket drive pinion outer bearing (2) 7/16NF x 1-1/4" hex-hd cap SCREW (4) 7/16" lock WASHER (4)
46	809 D	SCREW, set, track frame pivot shaft (2) 5/8" jam NUT (2)
263	945 R1	LOCKWIRE, track master link pin (2)

NOTE 4 - Attachment No Longer Available. Service  
Parts Will Be Furnished As Ordered.

## FINAL DRIVE

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

SPROCKET DRIVE HOUSING SHIELD

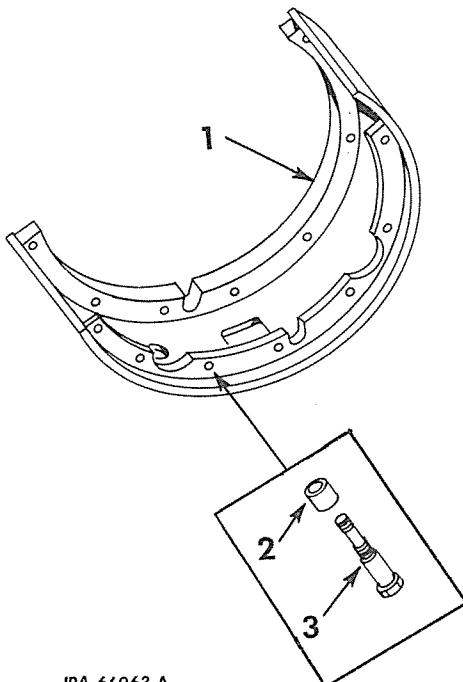

IPA-66963 A

SPROCKET DRIVE HOUSING SHIELD - Continued

3	624 541 C1	BOLT, sprocket drive housing shield 13/32 x 1" x 4 ga, flat WASHER 3/8" lock WASHER 3/8" NUT (14) L-150G 15559 up (14) L-150P 15559 up
603 492 C91	PACKAGE, LH rockshield field service L-150G 6519 to 7982 L-150P 6501 to 7982 (Composed of - 2 BOLT 257 785 R1 2 COLLAR 257 786 R1 2 COLLAR, 3/8" extra strong pipe x 5/8" long) 1 SHIELD 331 544 R11)	
603 493 C91	PACKAGE, RH rockshield field service L-150G 6519 to 7982 L-150P 6501 to 7982 (Composed of - 2 BOLT 257 785 R1 2 COLLAR 257 786 R1 2 COLLAR, 3/8" extra strong pipe 5/8" long) 1 SHIELD 331 545 R11)	
1 019 026 R1	PAMPHLET, installation (ATTACHMENT, 331 548 R91)	

331 548 R91	ATTACHMENT, sprocket drive housing shield (see NOTE 3) L-150G 6519 to 15558 L-150P 6501 to 15558
624 540 C91	ATTACHMENT, sprocket drive housing shield (see NOTES 1 and 3) L-150G 15559 up L-150P 15559 up
1	331 544 R11 SHIELD, LH sprocket drive housing
1	331 545 R11 SHIELD, RH sprocket drive housing
2	257 786 R1 COLLAR, sprocket drive housing shield (10) L-150G 6519 to 7247 (10) L-150P 6501 to 7247
2	COLLAR, sprocket drive housing shield (3/8" extra strong pipe x 5/8" long, obtain locally) (10) L-150G 7248 to 7982 (10) L-150P 7248 to 7982 (14) L-150G 7983 up (14) L-150P 7983 up
3	257 785 R1 BOLT, sprocket drive housing shield 3/8NF NUT 3/8" external tooth lock WASHER (10) L-150G 6519 to 7982 (10) L-150P 6501 to 7982 (14) L-150G 7983 to 15558 (14) L-150P 7983 to 15558


NOTE 1 - Factory Application - Order On  
Machine Order Form.  
NOTE 3 - Field Application - Order Through  
Regular Service Parts Channels.

# SHEET METAL, HOOD, SIDE SHEETS AND SIDE DOORS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

HOOD, DASH AND ENGINE SIDE SHEETS

HOOD, DASH AND ENGINE SIDE SHEETS - Continued

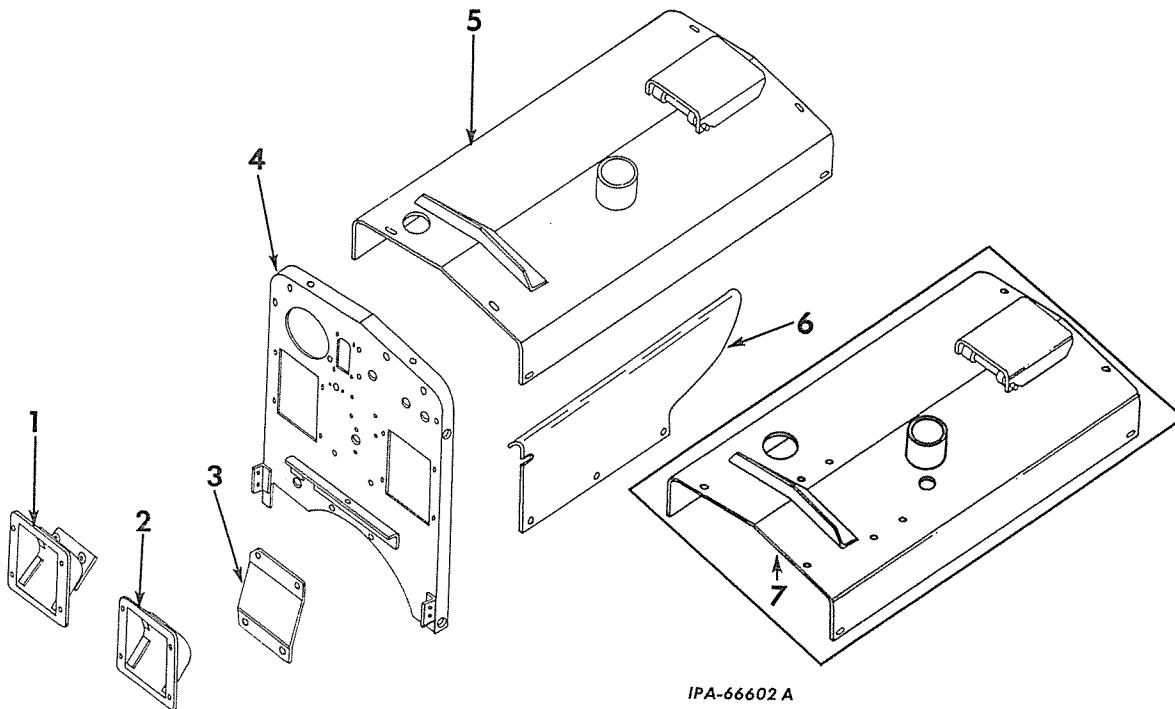

IPA-66602 A

Parts without letters after the description indicates the part is used for all "Hood, Dash and Engine Side Sheets Service Parts" listed below; Letters A, B, C, D and E are used to identify separate "Service Parts".


A	Service Parts for Hood, Dash and Engine Side Sheets (used on power shift loader equipped with Roosa-Master fuel injection pump)	1	330 750 R92 25 519 R1 25 752 R1 25 483 R1 115 109	POCKET, dash foot (RH) (Service Parts A, B, C, D, F, and G) 1/4" NUT 1/4 x 1/2" hex-hd cap SCREW (3) 1/4 x 1" hex-hd cap SCREW 1/4" lock WASHER (4)
	L-150P 6501 to 15964 Also 15994 to 16217 except 15996	1	331 715 R91 25 752 R1 115 109	POCKET, dash foot (RH) (Service Parts E) 1/4 x 1/2" hex-hd cap SCREW (4) 1/4" lock WASHER (4)
B	Service parts for Hood, Dash and Engine Side Sheets (used on manual shift loader equipped with Roosa-Master fuel injection pump)	2	330 749 R92 25 752 R1 115 109	POCKET, dash foot (LH) (Service Parts A, B, C and D) 1/4 x 1/2" hex-hd cap SCREW (4) 1/4" lock WASHER (4)
	L-150G 6519 to 15964 Also 15994 to 16217 except 15996	2	331 704 R91 25 752 R1 115 109	POCKET, dash foot (LH) (Service Parts E) 1/4 x 1/2" hex-hd cap SCREW (4) 1/4" lock WASHER (4)
C	Service parts for Hood, Dash and Engine Side Sheets (used on power shift loader equipped with International R.D. fuel injection pump)	2	624 902 C91 25 752 R1 115 109	POCKET, dash foot (LH) (Service Parts F and G) 1/4 x 1/2" hex-hd cap SCREW (4) 1/4" lock WASHER (4)
D	Service parts for Hood, Dash and Engine Side Sheets (used on manual shift loader equipped with International R.D. fuel injection pump)	3	306 876 R1 25 526 R1 24 859 R1 24 861 R1 116 121	PLATE, dash support 1/2" NUT (2) 1/2 x 3/4" hex-hd cap SCREW (2) 1/2 x 1-1/4" hex-hd cap SCREW (2) 1/2" lock WASHER (4)
E	Service parts for Hood, Dash and Engine Side Sheets (used on power shift loader with Roosa-Master or International R.D. fuel injection pump and equipped w/altitude compensation attachment)	4	331 415 R11 179 882 271 562 116 121 106 265	DASH (Service Parts C and D) 1/2 x 1-1/8" hex-hd cap SCREW (2) 5/8 x 2" hex-hd cap SCREW (2) 1/2" lock WASHER (2) 9/16 x 1-3/8" x 12 ga. WASHER (X)
F	Service parts for Hood, Dash and Engine Side Sheets (used on power shift loader equipped with Roosa-Master fuel injection pump)	4	338 102 R31 338 103 R41	DASH (Service Parts A and B) DASH (Service Parts E, F and G)
	L-150P 15965 to 15993 And 16218 up Also 15996	4	179 882 271 562 116 121 106 265	1/2 x 1-1/8" hex-hd cap SCREW (2) 5/8 x 2" hex-hd cap SCREW (2) 1/2" lock WASHER (2) 9/16 x 1-3/8" x 12 ga. WASHER (X)
G	Service parts for Hood, Dash and Engine Side Sheets (used on manual shift loader equipped with Roosa-Master fuel injection pump)	5	331 413 R11	HOOD, heavy (not used on loaders equipped with heavy duty air cleaner) (Service Parts A and C)
	L-150G 15966 to 15993 And 16218 up Also 15996			(X) - As Required.

# SHEET METAL, HOOD, SIDE SHEETS AND SIDE DOORS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
HOOD, DASH AND ENGINE SIDE SHEETS - Continued					
5	331 414 R11	HOOD, heavy (Not used on loaders equipped with heavy duty air cleaner) (Service Parts B and D)	6	331 765 R11	SHEET, engine side (RH)
5	331 728 R11	SHEET, hood (not heavy hood) (not used with heavy duty air cleaner) (Service Parts E)	25 522 R1	3/8" NUT (4 for Service Parts A and B; 2 for Service Parts C, D and E)	
5	624 905 C1	HOOD, heavy (not used on loaders equipped with heavy duty air cleaner) (Service Parts F)	24 839 R1	3/8 x 3/4" hex-hd cap SCREW (8 for Service Parts A and B; 6 for Service Parts C, D and E)	
	24 860 R1	1/2 x 1" hex-hd cap SCREW (rear) (4)	25 496 R1	3/8 x 7/8" hex-hd cap SCREW (2)	
	24 861 R1	1/2 x 1-1/4" hex-hd cap SCREW (front) (4)	103 341	13/32 x 13/16" x 16 ga. WASHER (2)	
116 121	1/2" lock WASHER (8)		115 093	3/8" lock WASHER (10 for Service Parts A and B; 8 for Service Parts C, D and E)	
5 035	17/32 x 1-1/16" x 13 ga. WASHER (8)		7	609 826 C11	HOOD, heavy (used on loaders equipped with heavy duty air cleaner) (Service Parts B, D and E)
5	624 907 C1	HOOD, heavy (not used on loaders equipped with heavy duty air cleaner) (Service Parts G)	7	609 828 C11	HOOD, heavy (used on loaders equipped with heavy duty air cleaner) (Service Parts A and C)
	24 860 R1	1/2 x 1" hex-hd cap SCREW (rear) (4)	127 741	PLUG, button (Service Parts B and D)	
	24 861 R1	1/2 x 1-1/4" hex-hd cap SCREW (front) (4)	104 249	RIVET, radiator cap shield spring (1/4 x 1/2")	
6	331 764 R11	SHEET, engine side (LH)			

## HOOD SIDE DOORS

## HOOD SIDE DOORS - Continued

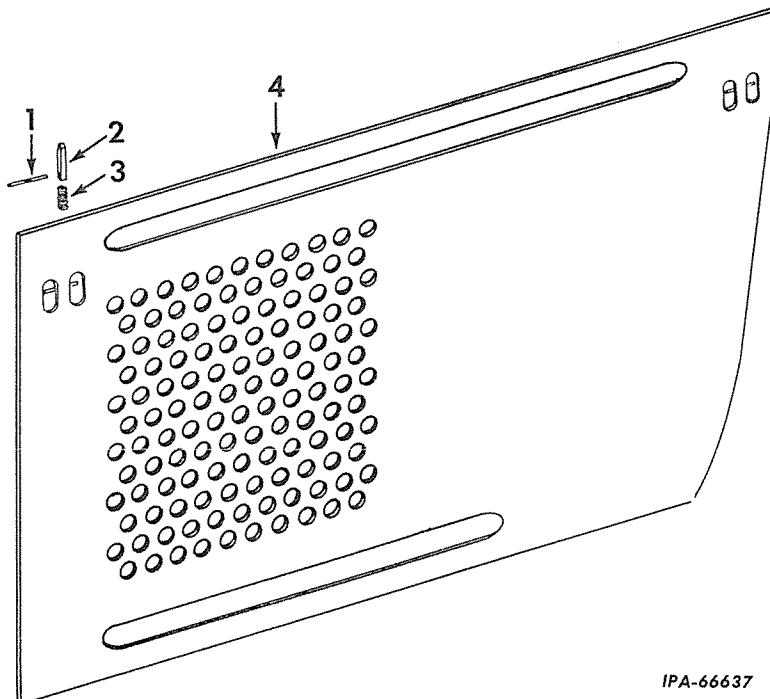


IPA-66637

331 648 R91	ATTACHMENT, hood side doors (see NOTE 1 and 3) (Consists of the following parts)	4	331 646 R11	DOOR ASSY, RH hood side (Composed of -
1	278 508 R1	PIN, hood side door latch (4)	2	BODY 278 506 R1
2	278 507 R1	PLUNGER, hood side door latch (4)	2	PIN 278 508 R1
3	278 509 R1	SPRING, hood side door latch (4)	2	PLUNGER 278 507 R1
4	331 645 R11	DOOR ASSY, LH hood side (Composed of -	2	SPACER 331 647 R1
		2 BODY 278 506 R1	278 506 R1	BODY, hood side door latch (4)
		2 PIN 278 508 R1	331 647 R1	SPACER, hood side door latch (4)
		2 PLUNGER 278 507 R1		NOTE 1 - Factory Application - Order On Machine Order Form.
		2 SPACER 331 657 R1		NOTE 3 - Field Application - Order Through Regular Service Parts Channels.
		2 SPRING 278 509 R1		

# SEAT, PLATFORMS AND SUPPORTS



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
SEATS, PLATFORM AND SUPPORTS			SEATS, PLATFORM AND SUPPORTS - Continued		

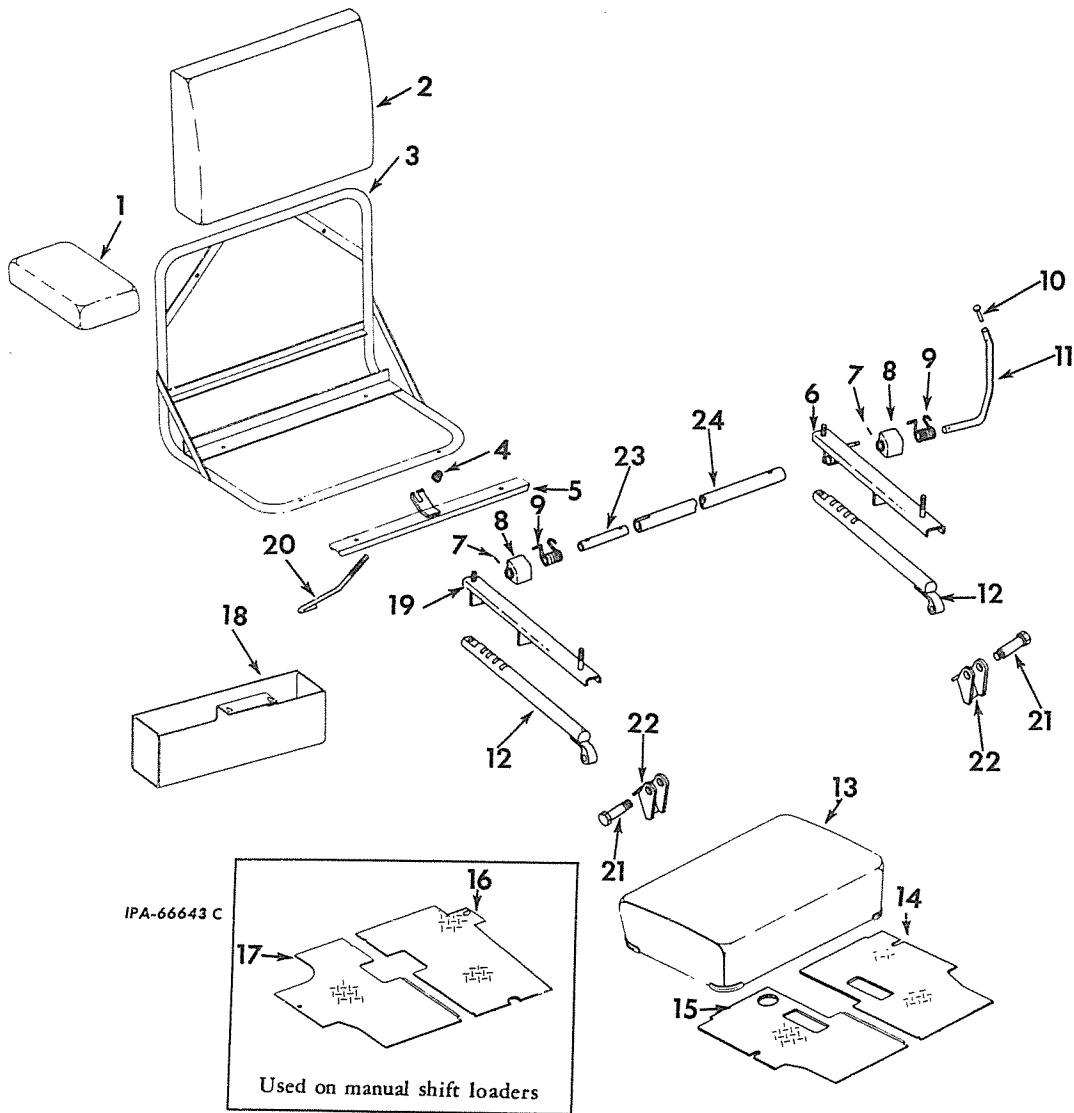

1	620 316 G1	CUSHION, seat side (†1) (*2)	4	266 383 R2	NUT, seat hold down rod 13/32 x 13/16 x .065" WASHER
1	331 041 R1	CUSHION, seat side (†) 3/8 x 3/4" hex-hd cap SCREW 3/8" lock WASHER	5	275 266 R11	SUPPORT, rear seat
2	273 499 R92	CUSHION, back seat 5/16 x 3/4" hex-hd cap SCREW (2) 5/16" lock WASHER (2) 11/32 x 11/16" WASHER (2)	6	331 596 R91	CHANNEL, seat frame slide (LH)
3	307 312 R91	FRAME, seat 5/16NF NUT (2)	7	19 938 R1	PIN, 1/8 x 7/8" long spiral (2)
	307 315 R1	NUT, seat cushion bottom pilot (2) 5/16" internal-tooth lock WASHER (4)	8	331 595 R1	LOCK, seat (2)
			9	331 594 R1	SPRING, latch torsion (2)
			10	1 017 851 R1	PLUG, seat adjusting handle L-150P 6501 to 9105 L-150G 6519 to 9105

(\* ) - Used On Manual Shift Loaders.  
(† ) - Used On Power Shift Loaders.

## SEAT, PLATFORMS AND SUPPORTS

REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------

SEATS, PLATFORM AND SUPPORTS - Continued

- 11 331 592 R1 HANDLE, seat adjusting  
L-150P 6501 to 9105  
L-150G 6519 to 9105
- 11 338 267 R1 HANDLE, seat adjusting  
L-150P 9106 up  
L-150G 9106 up
- 12 338 270 R11 RAIL, seat frame slide (2)  
5/16NF NUT (2)  
5/16 x 1-1/4" hex-hd cap SCREW (2)  
5/16" lock WASHER (2)
- 13 273 500 R92 CUSHION, bottom seat
- 14 330 743 R11 PLATFORM, LH (†)  
3/8 x 3/4" hex-hd cap SCREW  
3/8" lock WASHER
- 15 330 742 R11 PLATFORM, RH (†)  
3/8 x 3/4" hex-hd cap SCREW  
3/8" lock WASHER  
3/8 x 1" hex-hd cap SCREW
- 16 275 230 R31 PLATFORM, LH (\*)  
3/8 x 3/4" hex-hd cap SCREW  
3/8" lock WASHER
- 17 275 231 R31 PLATFORM, RH (\*)  
3/8NF NUT  
3/8 x 3/4" hex-hd cap SCREW  
3/8 x 1" hex-hd cap SCREW  
3/8" lock WASHER (3)  
13/32 x 13/16" x 16 ga. WASHER
- 18 331 566 R11 BOX, tool  
1/4 x 3/4" hex-hd cap SCREW (2)  
1/4" lock WASHER (2)  
5/16 x 3/4" x 18 ga. WASHER (2)
- 19 307 317 R12 CHANNEL, seat frame slide (RH)  
L-150P 6501 to 9105  
L-150G 6519 to 9105
- 19 331 596 R91 CHANNEL, seat frame slide (RH)  
L-150P 9106 up  
L-150G 9106 up
- 20 276 975 R1 ROD, seat hold down  
1/8 x 5/8" cotter PIN
- 21 46 883 H PIN, seat hinge (3/8 x 1-9/16" rod end pin)  
(2) L-150P 6501 to 9105  
(2) L-150G 6519 to 9105  
3/32 x 5/8" cotter PIN (2)
- 21 338 268 R1 BOLT, seat hinge  
(2) L-150P 9106 up  
(2) L-150G 9106 up  
5/16NF NUT (2)  
11/32 x 11/16" x 16 ga. WASHER (2)  
5/16" lock WASHER (2)
- 22 338 265 R1 BRACKET, seat hinge (2)  
3/8NF x 1 1/2" hex-hd cap SCREW (4)  
3/8" lock WASHER (4)
- 23 338 266 R1 SHAFT, seat lock
- 24 338 269 R1 EXTENSION, seat lock
- 331 599 R1 PLATE, platform hold down
- 604 021 C1 TREAD, safety walk


(†) - Used On Power Shift Loaders.  
(\*) - Used On Manual Shift Loaders.

## ENGINE CONTROLS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**ENGINE CONTROLS AND DECELERATOR**  
(Used on Power Shift Loaders Equipped With Roosa-Master Fuel Injection Pump L-150P 6501 to 7464; except 7422, 7456 and 7459)

**ENGINE CONTROLS AND DECELERATOR - Continued**  
(Used on Power Shift Loaders Equipped With Roosa-Master Fuel Injection Pump L-150P 6501 to 7464; except 7422, 7456 and 7459)

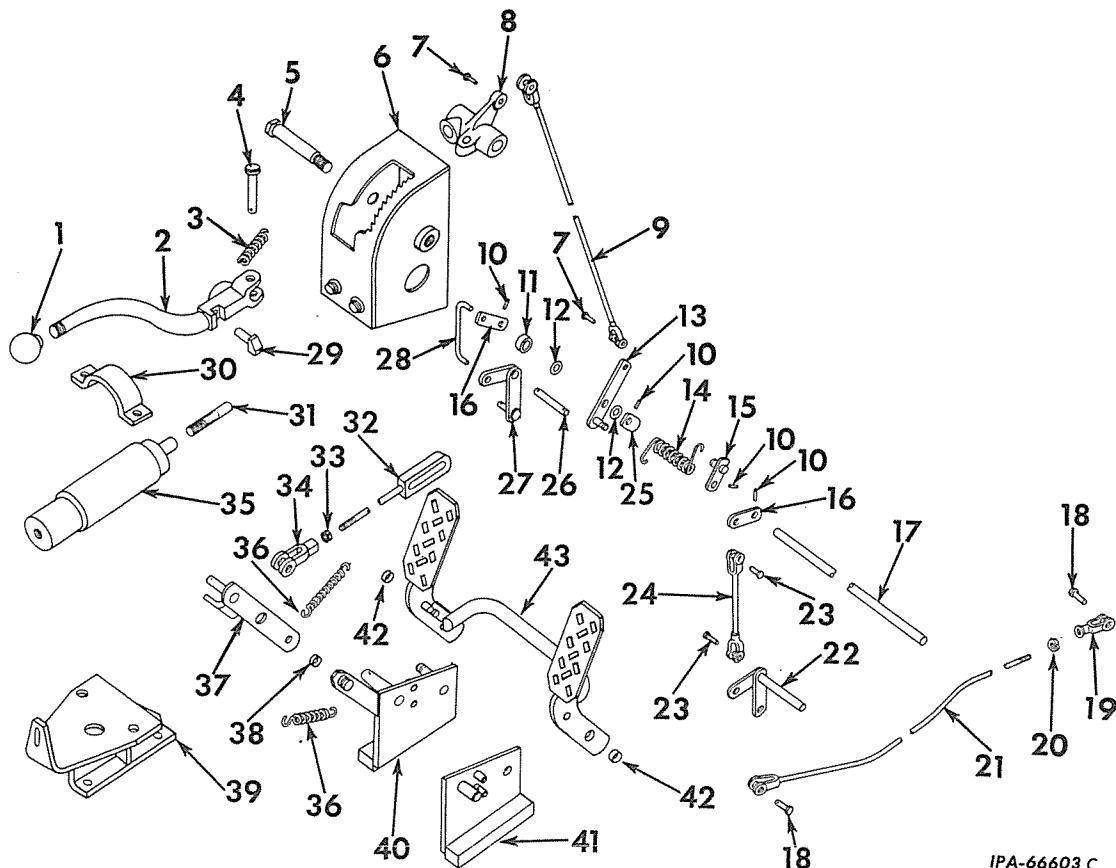

IPA-66603 C

1	264 097 R2	BALL, governor control hand lever	15	330 943 R11	BELLCRANK, torsion spring hook support
2	275 198 R22	LEVER w/PAWL, 251 846 R1, governor control hand	16	330 984 R1	BELLCRANK, upper horizontal (2)
3	261 650 R1	SPRING, governor control hand lever	17	330 983 R1	ROD, upper horizontal
4	262 704 R1	PIN, governor control hand lever 3/32 x 5/8" cotter PIN	18	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)
5	275 199 R1	SHAFT, governor control hand lever	19	116 535	CLEVIS, fuel injection pump lower horizontal rod adjusting (5/16")
6	330 751 R11	RATCHET, governor control 3/8" NUT (2) 3/8 x 5/8" hex-hd cap SCREW (4) 3/8" lock WASHER (4)	20		NUT, 5/16NF
7	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)	21	331 498 R11	ROD, lower fuel injection pump horizontal
8	275 197 R1	HUB, governor control hand	22	330 955 R11	SHAFT, fuel injection pump 3/32 x 5/8" cotter PIN (2) 13/32 x 13/16 x .065" WASHER (2)
9	330 950 R11	ROD, upper fuel injection pump	23	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)
10	19 674 R1	PIN, roll (4)	24	306 883 R11	ROD, fuel injection pump lower vertical
11	330 987 R1	SPACER, horizontal rod	25	330 981 R1	LEVER, ratchet return
12		WASHER, 13/32 x 13/16 x .065"	26	330 988 R1	ROD, lower horizontal (LH) 3/32 x 5/8" cotter PIN (2)
13	330 956 R11	SUPPORT, upper horizontal rod links and spring	27	330 957 R11	BELLCRANK, lower horizontal (LH) 3/32 x 5/8" cotter PIN
14	330 980 R1	SPRING, horizontal torsion			

## ENGINE CONTROLS

REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------

ENGINE CONTROLS AND DECELERATOR - Continued  
(Used on Power Shift Loaders Equipped With Roosa-Master Fuel  
Injection Pump L-150P 6501 to 7464; except 7422, 7456 and 7459)

28	330 985 R1	ROD, decelerator vertical 3/32 x 5/8" cotter PIN (2) 13/32 x 13/16 x .065" WASHER (2)
29	251 846 R1	PAWL, governor control hand lever
30	331 422 R1	CLAMP, decelerator hydraulic cylinder 3/8" NUT (2) 3/8 x 1-3/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2)
31	325 997 R1	ADJUSTER, decelerator hydraulic cylinder
32	330 945 R11	ROD, decelerator horizontal
33		NUT, 7/16NF
34	117 825	CLEVIS, 7/16NF rod end
35	610 739 C91	CYLINDER w/SPRING, 610 740 C1, decelerator hydraulic 3/8NF x 7/8" hex-hd cap SCREW 3/8" lock WASHER
36	304 522 R1	SPRING, decelerator return (2)
37	330 958 R11	ARM w/BUSHING, 333 784 R1, decelerator 1/8 x 1" cotter PIN
38	333 784 R1	BUSHING, decelerator arm
39	330 947 R11	BRACKET, decelerator hydraulic cylinder 7/16 x 1-3/4" hex-hd cap SCREW (2) 7/16" lock WASHER (2)
40	330 971 R91	SUPPORT, LH decelerator pedal 3/8 x 1" hex-hd cap SCREW 3/8 x 1-1/2" hex-hd cap SCREW 1/2 x 1-1/8" x 14 ga. WASHER (3) 1/8 x 1" cotter PIN
41	331 609 R91	SUPPORT, RH decelerator pedal 3/8 x 1" hex-hd cap SCREW 3/8 x 1-1/2" hex-hd cap SCREW
42	333 784 R1	BUSHING, decelerator pedal (2)
43	331 612 R91	PEDAL w/two BUSHING, 333 784 R1, decelerator
324 184 R91	KIT, decelerator cylinder repair (for power shift or sideboom crawler tractors) (for use on CYLINDER, 327 467 R91) (Composed of - §2 KEY, internal §1 "O" RING, piston seal §2 "O" RING, end cover §1 PACKING, rod §2 PACKING, piston §1 RING, rod gland snap §1 SCRAPER, rod )	
338 399 R91	KIT, decelerator repair (for power shift or sideboom crawler tractors) (for use on CYLINDER, 338 383 R91 and 610 739 C91) (Composed of - §1 "O" RING, large §1 "O" RING, small §2 RING, piston §1 RING, retaining §1 SCRAPER, rod )	
610 740 C1	SPRING, decelerator cylinder compression	

§ - Not Furnished Separately.

## ENGINE CONTROLS


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**ENGINE CONTROLS**

(Used on Manual Shift Loaders Equipped With Roosa-Master Fuel Injection Pump L-150G 6519 to 7464; except 7445, 7447, 7457, 7461 and 7463)

**ENGINE CONTROLS - Continued**

(Used on Manual Shift Loaders Equipped With Roosa-Master Fuel Injection Pump L-150G 6519 to 7464; except 7445, 7447, 7457, 7461 and 7463)

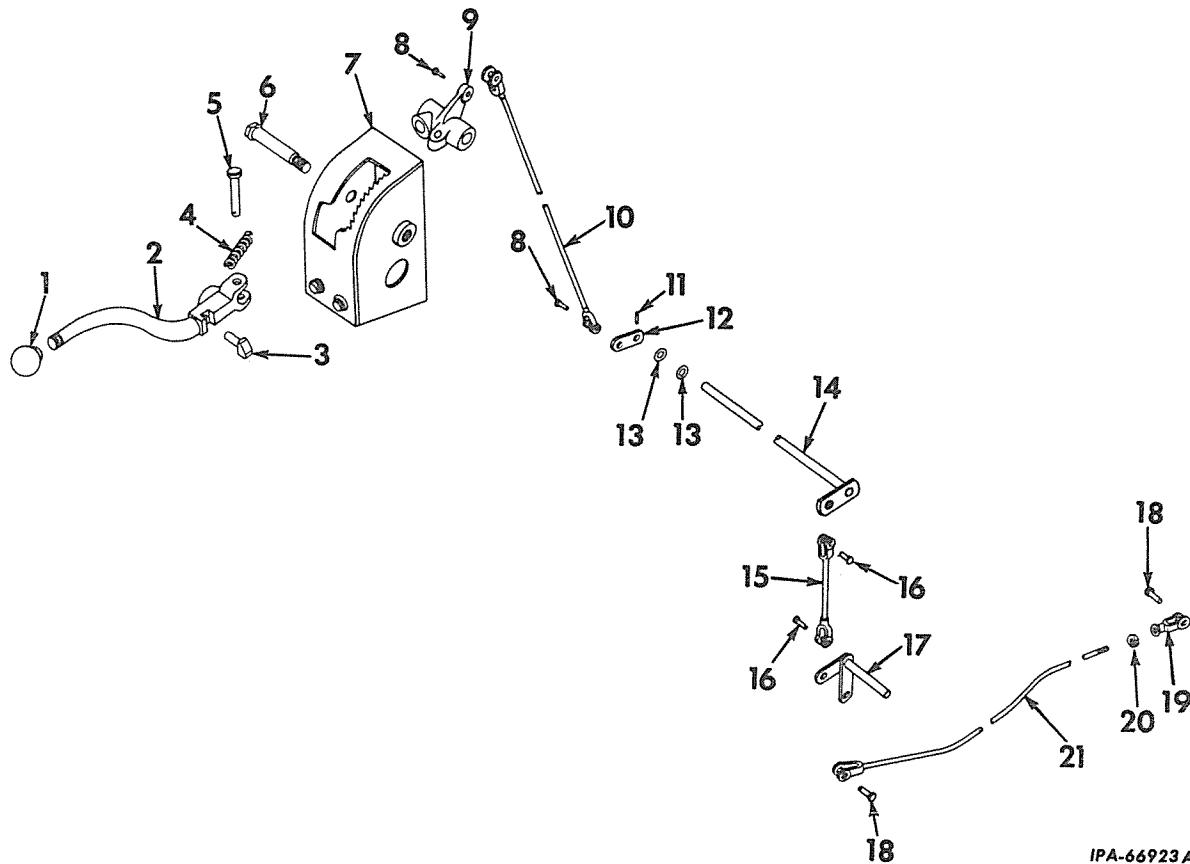

IPA-66923A

1	264 097 R2	BALL, governor control hand lever	11	19 674 R1	PIN, roll (4)
2	275 198 R22	LEVER w/PAWL, 251 846 R1, governor control hand	12	306 887 R1	LINK, upper horizontal rod
3	251 846 R1	PAWL, governor control hand lever	13		WASHER, 13/32 x 13/16 x .065" 3/32 x 5/8" cotter PIN (2)
4	261 650 R1	SPRING, governor control hand lever	14	311 133 R91	ROD, upper horizontal
5	262 704 R1	PIN, governor control hand lever 3/32 x 5/8" cotter PIN	15	306 883 R11	ROD, fuel injection pump lower vertical
6	275 199 R1	SHAFT, governor control hand lever	16	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)
7	330 751 R11	RATCHET, governor control 3/8" NUT (2) 3/8 x 5/8" hex-hd cap SCREW (4) 3/8" lock WASHER (4)	17	306 888 R91	SHAFT, fuel injection pump 3/32 x 5/8" cotter PIN (2) 13/32 x 13/16 x .065" WASHER (2)
8	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)	18	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)
9	275 197 R1	HUB, governor control hand	19	116 535	CLEVIS, fuel injection pump lower horizontal rod adjusting (5/16")
10	330 950 R11	ROD, upper fuel injection pump	20		NUT, 5/16NF
			21	330 986 R11	ROD, lower fuel injection pump horizontal

MEMORANDA



## ENGINE CONTROLS


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
-------------	----------------	-------------	-------------	----------------	-------------

### ENGINE CONTROLS AND DECELERATOR

(Used on Power Shift Loader Equipped With International R. D. Fuel Injection Pump L-150P 7465 to 12099, also 7422, 7456 and 7459)  
(Used on Power Shift Loaders Equipped With Roosa-Master Fuel Injection Pump L-150P 12100 up)

### ENGINE CONTROLS AND DECELERATOR - Continued

(Used on Power Shift Loader Equipped With International R. D. Fuel Injection Pump L-150P 7465 to 12099, also 7422, 7456 and 7459)  
(Used on Power Shift Loaders Equipped With Roosa-Master Fuel Injection Pump L-150P 12100 up)

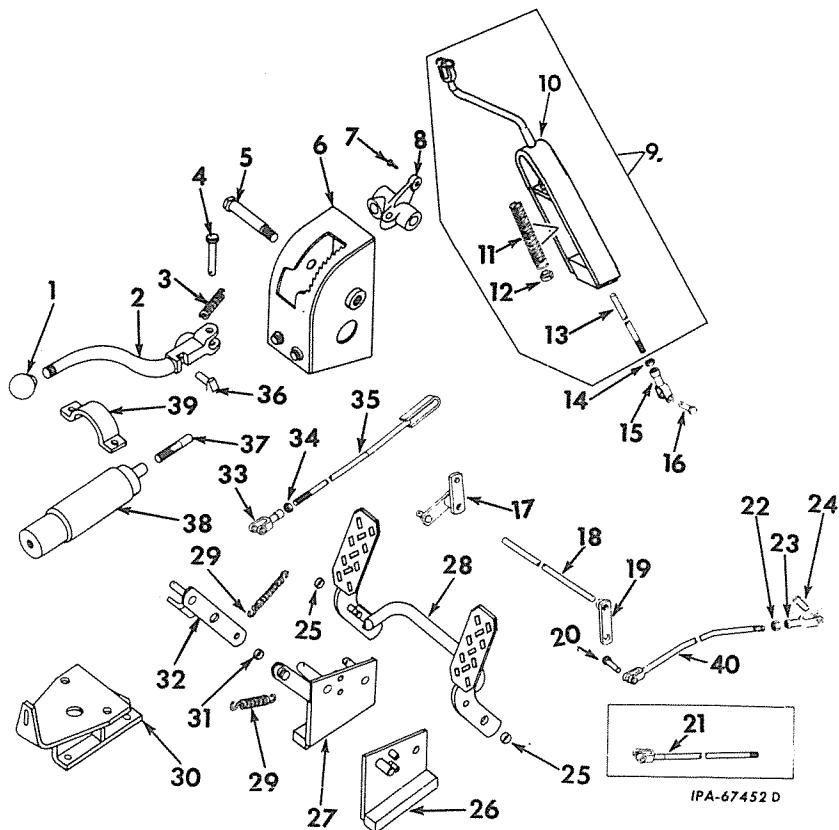

1	264 097 R2	BALL, governor control hand lever	12	338 099 R1 104 058	STOP, governor control rod spring RIVET, 1/8 x 1-1/8"
2	275 198 R22	LEVER w/PAWL, 251 846 R1, governor control hand	13	338 124 R1	ROD, lower governor control
3	261 650 R1	SPRING, governor control hand lever	14		NUT, 5/16NF jam
4	262 704 R1	PIN, governor control hand lever 3/32 x 5/8" cotter PIN	15	116 535	CLEVIS, governor control rod lower
5	275 199 R1	SHAFT, governor control	16	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)
6	330 751 R11	RATCHET, governor control 3/8 x 5/8" hex-hd cap SCREW (4) 3/8" lock WASHER (4) 3/8" NUT (2)	17	338 111 R91 18 518 R1	BELLCRANK, cross shaft PIN, 1/8 x 1" roll
7	103 495	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)	18	338 116 R1	SHAFT, cross 1/8 x 3/4" cotter PIN 7/16" flat WASHER
8	275 197 R1	HUB, governor control hand	19	338 113 R11 18 518 R1	LEVER, RH cross shaft PIN, 1/8 x 1" roll
9	338 123 R91	ROD ASSY, governor control	20	103 495	PIN, 5/16" rod end 3/32 x 5/8" cotter PIN
10		SUPPORT (Not Furnished Separately)	21	345 832 R11	ROD, injection pump control L-150P 7465 to 12099, also 7422, 7456 and 7459
11	338 098 R1	SPRING, governor control rod	22		NUT, 5/16NF

## ENGINE CONTROLS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>ENGINE CONTROLS AND DECELERATOR - Continued</b>					
(Used on Power Shift Loader Equipped With International R. D. Fuel Injection Pump L-150P 7465 to 12099, also 7422, 7456 and 7459)					
{Used on Power Shift Loaders Equipped With Roosa-Master Fuel Injection Pump L-150P 12100 up}					
23	116 535	CLEVIS, fuel injection pump lower horizontal rod adjusting (5/16")	338 399 R91	KIT, decelerator repair (for power shift or sideboom crawler tractors) (for use on CYLINDER, 338 383 R91 and 610 739 C91)	
24	103 495	PIN, 5/16" rod end 3/32 x 5/8" cotter PIN		(Composed of -	
25	333 784 R1	BUSHING, decelerator pedal (2)		§1	"O" RING, large
26	331 609 R91	SUPPORT, RH decelerator pedal 3/8 x 1" hex-hd cap SCREW 3/8 x 1-1/2" hex-hd cap SCREW		§1	"O" RING, small
		1/2 x 1-1/8" x 14 ga. WASHER (3) 1/8 x 1" cotter PIN		§2	RING, piston
27	330 971 R91	SUPPORT, LH decelerator pedal 3/8 x 1" hex-hd cap SCREW 3/8 x 1-1/2" hex-hd cap SCREW		§1	RING, retaining
		1/2 x 1-1/8" x 14 ga. WASHER (3) 1/8 x 1" cotter PIN		§1	SCRAPER, rod )
28	331 612 R91	PEDAL w/two BUSHING, 333 784 R1, decelerator	610 740 C1	SPRING, decelerator cylinder compression	
29	304 522 R1	SPRING, decelerator return (2)			
30	330 947 R11	BRACKET, decelerator hydraulic cylinder 7/16 x 1-3/4" hex-hd cap SCREW (2) 7/16" lock WASHER (2)			
31	333 784 R1	BUSHING, decelerator arm			
32	330 958 R11	ARM w/BUSHING, 333 784 R1, decelerator 1/8 x 1" cotter PIN			
33	117 825	CLEVIS, 7/16NF rod end			
34		NUT, 7/16NF jam			
35	338 112 R11	ROD, decelerator horizontal 3/32 x 5/8" cotter PIN 615 029 R1 3/8" flat WASHER			
36	251 846 R1	PAWL, governor control hand lever			
37	325 997 R1	ADJUSTER, decelerator hydraulic cylinder			
38	327 467 R91	CYLINDER (order CYLINDER, 610 739 C91)			
38	338 383 R91	CYLINDER (order CYLINDER, 610 739 C91)			
38	610 739 C91	CYLINDER w/SPRING, 610 740 C1, decelerator hydraulic 3/8NF x 7/8" hex-hd cap SCREW 3/8" lock WASHER			
39	331 422 R1	CLAMP, decelerator hydraulic cylinder 3/8" NUT (2) 3/8 x 1-3/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2)			
40	609 958 C11	ROD, injection pump control L-150P 12100 up			
324 184 R91		KIT, decelerator cylinder repair (for power shift or sideboom crawler tractors) (for use on CYLINDER, 327 467 R91)			
		(Composed of -			
		§2	KEY, internal		
		§1	"O" RING, piston seal		
		§2	"O" RING, end cover		
		§1	PACKING, rod		
		§2	PACKING, piston		
		§1	RING, rod gland snap		
		§1	SCRAPER, rod )		

§ - Not Furnished Separately.

## ENGINE CONTROLS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

### ENGINE CONTROLS


(Used on Manual Shift Loader Equipped With International R. D. Fuel Injection Pump L-150G 7465 to 11761, also 7445, 7447, 7457, 7461 and 7463)

(Used on Manual Shift Loader Equipped With Roosa-Master Fuel Injection Pump L-150G 11762 up)

### ENGINE CONTROLS - Continued

(Used on Manual Shift Loader Equipped With International R. D. Fuel Injection Pump L-150G 7465 to 11761, also 7445, 7447, 7457, 7461 and 7463)

(Used on Manual Shift Loader Equipped With Roosa-Master Fuel Injection Pump L-150G 11762 up)

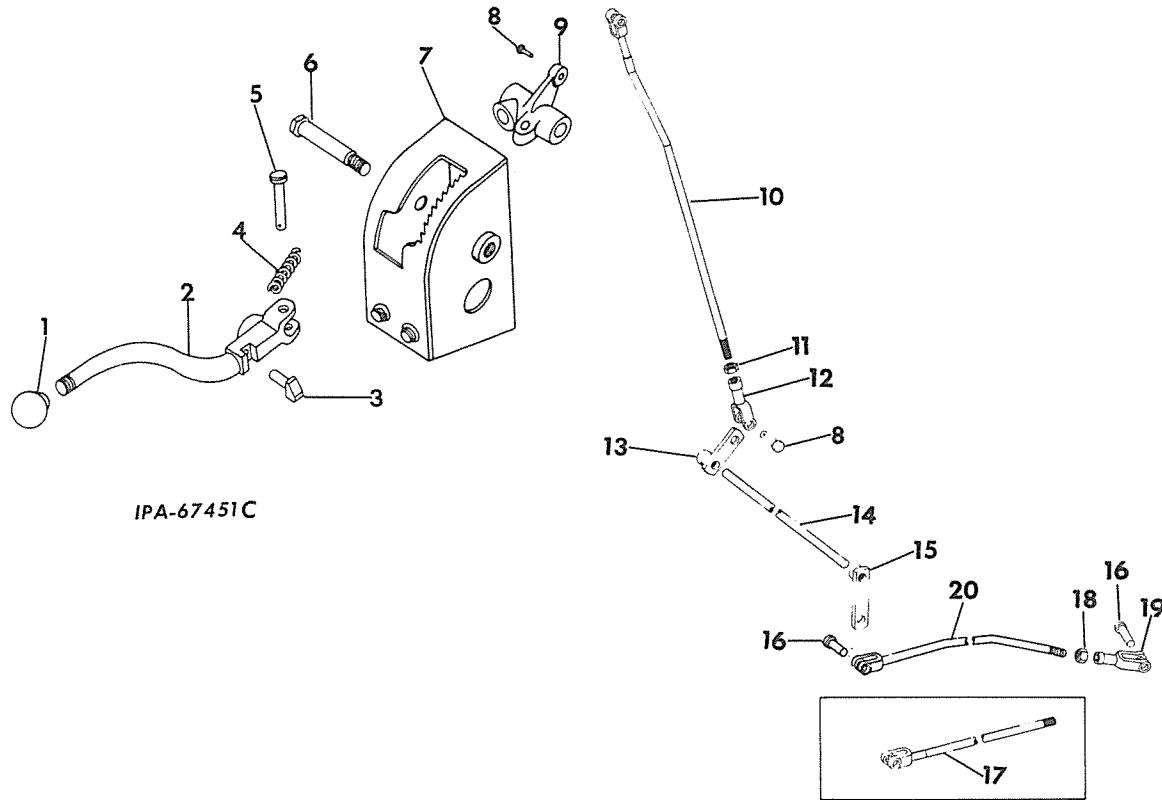

1	264 097 R2	BALL, governor control hand lever	12	116 535	CLEVIS, 5/16" adjustable
2	275 198 R22	LEVER w/PAWL, 251 846 R1, governor control hand	13	338 108 R11 18 518 R1	LEVER, LH horizontal rod PIN, 1/8 x 1" roll
3	251 846 R1	PAWL, governor control hand lever	14	338 116 R1 103 384 103 342	SHAFT, cross 1/8 x 3/4" cotter PIN 7/16" flat WASHER
4	261 650 R1	SPRING, governor control hand lever	15	338 113 R11 18 518 R1	LEVER, RH cross shaft PIN, 1/8 x 1" roll
5	262 704 R1	PIN, governor control hand lever	16	103 495 107 762	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)
6	275 199 R1	SHAFT, governor control hand lever	17	345 832 R11	ROD, injection pump control L-150G 7465 to 11761, also 7445, 7447, 7461 and 7463
7	330 751 R11 102 635 179 835 103 321	RATCHET, governor control 3/8" NUT (2) 3/8 x 5/8" hex-hd cap SCREW (4) 3/8" lock WASHER (4)	18	114 502	NUT, 5/16NF
8	103 495 107 762	PIN, 5/16" rod end (2) 3/32 x 5/8" cotter PIN (2)	19	116 535	CLEVIS, fuel injection pump lower horizontal rod adjustable (5/16")
9	275 197 R1	HUB, governor control hand	20	612 796 C91	ROD, injection pump control L-150G 11762 up
10	338 117 R11	ROD, governor control			
11	114 502	NUT, 5/16NF jam			

MEMORANDA





## INSTRUMENTS AND INSTRUMENT PANEL

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

INSTRUMENTS AND INSTRUMENT PANEL  
L-150G 6519 to 9809, L-150P 6501 to 9809

INSTRUMENTS AND INSTRUMENT PANEL - Continued  
L-150G 6519 to 9809, L-150P 6501 to 9809

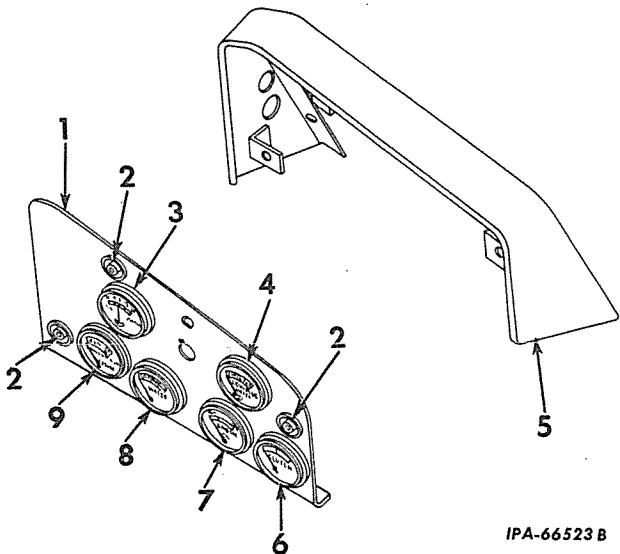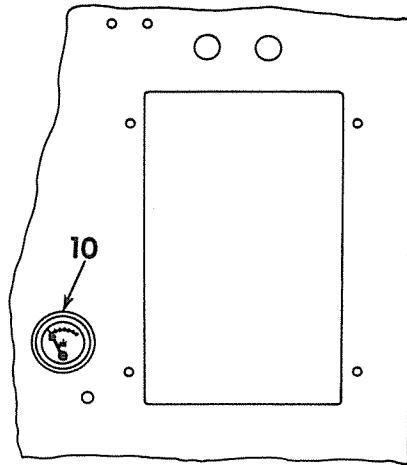

IPA-66523B

- 1 330 753 R1 PANEL, instrument
- 2 298 000 R1 MOUNT, vibration (3)  
1/4NF x 1" hex-hd cap SCREW (3)  
1/4" lock WASHER (3)
- 3 702 284 C1 AMMETER
- 4 702 282 C1 METER, glow plug
- 5 330 752 R11 HOUSING, instrument panel  
3/8 x 5/8" hex-hd cap SCREW (5)  
3/8" lock WASHER (5)
- 6 324 077 R91 GAUGE, clutch pressure (optional with  
324 077 R91) (†)  
L-150P 6501 to 7781

- 6 324 077 R91 GAUGE, clutch pressure (optional with  
308 622 R91) (†)  
L-150P 6501 to 7781
- 330 822 R1 TUBE, clutch pressure (lower)
- 330 821 R1 TUBE, clutch pressure (rear)
- 35 938 D CLIP, clutch pressure tube (3)
- 9 402 745 CONNECTOR, clutch pressure gauge to  
clutch pressure hose
- 9 410 386 CONNECTOR, hose to tube
- 9 410 451 ELBOW, clutch pressure tube
- 9 410 425 ELBOW, at regulator valve
- 117 966 GROMMET (in dash for clutch pressure  
hose)
- 333 992 R91 HOSE, clutch pressure gauge to pressure  
line
- 9 410 610 NUT, 1/4" tube (4)
- 274 221 FERRULE (4)

- 6 338 977 R92 GAUGE, clutch oil pressure (†)  
L-150P 7782 to 9809  
(Order the following parts)
  - 1 ADAPTER 9 402 681
  - 1 BODY 615 938 C1
  - 1 CLIP 263 717 R91
  - 1 CLIP 616 367 C1
  - 1 CLIP 616 368 C1
  - 1 CLIP 616 369 C1
  - 1 CONNECTOR 9 402 745
  - 1 CONNECTOR 606 885 C1
  - 1 ELBOW 615 369 C1
  - 1 GAUGE 703 232 C1
  - 2 GROMMET 619 818 C91
  - 1 HOSE 606 244 C91
  - 1 HOSE 702 540 C1
  - 1 PLUG 444 619
  - 1 TEE 444 253
  - 1 TUBE 616 365 C11
  - 1 TUBE 616 366 C11 )
- 444 024 BUSHING, clutch oil pressure sending  
unit reducer (use w/GAUGE, 338 977 R92)
- 67 869 D ELBOW, fuel pressure gauge (used w/  
GAUGE, 338 977 R92)
- 444 166 ELBOW, clutch oil pressure sending  
unit (on drain hole of pressure filter)  
(use w/GAUGE, 338 977 R92)
- 29 898 D NUT, 1/4" OD tube (hi-duty) (use w/  
GAUGE, 338 977 R92)
- 338 100 R2 TUBE, fuel pressure gauge (use w/  
GAUGE, 338 977 R92)

- 338 978 R91 UNIT, clutch oil pressure sending (use w/  
GAUGE, 338 977 R92)

L-150P 7782 to 9809

(order the following parts

- 1 ADAPTER 9 402 681
- 1 BODY 615 938 C1
- 1 CLIP 263 717 R91
- 1 CLIP 616 367 C1
- 1 CLIP 616 368 C1
- 1 CLIP 616 369 C1
- 1 CONNECTOR 9 402 745
- 1 CONNECTOR 606 885 C1
- 1 ELBOW 615 369 C1
- 1 GAUGE 619 818 C91
- 2 GROMMET 117 966
- 1 HOSE 606 244 C91
- 1 HOSE 702 540 C1
- 1 PLUG 444 619
- 1 TEE 444 253
- 1 TUBE 616 365 C11
- 1 TUBE 616 366 C11

(†) - Used On Power Shift Loaders.



## INSTRUMENTS AND INSTRUMENT PANEL

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
INSTRUMENTS AND INSTRUMENT PANEL - Continued L-150G 6519 to 9809, L-150P 6501 to 9809					
6	336 651 R91	GAUGE, fuel pump pressure (for manual shift loader equipped with International R. D. fuel injection pump)			INSTRUMENTS AND INSTRUMENT PANEL - Continued L-150G 6519 to 9809, L-150P 6501 to 9809
	9 402 746	ADAPTER (5/16 x 37° flared tube) hose to gauge			
	334 445 R1	BLOCK, junction (mounted on RH foot pocket) 5/16" NUT (2) 5/16 x 1-1/4" hex-hd cap SCREW (2) 5/16" lock WASHER (2)			
	59 730 H	CONNECTOR, fuel pressure tube (at filter tee) (2)			
	606 243 C91	HOSE w/FITTINGS, gauge to junction block (HOSE, 1/4" ID x 13-1/2" long including FITTINGS)			
	29 898 D	NUT, 1/4" OD tube (2)			
	338 101 R2	TUBE, fuel pressure lower			
7	702 027 C1	GAUGE, engine oil pressure			
	338 662 R91	HOSE, engine oil pressure gauge to pressure line			
	100 770 H	CLIP, engine oil pressure hose			
	257 523 R1	CONNECTOR, hose to engine oil pressure tube			
	9 402 746	CONNECTOR, engine oil pressure gauge to hose (2)			
	306 936 R1	TUBE, engine oil pressure lower			
	30 402 D	ELBOW, engine oil pressure gauge tube			
	29 898 D	NUT, engine oil pressure gauge tube nut (2)			
8	362 428 R91	INDICATOR, engine heat			
9	333 723 R91	GAUGE, converter temperature (†)			
	35 938 D	CLIP, pressure tube			
	117 966	GROMMET			
	144 034	REDUCER, 3/4 x 1/2"			
		SCREW, 1/4NF x 1" hex-hd cap (used to attach vibration mount) (3)			
		WASHER, 1/4" lock (used to attach vibration mount) (3)			
10	384 203 R91	GAUGE, fuel pump pressure (for power shift tractor equipped with International R. D. fuel injection pump)			
	59 730 H	CONNECTOR, fuel pressure tube (at filter tee)			
	67 869 D	ELBOW, 1/2 x 9/16" fuel pressure gauge			
	29 898 D	NUT, 1/4" OD tube (2)			
	338 100 R2	TUBE, fuel pressure gauge			
	454 168	PLUG, instrument panel light button			
	142 020	PLUG, light switch button			
	338 978 R91	UNIT, clutch oil pressure sending L-150P 7782 up			
	454 168	PLUG BUTTON (Used to plug starting switch hole in instrument panel on power shift loaders)			

## INSTRUMENTS AND INSTRUMENT PANEL

REF. PART  
NO. NUMBER


DESCRIPTION

REF. PART  
NO. NUMBER

DESCRIPTION

INSTRUMENTS AND INSTRUMENT PANEL  
(For Power Shift Loaders) L-150P 9810 up

INSTRUMENTS AND INSTRUMENT PANEL - Continued  
(For Power Shift Loaders) L-150P 9810 up

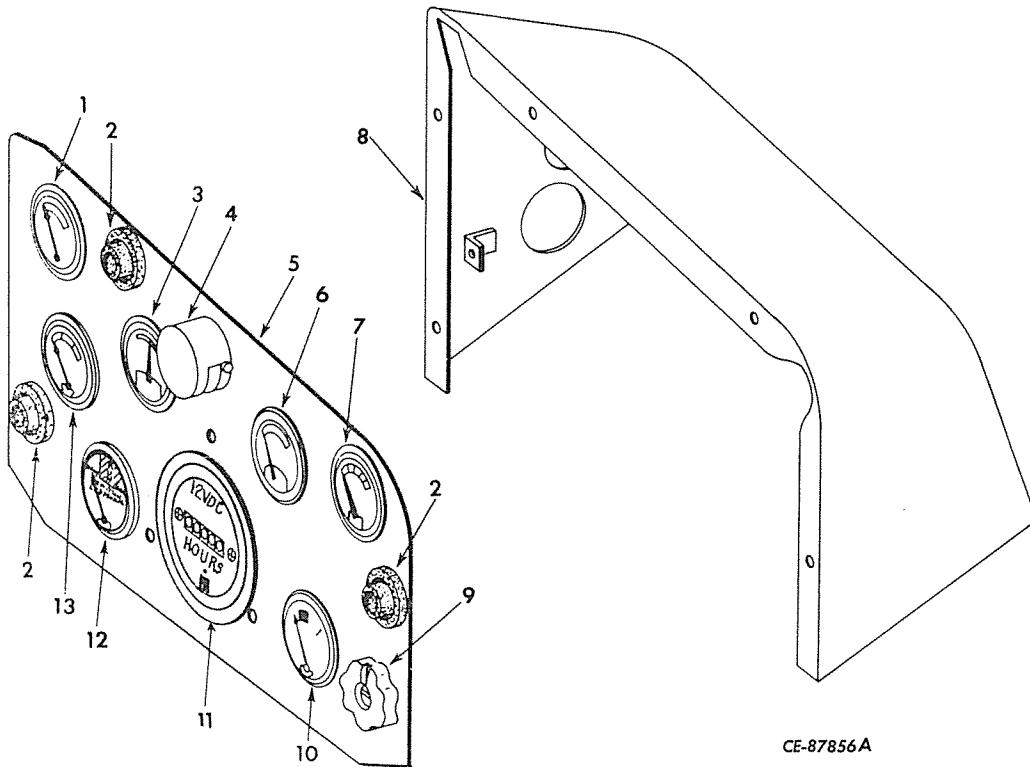

CE-87856A

1	333 723 R91	INDICATOR, converter temperature	444 024	BUSHING, clutch oil pressure sending unit reducer (use w/GAUGE, 338 977 R92)
2	298 000 R1	MOUNT, vibration	67 869 D	ELBOW, fuel pressure gauge (use w/ GAUGE, 338 977 R92)
3	702 284 C1	AMMETER	444 166	ELBOW, clutch oil pressure sending unit (on drain hole of pressure filter) (used w/GAUGE, 338 977 R92)
4	603 467 C91	PACKAGE, panel light field service (less bulb) (Consists of - 1 GROMMET 273 406 R1 § 1 LIGHT 1 WASHER 273 405 R1 )	29 898 D	NUT, 1/4" OD tube (hi-duty) (used w/ GAUGE, 338 977 R92)
142 450	273 406 R1	BULB, panel light (12 volt)	338 100 R2	TUBE, fuel pressure gauge (used w/ GAUGE, 338 977 R92)
273 405 R1		GROMMET, panel light mounting	338 978 R91	UNIT, clutch oil pressure sending (used w/GAUGE, 338 977 R92)
6	702 282 C1	WASHER, panel light mounting		(order the following parts -
5	604 072 C2	METER, glow plug (also listed and illustrated with "Electric Starting and Lighting")		1 ADAPTER 9 402 681 1 BODY 615 938 C1 1 CLIP 263 717 R91 1 CLIP 616 367 C1 1 CLIP 616 368 C1 1 CLIP 616 369 C1 1 CONNECTOR 9 402 745 1 CONNECTOR 606 885 C1 1 ELBOW 615 369 C1 1 GAUGE 619 818 C91 2 GROMMET 117 966 1 HOSE 606 244 C91 1 HOSE 702 540 C1 1 PLUG 444 619 1 TEE 444 253 1 TUBE 616 365 C11 1 TUBE 616 366 C11 )
7	338 977 R92	GAUGE, clutch oil pressure L-150P 9809 to 14047 (Order the following parts - 1 ADAPTER 9 402 681 1 BODY 615 938 C1 1 CLIP 263 717 R91 1 CLIP 616 367 C1 1 CLIP 616 368 C1 1 CLIP 616 369 C1 1 CONNECTOR 9 402 745 1 CONNECTOR 606 885 C1 1 ELBOW 615 369 C1 1 GAUGE 619 818 C91 2 GROMMET 117 966 1 HOSE 606 244 C91 1 HOSE 702 540 C1 1 PLUG 444 619 1 TEE 444 253 1 TUBE 616 365 C11 1 TUBE 616 366 C11 )	7 619 818 C91	GAUGE, clutch oil pressure L-150P 14049 up ADAPTER, hose to regulator valve tee (used w/GAUGE, 703 232 C1) BODY, clutch oil pressure tube to filter hose adapter (used w/GAUGE, 703 232 C1)

§ - Not Furnished Separately

# INSTRUMENTS AND INSTRUMENT PANEL


REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>INSTRUMENTS AND INSTRUMENT PANEL - Continued</b> (For Power Shift Loaders) L-150P 9810 up					
9 402 745	CONNECTOR, clutch oil pressure gauge (used w/GAUGE, 703 232 C1)	915 499 R1	NUT (2)		
606 885 C1	CONNECTOR, junction block to clutch oil pressure tube (used w/GAUGE, 703 232 C1)	915 500 R1	SLEEVE (2)		
263 717 R91	CLIP, clutch oil pressure hose (on regulator bracket rear bolt) (used w/ GAUGE, 703 232 C1)	11	HOURMETER, electric (for compon- ents see list of parts under details of "Electric Hourmeter") No. 6 x 1/2" slt-rd-hd SCREW (3) No. 6 lock WASHER (3)		
615 369 C1	ELBOW, clutch oil pressure tube junction (used w/GAUGE, 703 232 C1)	12	GAUGE, transmission lube pressure L-150P 9809 to 14048		
117 966	GROMMET, clutch oil pressure lower tube (used w/GAUGE, 703 232 C1)	444 032	ADAPTER, lube pressure tube		
117 966	GROMMET, oil pressure hose (used w/ GAUGE, 703 232 C1)	59 730 H	CONNECTOR, transmission lube pres- sure tube (2)		
702 540 C1	HOSE w/FITTINGS, clutch oil pressure (HOSE, 1/4" ID x 28" long including FITTINGS) (used w/GAUGE, 703 232 C1)	606 885 C1	L-150P 9810 to 12166		
606 243 C91	HOSE w/FITTINGS, clutch oil pressure gauge (HOSE, 1/4" ID x 13-1/2" long including FITTINGS) (used w/GAUGE, 703 232 C1)	606 673 C1	CONNECTOR, transmission lube pres- sure tube (at junction block) L-150P 12167 to 14048		
444 619	PLUG, pressure filter drain hole (used w/GAUGE, 703 232 C1)	9 402 745	CONNECTOR, transmission lube pres- sure gauge (at gauge)		
432 577	PLUG, button (on instrument panel) (used w/GAUGE, 703 232 C1)	606 244 C91	HOSE w/FITTINGS, transmission lube pressure gauge to junction block (HOSE 1/4" ID x 16" long including FITTINGS)		
444 253	TEE, regulator valve (used w/GAUGE, 703 232 C1)	29 898 D	NUT, transmission lube pressure tube (2)		
616 365 C11	TUBE w/two SLEEVE, 915 500 R1 and two NUT, 915 499 R1, upper clutch oil pressure gauge (used w/GAUGE, 703 232 C1)	604 071 C1	L-150P 9810 to 12166		
915 499 R1	NUT (2)	611 430 C11	TUBE, transmission lube pressure L-150P 9810 to 12166		
915 500 R1	SLEEVE (2)	915 499 R1	TUBE, w/2 SLEEVE, 915 500 R1 and (2) NUT 915 999 R1, transmission lube pressure		
616 366 C11	TUBE w/two SLEEVE, 915 500 R1 and two NUT, 915 499 R1, lower clutch oil pressure gauge (used w/GAUGE, 703 232 C1)	915 500 R1	L-150P 12167 to 14048		
915 499 R1	NUT (2)	13	NUT (2)		
915 500 R1	SLEEVE (2)	702 219 C1	SLEEVE (2)		
8	330 752 R11	HOUSING, instrument panel 3/8 x 5/8" hex-hd cap SCREW (5) 3/8" lock WASHER (5)	144 034	INDICATOR, engine heat BUSHING, 3/4 x 1/2" reducing No. 6 x 1/2" SCREW (3) No. 6 lock WASHER (3)	
9		SWITCH ASSY, light (for components see list of parts under details of "Lighting Switch") (also listed and illustrated with "Electric Starting and Lighting")	334 445 R1	BLOCK, junction 5/16 x 1-1/4" hex-hd cap SCREW (2) 5/16" NUT (2) 5/16" lock WASHER 5/16" int-ext lock WASHER (for hourmeter pressure switch ground)	
10	702 027 C1 35 938 D 100 770 H 257 523 R1	GAUGE, engine oil pressure CLIP, oil pressure tube CLIP, oil pressure indicator hose CONNECTOR, hose to oil pressure tube L-150P 9810 to 12166	278 834 R2 278 836 R2	CLAMP, pressure tube PAD, pressure tube clamp (2) 1/4" NUT (2) 1/4 x 1-1/4" hex-hd cap SCREW (2) 1/4" lock WASHER (2)	
	606 885 C1	CONNECTOR, junction block to oil pressure tube L-150P 12167 up	264 674 R91	DAMPER, hourmeter vibration (also listed with "Electric Hourmeter") No. 6 x 1/2" slt-rd-hd SCREW (3) No. 6 lock WASHER (3)	
9 402 745	CONNECTOR, oil pressure indicator to hose	384 203 R91	GAUGE, fuel injection pump pressure (on dash) used on tractors equipped with International RD Fuel Injection Pumps		
30 402 D	ELBOW, oil pressure gauge tube L-150P 9810 to 12166	29 901 D	CONNECTOR, fuel pressure tube (at filter tee)		
319 615 R1	ELBOW, oil pressure gauge tube L-150P 12167 up	29 899 D	NUT, fuel pressure tube		
117 966	GROMMET, oil pressure hose (on firewall)	454 168	PLUG, instrument panel light button		
606 244 C91	HOSE w/FITTINGS, engine oil pressure indicator to pressure line (HOSE, 1/4" ID x 16" long including FITTINGS) L-150P 9809 to 14048	142 020	PLUG, light switch button		
29 898 D	NUT, oil pressure tube (2) L-150P 9810 to 12166	444 631	PLUG, transmission lube pressure L-150P 14049 up		
604 073 C1	TUBE, oil pressure tube (2) L-150P 9810 to 12166	454 168	PLUG, button used to plug starting switch hole in instrument panel on power shift loaders		
611 431 C11	TUBE w/two NUT, 915 499 R1 and two SLEEVE, 915 500 R1, oil pres- sure tube L-150P 12167 to 14048				
915 499 R1	NUT (2)				
915 500 R1	SLEEVE (2)				
616 370 C11	TUBE w/two SLEEVE, 915 500 R1 and two NUT, 915 499 R1, oil pressure tube L-150P 14049 up				

# INSTRUMENTS AND INSTRUMENT PANEL

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

INSTRUMENTS AND INSTRUMENT PANEL  
(For Manual Shift Loaders) L-150G 9810 up

INSTRUMENTS AND INSTRUMENT PANEL - Continued  
(For Manual Shift Loaders) L-150G 9810 up

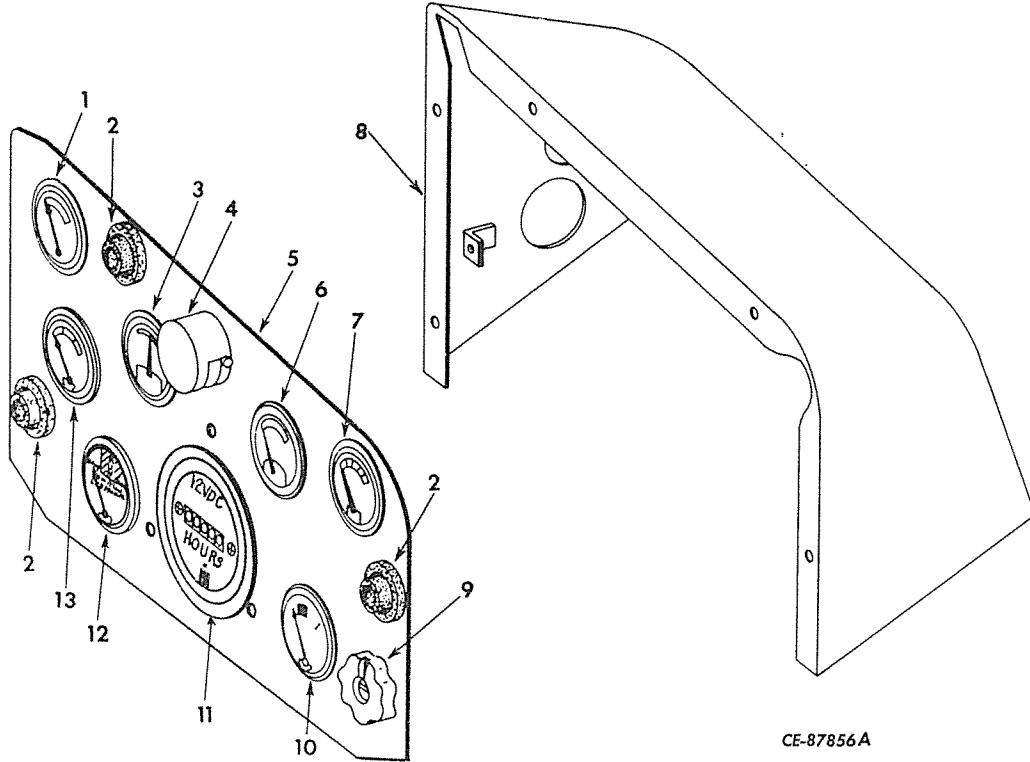

CE-87856A

1	432 577	PLUG, button (3)	9	702 027 C1 35 938 D 100 770 H 257 523 R1	GAUGE, engine oil pressure CLIP, oil pressure tube CLIP, oil pressure indicator hose CONNECTOR, hose to oil pressure tube L-150G 9810 to 12166
2	298 000 R1	MOUNT, vibration (3)	606 885 C1	CONNECTOR, junction block to oil pressure tube L-150G 12167 up	
3	702 284 C1	AMMETER	9 402 745	CONNECTOR, oil pressure indicator to hose	
4	603 467 C91	PACKAGE, panel light field service (Consists of - 1 GROMMET 273 406 R1 § 1 LIGHT 1 WASHER 273 405 R1 )	30 402 D 319 615 R1	ELBOW, oil pressure gauge tube L-150G 9810 to 12166	
	142 450 273 406 R1 273 405 R1	BULB, panel light (12 volt) GROMMET, panel light mounting WASHER, panel light mounting	137 966	ELBOW, oil pressure gauge tube L-150G 12167 up	
5	604 072 C2	PANEL, instrument 1/4NF x 1" hex-hd cap SCREW (3) 1/4" lock WASHER (3)	606 244 C91 29 898 D 604 073 C1	GROMMET, oil pressure hose (on firewall) HOSE w/FITTINGS, engine oil pressure indicator to pressure line (HOSE, 1/4" ID x 16" long including FITTINGS) NUT, oil pressure tube (2) L-150G 9810 to 12166	
6	702 282 C1	METER, glow plug (also listed and illustrated with "Electric Starting and Lighting")	611 431 C11	TUBE, oil pressure gauge L-150G 9810 to 12166	
7	330 752 R11	HOUSING, instrument panel 3/8 x 5/8" hex-hd cap SCREW (5) 3/8" lock WASHER (5)	915 499 R1 915 500 R1	TUBE, w/(2) NUT 915 499 R1 and (2) SLEEVE, 915 500 R1 L-150G 12167 up	
8		SWITCH ASSY, light (Delco-Remy No. 1994050) (for components see list of parts under details of "lighting Switch") (also listed and illustrated with "Electric Starting and Lighting")	10	NUT (2) SLEEVE (2)	
				HOURMETER, electric (for components see list of parts under details of "Electric Hourmeter") No. 6 x 1/2" slt-rd-hd SCREW (3) No. 6 lock WASHER (3)	
				§ - Not Furnished Separately	



## INSTRUMENTS AND INSTRUMENT PANEL



REF.	PART NO.	DESCRIPTION
------	-------------	-------------

INSTRUMENTS AND INSTRUMENT PANEL - Continued  
(For Manual Shift Loaders) L-150G 9810 up

- 11 384 203 R91 GAUGE, fuel injection pump pressure (Used on tractors equipped with International RD Fuel Injection Pumps)
- 9 402 746 ADAPTER, hose to gauge
- 29 901 D CONNECTOR, fuel pressure tube (at filter tee)
- 59 730 H CONNECTOR, tube to junction block
- 606 243 C91 HOSE, gauge to junction block
- 29 898 D NUT, fuel pressure tube (2)
- 338 101 R2 TUBE, fuel pressure lower
- 12 702 219 C1 INDICATOR, engine heat
- 144 034 BUSHING, 3/4 x 1/2" reducing
- 334 445 R1 BLOCK, junction
- 5/16 x 1-1/4" hex-hd cap SCREW (2)
- 5/16" NUT (2)
- 5/16" lock WASHER
- 5/16" int-ext tooth lock WASHER (for hourmeter pressure switch ground)
- 278 834 R2 CLAMP, pressure tube
- 278 836 R2 PAD, pressure tube clamp (2)
- 1/4" NUT (2)
- 1/4 x 1-1/4" hex-hd cap SCREW (2)
- 1/4" lock WASHER (2)
- 264 674 R91 DAMPER, hourmeter vibration (also listed with "Electric Hourmeter")
- No. 6 x 1/2" slit-rd-hd SCREW (3)
- No. 6 lock WASHER (3)
- 454 168 PLUG, instrument panel light button
- 142 020 PLUG, light switch button




-138-

## HYDRAULIC SYSTEM (FOR POWER SHIFT LOADERS)



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
HYDRAULIC PUMP AND SPLINED COUPLING (Hydrex) L-150P 9866 up			HYDRAULIC PUMP AND SPLINED COUPLING - Continued (Hydrex) L-150P 9866 up		

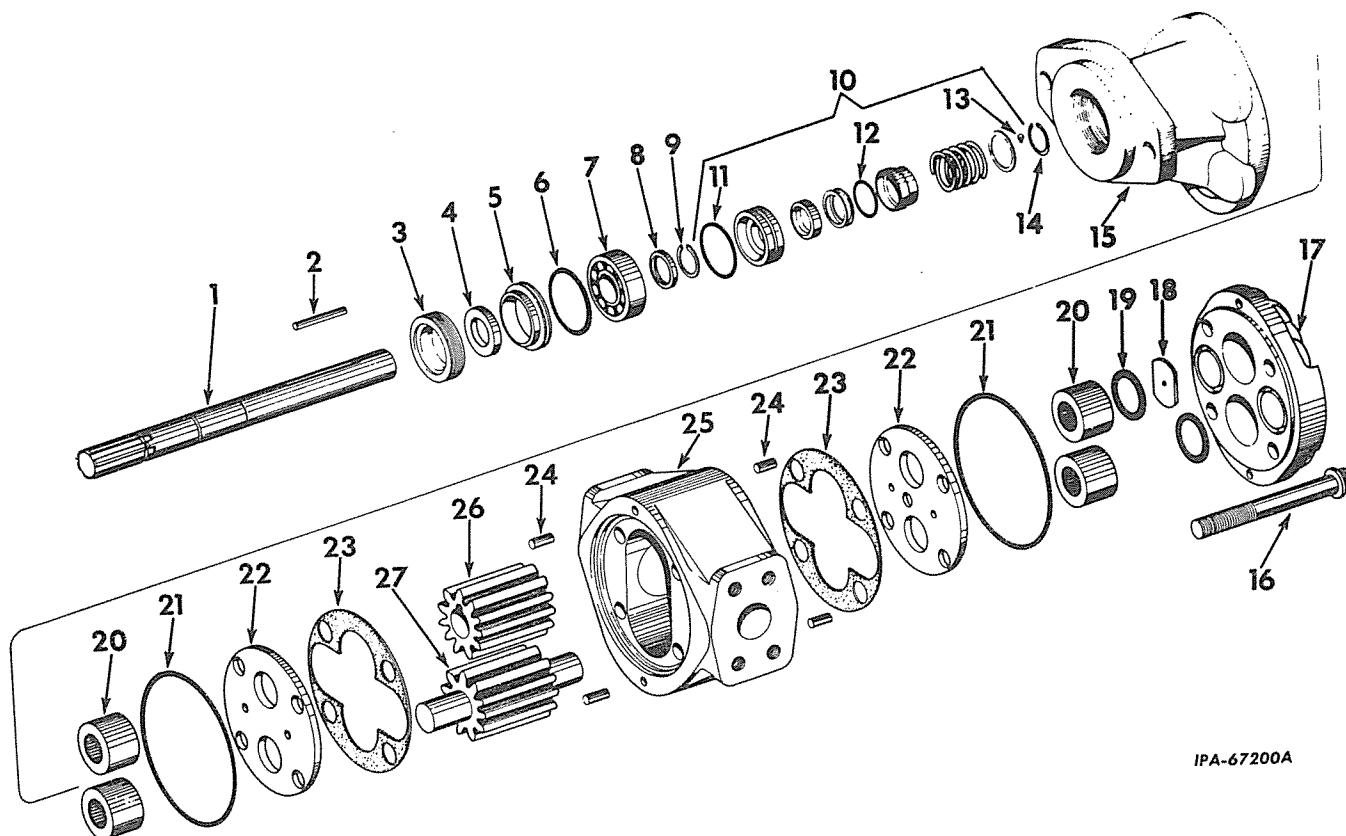

IPA-67200A

Service parts for Hydraulic Pump (Hydrex)  
and Splined Coupling -


347 751 R91	PUMP ASSY, hydraulic (Hydrex No. 2017A17S2AL)	13	321 757 R1	KEY, seal seat
179 885	1/2 x 1-1/2" hex-hd cap SCREW (2)	14	296 939 R1	RING, snap
103 323	1/2" lock WASHER (2) (Consists of Ref. Nos. 1 thru 27)	15	338 546 R1	ADAPTER
1	603 656 C1 SHAFT, drive	16		SCREW, 5/8NF x 3-3/4" soc-hd (4)
2	603 660 C1 PIN, dowel	17	321 753 R1	COVER, pump
3	321 764 R91 RETAINER, bearing	18	321 768 R1	WASHER, thrust
4	321 770 R91 OIL SEAL, sleeve	19	293 739 R1	"O" RING, cover (1-3/8 x 1-5/8 x 1/8" (4)
5	321 763 R1 SLEEVE, shaft seal	20	321 769 R91	BEARING, roller (4)
6	612 681 R1 "O" RING, seal sleeve (1-7/8 x 2-1/16 x 3/32")	21	252 735 R1	"O" RING, housing (5 x 5-1/4 x 1/8") (2)
7	156 483 H1 BEARING, shaft roller	22	321 765 R1	PLATE, wear (2)
8	321 762 R1 RETAINER, snap ring	23	296 938 R1	GASKET (X)
9	321 761 R1 RING, snap	23	296 937 R1	GASKET (X)
10	321 755 R91 PACKAGE, seat and seal field service	24	272 843 R1	PIN, locating (4)
11	321 759 R1 "O" RING, seal seat (1-13/16 x 2 x 3/32")	25	603 652 C1	HOUSING, pump
12	283 401 R1 "O" RING, drive shaft seal (1 x 1-3/16 x 3/32")	26	603 658 C1	GEAR, drive
		27	603 654 C1	GEAR, driven
			299 926 R2	COUPLING, splined
			17 084 R1	PIN, 1/8 x 1-1/4" roll
				(X) - As Required.

DRAWBAR

REF. PART  
NO. NUMBER

DESCRIPTION

DRAWBAR

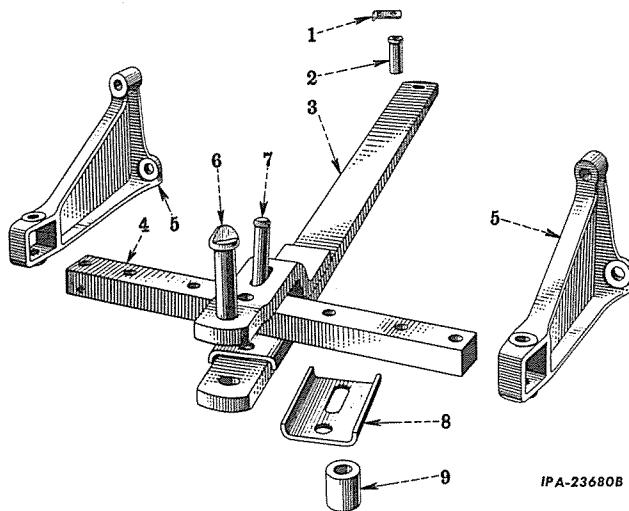


IPA-23680B


- |   |           |  |
|---|-----------|--|
| 1 | 47 772 D  | LOCK, drawbar pin<br>3/8NF x 1" hex-hd cap SCREW<br>3/8" lock WASHER               |
| 2 | 47 771 D  | PIN, drawbar pivot   |
| 3 | 53 921 DA | DRAWBAR  |
| 4 | 47 773 D  | GUIDE, drawbar<br>7/8NF NUT (2)<br>7/8NF x 4-1/4" hex-hd cap SCREW (2)             |
| 5 | 52 205 D  | BRACKET, drawbar guide (2)   |
| 6 | 47 776 D  | PIN, drawbar clevis<br>3/8 x 2-1/4"  |
| 7 | 47 775 D  | PIN, drawbar stop<br>1/4 x 1-1/2" cotter PIN                                       |
| 8 | 53 925 D  | PLATE, drawbar clevis wear (2)<br>1NF NUT<br>1NF x 6" hex-hd cap SCREW             |
| 9 |           | SPACER, drawbar jaw (1-1/2" double extra<br>strong pipe x 2" long, obtain locally) |

## MISCELLANEOUS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
		CRANKCASE GUARD AND FRONT PULL HOOK			SEAT BELT ATTACHMENT

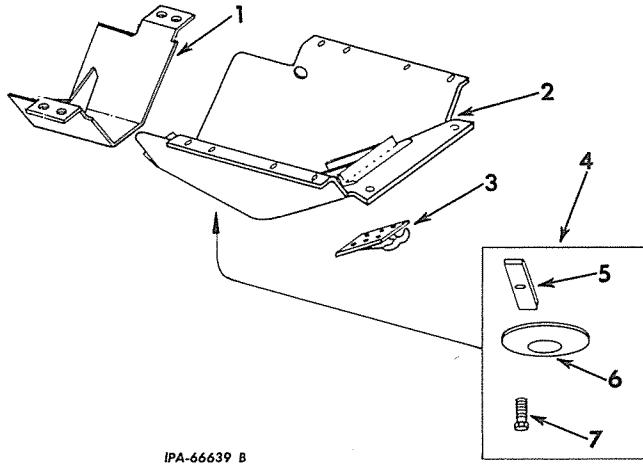


- |   |                               |  |
|---|-------------------------------|--|
| 1 | 331 861 R11<br>271 611        | GUARD, crankcase rear<br>3/4 x 2" hex-hd cap SCREW (4)                         |
| 2 | 330 639 R91<br>271 556        | GUARD, crankcase front<br>5/8 x 1-1/4" hex-hd cap SCREW (10)                   |
| 3 | 5 961 DX                      | ATTACHMENT, front pull hook (consists of<br>HOOK, 5 961 D) (see NOTES 1 and 3) |
| 3 | 5 961 D<br>103 030<br>271 587 | HOOK, front pull<br>5/8NF NUT (6)<br>5/8NF x 2" hex-hd cap SCREW (6)           |
| 4 | 67 574 DC                     | COVER, oil drain hole  |
| 5 | 42 877 DB                     | SUPPORT, oil drain hole cover  |
| 6 |                               | COVER, oil drain hole (Not Furnished<br>Separately)                            |
| 7 | 179 883                       | SCREW, 1/2 x 1-1/4" hex-hd cap   |

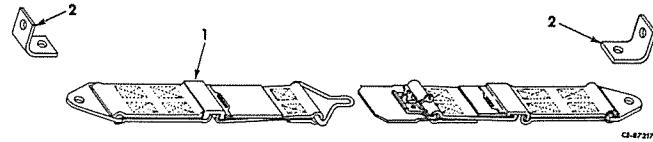

- |   |  |
|---|--|
| 703 108 C91                                   | ATTACHMENT, safety seat belt (consists<br>of BELT, 702 248 C1 and BRACKET,<br>616 167 C1) (see NOTES 1 and 3)        |
| 1 702 248 C3<br>102 637<br>179 881<br>103 323 | BELT, seat (part of Attachment 703 108 C91)<br>1/2" NUT (2)<br>1/2 x 1" hex-hd cap SCREW (2)<br>1/2" lock WASHER (2) |
| 2 616 167 C1<br>179 885                       | BRACKET, seat belt hold down (part of<br>Attachment, 703 108 C91) (2)<br>1/2 x 1-1/2" hex-hd cap SCREW (2)           |

### OIL LEVEL DIP STICK LOCK

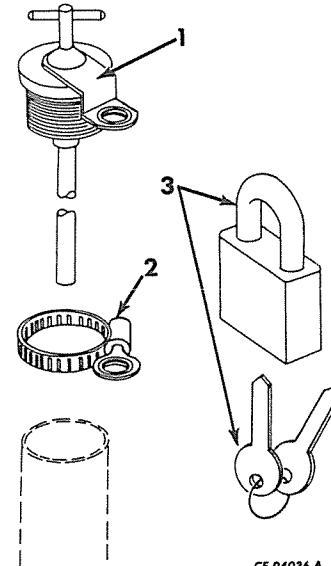

- |             |   |
|-------------|---|
| 628 187 C91 | ATTACHMENT, w/INSTALLATION DRAW-<br>ING 12G9264, engine oil level dip stick lock<br>(see NOTES 1 and 3) |
|-------------|---|

(Consists of the following parts -

- |   |             |                             |
|---|-------------|-----------------------------|
| 1 | 672 994 C1  | DIP STICK, engine oil level |
| 2 | 623 761 C1  | CLAMP, lock                 |
| 3 | 650 382 C91 | LOCK w/keys, pad            |


NOTE 1 - Factory Application - Order On  
Machine Order Form.  
NOTE 3 - Field Application - Order Through  
Regular Service Parts Channels.



## MISCELLANEOUS



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
REAR POWER TAKE-OFF			REAR POWER TAKE-OFF - Continued		

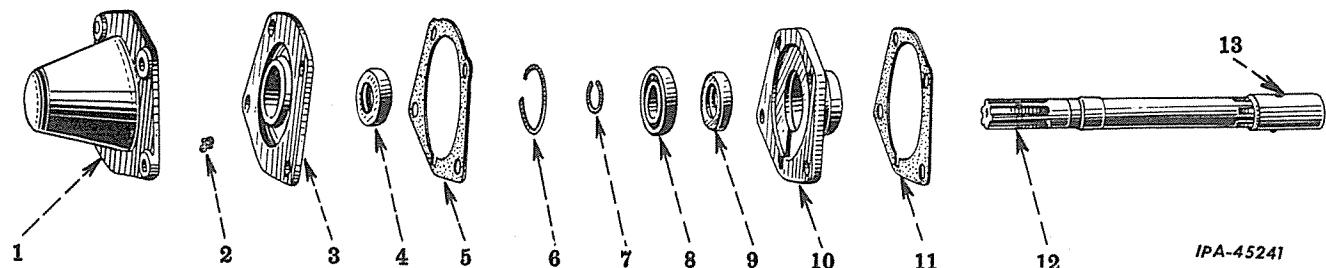

IPA-45241

	53 962 DA	ATTACHMENT, power take-off rear (see NOTES 1 and 3)	8	ST 205 A	BEARING, ball, power take-off shaft
1	6 843 D	COVER, power take-off shaft end (not for belt pulley) 5/8 x 2" hex-hd cap SCREW (4)	9	53 968 D	OIL SEAL, inner power take-off shaft
2	109 461	FITTING, power take-off shaft bearing lubrication	10	8 392 DA	CAGE, power take-off shaft bearing
3	8 391 D	CAGE, power take-off shaft bearing oil seal	11	49 547 DA	GASKET, power shaft bearing oil seal cage
4	53 967 D	OIL SEAL, outer power take-off shaft bearing	12	53 966 DAX	SHAFT w/COUPLING, 49 548 D, power take-off
5	49 547 DA	GASKET, power take-off shaft bearing cage	13	49 548 D	COUPLING, power take-off shaft 5/16 x 2-5/8" rd-hd steel RIVET
6	512 889 R1	RING, outer power take-off shaft bearing retaining snap			
	48 512 D	RING, inner power take-off shaft bearing retaining snap			

NOTE 1 - Factory Application - Order On  
Machine Order Form.  
NOTE 3 - Field Application - Order Through  
Regular Service Parts Channels.




## MISCELLANEOUS




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

TOOLS

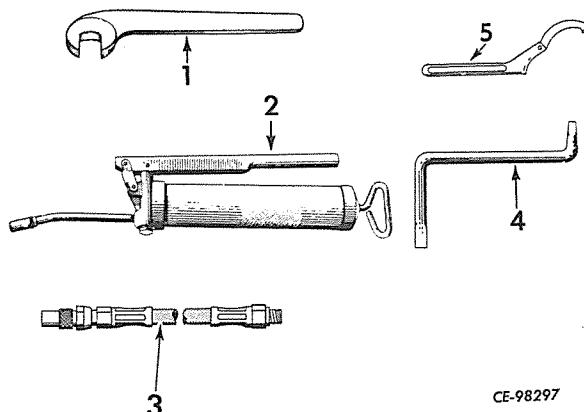

CE-98297

TOOL BOX AND PADLOCK

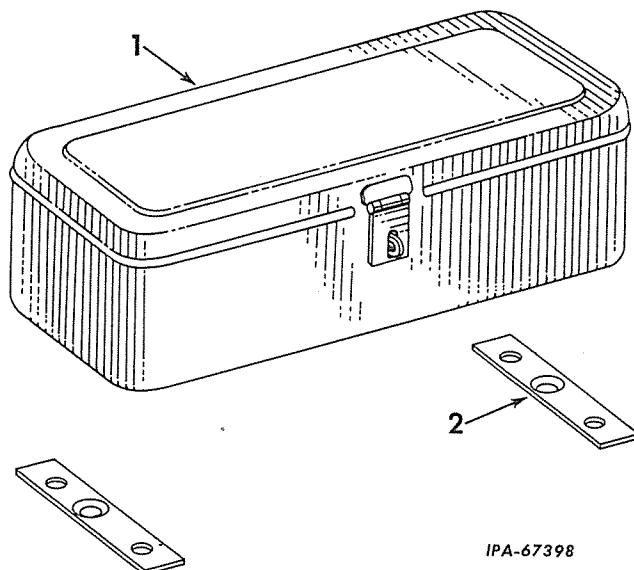

IPA-67398

1	9 533 DA	WRENCH, front ifler adjuster (*)	A	331 690 R91	ATTACHMENT, tool box 21" less lock and keys (see NOTES 1 and 3)
2	999 677 R91	LUBRICATOR, hand (15 oz. size) (Part of Attachment, 999 677 R91)	B	331 790 R91	ATTACHMENT, tool box 21" w/lock and keys (see NOTES 1 and 3)
3	619 581 C91	EXTENSION, grease gun flexible	C	650 382 C91	ATTACHMENT, pad lock w/keys (see NOTES 1 and 3)
4	304 910 R2	WRENCH, socket plug	1	280 655 R91 102 635	BOX, tool (21") (Attachments A and B) 3/8" NUT (6) 3/8 x 1"slt-fl-hd mach SCREW (2) 3/8 x 1" hex-hd cap SCREW (4) 3/8" lock WASHER (6)
5	611 144 C1	WRENCH, spanner (use to adjust packing of Drott cylinder) (not furnished with machine)	2	331 681 R1 650 382 C91	SPACER, tool box (2) (Attachments A and B) PADLOCK w/KEY (Attachments B and C)
	309 015 R91	LUBRICATOR (tank type) (for components see list of parts under details of "LUBRICATOR")			
	999 677 R91	ATTACHMENT, hand type lubricator (consists of LUBRICATOR, 999 677 R91) (see NOTES 1 and 3)			

(\*) - Not Used On Units Equipped With Hydraulic Track Adjuster.

NOTE 1 - Factory Application - Order On Machine Order Form.  
NOTE 3 - Field Application - Order Through Regular Service Parts Channels.

## MISCELLANEOUS




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
LUBRICATOR (Tank Type) (Lincoln Engineering Co.)			LUBRICATOR - Continued (Tank Type) (Lincoln Engineering Co.)		
			11	53 200 D	PIN, piston (11174)
			12	53 203 D	PACKING, piston (34078)
			13	53 201 D	PIN, foot valve (11175)
			14	16 014 R1	BALL, check (66030)
			15	53 199 D	BODY, foot valve (11173)
			16	53 198 D	PISTON, plunger (11172)
			17	39 659 D	BALL, pump check (66011)
			18	53 209 D	CONTAINER w/GASKET, 278 919 R1 and three SCREW, 55 479 D (81241)
			19	278 919 R1	GASKET, container cover (38084)
			20	310 924 R91	COVER, container (91777)
			21		SCREW, 1/4 x 7/16" hex-hd cap (3) 1/4" internal-tooth lock WASHER (3)
			22	53 207 D	HOSE, lubricator (3 ft. long) (79036)
			23	310 944 R91	NOZZLE, lubricator (700329)

309 015 R91 LUBRICATOR ASSY (consists of the following parts) (700225)

- 1 55 482 D HANDLE, lever (40214)
- 2 PIN, 3/32 x 1/2" cotter (3)
- 3 40 638 D PIN, toggle (10472) (2)
- 4 40 635 D PIN, handle (10326)
- 5 277 153 R1 TOGGLE (45744)
- 6 53 202 D OUTLET, pump (11551)
- 7 310 923 R1 BODY, pump (40481)
- 8 55 479 D SCREW, container cover (11225) (3)
- 9 53 206 D TUBE, pump (62100)
- 10 53 205 D ROD, piston (62099)

## MISCELLANEOUS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
TOOL SET (Owatonna Tool Co.)			TOOL SET - Continued (Owatonna Tool Co.)		

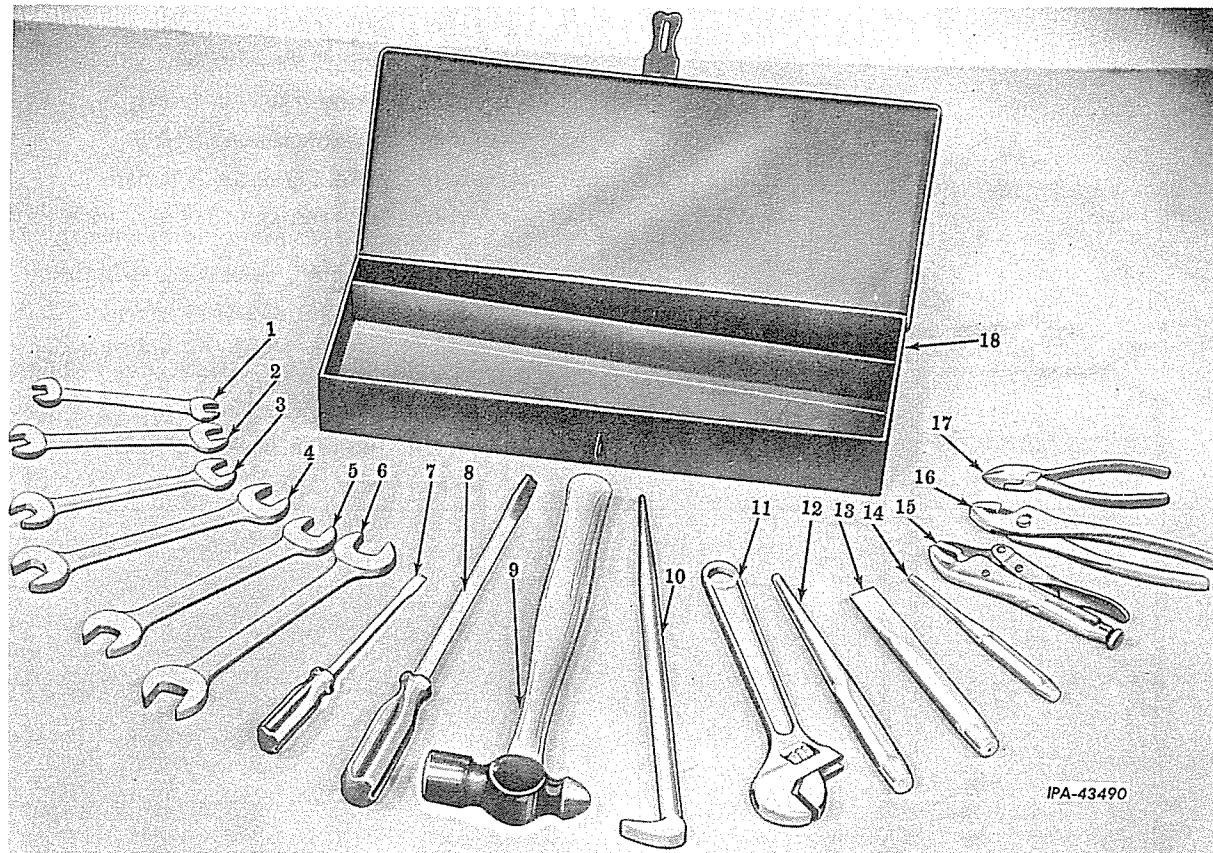

TOOL SET (consists of seventeen tools and tool box) (also see "Tools" listed in Miscellaneous Equipment Section of Catalog) (see NOTE) (IH Parts Number 276 820 R91)

1	E-1416	WRENCH, end (7/16 x 1/2")	9	BP-32	HAMMER (ball peen)
2	E-1820	WRENCH, end (9/16 x 5/8")	10	PB-32	BAR, pry (9/16" rd x 16" long)
3	E-2022	WRENCH, end (5/8 x 11/16")	11	DA-12	WRENCH (12" adjustable)
4	E-2426	WRENCH, end (3/4 x 13/16")	12	TP-24	PUNCH (5/16" bit x 10" long)
5	E-2628	WRENCH, end (13/16 x 7/8")	13	CC-24	CHISEL (7/8" bit x 8" long)
6	E-3032	WRENCH, end (15/16 x 1")	14	PP-6	PUNCH (3/16" bit x 10" long)
7	SS-83	SCREWDRIVER (1/4" shank)	15	719	WRENCH, vise grip (7")
8	SS-123	SCREWDRIVER (3/8" shank)	16	712-A	PLIER (slip joint, 8")
			17	700-B	CUTTER, diagonal (6")
			18	H-190	BOX, tool

NOTE - Order Individual Tools And Complete  
Tool Sets From Service Tools, Inc.,  
1901 S. Indiana Ave., Chicago 16,  
Illinois.

## MISCELLANEOUS



REF. PART  
NO. NUMBER


DESCRIPTION

REF. PART  
NO. NUMBER

DESCRIPTION

TOOL SET  
(Owatonna Tool Co.)



TOOL SET - Continued  
(Owatonna Tool Co.)

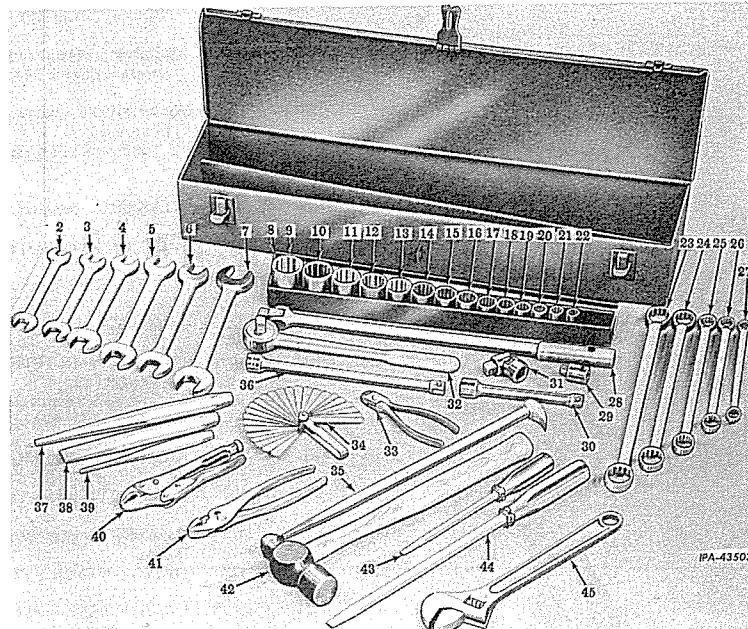

TOOL SET (consists of forty-three tools and tool box) (also see "Tools" listed in Miscellaneous Equipment Section of catalog) (IH Part Number 276 821 R91) (see NOTE)

1	H-391	BOX, tool	25	B-2024	WRENCH, box (5/8 x 3/4")
2	E-1416	WRENCH, end (7/16 x 1/2")	26	B-1820	WRENCH, box (9/16 x 5/8")
3	E-1820	WRENCH, end (9/16 x 5/8")	27	B-1416	WRENCH, box (7/16 x 1/2")
4	E-2022	WRENCH, end (5/8 x 11/16")	28	H-177	HANDLE, flex
5	E-2426	WRENCH, end (3/4 x 13/16")	29	D-1612	ADAPTER (1/2" female, 3/8" male)
6	E-2628	WRENCH, end (13/16 x 7/8")	30	H-172	EXTENSION (6")
7	E-3032	WRENCH, end (15/16 x 1")	31	H-189	JOINT, universal
8	195	TRAY	32	H-163	RATCHET (reversible)
9	140	SOCKET (1-1/4")	33	700-B	CUTTER, diagonal (6")
10	138	SOCKET (1-3/16")	34	861	GAUGE, feeler (25 blades)
11	136	SOCKET (1-1/8")	35	PB-43	BAR, pry (9/16" rd x 16" long)
12	134	SOCKET (1-1/16")	36	H-173	EXTENSION (10")
13	132	SOCKET (1")	37	TP-24	PUNCH (5/16" bit x 10" long)
14	130	SOCKET (15/16")	38	CC-24	CHISEL (7/8" bit x 8" long)
15	128	SOCKET (7/8")	39	PP-6	PUNCH (3/16" bit x 7" long)
16	126	SOCKET (13/16")	40	719	WRENCH, vise grip (7")
17	124	SOCKET (3/4")	41	712-A	PLIER (slip joint, 8")
18	122	SOCKET (11/16")	42	BP-32	HAMMER (ball peen)
19	120	SOCKET (5/8")	43	SS-83	SCREWDRIVER (1/4" shank)
20	118	SOCKET (9/16")	44	SS-123	SCREWDRIVER (3/8" shank)
21	116	SOCKET (1/2")	45	DA-12	WRENCH (12" adjustable)
22	114	SOCKET (7/16")			NOTE - Order Individual Tools And Complete Tool Sets From Service Tools, Inc., 1901 S. Indiana Ave., Chicago, Illinois 60616
23	B-3032	WRENCH, box (15/16 x 1")			
24	B-2628	WRENCH, box (13/16 x 3/4")			

## MISCELLANEOUS

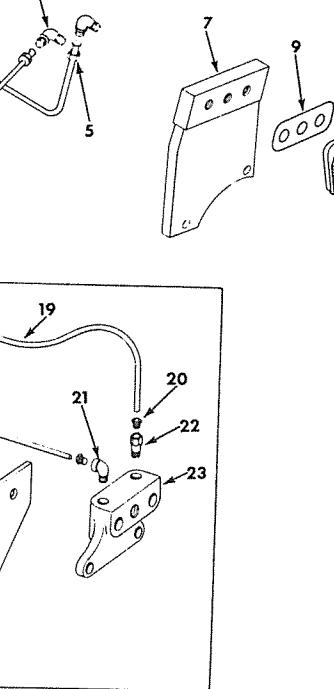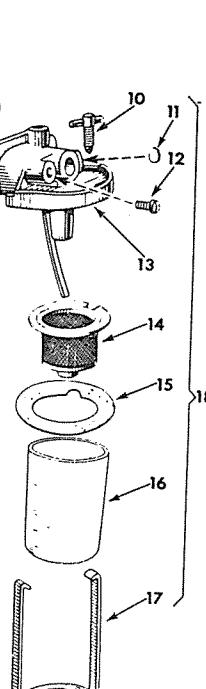REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
<b>WATER TRAP</b>					
					
		<b>IPA-78455D</b>			
Parts without letters after the description indicates the part is used for all Water Traps listed below: Letters "A" and "B" are used to identify separate "Water Traps".					
A		Service parts for water trap mounted on RH side main frame channel.			
B	612 626 C92	ATTACHMENT, water trap (mounted on engine front cover) (see NOTE 3)			
1	603 867 C1	UNION, 3/8" tube flexible (Water Trap B)			
2	265 205 R1	NUT, water trap inlet to fuel supply tube (2 for Water Trap B)			
3	612 628 C11 265 204 R1	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, water trap inlet to fuel supply tube (Water Trap B) SLEEVE, water trap inlet to fuel supply tube (2 for Water Trap B)			
4	616 283 C11 265 204 R1	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, water trap outlet to filter (Water Trap B) SLEEVE, water outlet to filter tube (2 for Water Trap B)			
<b>WATER TRAP - Continued</b>					
5	265 205 R1	NUT, water trap outlet to filter tube (2 for Water Trap B)			
6	606 845 C1	ELBOW, flex, 1/4NPT x 3/8" tube (at water trap) (2 for Water Trap B)			
7	700 283 C1	BRACKET, water trap support (Water Trap B) 3/8" x 1-1/4" hex-hd cap SCREW (2)			
9	51 527 DC	GASKET, water trap			
10	279 173 R1	SCREW, water trap drain			
11	24 805 D	PLUG, 3/8" brs. expansion (type No. 1)			
12	60 871 DA	SCREW, water trap vent			
13	251 380 R91	TOP w/drain PIPE and PLUG, 24 805 D, water trap 1/2" x 3" hex-hd cap SCREW 1/2" lock WASHER			
14	251 348 R91	SCREEN, water trap			
15	260 708 R2	GASKET, water trap bowl			
16	60 877 D	GLASS, water trap			
17	60 878 DX	BAIL, w/thumb SCREW, water trap			
18	251 355 R91	TRAP ASSY, water (Composed of - 1 BAIL 1 GASKET 1 GLASS 1 SCREEN 1 SCREW 1 SCREW 1 TOP			
		60 878 DX 260 708 R2 60 877 D 251 348 R91 60 871 DA 279 173 R1 251 380 R91			
19	341 823 R1	TUBE, front fuel supply to water trap inlet (Water Trap A)			
.20	37 165 D	NUT, fuel tube (2 for Water Trap A)			
21	37 323 D	ELBOW, fuel tube (Water Trap A)			
22	38 026 DM	CONNECTOR, fuel tube (Water Trap A)			
23	9 311 D	BRACKET (Water Trap A) 3/8" NUT (2) 3/8" x 1-1/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2)			
24	341 822 R1	TUBE, water trap to fuel filter (outlet) (together w/ELBOW, 37 323 D will work for 331 773 R1) (Water Trap A)			
25	331 779 R1	BRACKET, water trap mounting (Water Trap A) 1/2" NUT (2) 1/2" x 1-3/8" hex-hd cap SCREW (2) 1/2" lock WASHER (2)			
		37 323 D 606 845 C1 37 165 D 265 205 R1 265 204 R1 55 999 D			
		ELBOW, fuel tube (at filter) (Water Trap A) ELBOW, 1/4NPT x 3/8" tube flexible (at filter) (Water Trap B) NUT, elbow and union (3 for Water Trap A) NUT, 3/8" tube flexible (fuel supply tube) (Water Trap B) SLEEVE, 3/8" tube flexible (fuel supply tube) (Water Trap B) UNION, 3/8 x 9/16" (Water Trap A)			
		NOTE 3 - Field Application - Order Through Regular Service Parts Channels.			

Parts without letters after the description indicates the part is used for all Water Traps listed below: Letters "A" and "B" are used to identify separate "Water Traps".

A		Service parts for water trap mounted on RH side main frame channel.
B	612 626 C92	ATTACHMENT, water trap (mounted on engine front cover) (see NOTE 3)
1	603 867 C1	UNION, 3/8" tube flexible (Water Trap B)
2	265 205 R1	NUT, water trap inlet to fuel supply tube (2 for Water Trap B)
3	612 628 C11 265 204 R1	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, water trap inlet to fuel supply tube (Water Trap B) SLEEVE, water trap inlet to fuel supply tube (2 for Water Trap B)
4	616 283 C11 265 204 R1	TUBE w/two NUT, 265 205 R1 and two SLEEVE, 265 204 R1, water trap outlet to filter (Water Trap B) SLEEVE, water outlet to filter tube (2 for Water Trap B)

**NOTE 3 - Field Application - Order Through Regular Service Parts Channels.**

## MISCELLANEOUS



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
WATER CONDITIONER (Perry)		WATER CONDITIONER - Continued (Perry)			
1	701 022 C91	ATTACHMENT, water conditioner (see NOTE 4)	1	321 840 C91	VALVE, outlet
2	428 541 R91	FILTER, water (for components see list of parts under details of "Water Filter") 102 637 179 890 103 323	2	102 637 179 890 103 323	1/2" NUT (2) 1/2 x 2-1/4" hex-hd cap SCREW (2) 1/2" lock WASHER (2)
3	612 235 C11	BRACKET, water conditioner 179 842	3	612 235 C11 179 842	3/8 x 1-3/8" hex-hd cap SCREW (2)
4	150 955 R1	HOSE, inlet	4	233 384 R91	CLAMP, hose (4)
5	612 239 C1	HOSE, inlet cooler	5	612 239 C1	HOSE, inlet cooler
6		Not Furnished As Part Of Attachment	7		
8	449 373 R1	TEE, hose (5/8" OD)	8	444 138 171 809 R1 615 460 C1 120 322	TEE, pipe ELBOW, hose NIPPLE, hose REDUCER, pipe
9	684 154 R1	HOSE, inlet cooler (upper)	10	684 154 R1	HOSE, inlet cooler (upper)
11	612 240 C1	HOSE, outlet	11	612 240 C1	HOSE, outlet
12	610 789 C91	VALVE, filter inlet	12	610 789 C91	VALVE, filter inlet
13	612 238 C1	BRACE, water conditioner 271 500 179 867 103 322	13	612 238 C1 271 500 179 867 103 322	7/16" NUT 7/16 x 2-1/4" hex-hd cap SCREW 7/16" lock WASHER
14	308 580 R1	CLIP, hose	14	308 580 R1	CLIP, hose
15	526 611 R91	CLAMP, hose (2)	15	526 611 R91	CLAMP, hose (2)

CE-87163

NOTE 4 - Attachment No Longer Available  
Service Parts Will Be Furnished  
As Ordered.





## MISCELLANEOUS




REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

WATER FILTER  
(Part of Attachment 701 022 C91)

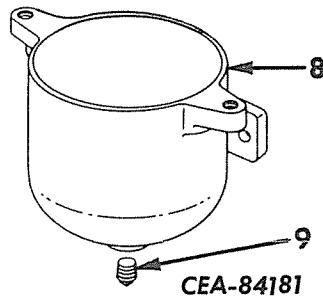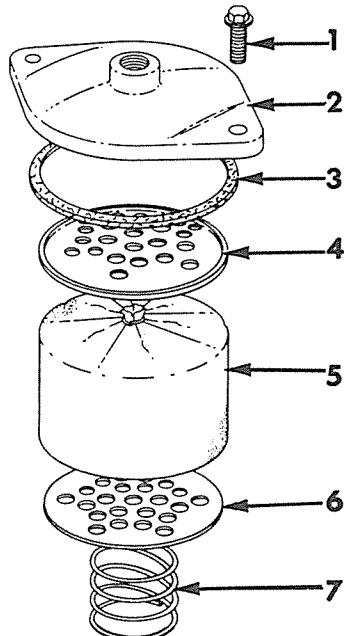

428 541 R91 FILTER ASSY, water  
(Consists of the following parts -

- 1 313 586 R91 BOLT w/lock WASHER (2)
- 2 237 358 R1 COVER, water filter
- 3 237 361 R1 GASKET, water filter cover
- 4 237 363 R1 PLATE, upper
- 5 237 364 R91 CARTRIDGE, water filter
- 6 237 362 R1 PLATE, lower
- 7 237 360 R1 SPRING, cartridge support
- 8 BODY (Not Furnished Separately)
- 9 444 577 PLUG, 1/4" drain

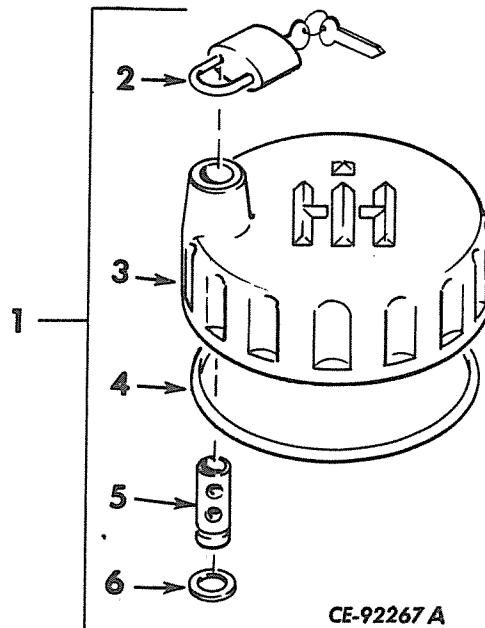

CE-92267 A

701 980 C92 ATTACHMENT, locking cap (Used only with fuel tank CAP, 701 922 C2) (See NOTES 1 and 3)

- 1 628 156 C91 CAP, outer locking
- 2 650 382 C91 PADLOCK w/KEYS
- 3 CAP, outer locking (Not furnished separately)
- 4 309 056 R1 RING, retaining (Optional with RING, 300 027 R1)
- 4 300 027 R1 RING, retaining (Optional with RING, 309 056 R1)
- 5 PIN, locking cap (Not furnished separately)
- 6 23 221 R1 RING, retaining

NOTE 1 - Factory Application - Order On Machine Order Form.


NOTE 3 - Field Application - Order Through Regular Service Parts Channels.

## MISCELLANEOUS



REF.	PART NO.	DESCRIPTION	REF.	PART NO.	DESCRIPTION
<b>ALTITUDE COMPENSATION ATTACHMENT</b> (For Units Equipped With Roosa-Master Fuel Injection Pump)					
331 732 R91		ATTACHMENT, altitude compensation (see NOTE 2)  L-150P 6519 to 15964 Also 15994 to 16217 Except 15996  (Consists of the following parts -  AIR CLEANER and CONNECTIONS (used on power shift loader equipped with altitude compensation attachment (*)) Intake and Exhaust Manifold (used on power shift loader equipped with altitude compensation attachment (*)) Turbocharger and Piping (used on power shift loader equipped with altitude compensation attachment (*)) 1 019 019 R2 INSTALLING INSTRUCTIONS	624 916 C91		ATTACHMENT, altitude compensation (When an air pipe extension is desired air pipe extension attachment 331794R91 must be used) (See NOTE 2)  L150 P 15965 to 15993 and 16218 up also 15996  (Consists of
		L-150P 6519 to 15964 Also 15994 to 16217 Except 15996		A	
				B	
1 ADAPTER	321359R1		1 PLATE	315 973 R2	PLATE, filter bracket 3/8" NUT (2) 3/8 x 7/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2) 13/32 x 13/16" x 16 ga. WASHER (2)
4 BOLT	304426R1		2 BRACKET	332 112 R21	BRACKET, fuel filter support 3/8 x 1-1/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2)
1 BRACKET	316053 R1		2 CLAMP	332 603 R1	BRACKET, fuel hose clamp
2 CLAMP	274089R1		4 DRAWING	338 822 R1	CLAMP, filter outlet hose No. 8 x 1/2" slt-rd-hd tapping SCREW
2 CLAMP	276223R91		1 ELBOW	271 140 R91	HOSE, filter outlet
1 CLAMP	318380R1		1 FLANGE	121 619	ELBOW, pump inlet (1/4" x 45° street)
2 CLAMP	122316R91		2 GASKET	277 031 R91	HOSE, filter inlet (Service Part A)
2 CLAMP	279038R91		2 GASKET	277 544 R1	CLAMP, inlet hose (Service Part A)
1 CONNECTOR	610858C1		1 GASKET	118 750	CONNECTOR, filter inlet (3/8") (Service Part A)
1 DRAWING	12G6745		1 GASKET	277 025 R93	FILTER, watchdog fuel
2 ELBOW	120063		1 HOSE	119 247	BRACKET, fuel filter 5/16" NUT (4) 5/16 x 3/4" hex-hd cap SCREW (4) 5/16" lock WASHER (4) 11/32 x 11/16" x 16 ga. WASHER (4)
1 ELBOW	316052R2		1 HOSE	118 755	ELBOW, filter outlet (3/8" x 90°)
1 FLANGE	318379R1		1 HOSE	121 323	NIPPLE, filter inlet (1/4 x 4" long) (Service Part B)
2 GASKET	278313R1		1 PIPE	275 946 R91	CONNECTOR, final filter hose to nipple (Service Part B)
2 GASKET	278314R1		1 PIPE		HOSE w/FITTINGS, final fuel filter to watchdog fuel filter inlet nipple connector (HOSE, 5/16" ID x 14-1/2" long w/ FITTINGS)
1 GASKET	304854R1		1 PLATE		
1 GASKET	304391R2		1 PLUG		
1 GASKET	253660R1		1 RETAINER		
1 GASKET	253664R2		1 RETAINER		
1 GASKET	369497R2		1 SLEEVE		
1 HOSE	407015R1		1 SPRING		
1 HOSE	606696C91		1 TUBE		
1 HOSE	312109R1		1 TUBE		
4 LOCK	50408D		1 TURBO-		
1 MANIFOLD	306656R1		CHARGER		
2 NIPPLE	171823R1				
1 PIPE	331703R1				
1 PIPE	330737R11				
1 PIPE	306660R11				
1 PLATE	312552R1				
1 PLUG	444576				
1 RETAINER	320537R1				
1 RETAINER	716050R1				
1 SLEEVE	316051R1				
1 SPRING	318987R1				
1 TUBE	611429C11				
1 TUBE	308361R11				
1 TURBO-					
CHARGER	324032R91)				

(\* ) - Details Of Parts Are Listed In The Standard Parts Section Of This Catalog.  
NOTE 2 - Field Application - Order On Machine Order Form.

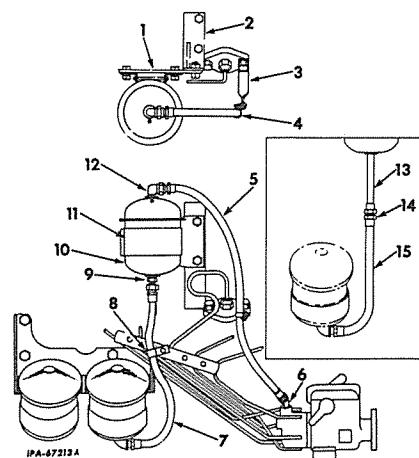

Parts without letters after the description indicate the part is used for all Service Parts listed below: Letters A and B are used to identify separate Service Parts.

Service parts for watchdog fuel filter  
L-150GM 5698 to 6673  
L-150PM 5698 to 6674

Service parts for watchdog fuel filter  
L-150GM 10995 up  
L-150PM 10995 up

PLATE, filter bracket  
3/8" NUT (2)  
3/8 x 7/8" hex-hd cap SCREW (2)  
3/8" lock WASHER (2)  
13/32 x 13/16" x 16 ga. WASHER (2)

BRACKET, fuel filter support  
3/8 x 1-1/8" hex-hd cap SCREW (2)  
3/8" lock WASHER (2)

BRACKET, fuel hose clamp

CLAMP, filter outlet hose  
No. 8 x 1/2" slt-rd-hd tapping SCREW

HOSE, filter outlet

ELBOW, pump inlet (1/4" x 45° street)

HOSE, filter inlet (Service Part A)

CLAMP, inlet hose (Service Part A)

CONNECTOR, filter inlet (3/8")  
(Service Part A)

FILTER, watchdog fuel

BRACKET, fuel filter  
5/16" NUT (4)  
5/16 x 3/4" hex-hd cap SCREW (4)  
5/16" lock WASHER (4)  
11/32 x 11/16" x 16 ga. WASHER (4)

ELBOW, filter outlet (3/8" x 90°)

NIPPLE, filter inlet (1/4 x 4" long)  
(Service Part B)

CONNECTOR, final filter hose to nipple  
(Service Part B)



HOSE w/FITTINGS, final fuel filter to watchdog fuel filter inlet nipple connector  
(HOSE, 5/16" ID x 14-1/2" long w/  
FITTINGS)

## MISCELLANEOUS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
----------	-------------	-------------	----------	-------------	-------------

**WATCHDOG FUEL FILTER**

(For Units With International R. D. Fuel Injection Pump)  
L-150GM 5698 to 7765, L-150PM 5698 to 7765

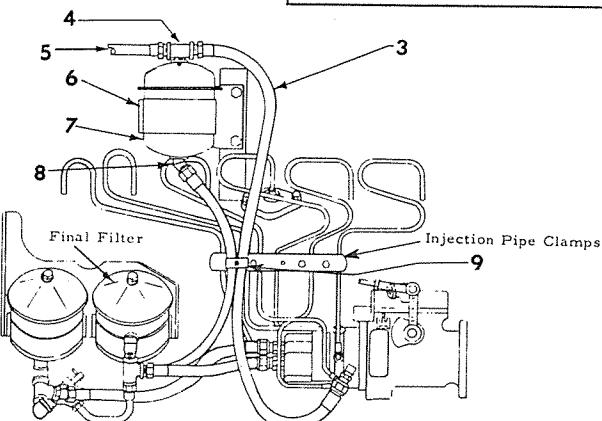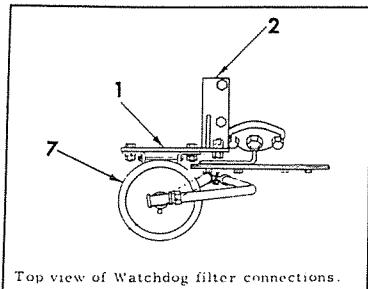

IPA-78463

**WATCHDOG FUEL FILTER - Continued**

(For Units With International R. D. Fuel Injection Pump)  
L-150GM 5698 to 7765, L-150PM 5698 to 7765

5	606 243 C91	HOSE w/FITTINGS, gauge to watchdog filter tee (HOSE, 1/4" ID x 13-1/2" long w/FITTINGS) (Service Parts B)
6	304 104 R91	BRACKET, fuel filter 5/16" NUT (4) 5/16 x 3/4" hex-hd cap SCREW (4) 5/16" lock WASHER (4)
7	343 893 R91	FILTER, watchdog fuel
8	9 402 800	ELBOW, filter inlet (3/8" x 45°)
9	328 681 R1 262 038 R1	CLAMP, double hose (2) NUT, speed 1/4 x 3/4" slt-mach SCREW 9/32 x 5/8" WASHER
	444 584	PLUG, 3/8" sq-hd pipe
	9 402 745	CONNECTOR, hose to gauge (1/4" OD tube) (Service Parts B)

Parts without letters after the description indicate the part is used for all Service Parts listed below: Letters A and B are used to identify separate Service Parts.

A Service parts for watchdog fuel filter (for manual shift loaders) (\*)  
L-150GM 5698 to 7765


B Service parts for watchdog fuel filter (for power shift loaders) (\*)  
L-150PM 5698 to 7765

1	315 973 R2	PLATE, watchdog filter bracket 3/8" NUT (2) 3/8 x 7/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2)
2	332 112 R21	BRACKET, fuel filter support 3/8 x 1-1/8" hex-hd cap SCREW (2) 3/8" lock WASHER (2) 13/32 x 13/16" x 16 ga. WASHER (2)
3	346 734 R91	HOSE w/FITTINGS, watchdog filter to injection pump (HOSE, 3/8" ID x 40" long w/FITTINGS)
4	444 136	TEE, watchdog filter outlet (3/8")
5	606 850 C91	HOSE w/FITTINGS, gauge to watchdog filter tee (HOSE, 1/4" ID x 22" long including FITTINGS) (Service Parts A)


(\*) - For Use With International R. D. Fuel Injection Pump.

## MISCELLANEOUS

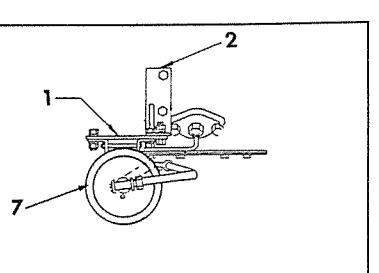

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
		<b>WATCHDOG FUEL FILTER</b> (For Units With International R. D. Fuel Injection Pump) L-150GM 7766 to 10994, L-150PM 7766 to 10994			<b>WATCHDOG FUEL FILTER – Continued</b> (For Units With International R. D. Fuel Injection Pump) L-150GM 7766 to 10994, L-150PM 7766 to 10994
					
		<b>Top View of Watchdog Filter connections</b>	5	606 850 C91	HOSE w/FITTINGS, gauge to watchdog filter tee (HOSE, 1/4" ID x 22" long including FITTINGS) (Service Parts A)
			5	606 243 C91	HOSE w/FITTINGS, gauge to watchdog filter tee (HOSE, 1/4" ID x 13-1/2" long w/FITTINGS) (Service Parts B)
			6	304 104 R91	BRACKET, fuel filter 5/16" NUT (4) 5/16 x 3/4" hex-hd cap SCREW (4) 5/16" lock WASHER (4) 11/32 x 11/16" x 16 ga. WASHER (4)
			7	277 025 R93	FILTER, watchdog fuel
			8	192 052	NIPPLE, watchdog filter inlet (1/4 x 1-1/2")
			9	328 681 R1 262 038 R1	CLAMP, double hose (2) NUT, speed 1/4 x 3/4" slt-mach SCREW 9/32 x 5/8" WASHER
			10	9 402 747 444 024	CONNECTOR, watchdog filter inlet REDUCER (1/4 to 1/8")
				9 402 745	CONNECTOR, hose to gauge (1/4" OD tube) (Service Parts B)

## COUNTERWEIGHT

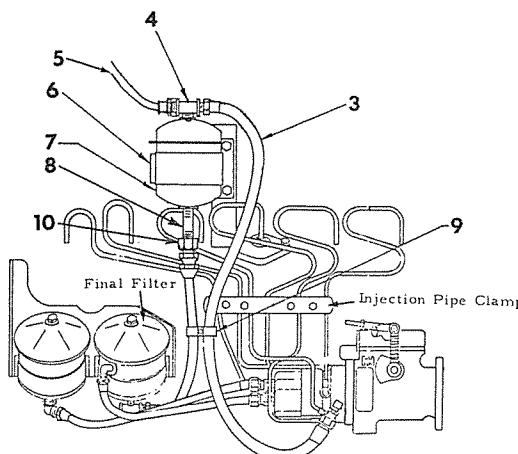


IPA-78462A

Parts without letters after the description indicate the part is used for all Service Parts listed below: Letters A and B are used to identify separate Service Parts.

- A Service parts for watchdog fuel filter (for manual shift loaders) (\*)  
L-150GM 7766 to 10994

B Service parts for watchdog fuel filter (for power shift loaders) (\*)  
L-150PM 7766 to 10994

- |   |             |   |
|---|-------------|---|
| 1 | 315 973 R2  | PLATE, watchdog filter bracket<br>3/8" NUT (2)<br>3/8 x 7/8" hex-hd cap SCREW (2)<br>3/8" lock WASHER (2)                       |
| 2 | 332 112 R21 | BRACKET, fuel filter support<br>3/8 x 1-1/8" hex-hd cap SCREW (2)<br>3/8" lock WASHER (2)<br>13/32 x 13/16" x 16 ga. WASHER (2) |
| 3 | 347 837 R91 | HOSE w/FITTINGS, watchdog filter to<br>injection pump (HOSE, 3/8" ID x 40" long<br>w/FITTINGS)                                  |
| 4 | 444 134     | TEE, watchdog filter outlet (1/4")  |

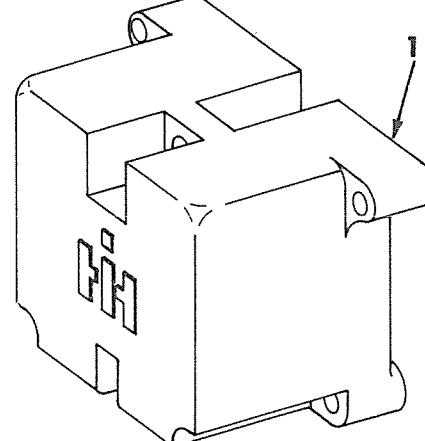

IPA-82097

- 1 602 001 C1 COUNTERWEIGHT (not compatible with scarifier, towing winch, or other rear mounted equipment) (mounting hardware for counterweight is furnished by Drott)

(\*) - For Use With International R. D. Fuel  
Injection Pump.



## MISCELLANEOUS



REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
PRODUCT GRAPHICS					
		The following identification and instructional Product Graphics are available.		604 920 C91	PACKAGE, instruction product graphics field service (for Loaders painted I. H. yellow) (Consists of the following -
311 263 R1	PRODUCT GRAPHIC, IH emblem (#) L-150G 6519 to 13076 L-150P 6501 to 13029			§1	PRODUCT GRAPHIC, air cleaner (instructions)
345 610 R91	PRODUCT GRAPHIC, IH emblem (for loaders painted yellow) L-150G 6519 to 13076 L-150P 6501 to 13029			§1	PRODUCT GRAPHIC, engine running with tractor stopped
2 752 311 R1	PRODUCT GRAPHIC, International (#)			§1	PRODUCT GRAPHIC, engine starting procedure
2 750 387 R1	PRODUCT GRAPHIC, primary fuel filter instruction			§1	PRODUCT GRAPHIC, engine start warning
2 750 390 R1	PRODUCT GRAPHIC, final fuel filter instruction			§1	PRODUCT GRAPHIC, fuel filter (instructions)
2 751 309 R2	PRODUCT GRAPHIC, model symbol (#) (*) (†) (2)			§1	PRODUCT GRAPHIC, fuel priming procedure (for units equipped with International R. D. fuel injection pump w/internal priming valve)
2 751 389 R1	PRODUCT GRAPHIC, fuel pump warning (for units equipped with International R. D. fuel injection pump w/externally mounted priming valve)			§1	PRODUCT GRAPHIC, fuel pump priming
2 751 392 R1	PRODUCT GRAPHIC, fuel pump priming (for units equipped with International R. D. fuel injection pump w/externally mounted priming valve)			§1	PRODUCT GRAPHIC, fuel pump warning
				§1	PRODUCT GRAPHIC, fuel tank drain
				§1	PRODUCT GRAPHIC, generator warning
				§1	PRODUCT GRAPHIC, lubricating oil filter instructions
				§1	PRODUCT GRAPHIC, master switch warning
				§1	PRODUCT GRAPHIC, oil pressure warning
				§1	PRODUCT GRAPHIC, on-off master switch
				§2	PRODUCT GRAPHIC, rear power take-off shaft rotation
				§3	PRODUCT GRAPHIC, shifting diagram
				§1	PRODUCT GRAPHIC, shifter plate hand lever gate
				§2	PRODUCT GRAPHIC, suction and safety filter
				§1	PRODUCT GRAPHIC, travel direction change )
			603 288 C93	PACKAGE, product identification product graphic field service (for Loaders painted I. H. yellow) (Consists of the following -	
				§2	PRODUCT GRAPHIC, agricultural
				§1	PRODUCT GRAPHIC, "IHC of Canada"
				§3	PRODUCT GRAPHIC, "IH" monogram
				§3	PRODUCT GRAPHIC, "International"
				§2	PRODUCT GRAPHIC, "TD-9 Power Shift" model symbol
				§2	PRODUCT GRAPHIC, "TD-9 Dozer" model symbol
				§2	PRODUCT GRAPHICS, "SERIES B" model symbol
				§2	PRODUCT GRAPHICS, "150" model symbol )

§ - Not Furnished Separately  
 (#) - Used On Loaders Painted Other Than Yellow.  
 (†) - Used On Power Shift Loader.  
 (\*) - Used On Manual Shift Loader.


## MISCELLANEOUS

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION		
PACKAGE ASSORTED GASKETS					PACKAGE ASSORTED GASKETS - Continued		
332 652 R91		GASKET SET, crankcase (Consists of the following gaskets -	604 739 C91		PACKAGE, transmission gasket field service (for use on Power Shift Loaders) (Consists of the following -		
310 665 R1		BOOT, seal (2)	327 922 R1		GASKET, pump mounting housing cover		
69 674 R1		GASKET, water pump plate	327 923 R1		GASKET, pump mounting housing		
69 676 R1		GASKET, water pump	327 925 R1		GASKET, transmission countershaft front bearing retainer		
349 038 R1		GASKET, oil cooler manifold	327 928 R1		GASKET, pump drive housing cover		
251 403 R1		GASKET, relief valve plug	327 945 R1		GASKET, converter supply pump		
369 982 R1		GASKET, push rod cover	331 461 R1		GASKET, transmission front cover		
369 981 R1		GASKET, breather pipe flange	355 967 R1		GASKET, pump drive housing		
278 265 R1		GASKET, crankcase front plate	604 365 C2		GASKET, gear shift housing		
278 268 R1		GASKET, crankcase front cover	264 681 R1		"O" RING, pump drive housing cover		
278 270 R2		GASKET, injection pump gear cover	252 739 R1		RING, pump drive housing support sealing (4)		
369 984 R1		GASKET, crankcase oil pan	259 246 R1		RING, converter stator support quill - sealing		
3 405 H		GASKET, oil pan drain plug	708 560 R1		RING, pump inlet and outlet pipe (2)		
353 936 R2		GASKET, oil pan shaft support	610 411 C1		RING, pump drive housing support sealing		
278 347 R1		GASKET, injection pump adapter	324 223 R2		RING, accelerating piston (2)		
51 527 DC		GASKET, water trap	324 224 R2		RING, piston and piston housing sealing (2)		
69 607 R1		GASKET, oil pump body	324 226 R1		RING, clutch piston sealing		
304 279 R1		GASKET, lubricating oil filter base	324 227 R1		RING, piston housing sealing		
3 405 H		GASKET, lubricating oil pressure relief valve plug	325 059 R1		RING, input shaft sealing (4)		
304 854 R1		GASKET, oil filter case	327 420 R1		RING, pump drive gear sealing		
304 012 R1		GASKET, center tube	343 700 R1		RING, pump cover to housing sealing		
304 720 R1		"O" RING, pilot tube	355 967 R1		RING, pump drive housing support sealing (2)		
350 684 R1		"O" RING, oil cooler to manifold (2)	461 173 R1		RING, transmission filler pipe sealing		
310 446 R95		GASKET SET, valve grinding (Consists of the following gaskets -	468 339 R1		RING, converter stator support quill sealing		
278 280 R1		GASKET, thermostat housing	604 740 C91		PACKAGE, torque converter gasket field service (for use on Power Shift Loaders) (consists of GASKET, 158 512 R1, RING, 158 503 R1 and RING, 341 808 R1)		
278 308 R1		GASKET, valve cover	PLATES				
278 313 R2		GASKET, exhaust manifold - ends (2)	271 668 R1		PLATE, number		
278 314 R1		GASKET, exhaust manifold - center (2)	350 513		RIVET, 7/64 x 3/8" (4)		
601 509 C1		GASKET, cylinder head	312 552 R1		PLATE, turbocharger warning (mount on dash)		
305 804 R1		GASKET, intake manifold			5/32 x 3/8" RIVET (4)		
446 210		WASHER, valve cover (4)					

## MISCELLANEOUS

SCARIFIER  
(DROTT) (See NOTE)


SCARIFIER - Continued  
(DROTT) (See NOTE)

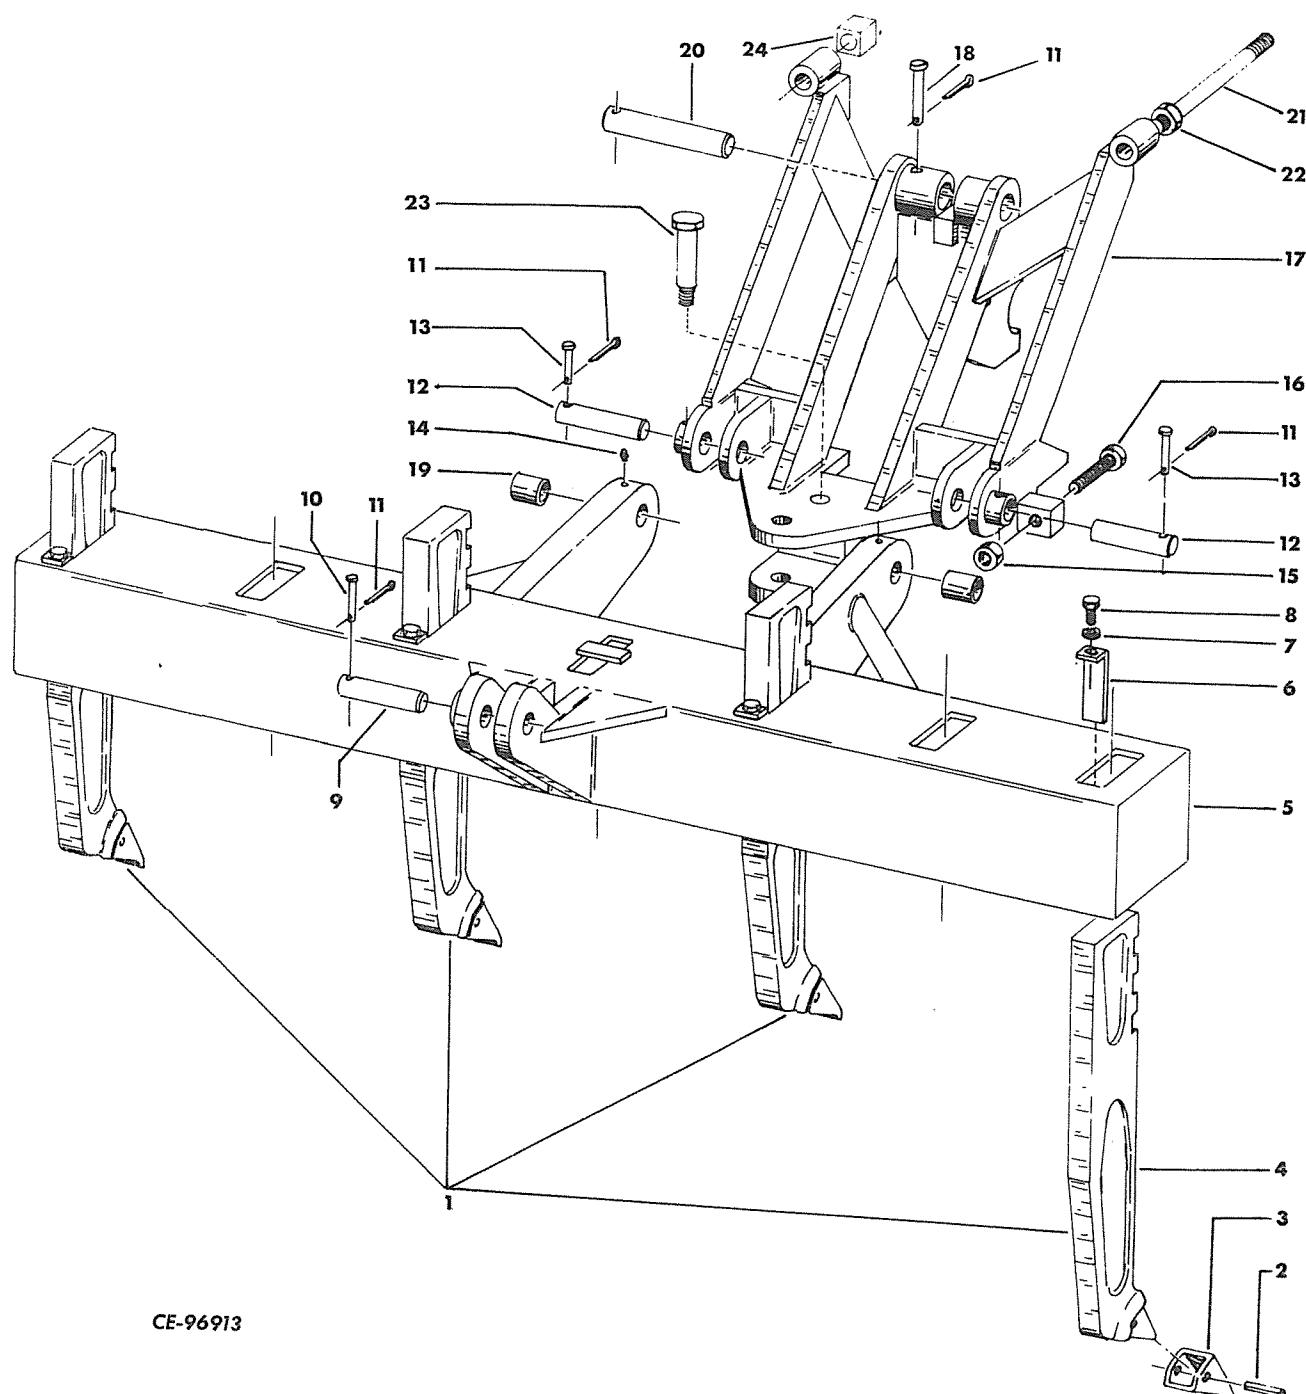

CE-96913

## MISCELLANEOUS

REF. NO.	DROTT NUMBER	DESCRIPTION	REF. NO.	DROTT NUMBER	DESCRIPTION
SCARIFIER - Continued (DROTT) (See NOTE)					SCARIFIER HYDRAULICS (DROTT) (See NOTE)
1	25 384 M1	TOOTH, scarifier (Includes Items 2 - 4) (4)			
2	7 889	PIN, roll - 1/2 x 2-1/2" (4)			
3	25 286	TIP, replaceable cast (4)			
4	40 607 M1	SHANK, tooth (4)			
5	30 393	FRAME, scarifier			
6	40 608	LOCK, tooth (4)			
7	4 399	WASHER, lock - 1/2" (4)			
8	2 101	CAPSCREW, 1/2 x 1-1/4" NF (4)			
9	40 239	PIN			
10	10 816	PIN, clevis, 1/2 x 3-1/2"			
11	4 641	PIN, cotter, 5/32 x 1" (4)			
12	40 240	PIN (2)			
13	10 815	PIN, clevis, 1/2 x 3" (2)			
14	12 031	FITTING, lubrication (2)			
15	4 250	NUT, jam - 1" (2)			
16	41 088	BOLT, adjusting (2)			
17	30 394	FRAME, scarifier mounting			
18	10 816	PIN, clevis - 1/2 x 3-1/2"			
19	41 527	BUSHING (2)			
20	40 239	PIN, cylinder base			
21	23 415 M2	STUD, thru (2)			
22	9 021	NUT, self locking - 1" NF (4)			
23	40 317 9 023 - 2 220	BOLT, hitch NUT, self locking, 1-1/4" NF CAPSCREW, 7/8 x 4" NF - hitch to draw bar (2) 9 020 NUT, self locking - 7/8" NF (2)			
24	45 045	BLOCK, spacer (2)	1	6 069	"O" RING
			2	25 582	ADAPTER (Includes Item 1) (2)
			3	200 559	TUBE, formed - outside (Not used with diverter)
			4	200 558	TUBE, formed - inside (Not used with diverter)
			5	8 578	HOSE, high pressure - 1/2 x 26" (2)
			6	7 710	ADAPTER, 1/2" pipe x 5/8" tube
			7	43 892	CLAMP, tube
			8	2 403 4 397 4 222	CAPSCREW, 3/8 x 1-1/2" LOCKWASHER - 3/8" NUT, 3/8"

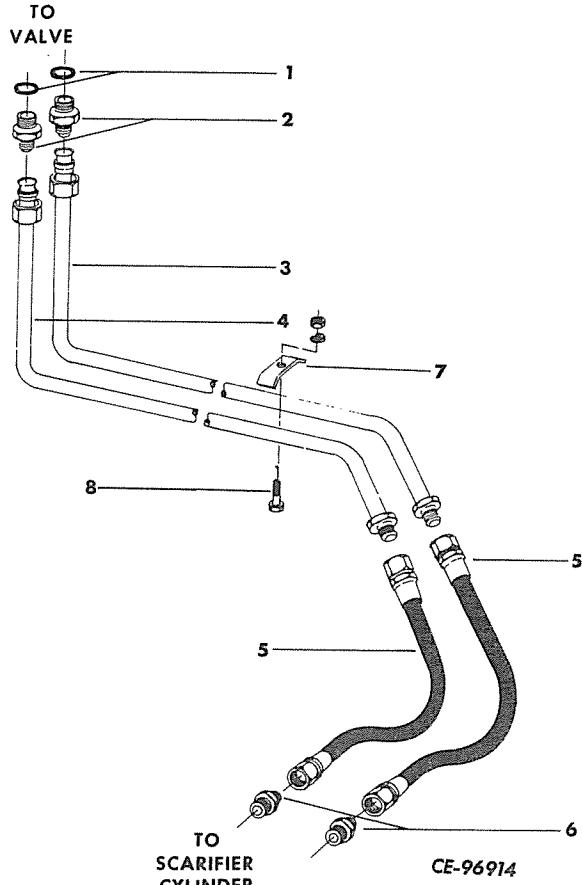

NOTE: DOMESTIC USE - Order Drott  
Parts From Drott Manufacturing  
Corp., Wausau, Wisconsin  
through Your I. H. Construction  
Equipment Distributor.

OVERSEAS AFFILIATES AND  
DISTRIBUTORS - Order  
Through Your Parts Depot.

NOTE: DOMESTIC USE - Order Drott  
Parts From Drott Manufacturing  
Corp., Wausau, Wisconsin  
through Your I. H. Construction  
Equipment Distributor.


OVERSEAS AFFILIATES AND  
DISTRIBUTORS - Order  
Through Your Parts Depot.

## MISCELLANEOUS

REF. NO.	DROTT NUMBER	DESCRIPTION	REF. NO.	DROTT NUMBER	DESCRIPTION
----------	--------------	-------------	----------	--------------	-------------

SCARIFIER CYLINDER  
(DROTT) (See NOTE)

SCARIFIER CYLINDER  
(DROTT) (See NOTE)

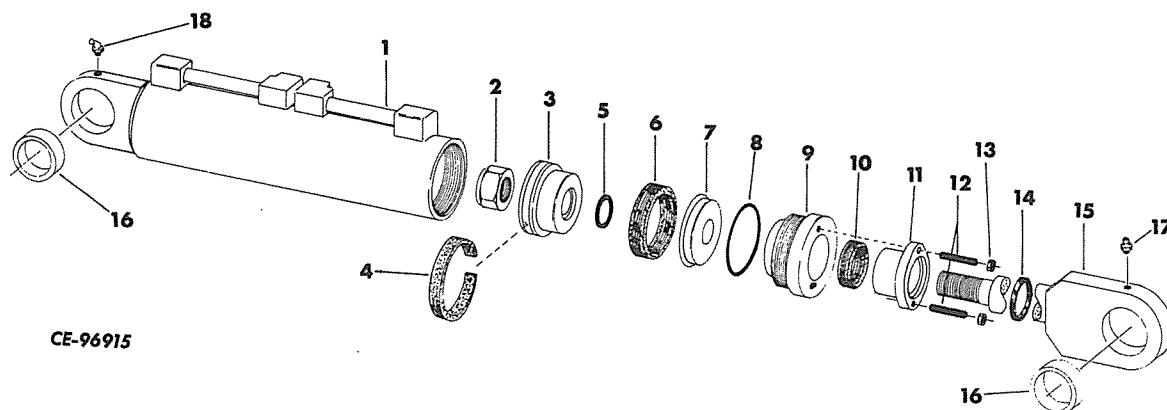

30 332 M1	CYLINDER, scarifier hydraulic (Consists of the following parts -
1 24 025	TUBE, cylinder
2 9 023	NUT, self locking - 1-1/4"
3 28 225	PISTON with "O" ring seat
4 23 703	RING, wear
5 5 811	"O" RING, piston
6 25 984	PACKING, "V" ring
7 28 259	PISTON
8 6 332	"O" RING
9 28 221 M1	HEAD, cylinder
10 28 120	PACKING, "V" ring
11 28 562	FLANGE, packing
12 40 005	STUD, 3/8 x 1-7/8" NF (2)
13 9 014	NUT, self locking - 3/8" (2)

14 40 025	RING, wiper
15 23 907 M1	ROD, piston
16 20 045	BUSHING, 2-1/2 x 2 x 1" (2)
17 12 031	FITTING, lubrication
18 12 033	FITTING, lubrication - 65° )

NOTE: DOMESTIC USE - Order Drott  
Parts From Drott Manufacturing Corp., Wausau, Wisconsin  
Through Your I. H. Construction Equipment Distributor.

OVERSEAS AFFILIATES AND DISTRIBUTORS - Order  
Through Your Parts Depot.



## NUMERICAL INDEX



PART NUMBER	PAGE NUMBER						
No.		809 961	56	1 914 750	55	1 945 276	55
114	145	810 819	64	1 914 750	56	1 945 276	56
116	145	815 540	56A	1 914 800	54A	1 945 617	62
118	145	821 453	63	1 914 816	55	1 945 620	63
120	145	833 602	63	1 914 816	56	1 945 626	62
122	145	900 529	55	1 915 172	55	1 945 630	64
124	145	900 529	56	1 915 172	56A	1 945 732	54
126	145	904 751	56A	1 915 334	64	1 946 383	63
128	145	940 943	33	1 916 529	63	1 946 386	62
130	145	1 100 812	56A	1 917 123	56	1 946 391	62
132	145	1 105 121	55	1 918 004	55	1 946 394	63
134	145	1 105 134	56	1 918 004	56	1 946 395	63
136	145	1 113 626	62	1 922 599	54A	1 946 555	62
138	145	1 119 247	54	1 922 996	54A	1 948 694	63
140	145	1 119 257	54	1 923 517	54	1 948 999	62
195	145	1 119 507	54B	1 923 935	63	1 949 142	54
719	144	1 119 513	54B	1 923 935	64	1 950 061	63
861	145	1 119 682	54A	1 924 764	54	1 950 064	64
2 101	153	1 119 833	63	1 924 764	54A	1 950 069	63
2 220	153	1 119 890	63	1 926 617	63	1 950 071	64
2 403	153	1 837 533	63	1 926 618	63	1 950 267	54A
719	145	1 843 646	63	1 927 344	63	1 950 268	54A
2 422	153	1 853 342	63	1 927 345	63	1 950 269	54A
4 250	153	1 855 978	54A	1 928 021	63	1 950 270	54A
4 397	153	1 856 993	55	1 928 022	63	1 950 276	54A
4 399	153	1 856 993	56	1 929 959	55	1 950 357	55
4 641	153	1 857 268	63	1 929 959	56	1 950 546	63
4 641	153	1 857 412	55	1 930 629	63	1 952 122	63
5 035	121	1 857 412	56	1 930 694	63	1 952 563	63
5 811	153	1 858 751	55	1 931 783	63	1 955 494	56A
6 069	153	1 858 751	56	1 931 813	63	1 956 427	63
6 332	153	1 858 751	56	1 931 814	63	1 956 428	63
7 710	153	1 864 099	58	1 931 818	63	1 956 975	56A
7 889	153	1 872 678	64	1 931 886	54	1 957 462	54A
8 578	153	1 874 495	54	1 931 887	54	1 957 501	56A
9 014	154	1 878 183	55	1 931 887	54A	1 957 650	63
9 020	153	1 878 183	56	1 932 354	64	1 958 137	54B
9 021	153	1 878 502	54A	1 932 354	55	1 958 148	54B
9 023	153	1 878 502	54	1 932 506	56	1 958 151	54B
9 023	154	1 878 503	54	1 932 506	56	1 959 381	56A
10 815	153	1 878 503	54	1 933 239	54	1 959 389	56A
10 816	153	1 878 505	54A	1 933 941	54	1 959 455	56A
12 031	153	1 878 505	54A	1 933 941	54A	1 959 523	56A
12 031	154	1 878 507	54A	1 933 999	64	1 959 532	56A
12 033	154	1 878 516	54A	1 934 478	63	1 959 790	56A
20 045	153	1 878 516	54	1 934 553	56	1 959 828	56A
23 703	153	1 878 517	55	1 935 923	55	1 959 832	56A
24 025	153	1 879 530	56	1 936 330	55	1 959 833	56A
25 286	154	1 879 530	54	1 936 333	55	1 959 834	56A
25 522	154	1 879 663	54A	1 936 465	64	1 959 948	54A
25 582	153	1 881 409	55	1 937 227	56	1 959 991	54B
25 984	154	1 881 409	56	1 937 381	63	1 960 347	54B
28 120	154	1 882 012	58	1 938 058	63	1 960 750	56A
28 225	153	1 882 013	58	1 938 207	56	1 962 276	55
28 259	153	1 883 865	63	1 938 209	56	1 962 276	56
28 562	154	1 885 090	55	1 938 376	63	1 962 629	54B
30 393	153	1 885 090	56	1 938 646	54	1 963 139	56A
30 394	153	1 886 953	58	1 939 658	54A	1 964 117	56A
34 816	55	1 890 274	55	1 939 659	54A	1 964 353	56A
37 535	64	1 902 746	56	1 939 661	54A	1 964 354	56A
40 005	154	1 904 419	63	1 941 157	62	1 964 682	56A
40 025	154	1 904 436	64	1 941 431	54B	1 965 104	56A
40 239	153	1 904 443	64	1 941 432	54A	1 966 614	56A
40 240	153	1 905 406	56	1 941 978	56A	1 970 595	56A
40 317	153	1 906 987	63	1 942 241	62	1 970 918	56A
40 608	153	1 909 654	64	1 942 245	63	1 994 050	58
41 088	153	1 910 174	54	1 942 250	63	1 996 495	58
41 527	153	1 910 966	54A	1 942 253	63	1 996 496	58
43 892	153	1 911 028	54	1 942 255	63	7 451 763	56A
45 045	153	1 911 034	54	1 942 282	63	9 402 681	134
88 398	69	1 911 263	55	1 942 256	63	9 402 745	132
94 943	31	1 912 008	56A	1 942 257	63	9 402 745	135
805 258	63	1 912 059	63	1 942 259	63	9 402 745	136
805 790	63	1 913 534	64	1 943 628	64	9 402 745	148
809 062	55	1 913 689	56	1 943 854	54A	9 402 745	149
809 062	56	1 913 960	63	1 944 590	54	9 402 746	133
809 593	63	1 914 579	55	1 944 590	54A	9 402 746	137
809 763	55	1 914 579	56	1 945 119	56	9 409 323	149
809 763	56	1 914 580	55	1 945 275	55	9 409 325	94
809 945	55	1 914 580	56	1 945 275	56	9 409 330	94



## NUMERICAL INDEX



PART NUMBER	PAGE NUMBER						
9 409 343	94	603 492 C91	119	606 696 C91	53	610 760 C1	90A
9 409 521	92	603 493 C91	119	606 819 C1	29	610 769 C1	90A
9 409 521	93	603 546 C91	93	606 819 C1	29B	610 789 C91	146A
9 409 523	94	603 548 C91	94	606 827 C91	27	610 794 C91	93
9 409 528	94	603 564 C91	93	606 845 C1	146	610 794 C91	94
9 409 927	46	603 565 C91	93	606 847 C91	39	610 809 C91	90A
9 409 949	117	603 566 C91	93	606 850 C91	148	610 825 C91	90A
9 410 202	33	603 652 C1	138	606 850 C91	149	610 826 C91	90A
9 410 386	132	603 654 C1	138	606 885 C1	135	610 827 C91	90
9 410 425	132	603 656 C1	138	606 885 C1	136	610 828 C91	90A
9 410 451	132	603 658 C1	138	606 889 C1	83	610 829 C1	90A
9 410 610	132	603 660 C1	138	606 925 C1	23B	610 858 C1	24
9 410 976	33	603 803 C1	74	606 925 C1	24	610 858 C1	25A
9 411 375	63	603 804 C1	74	606 925 C1	25A	610 877 C91	90B
9 413 326	63	603 823 C1	24	606 925 C1	25B	610 932 C91	37
9 415 234	63	603 824 C1	23A	606 925 C1	27	610 950 C91	39
9 415 665	50	603 824 C1	25A	606 926 C1	23B	610 951 C91	39
9 418 115	54B	603 824 C1	25B	606 926 C1	24	610 952 C1	39
9 418 881	56	603 867 C1	29	606 926 C1	25A	610 953 C1	39
9 419 392	56A	603 867 C1	29B	606 926 C1	25B	610 954 C91	39
9 421 424	55	603 867 C1	146	606 926 C1	27	610 955 C1	39
9 421 424	56	603 941 C91	36	606 928 C91	29	611 144 C1	142
9 421 425	58	603 945 C1	37	606 928 C91	29B	611 419 C92	29
9 421 425	63	604 021 C1	123	606 930 C1	29	611 419 C92	29B
9 422 354	58	604 071 C1	135	606 930 C1	31	611 423 C11	29
<b>A</b>							
712 A	144	604 072 C2	134	606 930 C1	33	611 423 C11	29B
712 A	145	604 072 C2	136	606 999 C1	23B	611 424 C1	29
		604 073 C1	135	606 999 C1	24	611 424 C1	29B
		604 073 C1	136	606 999 C1	25A	611 425 C11	29
		604 187 C91	109	606 999 C1	25B	611 426 C11	29
		604 357 C11	77	607 467 C91	45	611 426 C11	29B
		604 358 C2	76	607 532 C91	77	611 427 C11	23B
		604 359 C1	76	607 533 C91	82	611 429 C11	24
		604 360 C1	76	607 534 C91	83	611 429 C11	25A
		604 361 C11	77	609 028 C11	17	611 430 C11	135
		604 362 C11	80	609 073 C91	9	611 431 C11	135
		604 363 C1	80	609 075 C91	9	611 431 C11	136
		604 364 C1	83	609 121 C91	34	611 432 C11	83
		604 365 C2	83	609 124 C91	34	611 433 C11	29B
		604 365 C2	97	609 343 C91	17	611 434 C11	29A
		604 365 C2	151	609 344 C91	17	612 000 C11	17
		604 366 C11	106	609 346 C91	17	612 001 C11	17
		604 375 C1	69B	609 681 C92	114	612 008 C91	17
		604 399 C1	38	609 826 C11	121	612 017 C91	12
		604 557 C1	28	609 828 C11	121	612 084 C1	31
		604 557 C1	29A	609 833 C92	27	612 092 C91	13
		604 558 C1	29	609 834 C92	27	612 092 C91	47
		604 558 C1	29B	609 930 C1	31	612 107 C1	11
		604 559 C1	29	609 958 C11	129	612 151 C11	16
		604 559 C1	29B	609 967 C1	85	612 235 C11	146A
		604 644 C91	73	609 967 C1	104	612 238 C1	146A
		604 677 C1	21	609 968 C1	85	612 239 C1	146A
		604 678 C91	21	609 968 C1	104	612 240 C1	146A
		604 737 C1	102	609 969 C91	84	612 312 C1	11
		604 739 C91	151	609 969 C91	104	612 558 C1	41
		604 740 C91	151	610 008 C1	90	612 559 C91	57
		255 678 C1	94	604 844 C1	75	612 590 C91	43
		265 164 C91	45	604 845 C1	87	612 591 C91	43
		284 874 C1	23B	604 846 C91	75	612 626 C92	146
		284 874 C1	24	604 920 C91	150	610 309 C91	36
		321 840 C91	146A	604 942 C91	101	610 309 C91	37
		366 078 C1	25A	606 067 C91	98	612 796 C91	130
		366 078 C1	25B	606 067 C92	98	613 689 C1	29
		600 658 C1	59	606 068 C91	98	613 689 C1	29B
		601 131 C11	32	606 102 C1	90A	610 404 C1	23B
		601 132 C11	32	606 133 C91	109	610 404 C1	25B
		601 133 C11	32	606 170 C1	111	610 464 C91	90B
		601 244 C1	11	606 243 C91	133	610 478 C1	90A
		601 289 C1	17	606 243 C91	135	610 481 C1	90A
		601 508 C91	36	606 243 C91	137	610 500 C91	30
		601 509 C1	11	606 243 C91	148	610 502 C91	30
		601 509 C1	151	606 243 C91	149	610 636 C91	27
		601 558 C1	18	606 244 C91	135	610 637 C92	27
		601 786 C91	48	606 244 C91	136	610 642 C1	27
		601 788 C91	48	606 293 C91	87	610 644 C91	27
		601 789 C11	48	606 294 C1	74	610 645 C91	27
		601 790 C1	48	606 295 C1	75	610 646 C1	27
		601 816 C91	45	606 333 C91	75	610 647 C91	27
		601 817 C91	45	606 334 C91	74	610 739 C91	125
		602 001 C1	149	606 391 C91	74	610 739 C91	129
		603 288 C93	150	606 506 C1	99	610 740 C1	125
		603 467 C91	69C	606 519 C1	23B	610 740 C1	129
		603 467 C91	134	606 519 C1	24	610 751 C1	90A
		603 467 C91	136	606 628 C91	109	610 752 C92	90B
		603 468 C91	100	606 673 C1	135	610 755 C1	90A



## NUMERICAL INDEX



PART NUMBER	PAGE NUMBER						
616 285 C1	98	627 799 C1	41	703 483 C91	41	32 454 D	117
616 300 C11	31	627 915 C91	50	703 605 C1	41	33 817 DE	18
616 300 C11	33	627 940 C91	41A	703 606 C1	41	35 938 D	132
616 339 C1	109	627 969 C1	90A			35 938 D	133
616 342 C1	109	628 156 C91	146B			35 938 D	135
616 343 C1	109	628 164 C91	21			35 938 D	136
616 344 C1	109	628 164 C91	22			36 092 D	23A
616 345 C1	109	628 187 C91	140			36 092 D	24
616 365 C11	135	630 110 C1	90B			37 165 D	28
616 366 C11	135	630 454 C1	41A	D 1 612	145	37 165 D	29
616 367 C1	29	630 465 C1	41A	D 2 616	81	37 165 D	29A
616 367 C1	298	630 472 C1	41A	D 2 616	83	37 165 D	29B
616 368 C1	29	630 486 C1	41A	DA 12	144	37 165 D	31
616 368 C1	298	630 488 C1	41A	DA 12	145	37 165 D	146
616 369 C1	28	630 494 C1	41A	4 457 D	81	37 167 D	28
616 369 C1	29A	650 382 C91	21	5 961 D	140	37 167 D	31
616 370 C11	135	650 382 C91	22	5 961 DX	140	37 323 D	29A
616 373 C1	41	650 382 C91	41	6 470 D	107	37 323 D	32
616 476 C1	81	650 382 C91	58	6 477 DB	81	37 323 D	37
616 478 C1	82	650 382 C91	140	6 478 D	82	37 323 D	146
618 688 C1	28	650 382 C91	142	6 479 DB	82	38 026 DM	29
618 688 C1	29A	650 382 C91	146B	6 480 DC	81	38 026 DM	29B
619 405 C1	72	650 430 C91	21	6 843 D	141	38 026 DM	146
619 405 C1	102	650 430 C91	22	8 235 DB	107	38 260 D	85
619 581 C91	142	670 004 C11	31	8 236 DA	107	39 524 DA	19
619 787 C2	94	670 004 C11	34	8 237 DB	107	39 524 DA	20
619 788 C1	93	670 572 C1	57	8 238 DB	107	39 659 D	143
619 818 C91	134	672 994 C1	140	8 247 DB	72	39 677 DA	36
620 086 C1	41	673 178 C1	31	8 391 D	141	39 677 DA	37
620 114 C1	41	674 726 C91	17	8 392 DA	141	40 635 D	143
620 116 C1	41	674 727 C91	17	8 444 DA	101	40 638 D	143
620 149 C1	21	678 026 C1	31	8 450 DC	117	41 162 D	13
620 149 C1	22	678 027 C1	31	8 461 DA	117	41 339 D	11
620 316 C1	122	678 030 C1	57	8 508 DA	116	41 519 D	100
621 299 C1	110	700 283 C1	146	8 509 D	117	41 600 D	77
621 299 C1	110A	700 393 C1	67	8 511 DEX	117	41 633 D	80
621 402 C1	110	700 393 C1	95	8 511 DFX	117	42 175 D	102
621 402 C1	110A	700 394 C1	95	8 775 DC	117	42 298 DB	106
621 657 C91	70	700 395 C91	67	8 779 D	81	42 385 D	28
623 761 C1	140	700 395 C91	69D	9 102 D	43	42 385 D	29A
624 225 C1	69D	701 022 C91	146A	9 245 DA	114	42 409 D	33
624 226 C1	69D	701 127 C91	31	9 311 D	146	42 877 DB	140
624 227 C1	69D	701 127 C91	34	9 533 DA	142	42 915 D	30
624 228 C1	69D	701 922 C2	28	11 373 D	81	42 915 D	33
624 229 C1	69D	701 922 C2	29A	11 373 D	83	42 915 D	68
624 230 C1	69D	701 980 C92	146B	13 363 D	109	43 664 DC	100
624 231 C1	69D	702 027 C1	133	13 367 DC	109	45 120 D	76
624 232 C1	69C	702 027 C1	135	13 722 D	81	45 132 D	81
624 385 C91	69D	702 027 C1	136	13 722 D	83	45 132 D	87
624 389 C1	69B	702 199 C91	94	13 722 D	98	45 293 D	117
624 411 C1	42A	702 219 C1	135	16 026 DB	18	45 357 D	81
624 539 C1	117	702 219 C1	137	16 067 DA	11	45 361 D	81
624 540 C91	119	702 248 C3	140	17 700 D	81	46 023 D	101
624 541 C1	119	702 257 C1	135	17 700 D	83	46 038 D	106
624 618 C1	42A	702 268 C1	67	18 585 DA	76	46 040 D	106
624 849 C1	107	702 268 C1	69D	18 585 DA	80	46 332 D	76
624 900 C2	258	702 282 C1	132	18 585 DA	83	46 794 DA	117
624 902 C91	120	702 282 C1	134	20 841 D	100	46 795 D	117
624 905 C1	121	702 282 C1	136	22 510 D	31	46 800 D	117
624 907 C1	121	702 284 C1	132	22 977 DA	117	46 809 D	77
624 909 C91	258	702 284 C1	134	24 805 D	146	46 809 D	118
624 916 C91	147	702 284 C1	136	25 079 D	104	46 821 D	117
624 919 C91	24	702 390 C1	73	26 039 DA	73	46 821 D	118
625 205 C1	90A	702 537 C91	73	29 547 D	81	46 826 D	107
625 206 C1	90A	702 540 C1	135	29 547 D	83	46 831 D	107
625 777 C92	90B	702 550 C1	73	29 898 D	28	46 859 D	82
625 821 C1	90A	702 718 C1	27	29 898 D	29A	46 912 D	81
627 091 C91	90A	702 725 C91	27	29 898 D	132	46 913 D	81
627 092 C1	90A	702 726 C1	27	29 898 D	133	46 916 D	82
627 093 C1	90A	702 959 C1	90	29 898 D	134	46 918 D	81
627 096 C91	25A	703 108 C91	140	29 898 D	135	47 401 D	13
627 096 C91	25B	703 127 C91	110	29 898 D	136	47 726 D	106
627 114 C1	25A	703 246 C91	31	29 898 D	137	47 771 D	139
627 114 C1	25B	703 246 C91	33	29 899 D	135	47 772 D	139
627 115 C1	25A	703 247 C1	31	29 901 D	70	47 773 D	139
627 115 C1	25B	703 247 C1	33	29 901 D	135	47 775 D	139
627 365 C1	90	703 375 C1	69	29 901 D	137	47 776 D	139
627 366 C1	90	703 384 C91	42A	30 402 D	133	48 044 D	77
627 367 C1	90	703 384 C92	42A	30 402 D	135	48 072 D	77
627 400 C1	90	703 385 C1	42A	30 402 D	136	48 073 D	77
627 401 C91	90A	703 387 C91	100	30 436 DA	67	48 074 D	78
627 666 C1	90A	703 388 C91	101	30 436 DA	69C	48 229 D	110
627 667 C1	90A	703 480 C1	41	31 238 DA	73	48 384 D	18
627 668 C1	90A	703 481 C1	41	31 729 D	28	48 385 D	18
627 669 C1	90A	703 482 C1	41	31 729 D	29A	48 512 D	141

PRINTED IN UNITED STATES OF AMERICA

(Rev. No. 8 11-71)

## NUMERICAL INDEX

PART NUMBER	PAGE NUMBER						
49 472 D0	114	55 479 D	143	3 405 H	151	86 900 R91	10
49 547 DA	141	55 482 D	143	23 316 H	57	88 398 R1	69B
49 548 D	141	55 745 D	107	35 619 H	11	88 398 R1	69D
50 408 D	53	55 954 DA	106	35 647 H	49	122 316 R91	53
50 410 DA	11	55 955 DA	106	35 650 HA	18	132 244 R91	68
50 410 DA	13	55 959 DD	106	46 883 H	123	132 244 R91	69C
50 413 D	73	55 999 D	29	49 946 HA	47	132 244 R91	70
50 607 D	28	55 999 D	29B	59 730 H	133	133 093 R1	11
50 607 D	29B	55 999 D	146	59 730 H	135	145 201 R1	44
50 607 D	31	57 515 DA	114	59 730 H	137	150 955 R1	146A
50 607 D	33	57 516 DA	114	100 770 H	57	151 167 R3	11
50 826 D	82	57 536 DA	118	100 770 H	133	158 503 R1	74
50 826 D	83	57 904 DA	83	100 770 H	135	158 506 R1	74
51 227 DB	72	59 310 D	102	100 770 H	136	158 510 R1	74
51 434 D	83	59 311 D	101	102 069 H	45	158 511 R1	74
51 527 DC	146	59 311 D	103	103 213 H	67	158 512 R1	74
51 527 DC	151	59 312 D	103	103 213 H	68	158 513 R1	74
52 062 D	68	59 313 D	103	103 213 H	69D	160 834 R91	94
52 062 D	69B	59 314 D	103	113 934 H	19	164 436 R91	11
52 205 D	139	59 315 D	103	113 934 H	20	169 071 R1	11
52 208 D	81	59 317 DA	103	113 934 H	53	169 071 R1	43
52 210 DAXA	116	59 939 D	23B	119 739 H1	74	169 679 R1	49
52 213 DA	82	59 939 D	24	142 619 H	32	170 570 R91	27
52 215 DB	82	60 095 D	106	145 017 H	73	171 809 R1	146A
52 222 D	117	60 096 D	106	156 483 H1	138	171 823 R1	16
52 225 D	117	60 871 DA	146			171 823 R1	53
52 226 DA	117	60 877 D	146			221 425 R1	57
52 228 DD	117	60 878 DX	146			227 713 R1	49
52 229 DA	117	61 115 D	73			230 409 R91	49
52 231 D	117	61 387 D	28			230 421 R91	49
52 239 D	107	61 387 D	29A			233 384 R91	146A
52 243 DAX	107	61 921 D	31	23 415 M2	153	237 358 R1	146B
52 244 DX	106	62 302 D	69	23 907 M1	154	237 360 R1	146B
53 198 D	143	62 302 D	69D	25 384 M1	153	237 361 R1	146B
53 199 D	143	62 493 D	57	28 221 M1	154	237 362 R1	146B
53 200 D	143	62 778 D	84	30 332 M1	154	237 363 R1	146B
53 201 D	143	62 779 D	80	40 607 M1	153	237 364 R91	146B
53 202 D	143	64 163 D	81			250 263 R1	73
53 203 D	143	64 163 D	83			250 307 R1	82
53 205 D	143	64 603 DA	83			250 307 R1	85
53 206 D	143	64 604 D	81			250 610 R2	31
53 207 D	143	64 604 D	83			250 610 R2	32
53 209 D	143	65 490 D	87			250 610 R2	34
53 369 D	112	65 834 D	31	PB 32	144	250 617 R1	30
53 398 DA	109	67 574 DC	140	PB 43	145	250 617 R1	32
53 480 DA	81	67 869 D	28	PP 6	144	250 868 R1	77
53 481 DA	81	67 869 D	29A	PP 6	145	250 868 R1	82
53 490 D	100	67 869 D	132			250 868 R1	83
53 494 D	72	67 869 D	133			251 044 R2	35
53 495 D	100	67 869 D	134			251 348 R91	146
53 497 D	100	69 464 DB	81			251 355 R91	146
53 503 DA	100	69 466 DA	80			251 380 R91	146
53 504 DA	100					251 400 R1	46
53 514 DB	101					251 402 R1	46
53 539 DBX	118					251 403 R1	46
53 559 D	76					251 403 R1	151
53 597 D	106					251 846 R1	125
53 632 D	81					251 846 R1	126
53 635 D	82	E 1 416	144	R		251 846 R1	129
53 635 D	85	E 1 416	145			251 846 R1	130
53 636 D	82	E 1 820	144			252 483 R1	97
53 636 D	85	E 1 820	145	10 026 R	98	252 707 R1	41
53 637 D	82	E 2 022	144	69 500 RI	10	252 735 R1	138
53 637 D	85	E 2 022	145	69 607 RI	49	252 739 R1	87
53 683 DA	80	E 2 426	144	69 607 RI	151	252 739 R1	151
53 714 D	76	E 2 426	145	69 608 RI	49		
53 921 DA	139	E 2 628	144	69 674 RI	45	253 660 R1	53
53 925 D	139	E 2 628	145	69 674 RI	151	253 664 R2	53
53 962 DA	141	E 3 032	144	69 675 RI	45	253 729 R1	97
53 966 DAX	141	E 3 032	145	69 676 RI	45	254 817 R92	77
53 967 D	141			69 676 RI	151	254 967 R21	106
53 968 D	141			70 109 RI	14	254 968 R1	106
54 003 D	117			70 128 RI	13	255 630 R1	81
54 004 D	116			70 259 R2	18	257 523 R1	133
54 007 D	117			70 260 R1	18	257 523 R1	135
54 010 D	117			70 261 R2	18	257 523 R1	136
54 012 D	117	H 163	145	70 425 RI	18	257 620 R1	103
54 013 D	116	H 172	145	71 351 RI	45	257 625 R1	109
54 016 D	116	H 173	145	71 763 R2	14	257 785 R1	119
54 514 D	117	H 177	145	75 524 R3	11	257 786 R1	119
54 515 D	117	H 189	145	76 858 RI	10	258 277 R2	107
54 610 DB	107	H 190	144	76 859 RI	11	258 278 R1	107
54 969 D	72	H 391	145	76 860 R11	10	258 625 R2	81
54 969 D	107	3 405 H	47	82 970 RI	15	258 626 R3	81
55 371 DA	73	3 405 H	49	84 079 R91	10	258 874 R1	114
						258 995 R1	36



## NUMERICAL INDEX



PART NUMBER	PAGE NUMBER						
258 995 R1	37	265 204 R1	146	274 167 R11	101	277 675 R91	73
259 246 R1	87	265 205 R1	29	274 168 R1	101	277 676 R91	73
259 246 R1	151	265 205 R1	298	274 169 R1	101	277 748 R91	70
259 599 R91	41	265 205 R1	31	274 170 R1	101	278 027 R1	104
259 603 R91	41	265 205 R1	33	274 191 R2	57	278 063 R91	117
259 688 R1	72	265 205 R1	83	274 239 R1	41	278 089 R1	45
260 151 R1	82	265 205 R1	146	274 287 R2	41	278 140 R11	102
260 153 R1	81	266 059 R2	117	274 304 R91	67	278 141 R11	102
260 708 R2	146	266 060 R1	117	274 304 R91	68	278 209 R92	66
260 879 R4	35	266 068 R1	109	274 304 R91	70	278 209 R92	69C
260 892 R2	117	266 079 R1	77	274 698 R1	101	278 210 R91	66
260 894 R1	117	266 337 R91	29	274 699 R1	101	278 210 R91	69C
261 106 R1	73	266 337 R91	298	274 863 R1	81	278 263 R11	16
261 289 R1	117	266 383 R2	122	274 863 R1	87	278 264 R11	16
261 290 R1	117	266 457 R11	72	274 864 R1	87	278 265 R1	16
261 650 R1	124	266 458 R1	72	274 864 R1	104	278 265 R1	151
261 650 R1	126	266 459 R1	73	275 066 R1	77	278 268 R1	16
261 650 R1	128	266 854 R91	66	275 159 R11	29	278 268 R1	151
261 650 R1	130	266 854 R91	698	275 159 R11	298	278 269 R1	16
262 038 R1	148	267 665 R91	73	275 179 R2	100	278 270 R1	16
262 038 R1	149	267 689 R1	73	275 180 R2	100	278 270 R2	151
262 603 R12	41	267 787 R91	698	275 197 R1	124	278 272 R1	17
262 650 R1	117	267 788 R91	67	275 197 R1	126	278 275 R3	35
262 651 R1	117	267 788 R91	68	275 197 R1	128	278 278 R2	45
262 704 R1	124	267 788 R91	698	275 197 R1	130	278 279 R2	45
262 704 R1	126	267 917 R1	70	275 198 R22	124	278 280 R1	45
262 704 R1	128	268 996 R1	109	275 198 R22	126	278 280 R1	151
262 704 R1	130	268 996 R1	112	275 198 R22	128	278 281 R1	45
262 752 R1	82	269 164 R1	101	275 198 R22	130	278 300 R1	11
262 882 R1	45	269 177 R1	100	275 199 R1	124	278 301 R1	11
263 308 R91	68	269 178 R1	100	275 199 R1	126	278 302 R1	11
263 441 R1	109	269 293 R1	15	275 199 R1	128	278 303 R21	11
263 513 R91	68	271 065 R91	67	275 199 R1	130	278 304 R21	11
263 513 R91	69D	271 065 R91	698	275 200 R31	76	278 305 R1	11
263 514 R91	68	271 065 R91	70	275 217 R1	103	278 306 R1	11
263 514 R91	69	271 066 R92	69C	275 218 R1	102	278 308 R1	10
263 514 R91	69C	271 140 R91	147	275 219 R1	102	278 308 R1	151
263 514 R91	70	271 647 R1	77	275 220 R1	102	278 313 R2	19
263 515 R91	67	271 647 R1	110	275 221 R91	103	278 313 R2	20
263 515 R91	68	271 664 R1	117	275 222 R1	103	278 313 R2	151
263 515 R91	69D	271 668 R1	151	275 223 R1	103	278 314 R1	19
263 717 R91	31	271 762 R1	104	275 224 R1	103	278 314 R1	20
263 717 R91	68	271 848 R1	11	275 225 R1	80	278 314 R1	151
263 717 R91	69C	271 853 R1	104	275 226 R1	80	278 315 R1	33
263 717 R91	135	271 854 R1	104	275 227 R11	72	278 316 R1	31
263 945 R1	118	271 856 R2	104	275 230 R31	123	278 317 R1	31
263 975 R1	110	271 857 R2	104	275 231 R31	123	278 317 R1	33
263 975 R1	110A	271 860 R2	82	275 241 R1	70	278 318 R1	31
263 976 R1	110	271 861 R1	81	275 266 R11	122	278 318 R1	34
264 055 R2	81	271 863 R91	82	275 600 R1	117	278 321 R1	30
264 055 R2	83	272 061 R91	59	275 601 R1	117	278 321 R1	35
264 055 R2	95	272 119 R91	104	275 715 R1	102	278 335 R11	31
264 097 R2	124	272 120 R1	104	275 716 R91	102	278 347 R1	31
264 097 R2	126	272 152 R91	25A	275 734 R1	101	278 347 R1	33
264 097 R2	128	272 152 R91	25B	275 742 R1	81	278 347 R1	151
264 097 R2	130	272 281 R1	97	275 743 R1	81	278 368 R61	11
264 123 R1	117	272 478 R91	81	275 744 R2	80	278 506 R1	121
264 156 R1	117	272 480 R91	82	275 745 R11	80	278 507 R1	121
264 186 R91	68	272 623 R2	112	275 746 R1	81	278 508 R1	121
264 186 R91	69C	272 842 R1	88	275 747 R12	80	278 509 R1	121
264 196 R91	19	272 843 R1	138	275 748 R2	80	278 643 R2	20
264 196 R91	20	272 853 R2	110A	275 784 R2	103	278 702 R21	30
264 196 R91	68	272 858 R92	110A	275 785 R1	103	278 703 R11	30
264 196 R91	69C	273 405 R1	134	275 946 R91	31	278 704 R11	30
264 200 R91	66	273 405 R1	136	275 946 R91	147	278 705 R11	30
264 200 R91	69B	273 406 R1	134	276 099 R92	81	278 706 R11	30
264 259 R1	117	273 406 R1	136	276 156 R1	80	278 707 R11	30
264 261 R3	117	273 499 R92	122	276 223 R91	22	278 807 R1	45
264 262 R1	117	273 500 R92	123	276 223 R91	38	278 834 R2	135
264 263 R1	117	273 871 R1	114	276 578 R91	88	278 834 R2	137
264 270 R1	104	274 075 R2	104	276 578 R91	98	278 836 R2	135
264 674 R91	70	274 085 R91	23A	276 975 R1	123	278 836 R2	137
264 674 R91	135	274 085 R91	24	276 976 R1	70	278 919 R1	143
264 674 R91	137	274 085 R91	45	276 979 R92	70	278 953 R91	33
264 679 R1	73	274 085 R91	46	277 025 R93	147	278 953 R91	34
264 681 R1	87	274 089 R91	23A	277 025 R93	149	279 026 R91	41
264 681 R1	151	274 089 R91	24	277 031 R91	147	279 027 R91	97
264 830 R21	101	274 089 R91	25A	277 037 R1	80	279 028 R91	27
265 126 R91	31	274 089 R91	25B	277 037 R1	81	279 029 R91	238
265 126 R91	34	274 089 R91	27	277 153 R1	143	279 038 R91	45
265 204 R1	29	274 160 R91	100	277 209 R1	101	279 038 R91	53
265 204 R1	298	274 164 R1	101	277 457 R91	60	279 160 R11	46
265 204 R1	31	274 165 R1	100	277 460 R91	67	279 163 R1	46
265 204 R1	33	274 165 R1	101	277 507 R2	114	279 173 R1	146
265 204 R1	83	274 166 R91	101	277 544 R1	147	279 212 R91	46



## NUMERICAL INDEX

PART NUMBER	PAGE NUMBER						
279 274 R1	35	304 102 R1	37	307 041 R2	110	315 849 R1	13
279 338 R1	82	304 104 R91	37	307 042 R2	110	315 970 R91	13
279 338 R1	85	304 104 R91	147	307 080 R1	15	315 973 R2	147
279 338 R1	104	304 104 R91	148	307 082 R1	82	315 973 R2	148
279 339 R91	82	304 104 R91	149	307 155 R1	81	315 973 R2	149
279 339 R91	104	304 131 R2	35	307 312 R91	122	316 050 R1	53
279 427 R1	81	304 279 R1	151	307 315 R1	122	316 051 R1	53
279 431 R2	81	304 313 R1	31	307 317 R12	123	316 052 R2	53
279 433 R1	81	304 391 R2	53	307 787 R1	50	316 053 R11	53
279 434 R92	82	304 398 R1	23A	307 819 R91	82	316 079 R1	87
279 435 R11	81	304 398 R1	24	307 881 R91	29	316 366 R1	17
279 456 R92	85	304 398 R1	25A	307 881 R91	29B	316 647 R91	67
279 732 R1	85	304 398 R1	25B	308 361 R11	53	316 647 R91	69C
279 733 R1	82	304 426 R1	53	308 580 R1	146A	316 742 R3	110
279 994 R91	48	304 449 R91	9	308 622 R91	132	316 839 R3	110
280 185 R1	57	304 451 R1	53	308 882 R1	97	316 840 R3	110A
280 655 R91	142	304 522 R1	125	309 015 R91	142	316 841 R3	110
280 703 R1	70	304 522 R1	129	309 015 R91	143	316 843 R2	114
280 704 R1	70	304 720 R1	151	309 056 R1	146B	316 846 R93	110
280 706 R22	76	304 768 R91	100	309 126 R1	50	316 987 R1	109
281 268 R2	60	304 769 R91	101	309 127 R1	50	316 988 R1	109
281 923 R1	59	304 776 R1	73	309 164 R1	50	316 991 R1	109
282 233 R1	106	304 777 R1	73	310 385 R1	53	316 992 R2	109
282 818 R2	77	304 778 R92	73	310 388 R91	30	316 993 R2	109
283 401 R1	138	304 780 R1	73	310 389 R1	35	317 549 R91	16
284 670 R91	43	304 782 R1	73	310 393 R1	35	317 623 R1	94
287 049 R1	90	304 784 R2	73	310 394 R1	35	317 702 R91	23A
291 572 R91	92	304 785 R2	73	310 395 R1	35	317 859 R93	73
291 572 R91	94	304 786 R1	73	310 396 R1	35	317 860 R91	73
293 350 R91	94	304 787 R91	73	310 397 R1	35	317 861 R1	72
293 739 R1	138	304 854 R1	47	310 398 R1	35	317 862 R1	72
295 762 R1	117	304 854 R1	48	310 399 R1	35	317 912 R91	94
296 937 R1	138	304 854 R1	151	310 400 R1	35	317 935 R91	11
296 938 R1	138	304 915 R92	112	310 401 R1	35	317 972 R91	23A
296 939 R1	138	305 206 R1	46	310 402 R1	35	317 972 R91	24
297 330 R1	74	305 366 R91	67	310 427 R1	50	317 972 R91	25A
297 330 R1	85	305 366 R91	70	310 427 R1	53	317 972 R91	25B
297 330 R1	87	305 799 R1	29	310 446 R95	151	318 020 R11	11
297 581 R91	92	305 799 R1	29B	310 508 R91	81	318 118 R21	45
297 581 R91	94	305 804 R1	19	310 514 R91	116	318 377 R2	17
298 000 R1	132	305 804 R1	20	310 665 R1	13	318 379 R1	53
298 000 R1	134	305 804 R1	151	310 665 R1	151	318 380 R1	53
298 000 R1	136	306 125 R92	112	310 923 R1	143	318 381 R91	47
298 384 R1	97	306 126 R92	112	310 924 R91	143	318 497 R1	94
299 864 R1	21	306 127 R92	112	310 944 R91	143	318 729 R1	28
299 864 R1	22	306 128 R92	112	311 070 R1	111	318 729 R1	29A
299 926 R2	138	306 280 R12	17	311 133 R91	126	318 734 R1	28
300 027 R1	146B	306 353 R91	36	311 218 R1	41	318 734 R1	29A
300 559 R91	67	306 353 R91	37	311 263 R1	42	318 735 R1	29
300 559 R91	69B	306 354 R2	15	311 263 R1	150	318 735 R1	29B
301 819 R1	94	306 365 R91	44	311 269 R1	104	318 840 R95	110A
302 565 R1	96	306 399 R91	36	311 277 R1	81	318 985 R1	21
302 567 R1	96	306 625 R1	45	311 278 R1	82	318 987 R1	22
302 570 R1	96	306 630 R1	44	311 279 R1	82	319 615 R1	135
302 571 R1	96	306 637 R11	13	311 350 R1	29	319 615 R1	136
302 572 R1	96	306 638 R11	18	311 350 R1	29B	319 628 R91	111
302 573 R1	96	306 645 R11	18	311 350 R1	31	319 635 R91	109
302 574 R91	96	306 648 R91	18	311 352 R1	28	319 708 R1	94
303 322 R1	48	306 656 R1	19	311 431 R1	112	319 709 R1	94
303 462 R11	31	306 657 R1	57	312 109 R1	53	319 710 R1	94
303 463 R1	31	306 658 R1	57	312 552 R1	151	319 752 R91	93
303 473 R1	11	306 659 R1	57	313 021 R1	96	319 753 R1	94
303 483 R1	45	306 660 R11	53	313 190 R1	117	319 753 R91	93
303 545 R1	34	306 671 R1	13	313 191 R1	117	319 884 R1	29
303 644 R92	114	306 672 R1	13	313 205 R91	117	319 884 R1	29B
303 645 R92	114	306 673 R1	13	313 206 R91	117	319 962 R91	84
303 646 R92	114	306 674 R1	13	313 337 R91	94	319 965 R91	68
303 704 R92	59	306 700 R1	117	313 530 R92	73	319 965 R91	69C
303 704 R92	67	306 708 R1	17	313 531 R92	73	319 966 R91	67
303 706 R1	59	306 775 R91	36	313 586 R91	146B	319 970 R1	50
303 962 R1	29	306 776 R91	36	313 625 R91	23A	320 000 R1	17
303 962 R1	29B	306 777 R1	36	313 625 R91	24	320 017 R91	17
303 998 R1	47	306 778 R1	36	313 692 R1	85	320 018 R1	17
304 003 R91	47	306 780 R1	36	313 756 R1	87	320 097 R1	10
304 005 R91	47	306 876 R1	120	313 913 R92	104	320 150 R91	67
304 008 R1	47	306 883 R11	124	313 930 R91	23A	320 182 R1	46
304 009 R1	47	306 883 R11	126	313 942 R91	45	320 186 R91	15
304 010 R1	47	306 887 R1	126	313 946 R91	81	320 188 R93	15
304 011 R1	47	306 888 R91	126	313 957 R1	59	320 275 R1	45
304 012 R1	47	306 896 R1	117	314 751 R31	58	320 275 R1	46
304 012 R1	151	306 897 R1	117	314 753 R1	58	320 285 R11	47
304 100 R91	37	306 898 R2	117	314 937 R91	112	320 391 R1	41
304 101 R91	36	306 899 R91	117	315 701 R1	11	320 395 R91	107
304 101 R91	37	306 936 R1	133	315 744 R1	11	320 398 R91	107
304 102 R1	36	307 033 R2	110	315 825 R1	10	320 535 R11	21



## NUMERICAL INDEX



PART NUMBER	PAGE NUMBER						
320 537 R11	22	324 227 R1	151	327 960 R1	104	330 839 R91	78
320 641 R1	110	324 228 R2	90A	327 961 R1	87	330 840 R91	41A
321 029 R91	94	324 231 R1	90	327 963 R2	87	330 845 R1	108
321 149 R92	41	324 232 R1	90	327 964 R1	87	330 848 R1	41
321 201 R91	30	324 236 R1	90A	327 965 R91	84	330 850 R11	87
321 292 R91	110	324 240 R1	90	327 965 R92	104	330 851 R1	87
321 359 R1	53	324 241 R1	90	327 977 R92	108	330 856 R2	41
321 373 R91	50	324 242 R1	90	327 978 R92	108	330 868 R91	70
321 374 R91	50	324 244 R1	90	327 979 R1	103	330 874 R1	41A
321 375 R1	50	324 245 R1	90	327 980 R1	103	330 929 R1	94
321 376 R91	50	324 255 R1	50	327 981 R11	102	330 943 R11	124
321 377 R91	50	324 256 R1	50	327 983 R11	23B	330 945 R11	125
321 378 R1	50	324 258 R91	50	327 998 R11	23B	330 947 R11	125
321 379 R1	50	324 273 R1	33	327 999 R1	23B	330 947 R11	129
321 720 R91	37	324 274 R1	33	328 512 R1	13	330 950 R11	124
321 721 R1	37	324 299 R1	99	328 535 R1	44	330 950 R11	126
321 722 R1	37	324 300 R1	99	328 537 R1	44	330 955 R11	124
321 727 R1	37	324 549 R91	73	328 539 R1	45	330 956 R11	124
321 736 R1	109	324 560 R91	73	328 540 R1	45	330 957 R11	124
321 753 R1	138	324 561 R91	73	328 542 R11	16	330 958 R11	125
321 755 R91	138	324 745 R1	107	328 543 R21	18	330 958 R11	129
321 757 R1	138	324 998 R91	73	328 544 R21	18	330 971 R91	125
321 759 R1	138	325 030 R1	94	328 560 R11	13	330 971 R91	129
321 761 R1	138	325 040 R1	94	328 681 R1	148	330 980 R1	124
321 762 R1	138	325 040 R2	99	328 681 R1	149	330 981 R1	124
321 763 R1	138	325 041 R1	94	328 991 R11	44	330 983 R1	124
321 764 R91	138	325 059 R1	87	330 018 R91	44	330 984 R1	124
321 765 R1	138	325 059 R1	151	330 019 R91	44	330 985 R1	125
321 768 R1	138	325 585 R91	66	330 600 R91	108	330 986 R11	126
321 769 R91	138	325 981 R92	113	330 607 R91	108	330 987 R1	124
321 770 R91	138	325 990 R1	41	330 622 R11	23A	330 988 R1	124
321 822 R1	36	325 997 R1	125	330 631 R1	108	330 993 R1	93
321 878 R1	46	325 997 R1	129	330 635 R1	109	331 041 R1	122
321 991 R1	99	326 078 R1	93	330 637 R1	108	331 131 R1	113
321 992 R1	99	326 078 R1	94	330 638 R1	108	331 132 R1	113
321 994 R1	99	327 420 R1	87	330 639 R91	140	331 133 R2	113
321 997 R1	99	327 420 R1	151	330 645 R1	42	331 145 R91	59
321 998 R1	99	327 421 R91	87	330 645 R1	42A	331 204 R91	73
322 247 R1	112	327 421 R91	88	330 646 R1	42	331 238 R91	60
322 383 R1	43	327 424 R92	87	330 646 R1	42A	331 375 R1	84
322 384 R12	43	327 425 R91	85	330 647 R11	42	331 375 R2	84
322 386 R1	43	327 426 R91	85	330 653 R1	42	331 376 R1	85
322 528 R1	112	327 427 R91	84	330 653 R1	42A	331 380 R11	77
322 760 R1	57	327 428 R91	87	330 660 R1	41	331 383 R1	18
323 716 R11	32	327 429 R1	85	330 661 R2	41	331 384 R1	18
323 717 R1	32	327 432 R91	30	330 662 R1	41	331 408 R2	112
323 727 R91	11	327 447 R1	74	330 663 R11	41	331 413 R11	120
323 728 R92	32	327 467 R91	129	330 664 R11	41	331 414 R11	121
323 771 R31	11	327 468 R91	23A	330 665 R1	41	331 415 R11	120
323 774 R1	11	327 499 R91	43	330 667 R91	41A	331 421 R1	15
323 800 R1	11	327 717 R2	75	330 668 R1	41A	331 422 R1	125
323 802 R1	17	327 921 R1	87	330 669 R1	41A	331 422 R1	129
323 827 R91	47	327 922 R1	87	330 670 R1	41A	331 460 R11	87
324 003 R1	98	327 922 R1	151	330 671 R91	41A	331 461 R1	87
324 004 R2	98	327 923 R1	75	330 672 R11	41A	331 461 R1	151
324 006 R92	98	327 923 R1	87	330 713 R11	59	331 462 R1	87
324 009 R1	98	327 923 R1	151	330 714 R11	60	331 463 R11	87
324 010 R1	98	327 924 R2	87	330 721 R1	110	331 487 R1	28
324 012 R1	98	327 925 R1	87	330 734 R1	15	331 487 R1	29A
324 013 R1	98	327 925 R1	151	330 737 R1	38	331 494 R91	42
324 019 R1	98	327 927 R1	84	330 737 R11	22	331 496 R1	76
324 021 R1	98	327 928 R1	87	330 742 R11	123	331 497 R1	77
324 022 R1	98	327 928 R1	151	330 743 R11	123	331 498 R11	124
324 030 R1	98	327 929 R1	84	330 749 R92	120	331 531 R1	111
324 032 R91	50	327 932 R91	83	330 750 R92	120	331 532 R2	111
324 039 R1	50	327 932 R92	83	330 751 R11	124	331 537 R1	111
324 077 R91	132	327 935 R1	84	330 751 R11	126	331 538 R1	111
324 105 R91	98	327 936 R1	84	330 751 R11	128	331 539 R1	111
324 169 R91	93	327 939 R11	84	330 751 R11	130	331 540 R1	111
324 184 R91	125	327 940 R11	83	330 752 R11	132	331 541 R91	111
324 184 R91	129	327 941 R91	83	330 752 R11	135	331 544 R11	119
324 194 R1	23A	327 943 R1	84	330 752 R11	136	331 545 R11	119
324 194 R1	24	327 945 R1	87	330 753 R1	132	331 548 R91	119
324 194 R1	25A	327 945 R1	151	330 789 R1	94	331 566 R11	123
324 194 R1	25B	327 949 R91	84	330 790 R1	94	331 592 R1	123
324 218 R1	90A	327 950 R1	85	330 796 R12	95	331 594 R1	122
324 221 R1	90A	327 951 R1	84	330 808 R1	94	331 595 R1	122
324 222 R1	90A	327 951 R2	84	330 821 R1	132	331 596 R91	122
324 223 R1	90A	327 952 R1	84	330 822 R1	132	331 596 R91	123
324 223 R2	151	327 953 R1	87	330 823 R91	66	331 599 R1	123
324 224 R2	151	327 955 R1	84	330 823 R91	69D	331 604 R2	113
324 225 R2	90A	327 956 R11	85	330 825 R92	69	331 609 R91	125
324 226 R1	90A	327 957 R2	87	330 836 R91	78	331 609 R91	129
324 226 R1	151	327 959 R1	84	330 837 R91	78	331 612 R91	125
324 227 R1	90A	327 960 R1	85	330 838 R91	78	331 612 R91	129

## NUMERICAL INDEX

PART NUMBER	PAGE NUMBER						
331 626 R92	112	333 826 R1	88	338 623 R91	94	346 666 R91	238
331 645 R11	121	333 827 R1	88	338 624 R91	94	346 666 R91	24
331 646 R11	121	333 829 R91	88	338 642 R91	74	346 734 R91	148
331 647 R1	121	333 830 R1	88	338 643 R92	74	346 792 R1	298
331 648 R91	121	333 835 R91	43	338 644 R92	74	346 792 R1	32
331 649 R1	74	333 851 R91	90A	338 645 R91	74	346 821 R91	94
331 650 R1	74	333 852 R91	90	338 646 R1	74	346 822 R1	94
331 669 R1	92	333 853 R1	90	338 648 R1	74	347 066 R91	37
331 679 R91	41A	333 854 R92	90A	338 651 R94	99	347 230 R1	33
331 681 R1	142	333 857 R2	90	338 662 R91	133	347 243 R1	99
331 690 R91	142	333 992 R91	132	338 725 R91	24	347 297 R1	90A
331 702 R91	43	334 101 R11	41	338 743 R91	24	347 372 R91	49
331 703 R1	24	334 101 R11	43	338 743 R91	25A	347 516 R91	93
331 703 R1	25A	334 102 R11	41	338 743 R91	25B	347 521 R91	94
331 704 R91	120	334 102 R11	43	338 744 R91	24	347 553 R1	90A
331 706 R1	24	334 103 R1	41	338 751 R1	96	347 641 R1	98
331 706 R1	25A	334 103 R1	43	338 752 R1	96	347 751 R91	138
331 706 R1	25B	334 420 R1	108	338 753 R1	96	347 823 R91	33
331 715 R91	120	334 445 R1	133	338 754 R1	96	347 837 R91	149
331 716 R1	76	334 445 R1	135	338 783 R91	93	347 957 R91	93
331 722 R1	77	334 445 R1	137	338 784 R91	94	347 958 R91	93
331 724 R1	76	334 600 R1	77	338 818 R91	30	347 959 R91	46
331 728 R11	121	334 701 R91	69	338 822 R1	147	349 038 R1	151
331 732 R91	147	334 740 R1	92	338 826 R91	59	349 038 R1	47
331 739 R11	41	334 787 R91	68	338 826 R91	67	349 039 R1	13
331 740 R1	41	334 787 R91	69D	338 835 R1	17	349 055 R2	47
331 741 R1	41	334 788 R1	38	338 896 R1	59	349 363 R1	13
331 742 R11	41	334 789 R91	38	338 951 R91	14	349 381 R1	11
331 764 R11	121	336 009 R1	93	338 977 R92	132	350 602 R1	21
331 765 R11	121	336 070 R91	33	338 977 R92	134	350 684 R1	46
331 775 R1	94	336 103 R1	99	338 978 R91	132	350 684 R1	151
331 779 R1	146	336 109 R1	37	338 978 R91	133	351 048 R1	85
331 790 R91	142	336 234 R91	93	338 978 R91	134	352 221 R1	49
331 792 R2	18	336 651 R91	133	339 105 R92	32	353 936 R2	151
331 793 R2	18	338 078 R91	75	339 109 R91	32	354 836 R1	94
331 793 R2	75	338 098 R1	128	341 195 R92	48	355 889 R3	83
331 794 R91	38	338 099 R1	128	341 762 R91	87	355 966 R1	37
331 861 R11	140	338 100 R2	132	341 763 R1	87	355 967 R1	87
331 962 R91	95	338 100 R2	133	341 764 R1	104	355 967 R1	151
331 976 R1	23A	338 100 R2	134	341 808 R1	74	356 062 R91	66
331 977 R1	23A	338 101 R2	133	341 811 R1	85	356 062 R91	69D
331 978 R1	24	338 101 R2	137	341 812 R1	85	357 672 R91	16
332 026 R91	32	338 102 R31	120	341 822 R1	146	358 563 R91	67
332 110 R11	19	338 103 R41	120	341 823 R1	146	358 563 R91	69B
332 110 R11	20	338 107 R1	29B	341 874 R91	68	358 563 R91	69D
332 111 R1	18	338 108 R11	130	341 874 R91	70	358 581 R91	67
332 112 R21	147	338 111 R91	128	341 925 R1	104	358 584 R91	67
332 112 R21	148	338 112 R11	129	341 947 R91	28	358 588 R91	67
332 112 R21	149	338 113 R11	128	341 947 R91	29A	359 374 R91	66
332 117 R1	45	338 113 R11	130	341 949 R1	83	359 374 R91	69B
332 136 R1	18	338 116 R1	128	341 950 R91	83	359 437 R91	67
332 137 R91	49	338 116 R1	130	342 968 R1	15	362 120 R1	68
332 267 R91	14	338 117 R11	130	343 556 R1	99	362 120 R1	69D
332 270 R91	14	338 123 R91	128	343 691 R1	88	362 120 R11	69
332 273 R91	14	338 124 R1	128	343 700 R1	88	362 120 R11	69C
332 276 R91	14	338 150 R1	97	343 700 R1	151	362 123 R1	46
332 279 R91	14	338 151 R11	97	343 712 R91	33	362 123 R1	47
332 436 R1	17	338 165 R1	87	343 713 R91	33	362 428 R91	133
332 489 R1	31	338 249 R1	106	343 834 R1	97	363 717 R91	34
332 489 R1	34	338 265 R1	123	343 893 R91	148	364 839 R1	92
332 490 R1	31	338 266 R1	123	343 894 R1	35	364 839 R1	93
332 490 R1	33	338 267 R1	123	343 968 R91	33	364 839 R1	94
332 491 R2	31	338 268 R1	123	345 245 R92	9	364 910 R1	58
332 491 R2	34	338 269 R1	123	345 409 R1	10	364 910 R1	68
332 495 R91	35	338 270 R11	123	345 409 R1	13	364 910 R1	69C
332 496 R91	35	338 335 R91	92	345 526 R91	66	367 225 R1	18
332 603 R1	147	338 357 R1	107	345 526 R91	69C	367 229 R1	18
332 618 R11	32	338 360 R1	73	345 574 R1	97	367 240 R1	18
332 624 R1	33	338 383 R91	129	345 576 R11	97	367 272 R1	14
332 652 R91	151	338 390 R1	111	345 610 R1	42	367 276 R91	14
333 703 R91	117	338 391 R1	111	345 610 R91	150	367 279 R91	14
333 712 R1	94	338 392 R91	111	345 643 R91	111	367 282 R91	14
333 719 R91	92	338 393 R1	111	345 645 R1	111	367 285 R91	14
333 719 R91	96	338 399 R91	125	345 646 R1	111	367 288 R91	14
333 723 R91	133	338 399 R91	129	345 649 R91	111	367 291 R91	14
333 723 R91	134	338 415 R1	99	345 794 R11	23A	367 294 R91	14
333 774 R1	29	338 546 R1	138	345 795 R1	23A	367 297 R91	15
333 774 R1	29B	338 550 R92	75	345 810 R1	94	367 300 R91	14
333 784 R1	125	338 564 R91	41A	345 811 R91	94	367 303 R91	14
333 784 R1	129	338 586 R91	93	345 832 R11	128	367 306 R91	14
333 785 R1	107	338 587 R91	92	345 832 R11	130	367 309 R91	14
333 787 R92	99	338 587 R91	93	346 505 R91	94	367 408 R11	17
333 822 R91	88	338 587 R91	94	346 509 R1	99	367 572 R1	16
333 824 R1	88	338 596 R91	93	346 596 R91	90A	367 578 R1	16
333 825 R1	88	338 621 R91	92	346 647 R91	90		



## NUMERICAL INDEX

PART NUMBER	PAGE NUMBER	PART NUMBER	PAGE NUMBER	PART NUMBER	PAGE NUMBER	PART NUMBER	PAGE NUMBER
367 580 R11	16	584 268 R91	90				
367 630 R91	17	584 269 R1	90				
367 631 R11	17	612 681 R1	138				
367 632 R11	17	615 029 R1	73				
367 984 R1	31	615 029 R1	129				
368 269 R1	93	615 031 R1	92				
368 333 R1	37	615 031 R1	96				
368 334 R1	37	631 255 R1	84				
368 492 R1	36	684 154 R1	146A				
368 493 R1	36	708 560 R1	87				
368 501 R2	45	708 560 R1	151				
368 985 R2	13	871 570 R1	106				
368 985 R2	31	915 499 R1	135				
368 986 R91	13	915 499 R1	136				
368 986 R91	31	915 500 R1	135				
369 497 R2	23A	915 500 R1	136				
369 497 R2	25B	972 386 R91	73				
369 497 R2	27	999 677 R91	142				
369 497 R2	53	1 017 851 R1	122				
369 875 R1	111	1 019 023 R1	70				
369 981 R1	13	1 019 024 R2	41A				
369 981 R1	151	1 019 026 R1	119				
369 982 R1	13	1 085 172 R1	27				
369 982 R1	151	1 085 174 R1	27				
369 984 R1	49	2 750 008 R1	82				
369 984 R1	151	2 750 387 R1	150				
369 987 R1	70	2 750 390 R1	150				
371 217 R1	41	2 751 309 R2	150				
371 699 R2	13	2 751 389 R1	150				
374 544 R92	45	2 751 392 R1	150				
374 587 R91	13	2 752 311 R1	150				
375 612 R91	13	2 752 940 R1	27				
376 602 R91	45						
376 666 R11	17						
376 668 R11	17						
376 670 R91	14						
376 673 R91	14						
376 676 R91	14						
376 679 R91	15	SS 83	144				
376 683 R91	14	SS 83	145				
376 686 R91	14	SS 123	144				
376 689 R91	14	SS 123	145				
376 692 R91	15	ST 205 A	141				
382 357 R91	15	ST 211	73				
382 360 R91	15	ST 238	81				
382 432 R1	109	ST 238	82				
384 203 R91	133	ST 276	116				
384 203 R91	135	ST 333	107				
384 203 R91	137	ST 572	87				
384 525 R1	48	ST 655	117				
384 527 R1	48	ST 684	117				
384 528 R1	48						
384 529 R1	48						
384 530 R11	48						
384 532 R1	48						
384 533 R91	48						
384 535 R1	48						
384 536 R1	48	TP 24	144				
384 995 R1	57	TP 24	145				
384 996 R1	57	9 982 T	13				
384 997 R1	57						
387 931 R1	45						
403 066 R91	13						
407 010 R1	27						
407 015 R1	24						
407 015 R1	25A						
407 015 R1	27						
428 541 R91	146A	538 V	45				
428 541 R91	146B	61 261 VA	47				
449 373 R1	146A	61 263 VA	47				
454 331 R1	88						
461 173 R1	77						
461 173 R1	83						
461 173 R1	151						
466 191 R1	87						
468 339 R1	87						
468 339 R1	151						
512 889 R1	141						
516 010 R1	98						
526 609 R91	25A						
526 609 R91	25B						
526 611 R91	146A						
570 828 R1	93						
570 838 R1	93						
570 879 R1	111						

**S**

**T**

**V**



## NUMERICAL INDEX

PART NUMBER	PAGE NUMBER						

NEW AND DISPLACED PARTS LIST

NOTE: This list is prepared to assist distributor parts personnel in keeping their inventory records current.

The information on this sheet will not be covered in future revisions, so you may want to retain this copy. Future revisions will include new and displaced parts information for that revision only.

New and displaced parts listed below are new and displaced parts for applications shown on pages listed for this machine, not necessarily new and displaced for other applications for this machine or in the IH system.

The following is a list of new and displaced parts for the Model 159 Loader Parts Catalog, Form TC93B Rev. 8 released since Rev. 7 dated 2-70.

PAGE NO.	NEW PART NUMBER	DISPLACED PART NUMBER	PAGE NO.	NEW PART NUMBER	DISPLACED PART NUMBER
9	367 575 R92	367 576 R21	140	672 994 C1	-----
17	674 726 C91	609 336 C92	140	623 761 C1	-----
17	674 727 C91	-----	140	650 382 C91	-----
17	609 343 C91	-----	142	611 144 C1	-----
17	-----	615 288 C1	142	650 382 C91	276 678 R91
17	-----	615 289 C1	146B	628 156 C91	701 980 C91
17	-----	278 329 R1	146B	650 382 C91	-----
17	-----	609 345 C91	147	624 916 C91	-----
17	-----	612 006 C91			
17	-----	612 007 C91			
17	-----	609 026 C11			
17	-----	609 027 C11			
21	650 430 C91	283 001 R91			
21	-----	321 576 R91			
21	628 164 C91	320 350 R91			
22	650 430 C91	283 001 R91			
22	650 382 C91	-----			
23A	313 625 R91	391 928 R91			
24	624 919 C91	-----			
+25A	-----	-----			
+25B	-----	-----			
28	618 688 C1	-----			
29A	618 688 C1	-----			
31	673 178 C1	-----			
31	678 026 C1	-----			
31	678 027 C1	-----			
41	627 799 C1	31 729 D			
41	612 558 C1	325 371 R1			
41	650 382 C91	-----			
+41A	-----	-----			
46	141 615	-----			
46	444 054	-----			
48	384 525 R1	304 525 R1			
50	627 915 C91	-----			
58	650 382 C91	276 678 R91			
72	619 405 C1	41 597 DA			
74	119 739 H1	338 647 R91			
90	627 365 C1	-----			
90	627 367 C1	-----			
90	627 366 C1	-----			
90	627 400 C1	-----			
90	-----	*346 647 R91			
90A	627 669 C1	-----			
90A	627 667 C1	-----			
90A	627 666 C1	-----			
90A	627 668 C1	-----			
90A	627 401 C91	-----			
90B	630 110 C1	-----			
96	613 797 C91	-----			
98	-----	703 239 C91			
102	619 405 C1	41 597 DA			
120	624 902 C91	-----			
121	624 905 C1	-----			
121	624 907 C1	-----			
138	156 483 H1	321 754 R91			
140	628 187 C91	-----			

+ - All part numbers are new for this page.

\* - For ordering procedure for displaced part shown, refer to this catalog.

# - Detail parts for this assembly or attachment are all new and are listed on the page shown in this revision.

## MEMORANDA



