

INTRODUCTION

GALION

<u>APPLICATION</u>	<u>ENGINE</u>	<u>APPLICATION</u>	<u>ENGINE</u>
H-65C	DT-414	LQ-157	D-466
E-200	DT-414	LQ-157A	D-466
530	DT-414	LQ-158	DT-466
530	DT-414B	LQ-158A	DT-466B
530	DT-466C	LQ-159	D-466
TD-12	D-466	LQ-161A	DT-466
TD-12	DT-466B	LQ-161B	DT-466B
TD-15C	DT-466	LQ-163	D-466
TD-15C	DT-466B	LQ-165	D-466
TD-15C	DT-466C	LQ-165A	D-466
H-80B	DT-466C	LQ-166A	DT-466B
H-80B	DT-466B	LQ-166B	DT-466B
175C	DT-466	LQ-167	D-466
175C	DT-466B	LQ-167A	D-466
175C	DT-466C	LQ-168	DT-466B
412	DT-466	LQ-170	DT-466B
412	DT-466B	A400E	D-466
412B	DT-466B	S450E, S500E	D-466
433/444	DT-466	A450E, A500E	D-466
433B/444B	DT-466B	A550, A556	DT-466B
540	DT-466B	A560E, A566E	DT-466B
540	DTI-466C	A600, A606	DT-466C

INTRODUCTION

SERIAL NUMBERS

Engine Type	Engine Model Code (Kind)	Variation Code	Country of Origin	Serial Sequence Number
X DT-414 TURBOCHARGED	414	TH2 TS2	U (U.S.A.)	000501
DT-414B TURBOCHARGED	415	TH2	U (U.S.A.)	140001
D-466 NATURALLY-ASPIRATED	466	DU2 DC2	U (U.S.A.)	000501
DT-466 TURBOCHARGED	466	TH2 TC2 TU2 TS2	U (U.S.A.)	000501
DT-466B TURBOCHARGED	467	TH2 TC2 TU2 TS2	U (U.S.A.)	075001
DT-466C TURBOCHARGED	468	TC2 TU2 TH2	U (U.S.A.)	400001
DTI-466C TURBOCHARGED INTERCOOLED	468	BH2	U (U.S.A.)	400001

Usually only sequence numbers without preceding zero(es) are shown in the parts list. When necessary, Country of Origin and Variation Codes may also be shown, in which case the preceding zero(es) of the sequence number will be included.

Variation Code Example:

T = Turbocharged	H2 = Rubber Tired Loader
D = Naturally Aspirated	C2 = Crawler Tractor
B = Turbocharged and Intercooled	S2 = Scraper
	U2 = Galion

The engine serial numbers are stamped on the upper left hand side of the engine crankcase below the intake manifold.