

1  
350 C

T 36888

2  
A

3  
000000

4  
T

350C CRAWLER LOADER AND CRAWLER BULLDOZER

**SERIAL NUMBER LOCATION**

EACH 350C CRAWLER MAY HAVE FOUR SERIAL NUMBER PLATES: ONE FOR THE BASIC CRAWLER, ONE FOR THE PRODUCT IDENTIFICATION NUMBER PLATE, ONE FOR THE BACKHOE AND ONE FOR THE ENGINE.

THE BASIC CRAWLER SERIAL NUMBER PLATE IS LOCATED ON THE BATTERY BOX FRONT PLATE.  
THE PRODUCT IDENTIFICATION NUMBER PLATE IS LOCATED ON THE BATTERY BOX FRONT PLATE.  
THE BACKHOE SERIAL NUMBER PLATE IS LOCATED ON THE LEFT-HAND SIDE OF THE BACKHOE MAIN FRAME.  
THE ENGINE SERIAL NUMBER PLATE IS LOCATED BELOW AND TO THE REAR OF THE FUEL PUMP MOUNTING BOSS ON THE RIGHT-HAND SIDE OF THE CYLINDER BLOCK.

LEFT-HAND SIDE, RIGHT-HAND SIDE, FRONT AND REAR OF THE CRAWLER LOADER AND CRAWLER BULLDOZER ARE VIEWED BY FACING THE DIRECTION OF FORWARD TRAVEL.

LEFT-HAND SIDE, RIGHT-HAND SIDE, FRONT AND REAR OF THE BACKHOE AND BACKHOE COMPONENTS ARE DETERMINED WHEN SEATED IN THE BACKHOE OPERATING POSITION.

WHENEVER SERIAL NUMBERS ARE REQUIRED ON ALL WARRANTY CLAIMS OR CORRESPONDENCE PERTAINING TO THIS PRODUCT, IT IS EXTREMELY IMPORTANT THAT ALL TWELVE CHARACTERS BE FURNISHED. THIS POINT CANNOT BE OVEREMPHASIZED.

**BASIC CRAWLER SERIAL NUMBER**

<< T36888 UN01JAN94 >>

- |   |  |
|---|--|
| 1. DIGITS 1 THROUGH 4 DESIGNATE THE CRAWLER MODEL.  | 350 - 350C   |
| 2. DIGIT 5 DESIGNATES THE CRAWLER TYPE, FUEL, AND TRANSMISSION.   | A - DIESEL, LOADER<br>B - DIESEL, LOADER<br>E - DIESEL, INSIDE BULLDOZER<br>G - OUTSIDE BULLDOZER<br>J - DRAWBAR CRAWLER<br>W - WIDE TRACK |
| 3. DIGITS 6 THROUGH 11 DESIGNATE THE CRAWLER SERIAL NUMBER SHOWN IN THE SERIAL NUMBER COLUMN OF THIS CATALOG. |  |
| 4. DIGIT 12 DESIGNATES THE MANUFACTURER OF THE CRAWLER.   | T - JOHN DEERE DUBUQUE WORKS   |