## **SERIAL NUMBERS**

Each JD450-C Crawler Loader has three serial numbers; one for the basic tractor, one for the engine, and one for the backhoe.

The basic crawler serial number is located on the battery box front plate.

 
The engine serial number plate is located below and to the reaf of the fuel pump mounting boss on the right side of the cylinder block. The engine serial number is not used in this catalog.

The 9300 Backhoe serial number plate is located on the left side of the backhoe main frame.

Left-hand side, right-hand side, front and rear of the crawler loader is viewed by facing in the direction of crawler loader forward travel.

Whenever serial numbers are required on all warranty claims or correspondence pertaining to this product, it is extremely important that all characters be furnished. This point cannot be overemphasized.

## AN EXPLANATION OF BASIC TRACTOR SERIAL NUMBER



1. Digits 1 through 4 designate the crawler model.

450C - JD450-C


2. Digit 5 designates the crawler type.

A - Loader

- Digits 6 through 11 designate the crawler serial number shown in the serial number column of this catalog.
- 4. Digits 12 and 13 designate the manufacturer of the crawler.

T - John Deere Dubuque Works

## AN EXPLANATION OF BASIC BACKHOE SERIAL NUMBER

 

1. Digits 1 through 4 designate the Backhoe model.

9300 - 9300 Backhoe

- 2. Digit 5 is used for separation.
- Digits 6 through 1,1 designate the portion of the backhoe serial number shown in the sefial number column of this catalog.
- 4. Digits 12 and 13 designate the manufacturer of the backhoe.

T - John Deere Dubuque Works