

mitsubishi crawler dozer serial numbers

BD2D (DD)

1972 20001 TO 20093
1973 20094 TO 20435
1974 20436 TO 20777
1975 20778 -

BD2D-S (DD/WSP)

1972 30001 TO 30180
1973 30181 TO 30520
1974 30521 TO 30860
1975 30861 -

BD2E (DD)

1975 10001 TO 10179
1976 10180 TO 10354
1977 10355 TO 10429

BD2E-S (DD/SWP)

1975 30001-
1976 - TO 30474
1977 30475 TO 30603

BD2E-SS (DD/SUPER SWP)

1977 40282 TO 40353

BD2F (DD)

1977 1B000001 TO 1B000133
1978 1B000134 TO 1B000369
1979 1B000370 TO 1B000703
1980 1B000704 TO 1B001034
1981 1B001035 TO 1B001250
1982 1B001251 TO 1B001489
1983 1B001490 TO 1B001722
1984 1B001723 TO 1B001933
1985 1B001934 -

BD2F (DD/SWP)

1977 1B100001 TO 1B100181
1978 1B100182 TO 1B100611
1979 1B100612 TO 1B101028
1980 1B101029 TO 1B101587

BD2F (DPS)

1977 1B500001 TO 1B500109
1978 1B500110 TO 1B500319
1979 1B500320 TO 1B500494
1980 1B500495 TO 1B500701
1981 1B500702 TO 1B500820
1982 1B500821 TO 1B500974
1983 1B500975 TO 1B501100
1984 1B501101 TO 1B501213

1985 1B501214 TO -

BD2F-S (DD/SWP)

1977 1B100001 TO 1B100181

1978 1B100182 TO 1B100611

1979 1B100612 TO 1B101028

1080 1B101029 TO 1B101587

BD2F-S (DPS/SWP)

1977 1B600001 TO 1B600139

1978 1B600140 TO 1B600389

1979 1B600390 TO 1B600659

1980 1B600660 TO 1B600925

BD2F-SS (DD/SUPER)

1977 1B200001 TO 1B200156

1978 1B200157 TO 1B200438

1979 1B200439 TO 1B200702

1980 1B200703 TO 1B200996

