

TRANSMISSION

USAGE: Tractors serial No. 8399 and up

ITŁM	PART NO.	QTY.	DESCRIPTION
3	70648333	1	TRANSMISSION ASSEMBLY (Includes items 5 thru 8)(Standard)
1	70644800	1	TRANSMISSION ASSEMBLY (Includes items 5 thru 9)(Special)
2 3	70035018 70647563 70904208	16 2 18	CAPSCREW, 1/2"NF x 1-1/2" CAPSCREW, 12-point, 1/2"NF x 1-1/2" LOCKWASHER, 1/2"
4	70654294	1	GASKET, case to steering clutch housing
5		-	See TRANSMISSION INPUT SHAFT
6		(==)	See TRANSMISSION BEVEL PINION SHAFT
7		~	See TRANSMISSION CLUTCH SHAFTS
8		-	See TRANSMISSION CASE AND COVERS
9		-	See GROUND SPEED GOVERNOR
10	70659440 70919472	1 2	TUBE ASSEMBLY, oil jumper (Includes nuts) CONNECTOR, flare type, 5/8" tube, 1/2" NPT male
11	70659441 70921203	1 1	HOSE, oil supply (See HOSE PARTS) ELBOW, adjustable, 90°, flare type, 3/4" tube, 1-1/16" NF (Includes washer, nut and O-RING 70921206)


		æ	
marketing	TENER OF THE SEPTEMBERS OF THE EAST OF THE		12

TRANSMISSION CASE AND COVERS

* Tractors prior to serial No. 6151 ** Tractors serial No. 6151 and up


ITEM	PART NO.		Y. **	DESCRIPTION
1	70654310	1	1	CASE, transmission (If for tractors prior to #6500 also order RING 70638335 and PLUG 70921216; if for tractors prior to #6151 also include 1 each TUBE 70641972, ADAPTER 70641963, CLIP 70623235, ANGLE 70620604, CAPSCREW 70070467, O-RING 70921887, NUT 70911043 and LOCKWASHER 70904208)
	70920525	-	1	PLUG, pipe, hex-hd., 3/4"NPT (Not used when PUSH-START PUMP is installed)
	70919840	-	I	PLUG, pipe, hex-hd., 1/4"NPT (Not used when GROUND SPEED GOVERNOR is installed)
2)	70627352	1		GASKET, bottom cover
۲)	70642788	-	1	GASKET, bottom cover
3 {	70627354	1	1 -	COVER, bottom
٦ /	70642787	-	1	COVER, bottom
4	70035190 70904208		14 14	CAPSCREW, 1/2"NC x 1-1/2" LOCKWASHER, 1/2"
5	70035250	1	1	PLUG, drain
6	70667252	1	1	GASKET, drain plug
7 8 9	70632067 70606858 70023633	1 2 1	1 2 1	SCREEN, oil CAPSCREW, drilled-hd., 3/8"NC x 3/4" WIRE, locking, 1/16" x 12"
10 11 12 { 13 14 { 15 16	70627419 70035190 70035190 70035236 70035236 70035190 70035236 70041877 70041917 70904208 70910244	1 13 1 - 1 1 1 - 4 1 21 3	1	COVER, front CAPSCREW, 1/2"NC x 1-1/2" CAPSCREW, 1/2"NC x 1-1/2" CAPSCREW, 1/2"NC x 1-3/4" CAPSCREW, 1/2"NC x 1-3/4" CAPSCREW, 1/2"NC x 1-1/2" CAPSCREW, 1/2"NC x 1-3/4" CAPSCREW, 1/2"NC x 1-3/4" CAPSCREW, 1/2"NC x 3" CAPSCREW, 1/2"NC x 3" CAPSCREW, 1/2"NC x 3-1/4" LOCKWASHER, 1/2" WASHER, plain, SAE std., 1/2"
17	70654798	1	1	GASKET, front cover
18	70624695	3	3	PIN, dowel, front cover
19	70623804	3	3	RING, snap, dowel pin
20 21	70624520 70044249 70904206	1 10 10	1 10 10	FILLER, oil CAPSCREW, 3/8"NC x 1-1/8" LOCKWASHER, 3/8"
22	70627346	1	1	GASKET, oil filler
23	70035250	1	1	PLUG, oil filler

(Continued)

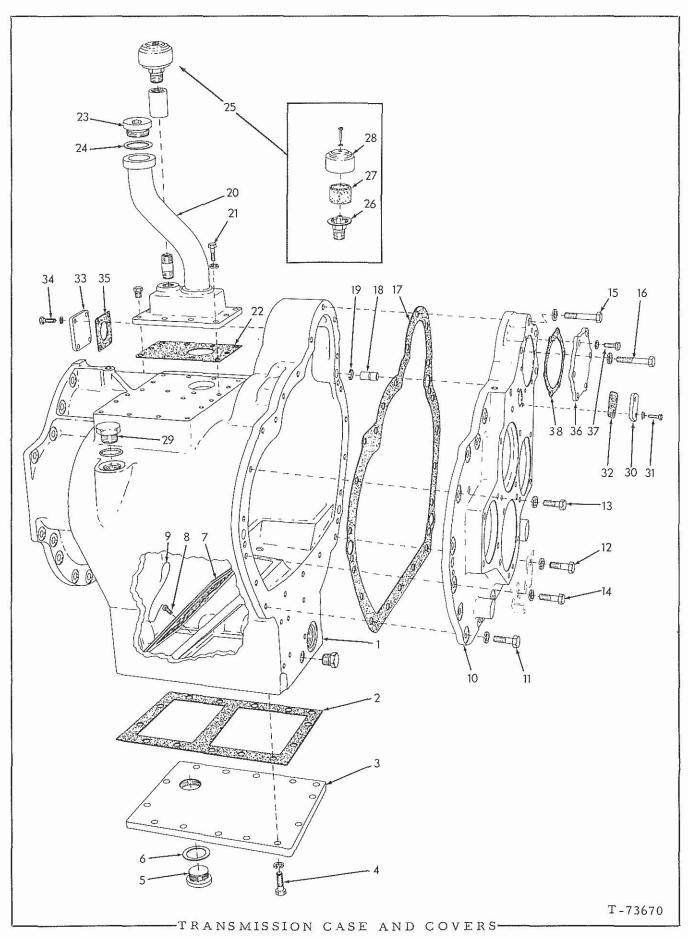


TRANSMISSION CASE AND COVERS

ITEM	PART NO.	QTY.		DESCRIPTION	
24	70667252	1 1	l	GASKET, oil filler plug	
25	73002766 70901767 70902170	1 1 1 1 1 1		BREATHER ASSEMBLY (Consists of item COUPLING, pipe, 3/4"NPT NIPPLE, pipe, 3/4"NPT	ns 26 thru 28)
26	73002767	1 1	1	BASE, breather	
27	73002769	1 1	l	ELEMENT, breather	
28	73002768 70914172 70904203	1 1	1 1 1	CAP, breather SCREW, machine, #10-24NF x 1-1, LOCKWASHER, #10	/4"
29	70921216	- 1	1	PLUG, closure (Includes O-RING 7092121 tractor #6500)	4)(Effective with
30 31	70631885 70035439 70904206	1 1 2 2 2 2		COVER, small hole CAPSCREW, 3/8"NC x 1" LOCKWASHER	
32	70643810	1 1	1	GASKET, small hole cover)
33 34	70630584 70045295 70904205	- 4	1 4 4	COVER, governor mounting hole CAPSCREW, 5/16"NC x 1" LOCKWASHER, 5/16"	Not used on transmissions
35	70624706	- 1	l	GASKET, governor mounting hole cover	equipped with GROUND SPEED GOVERNOR
36 37	70643081 70035439 70904206	- 6	1 6 6	COVER, large hole CAPSCREW, 3/8"NC x 1" LOCKWASHER, 3/8"	SEEED GOVERNOR
38	70643080	- 1	1	GASKET, large hole cover	

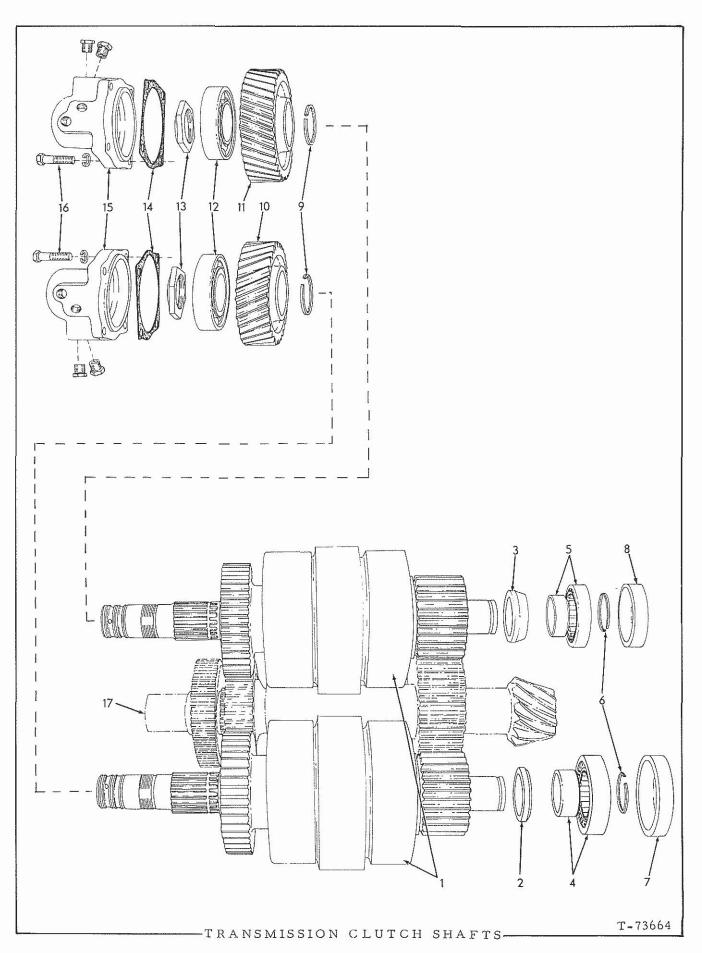

TRANSMISSION CLUTCH SHAFTS

ITEM	PART NO.	QTY.	DESCRIPTION
1	70643561	2	CLUTCH AND SHAFT ASSEMBLY (See page 137 for parts)
2	70639508	1	SPACER, rear bearing, left clutch
3	70639507	1	SPACER, rear bearing, right clutch
4	70623963	1	BEARING, roller, left clutch, rear
5	70091375	1	BEARING, roller, right clutch, rear
6	70050292	2	RING, snap, clutch bearings, rear
7	70632794	1	PLUG, cup,left clutch rear bearing (4-3/4" diam.)
8	70632793	1	PLUG, cup, right clutch rear bearing (4" diam.)
9	70623969	2	RING, snap, clutch shaft
10	70639505	1	GEAR, driving, left clutch (33 teeth)
11	70639504	1	GEAR, driving, right clutch (38 teeth)
12	70647972	2	BEARING, ball, front end
13	70639761	2	NUT, clutch shaft
14	70629223	2	GASKET, oil collector
15	70639502 70920333	2 4	COLLECTOR, oil PLUG, pipe, hex-hd., 3/8"NPT
16	70035236 70904208	8	CAPSCREW, 1/2"NC x 1-3/4" LOCKWASHER, 1/2"
17		-	See TRANSMISSION BEVEL PINION SHAFT

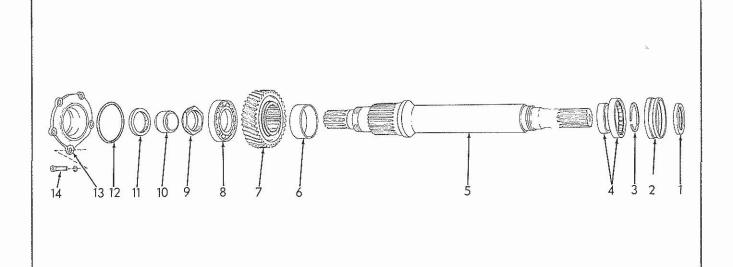

- TRANSMISSION INPUT SHAFT -

Γ-73663


ITEM	PART NO.	QTY.	DESCRIPTION
1	70638336	ĭ	SEAL, oil, rear end
2	70638334	1	RETAINER, rear oil seal
3	70624783	1	RING, snap, shaft
4	70623974	1	BEARING, roller
5	70676213	1	SHAFT
6	70624174	1	SPACER, drive gear
7	70623999	1	GEAR, drive (36 teeth)
8	70623966	1	BEARING, ball
0	70623985	1	NUT, bearing retaining (Used prior to tractor #6014)
9 (70639762	1	NUT, bearing retaining (Elastic stop)(Effective with tractor #6014)
10	70624139	1.	SLEEVE, wear, oil seal
11	70628940	1	SEAL, oil, front end
12	70629286	1	O-RING, sealing, retainer
13 14	70624177 70035236 70904208	1 5 5	RETAINER, front oil seal CAPSCREW, 1/2"NC x 1-3/4" LOCKWASHER, 1/2"

CLUTCH AND SHAFT ASSEMBLY 643561

USAGE: See page 135


ODAG	r. see page		
ITEM	PART NO.	QTY.	DESCRIPTION
		v	NOTE: All quantities indicated are for one (1) assembly only.
1	73037629	3	RING, shaft sealing, end
2	73037646	5	WASHER, thrust
3	73037645	4	BEARING, thrust
4	73037615	4	BEARING, roller, clutch gear
5	70639591	1	SPACER, bearing, high speed gear (7/16" wide)
6	70639594	1	SPACER, bearing, low speed gear (13/16" wide)
7	70639622	1	GEAR AND DRUM, high speed (41 teeth)
8	70639617	1	GEAR AND DRUM, low speed (26 teeth)
9	73037638	2	SPACER, clutch hub
10 11	70639596 73037641	4 4	RETAINER, clutch hub (half only) CAPSCREW, thin-hd., 5/16"NF x 1/2"
12	70643571	2	HUB, clutch (If for tractors prior to #6163 also order RETAINER 70643572)
13	70642113	16	PLATE, friction, outer
14	70642146	16	PLATE, friction, inner
15	70189267	16	SPRING, clutch hub
16	70643572	. 2	RETAINER, clutch hub spring (If for tractors prior to #6163 rework HUB (item 12) per sketch S-3979)
17	70639572	2	RING, snap, spring retainer
18	70639584	1	RING, snap, actuating piston housing
19	70639597	1	PISTON, clutch actuating
20	70639567	1	SEAL, actuating piston
21	73037631	2	RING, shaft sealing, center
22	70639585	2	RING, carrier sealing
23	70642968 70907859	1	SHAFT ASSEMBLY (Includes items 24 thru 32) PLUG, pipe, hex-socket, 1/4"NPT
24	70052175	2	RING, snap, carrier retaining
25	70639609	2	PLATE, valve
26	70642148	1	CARRIER ASSEMBLY (Includes items 27 thru 29)
27	\	2	PLATE, flapper valve (Used prior to tractor #5937. Order GUARD 70642329 and 3 RIVETS 70639578)
	70642329	2	GUARD, flapper valve (Effective with tractor #5937)
28	70639579	2	VALVE, flapper

(Continued)

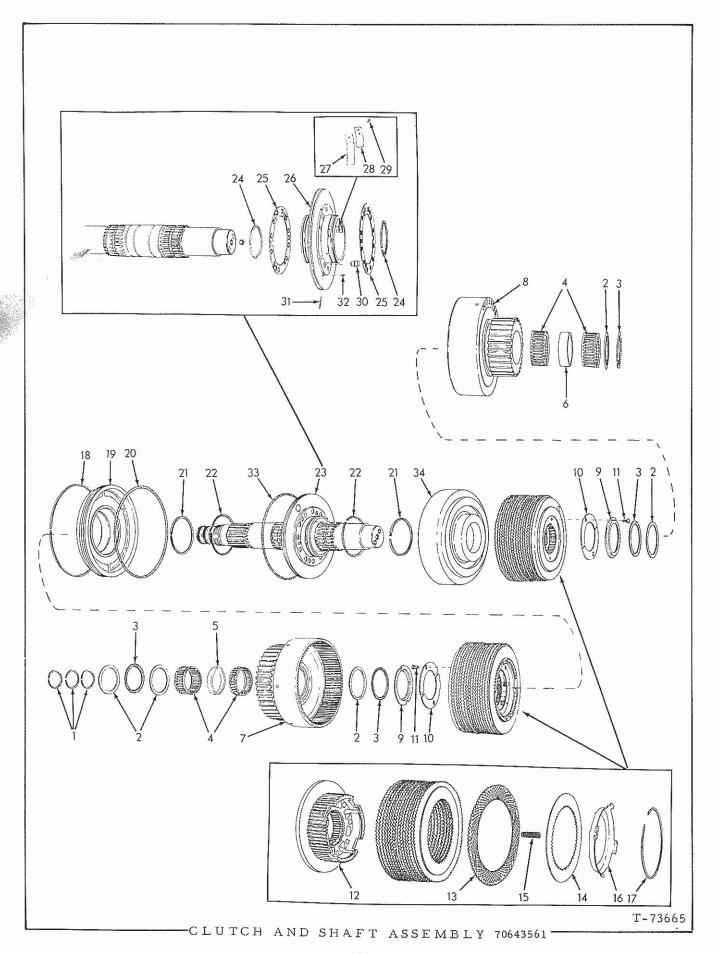

CLUTCH AND SHAFT ASSEMBLY70643561Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
29	70639578	6	RIVET, flapper valve guard (2 less used on tractors prior to #5937)
30	70639598	6	PISTON, valve actuating
31	73037768	6	PIN, piston stop
32	70922745	6	PIN, retaining, piston stop pin
33	70639576	1	O-RING, carrier
34	70639630	I	HOUSING, piston

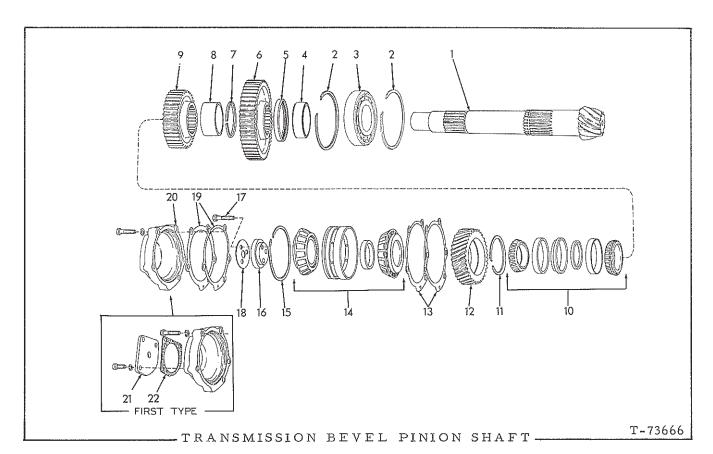

ITEM	PART NO.	QTY.	DESCRIPTION
1	70624129	1	PINION, bevel (12 teeth)
2	70638335	2	RING, snap, bearing retaining (1 less used on tractors prior to #6500)
3	70639655	1	BEARING, roller, rear end
4	70624137	1	SPACER, low speed gear
5	70623971	1	SEAL, oil
6	70624128	1	GEAR, low speed (54 teeth)
7	70623973	1	RING, snap, gear retaining
8	70624130	1	SPACER, high speed gear
9	70624142	1	GEAR, high speed (39 teeth)
10	70650724	1	BEARING, roller (Consists of 2 roller assemblies, 2 cups and 2 spacers. Serviced only as a unit)
11	70634670	1	RING, snap, idling gear
12	70623968	l	GEAR, idling (36 teeth)
1	70623953	3	SEIM, pinion adjustment (.005" thick)
13 <	70623954	7	SHIM, pinion adjustment (.007" thick) Use as req'd
	70623955	10	SHIM, pinion adjustment (.010" thick)

(Continued)

TRANSMISSION BEVEL PINION SHAFT (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
14	70082343	1	BEARING, roller, front end (Consists of 2 roller assemblies, 1 cup and 1 spacer. Serviced only as a unit)
15	70048705	1	RING, snap, front bearing
	70632066	1	WASHER, end (For units with PUSH-START PUMP)
16	70632066 70643028	1	WASHER, end (For units without PUSH-START PUMP)
17 18	70035073 70632166	3 1	CAPSCREW, 1/2"NF x 1-3/4" PLATE, capscrew locking
	70623956	4	SHIM, bearing retainer (.005" thick.)
19	70623956	4 3	SHIM, bearing retainer (.005" thick.) SHIM, bearing retainer (.007" thick.) Use as req'd
.0	70623959 70667400	1	RETAINER, front bearing (Tractors prior to unit #9623; also for all units equipped with PUSH-START PUMP)
20	70667400	1	RETAINER, front bearing (Tractors unit #9623 and up. Not for for unit equipped with PUSH-START PUMP)
	70035712 70904208	5 5	CAPSCREW, 1/2"NC x 2-1/4" LOCKWASHER, 1/2"
21	70643027 70035439 70904206	1 3 3	COVER, front bearing retainer CAPSCREW, 3/8"NC x 1" LOCKWASHER, 3/8" For units without PUSH- START BUMB prior to unit
22	70632065	1	GASKET, cover START PUMP prior to unit # 9623