


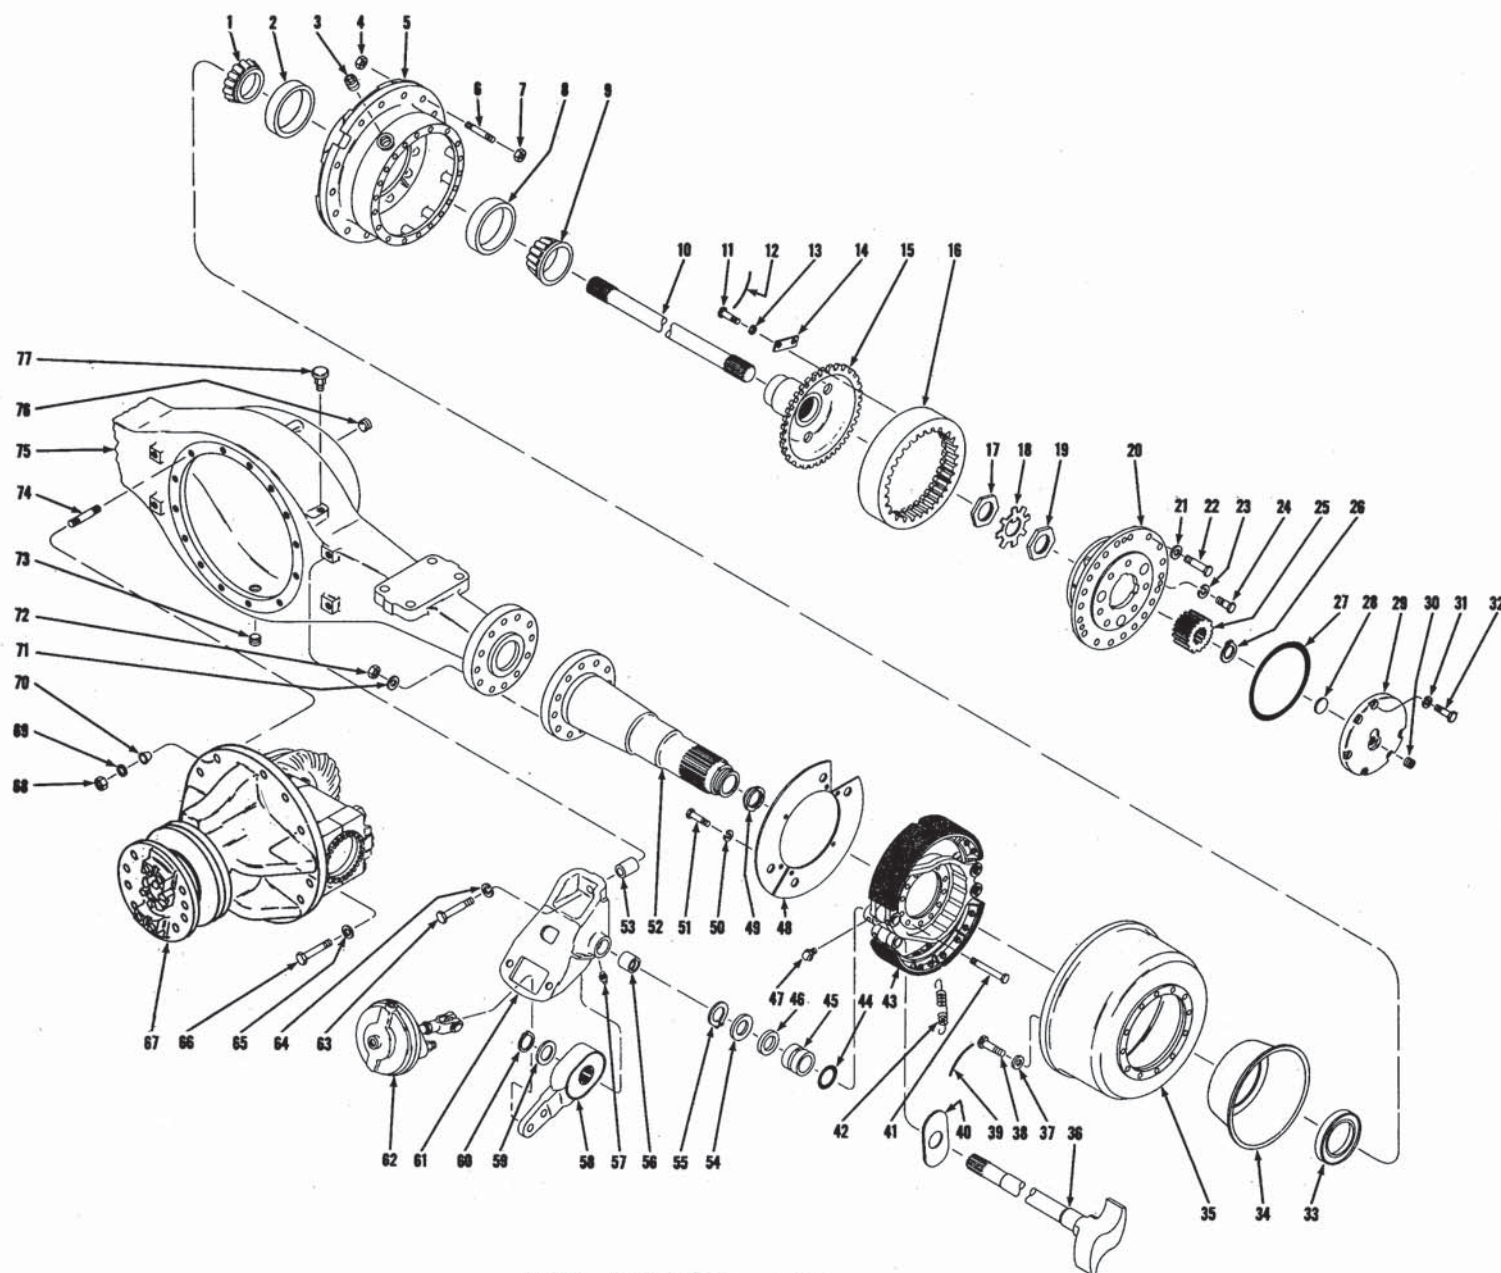

AXLE ASSEMBLY — REAR DRIVE

TS-7726-P

AXLE ASSEMBLY — REAR DRIVE

Item No.	Part No.	Description	No. Req'd.	Item No.	Part No.	Description	No. Req'd.
A	190533	AXLE ASSY (Inc. 1 thru 47, 49, 52 thru 77)	1	44	25K-60124	O-RING, Cam Shaft	2
1	774025	CONE, Inner Hub Bearing	2	45	107739	BUSHING, Brake Spider	2
2	774024	CUP, Inner Hub Bearing	2	46	11E-135	RETAINER, Cam Shaft Grease Fitting, Brake Spider	2
3	119369	PLUG, Hub Filler	2	47	12H-15	Grease	2
4	121062	NUT, Wheel Stud	20	48	118041	*COVER, Brake Dust	4
5	118383	HUB ASSY (Inc. 2, 8)	2	48A	112695	†PLATE, Dust Cover	2
6	120218	STUD, Wheel	20	49	119853	RING, Sun Gear Thrust	2
7	103522	NUT, Wheel	20	50	4E-06	*LKWSHR, Dust Cover	8
8	742262	CUP, Outer Hub Bearing	2	51	18C-612	*BOLT, Dust Cover	4
9	742263	CONE, Outer Hub Bearing	2	51A	18C-616	*BOLT, Dust Cover	4
10	106234	SHAFT, Axle	2	52	120604	SPINDLE	2
11	4C-820	BOLT, Hub to Gear	24	53	110941	SPACER, Air Chamber Brk.	4
12	—	†LOCKWIRE — 18 Gauge	—	54	107736	WASHER, Cam Shaft	2
13	4E-08	LKWSHR, Hub to Gear	24	55	660516	RING, Bushing Retaining	2
14	119214	PLATE, Hub to Gear Ret.	12	56	102189	BUSHING, Air Chamber Brk. Fitting, Air Chamber Brk.	2
15	119213	HUB, Internal Gear	2	57	10H-25	**ADJUSTER, Slack — B. W. #222485	2
16	119211	GEAR, Internal Ring	2	58	107247	WASHER, Slack Adjuster	2
17	110559	NUT, Spindle	2	59	107010	RING, Slack Adjuster Ret.	2
18	118786	LOCK, Spindle Nut	2	60	659764	BRACKET ASSY, Air Chamber (Inc. 56)	1
19	110559	NUT, Spindle	2	61	—	LEFT HAND	1
20	—	PLANET CARRIER — See Index	—	61A	107632	†RIGHT HAND	1
21	106547	WASHER, Carrier to Hub	40	61B	107631	**CHAMBER, Air — B. W. #279507 (Inc. 62A)	2
22	117225	BOLT, Carrier to Hub	40	62	117697	†DIAPHRAGM, Air Chamber	2
23	3E-09	LKWSHR, Planet Puller Hole	6	62A	946213	BOLT, Bracket to Housing	4
24	1C-908	BOLT, Planet Puller Hole	6	63	1C-1056	LKWSHR, Bracket to Hsg.	4
25	117448	GEAR, Sun	2	64	4E-10	WASHER, Carrier to Hsg.	11
26	224023	RING, Sun Gear Retaining	2	65	106547	BOLT, Carrier to Housing	7
27	113292	O-RING, Thrust Cap	2	66	17C-928	BOLT, Carrier to Housing	2
28	106457	WASHER, Sun Gear Thrust	2	66A	17C-932	BOLT, Carrier to Housing	2
29	815565	KIT, Sun Gear Thrust Cap (Inc. 27, 28, 30, 31)	2	66B	17C-940	BOLT, Carrier to Housing	2
30	11F-12	PLUG, Thrust Cap	2	67	—	DIFF. & CARRIER ASSY — See Index	—
31	112278	LKWSHR, Thrust Cap	12	67A	—	††PERMATEX #2 — Diff. & Carrier to Housing	—
32	1C-720	BOLT, Thrust Cap	12	68	64D-09	NUT, Carrier to Housing	3
33	112412	SEAL, Hub Oil	2	69	106547	WASHER, Carrier to Housing	3
34	117445	CATCHER, Oil	2	70	112295	DOWEL, Carrier to Stud	3
35	118805	DRUM, Brake	2	71	104412	WASHER, Brake & Spindle to Housing	20
36	—	CAM SHAFT, Brake	—	72	106998	NUT, Brake & Spindle to Housing	20
36A	110939	LEFT HAND	1	73	119469	PLUG, Housing Drain	1
36B	110940	†RIGHT HAND	1	74	112294	STUD, Carrier to Housing	3
37	104412	WASHER, Drum to Hub	24	75	120607	HOUSING, Axle	1
38	118381	BOLT, Drum to Hub	24	75A	12F-204	†PLUG, Housing Expansion	1
39	—	†LOCKWIRE, 18 Gauge	—	76	11F-12	PLUG, Housing Filler	1
40	107735	WASHER, Cam Shaft Thrust	2	77	106556	BREATHER, Housing	1
41	118349	BOLT, Brake & Spindle to Housing	20				
42	119650	SPRING, Brake Shoe Return	2				
43	—	BRAKE ASSY, Rear — See Index	—				

†Not Illustrated

§Not Sold Separately

‡As Required

*NOTE: Optional Equipment — Not furnished with machine. to service components of these parts.

**NOTE: Your Bendix-Westinghouse Distributor is equipped

WHEN ORDERING PARTS, ALWAYS STATE MODEL AND SERIAL NO. OF MACHINE