

Parts Ordering for: KT, KTA-1150 G

Genuine Cummins Parts and Service Facilities are worldwide. There are more than 3700 Cummins Sales and Service locations in the principal cities of the United States and Canada, and more than 800 Sales and Service locations situated elsewhere throughout the free world. Each distribution outlet is thoroughly equipped with technical data, factory-trained mechanics, modern equipment and a full, adequate stock of Genuine Cummins Parts.

For quicker and better service, your parts requirements should be ordered from your nearest Cummins Distributor or Dealer. At any of the locations prompt, intelligent, courteous service is a basic trademark. Each is ready and eager to help in every possible way through personal contact or through the mail — at your convenience.

The satisfactory ordering and receiving of parts by the purchaser is greatly dependent upon the proper use of available information. In order that all avoidable errors may be eliminated, the following instructions are offered as the purchaser's guide:

Write your order clearly, using a typewriter if possible.

Be sure to list the correct part number. If in doubt as to the correct part number, state the model and serial number of the engine on which the part is to be used. Part numbers are usually located in various places on the part itself.

When possible, arrange your purchase order in part number numerical sequence.

Always specify shipping instructions — "Best Way" is satisfactory if you have no preference.

State your company name and shipping address clearly.

Genuine Cummins Parts mean QUALITY! They're designed and engineered to fit best in your Cummins Diesel. Each part is made of the highest quality material—on the most accurate of machines—by the top craftsmen of the trade.

You can be sure a Genuine Cummins Part will fit better — do the job better — lessen the chances of costly breakdown. When you buy replacement parts, buy quality. Buy Genuine Cummins Parts!

Foreword

This Parts Catalog contains standard parts information for the following engine models:

ModelTypeConfiguration NumberKT-1150-GGenerator SetD-192035-GX02KTA-1150-GGenerator SetD-193036-GX02

Part numbers appearing in () are for identification purposes only and should not be used when ordering service replacement parts.

The form below is provided for your convenience and when properly filled out, will allow proper identification of your unit and the normal maintenance items. Parts information errors that could cause extended down time may be avoided if the information on this form is referred to when ordering parts from your Cummins Distributor or Dealer.


ALWAYS SPECIFY ENGINE MODEL AND SERIAL NUMBER WHEN ORDERING PARTS FROM THIS CATALOG

Engine Model	Engine	Engine Serial No						
MFG Make	Model _		Chassis No					
Fuel Pump Assembly No		Injector I	No					
Belt, Fan	Belt, Water Pump		_ Belt, Gen					
Element, Fuel Filter	Full Flo	w Lub. Filter						
Air Cleaner	Ву	/-Pass Lub. Filter						
Special Equipment								
				· · · · · · · · · · · · · · · · · · ·				
	•							
Cummins Distributor								


TABLE OF CONTENTS


(ENGINE)


Accessory Drive Pulley 28 Aftercooler 32, 33 Aftercooler Connection 28, 29 Air Cleaner 34 Alternator 42 American Bosch Governor 39 Barber-Coleman Governor 39 Barring Mechanism 22	Fuel Pump Damper12, 13Fuel Pump And Woodward Governor Drive36, 37Fuel Shut-Off Valve12, 13Fuel Tubing14Gasket Sets42Gear Cover6, 7Hand Hole Cover16, 17Injector12, 13
0 5 11 0 5 11 11 12 12	Instrument Panel (Engine)
Cam Followers, Cam Follower Housing 11	Lubricating Oil By-Pass Filter
Camshaft	Lubricating Oil Cooler
Camshaft Bushings	Lubricating Oil Coolei
Connecting Rod	Lubricating Oil Pump
Connecting Rod Bearing Shells	Main Bearing Shells
Crankcase Breather	Oil Gauge Bracket 16, 17
Crankshaft	Oil Pan 16, 17
Crankshaft Pulley	Oil Pan Adapter
Cylinder Block 1	Piston
Cylinder Head 8, 9	Piston Cooling Nozzle
Cylinder Kit	Piston Rings 3
Cylinder Liner	Push Rods
Dipstick	
Electrical Equipment 42	Rocker Levers, Housing And Cover 10
Engine Heaters 44	Safety Controls (Engine) 44
Engine Wiring	Starting Motor
Exhaust Manifold 40	Thermostat And Housing 28, 29
Fan And Fan Hub	Throttle Control
	Turbocharger
Fan Idler Assembly 24, 25	Vibration Damper
Flywheel Housing	Water Filter
Flywheel and Ring Gear	Water Outlet Connection
Front Engine Support	Water Pump
Fuel Coor Pump	Water Pump Connection
Fuel Gear Pump	woodward riyuradire Governor 30, 39
Fuel Pump	

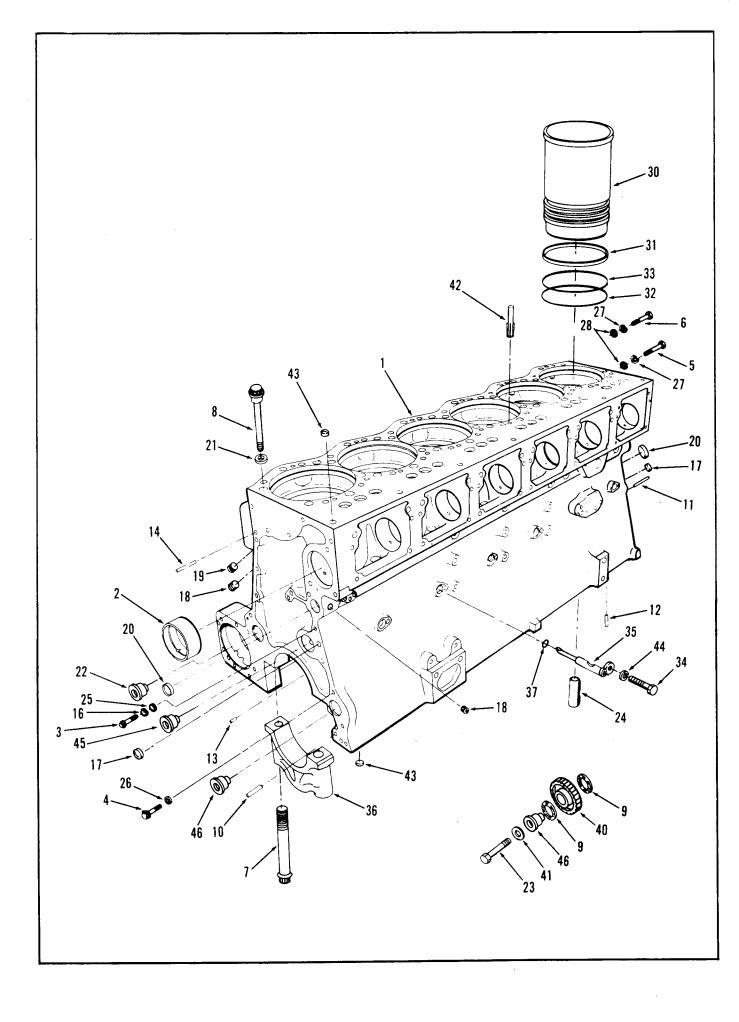

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ	REF. D. NO.
3011409 3002834 205021 205022 205023 205075 S-172-B 191772 S-127-C S-103-A 205221 3007238 207527 68445 60408-L 9226 67211	CYLINDER BLOCK All Models Block, cylinder (3001700) Bushing, camshaft Cap, main bearing (No. 2, 3, 4, & 5) Cap, main bearing (No. 1) Cap, main bearing (No. 6) Cap, main bearing (No. 7) Capscrew, gear housing Capscrew, gear housing Capscrew, flywheel housing Capscrew, flywheel housing Capscrew, main bearing cap Capscrew, cylinder head Capscrew Dowel, cylinder head Dowel, gear cover (Master) Dowel, flywheel housing Dowel, rear main bearing			3009549 3007710 205182 207524 205115 3012611 3012612	CYLINDER LINER All Models Kit, cylinder liner Liner, cylinder O-ring, cylinder (bottom) O-ring, cylinder (top) Seal, crevice OVERSIZE Kit, cylinder liner (.010) Kit, cylinder liner (.020) LINER SHIMS All Models Shim (.007) Shim (.008)	6 6 6 6 6 A/A/A/	30 32 33 31
124921 205366 3004739 3004686 S-604 3002022 3002369 3002158 147416 3008470 175830 3001962 3001962 3001962 205298 205059 S-602 127362 S-603 S-658 200861 3007632 130083	Dowel, thrust ring retainer (No. 6) Dowel, gear cover (Diamond) Assembly, idler (3004738) (Power steering) Bushing Lockwasher Nozzle, piston cooling O-ring Plug, pipe Cup plug, piston cooling Plug, pipe Plug, expansion (cup type) Shaft, idler (water pump) Shaft, idler (camshaft) Shaft, idler (power steering) Tube Washer, plain Washer, thrust	2 1 1 2 11 6 6 2 2 1 1 1 1 3 6 9 2 12 12 3 8 2	13 14 40 16 35 37 18 17 19 20 22 45 46 24 21 25 26 27 28 41 43 9	205742 205743 205744 205745 205746	Shim (.008) Shim (.009) Shim (.020) Shim (.031) Shim (.062)	A/ A/ A/	R R R
S-102-A S-605	MOUNTING PARTS All Models Capscrew, piston cooling nozzle (5/16" fine, 3/4" long) Lockwasher (5/16")	6	34 44				

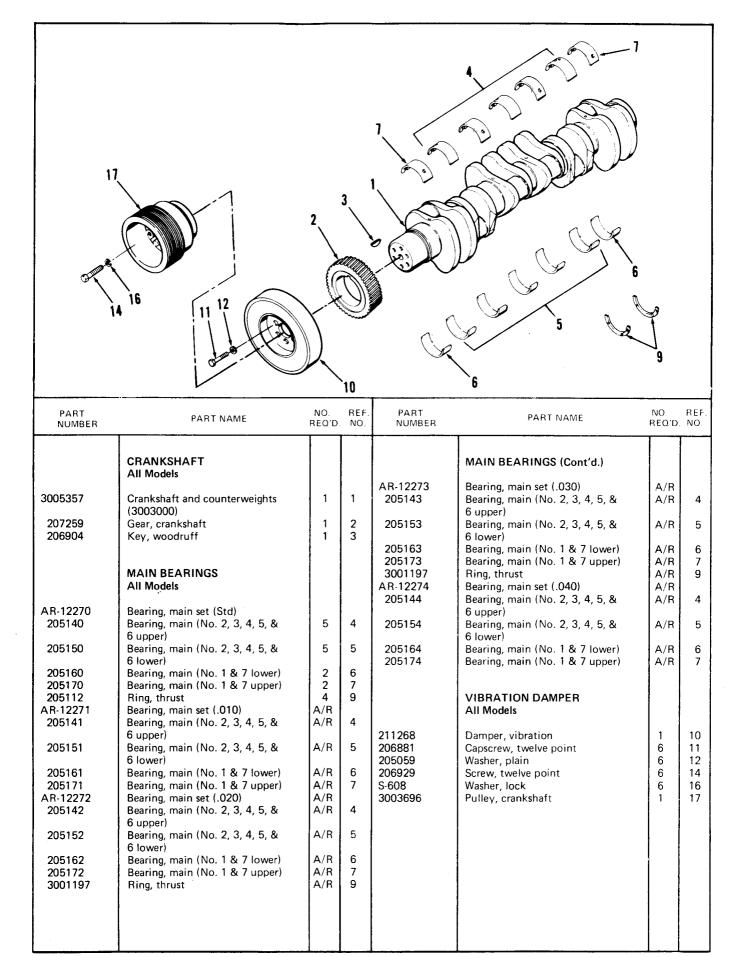


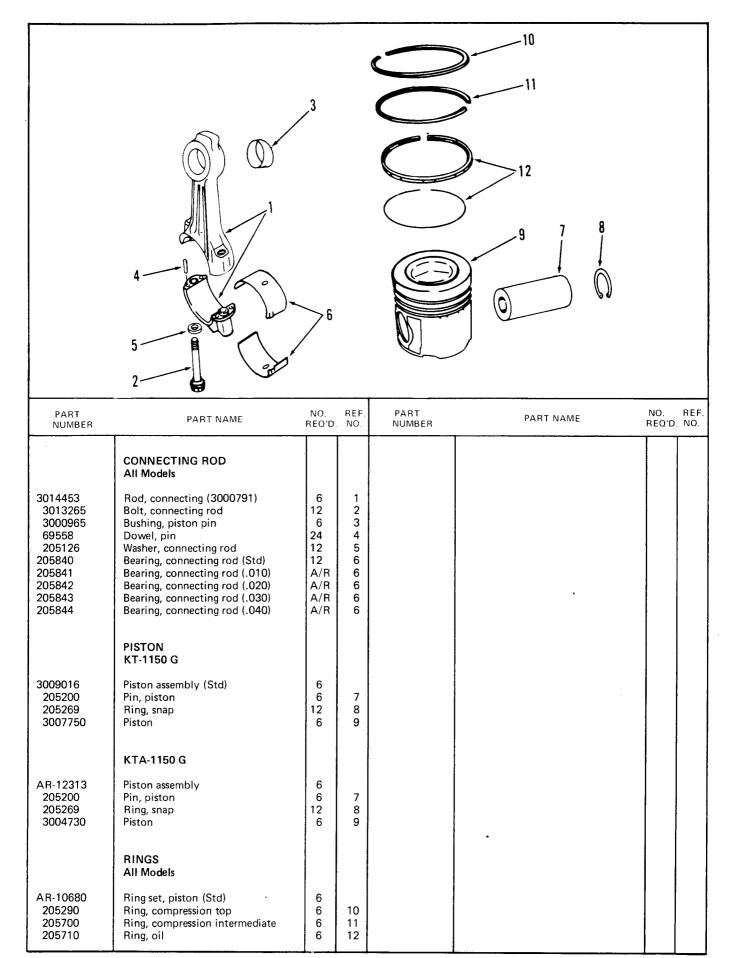

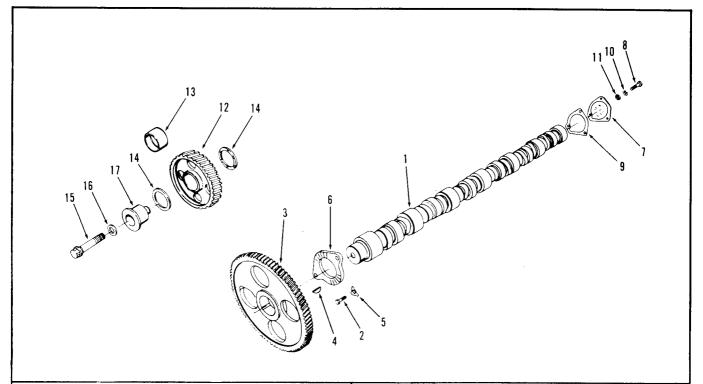


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
	CAMSHAFT All Models						!
207770 S-112 3008970 S-302 68908 3007971	Camshaft Capscrew Gear, camshaft Key, camshaft Lockplate Plate, camshaft thrust	1 2 1 1 2	1 2 3 4 5 6				
	CAMSHAFT COVER All Models						
207373 S-112 205236 S-604 S-602	Cover, rear Capscrew Gasket, camshaft cover Lockwasher Washer	1 3 1 3 3	7 8 9 10 11				
	CAM IDLER GEAR All Models						
3004684 3004686	Gear, cam idler (3004599) Bushing, idler gear (precision bore)	1	12 13				
	MOUNTING PARTS All Models						
130083 207527 3200772 3001962	Washer, thrust Capscrew Washer, plain Shaft, idler	2 1 1	14 15 16 17				

					REQ'D. NO
	CAMSHAFT KEYS All K-6 Engines	G (Optional)			
			Change In		
	Part	Amount Of	Push Tube	Angle Of	
	Name	Offset	Travel	Offset	
200711	Key, camshaft	0.0070	0.0033	0 deg. 20'	1
		(0.179)	(0.084)		
200709	Key, camshaft	0.0150	0.0070	0 deg. 42'	1
		(0.381)	(0.178)	0 1 50/	4
200704	Key, camshaft	0.0197	0.0095	0 deg. 56'	1
		(0.500)	(0.241)	1 des E'	1
200708	Key, camshaft	0.0230	0.0110 (0.27 9)	1 deg. 5'	'
200700	1/ a	(0.584) 0.0328	0.0155	1 deg. 33'	1
200706	Key, camshaft	(0.833)	(0.394)	1 deg. 55	•
200714	Key, camshaft	0.0390	0.0185	1 deg. 50'	1
200714	icey, carristian	(0.991)	(0.470)		
206782	Key, camshaft	0.0110	0.0055	0 deg. 31'	1
	, ,	(0.279)	(0.140)	-	
216294	Key, camshaft	0.0035	0.0017	0 deg. 10'	1
		(0.089)	(0.043)		
3000491	Key, camshaft	0.0270	0.0135	1 deg. 16'	1
		(0.686)	(0.343)	4 1 40/	
3000492	Key, camshaft	0.0360	0.0180	1 deg. 42'	1
		(0.914)	(0.457)	0 4 1/	1
3000493	Key, camshaft	0.0430 (1.092)	0.0215 (0.546)	2 deg. 1'	1
2000404	Var. samabaft	0.0470	0.0235	2 deg. 12'	1
3000494	Key, camshaft	(1.194)	(0.597)	2 deg. 12	
3000495	Key, camshaft	0.0510	0.0256	2 deg. 24'	1
3000493	iccy, cumstare	(1.295)	(0.650)	3	·

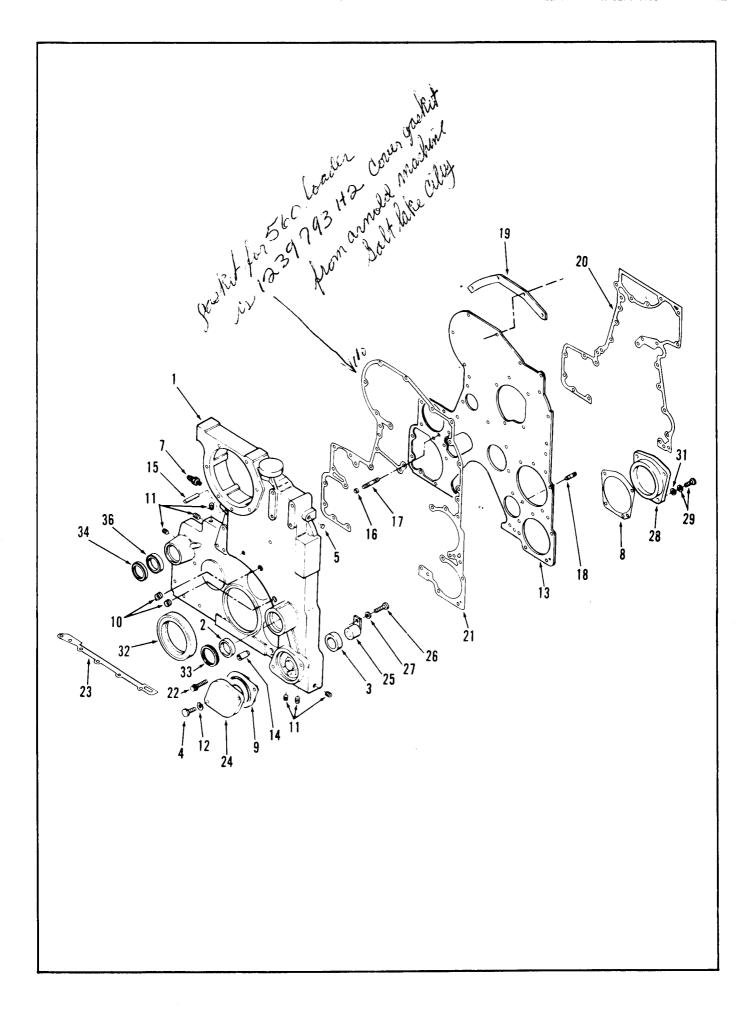



PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF NO.
3017318 132770 205133 132770 S-113 175831* S-1039-A 205792 3008400 67622 3002158 111445 3007658 70645 102957 3019961	GEAR COVER All Models Gear, cover (3011376) Bushing, air compressor drive Bushing, power steering drive Bushing, water pump drive Capscrew Cup plug, barring Connector, male Flange, blind plug Gasket, front hydraulic Plug, pipe Plug, pipe Washer Assembly, gear cover plate (3007363) Dowel, puller Dowel	1 1 1 2 1 1 1 1 2 6 2 1	1 2 3 36 4 5 7 24 9 10 11 12 13 14 15 16	205792 S-113 111445 3008400 3003123 S-103-D S-604	HYDRAULIC PUMP DRIVE FRONT COVER All Models Flange, blind Capscrew Lockwasher Gasket Plug, blind flange Capscrew Lockwasher HYDRAULIC PUMP DRIVE REAR COVER All Models Cover Capscrew and lockwasher Gasket	1 2 2 1 1 1 1	24 4 12 9 25 26 27
3200754 206217 3200642 3200944 3007376 S-102-D S-103-D S-105 S-137 S-199-B S-604 S-223 S-602 127362 205375 3017319† 3016792 3016788 3016794	Nut, plug Stud Plate, clamping Gasket, plate to block Gasket, cover to plate MOUNTING PARTS All Models Capscrew (3/8-16 x 3) Capscrew (3/8-16 x 3-1/2) Capscrew (3/8-16 x 2-1/2) Capscrew (3/8-16 x 3-3/4) Lockwasher Nut, hexagon Washer, plain Washer, plain Capscrew (3/8-16 x 2-1/4) Gasket, oil pan adapter Seal, oil (crankshaft) Seal, oil (accessory drive) Seal, oil (water pump drive)	1 1 1 1 1 1 1 1 2 5 20 2 5 10 1 1 1 1 1	17 18 19 20 21 22 23 32 33 34	127362	NOTES *175831 cup plug must be removed when using barring device 3018914. †3017319 gasket is a service gasket used when front gear cover and plate are removed but it is not necessary to remove oil pan adapter. For installation of 3017319 gasket see K-6 shop manual.	4	31

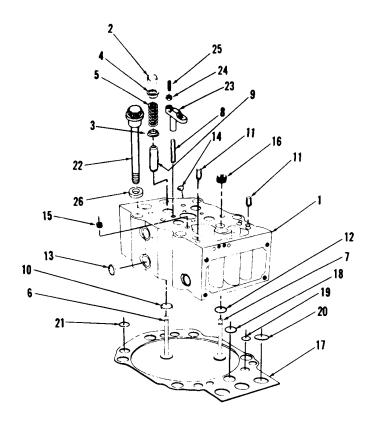


CYLINDER HEAD

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
3021692	CYLINDER HEAD All Models Head, cylinder (3021691)	6	1				
3021692 205091 3001663 205094 205208 3007225 207241 205169 3021693 205093 68445 3009109 205401 206224 3002158 3013257	Collet, valve Guide, valve spring Retainer, valve spring Spring, valve Valve, exhaust Valve, intake Guide, crosshead Guide, valve stem Insert, valve seat Pin, groove Plate, air deflector Plug, expansion Plug, expansion Plug, pipe Plug, pipe	48 24 24 24 12 12 12 24 24 12 48 12 6	2 3 4 5 6 7 8 9 10 11 12 13 14 15 16				
	MOUNTING PARTS All Models						<u>.</u>
3022340 205858 205852 205855 207448 3007238 205121 203131 147389 205059	Gasket, cylinder head (205479) Grommet, cylinder head bolt Grommet, cylinder head oil Grommet, cylinder head push-rod Grommet, cylinder head water Capscrew, cylinder head Crosshead, valve intake & exhaust Nut Screw Washer, cylinder head	6 6 6 18 24 36 12 12 12 36	17 18 19 20 21 22 23 24 25 26				
	OVERSIZE VALVE SEAT INSERTS			i e			
	Diameter/Depth						
205945 205981 205982 205983 205984	.005 (0.13 mm)/Std .010 (0.25 mm)/Std .020 (0.50 mm)/.005 (.13 mm) .030 (0.76 mm)/.010 (.25 mm) .040 (1.02 mm)/.015 (.38 mm)	A/R A/R A/R A/R A/R					
	Be sure to measure insert before machining head or installing insert in head.						
		-					

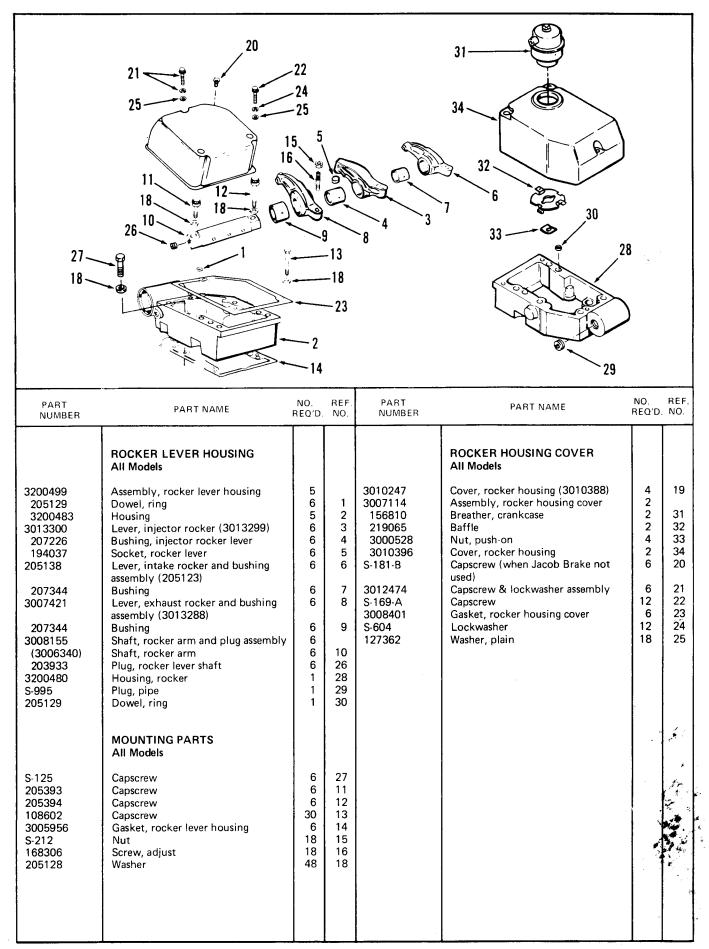


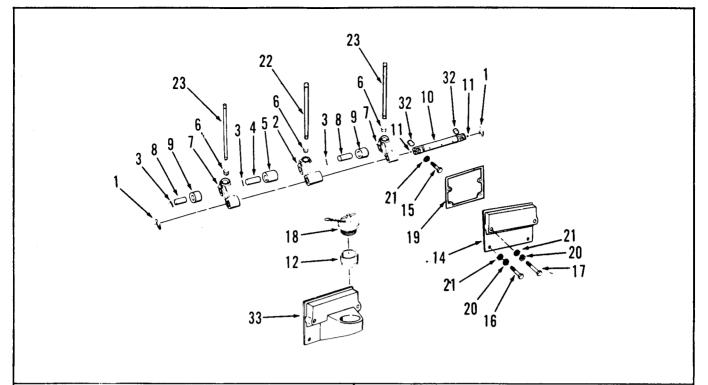


PART NUMBER	PART NAME	NO. REQ'D	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
	CAM FOLLOWER & HOUSING All Models				PUSH RODS All Models		
205439 3008427 205438 205068 3007120 107738 3008426 205438 205071 3007121 107738 205301 205227 3009631 3009632	Ring, retaining Follower, cam injector (206231) Lockwire, cam roller pin Pin, cam follower injector Roller, cam follower injector Socket, cam follower Follower, cam intake and exhaust (205069) Lockwire, cam roller pin Pin, cam follower intake and exhaust Roller, cam follower intake & exhaust Socket, cam follower Shaft and plug, cam follower Plug, cup Cover, cam follower Cover, cam follower	12 66 66 66 12 12 12 12 12 5	1 2 3 4 5 6 7 3 8 9 6 10 11 14 33	3017961 205492	Rod, push injector Rod, push intake and exhaust	6 12	22 23
3002886 S-103-D S-126 107981 3002993 3008404 S-604 101264 127362	MOUNTING PARTS All Models Capscrew, hexagon Capscrew Capscrew Cap, oil filler Dowel Gasket, cam follower cover Lockwasher Tube, oil filler Washer, plain	12 12 12 1 12 6 24 1 24	15 16 17 18 32 19 20 12 21				

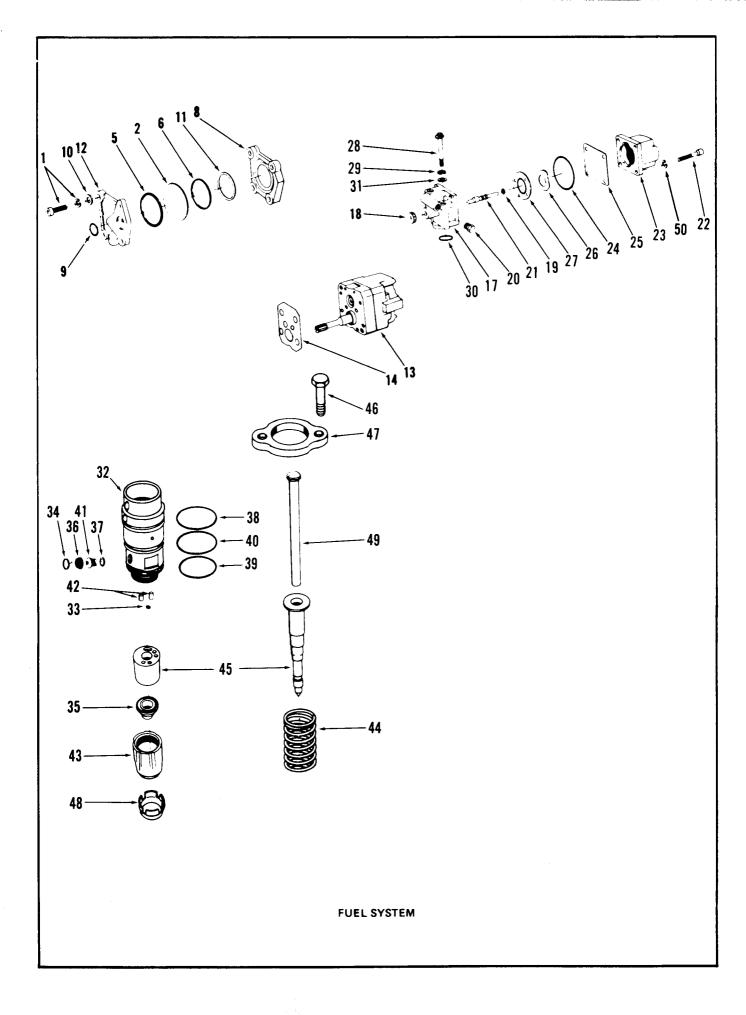


PART NUMBER	PART NAME	NO. REO'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
performance and Distributor or D rebuild and calib Caution: Do no	PT FUEL SYSTEM PT Fuel Pump is calibrated to obtain the diffuel economy for your engine. Your lealer has the special tools required for pration. It disturb the fuel pressure settings or the serious damage to your engine may recover.	Cumm comple	te	70790 181466 154087 67684	MOUNTING PARTS All Models Capscrew, socket head Lockwasher "O" ring Washer, plain	2 2 1 2	28 29 30 31
calibration are li	ystem parts which can be replaced with sted here. Your Cummins Distributor number of your complete PT Fuel Puralog. FUEL PUMP DAMPER	will red	ord	3016675 205463 167157 174299	KT-1150 G Injector, less link Adapter Ball, check Clip, injector filter screen	6 6 6	32 33 34
AR-12110 BM-76340 3017051 202897 100099 139988 153338 151900 70704 160514 153336 70704 181466 S-174-C	All Models Damper, fuel assembly Damper, fuel pump Capscrew and lockwasher Diaphragm, damper "O" ring "O" ring Plate Ring, sealing Washer, plain Washer, nylon Body Washer Lockwasher Capscrew	1 1 2 1 1 1 2 1 1 1 2 2 2 2 2	1 2 5 6 8 9 10 11 12	3003933 3008706 173086 144967 193736 205216 177282 203426 207245 205464 3016671* 165006 3006696 207244 205462	Cup Filter, screen Gasket, injector orifice plug "O" ring, injector body (top) "O" ring, injector body (bottom) "O" ring, injector body (middle) Orifice Pin, spiral Retainer, injector cup Spring, injector Barrel and plunger Capscrew Clamp Ring, sealing Link, injector plunger	6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	35 36 37 38 39 40 41 42 43 44 45 46 47 48
	GEAR PUMP All Models		40	OMIT	KTA-1150 G Same as above except		
BM-90273 210647	Pump, gear (3/4" R.H.) Gasket, gear pump	1 1	13	OMIT: 3016675 3003933	Injector, less link Cup	6	35
	SHUTDOWN VALVE (Rapid Restart) All Models			ADD: 3016676 3001314	Injector, less link Cup	6 6	35
3018453 BM-65725 129826 129838 190876 70295 3000266 3017995 196057 3019299 3019298 3018047 196066 129888 129839 129768 129827 S-607	Valve, shut-down (24 volt) Valve, shut-down Housing, valve Knob, override "O" ring shaft Plug, pipe Shaft, override Actuator Disc, valve Disc, actuator Housing, actuator Capscrew, fillister head Coil "O" ring, coil to housing Shield, fuel Spring Valve, shut-off Lockwasher	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	17 18 19 20 21 22 23 24 25 26 27 50	206326 200817 109859 S-610 S-622	*Items in 3016671 not sold separately. Available as assembly only. FUEL PUMP MOUNTING All Models Capscrew Gasket Coupling, spider Lockwasher Washer, plain	4 1 1 4 4	

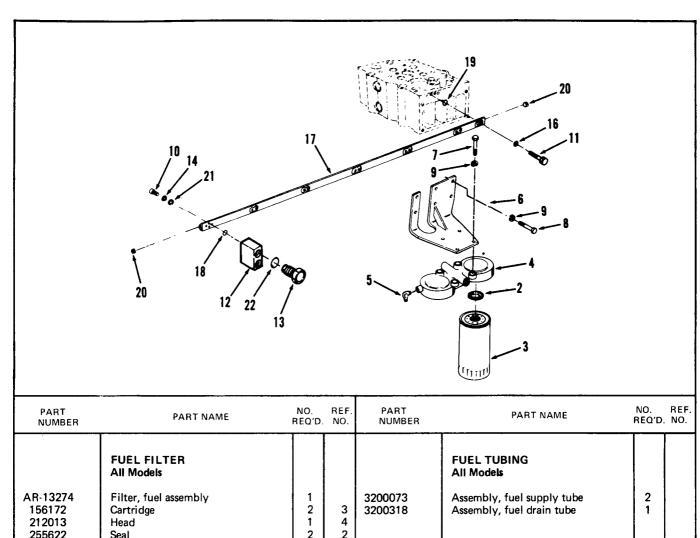


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
AR-13274 156172 212013 255622 129659	FUEL FILTER All Models Filter, fuel assembly Cartridge Head Seal Elbow	1 2 1 2 2	3 4 2 5	3200073 3200318	FUEL TUBING All Models Assembly, fuel supply tube Assembly, fuel drain tube MOUNTING PARTS All Models	2	
3001348 S-103-D 205354 S-606-A	MOUNTING PARTS All Models Bracket, fuel filter Capscrew Capscrew Lockwasher FUEL MANIFOLD All Models	1 4 4 8	6 7 8 9	S-105 3200386 3200387 206056 44092-P S-604 3002158 3002150 176288 127362	Capscrew Clamp, tube Clamp, tube Connector, tube Cover, shipping Lockwasher Plug, pipe Seal, ferrule Tee Washer, plain	2 2 2 2 1 2 1 2 1 2	
118226 3001811 207442 128014 127018 207441 100478 3001340 S-965-E 128006 3002150 206056	Capscrew, socket head Capscrew Connection, fuel manifold Lockwasher Washer, plain Manifold, fuel O-ring O-ring Plug, pipe Washer, plain Ferrule, rubber Fitting	2 12 1 2 12 1 2 12 4 2 2 2	10 11 12 14 16 17 18 19 20 21 22 13				
	*Fuel filter head listed on page 13.						

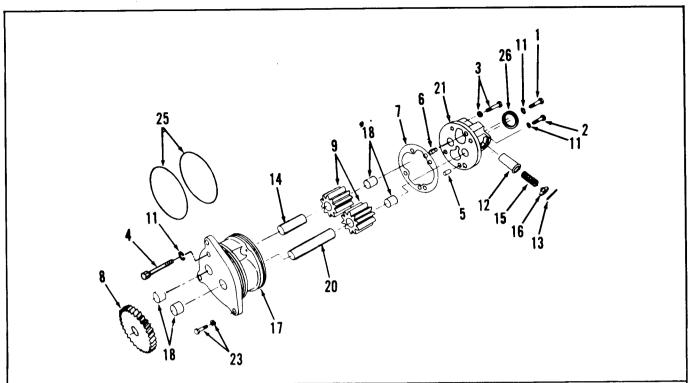


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	
AR-10588 Pump, lubr Capscrew (3 Capscrew (ricating oil 3/8" × 16 × 2-1/2") 3/8" × 16 × 2-3/4") and lockwasher assembly 3/8" × 16 × 4") pricating pump cating pump er ressure regulator	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			MOUNTING PARTS All Models O-ring, lubricating pump body Ring, rectangular sealing Capscrew and lockwasher		25 26 23

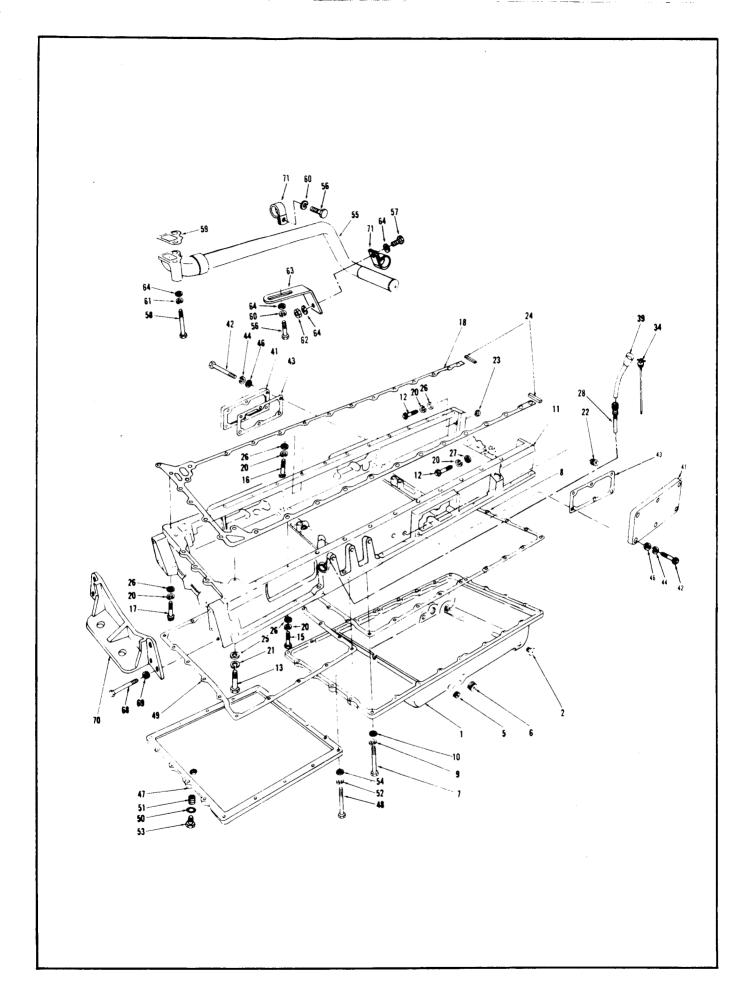


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
	OIL PAN All Models				OIL PAN ADAPTER COVER All Models		
3008538 3008468 3008470 69962 110907 67946	Pan, oil ⁻ Plug, pipe Plug, pipe (1") Plug, oil drain (1" 18 SAE special 2) Plug, oil Washer, plain	1 2 2 1 1 2	1 5 6 2	207306 S-120 3008407 67946 200845 S-604 69962 127362	Cover, oil pan adapter Capscrew (3/8" x 16 x 1-3/4") Gasket, adapter cover Washer, plain Insert, thread Lockwasher (3/8") Plug, oil pan drain Washer, plain (3/8")	1 18 1 1 1 18 1 18	47 48 49 50 51 52 53 54
S-120	MOUNTING PARTS All Models	00	-,		OIL SUCTION TUBE		
3010452 S-604 127362	Capscrew (3/8" x 16 x 1-3/4") Gasket, oil pan Lockwasher (3/8") Washer, plain (3/8")	28 1 28 28	7 8 9 10	3011049	All Models Tube, oil suction	1	55
127002	ADAPTER OIL PAN	20			MOUNTING PARTS All Models		
3007372 S-155 108707 137980 S-105 S-105 S-104 3007378 S-604 S-609 S-610 166484 3002158 153518 205241 S-689 127362 S-622	All Models Adapter, oil pan Capscrew (7/16" x 14 x 1-1/4") Capscrew (3/8" x 16 x 1-1/2") Capscrew (9/16" x 12 x 3-1/4") Capscrew (3/8" x 16 x 3-1/2") Capscrew (3/8" x 16 x 1-3/4") Capscrew (3/8" x 16 x 2-1/4") Capscrew (3/8" x 16 x 2-1/4") Gasket, oil pan adapter Lockwasher (3/8") Lockwasher Lockwasher (7/16") Plug, hollow hex Plug, pipe Seal, bolt Strip, rectangular sealing Washer, plain Washer, plain Washer, plain	1 2 5 1 2 27 1 1 35 1 2 3 1 4 2 1 35 2	11 12 13 15 16 17 18 20 21 22 23 24 25 26 27	S-112 3010593 137890 3008403 S-604 S-610 129069 3011220 S-602 3200706 S-173-A 127316 206343	Capscrew (3/8" x 16 x 1") Capscrew and washer Capscrew (7/16" x 14 x 4-1/2") Gasket, oil connection Lockwasher (3/8") Lockwasher Locknut Support, oil suction tube Washer, plain (3/8") Clip FRONT ENGINE SUPPORT All Models Capscrew (5/8" x 11 x 2-1/4") Lockwasher (5/8") Support, front engine	2 1 2 1 1 2 1 1 3 2 2	56 57 58 59 60 61 62 63 64 71
	OIL GAUGE BRACKET All Models						
3000508	Assembly, dipstick connector and tube	1	28				
3017289 3001345	Bayonet, oil gauge Tube, oil gauge	1	34 39				
	HAND HOLE COVER All Models	:					
207318 108707 205788 S-604 127362	Cover, hand hole Capscrew (3/8" x 16 x 1-1/2") Gasket, hand hole cover Lockwasher (3/8") Washer, plain (3/8")	3 18 3 18 18	41 42 43 44 46				

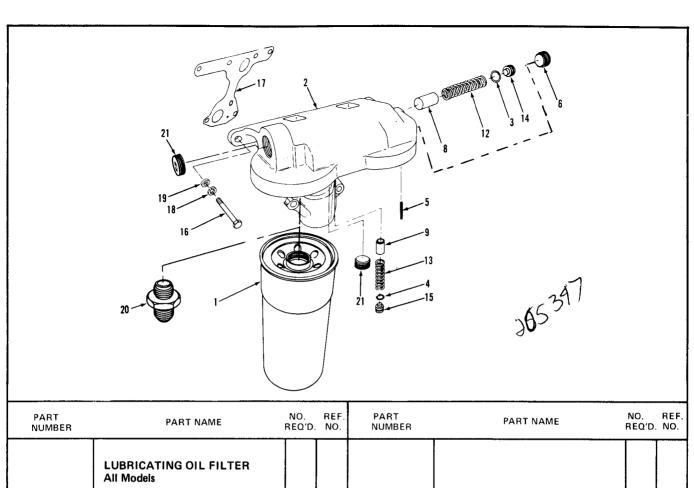


					nea b	. NO
LUBRICATING OIL FILTER All Models						
Element, oil filter Head, lubricating oil filter (3200666) Adapter, filter O-ring, rubber O-ring, rubber Pin, roll Pin, roll Plug, expansion Plug, pipe Plunger, bypass valve Plunger, piston cooling Spring, bypass valve Spring, piston cooling Stop, pressure regulator	2 1 2 1 1 1 2 1 1 1 1 1 1 1 1 1	1 2 20 3 4 5 6 8 9 12 13				
Stop, pressure regulator Plug, pipe MOUNTING PARTS All Models Capscrew Gasket, oil filter head	6	21 16 17				
Lockwasher Washer, plain	6 6	18 19				
	Element, oil filter Head, lubricating oil filter (3200666) Adapter, filter O-ring, rubber O-ring, rubber Pin, roll Pin, roll Plug, expansion Plug, pipe Plunger, bypass valve Plunger, piston cooling Spring, bypass valve Spring, piston cooling Stop, pressure regulator Stop, pressure regulator Plug, pipe MOUNTING PARTS All Models Capscrew Gasket, oil filter head Lockwasher	Element, oil filter Head, lubricating oil filter (3200666) Adapter, filter O-ring, rubber O-ring, rubber Pin, roll Pin, roll Plug, expansion Plug, pipe Plunger, bypass valve Plunger, piston cooling Spring, bypass valve Spring, piston cooling Stop, pressure regulator Stop, pressure regulator Plug, pipe MOUNTING PARTS All Models Capscrew Gasket, oil filter head Lockwasher 2 2 Capscrew Gasket, oil filter head Lockwasher 2 2 2 3 4 4 5 6 6 6 6 6 6 6 6 7 7 7 7 7	Element, oil filter Head, lubricating oil filter (3200666) Adapter, filter O-ring, rubber O-ring, rubber O-ring, rubber Pin, roll Pin, roll Pin, roll Plug, expansion Plug, pipe Plunger, bypass valve Plunger, piston cooling Spring, bypass valve Spring, piston cooling Stop, pressure regulator Stop, pressure regulator Plug, pipe MOUNTING PARTS All Models Capscrew Gasket, oil filter head Lockwasher 1 2 1 2 2 20 2 20 3 3 4 4 5 5 5 6 6 16 6 16 6 16	Element, oil filter Head, lubricating oil filter (3200666) Adapter, filter O-ring, rubber O-ring, rubber O-ring, rubber I	Element, oil filter	Element, oil filter

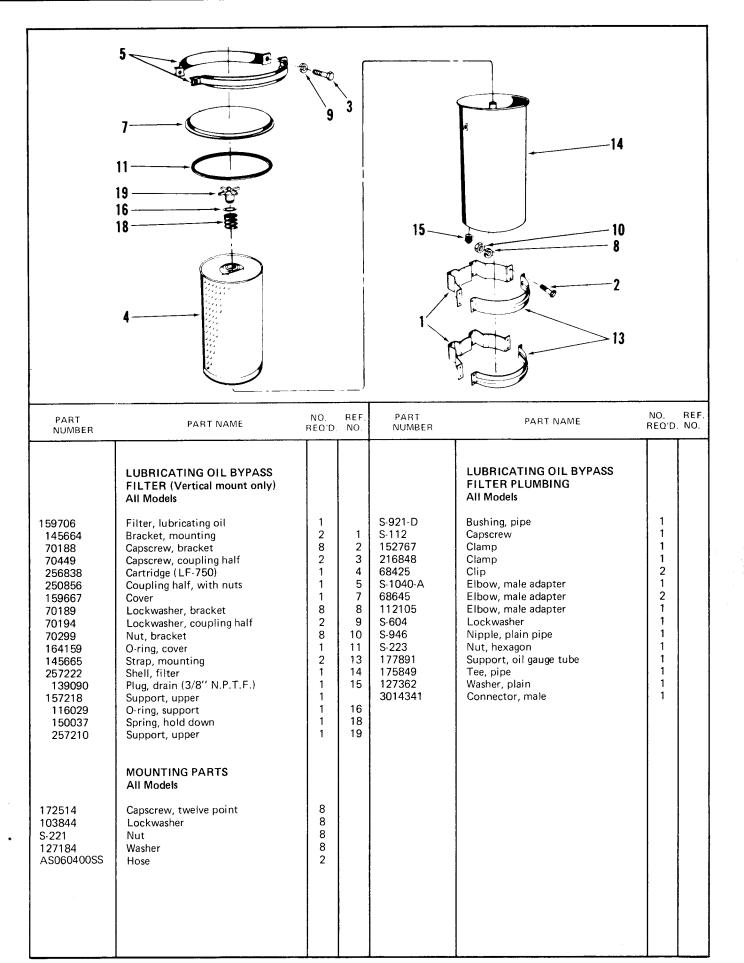

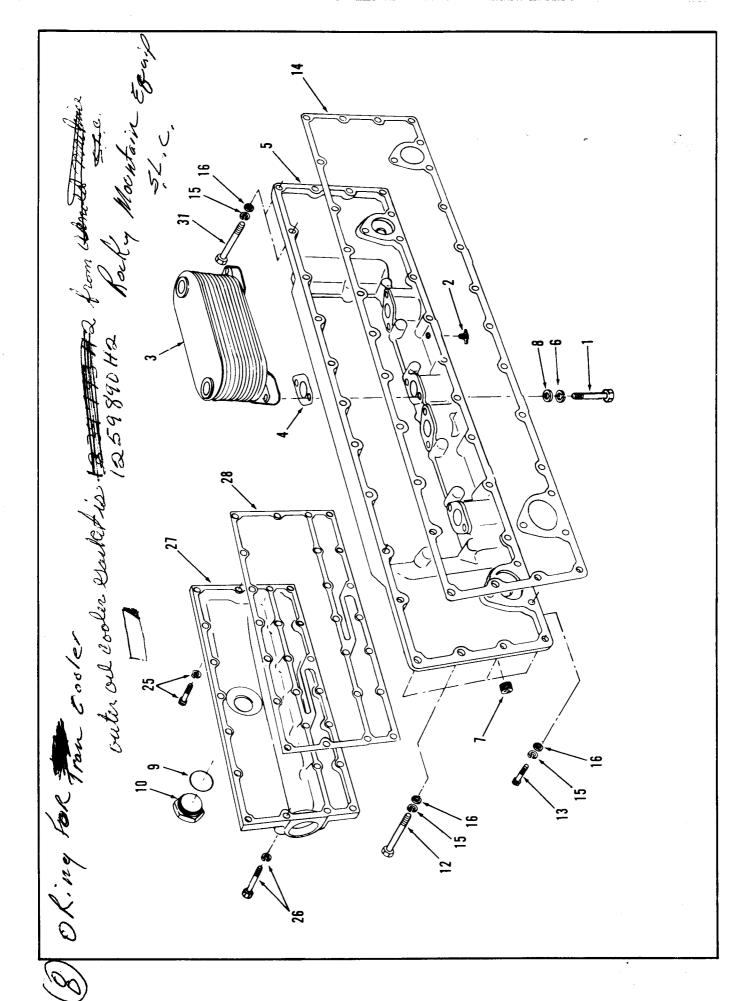


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF NO.
3008177 S-103-C S-923-E 3023079 206973 3006725	LUBRICATING OIL COOLER All Models Cooler, lubricating oil Capscrew Cock, drain Element, oil cooler Gasket, oil cooler element Housing, oil cooler	1 8 1 2 4	1 2 3 4 5 6				
S-604 3008470 145540 3200620	Lockwasher Plug, pipe O-ring Plug, heater hole MOUNTING PARTS	8 2 1 1	6 7 9 10				
S-137 S-199-A 108707 S-120 3200550 S-604 127362	All Models Capscrew Capscrew Capscrew Capscrew Gasket, oil cooler housing Lockwasher Washer, plain	5 16 8 3 1 26 26	31 12 13 14 15 8				
3012474 3012478 3010031	LUBRICATING OIL COOLER COVER All Models Capscrew, captive Capscrew, captive Cover, oil cooler	7 2 1	25 26 27				
3011627	Gasket, oil cooler cover	1	28				

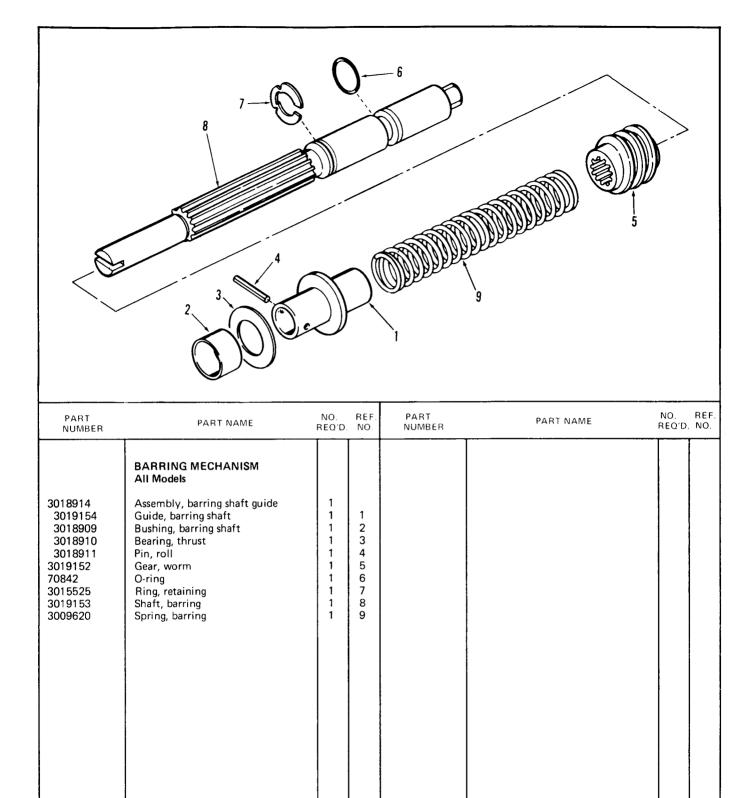


PARTS INDENTED ARE INCLUDED IN THE PART UNDER WHICH THEY ARE INDENTED

NOLES


and the second s	
M-100-100-100-100-100-100-100-100-100-10	
SE	

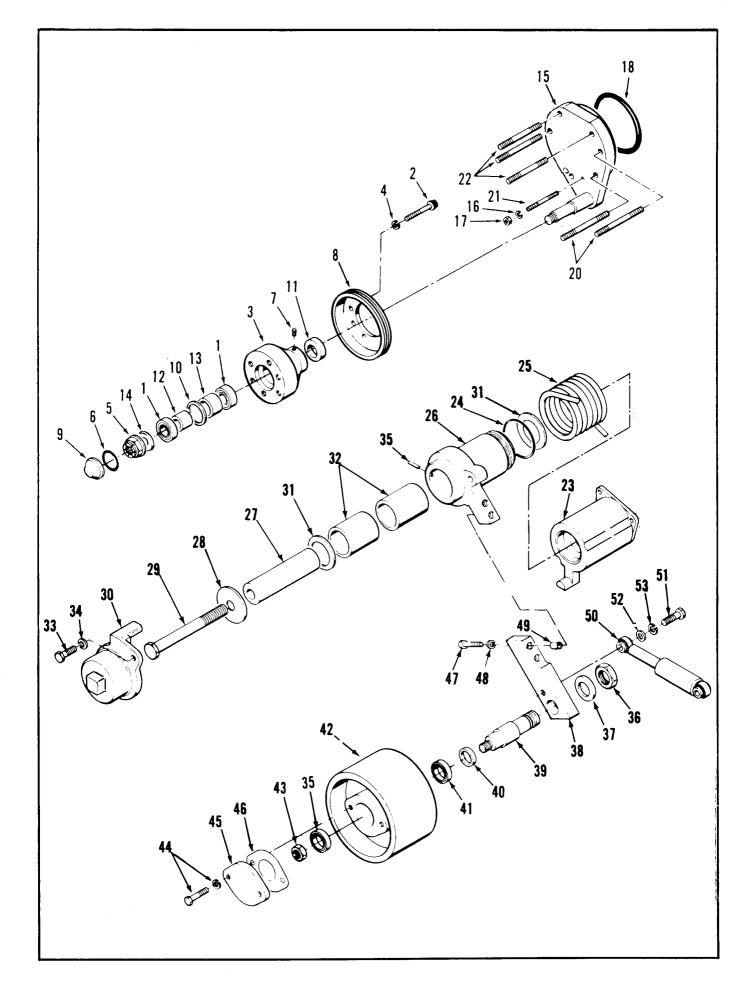


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
	FAN HUB All Models				IDLER ASSEMBLY All Models		
3002233 3001281 206041 3002183 111445 142176 145551 S-911-B 3002222 3002193 3001280 200307 3002210 3002211 3012467 AR-45690 3003614* 3002203	Hub, fan assembly Bearing Capscrew Hub, fan Lockwasher Nut O-ring Plug, pipe Pulley, fan hub Retainer, O-ring Ring, snap bearing Seal, oil Spacer, inner bearing Spacer, outer bearing Washer, plain Support, fan hub Support, fan Belt, poly-v	1 2 6 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9, 10 11 12 13 14 15	3009472 3009473 145581 3009476 3175668 3009475 127454 S-110-B 3175711 3009774 3009477 185804 S-610 68171	Assembly, pivot arm Support, pivot shaft O-ring Spring, torsion Arm, fan idler pivot Shaft, pivot arm Washer, flat Capscrew Cap, pivot arm Washer, thrust Bushing, pivot arm shaft Capscrew Lockwasher Pin, roll FAN IDLER All Models	1 1 1 1 1 1 1 2 2 1 1 1 2	23 24 25 26 27 28 29 30 31 32 33 34 35
S-604 S-205 3000859 206848 64929 102397 3017233	MOUNTING PARTS All Models Lockwasher (3/8") Nut O-ring, fan hub support Ring, rectangular Stud Stud Stud, fan hub *Not purchased separately	7 7 1 1 2 5 3	16 17 18 20 21 22	3009639 S-213-A S-658 3009640 3009481 3003353 3003354 3009641 3004057 3021470 207603 205656	Assembly, fan idler arm Nut, hexagon jam Washer, plain Arm, fan idler Shaft, fan idler Seal, oil Assembly, bearing Pulley, fan idler Locknut, prevailing torque Capscrew, hexagon head and lockwasher Cover Gasket	1 1 1 2 1 1 2 1 1 2 1 1 2 1 1 2	36 37 38 39 40 41 42 43 44 45 46
219127 208081 143698 106289 203310	FAN SPACER Spacer Spacer, fan pilot Spacer, fan Capscrew Washer, plain FAN All Models	1 1 6 6		103009 S-120 S-604 S-610 3002993	MOUNTING PARTS All Models Capscrew Capscrew Lockwasher Lockwasher Dowel, ring	3 2 2 3 2	47 48 49
215722	Fan (blower)	1			SHOCK ABSORBER All Models		
	MOUNTING PARTS FOR FAN SUPPORT			3008018	Absorber, shock	1	50
S-604 S-205 3000859 206848 66178-B 107765 3017233	Lockwasher Nut O-ring Seal, rectangular ring Stud Stud Stud	7 7 1 1 2 2 3	16 17 18 20 21 22	S-162-A S-622 S-610 61761	MOUNTING PARTS All Models Capscrew Washer, plain Lockwasher Spacer	2 2 2 1	51 52 53

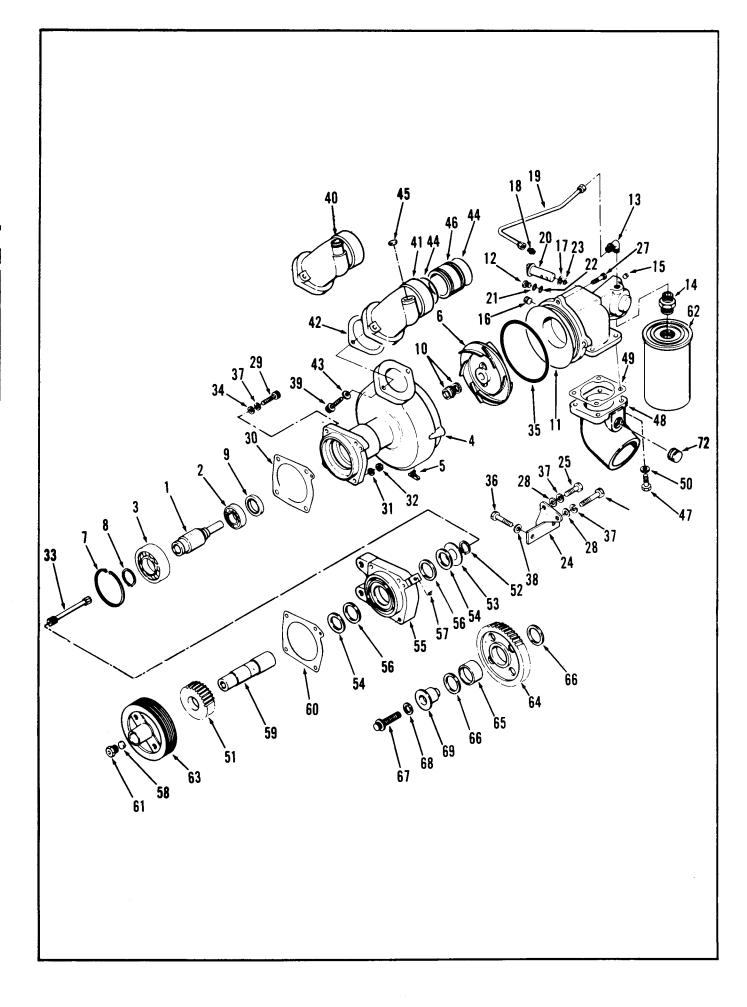


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
-	WATER PUMP All Models				KTA-1150 G Same as KT except		
3022920 205254 S-16002	Pump, water Shaft, water pump assembly Bearing, ball	1 1 1	1 2	OMIT: 3200211	Connection, water pump	1	41
S-16069 206964 S-962-E 205243	Bearing, ball Body, water pump Cock, drain Impeller, water pump	1 1 1	3 4 5 6	ADD: 3002192 207721	Connection, water pump Plug, expansion	1 1	40 45
70183 205258 206948	Ring, retaining Ring, retaining Seal, oil	1 1 1	7 8 9		WATER INLET All Models		
AR-12732	Assembly, seal and seat WATER PUMP INLET HOUSING All Models	1	10	S-103-D 3001351 205288 S-604 S-962	Capscrew Connection, water inlet Gasket, water inlet connection Lockwasher Plug, pipe	4 1 1 4 1	47 48 49 50 72
3010529 3010181 S-167-A S-114 S-1007-A	Assembly, water pump inlet housing Housing Capscrew Capscrew Elbow, flexible	1 1 1 1	11 12 13		WATER PUMP DRIVE AND SUPPORT All Models		
206963 3008466 3008469 70861	Insert, water filter head Plug, pipe (1/4") coated Plug, pipe (3/4") coated Ring, rubber	1 1 1 1	14 15 16 17	3007385 207251	Drive, water pump and alternator Gear, water pump and alternator drive	1	51
S-1006-A 3010704 S-1068 S-1070 3010536	Connector Tube, transfer (3010535) Nut Sleeve Valve, water shut-off	1 1 2 2	18 19 20	205166 3002743 116388 3007386 205156	Ring, retaining, beveled Washer, clamping Washer, thrust Support, water pump (3007364) Bushing, water pump drive	1 1 2 1 2	52 53 54 55 56
S-600 S-631 205363 146159	Lockwasher Washer Washer, spring Washer, plain	1 1 1	21 22 23	S-965-E 3005350 205498 3002326	Plug, pipe Shaft and plug, water pump drive Plug, oil Shaft, water pump and alternator drive	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	57 58 59
	MOUNTING PARTS All Models				MOUNTING PARTS		
3010530	Bracket, water pump	1 1	24	205233 139473	Gasket, water pump support Plug	1 1	60 61
S-109 3012472 S-103	Capscrew (3/8" x 16 x 7/8") Capscrew and lockwasher Capscrew	1 3	25 26 27	ja N	WATER FILTER All Models		
S-602 S-102-D 205233	Washer Capscrew Gasket, water pump support	2 3 1	28 29 30	299084	Element, water filter	1	62
S-604 S-205 205259	Lockwasher Nut Shaft, water pump driver	1 1 1	31 32 33		ALTERNATOR DRIVE PULLEY All Models Pulley, alternator drive	1	63
3005594 145623 S-181	Washer, plain O-ring Capscrew	3 1 2	34 35 36	3002331	WATER PUMP IDLER		
S-604 S-603 127352	Lockwasher Lockwasher Washer, plain	4 2 3	37 38	3004685	All Models Assembly, idler gear and bushing (3004680)	1	64
	WATER PUMP TO LUBRICATING			3004686	Bushing	1	65
	OIL COOLER TUBE KT-1150 G			130083	MOUNTING PARTS All Models Washer, thrust	2	66
S-103-D 3200211 205289 S-604 69760	Capscrew Connection, water pump Gasket, water outlet connection Lockwasher O-ring	2 1 1 2 2	39 41 42 43 44	207527 3200772 3001962	Capscrew Washer, plain Shaft, idler	1 1 1	67 68 69

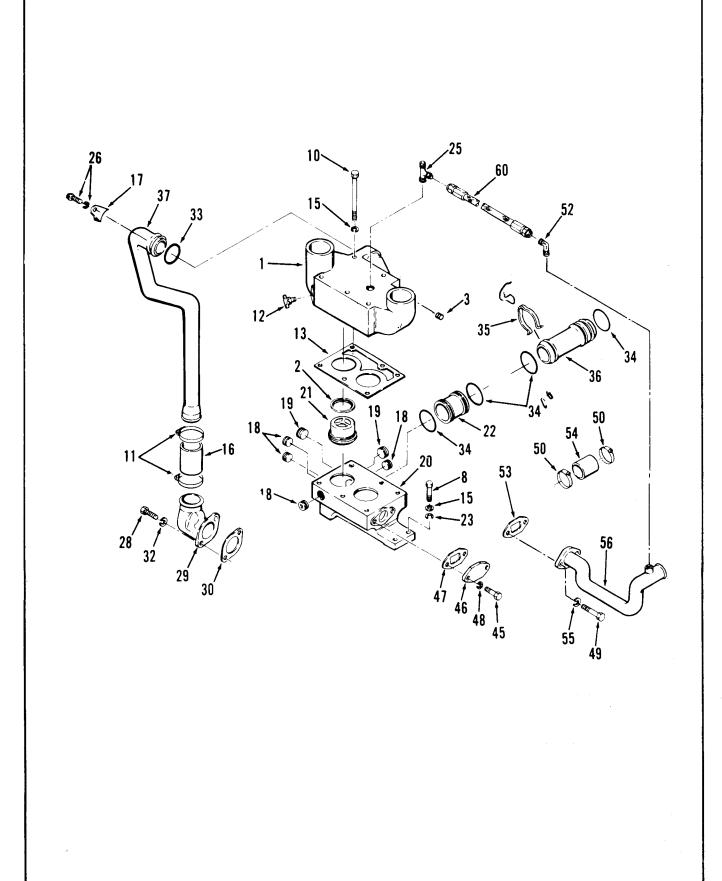


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PÅRT NAME	NO. REQ'D	REF. NO.
3016720 3010917 186780 67622 S-141 108707 S-199-B S-962-E 3010918 S-604 69760 S-915-A S-995 3010916 204586 207378 127362 3200749	THERMOSTAT HOUSING All Models Assembly, thermostat housing Housing, thermostat Seal, thermostat Plug, pipe Capscrew Capscrew Capscrew Draincock Gasket, thermostat housing Lockwasher O-ring, water transfer tube Plug, pipe Plug, pipe Plug, pipe Support, thermostat housing Thermostat Tube, water transfer Washer, plain Tee WATER BYPASS TUBE	1 1 2 1 2 5 1 1 10 2 4 2 1 2	1 2 3 8 10 12 13 15 34 18 19 20 21 22 23 25	S-109 207077 207056 S-604 43828-B 3012303 144372 S-112 S-604 AS-050110055 3010926 9539-A	THERMOSTAT HOUSING SUPPORT COVER KT Series Only Capscrew Cover, thermostat housing support Gasket Lockwasher AFTERCOOLER CONNECTION KTA-1150 G Clamp, hose Connection, aftercooler (constr.) Elbow Capscrew Lockwasher Hose Gasket Hose	2 1 1 2 2 1 1 1 1 1	45 46 47 48 56 52 49 55 60 53 54
3015283 S-103-D 3010299 195866 S-604 70624 43828-D 68378-A 3010689 3011224	All Models Capscrew, captive Capscrew Connection, water Gasket, water bypass Lockwasher O-ring Clamp, hose Hose Clamp Tube, water bypass	1 2 1 1 2 1 2 1 2 1 1	26 28 29 30 32 33 11 16 17				
69760 205976 207233	WATER TRANSFER TUBE All Models O-ring Ring, water tube retaining Tube, water transfer	10 5 5	34 35 36	de la companya de la			

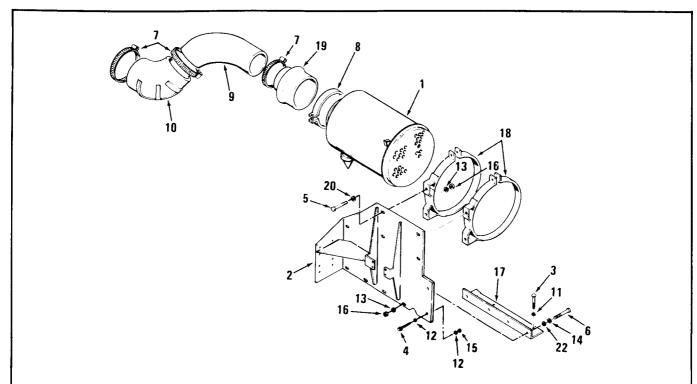


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REI NO
3001879 3013205	AIR CLEANER All Models Air cleaner Element, air cleaner (normal duty) MOUNTING PARTS	1 1	1				
3021896 S-109 S-145 103023 205378	All Models Bracket Capscrew Capscrew Capscrew Capscrew Capscrew	1 4 4 4 4	2 3 4 5 6				
140313 140314 105317 3000308 S-604 S-608	Clamp, hose Clamp, T-bolt Elbow, 45 deg. Elbow, 90 deg. Lockwasher Lockwasher	3 1 1 1 4 4	7 8 9 10 11				
S-610 111445 S-200 S-217 3001888 197221	Lockwasher Lockwasher Nut Nut Support, air cleaner Strap, cleaner	4 4 4 4 1 2	13 14 15 16 17 18				
3001870 S-622 S-670 S-602	Tube, air inlet assembly Washer Washer Washer, plain	1 4 4 4	19 20 22				

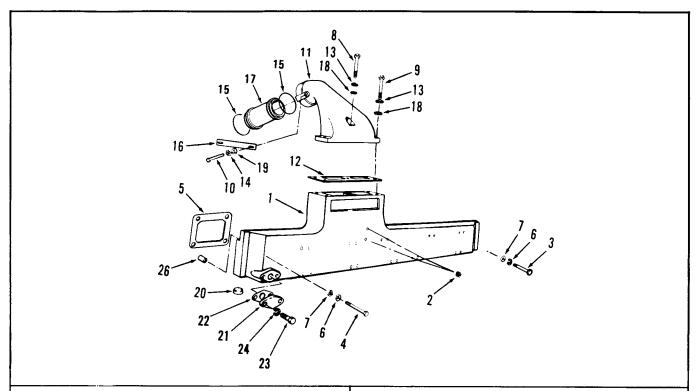


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
3010928 S-910-B 206305 123204 137868 206277 S-604 127362 156075* 3014304	AIR INTAKE MANIFOLD KT-1150 G Manifold, air intake Plug MOUNTING PARTS KT-1150 G Capscrew Capscrew Capscrew Capscrew Gasket, air manifold Lockwasher (3/8") Washer, plain Plug, cup Sleeve, rubber	1 2 21 6 24 24 1 12	1 2 3 4 5 6 7 20 26	207214 127362 127184 3002887 259372 S-970-B	AIR CROSSOVER CONNECTION KT-1150 G (Cont'd) Tube, air crossover Washer, plain Washer, plain Seal, dust COLD STARTING AID All Models Cold start, ether type, manually operated Bushing AIR COMPRESSOR COVER KT-1150 G	1 5 4 1	17 18 19
S-102 S-149-A S-120 S-107 3003647 206279 S-604 S-605 207236 3001523	*To be used when air compressor is not used to plug air supply to air compressor. AIR CROSSOVER CONNECTION KT-1150 G Capscrew (5/16" x 18 x 1") Capscrew (3/8" x 16 x 5") Capscrew (3/8" x 16 x 1-3/4") Capscrew (5/16" x 18 x 3/4") Connection, air crossover Gasket, air connection Lockwasher (3/8") Lockwasher (5/16") O-ring, tube Strap, turbocharger	1 1 4 3 1 1 5 4 2 2	8 9 10 11 12 13 14 15 16	3011693 164916 S-103-D S-604	Cover plate Gasket Capscrew Lockwasher	1 1 2 2 2	21 22 23 24

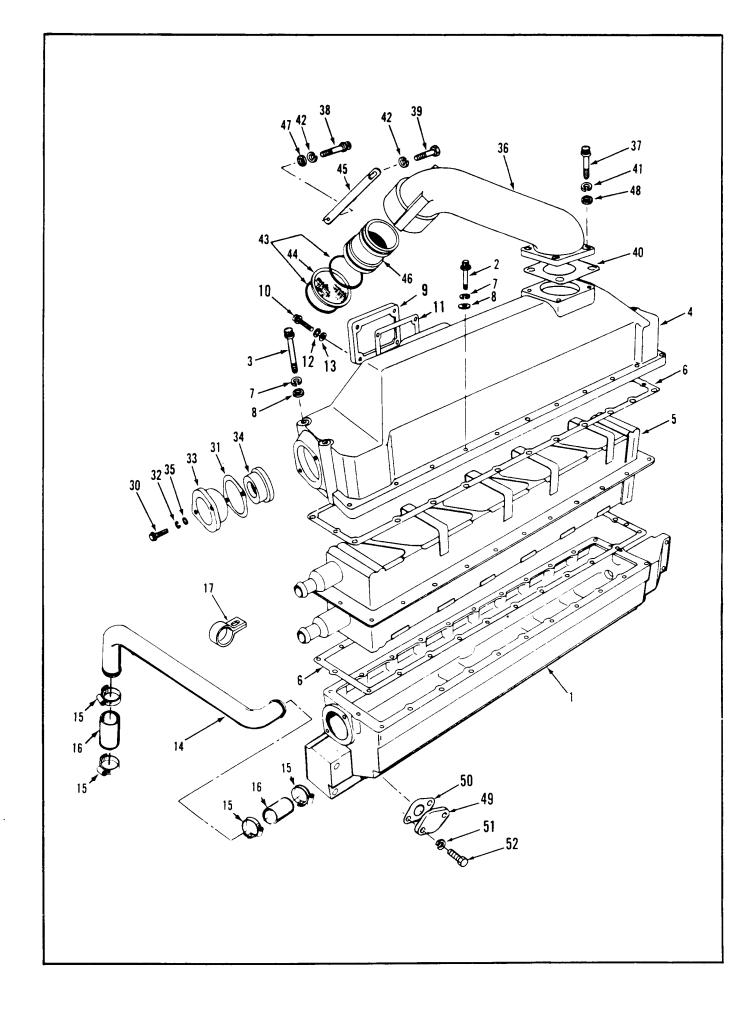


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
3010927 172640 207222 3001300 3001299 3001304 S-604 127362 S-955 103271 123204 137868	AIR AFTERCOOLER KTA-1150 G Housing, aftercooler Capscrew Capscrew Cover, aftercooler housing Core, aftercooler Gasket, aftercooler Lockwasher Washer, plain MOUNTING PARTS KTA-1150 G Bushing, pipe Capscrew Capscrew Capscrew	1 21 3 1 1 2 24 24 24	1 2 3 4 5 6 7 8	3002524 S-107 207221 205729 3001306 S-604 S-605 207236 3002887 3001523 207214 127362 109557	AIR CROSSOVER CONNECTION KTA-1150 G Crossover, air intake Capscrew (5/16" x 18 x 3/4") Capscrew Capscrew Gasket Lockwasher (3/8") Lockwasher (5/16") O-ring Ring, sealing Strap, air intake Tube, air crossover Washer, plain Washer, plain AIR COMPRESSOR COVER All Models	1 4 2 2 1 4 4 4 4 4	36 37 38 39 40 41 42 43 44 45 46 47 48
137872 206277 S-604 S-910-B 127362 3014304	Capscrew Gasket, manifold to head Lockwasher Plug, pipe Washer, plain Sleeve, rubber AFTERCOOLER INTAKE COVER	8 6 24 1 24 24		3011693 164916 S-103-D S-604	Cover, plate Gasket Capscrew Lockwasher	1 1 2 2 2	49 50 51 52
3001303 199919 3001306 S-604 127362	Cover, air intake Capscrew Gasket Lockwasher Washer, plain	1 4 1 4 4	9 10 11 12 13				
3010921 43828-B 3200316 3010922	WATER PUMP TO AFTERCOOLER TUBE KTA-1150 G Tube, water pump to aftercooler Clamp, hose Hose Clip	1 4 2 1	14 15 16 17				
S-103-D 3001305 S-604 3001301 206808 127362	WATER CONNECTION SEAL KTA-1150 G Capscrew Gasket Lockwasher Retainer, seal Seal Washer, plain	4 2 4 2 2 4	30 31 32 33 34 35				

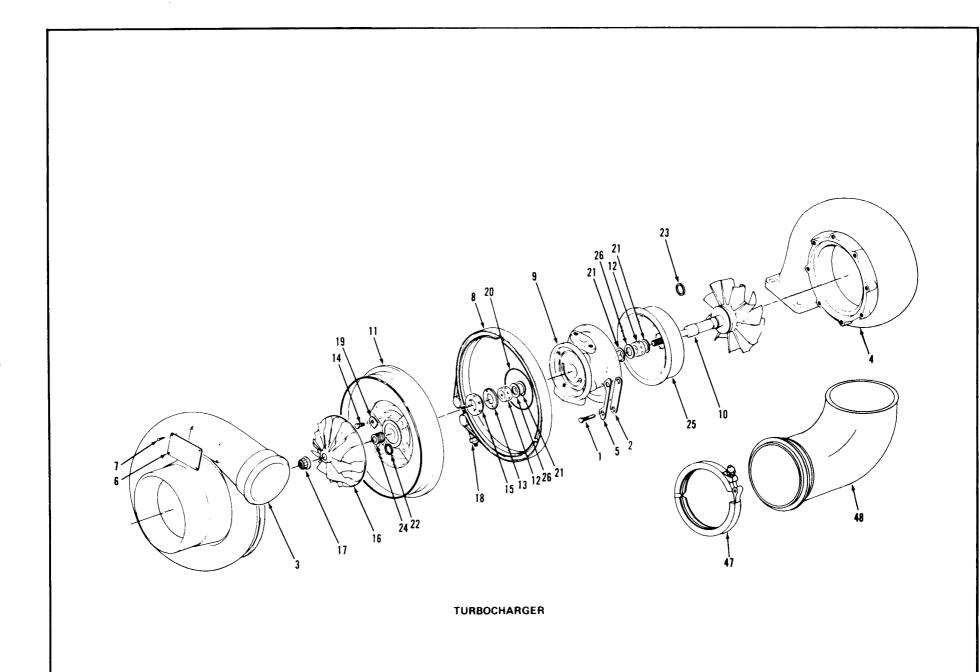


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
3007732 202870 202871 3009191 3009192 202872 207433	TURBOCHARGER (T-18-A) All Models Turbocharger Bolt, turbine housing Clamp, turbine housing Housing, compressor Housing, turbine Lockplate, turbine housing Nameplate	1 8 4 1 1 4	1 2 3 4 5 6	201989 AR-7263	TURBOCHARGER EXHAUST CONNECTION All Models Clamp, V-Band Connection, exhaust outlet	1 1	47 48
207434 202868 3009193 3009194 3009194 3004583 207425 202856 3004581 3009198 3009199 207432 3004582 202859 202853 202860 207431 3009197 202852 202855	Screw, nameplate V-Band Housing assembly, rotating center Assembly, center housing Assembly, wheel and shaft Backplate Bearing Bearing, inboard thrust Bolt Collar, thrust Impeller Locknut Locknut, V-Band Washer O-ring Ring, retaining Ring, piston Ring, piston Spacer, thrust Shroud, wheel Washer	4 1 1 1 2 1 4 1 3 1 1 1 2 2	9 10 11 12 13 14 15 16 17 18 19 20 31 22 23 24 25 26				
S-1039-A 208668 43828-A 108722 147991 3003536 201017 205396 201048 201049 209956 AS-16025-NF 219138 191772 205354 3012471 3006289 3200178 3200143 206943 S-604	MOUNTING PARTS All Models Adapter, flex Adapter, hose Clamp, hose Clip Clip Elbow, turbocharger oil return Flange, turbocharger Gasket, turbocharger to exhaust manifold Gasket, oil Gasket, oil Hose, flexible Hose Locknut Capscrew, twelve point Capscrew, twelve point Capscrew, captive Stud Tube, drain Tube, oil supply Union, adapter Washer, lock	1 1 2 1 1 1 1 1 4 2 2 2 4 1 1 4 4					

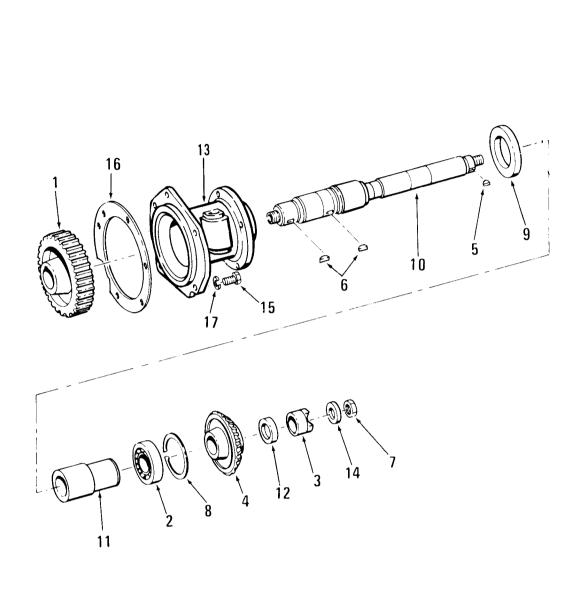


PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
3004628 114645 S-16073 3003305 207253 S-306 S-316 S-222-A S-16255 106339 3003301 128067 3003306 3014607 3003307	WOODWARD GOVERNOR DRIVE Drive, fuel pump Gear, drive Bearing, ball (rear) Coupling, half Gear, governor drive Key, coupling Key, shaft Nut, shaft Ring, snap Seal, oil Shaft, drive Spacer Spacer, governor gear Support, bearing Washer, retaining	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 2 3 4 5 6 7 8 9 10 11 12 13				
S-112 205376 205873 S-606-A S-205 S-602 3003312	MOUNTING PARTS Capscrew Capscrew Gasket Lockwasher Nut Washer Support, governor housing	3 4 1 8 1 2	15 16 16 17				

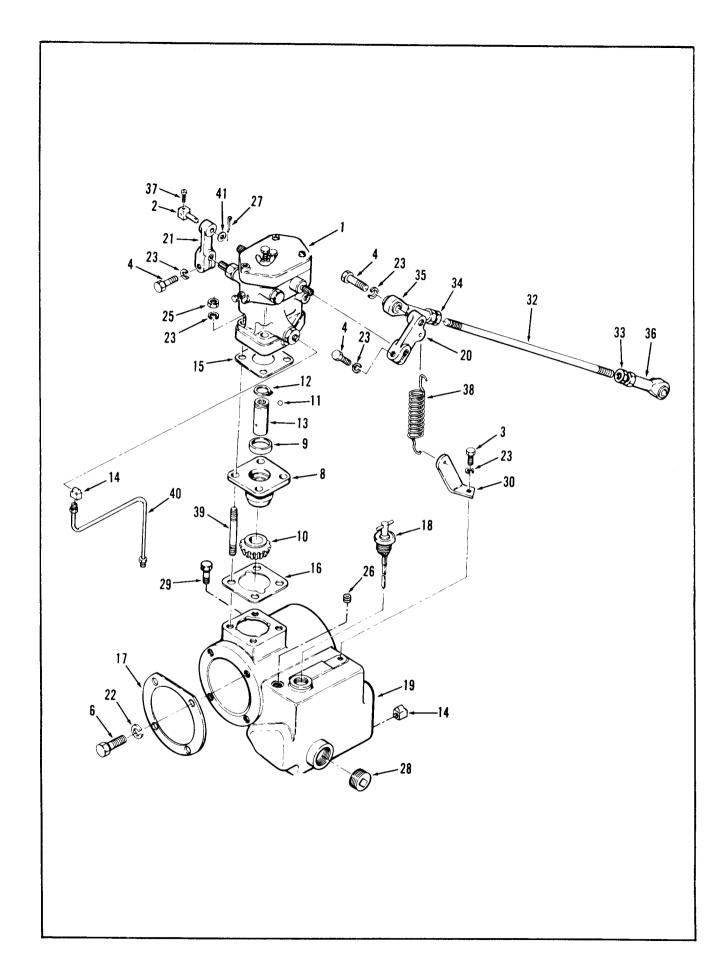

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF NO.
3004413 21576 68846 S-109 S-102-A 3006917 BM-43223 103023 102991 102988 70739 103001 102986 S-1028 63520 102992 103004 102996 124577 3005986 3003300 3003308 67020-A S-610 S-604 S-605 69832 S-511 3008466 3008469 63876-1 3003303 70208 69790 103006 3011029 S-626 AR-11543 216298 68351 S-248 101646 103000	WOODWARD HYDRAULIC GOVERNOR Governor, Woodward, assembly Governor, Woodward (PSG) Block, swivel Capscrew Capscrew Housing, governor bearing Capscrew Collar, governor drive shaft Gear, governor drive shaft, drive Elbow Gasket, governor bearing retainer to housing (0.0055") Gasket, governor bearing retainer to housing (0.0153") Gasket, fuel pump cover to governor housing Gasket, governor housing to bearing support (0.0153") Gauge, oil level Housing, governor drive Lever, governor control Lever, speed adjusting Lockwasher Lockwasher Lockwasher Lockwasher Nut Pin, cotter, swivel block Plug, pipe (1/4") Plug, pipe (3/4") Plug, pipe (3/4") Plug, pipe (3/4") Plug, pipe (1/4") Plug, pipe vent Bracket, retainer spring Screw, swivel block Spring, fuel lever return Stud, governor mounting Tube, governor mounting Tube, governor il supply Washer, plain Assembly, uniball control Rod, control Nut, jam (left hand) Joint, uniball (left hand) BARBER-COLEMAN GOVERNOR	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		216298 63520 3011029 69790 3003303 114850 67020-A 103006 3003308 3003310 101646 103000 102477 121276 168568 63520 215982 3008759 114850 166471 3003309 3003310 101646 103000 123321 216298 63520 176709 3004368 114850 63521 3003309 3003310 101646 103000	GOVERNOR MOUNTING AND LINKAGE PSG WOODWARD HYDRAULIC GOVERNOR Control rod Gasket Oil supply tube Return spring Return spring bracket Spacer Speed adjusting lever Stud Terminal shaft lever Uniball assembly Uniball assembly Uniball assembly VS governor lever WOODWARD 2301 ELECTRO- HYDRAULIC GOVERNOR EG-3P Cable clamp Control rod Gasket Mating connector (Actuator) Oil supply tube Spacer Stud Terminal shaft lever Throttle shaft lever Uniball assembly Uniball assembly EGB-3P Cable clamp Control rod Gasket Mating connector (Actuator) Oil supply tube Spacer Stud Terminal shaft lever Uniball assembly Uniball assembly Throttle shaft lever Uniball assembly	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
3003643 3000294	Control package, actuator Installation kit AMERICAN BOSCH GOVERNOR	1 1					
3019635 3020987 3017418	Actuator Control unit Magnetic pickup	1 1					

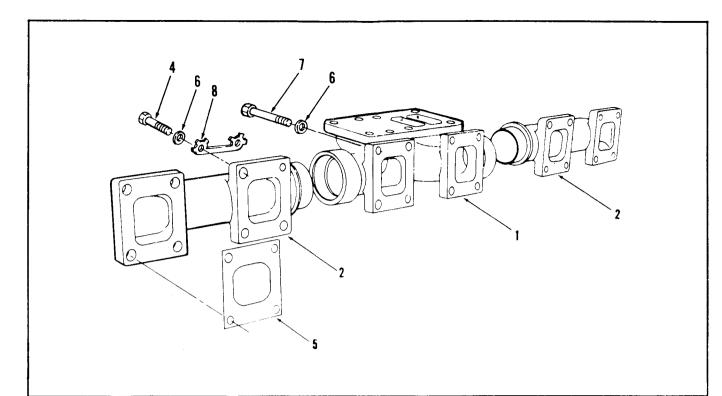

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.
207176 205186	EXHAUST MANIFOLD Manifold, exhaust (center) Manifold, exhaust (front and rear)	1 2	1 2				
197032	MOUNTING PARTS Capscrew	20	4				
205196 109594 3001404 3001405	Gasket, exhaust manifold Washer, plain Capscrew Lockplate	6 20 4 12	5 6 7 8				i

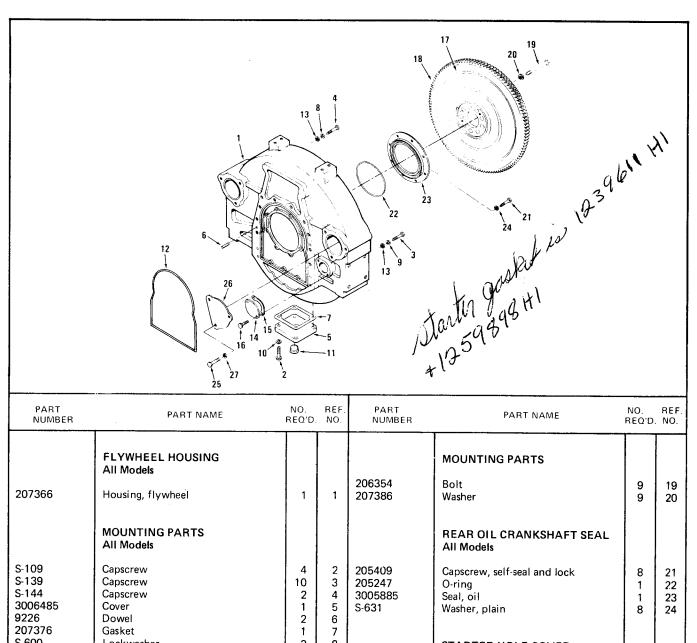


S-600 Lockwasher STARTER HOLE COVER S-603 Lockwasher S-610 Lockwasher Capscrew Plug, pipe Cover, starter flange Ring, rectangular sealing S-603 Lockwasher Ring, rectangular sealing S-658 Washer, plain Cover, index hole Gasket Screw, self tapping FLYWHEEL AND RING GEAR All Models AR-45118 Flywheel (3005581) Gear, ring

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
	STARTING MOTOR All Models				MAGNETIC SWITCH All Models		
3004699 3018924	Motor, starting (24 volt) Strap, braid	1 1		216537 S-118-A 3015216 S-258	Switch, magnetic Capscrew Bracket, magnetic switch Nut, hex	1 2 1 2	:
	MOUNTING PARTS All Models			S-600 S-691	Washer, lock Washer, plain	2 2	
158250 S-603	Capscrew Lockwasher	3			VOLTAGE REGULATOR All Models		
	ALTERNATOR All Models	;		162201	Voltage regulator	1	
3016627	Alternator (24 volt, 35 amp.)	1			GASKET SETS All Models		
3002323	MOUNTING PARTS Pulley, alternator	1		3011454 3006135	Engine overhaul set Cylinder head gasket set (For all 12 heads)	1 1	
205913 3003346 S-103-D	Belt, alternator Bracket, alternator	1 1 2		3015239 BM-68356	Cylinder head gasket (One head only) Fuel pump gasket set (P.T.G. Standard governor)	1	
S-103-D S-199-B S-122-B S-106	Capscrew, alternator support Capscrew, alternator support Capscrew, alternator bracket Capscrew	2 2 1		3010242	Fuel pump gasket set (P.T.GVS governor)	1	
206401 S-113	Capscrew Capscrew	2					
70111 111445 S-604	Capscrew Lockwasher, alternator bracket Lockwasher, alternator support	1 2 4					
203760 212738 207509	Washer Nut, flanged Sleeve	3 1 2					
3009635 203310	Support, alternator Washer, adjustment link	1 3					
AR-10669 205957 205958	Link, alternator adjustment Link, lower adjustment Link, upper adjustment	1 1 1					
S-253 206202	Nut Nut, jam	1 1					
205959	Screw, adjusting	1					
	ELECTRICAL EQUIPMENT						
	Electrical equipment is not manufactured by the Cummins Engine Company, Inc. Complete service for electrical equipment may be obtained from the manufacturers: The Delco-Remy Company at						
	Anderson, Indiana; The Leece- Neville Company at Cleveland, Ohio; or from their service station may be obtained from the manufacturer.						

NOTES

			<u>-</u>			 			
									
		· · · · · · · · · · · · · · · · · · ·		=:-			···		
							•	-	
				<u> </u>					
							<u></u>		
				~					
			F 1	- 1					
									- · · · ·
	 -				y. .	10.3		•	
				. .					
									
				····					
									
				-	. 	· · · · · · · · · · · · · · · · · · ·			
								· · · · · · · · · · · · · · · · · · ·	
						···			
· · · · · · · · · · · · · · · · · · ·			<u>,, , , , , , , , , , , , , , , , , , ,</u>						
							· · · · · ·		

PART NUMBER	PART NAME	NO. REQ'D.	REF. NO.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
194505 194504	SAFETY CONTROLS (ENGINE) All Models Water temperature safety control Oil pressure safety control	1					
3011573 3011575 3021147	SPEED SWITCH (SYNCHRO-START) Speed switch Sending unit Bracket	1 1 1					
3017976 3023296	Brace Wiring harness ENGINE WIRING All Models	1					
178268 213229 196891 69504 137703 S-600 S-607 S-691 S-1330 S-105 S-224 S-258 3000283 218901 218902 194076 3023290 S-188-C	Cabinet, terminal block Capacitor Circuit breaker Pan head screw Connector, squeeze type Lockwasher Lockwasher Plain washer Pan head screw Capscrew Nut, hex Nut, hex Bracket, terminal Block, terminal Marker, terminal Wiring diagram Wiring harness Capscrew	1 1 1 2 1 5 2 1 2 4 4 1 1 1 1 1					
212023 212024 212026	ENGINE HEATERS (WATER) Kim Hotstart (115 volts, 2500 watts) Kim Hotstart (230 volts, 2500 watts) Kim Hotstart (230 volts, 4000 watts)	A/R A/R A/R					
217243 217244	Kim Hotstart (460 volts, 2500 watts) Kim Hotstart (460 volts, 4000 watts) (LUBRICATING OIL)	A/R A/R					
167619 167621 3000214	Oil heater (115 volts, 300 watts) Oil heater (230 volts, 300 watts) Oil heater (460 volts, 300 watts)	A/R A/R A/R					

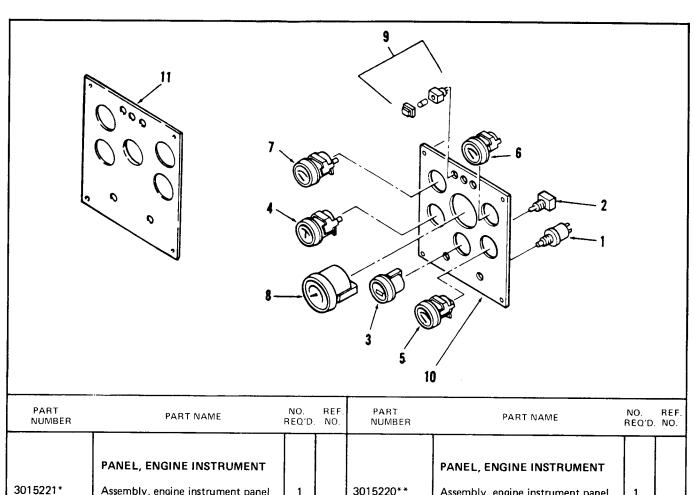

PANEL, ENGINE INSTRUMENT 3015221* Assembly, engine instrument panel 1 66501 Starting switch (push-button) 1 10057 Starting switch (push-button) 1 10057	PART NUMBER	PART NAME	NO. REQ'D.	REF.	PART NUMBER	PART NAME	NO. REQ'D	REF. NO.
102097 Sarting switch (toggle) 1 2 102097 Starting switch (toggle) 1 3 3015236 Soliton 1 4 3015235 Starting switch (toggle) 1 1 3 3015236 Soliton 1 4 3015235 Soliton 1 1 4 3015235 Soliton 1 1 3 3015236 Soliton 1 3 3015237 Soliton 1 3 3016852 Soliton 1 3 3016852 Soliton 1 3 3016852 Soliton 1 3 3016852 Soliton 1 3 3015237 Soliton 1 3 3015237 Soliton 1 3 3015237 Soliton 1 3 3016852 Soliton 1 3 3015237 Soliton 1 3 3015237 Soliton 1 3 3016852 Soliton 1 3 3015237 Soliton 1 3 3015237 Soliton 1 3 3015237 Soliton 1 3 3015237 Soliton 1 3 3016852 Soliton 1 3 3 3 3 3 3 3 3 3	3015221* 66501 102057 3015236 3015235 3015234 3015238 3015233 3015232 3015237 3019795 3011575*** 3014664 3016852	Assembly, engine instrument panel Starting switch (push-button) Starting switch (toggle) Hourmeter Voltmeter Gauge, water temperature Transducer Gauge, oil temperature Gauge, oil pressure Transducer Tachometer Signal generator Light assembly Wiring harness (Basic instrument panel) Panel, engine instrument *For use with tachometer and hourmeter.	1 1 1 1 1 2 1 1 1 1 1 3 1	1 2 3 4 5 6 7 8	3015220** 66501 102057 3015236 3015235 3015234 3015238 3015232 3015232 3015237 3014664 3016852 3015087	Assembly, engine instrument panel Starting switch (push-button) Starting switch (toggle) Hourmeter Voltmeter Gauge, water temperature Transducer Gauge, oil temperature Gauge, oil pressure Transducer Light assembly Wiring harness (Basic instrument panel) Panel, engine instrument **For use with hourmeter only. ***Optional WIRING HARNESS Harness, wiring (Engine instrument	1 1 1 1 1 1 1 1 1 3 1	1 2 3 4 5 6 7 9 11

Cummins Engine Company, Inc. Columbus, Indiana, U.S.A. 47201 Cable: CUMDIEX COLUMBUS

Registered Office:
Cummins Engine Company, Ltd.
Coombe House, St. George's Square
New Malden, England
Cable: INTCUMLON MALDEN
Registration No. 573951 England