

1
|
T

2 3 4 5
| | | |
4 C C C

6
|

0 1 0 0 0 1

7
|
T

T 11523

TRACTOR, CRAWLER - JD350

SERIAL NUMBER LOCATION

EACH JD350 CRAWLER TRACTOR HAS TWO SERIAL NUMBER PLATES: ONE FOR THE BASIC CRAWLER TRACTOR, AND ONE FOR THE ENGINE.

THE BASIC CRAWLER TRACTOR SERIAL NUMBER PLATE IS LOCATED ON THE FRONT PANEL OF THE SEAT. THE ENGINE SERIAL NUMBER PLATE IS LOCATED BELOW AND TO THE REAR OF THE FUEL PUMP MOUNTING BOSS ON THE RIGHT HAND SIDE OF THE CYLINDER BLOCK.

WHENEVER SERIAL NUMBERS ARE REQUIRED ON ALL WARRANTY CLAIMS OR CORRESPONDENCE PERTAINING TO THIS PRODUCT, IT IS EXTREMELY IMPORTANT THAT ALL TWELVE CHARACTERS BE FURNISHED. THIS POINT CANNOT BE OVEREMPHASIZED.

LEFT HAND SIDE, RIGHT HAND SIDE, FRONT AND REAR OF THE CRAWLER TRACTOR ARE VIEWED BY FACING IN THE DIRECTION OF THE CRAWLER TRACTOR FORWARD TRAVEL.

BASIC CRAWLER TRACTOR SERIAL NUMBER

<< T13523 UN01JAN94 >>

- | | |
|-----------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------|
| 1. THE FIRST THREE LETTERS DESIGNATE SERIAL NUMBER AND TRACTOR. | T - TRACTOR |
| 2. THIS NUMBER DESIGNATES THE SERIES. | 4 - JD350 |
| 3. THIS LETTER DESIGNATES THE TRACTOR STYLE. | C - CRAWLER
E - CRAWLER-LOADER
F - CRAWLER-DOZER |
| 4. THIS NUMBER DESIGNATES THE FUEL TYPE OF ENGINE. | 1 - GASOLINE
3 - DIESEL |
| 5. THIS LETTER DESIGNATES THE TYPE OF TRANSMISSION. | C - SLIDING GEAR
D - SLIDING GEAR WITH REVERSER |
| 6. THESE SIX DIGITS DESIGNATE THE PORTION OF THE CRAWLER TRACTOR SERIAL NUMBER SHOWN IN THE SERIAL NUMBER COLUMN OF THIS CATALOG. | |
| 7. THIS LETTER DESIGNATES THE MANUFACTURER OF THE CRAWLER TRACTOR. | T - JOHN DEERE DUBUQUE WORKS |

ENGINE DISPLACEMENT

THE DIESEL ENGINE DISPLACEMENT IS 152 CUBIC INCHES (2 491 CM3).
THE GASOLINE ENGINE DISPLACEMENT IS 135 CUBIC INCHES (2 212 CM3).