

OIL TANK


FILLER CAP

CONTROL VALVE

JACK BRACKET

JACK

RADIATOR GUARD

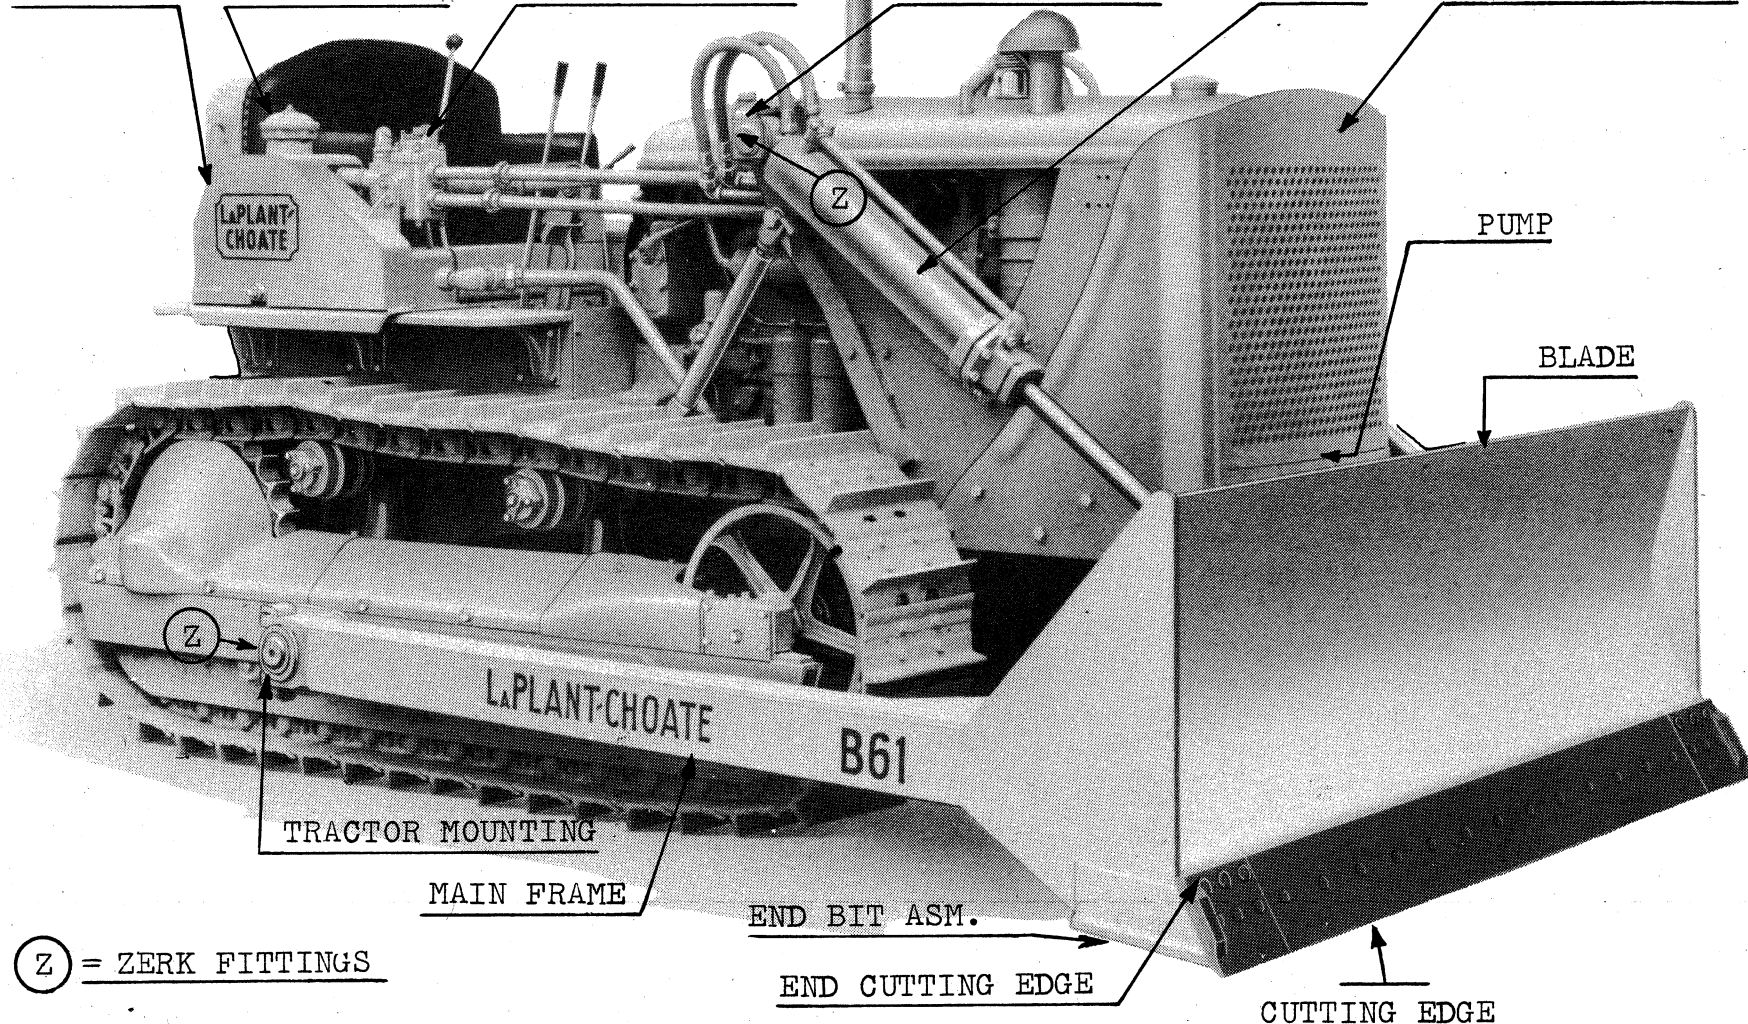

PUMP

BLADE

(Z)

(Z)

L. PLANT-CHOATE

B61

TRACTOR MOUNTING

MAIN FRAME

END BIT ASM.

END CUTTING EDGE

CUTTING EDGE

(Z) = ZERK FITTINGS

MODEL B61 GENERAL ARRANGEMENT



B61 BULLDOZER PARTS CATALOG

INDEX

STARTING
ON PAGE

General Arrangement.	1
Hydraulic System	3
Relief Valve	5
Safety Precaution.	6
Hydraulic Control System	7
Lubrication Chart.	9
Preparing Bulldozer For Operation.	9
Abnormal Operating Conditions.	10
Operating Instructions	11
The Job For Bulldozer.	13
Trouble Chart.	23
Mounting Instructions.	27
Parts Plates:	

GROUP

Main Frame and Blade.	31
Cylinder Bracket and Brace.	32
Cross Brace	36
Tractor Mounting.	37
Jack.	38
Hydraulics.	39
Tank, Base Plates and Valve	48
Valve	52
Pump.	53
Radiator Guard.	62

LAPLANT-CHOATE MANUFACTURING CO.
Cedar Rapids, Iowa

