



MODEL E, F & K CARRYALL SCRAPER

SERIAL NO. _____

Western Construction Equipment Co.

Box 2117 BILLINGS Phone 9-5501

Box 659 GREAT FALLS Phone 5-5223

Box 1465 MISSOULA Phone 4-4040

PARTS CATALOG

Form PC-208

FOR MODEL E, F & K

CARRYALL SCRAPER

EFFECTIVE WITH SERIAL NUMBER

MODEL K	S4365YR12B & UP	S4421YR13A & UP	MODEL F	S4607YR15A & UP	MODEL E
S4697YR12C & UP	S4719YR13B & UP	S4943YR13C & UP	S5147YR15C & UP	S5894YR15D & UP	S7391YR15E & UP
S4946YR12D & UP	S5136YR13D & UP	S5691YR13E & UP	S6233YR13F & UP	S6433YR13G & UP	S6554YR13H & UP
S5351YR12E & UP	S5691YR13E & UP	S6233YR13F & UP	S6433YR13G & UP	S6554YR13H & UP	
S6350YR12F & UP					
S6656YR12G & UP					
S6935YR12H & UP					

E-1223 DUMP CABLE

1/2 x 6 x 19—SPOOL OF 300 FEET

From Cable Spool Run Cable Forward to Lower A Frame Sheave Housing..... C
Then Up and Over Dangling Sheave Housing on Top of A Frame..... A
Then Forward to Bottom of Housing..... C
Then Back to Top of Tail Gate Sheave Housing..... A
Then Back to Bottom of Housing..... A
Then Across Tail Gate to Bottom Sheave in Housing..... D
Then Forward to Bottom of Lower A Frame Sheave Housing..... H
Then Back to Top of Housing..... D
Then Forward to Top of Housing..... H
Then Up to Lower Center A Frame Sheave Housing..... E
Then Up and Over Sheave Housing..... F


Then Down and in Right Side in Apron Sheave Housing..... I
Then Up and Over Dangling Sheave Housing on Top of A Frame..... G
Then Down in Left Side of Apron Sheave Housing..... I
Then Up to Yoke Sheave Housing..... J
Then Forward to Top Swivel Sheave Housing..... Q
Then Down and Around Swivel Sheave Housing..... T
Then Forward to Lift Drum on Power Unit Then Go Back to Cable Spool and Loop Cable and Place in Cable Socket at B
Then Lock with Cable Wedge.

E-1792 HOIST CABLE

1/2 x 6 x 19—155 FEET


From Right Drum in Power Unit Enter Cable in Bottom of Swivel Sheave..... S
Then Up and Over Sheave Housing..... R
Then Back to Bottom of Inside Sheave of Housing..... L
And Forward to Top of Inside Sheave of Housing..... P
Then Back to Housing..... L
Then Forward to Housing..... P
Back to Housing..... L
Then Forward to Outside of Sheave Housing..... P
Then Back to Outside Sheave in Housing..... L
Then Forward to and Around Top Pushbeam Sheave Housing..... O

Back and Around Inside Sheave in Yoke Housing..... K
Then Forward to Inside of Pushbeam Housing..... N
Back to Center Sheave in Housing..... K
Forward to Center Sheave in Pushbeam Housing..... N
Then Back to Outside Sheave in Yoke Housing..... K
Then Forward to Outside of Pushbeam Housing..... N
Then Back to Cable Wedge..... M
On the Outside of Yoke Sheave Housing..... K
And Lock Cable with Wedge.

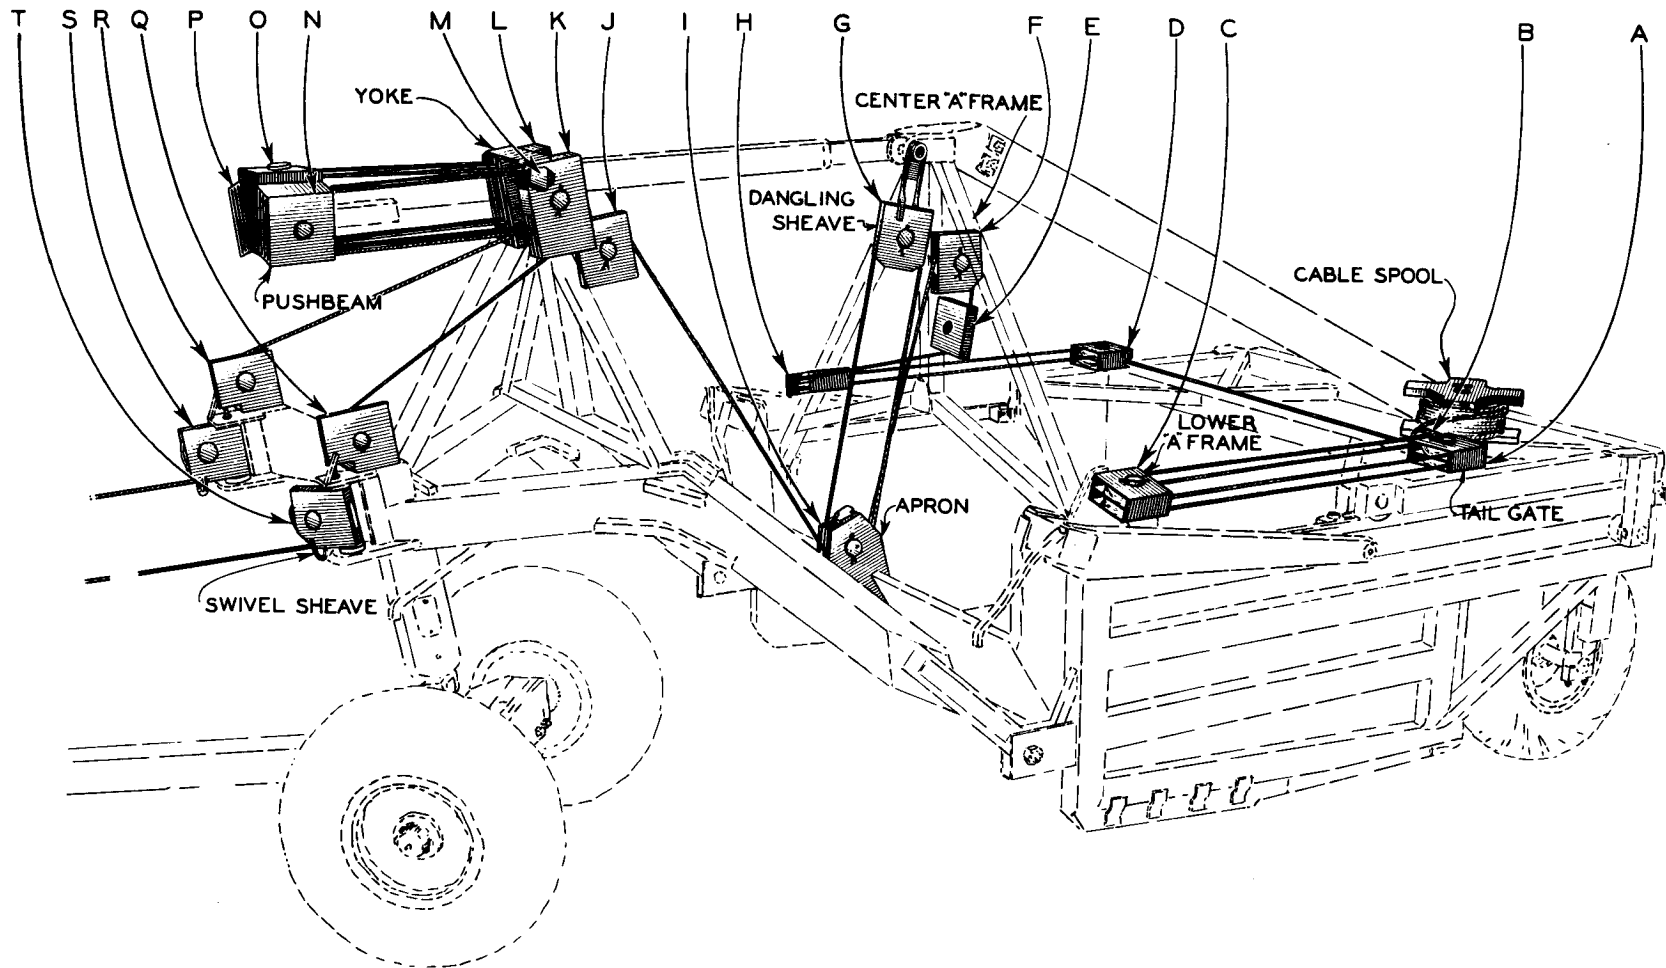

CABLE THREADING DIAGRAM

MODEL E, F & K CARRYALL

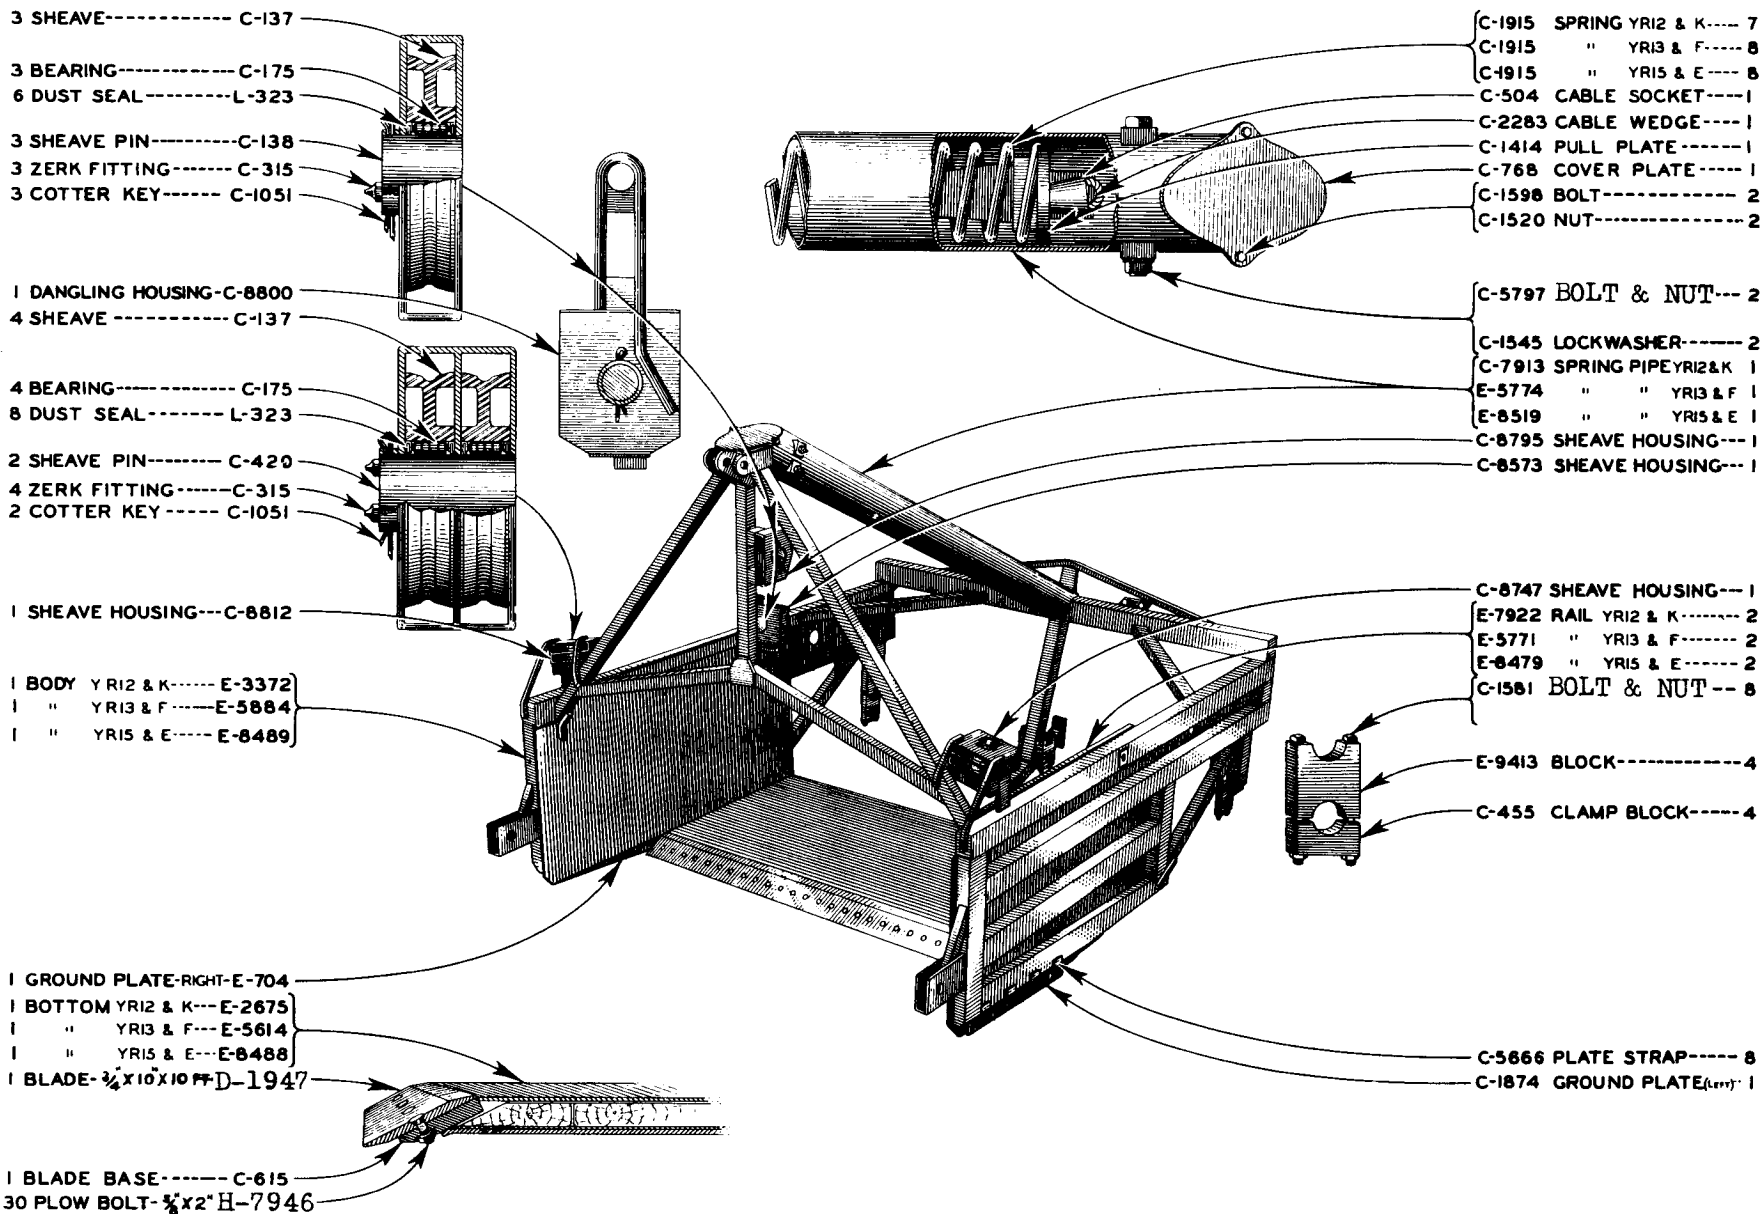


BODY

EFFECTIVE WITH SERIAL NO. S 4365 Y R12B & UP S 4421 Y R13A & UP S 4607 Y R15A & UP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

BODY

EFFECTIVE WITH SERIAL NO. S 5351 YR12E & UP S 5136 YR13D & UP
ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

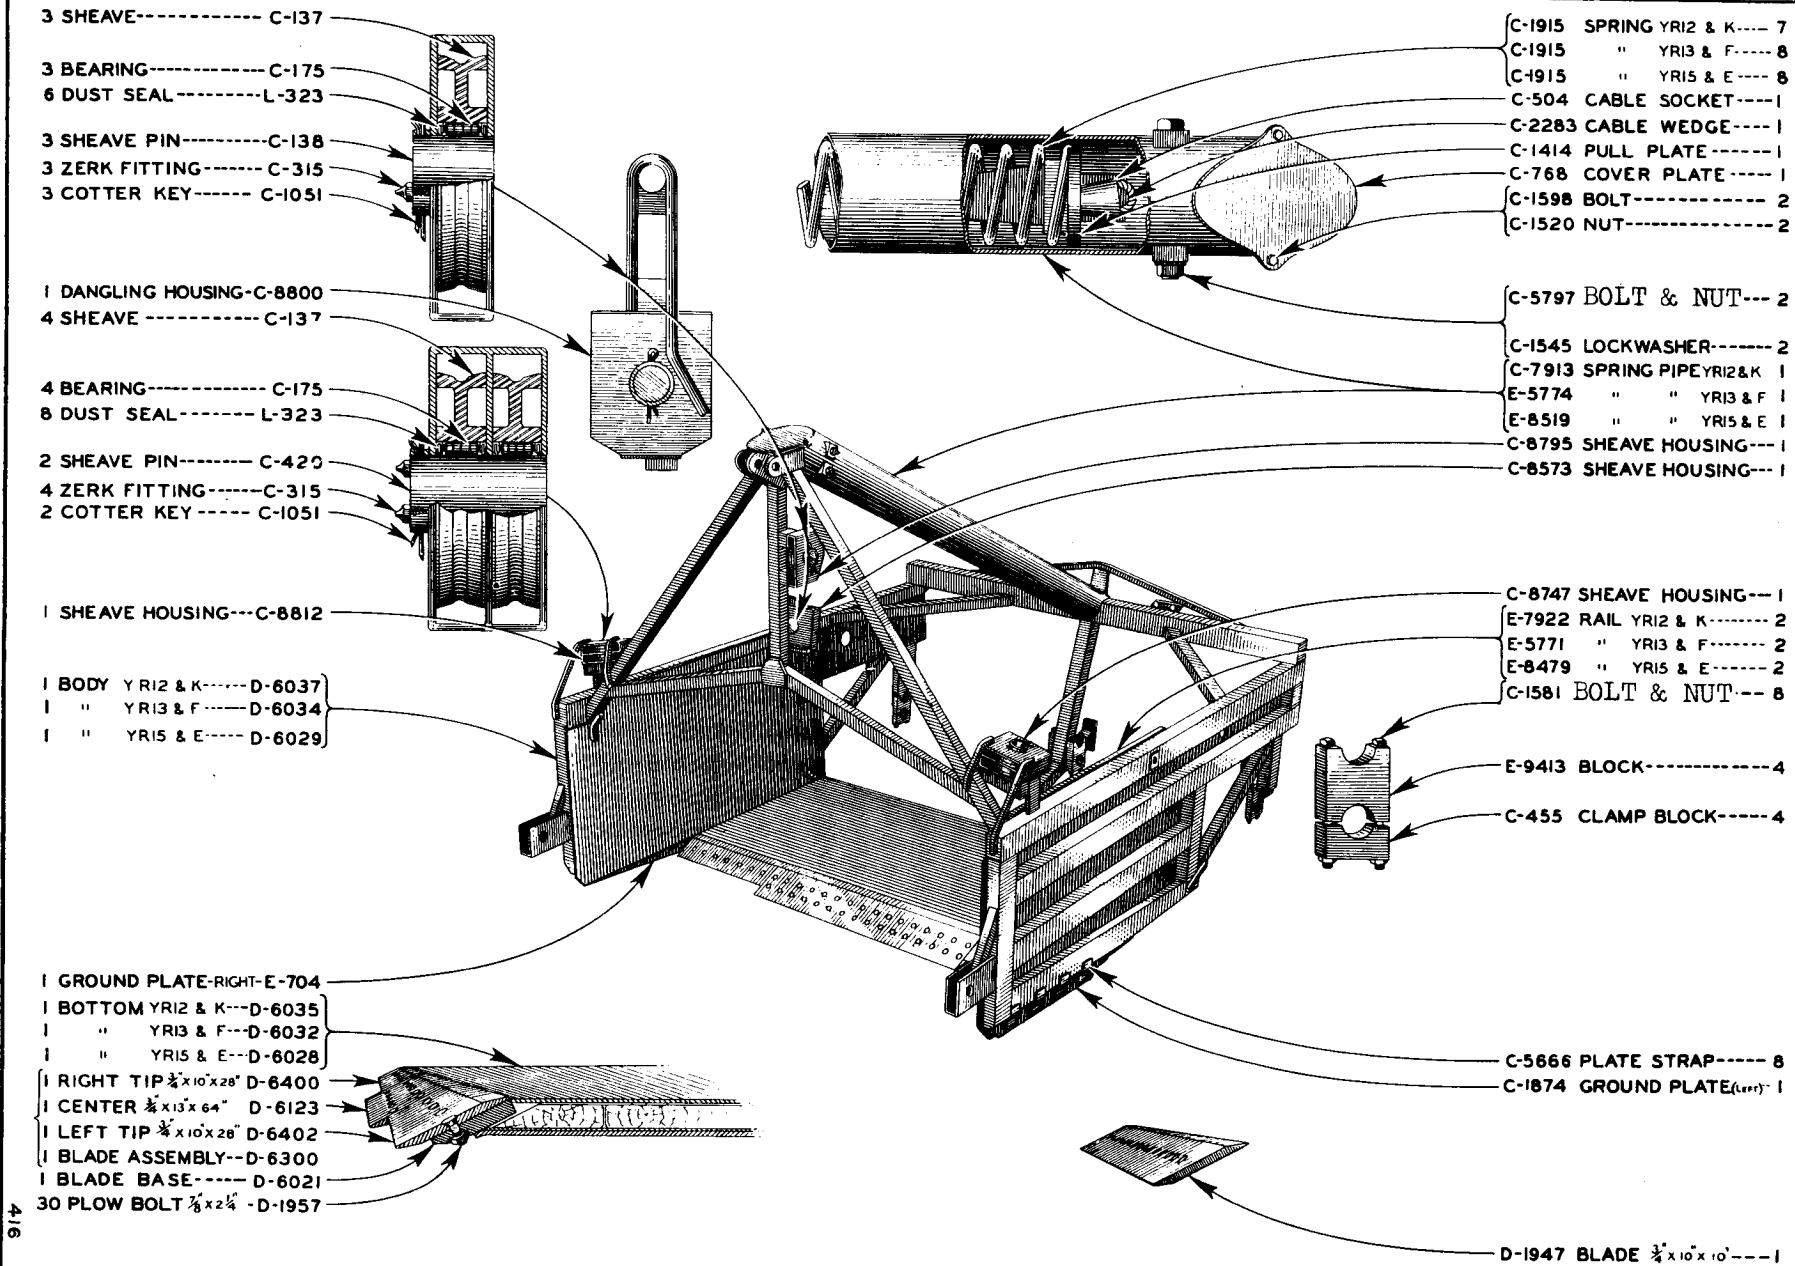

INSERT AFTER PAGE 2A IN MODEL E, F, AND K SCRAPER FORM PC-208

2 SHEAVE WHEEL ---- C-172

2 BEARING ----- C-175

2 COTTER KEY ---- C-1051

2 SHEAVE PIN ---- C-174

2 ZERK FITTING ---- C-315

3 SHEAVE ----- F-7269

3 BEARING ----- C-175

6 DUST SEAL ----- L-323

3 SHEAVE PIN ----- C-138

3 ZERK FITTING ----- C-315

3 COTTER KEY ---- C-1051

1 SHEAVE HOUSING C-8570

4 SHEAVE ----- C-137

4 BEARING ----- C-175

8 DUST SEAL ----- L-323

2 SHEAVE PIN ----- C-420

4 ZERK FITTING ----- C-315

2 COTTER KEY ---- C-1051

1 SHEAVE HOUSING --- C-8812

1 BODY YR13 & F ---- F-7243

1 BLADE $\frac{3}{4}$ "x10"x10' -- D-1947

1 GROUND PLATE RIGHT E-704

1 BOTTOM YR13 & F --- D-6032

1 RIGHT TIP $\frac{3}{4}$ "x10"x28" D-6400

1 CENTER $\frac{3}{4}$ "x13"x64" D-6123

1 LEFT TIP $\frac{3}{4}$ "x10"x28" D-6402

1 BLADE ASSEMBLY -- D-6300

1 BLADE BASE ----- D-6021

30 PLOW BOLT $\frac{3}{8}$ "x2 $\frac{1}{2}$ " -D-1957

C-1915 SPRING YR13 & F ---- 8

C-504 CABLE SOCKET ---- 1

C-2283 CABLE WEDGE ---- 1

C-1414 PULL PLATE ---- 1

F-8130 COVER HOUSING -- 1

C-1629 BOLT ----- 2

C-1525 NUT ----- 2

C-1541 LOCKWASHER ---- 2

C-5797 BOLT & NUT --- 2

C-1533 NUT ----- 2

C-1545 LOCKWASHER ---- 2

F-8923 SPRING PIPE ---- 1

C-1955 CABLE WEDGE --- 1

F-8132 SLIDING HOUSING - 1

C-171 SHEAVE PIN ---- 1

C-175 BEARING ----- 2

C-172 SHEAVE WHEEL -- 2

E-742 HOUSING ----- 1

F-8124 HOUSING ----- 1

D-840 HOUSING ----- 1

C-315 ZERK FITTING --- 3

C-174 SHEAVE PIN ---- 1

C-175 BEARING ----- 1

C-172 SHEAVE WHEEL -- 1

C-172 SHEAVE WHEEL -- 2

C-175 BEARING ----- 2

C-171 SHEAVE PIN ---- 1

C-8747 SHEAVE HOUSING - 1

E-5771 RAIL YR13 & F ---- 2

C-1581 BOLT & NUT -- 8

E-9413 BLOCK ----- 4

C-455 CLAMP BLOCK ---- 4

C-5666 PLATE STRAP ---- 8

C-1874 GROUND PLATE (Left) 1


BODY

EFFECTIVE WITH SERIAL NUMBER S 6433 YR13G & UP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

MODEL F CARRYALL

2B

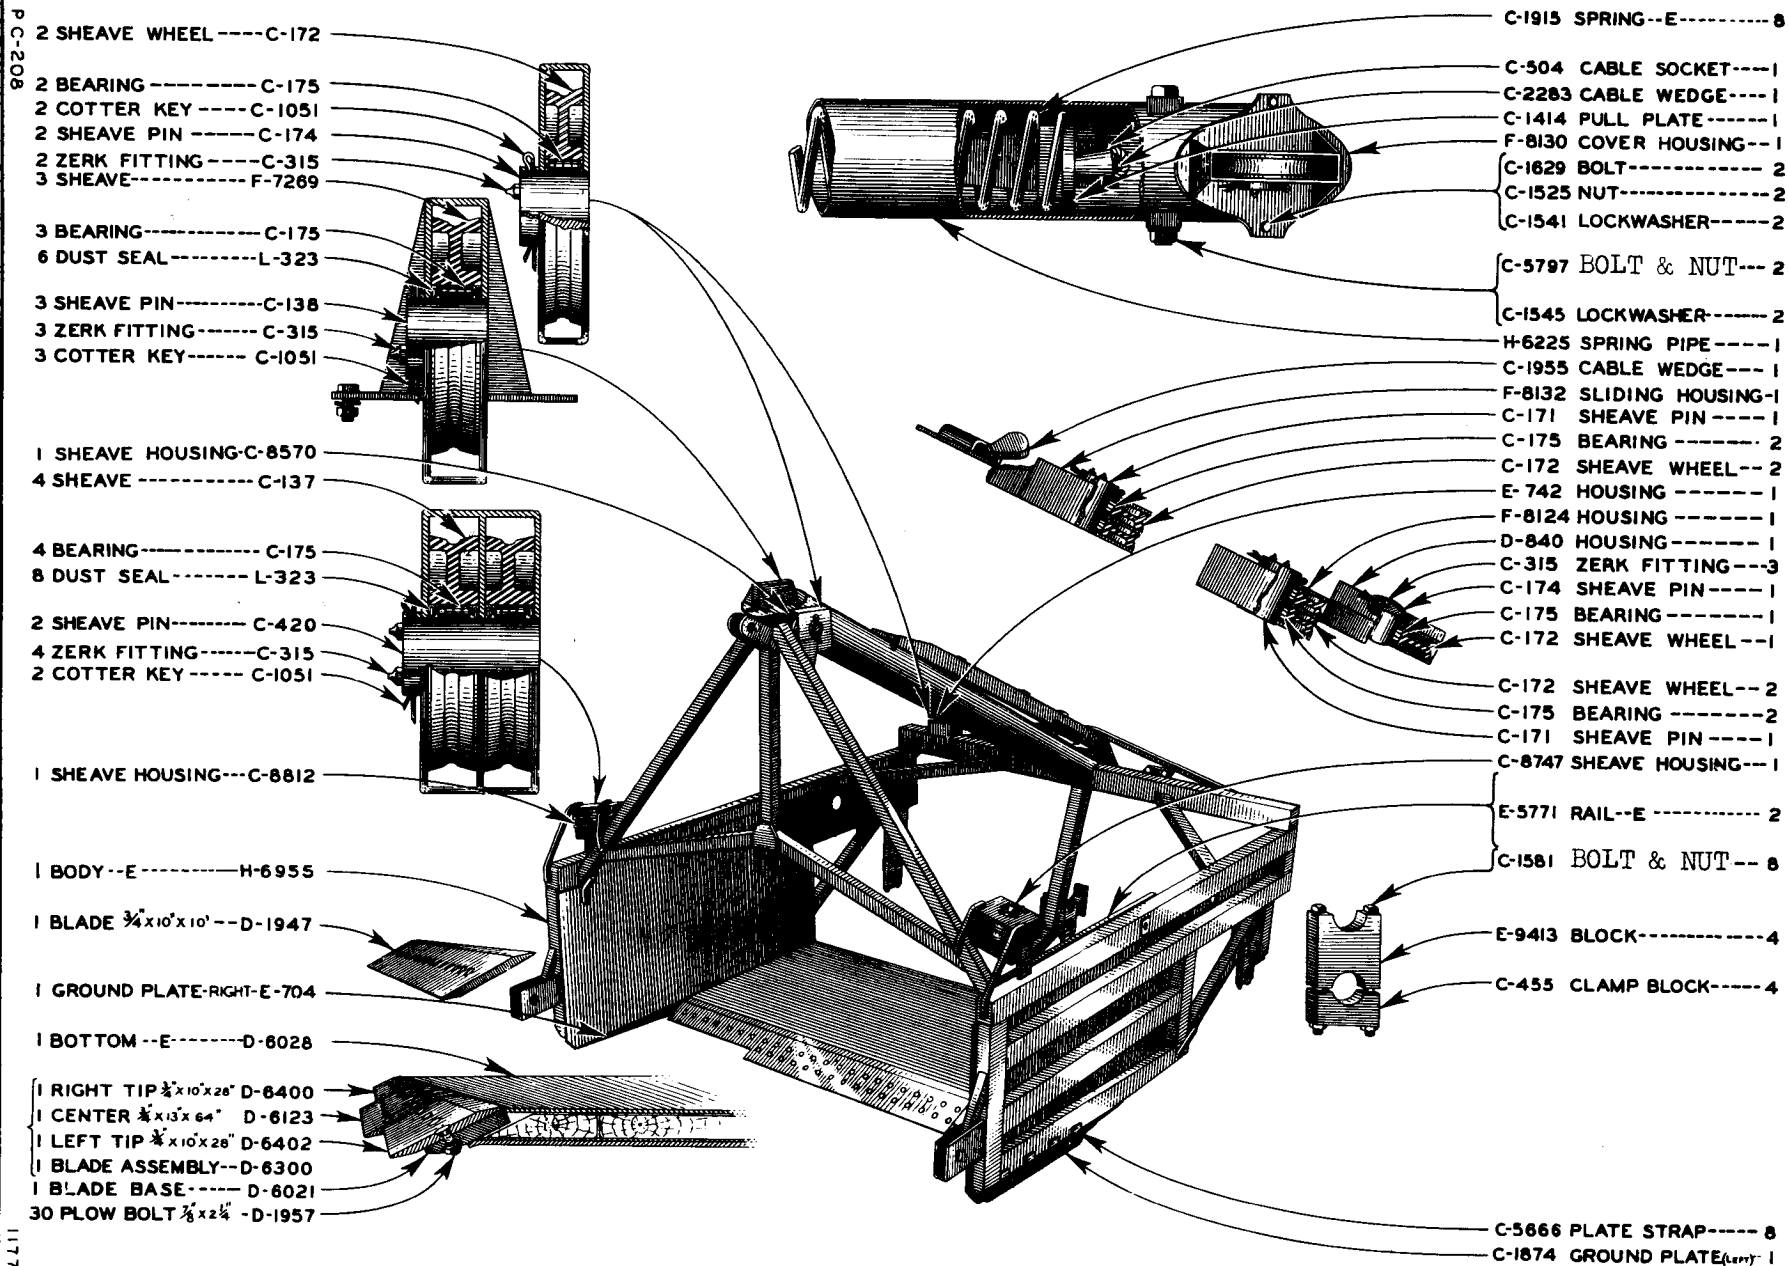

EFFECTIVE WITH SERIAL NO. S7391 YRISE & UP
ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

YOKE GROUP

2 SHEAVE WHEEL--- C-137
2 BEARING----- C-175
4 DUST SEAL----- L-323
2 PIN-----C-138
4 ZERK FITTING-----C-315

2 COTTER KEY-----C-1051
2 BRACKET BEARING
ADJUSTING NUT---C-498
2 BOLT-----D-2777

2 SHEAVE WHEEL--- C-137
2 BEARING-----C-175
4 DUST SEAL-----L-323

2 SHEAVE PIN-----C-138

2 COTTER KEY-----C-1051
4 BEARING CONE-----C-18
8 ZERK FITTING-----C-315
4 BEARING CUP-----C-1

1 BRACKET LEFT----E-3245
1 BRACKET RIGHT---E-4648
1 SHEAVE HOUSING--C-2958
1 SHEAVE HOUSING--E-3598
1 COTTER KEY-----C-1561
1 NUT-----R-3458

1 BUSHING-----C-518
2 CAPSCREW-----C-1600
1 COVER-----C-5425

1 BUTTON HEAD--H-9362
1 BUSHING-----C-492
1 FORGING-----C-3868

(UNIVERSAL PIN ASSEM.-R-181
1 COTTER KEY-----C-2508
1 NUT-----C-501
1 BOLT-----H-8226
1 ZERK FITTING-----C-315

C-412 QUAD. SHEAVE PIN--1
C-8810 SHEAVE HOUSING---1
C-445 CABLE WEDGE---1
E-7086 SHEAVE HOUSING--1
C-504 CABLE SOCKET---1
C-133 ROLLER-----1
C-12 BEARING-----2
L-135 DUST SEAL-----2
C-609 ROLLER PIN-----1
C-980 TRIPLE SHV. PIN--1

C-172 SHEAVE WHEEL----8
E-6286 SHEAVE HOUSING--1
C-175 BEARING-----8
C-1051 COTTER KEY-----3
C-174 SINGLE SHV. PIN---1
C-315 ZERK FITTING----8
NOTE- ALL SHEAVES AND BEARING
IN HEAD ARE THE SAME SIZE.

E-1001 FRONT YOKE
STRUCTURE----1

(2 HINGE PIN ASSEM.-E-7538)
C-535 PIN-----2
C-501 NUT-----2
C-2508 COTTER KEY---2

2 SHEAVE WHEEL--- C-172
2 BEARING----- C-175

2 PIN-----C-174
2 ZERK FITTING-----C-315

2 COTTER KEY-----C-1051

2 BRACKET BEARING
ADJUSTING NUT---C-498
2 BOLT & NUT-D-2777

2 SHEAVE WHEEL--- C-137
2 BEARING-----C-175
4 DUST SEAL-----L-323

2 SHEAVE PIN-----C-138

2 COTTER KEY-----C-1051
4 BEARING CONE-----C-16
6 ZERK FITTING-----C-315
4 BEARING CUP-----C-1

1 BRACKET LEFT---- F-323
1 BRACKET RIGHT--- F-7373 & C-976
1 SHEAVE HOUSING-C-2958
1 SHEAVE HOUSING-E-3598
1 COTTER KEY-----C-1561
1 NUT-----R-3458

1 BUSHING-----E-3355
2 CAPSCREW-----C-1600
1 COVER-----C-5425
1 BUTTON HEAD-H-9362
1 BUSHING-----C-492
1 FORGING-----C-3868

(UNIVERSAL PIN ASSEM.-R-181
1 COTTER KEY-----C-2508
1 NUT-----C-501
1 BOLT-----H-8226
1 ZERK FITTING-----C-315

C-412 QUAD. SHEAVE PIN--1
F-318 SHEAVE HOUSING---1
C-445 CABLE WEDGE-----1
E-7086 SHEAVE HOUSING--1
C-504 CABLE SOCKET---1
C-133 ROLLER-----1
C-12 BEARING-----2
L-135 DUST SEAL-----2
C-609 ROLLER PIN-----1
C-980 TRIPLE SHV. PIN--1

C-172 SHEAVE WHEEL----8
E-6286 SHEAVE HOUSING--1
C-175 BEARING-----8
C-1051 COTTER KEY-----3
C-174 SINGLE SHV. PIN---1
C-315 ZERK FITTING-----8
NOTE- ALL SHEAVES AND BEARING
IN HEAD ARE THE SAME SIZE

D-9386 FRONT YOKE
STRUCTURE-----1

(2 HINGE PIN ASSEM.-E-7538)
C-535 PIN-----2
C-501 NUT-----2
C-2508 COTTER KEY---2

YOKE GROUP

EFFECTIVE WITH SERIAL NO. S 5691 YR13E & UP
ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

2-PIN-----C-420
4-ZERK FITTING---C-315
2-COTTER KEY----C-1051
8-DUST SEAL-----L-323
4-BEARING-----C-175
4-SHEAVE WHEEL----C-137

1-SHEAVE HOUSING---C-8813

2-COTTER KEY----C-1051
2-ROLLER-----C-131
2-BEARING-----C-177
4-DUST SEAL-----L-323
2-PIN-----C-532
2-ZERK FITTING---C-315

8-DUST SEAL-----L-135
8-BEARING-----C-12
4-ROLLER-----C-133
4-ROLLER HOUSING--H-2465
4-COTTER KEY----C-1558
4-PIN-----C-134
4-ZERK FITTING---C-315

C-503 CABLE SOCKET----1
C-502 CABLE WEDGE----1
C-4509 WING BOLT-----1
C-2068 WASHER-----1
C-8814 SHEAVE HOUSING---1

C-504 CABLE SOCKET----1
C-445 CABLE WEDGE----1
{C-1577 BOLT & NUT-2

C-131 ROLLER-----2
C-177 BEARING-----2
L-323 DUST SEAL-----4

C-531 PIN-----2
C-315 ZERK FITTING----2

TAIL GATE

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


APRON

- 2 LOCK PIN-----C-5359
- 2 APRON HINGE
PIN-----C-4442
- 4 BUSHING-----C-364
- 2 COTTER KEY-----C-1518
- 2 ZERK FITTING-----C-315

- C-137 SHEAVE WHEEL--- 2
- C-175 BEARING-----2
- L-323 DUST SEAL-----4
- C-420 SHEAVE PIN----- 1
- C-315 ZERK FITTING---- 2
- C-1051 COTTER KEY-----1

- 1 FRONT APRON
STRUCTURE-----E-2777

- E-3463 SHEAVE HOUSING--1

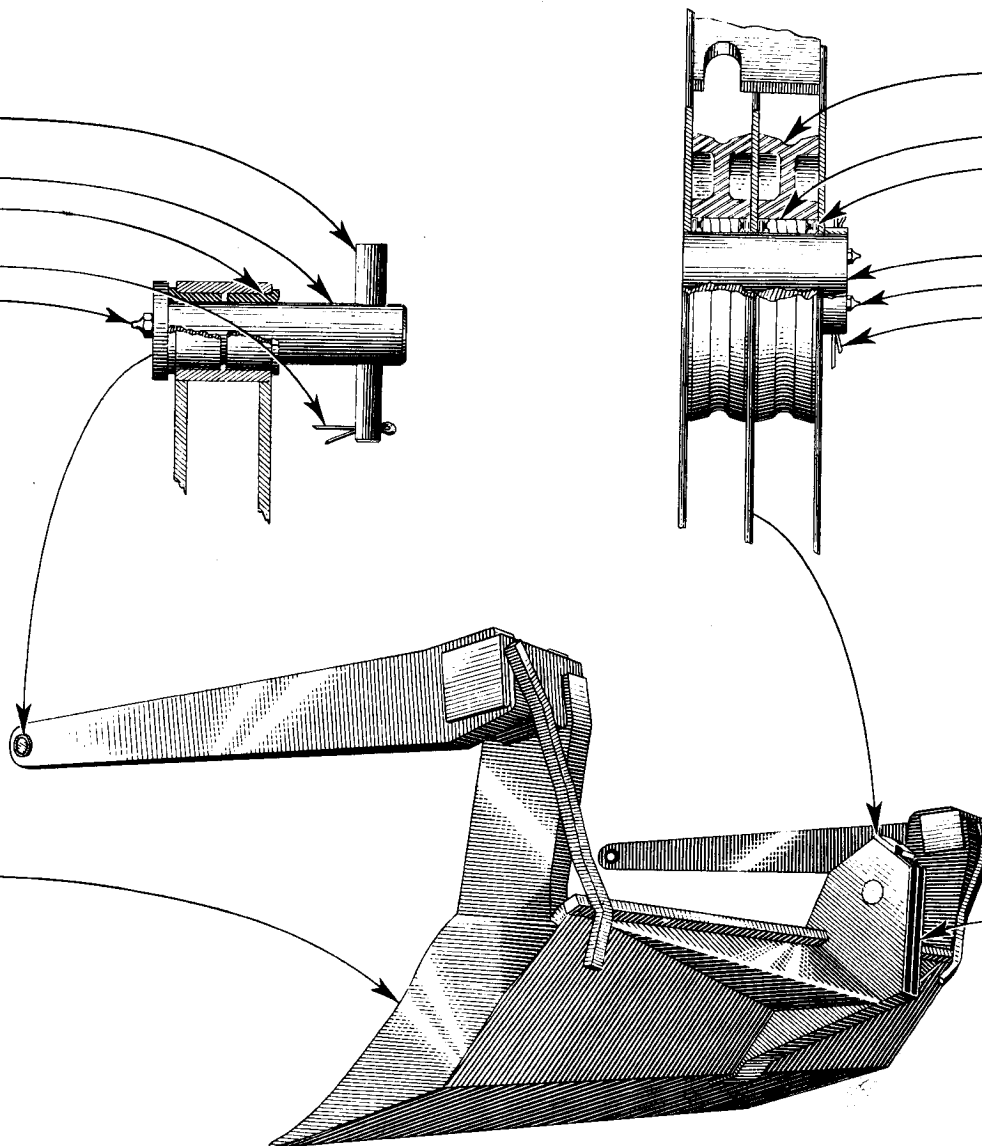

INSERT AFTER PAGE 5 IN MODEL E, F AND K CARRYALL FORM PC-208

MODEL F CARRYALL


5A

- 2 LOCK PIN-----C-5359
- 2 APRON HINGE
PIN-----C-4442
- 4 BUSHING-----C-364

- 2 COTTER KEY----C-1518
- 2 ZERK FITTING-----C-315

- 1 FRONT APRON
STRUCTURE---- F-7244

- C-1955 CABLE WEDGE----
- F-8139 HINGED CABLE
SOCKET -----
- C-4028 PIN -----
- C-1557 COTTER KEY----

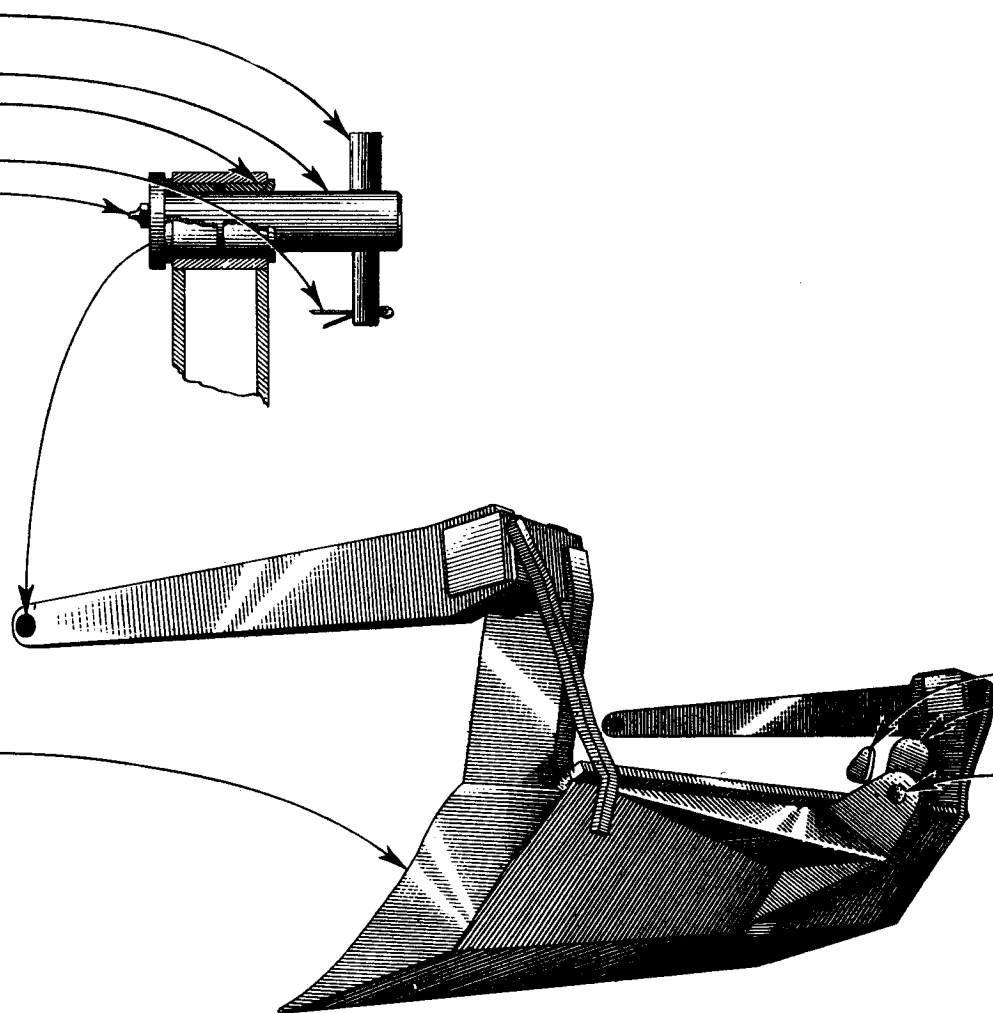

APRON

EFFECTIVE WITH SERIAL NUMBER S 6433 YR13G & UP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

873

FRONT AXLE GROUP

2 BUSHING-----C-518

1 FORGING NUT---R-3458

1 COTTER KEY----C-1561

H-7931 EYE FORGING-----1

2 BUTTONHEAD----H-9362

1 UNIVERSAL FORGING
ASSEMBLY-----D-2898C-8203 FRONT AXLE
STRUCTURE-----1

2 CAPSCREW-----C-1600

1 COVER-----C-5425

1 CABLE SOCKET---C-503

1 CABLE WEDGE----C-502

C-1591 BOLT & NUT---4

C-1545 LOCKWASHER-----4

1 COTTER ----- C-2508

1 NUT ----- D-2815

1 FORGING-----D-2695

1 PIN-----D-2812

1 BLOCK-----D-2674

(PARTS OF ASSEMBLY D-2898)


C-518 BUSHING-----2

C-1561 COTTER KEY---1

R-3458 NUT-----1

COMPLETE ASSY. TO BE ORDERED
FOR ALL SCRAPERS WHEN CHANGING
TO BOLT TYPE FORGING ASSEMBLY.

FRONT AXLE GROUP

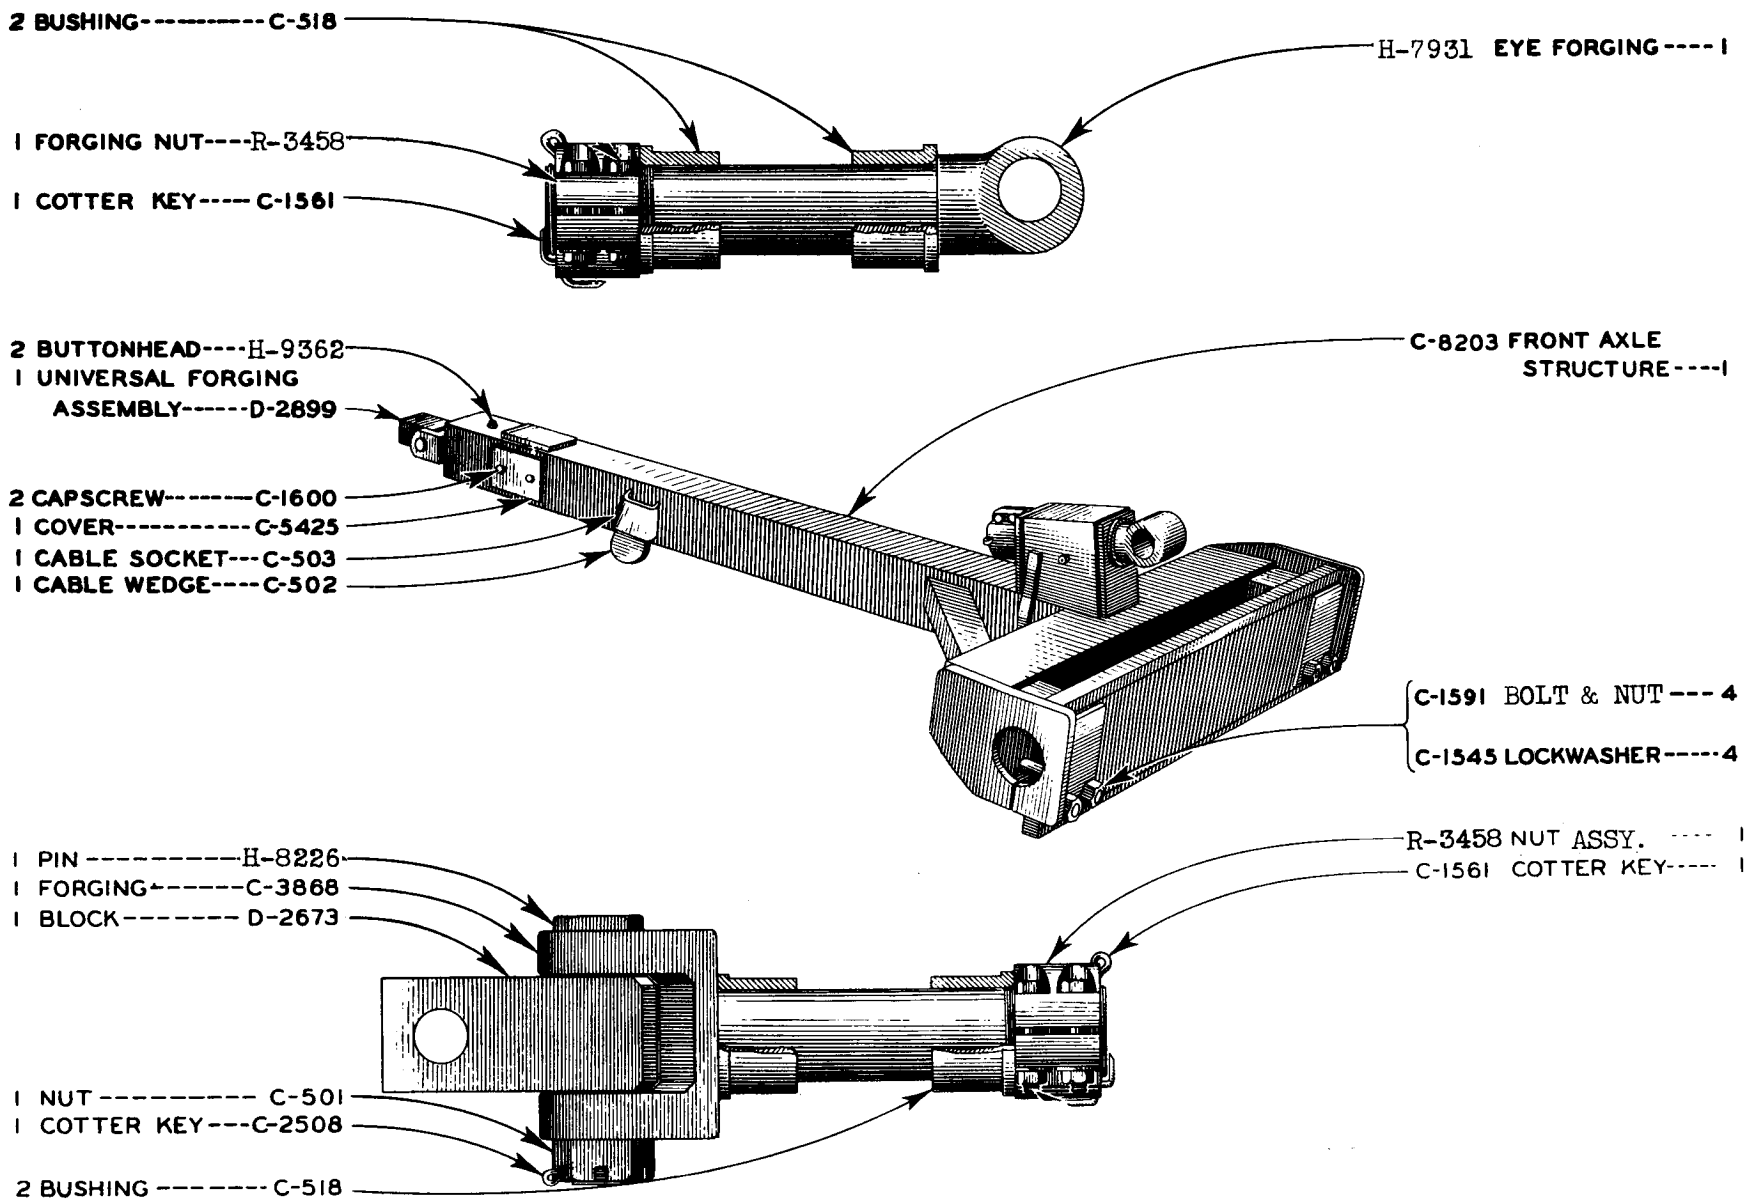

425

- 2 BUSHING----- C- 518
- 1 NUT----- R-3458
- 1 COTTER KEY---- C-1561

H-7931 FORGING----- 1

- 1 FRONT AXLE
STRUCTURE---- D-8455

- 1 COVER PLATE-----C-5425
- 2 CAPSCREW-----C-1600
- 2 BUTTONHEAD-----H-9362
- 1 UNIVERSAL FORGING
ASSEMBLY----- D-2899

- 1 CABLE SOCKET----C-503
- 1 CABLE WEDGE----C-502
- 1 PIN-----H-8226
- 1 FORGING-----C-3868
- 1 BLOCK-----D-2673

R-3458 NUT, ASSY. 1
C-1561 COTTER KEY----- 1

- 1 NUT----- C-501
- 1 COTTER KEY---C-2508
- 2 BUSHING----- C-518

FRONT AXLE GROUP

EFFECTIVE WITH SERIAL NO. 9 5691 YR13E & UP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


PUSHBEAM GROUP

1 ZERK FITTING----- C-315
1 SHEAVE PIN ----- C-174
1 COTTER KEY-----C-1051

1 BEARING----- C-175
1 SHEAVE----- C-172




1 SHEAVE HOUSING
1 HEAD ONLY----- E-1788

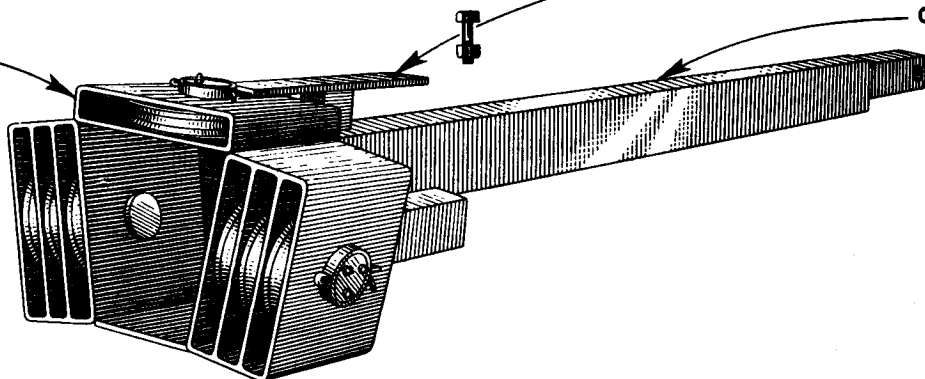

C-1527 NUT ----- 1
C-1644 CAPSCREW----- 1

C-5477 PUSH BEAM ----- 1

6 SHEAVE ----- C-172
6 BEARING ----- C-175
6 COTTER KEY ----- C-1051
2 SHEAVE PIN ----- C-980
6 ZERK FITTING ----- C-315

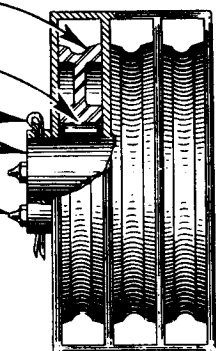


D-3262 PUSH BEAM HINGE
PIN----- 1

C-6695 LOCK PIN ----- 1

C-2303 COTTER KEY 2

C-315 ZERK FITTING ---1

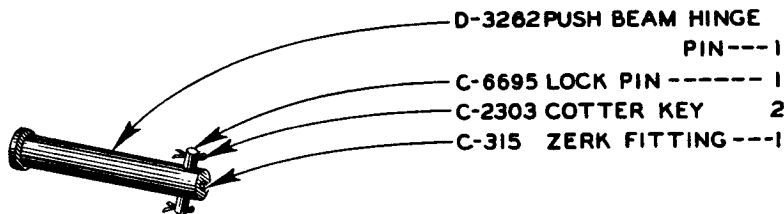


PUSHBEAM GROUP


EFFECTIVE WITH SERIAL NUMBER S6433 YR13G & UP
ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

- 1 ZERK FITTING----- C-315
- 1 SHEAVE PIN ----- C-174
- 1 COTTER KEY-----C-1051

- 1 BEARING----- C-175
- 1 SHEAVE----- C-172

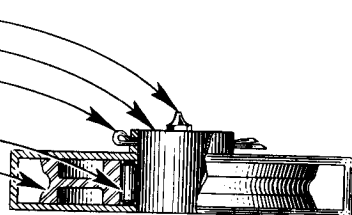

- 1 SHEAVE HOUSING
- 1 HEAD ONLY----- E-1788

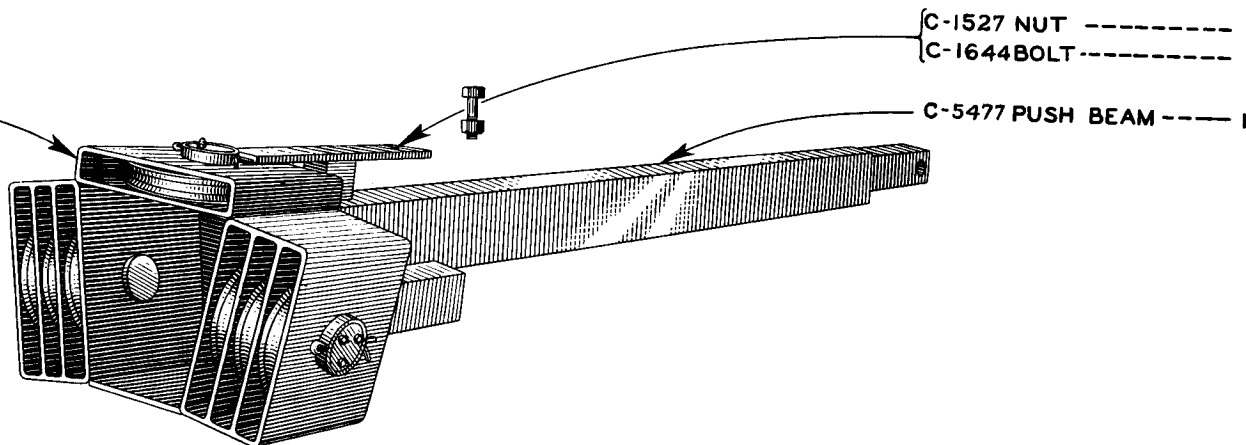

- C-1527 NUT -----
- C-1644 BOLT -----

- C-5477 PUSH BEAM -----

- 6 SHEAVE ----- C-172

- 6 BEARING ----- C-175

- 6 COTTER KEY----- C-1051

- 2 SHEAVE PIN----- C-980

- 6 ZERK FITTING--- C-315





- F-8143 PUSH BEAM HINGE
PIN---

- C-2649 LOCK PIN ----- 2

- C-2303 COTTER KEY ----- 4

- C-315 ZERK FITTING --- 1

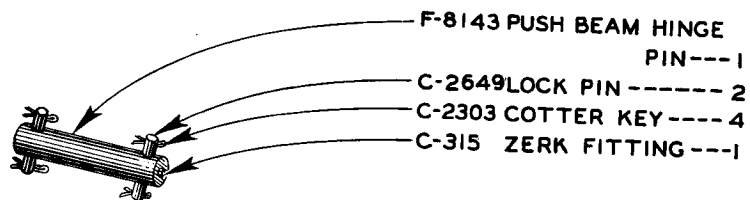


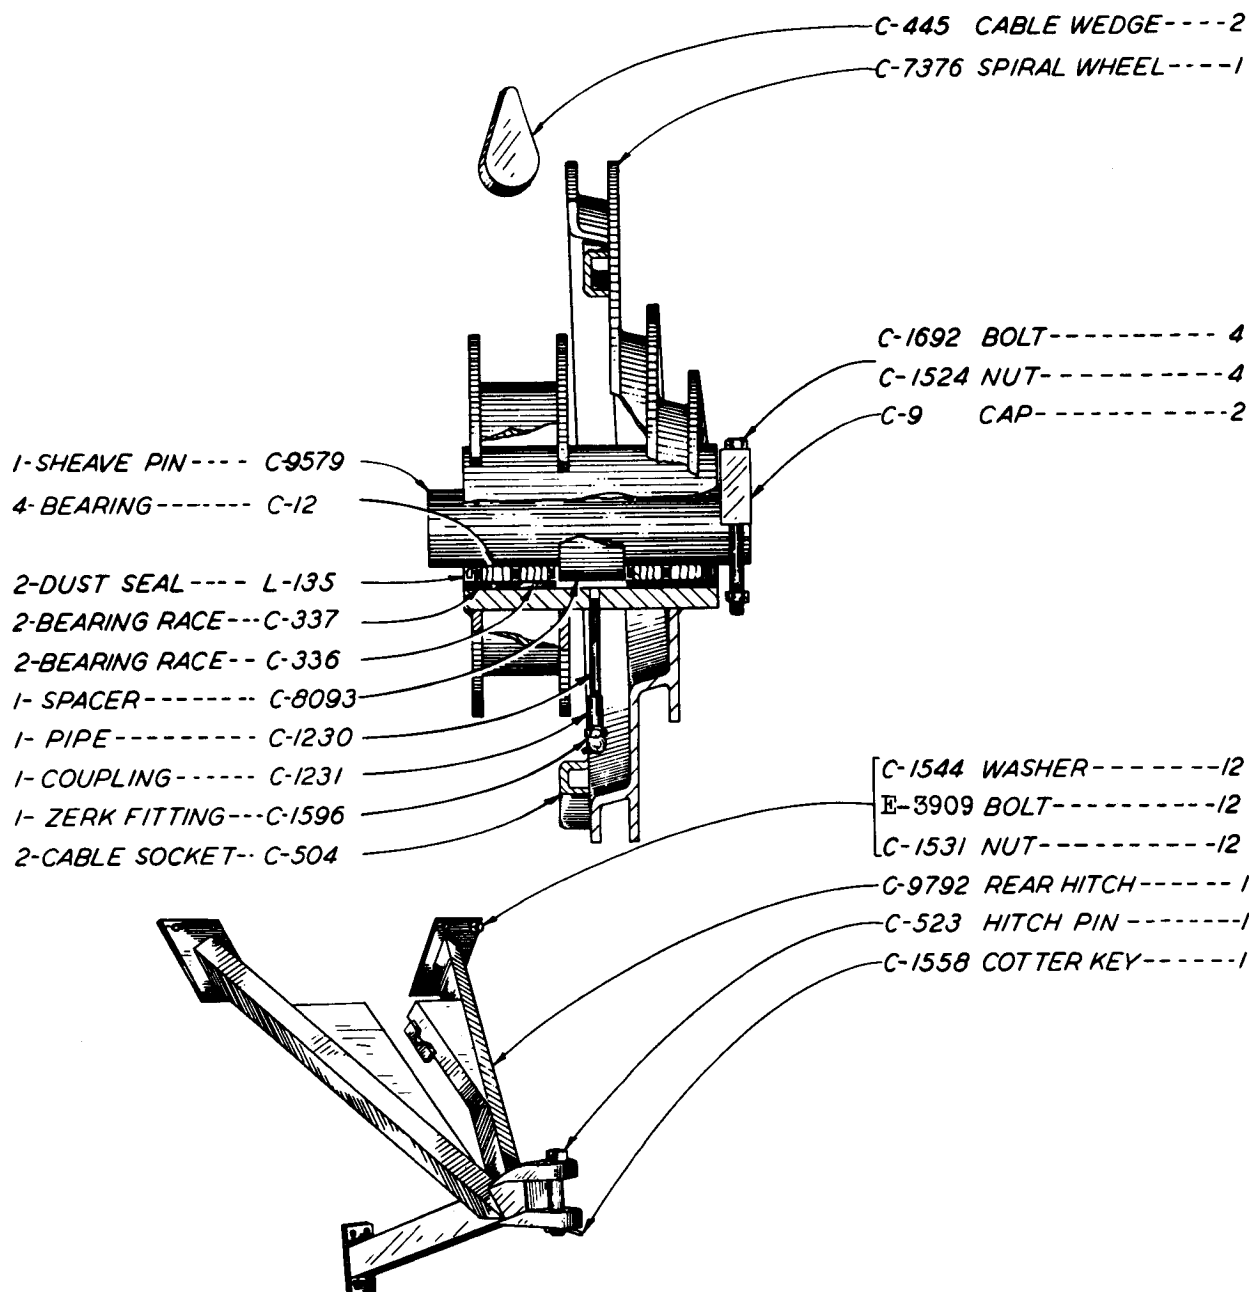

SPIRAL SHEAVE GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

SPIRAL SHEAVE GROUP

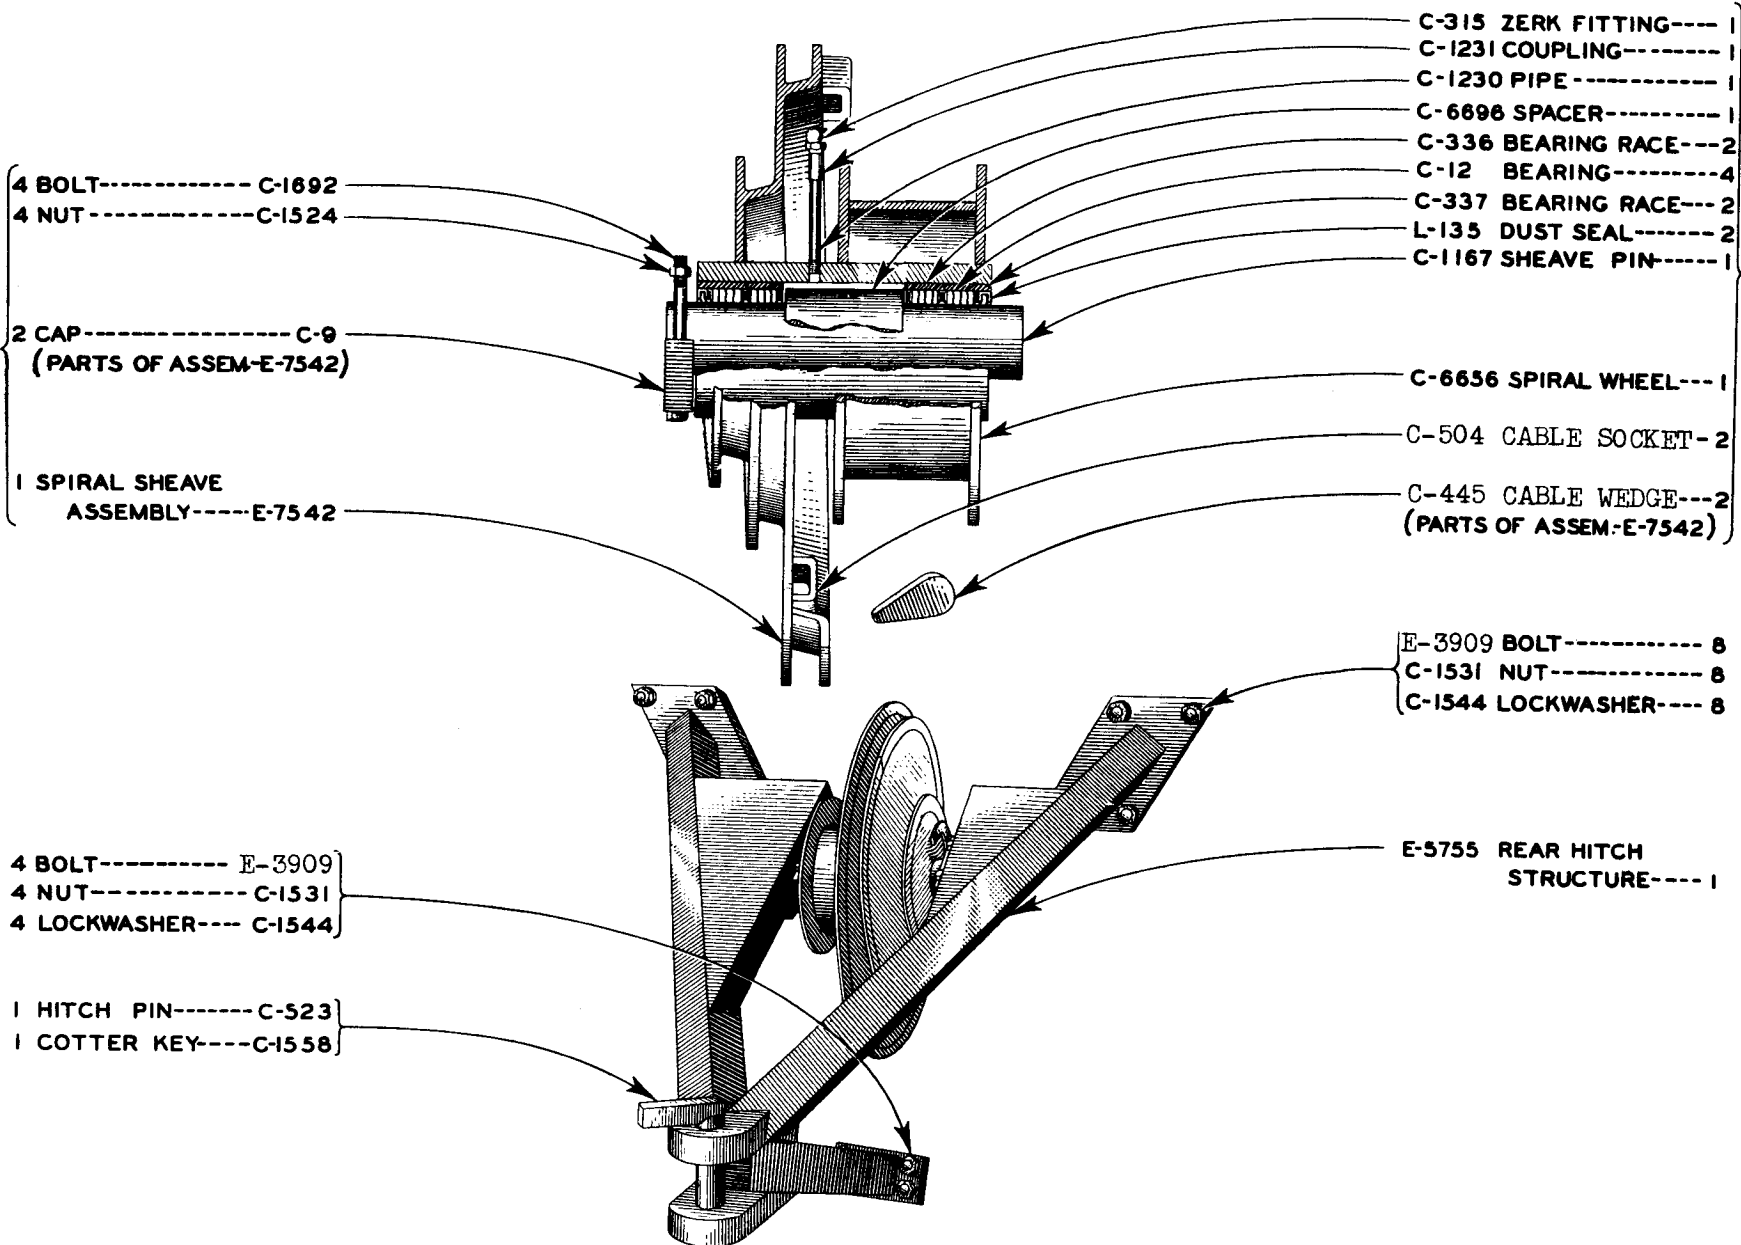

1-WHEEL-----C-106
1-SLIDING RING--C-108
1-LOCKING RING---C-109


1-BEARING CUP---C-320
1-BEARING CONE--C-11

1-COTTER KEY---C-1561
1-ALEMITE FITTING-H-9362

1-AXLE NUT-----R-3408
1-HUB CAP-----C-619
3-CAPSCREW-----C-1613
1-GASKET-----C-16-G

H-2817 GASKET-----1
C-1613 CAPSCREW-----4
C-620 RETAINER-----1
L-12105 OIL SEAL-----1
C-1412 FRONT AXLE--1

C-10 BEARING CONE--1
C-321 BEARING CUP---1

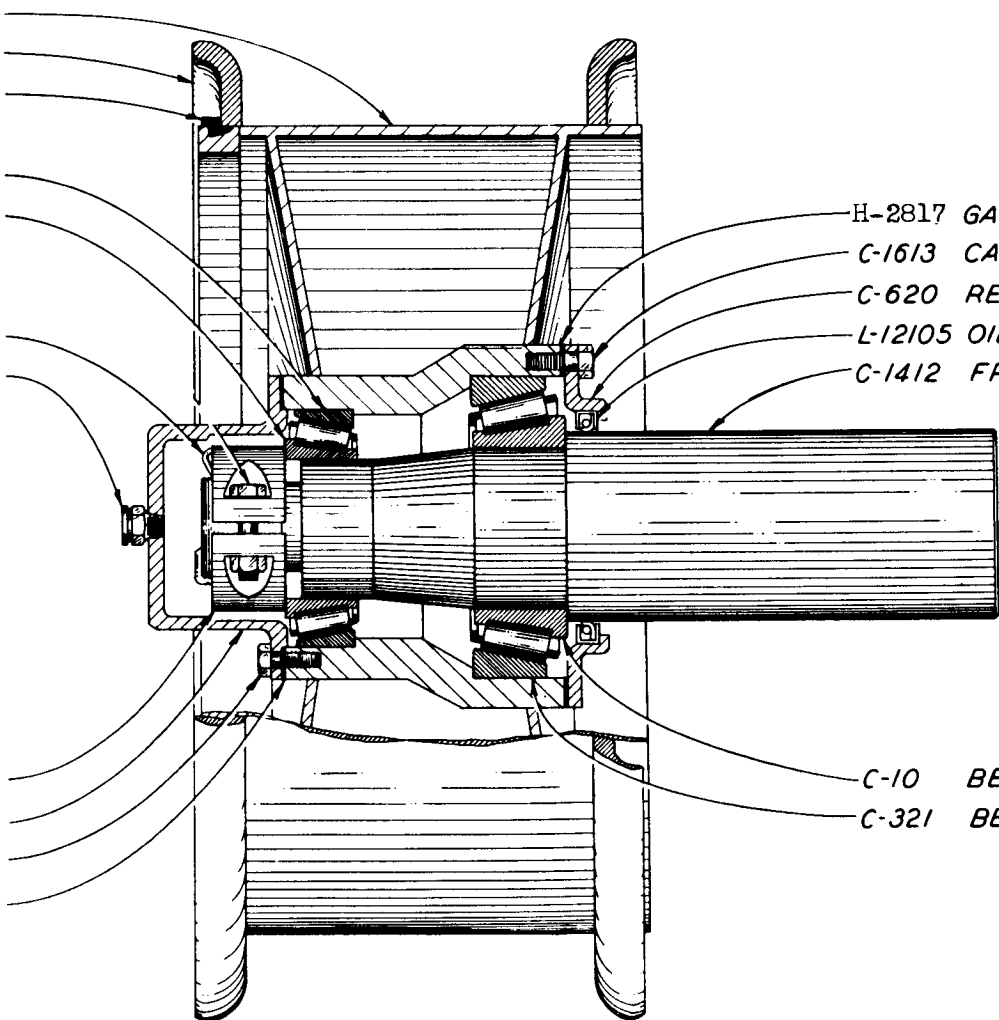


13.50X20 SINGLE FRONT WHEEL GROUP-

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

13.50 X 20 SINGLE FRONT WHEEL GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

EFFECTIVE WITH SERIAL NO. S 5691 YR13E & UP

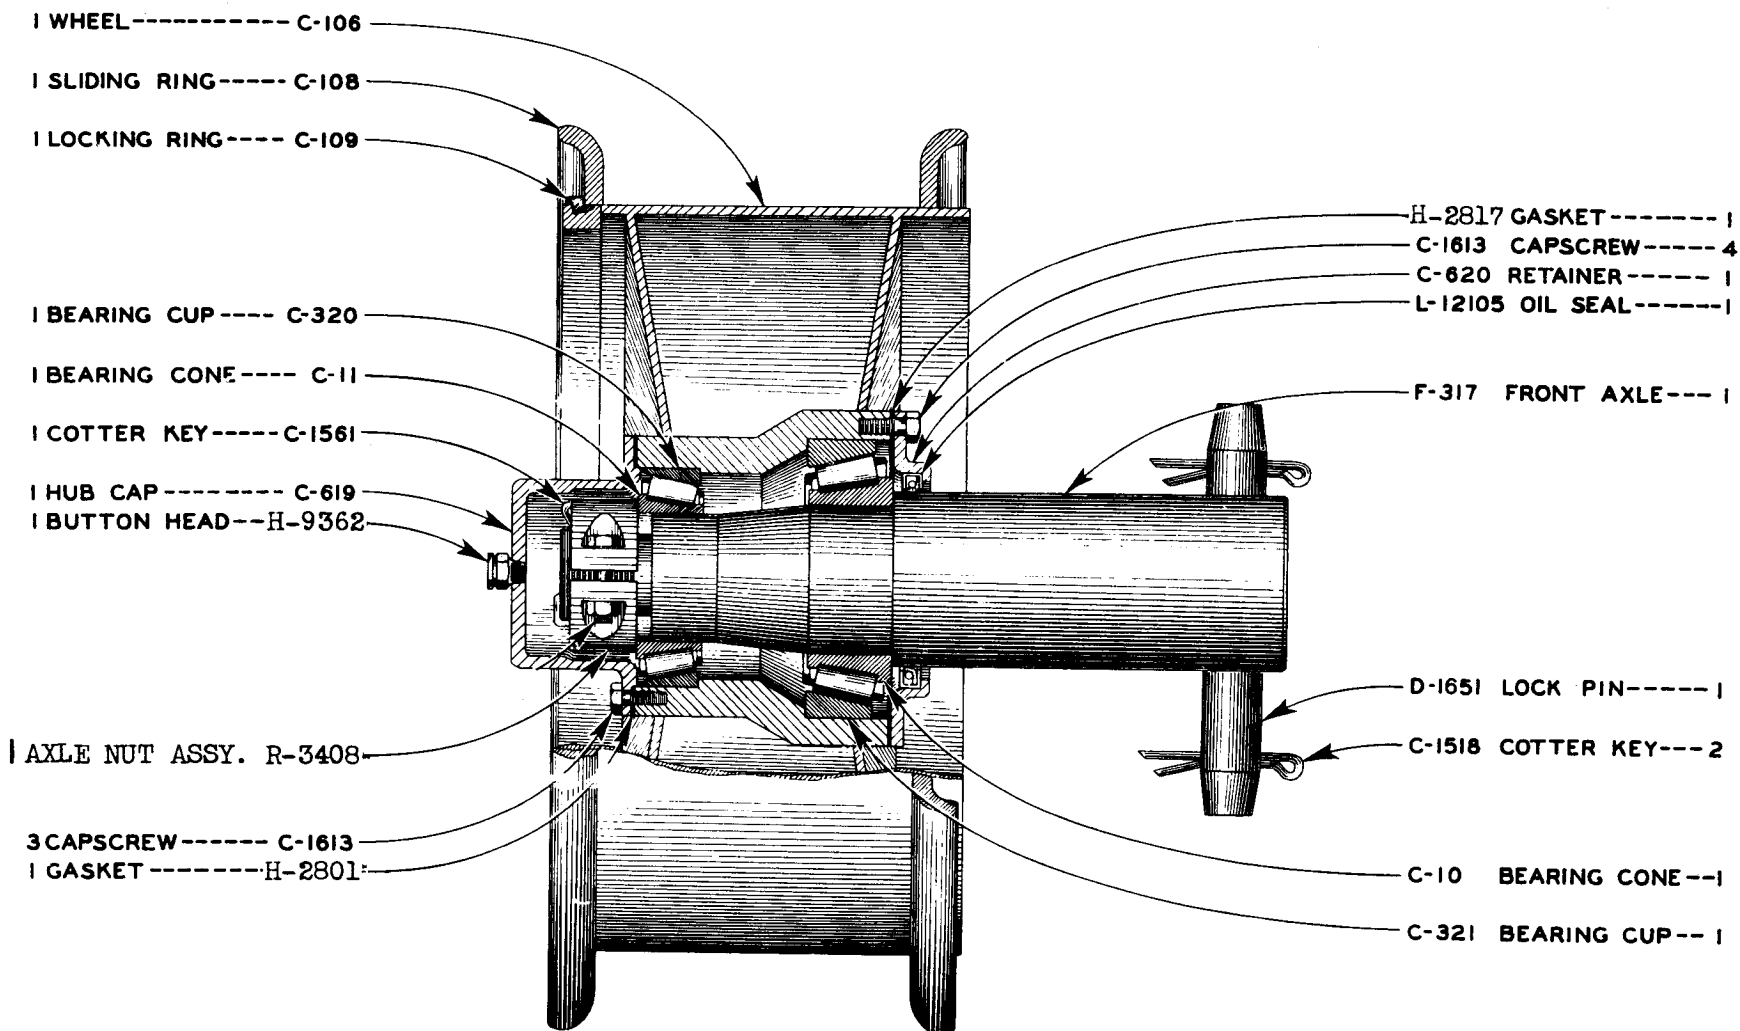

13.50 X 20 REAR WHEEL

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


- 1-DUAL WHEEL-----C-105
 2-SLIDING RING-----C-108
 2-LOCKING RING-----C-109


- 1-BEARING CUP-----C-320
 1-BEARING CONE-----C-11
 1-BOLT-----C-1685
 1-NUT-----C-1524
 1-AXLE NUT-----C-1324
 1-ALEMITE FITTING-C-1330
 1-OIL SEAL-----L-69102

- 3-CAPSCREW-----C-1623
 1-HUB CAP-----C-1278
 1-GASKET-----16-G

- C-321 BEARING CUP---1
 C-10 BEARING CONE--1
 C-1284 HUB CAP-----1
 C-1625 CAPSCREW---4
 C-1323 AXLE NUT----1
 L-69105 OIL SEAL----1
 C-1329 REAR AXLE----1

- C-1691 BOLT-----1
 C-1524 NUT-----1
 13017-G-GASKET-----1

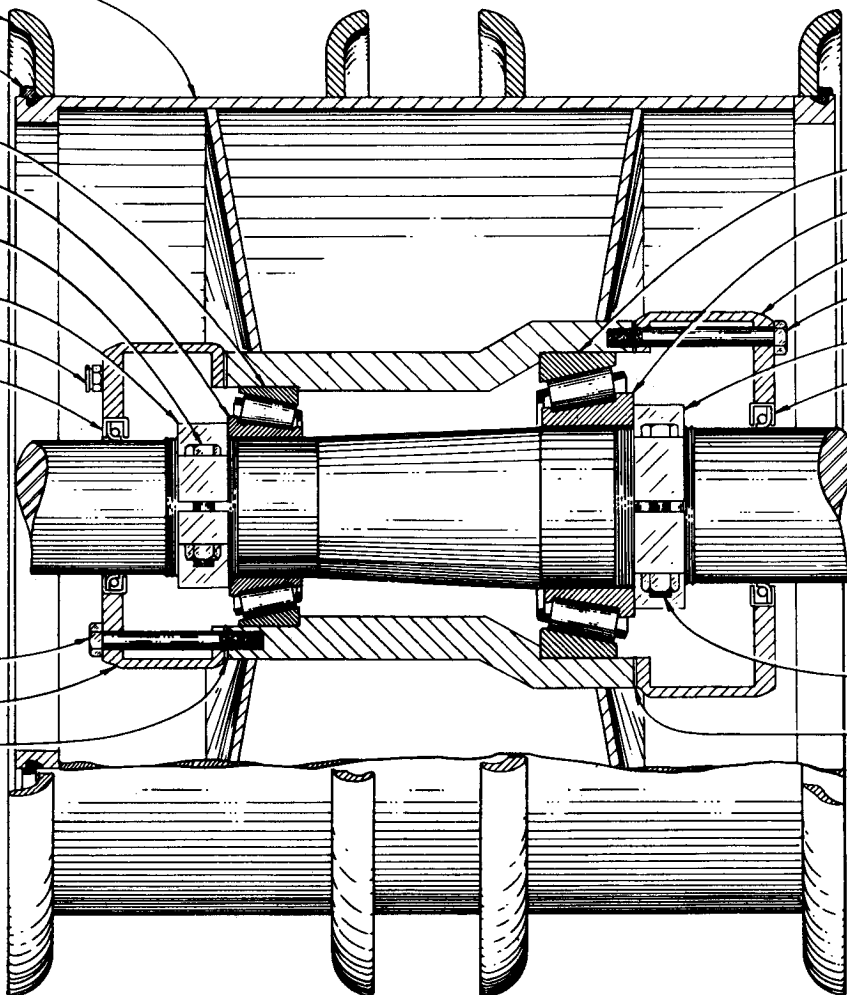

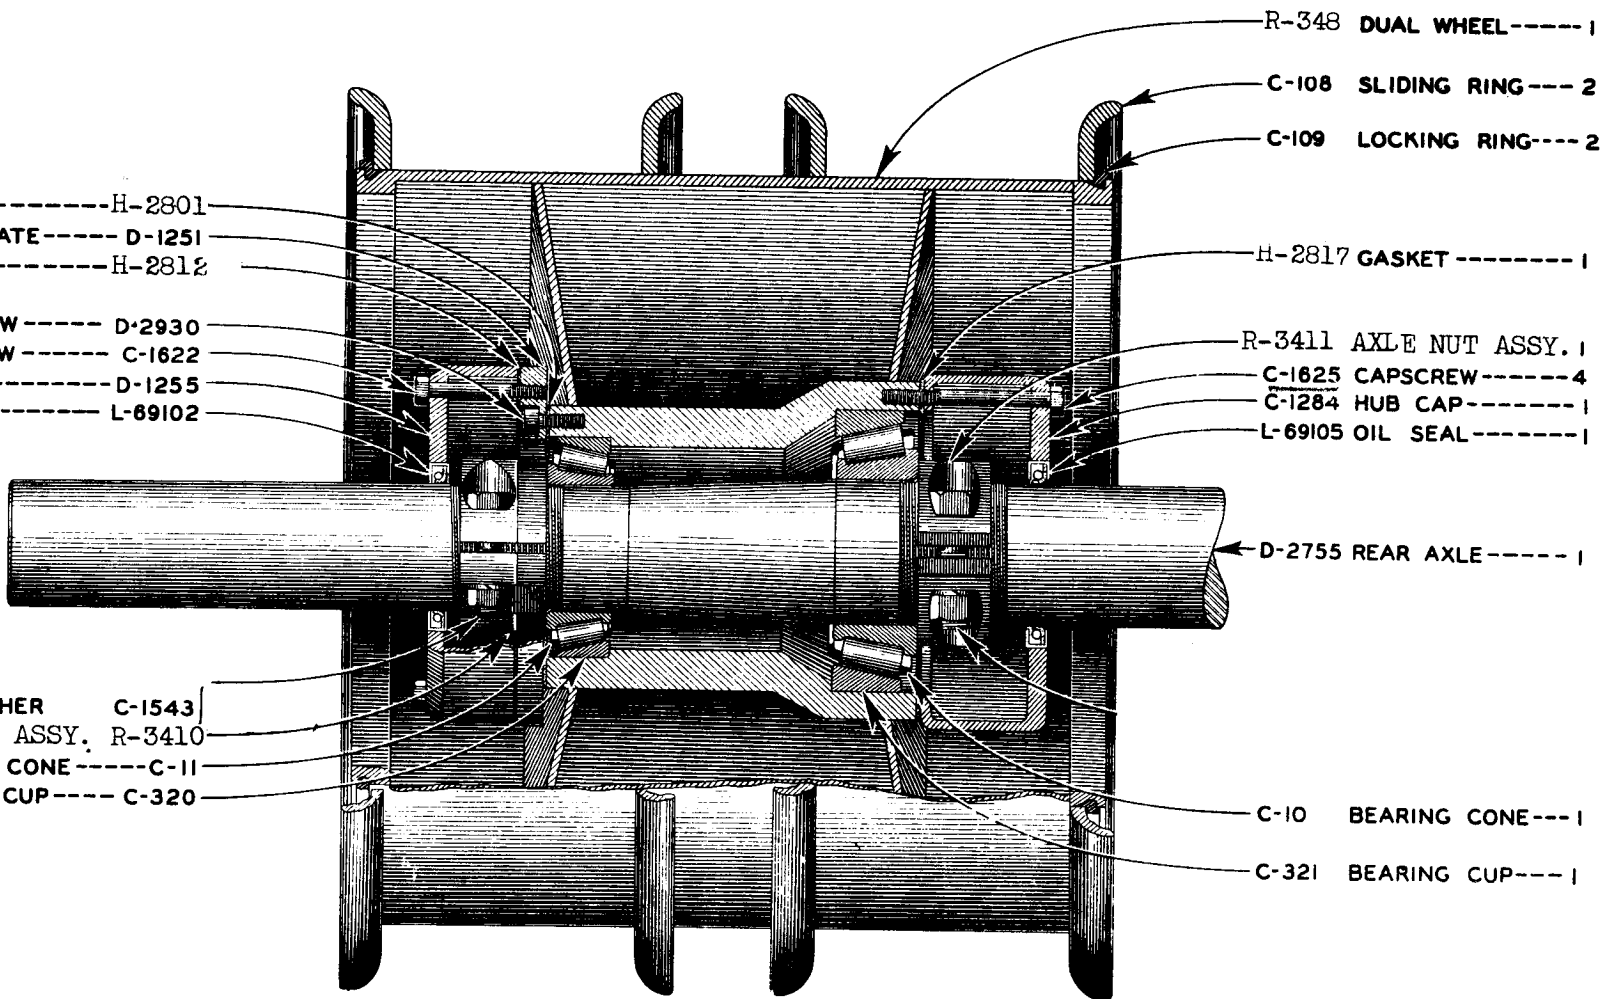

13.50 X 20 DUAL REAR WHEEL GROUP

EFFECTIVE WITH SERIAL NO. S4697YR1C & UP, S4719YR1B & UP
 ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

1- SINGLE WHEEL-----R-347
1- SLIDING RING-----C-639
1- LOCKING RING-----C-1277


1- BEARING CUP-----C-320
1- BEARING CONE-----C-11
1- AXLE NUT ASSY. R-3408

1- COTTER KEY-----C-1561
1- HUB CAP-----C-619
1- ALEMITE FITTING H-9362

3- CAPSCREW-----C-1613
1- GASKET-----H-2801

H-2817- GASKET-----1
C-1613 CAPSCREW-----4
C-620 RETAINER-----1
L-12105 OIL SEAL-----1
C-543 FRONT AXLE-----1

C-10 BEARING CONE----1
C-321 BEARING CUP-----1

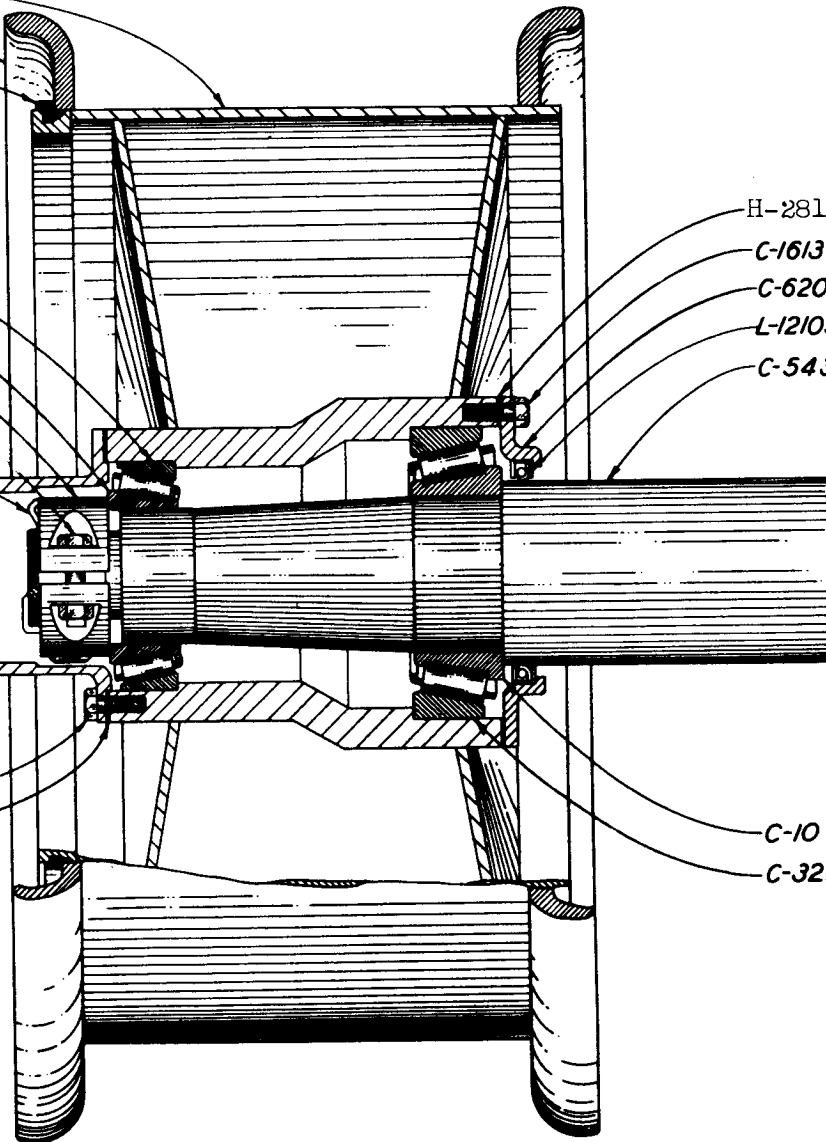

18X24 SINGLE FRONT WHEEL GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS


11A

MODEL E, F & K CARRIAGE

18X24 SINGLE FRONT WHEEL GROUP

EFFECTIVE WITH SERIAL NO. S 5691 YR13E & UP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

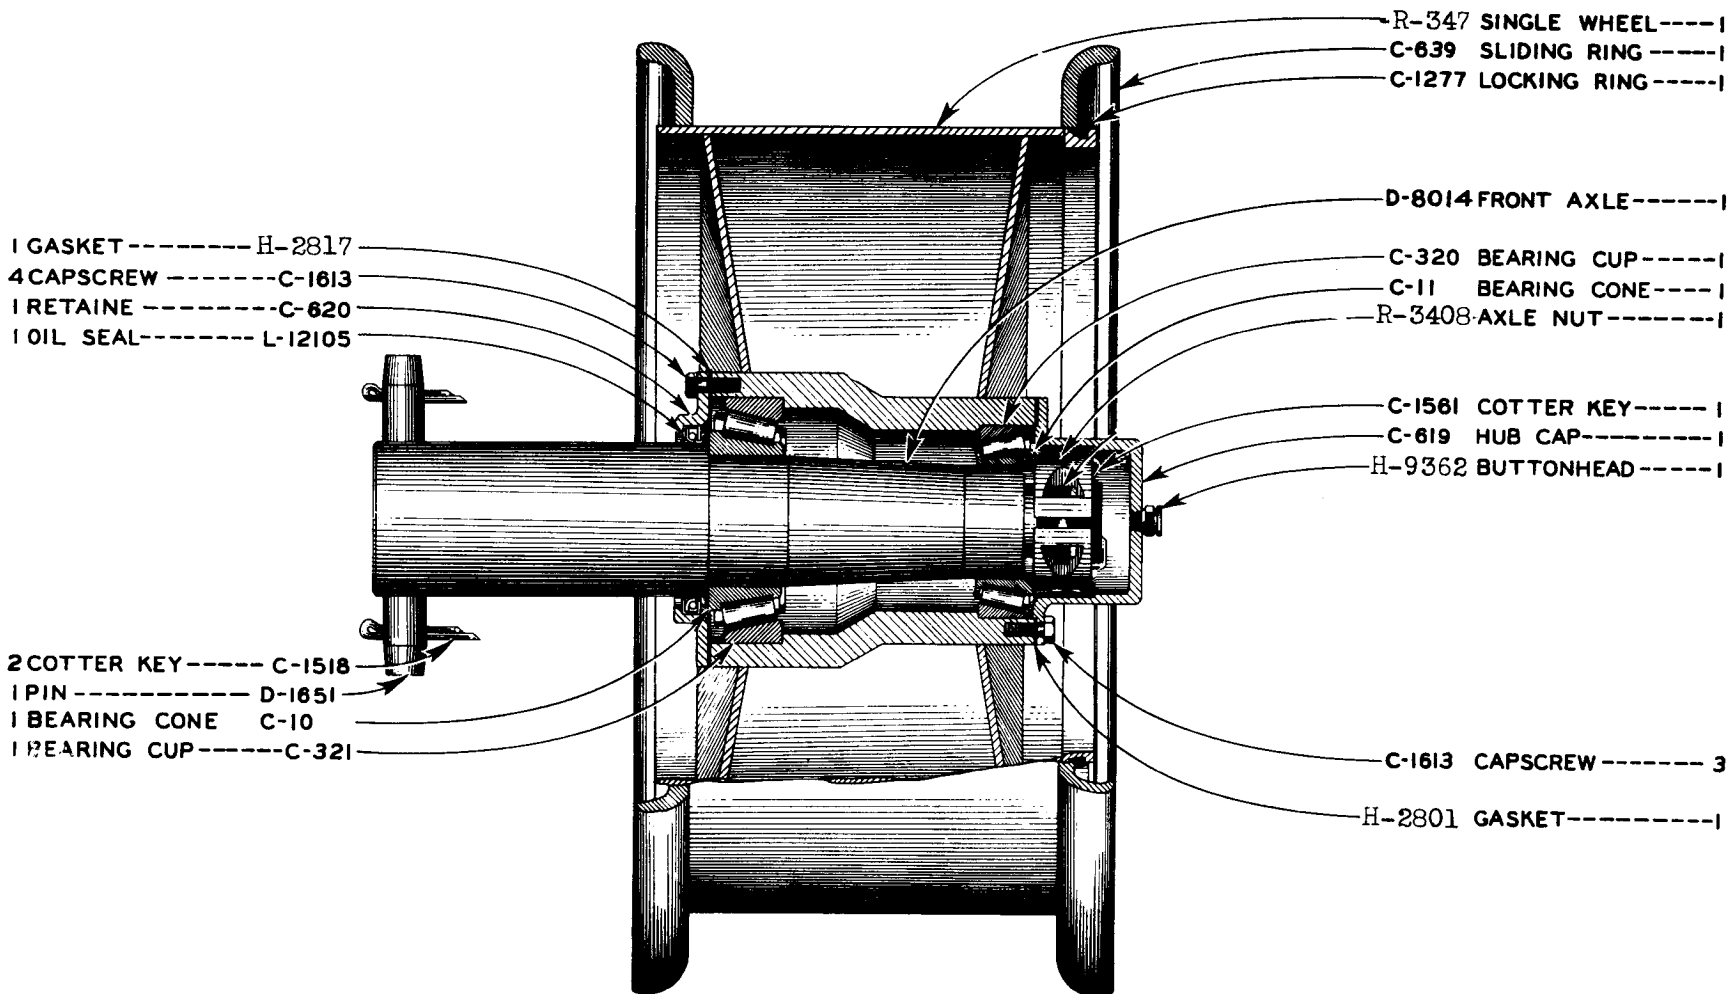

18 X 24 REAR WHEEL

1- SINGLE WHEEL---R-1390
 1- SLIDING RING---C-639
 1- LOCKING RING--C-1277

1- BEARING CUP--C-320
 1- BEARING CONE--C-11


1- AXLE NUT-----R-3414

1- ALEMITE FITTING H-9362
 1- OIL SEAL-----L-69102

3- CAPSCREW-----C-1623
 1- HUB CAP-----D-1255
 1- GASKET-----H-2801

C-321 BEARING CUP-----1
 C-10 BEARING CONE-----1
 C-1284 HUB CAP-----1
 C-1624 CAPSCREW-----4
 R-6362 AXLE NUT-----1
 L-69105 OIL SEAL-----1
 C-6146 REAR AXLE-----1

H-2817 GASKET-----1

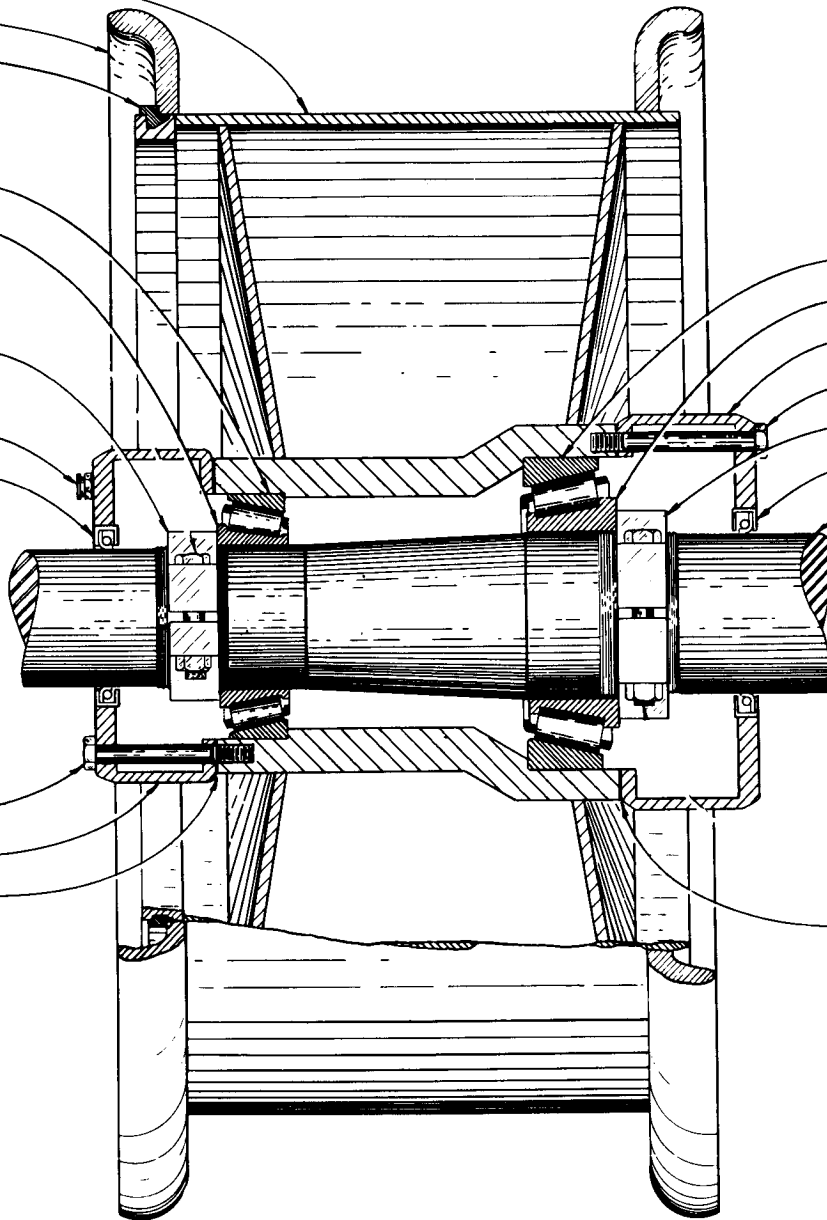

- 1 SINGLE WHEEL R-1390
- 1 DUAL WHEEL ---- C-1269
- 1 SLIDING RING ---- C-639
- 1 LOCKING RING ---- C-1277

- 1 GASKET ---- H-2801
- 1 BOLT PLATE ---- D-1251
- 1 GASKET ---- H-2812

- 3 CAPSCREW ---- D-2930
- 4 CAPSCREW ---- C-1622
- 1 HUBCAP ---- D-1255
- 1 OIL SEAL ---- L-69102

- 1 LOCKWASHER C-1543
- 1 AXLE NUT ---- R-3410
- 1 BEARING CONE ---- C-11
- 1 BEARING CUP ---- C-320

H-2817 GASKET ---- 1

R-3411 AXLE NUT ASSY. 1

C-1625 CAPSCREW ---- 4


C-1264 HUB CAP ---- 1

L-69105 OIL SEAL ---- 1

D-3028 REAR AXLE ---- 1


C-10 BEARING CONE --- 1

C-321 BEARING CUP --- 1

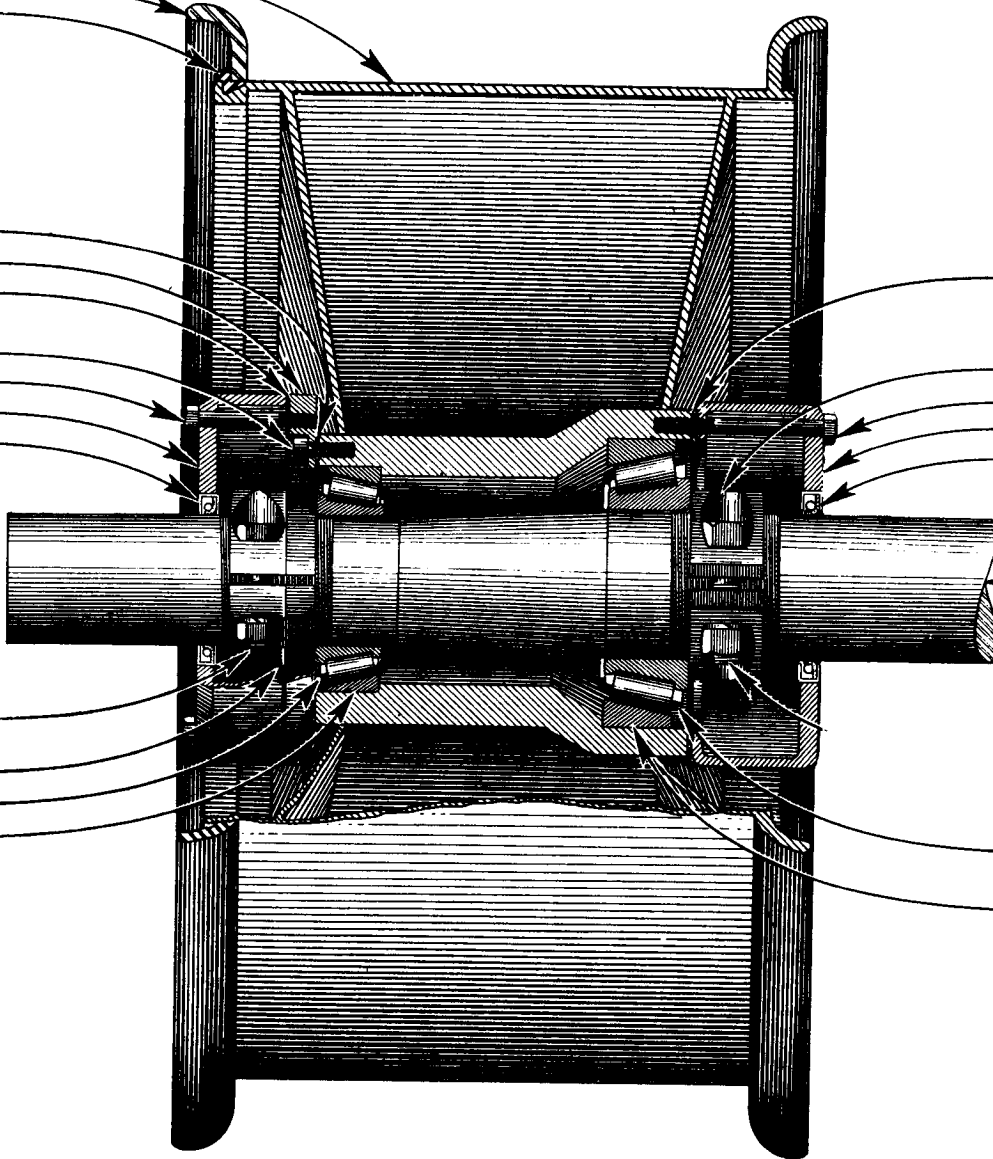


18X24 SINGLE REAR WHEEL GROUP

EFFECTIVE WITH SERIAL NO. S4697YR12C & UP, S4719YR13B & UP & S4777YR15B & UP
ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

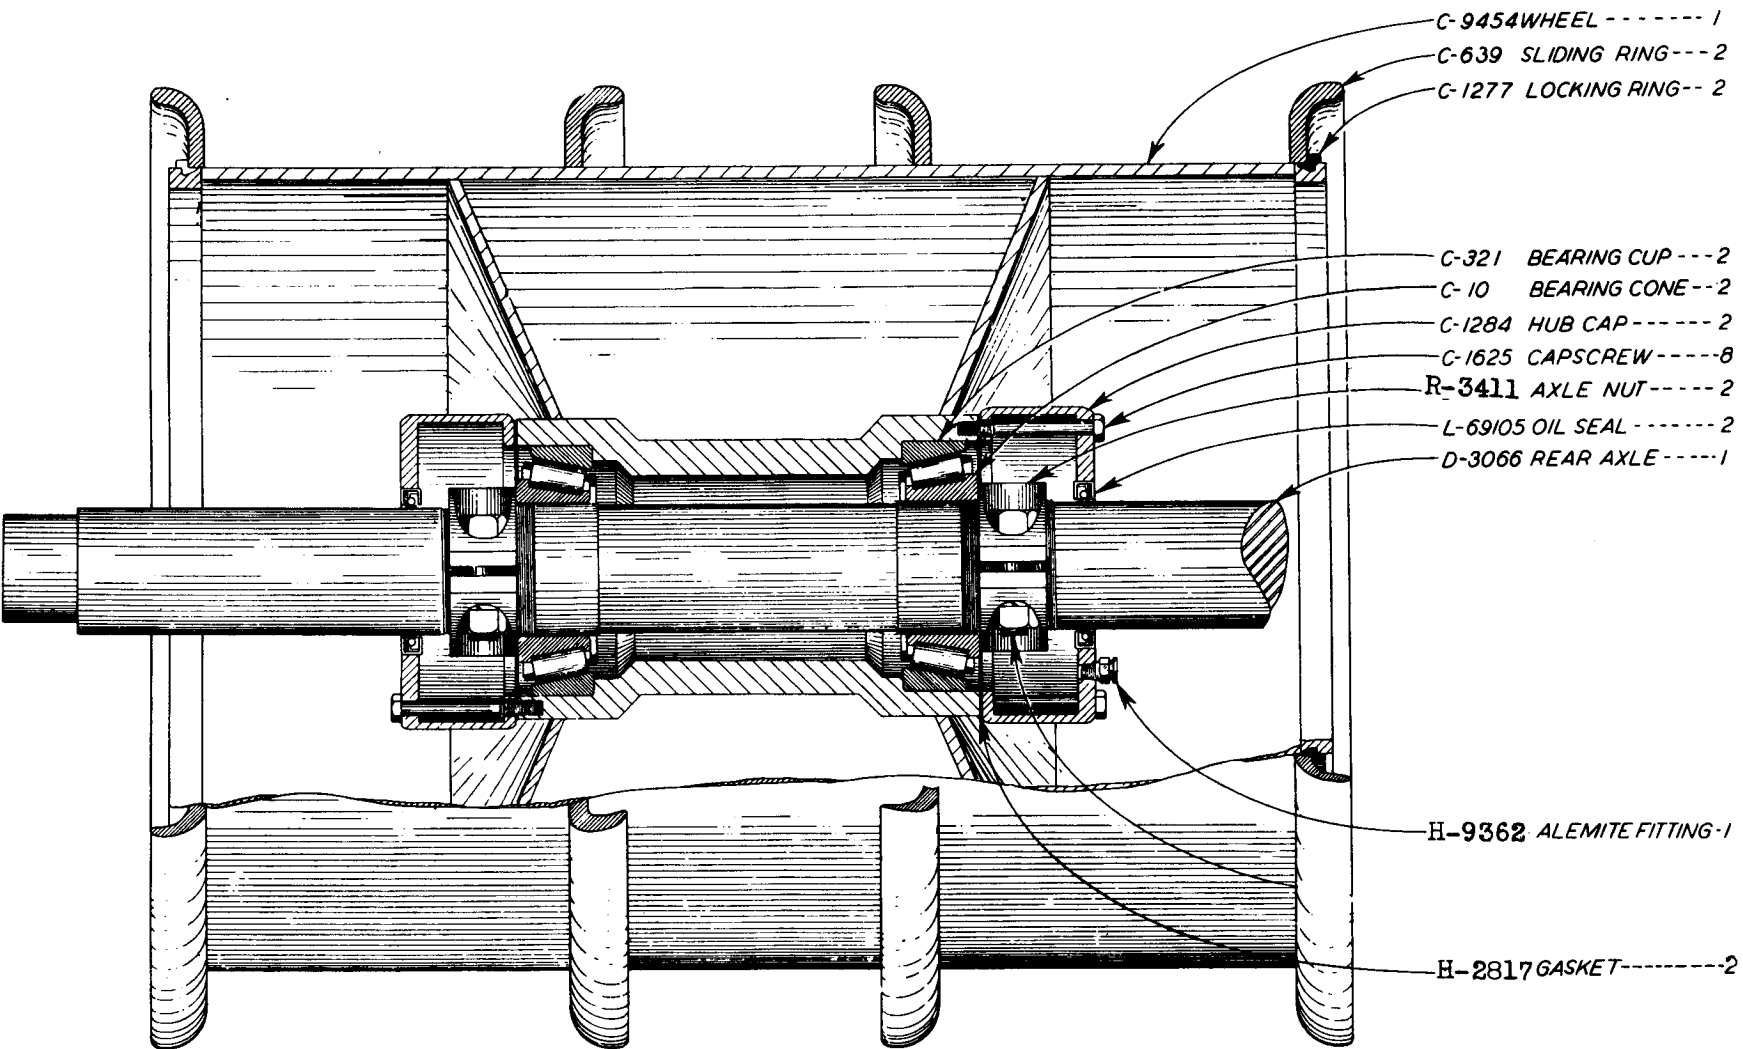


18X24 DUAL REAR WHEEL GROUP

EFFECTIVE WITH SERIAL NO. S469YR12C & UP, S4719YR13B & UP & S477YR15B & UP
 ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

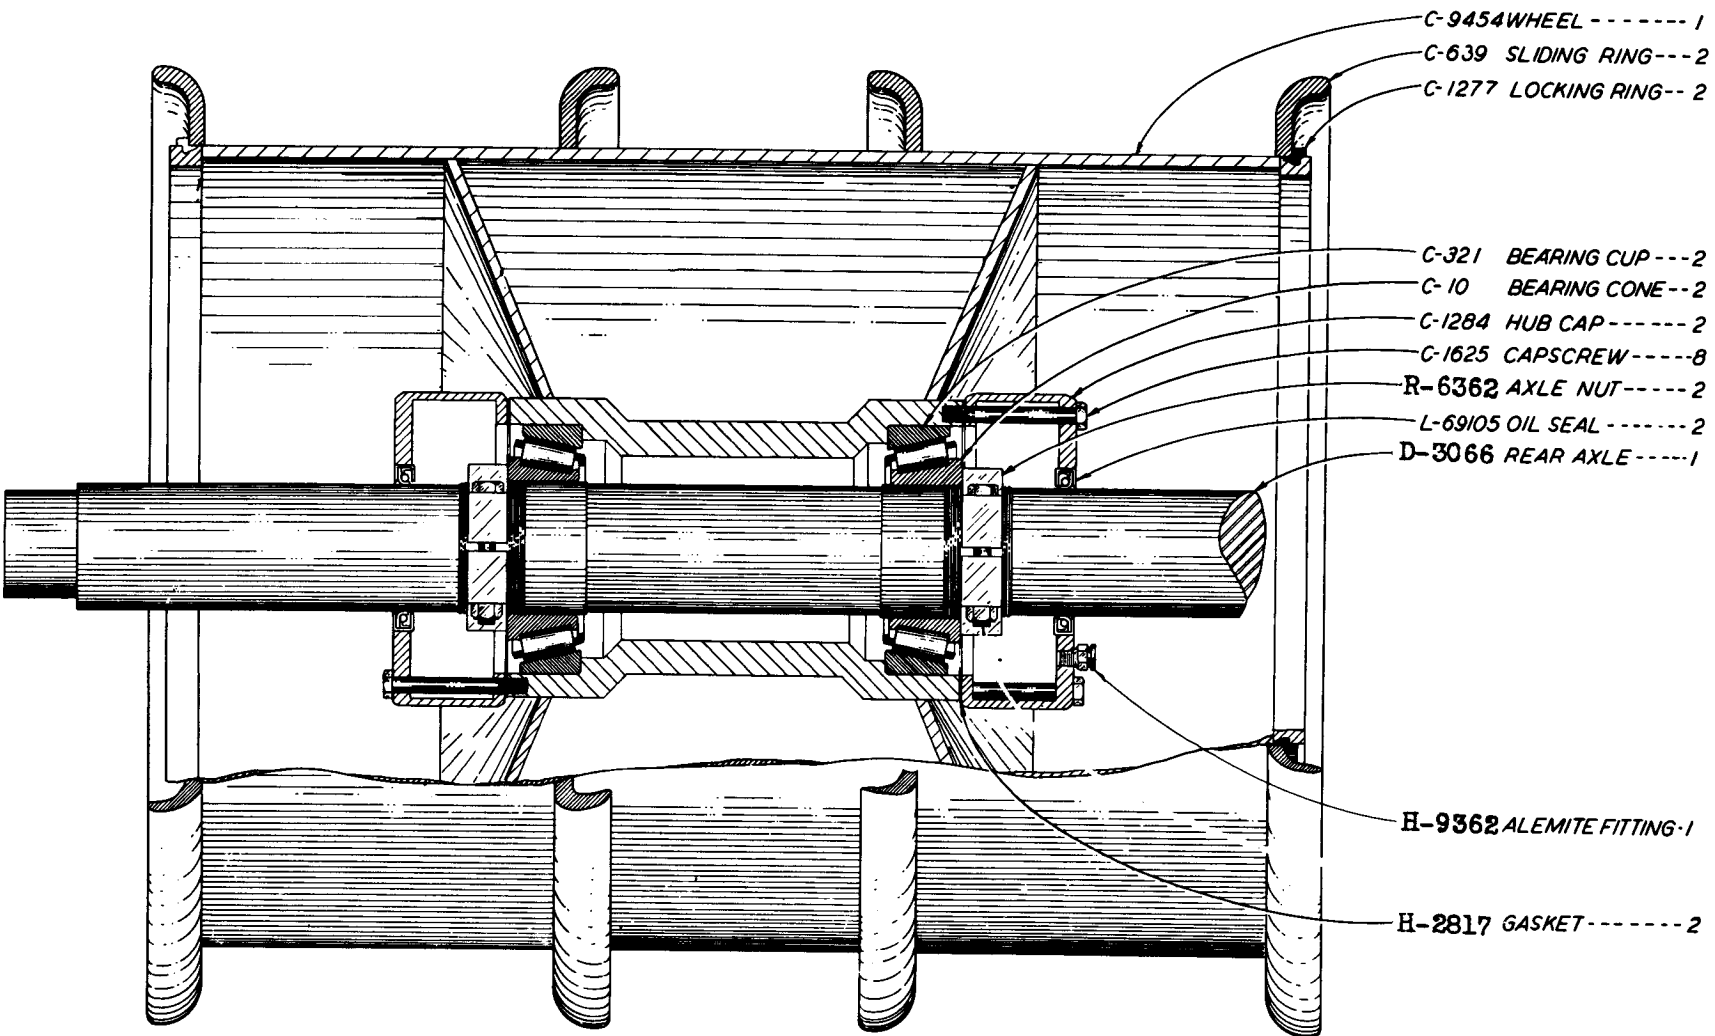

18 X 24 REAR WHEEL

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS

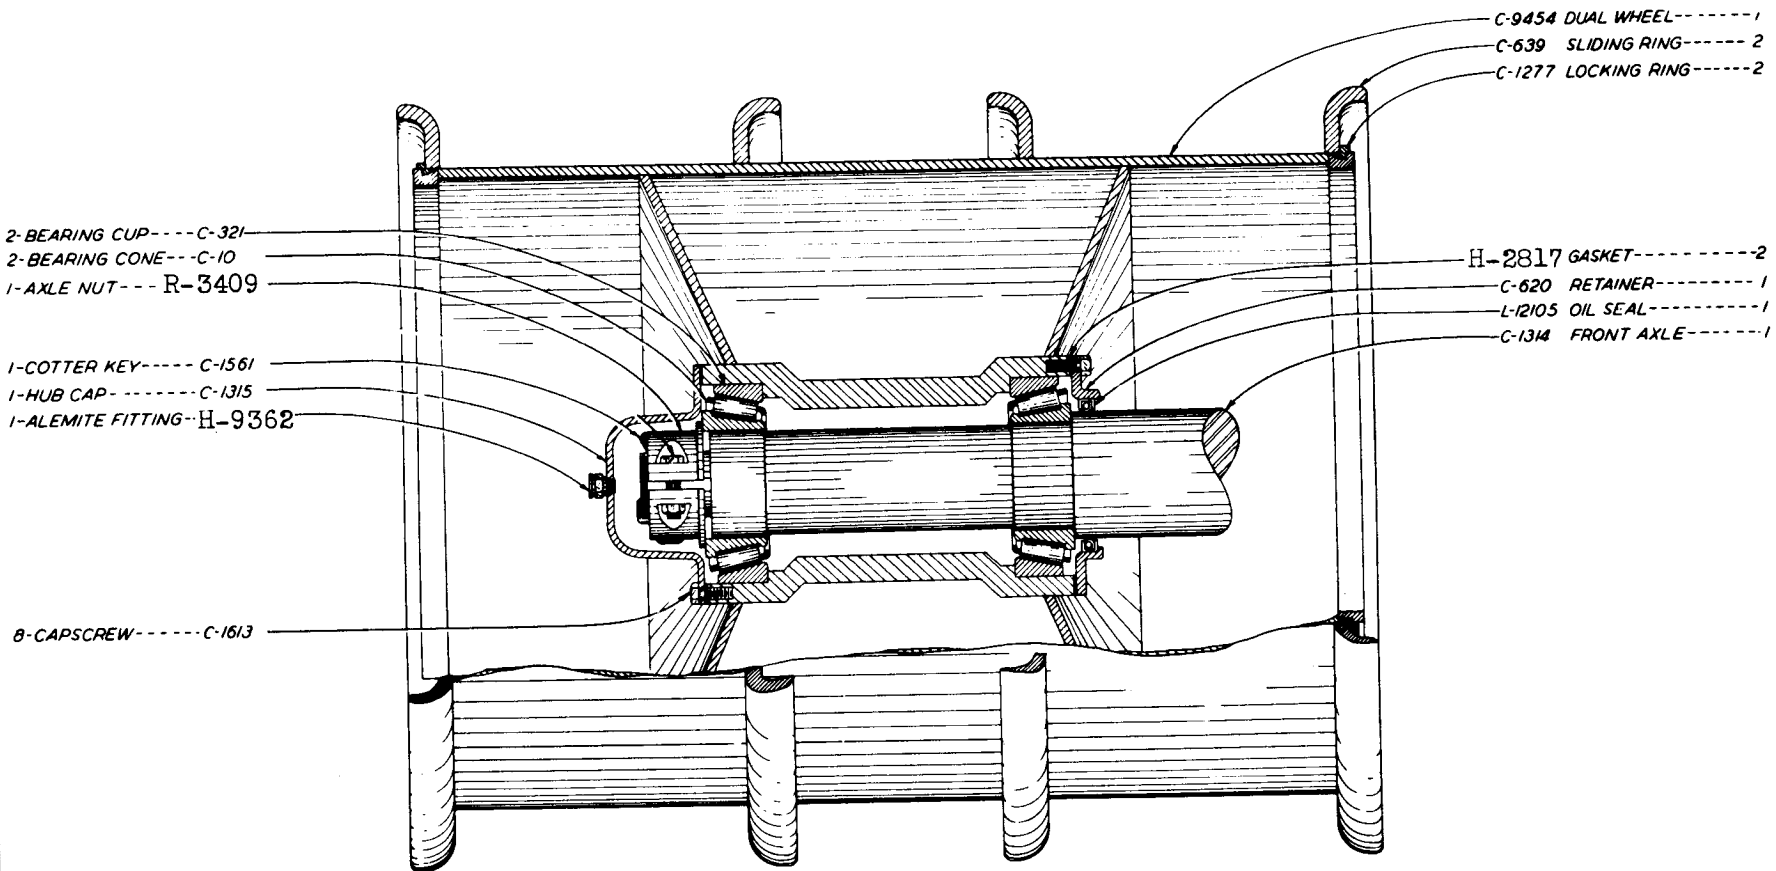

18X24 DUAL FRONT WHEEL GROUP

ALWAYS GIVE MACHINE NUMBER WHEN ORDERING PARTS



**MODEL E, F & K CARRYALL SCRAPER
PARTS CATALOG**

Litho In U.S.A. 10-53

LeTourneau-Westinghouse Company

Peoria · Illinois U. S. A.